

BITWIG STUDIO CONTROLLER EXTENSION

Softube
Direct DAW Control



Overview / Setup

This document gives you a brief overview of the functions of Softube Console 1 Channel Mk III, Fader Mk III, or Flow Studio with Bitwig Studio. For a detailed explanation of all controller functions, please read the user guides provided by Softube.

Parameter Control

The following track parameters can be controlled with Console 1 or Flow Studio:

- Volume
- Pan Position
- Send Level 1-6
- Mute
- Solo
- Track Select

Furthermore, the track names, numbers, and colors are synchronized between Bitwig Studio and Console 1 or Flow Studio as well as the visibility of group tracks and tracks of layered devices.

Direct DAW Control


Console 1 and Flow Studio have two levels of DAW Control: DAW Control using VST3 and "Direct DAW Control." DAW Control using VST3 allows you to control all tracks that are running an instance of the Console 1 or Flow plug-in, while "Direct DAW Control" will give you access to all tracks of your project. "Direct DAW Control" is made possible by activating the "Direct DAW Control" Extension in Bitwig Studio.

Setup

Before starting Bitwig Studio, please make sure you have installed the latest version of the Console 1 Mixing System software (2.6.35 or higher) and the latest firmware version (21.0.1 or higher).

On Windows a Console 1 Channel or Fader Mk III unit should be detected and set up automatically when it is connected. On macOS or if you use more than one unit you need to add the device(s) manually:

- Connect your Console 1 Channel or Fader Mk III unit(s) to your computer and start Bitwig Studio
- Open the *Dashboard* and navigate to *Settings > Controller*
- Click on *Add Controller* on the bottom of the page and select *Softube* in the Hardware Vendor drop-down menu:

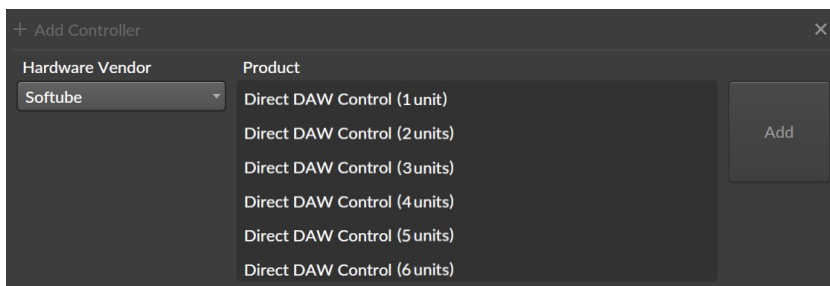

- If you have a single Channel or Fader unit or a Flow Studio, select *Direct DAW Control (1 unit)* in the Product list and click *Add*
- If you have more than one unit, select the entry that matches the total number of connected units and click *Add*. You can use up to four Fader Mk III units, a single Channel Mk III and a Flow Studio.
- Select the DAW port(s) of your unit(s) in the MIDI input and output drop-down menu. If you are using more than one unit, make sure the order of the input ports matches the order of the output ports:



Console 1 Channel Mk III

Below is a list of all Bitwig Studio mixer parameters that can be controlled with Console 1 Channel Mk III. For a detailed explanation of all Console 1 functions like display options, favorites, groups, and the various tone-shaping sections of the Console 1 plug-in, please read the Console 1 user guide provided by Softube.

1 Add Console 1 Plug-in

Press LOAD STRIP/SECTION to add a Console 1 plug-in to the currently selected track. If the track already contains other devices or plug-ins, Console 1 will be added as the last plug-in in the device chain.

2 Switch Track Bank/Track Select

Press < or > to select the previous or next bank of 20 tracks (if the project contains more than 20 tracks).

Hold SHIFT and press < or > to select the previous or next track.

3 Track Select

Press one of the 20 Track Buttons to select a track.

The status of group tracks or tracks with layered devices will always be in sync: If, for example, the single tracks inside a Drum Machine device are shown in Bitwig Studio's Mix View, they will also appear on Console 1.

Please note that tracks inside layered devices are not visible in the Arrange View.

4 Volume Knob Mode

Press SEND 1-3 (4-6 while holding SHIFT), MAIN OUT VOLUME or VOLUME to assign that parameter to the Volume Knob.

To assign Bitwig Studio's Master Track to the Main Out volume, hold the MAIN OUT VOLUME button and press the track select button of the Master Track (the rightmost track in the mixer).

5 Pan

Turn PAN to adjust the pan position of the currently selected track.

6 Solo

Press SOLO to solo the currently selected track.

7 Mute

Press MUTE to mute the currently selected track.

8 Volume/Send Level

Turn VOLUME to adjust the volume or send levels of the currently selected track or the Main Out volume, depending on the assigned parameter.



Console 1 Fader Mk III

Below is a list of all Bitwig Studio mixer parameters that can be controlled with Console 1 Fader Mk III. For a detailed explanation of all Console 1 functions like display options, favorites, groups and the various tone-shaping sections of the Console 1 plug-in, please read the Console 1 user guide provided by Softube.

1 Fader Mode

Press PAN, SEND 1-3 (4-6 while holding SHIFT), or VOLUME to assign that parameter to the faders.

2 Solo

Press SOLO to solo tracks.

3 Mute

Press MUTE to mute tracks.

4 Volume/Pan/Send Levels

Move the faders to adjust the volume, pan, or send levels of the currently selected bank of 10 tracks, depending on the assigned parameter.

5 Track Select

Press one of the 10 Track Buttons to select a track.

The status of group tracks or tracks with layered devices will always be in sync: If, for example, the single tracks inside a Drum Machine device are shown in Bitwig Studio's Mix View, they will also appear on Console 1.

Please note that tracks inside layered devices are not visible in the Arrange View.

6 Add Console 1 Plug-in

Press LOAD STRIP/SECTION to add a Console 1 plug-in to the currently selected track. If the track already contains other devices or plug-ins, Console 1 will be added as the last plug-in in the device chain.

7 Switch Track Bank

Press < or > to select the previous or next bank of 10 tracks (if the project contains more than 10 tracks).

8 Pan

Turn PAN to adjust the pan position of the currently selected track.



Console 1 Compact

Below is a list of all Bitwig Studio mixer parameters that can be controlled with Console 1 Compact. For a detailed explanation of all Console 1 functions like display options, favorites, groups, and the various tone-shaping sections of the Console 1 plug-in, please read the Console 1 user guide provided by Softube.

1 Add Console 1 Plug-in

Press LOAD STRIP/SECTION to add a Console 1 plug-in to the currently selected track. If the track already contains other devices or plug-ins, Console 1 will be added as the last plug-in in the device chain.

2 Switch Track Bank/Track Select

Press < or > to select the previous or next bank of 10 tracks (if the project contains more than 10 tracks).

Hold SHIFT and press < or > to select the previous or next track.

3 Track Select

Press one of the 10 Track Buttons to select a track.

The status of group tracks or tracks with layered devices will always be in sync: If, for example, the single tracks inside a Drum Machine device are shown in Bitwig Studio's Mix View, they will also appear on Console 1.

Please note that tracks inside layered devices are not visible in the Arrange View.

4 Send Level/Send Select

Turn SEND to adjust the send levels of the currently selected track.

Hold SHIFT and turn SEND to assign Send 1-6 to the Send Knob.

5 Pan

Turn PAN to adjust the pan position of the currently selected track.

6 Solo

Press SOLO to solo the currently selected track.

7 Mute

Press MUTE to mute the currently selected track.

8 Volume

Turn VOLUME to adjust the volume of the currently selected track.



Flow Studio

Below is a list of all Bitwig Studio mixer parameters that can be controlled with Flow Studio. For a detailed explanation of all Flow Studio functions and its various tone-shaping possibilities, please read the Flow Studio user guide provided by Softube.

1 Pan

Turn PAN to adjust the pan position of the currently selected track.

2 Send 1 (4)

Turn SEND to adjust the Send 1 (4) level of the currently selected track.

3 Send 2 (5)

Turn SEND to adjust the Send 2 (5) level of the currently selected track.

4 Send 3 (6)

Turn SEND to adjust the Send 3 (6) level of the currently selected track.

5 Track Volume

Turn the Omni Knob to adjust the volume of the currently selected track.

6 Toggle Sends

Press SHIFT to toggle the Flow Control knobs between controlling Sends 1-3 or 4-6.

7 Track Select

Press TRACK to select a track with the Omni Knob, then press OK to confirm.

The status of group tracks or tracks with layered devices will always be in sync: If, for example, the single tracks inside a Drum Machine device are shown in Bitwig Studio's Mix View, they will also appear on Console 1.

Please note that tracks inside layered devices are not visible in the Arrange View.

8 Solo

Press SOLO to solo the currently selected track.

9 Mute

Press MUTE to mute the currently selected track.

10 Select DAW Mode

Press DAW to select DAW mode.

11 Add Flow Plug-in

Press FLOW to add a Flow plug-in to the currently selected track. If the track already contains other devices or plug-ins, Flow will be added as the last plug-in the device chain.

