BITWIG STUDIO CONTROLLER EXTENSION

Expressive E
Osmose CE 49/61

BITWIG

Setup

This document gives you a brief overview of how to set up and use Osmose CE with Bitwig Studio. For an in-depth explanation of all Osmose CE features, please read the Osmose CE user guide provided by Expressive E.

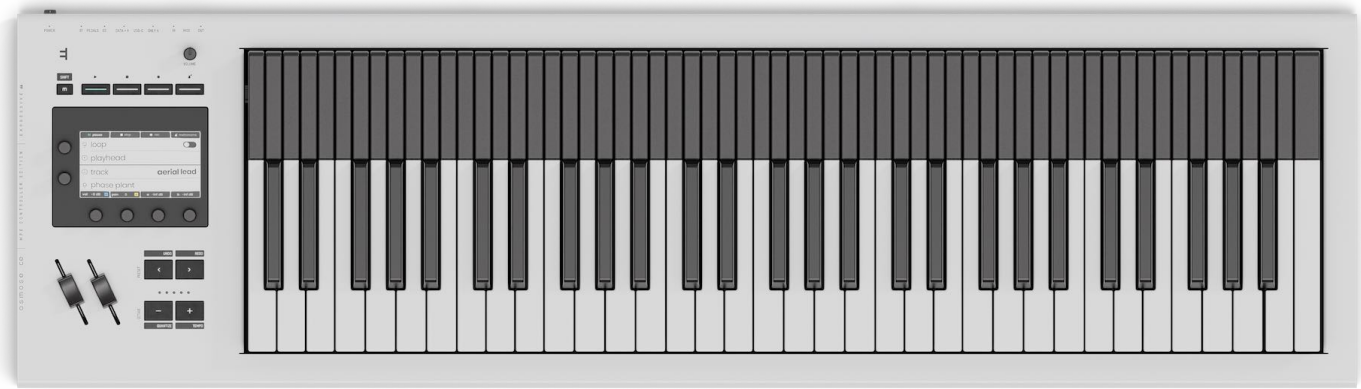

Setup

Osmose CE should be detected and set up automatically when it is connected. In case you added Osmose CE manually, make sure the MIDI ports are selected in the correct order.

Mac/Linux:

In 1: Osmose CE xx play
In 2: Osmose CE xx daw control
Out 1: Osmose CE xx play
Out 2: Osmose CE xx daw control

Windows:

In 1: Osmose CE xx
In 2: MIDIIN3 (Osmose CE xx)
Out 1: Osmose CE xx
Out 2: MIDIOUT3 (Osmose CE xx)

DAW Control Mode

1 Enter DAW Control Mode
When Bitwig is started, the DAW control menu is shown. Select *daw control* with the encoders on the left or below *select mode* and press the encoder to enter the DAW control mode.

2 Master Volume
Turn VOLUME to adjust the volume of the master track in Bitwig Studio.

3 Select Preset/Undo
Press < to select the previous preset of the Osmose CE.

Hold SHIFT and press < to undo the last operation.

4 Select Preset/Redo
Press > to select the next preset of the Osmose CE.

Hold SHIFT and press > to redo the last operation.

5 Octave Down/Quantize
Press - to move the octave range downwards.

Hold SHIFT and press - to quantize the currently selected clip.

6 Octave Up/Set Tempo
Press + to move the octave range upwards.

Hold SHIFT and press + to open the tempo page. Set the BPM of the project by either turning one of the encoders below the screen or tap the tempo by tapping the + button repeatedly. Press the *m* button on the upper left to close the tempo page.

7 Pitch
Move the fader to send pitch bend messages.

8 Modulation
Move the fader to send modulation messages (CC1).

Transport Functions

1 Open Transport Page
Press *m* to show or hide the transport page.

2 Play/Pause
Press PLAY to start the transport, press PLAY while the transport is active to pause playback.

3 Stop/Return to Zero
Press STOP to stop the transport, press STOP when the transport is stopped to return the playhead to position 1.1.1.0

4 Record
Press RECORD to activate recording.

5 Metronome
Press METRONOME to toggle the metronome on or off.

Encoder A controls various parameters:
6 Playhead Position
Turn the encoder to move the playhead in the Arranger.

6 Loop Position/Length
Push the encoder to toggle the encoder between playhead and loop control.

When loop is active, turn the encoder to move the loop position in the Arranger.

Hold SHIFT and turn the encoder to adjust the length of the loop.

6 Add/Jump to Marker
Hold SHIFT and press the encoder to add a marker at the current playhead position.

Hold SHIFT and turn the encoder to jump to the previous or next marker in the Arranger.

Encoder B controls various parameters:
7 Select Track
Turn the encoder to select the previous or next track.

7 Open Plug-in Window
Press the encoder to open or close the plug-in window (VST) or the expanded device view of a Bitwig Studio Device (if available).

7 Select Scene
Turn the encoder to select the previous or next clip (or empty slot) of a scene.

7 Launch Clip
Press the encoder to launch the currently selected clip. If the selected slot is empty and the track is record enabled, a new clip will be recorded.

8 Track Volume/Mute
Turn the encoder to adjust the volume of the currently selected track.

Press the encoder to toggle its mute status.

9 Pan Position/Solo
Turn the encoder to adjust the pan position of the currently selected track.

Press the encoder to toggle its solo status.

10 FX Send 1
Turn the encoder to adjust the FX Send 1 level of the currently selected track.

11 FX Send 2
Turn the encoder to adjust the FX Send 2 level of the currently selected track.

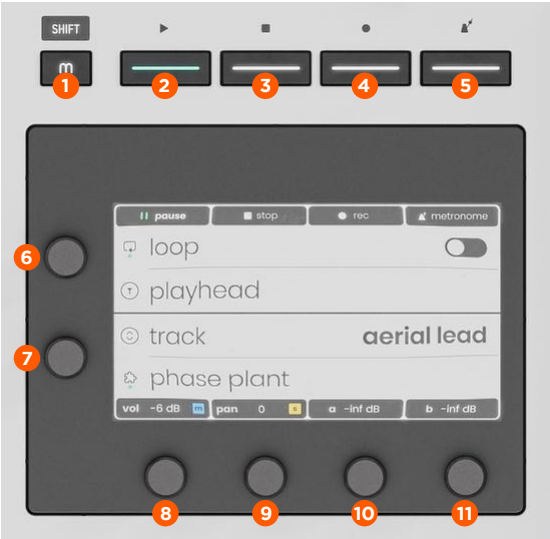

Remote Controls

1 Open Adjust Page
Press button 2 to open the *adjust* page. When the *macros* tab is selected, the encoders will control the Remote Controls in Bitwig Studio.

2 Select Tab
To control the Remote Controls of the currently selected device in Bitwig Studio, make sure the *macros* tab is selected.

3 Remote Controls 1-4 (5-8)
Turn the encoders to control the Remote Controls of the currently selected device in Bitwig Studio.

By default, the four encoders control Remote Controls 1-4. Press the encoders to toggle them between controlling Remote Controls 1-4 and 5-8.

4 Select Device
Hold SHIFT and turn encoder 4 to select a device in the device chain of the currently selected track.