
EN7300GT HTD Repair Guide

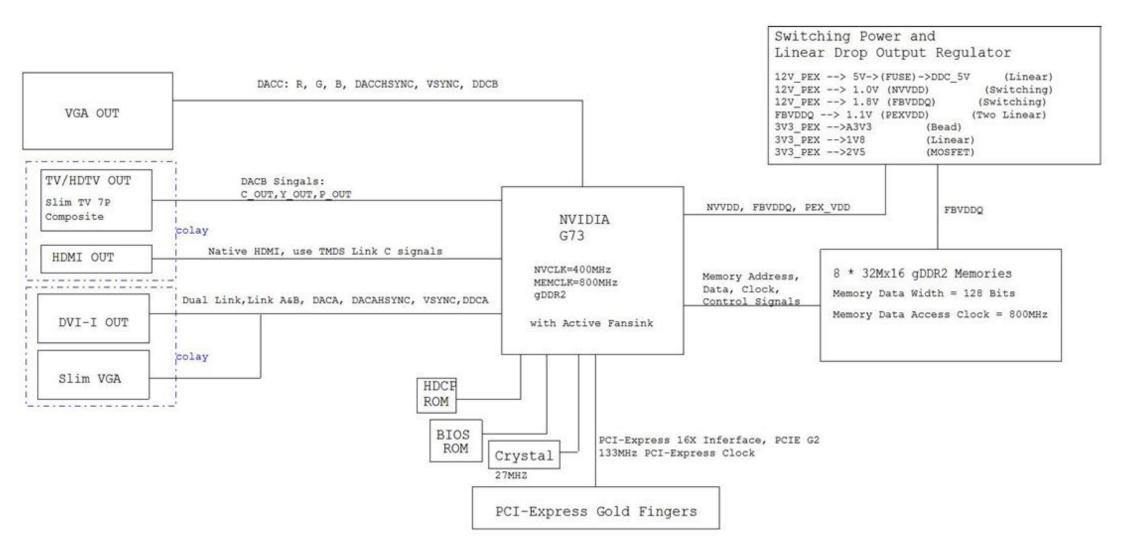

Power sequence

Power flow

