



8.3 级维修

8-1. 组件布局

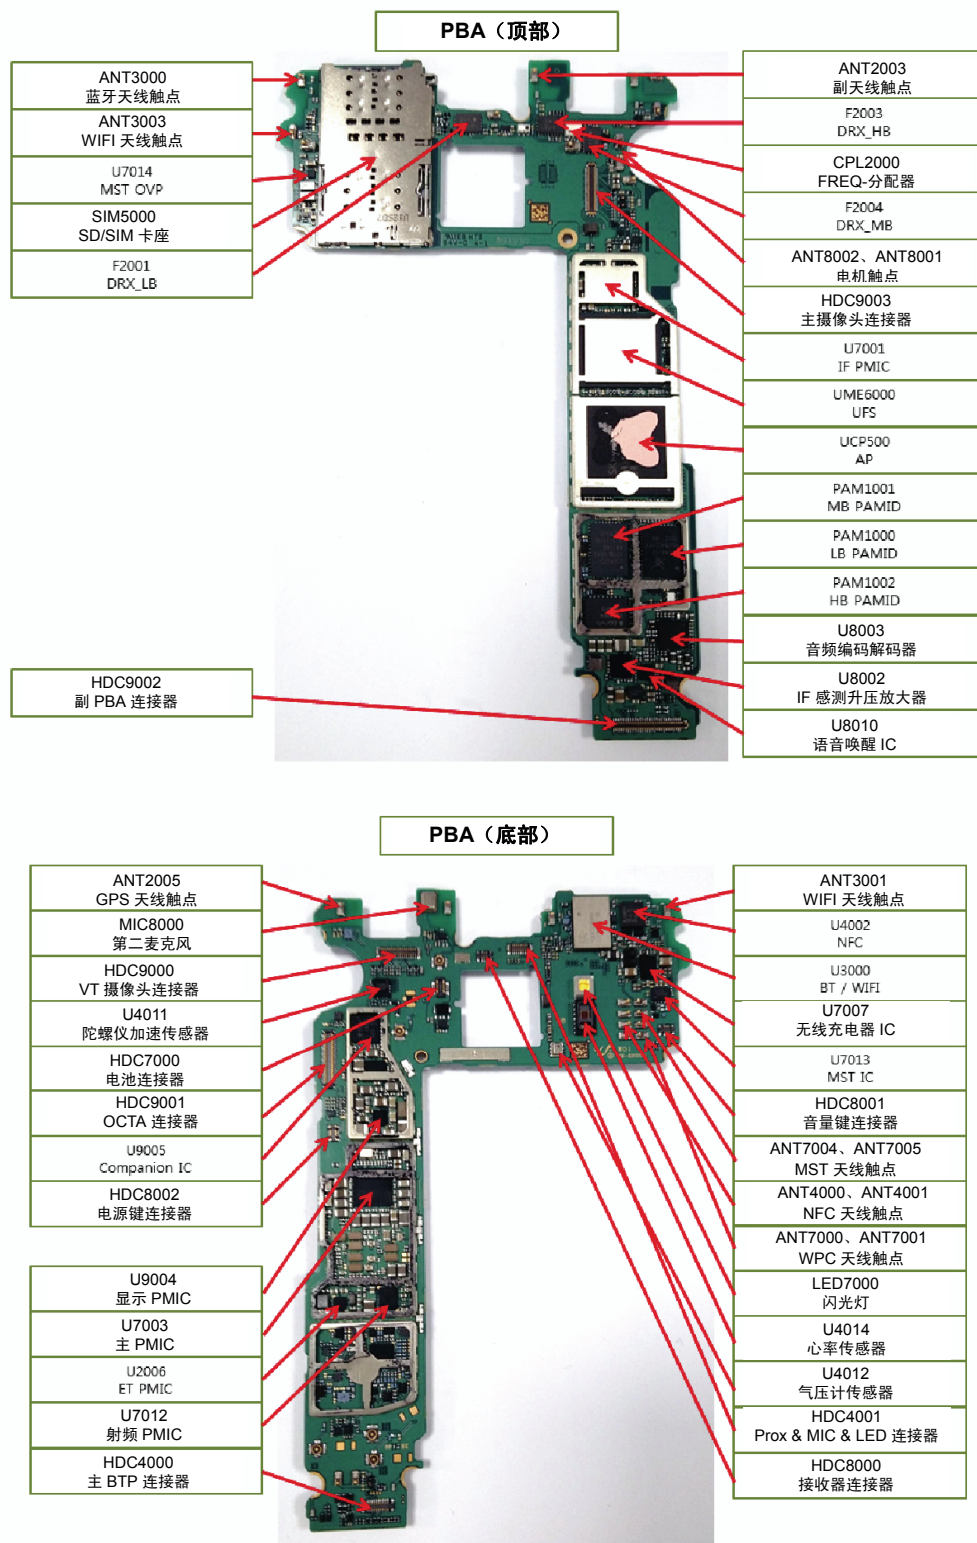

8.3 级维修


8-2. 框图

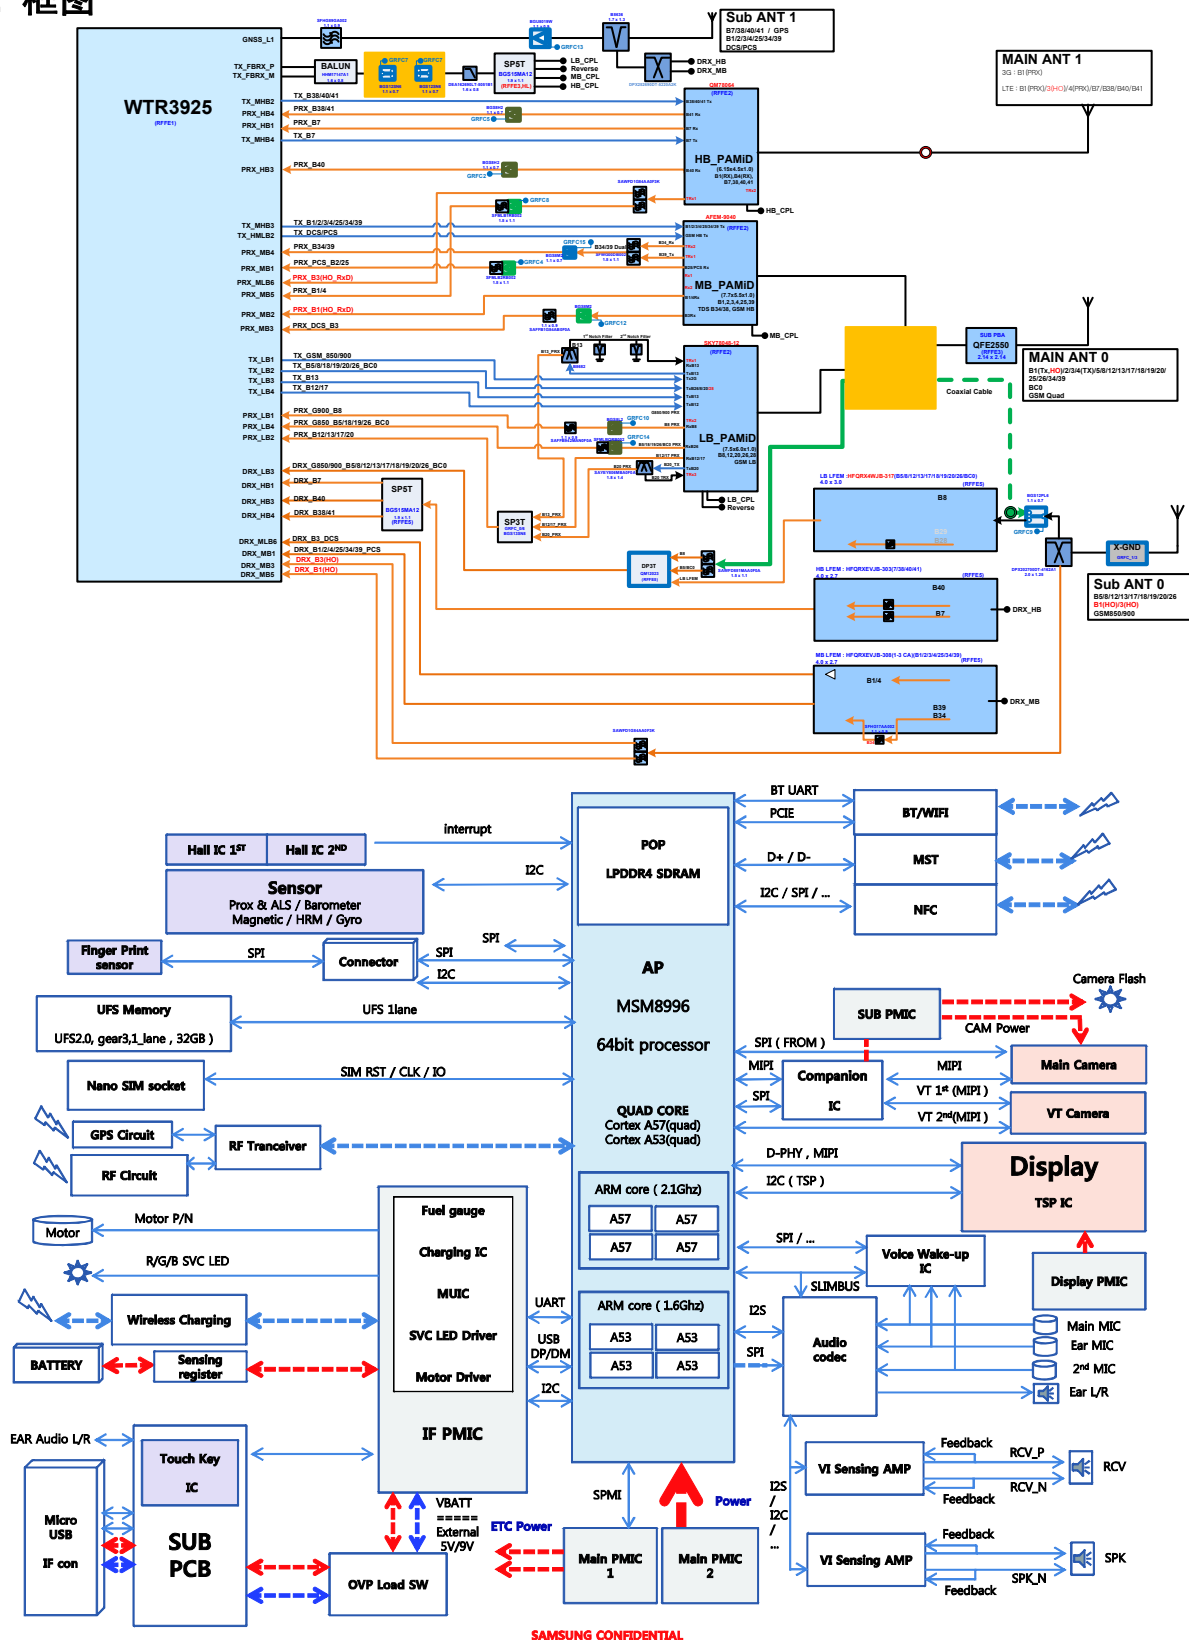

8. 3 级维修

8-3. PCB 图解


8-3-1. 顶部

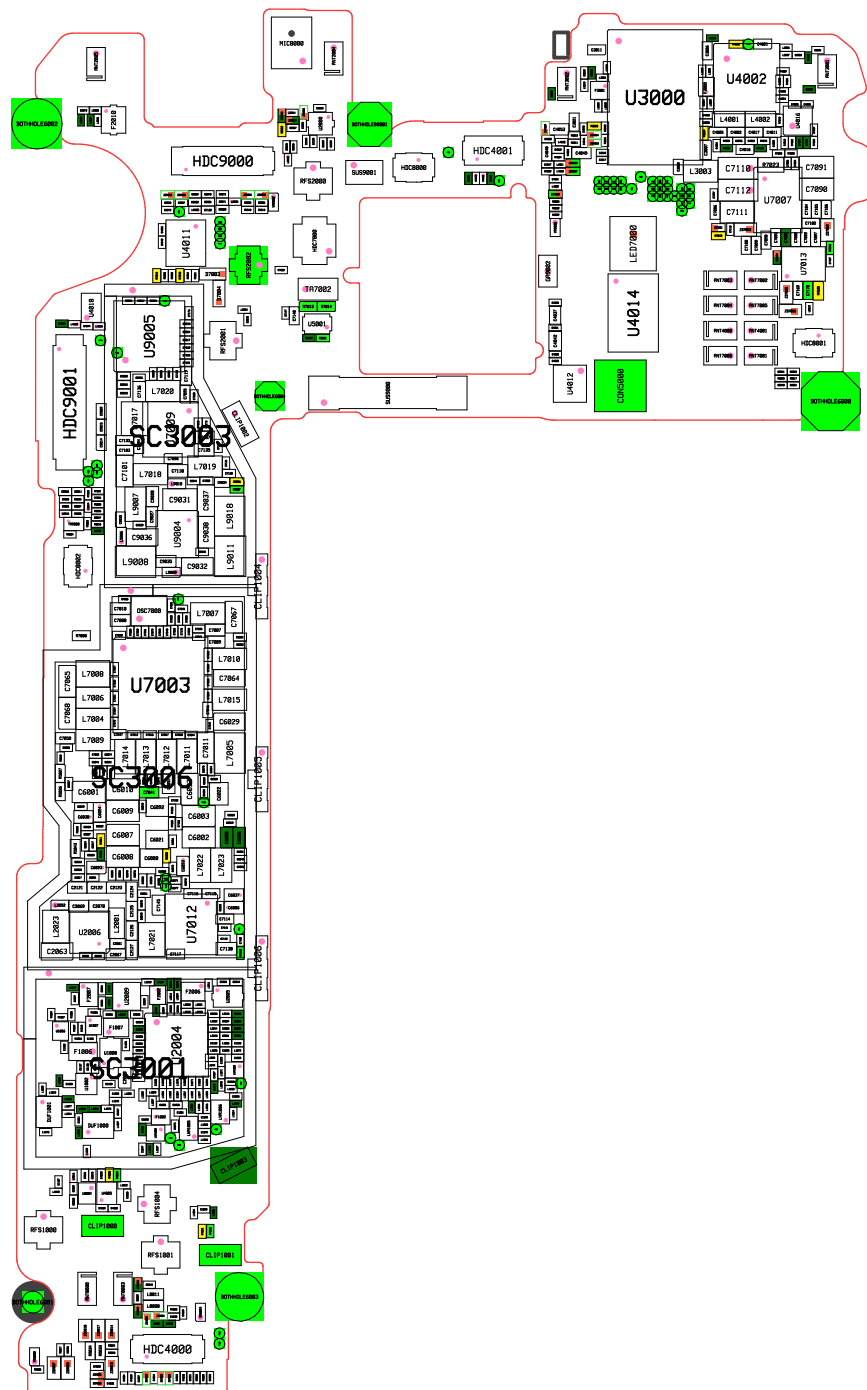

8.3 级维修

8-4. 故障排除流程图

设备

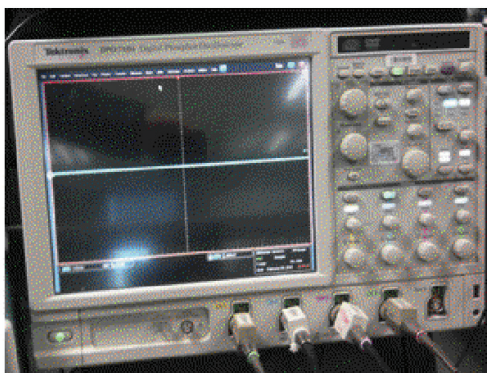


↑示波器




↑数字万用表



↑电源供应器

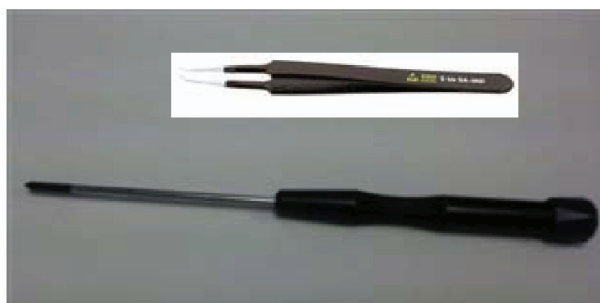

↑+字螺丝刀，ESD 安全镊子

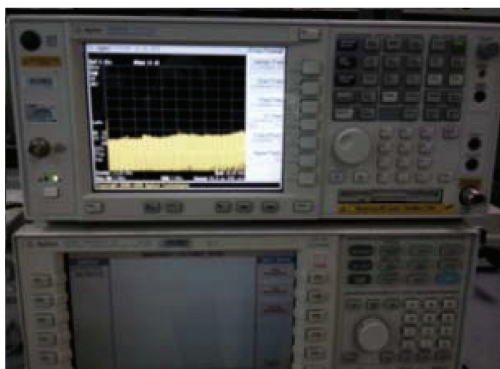


↑8960 和频谱仪



↑焊接烙铁


8.3 级维修

8-4-1. 开机

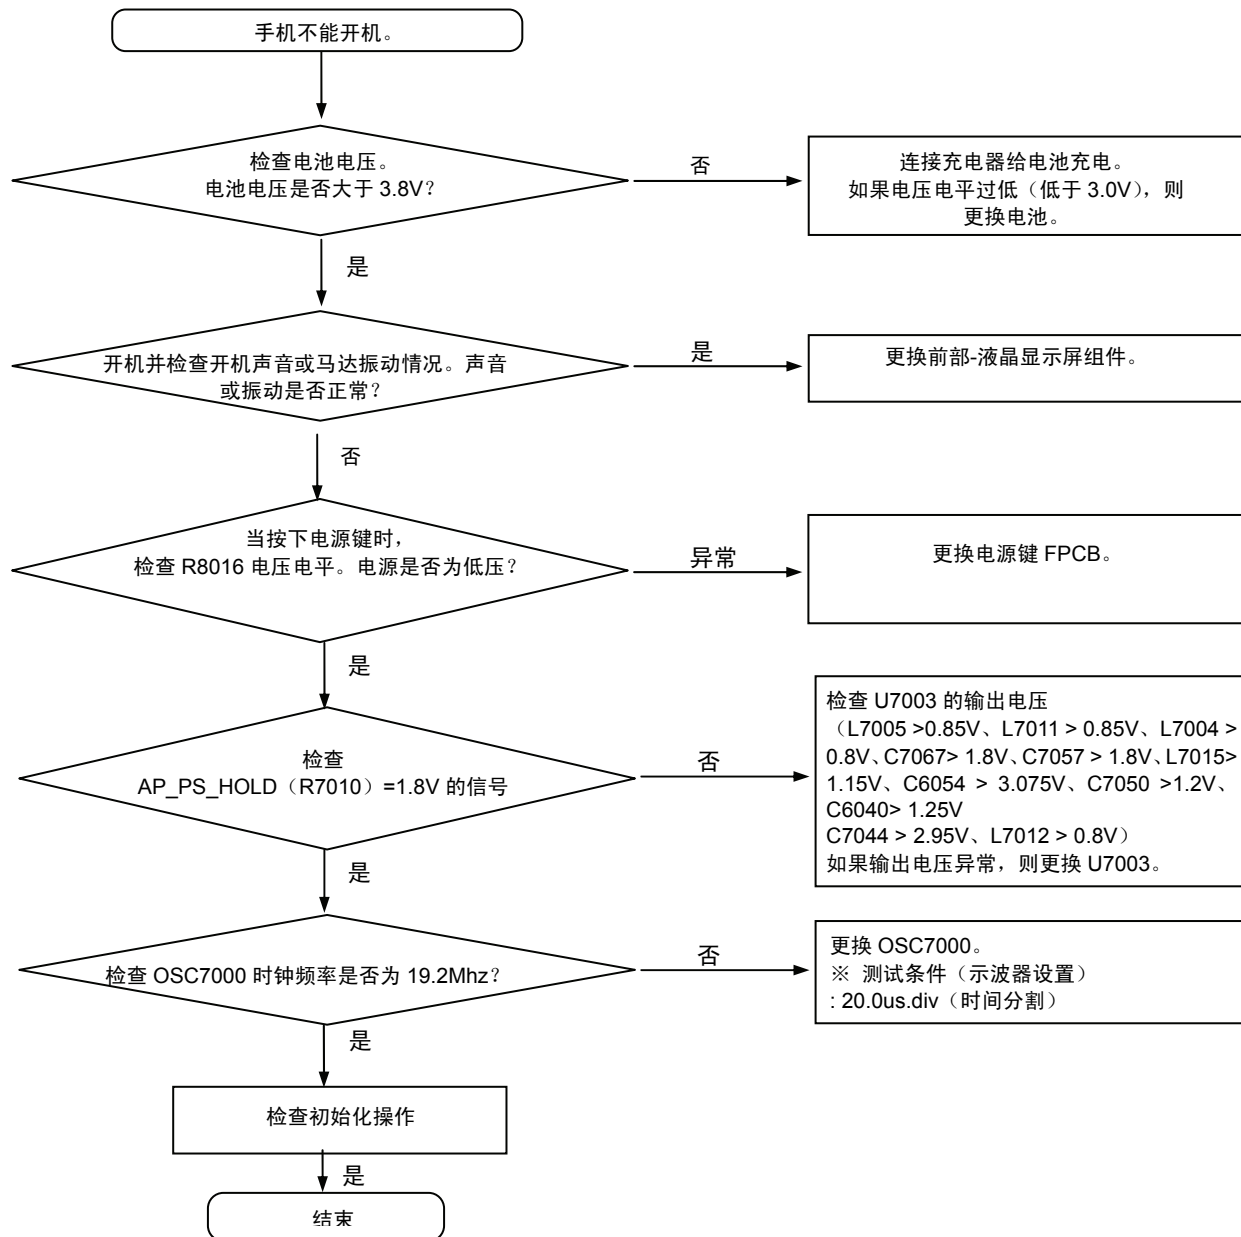


8.3 级维修

8-4-2 初始化

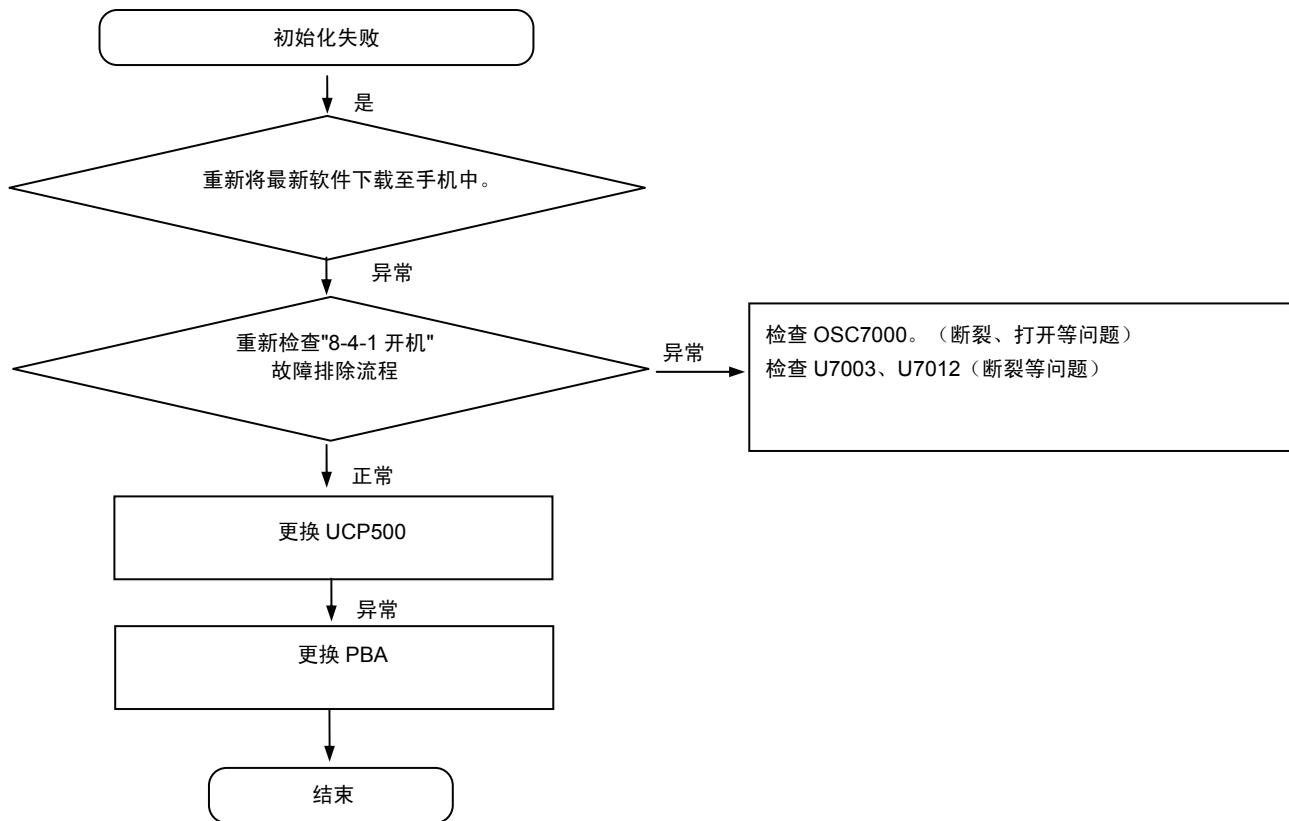


8.3 级维修

8-4-3. 无服务

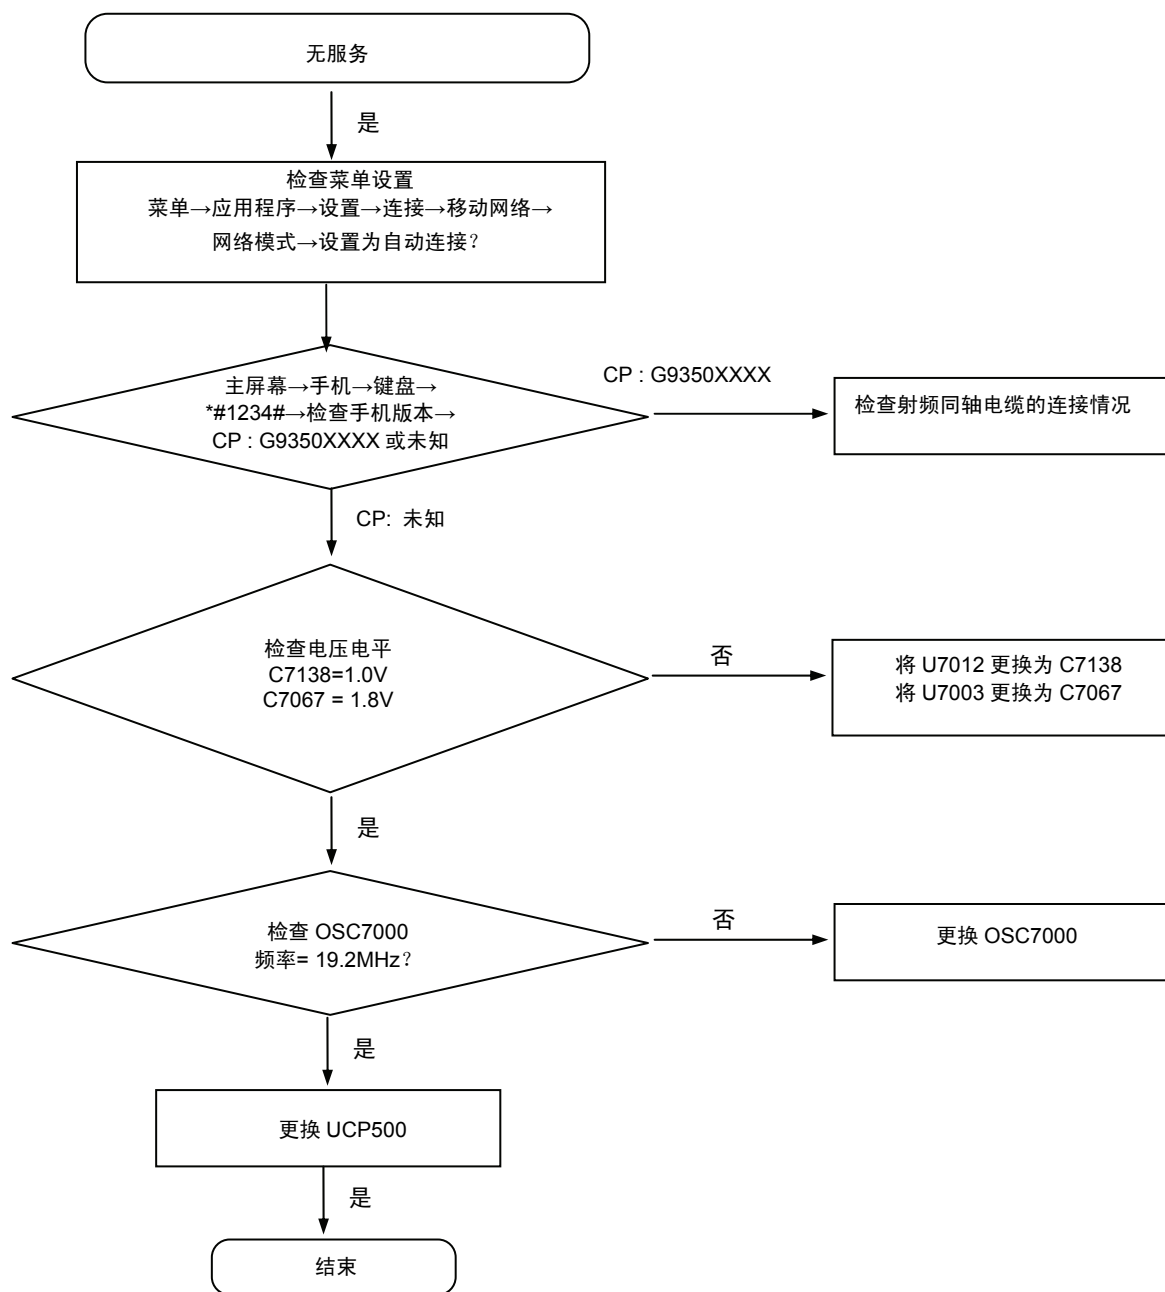


8.3 级维修

8-4-4. SIM / SD 部分

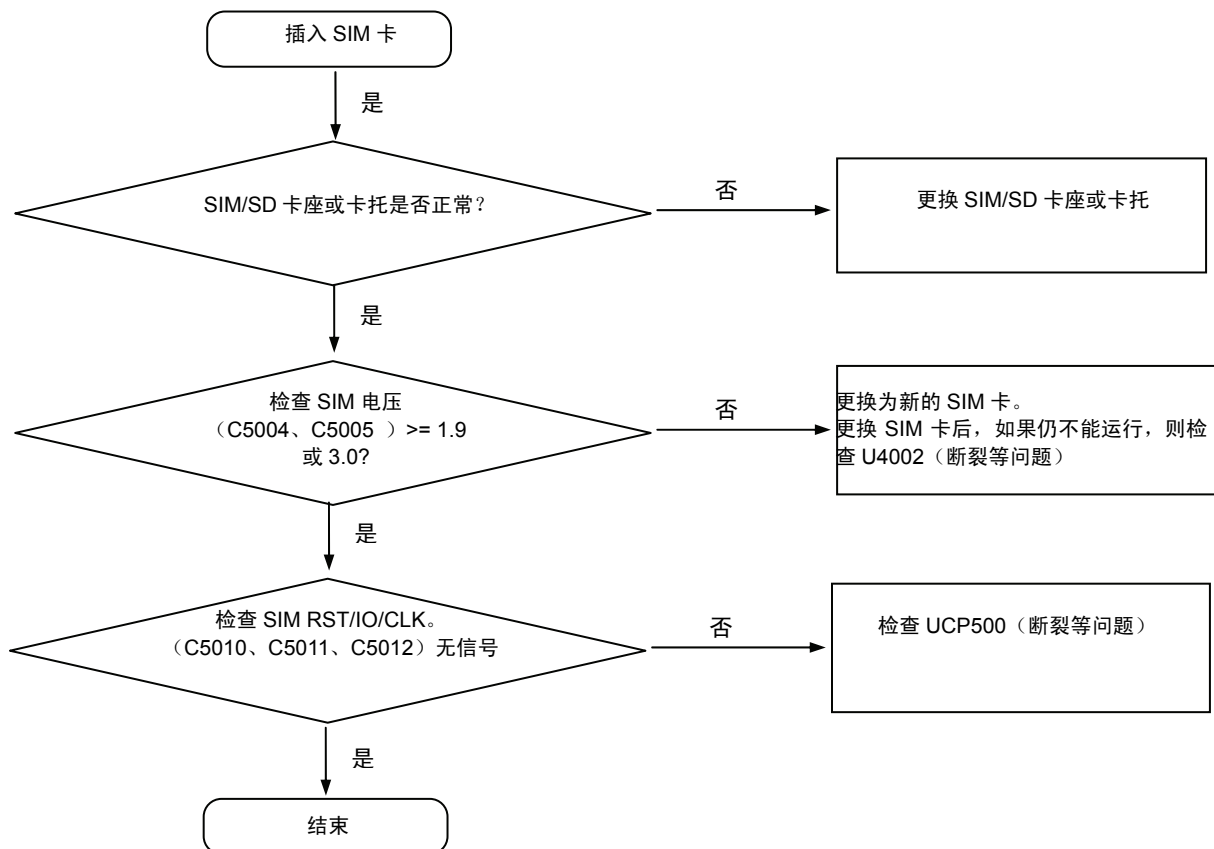


8.3 级维修

8-4-5. 充电部分

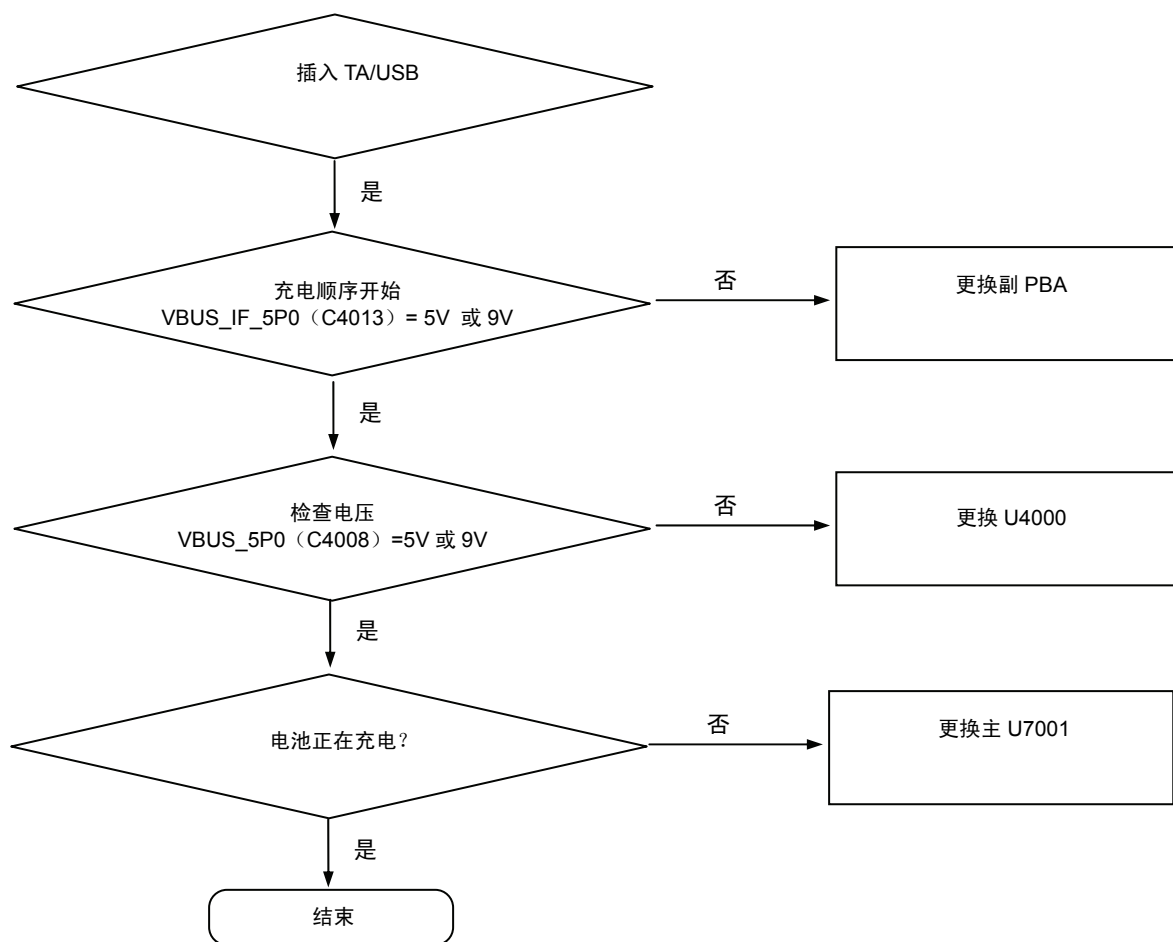


8.3 级维修

8-4-6. OTG

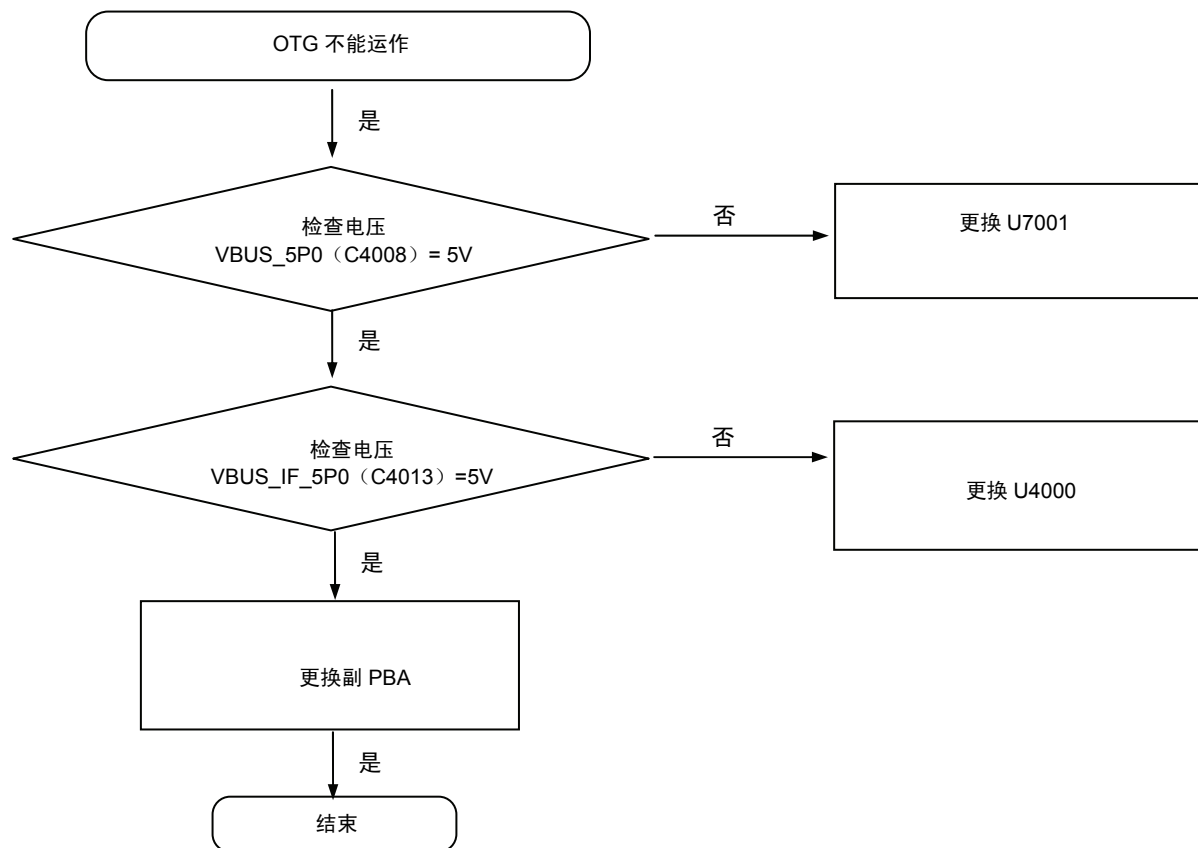


8.3 级维修

8-4-7-1. 磁传感器

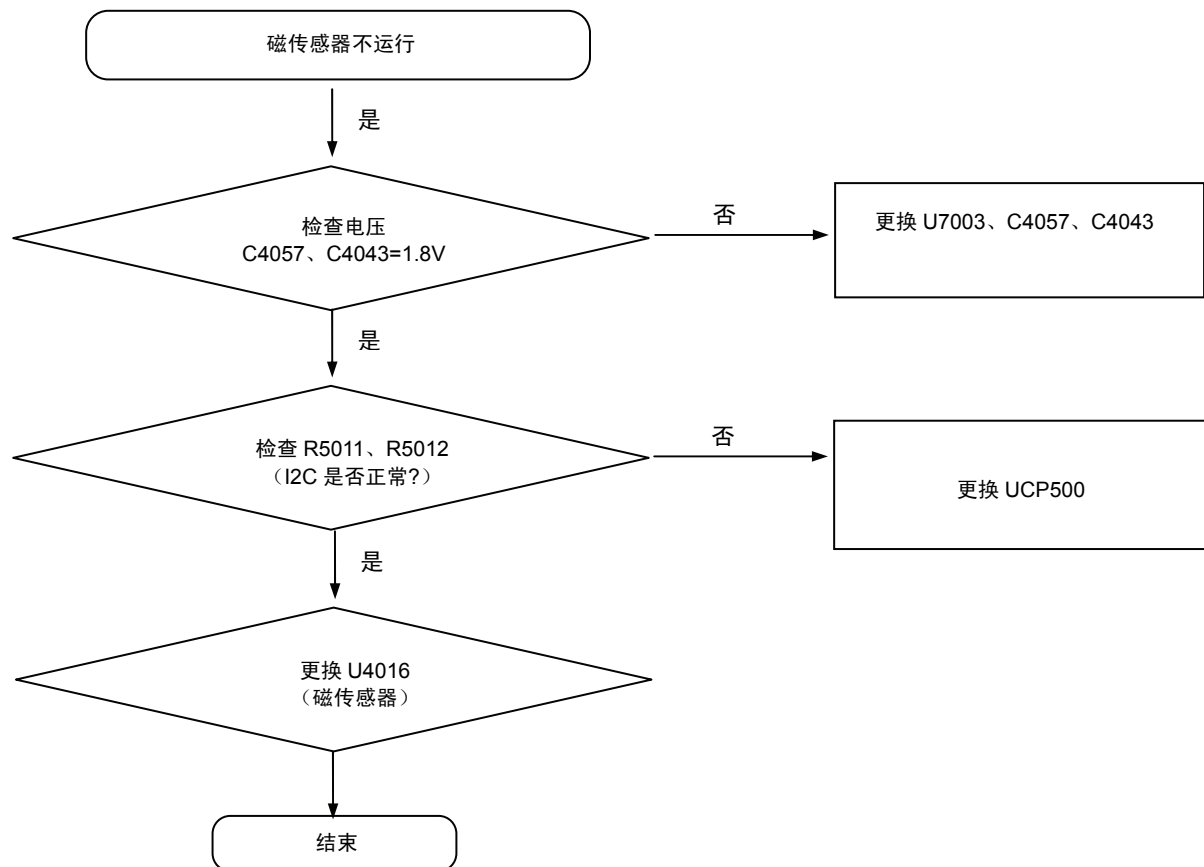


8.3 级维修

8-4-7-2. 6 轴传感器

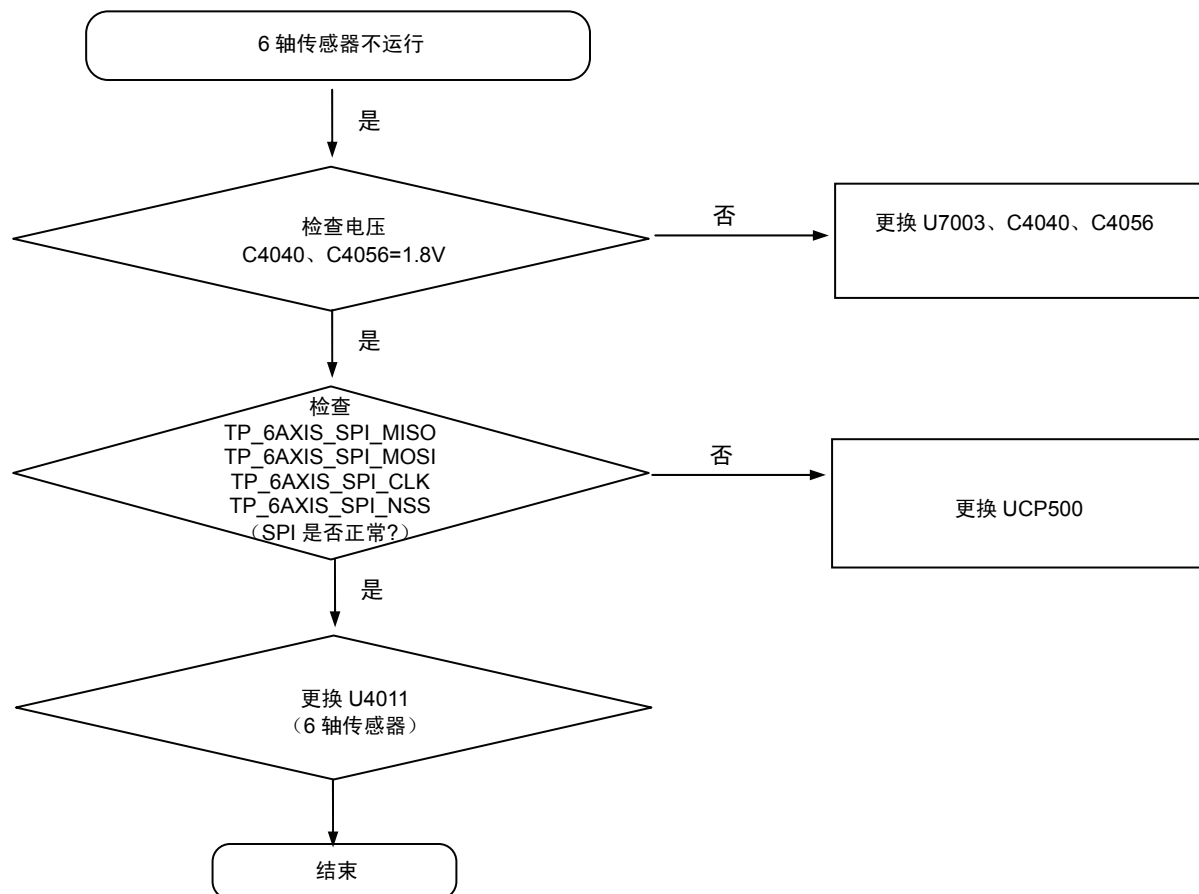


8.3 级维修

8-4-7-3. 代理_光传感器

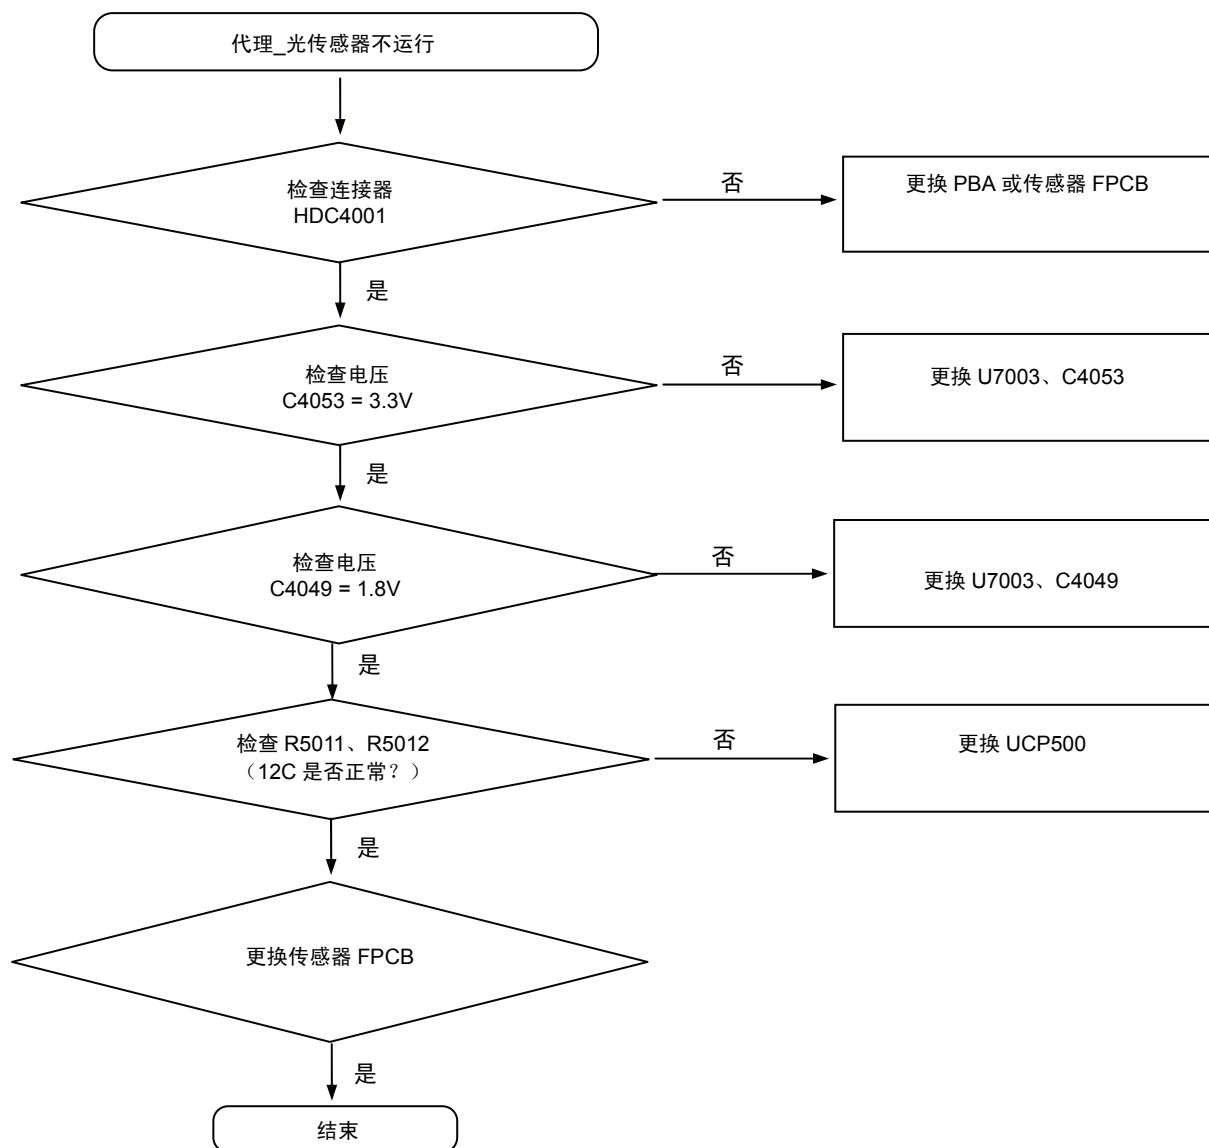


8.3 级维修

8-4-7-4. 气压计

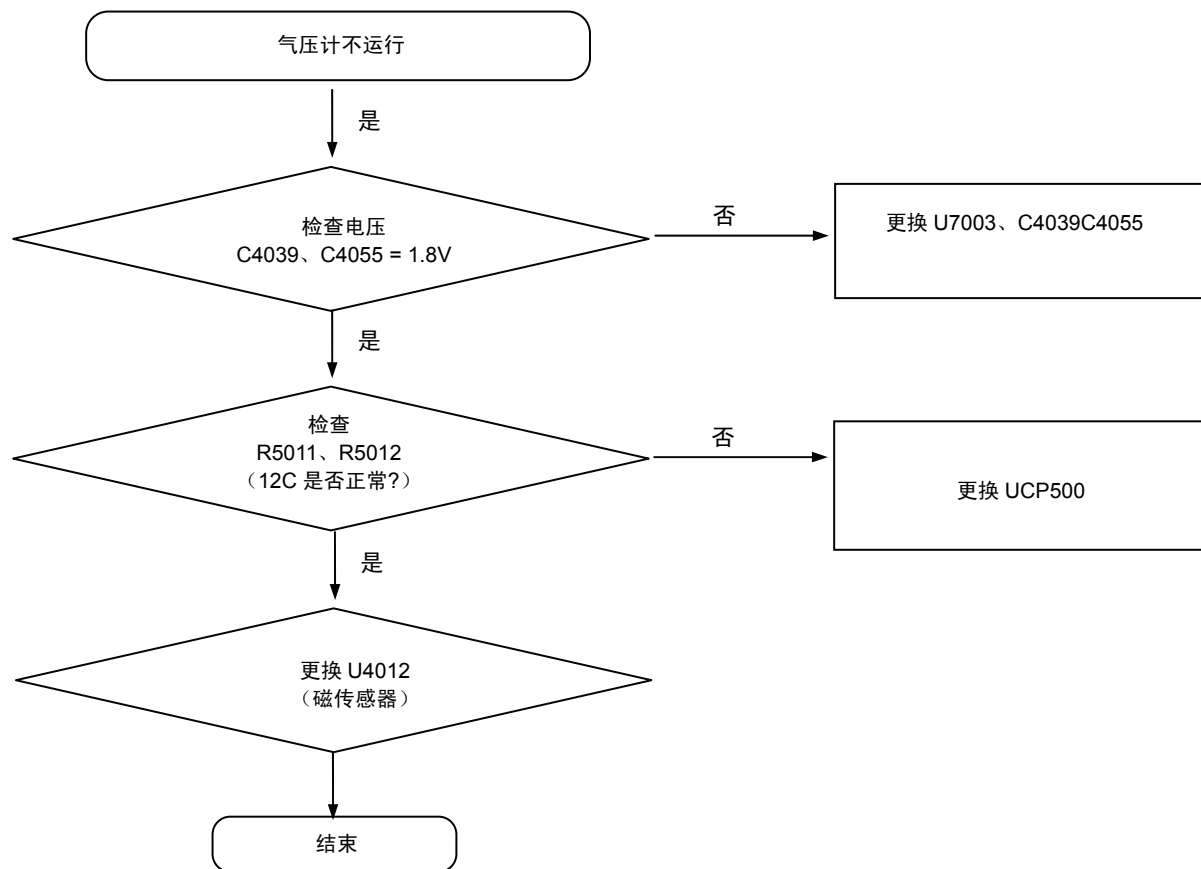


8.3 级维修

8-4-7-5. 指纹传感器

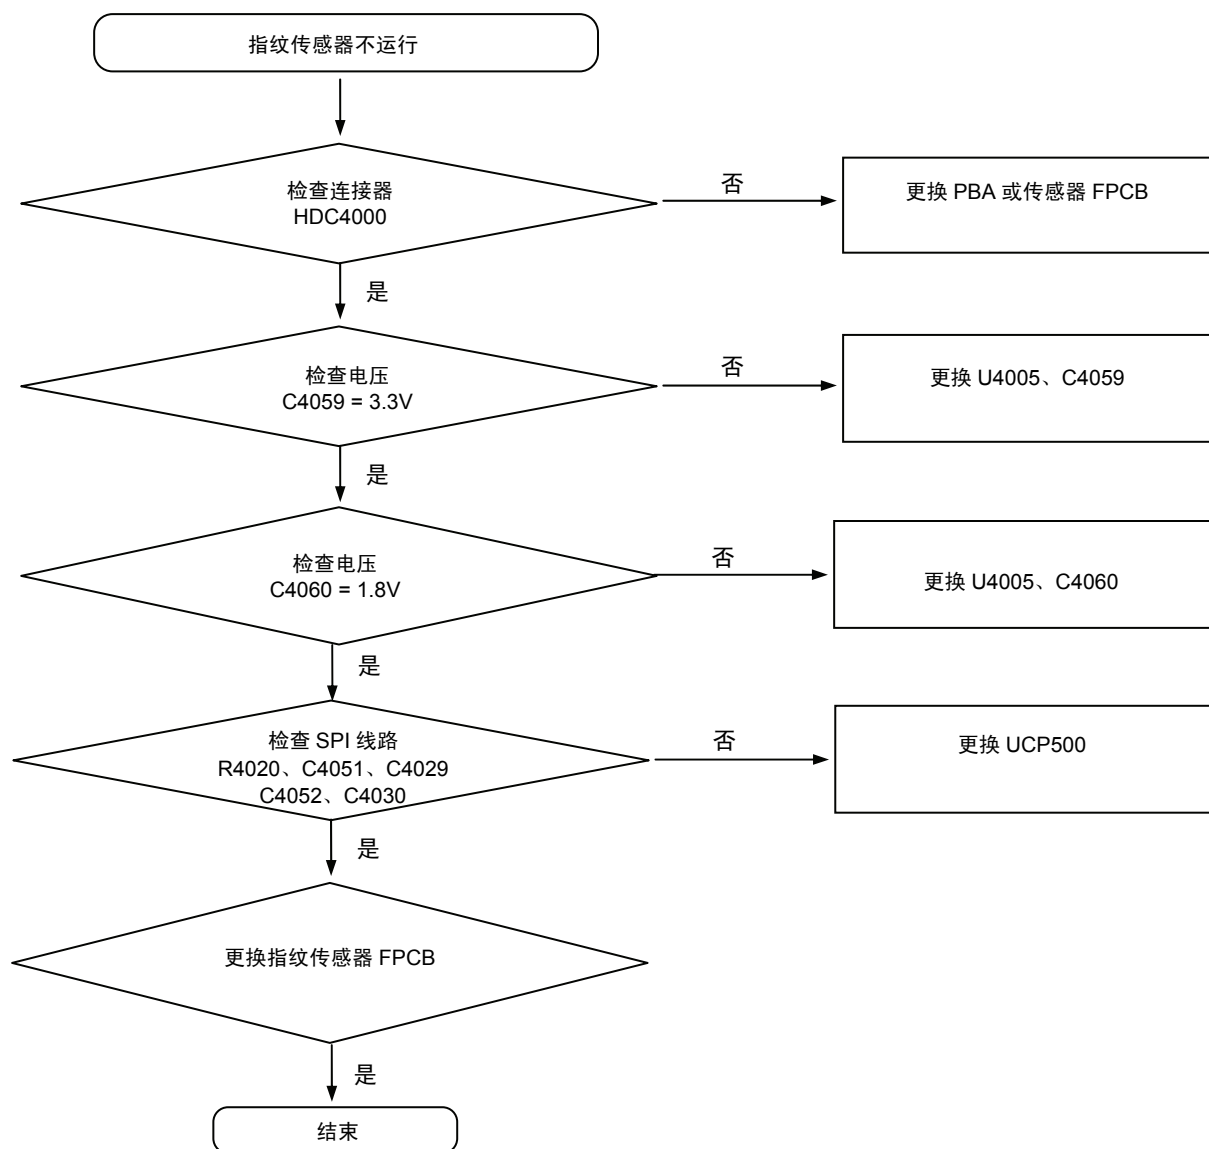


8.3 级维修

8-4-7-6. 心率传感器

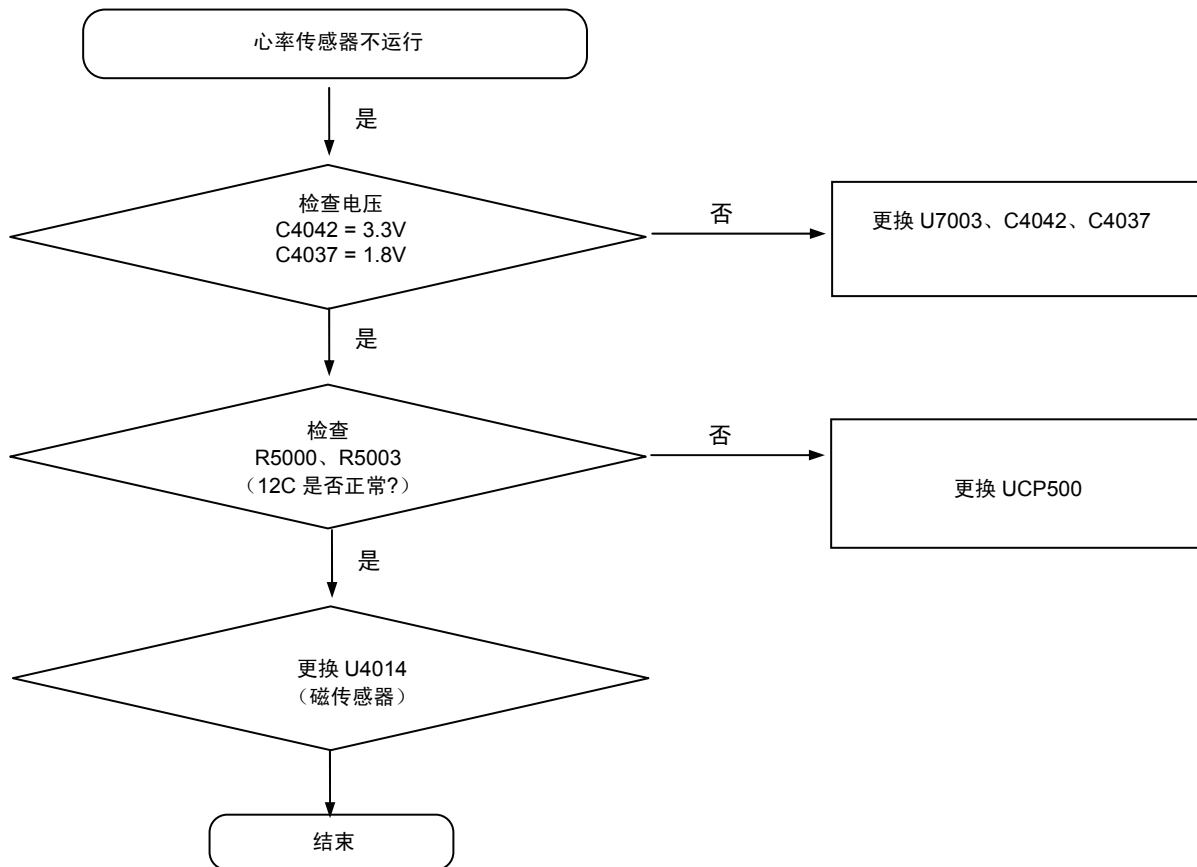


8.3 级维修

8-4-7-7. 霍尔 IC

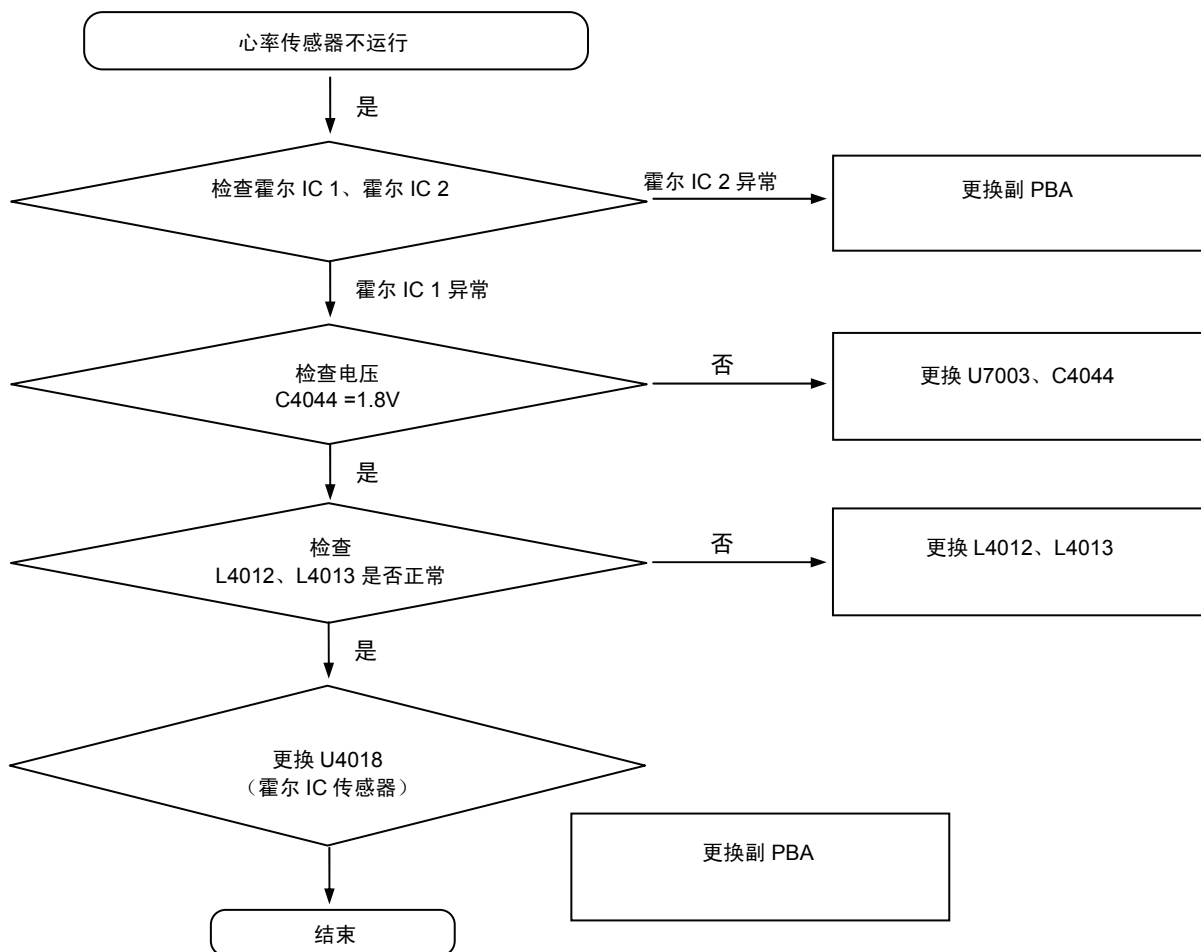


8.3 级维修

8-4-8-1. 麦克风部分-主麦克风

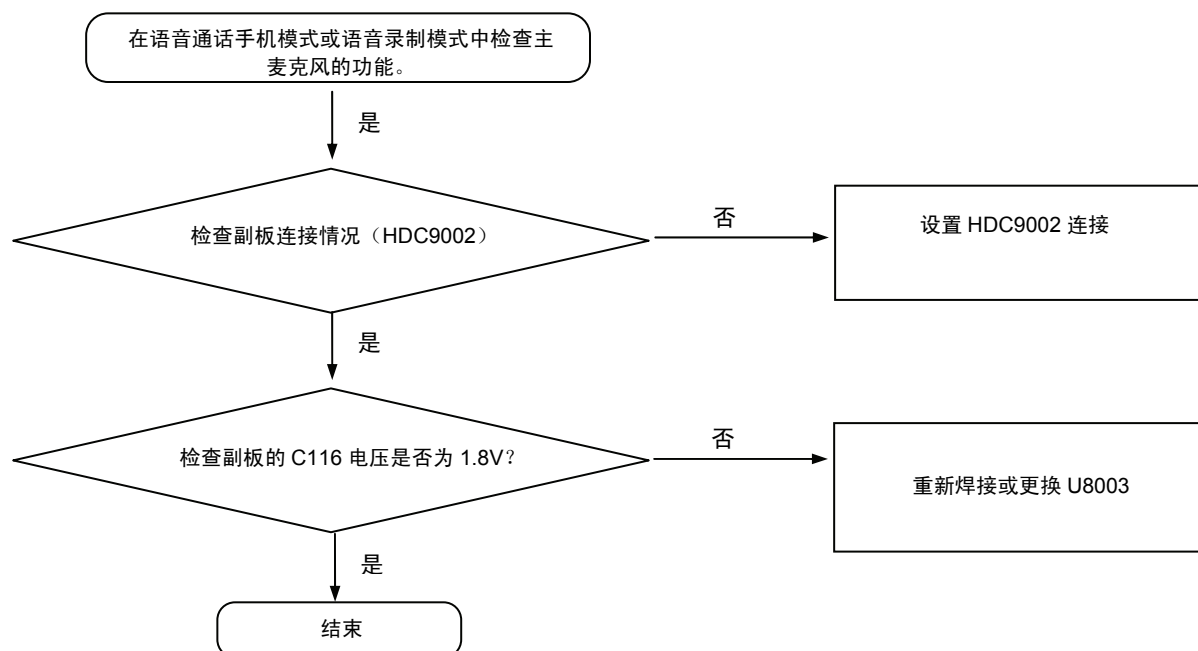


8.3 级维修

8-4-8-2. 麦克风部分-副（第二）麦克风

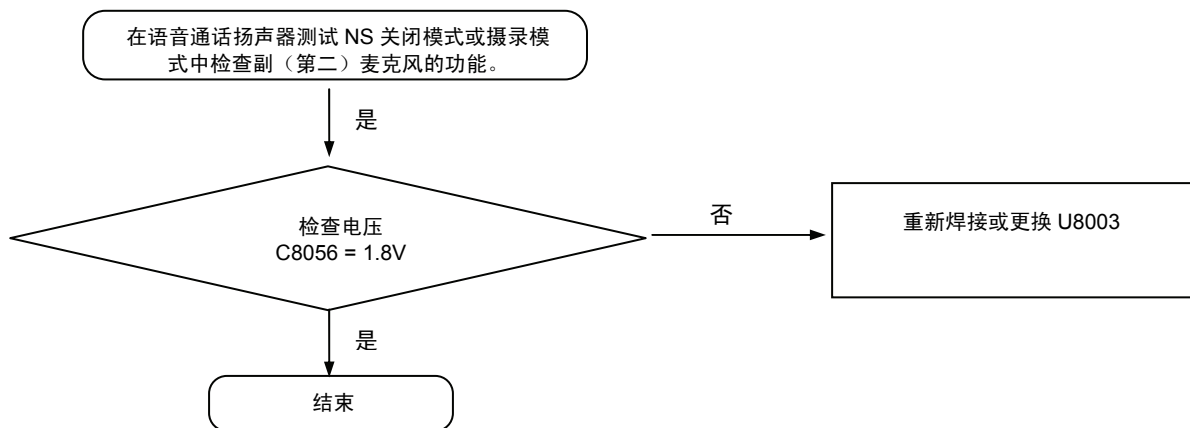


8.3 级维修

8-4-9. 扬声器部分

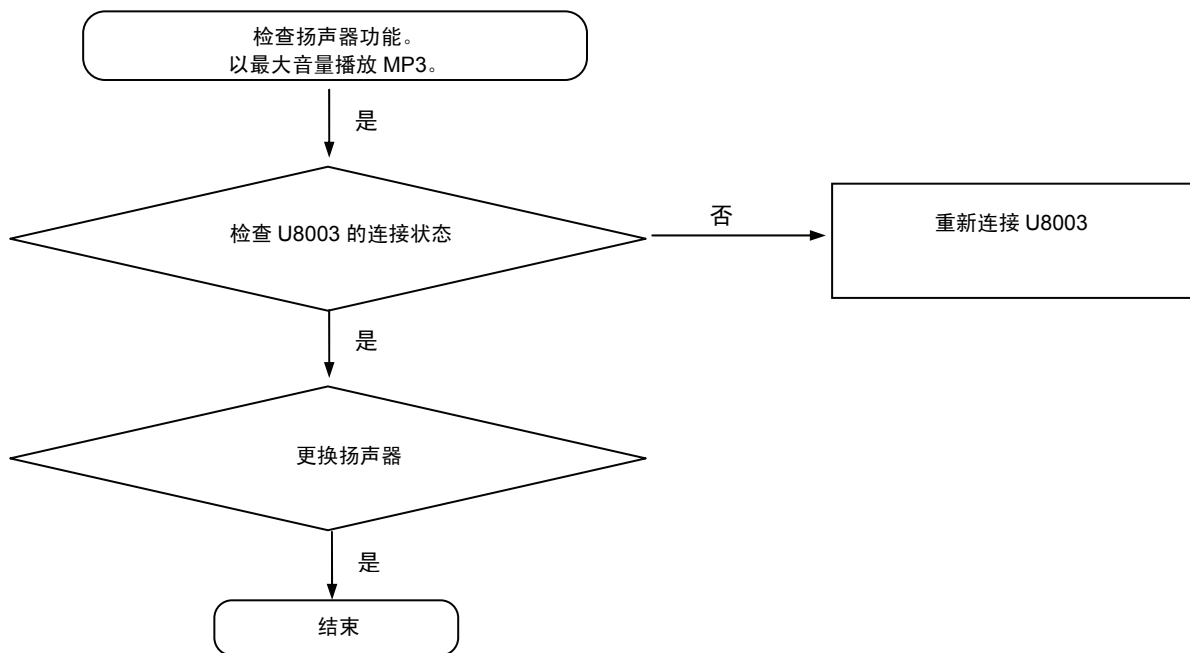


8.3 级维修

8-4-10. 接收器部分

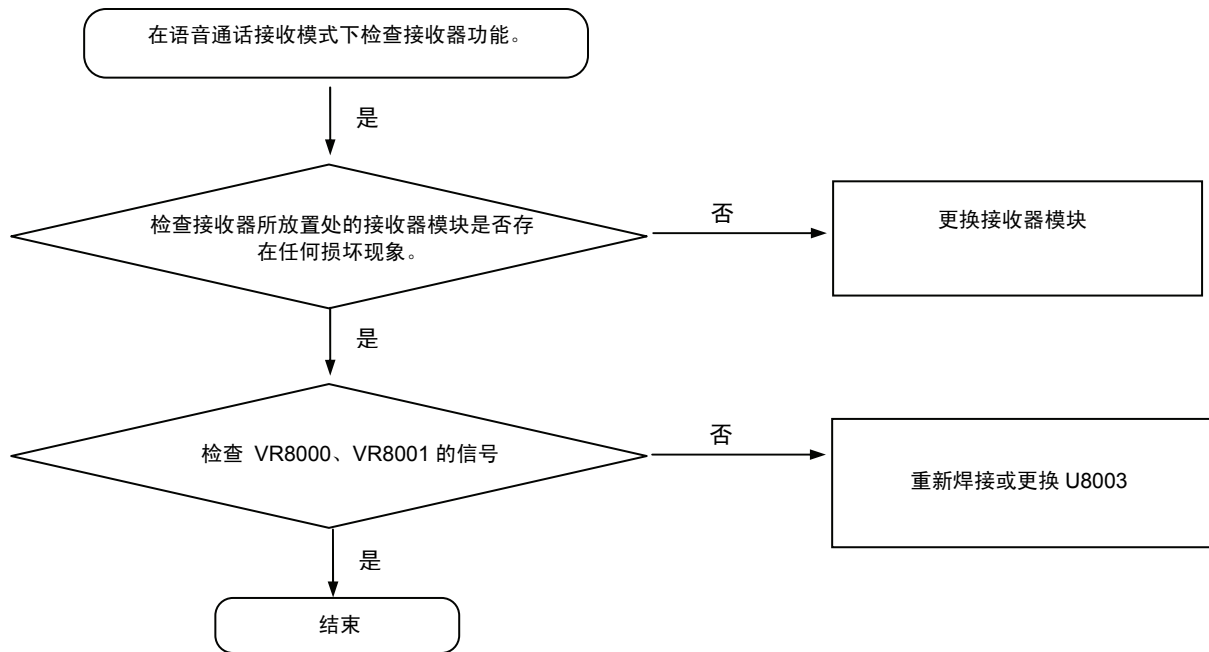


8.3 级维修

8-4-11. 蓝牙

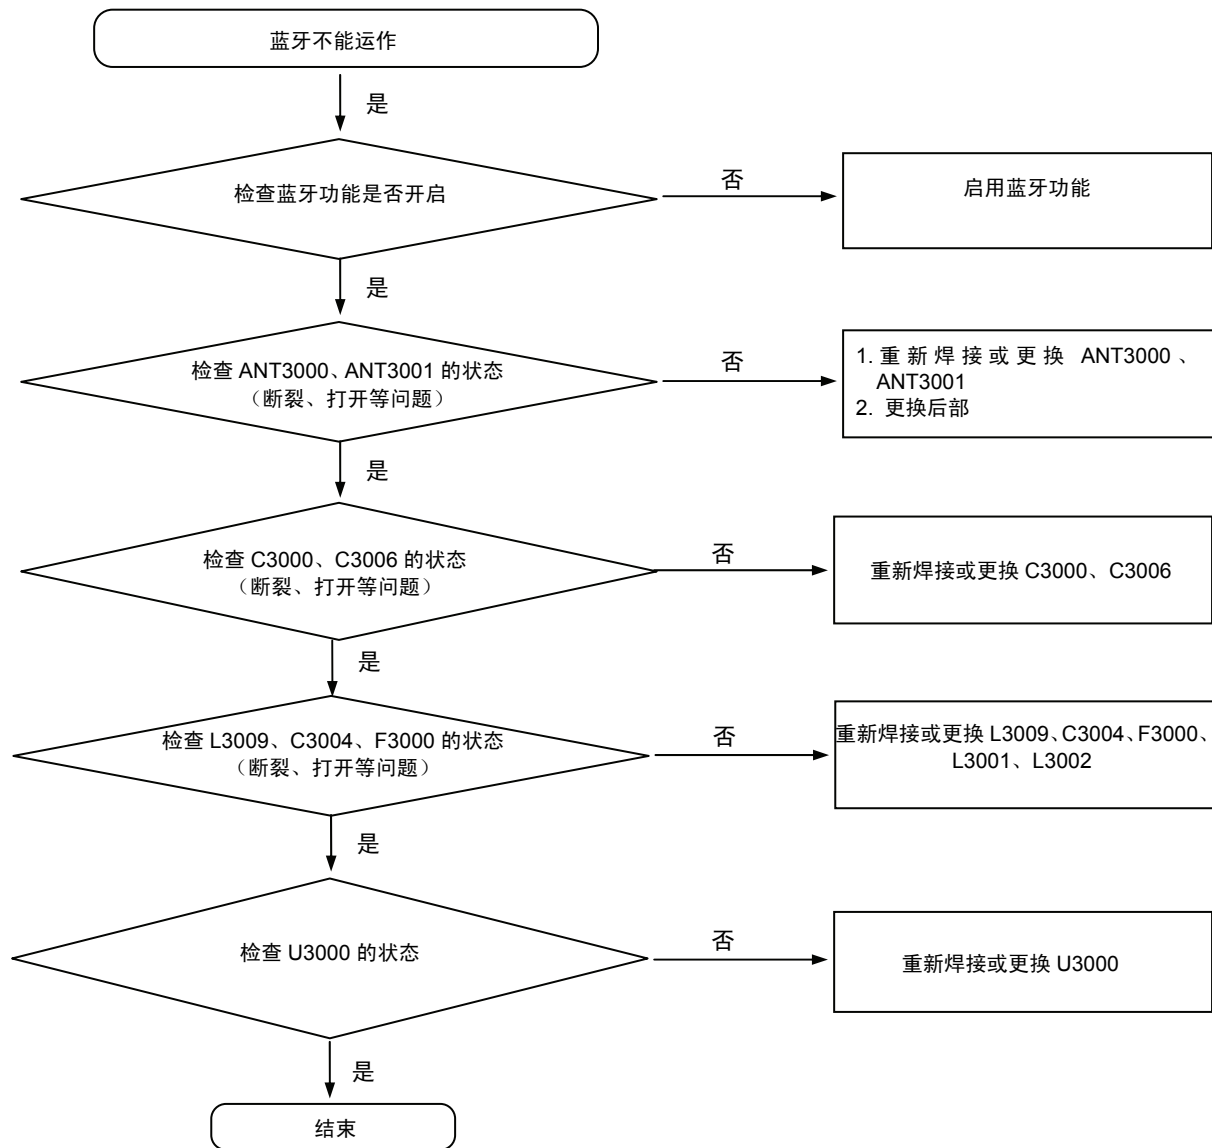


8. 3 级维修

8-4-12. WiFi

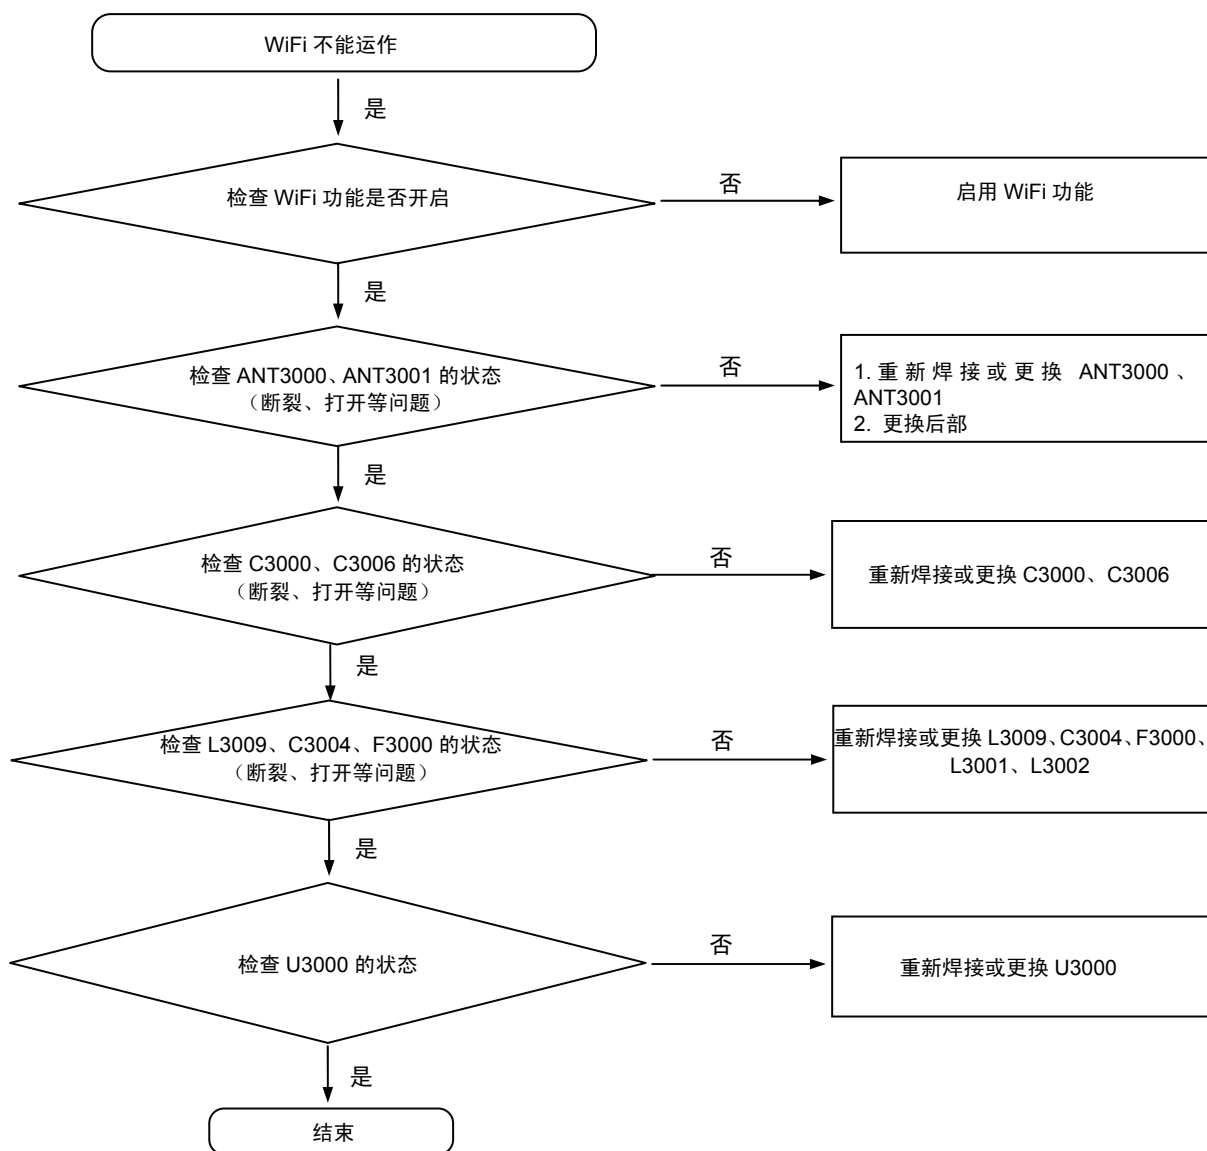


8. 3 级维修

8-4-13. GPS

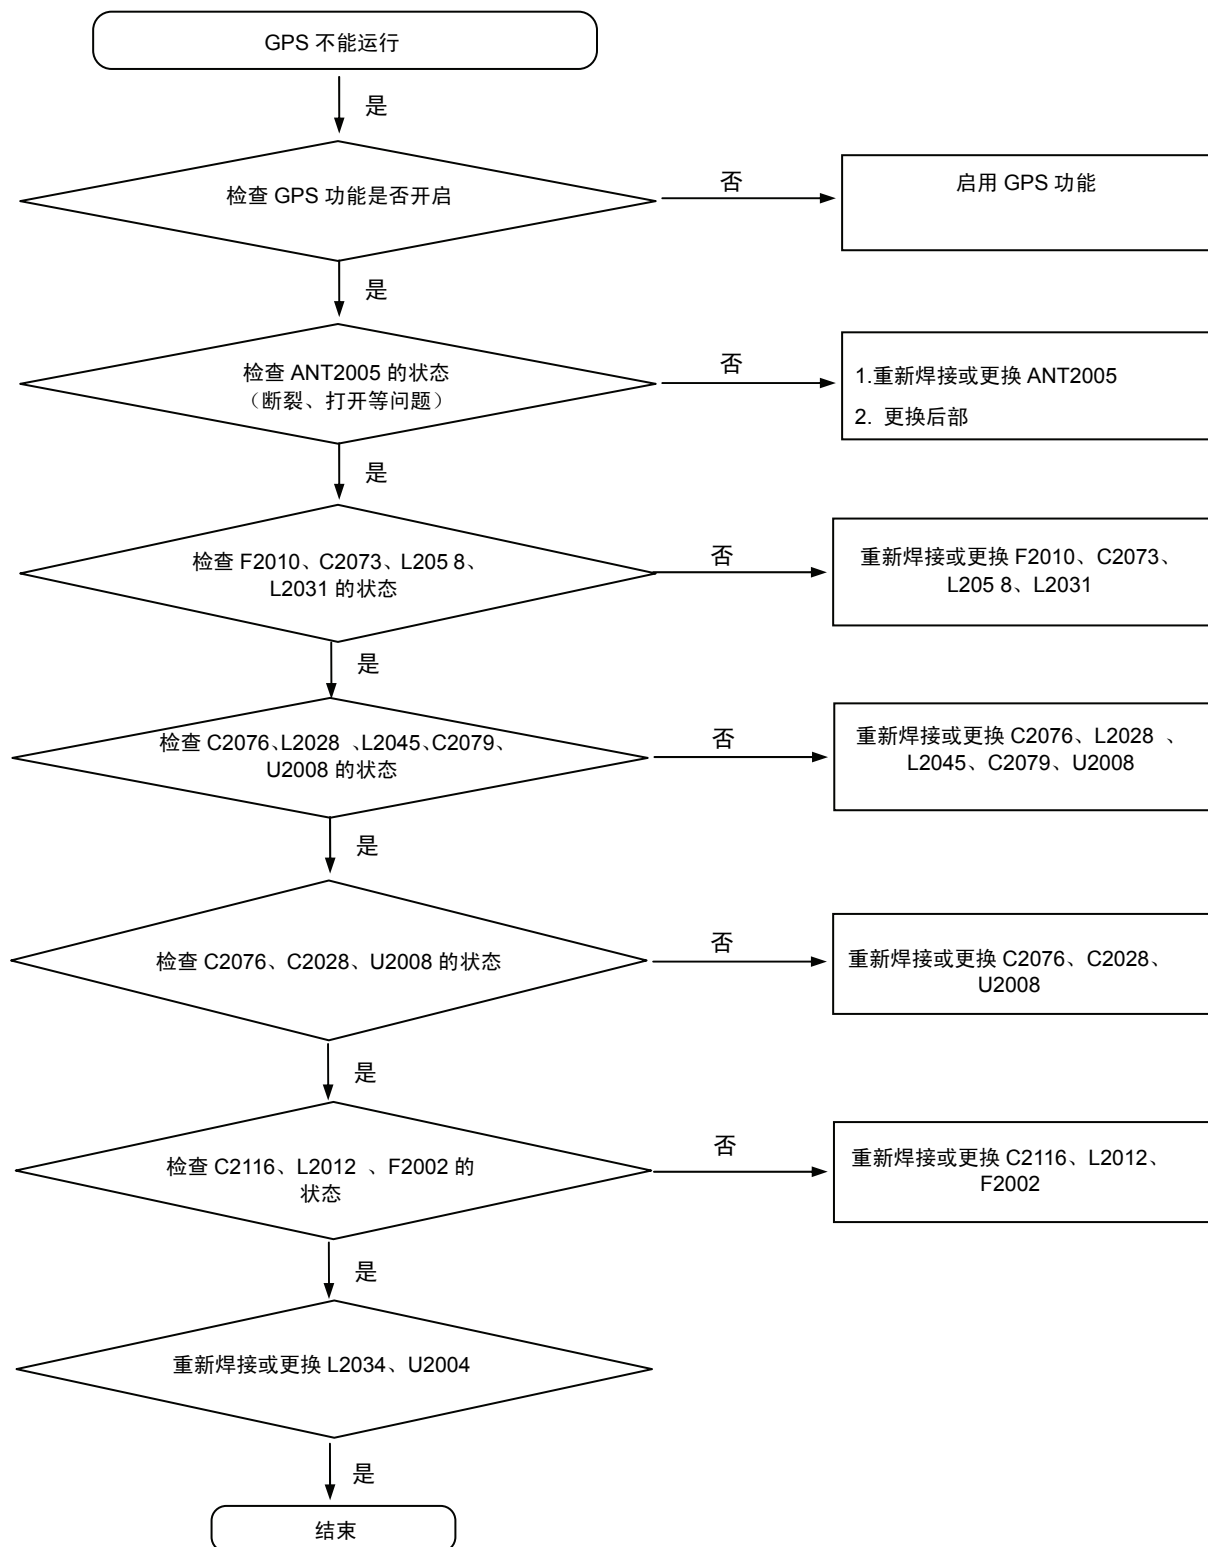


8.3 级维修

8-4-14. MST

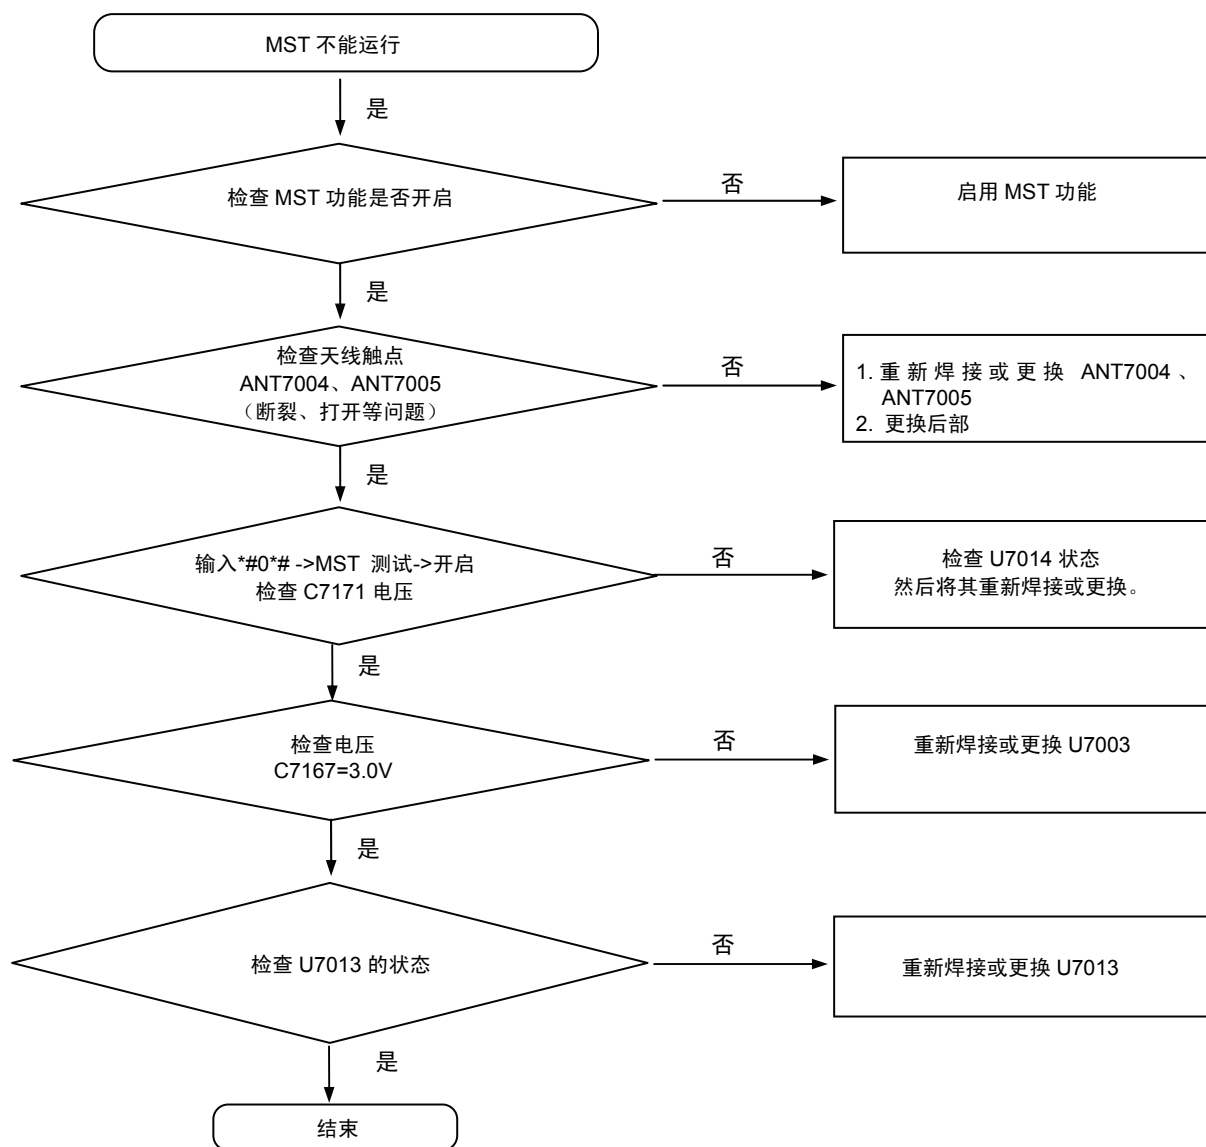


8.3 级维修

8-4-15. NFC

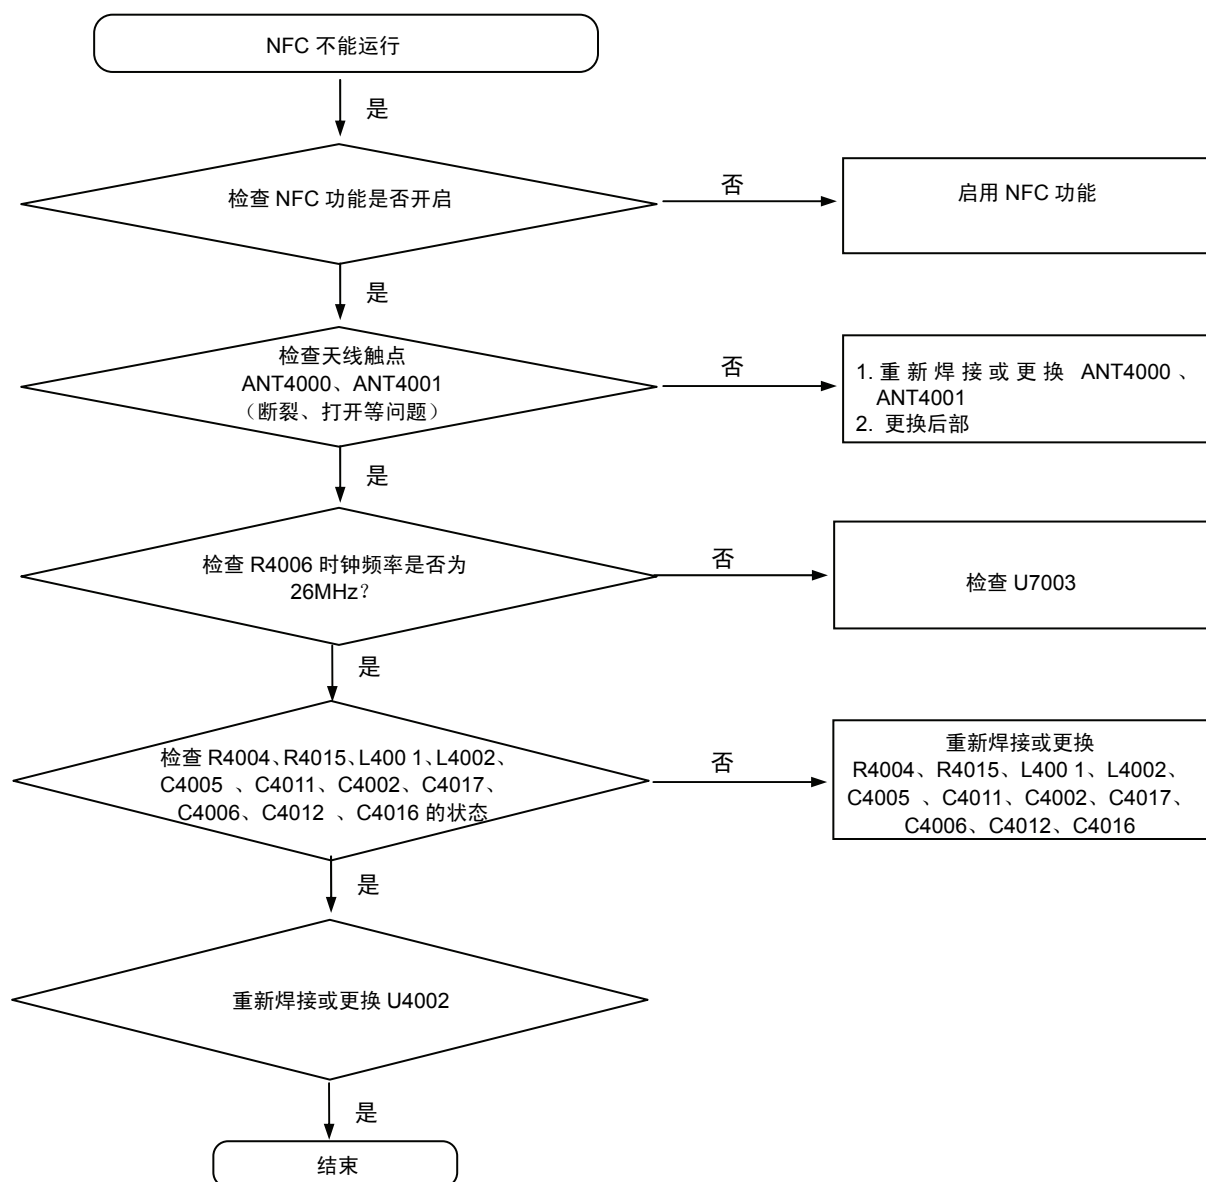


8.3 级维修

8-4-16. LTE B12、B17 Rx

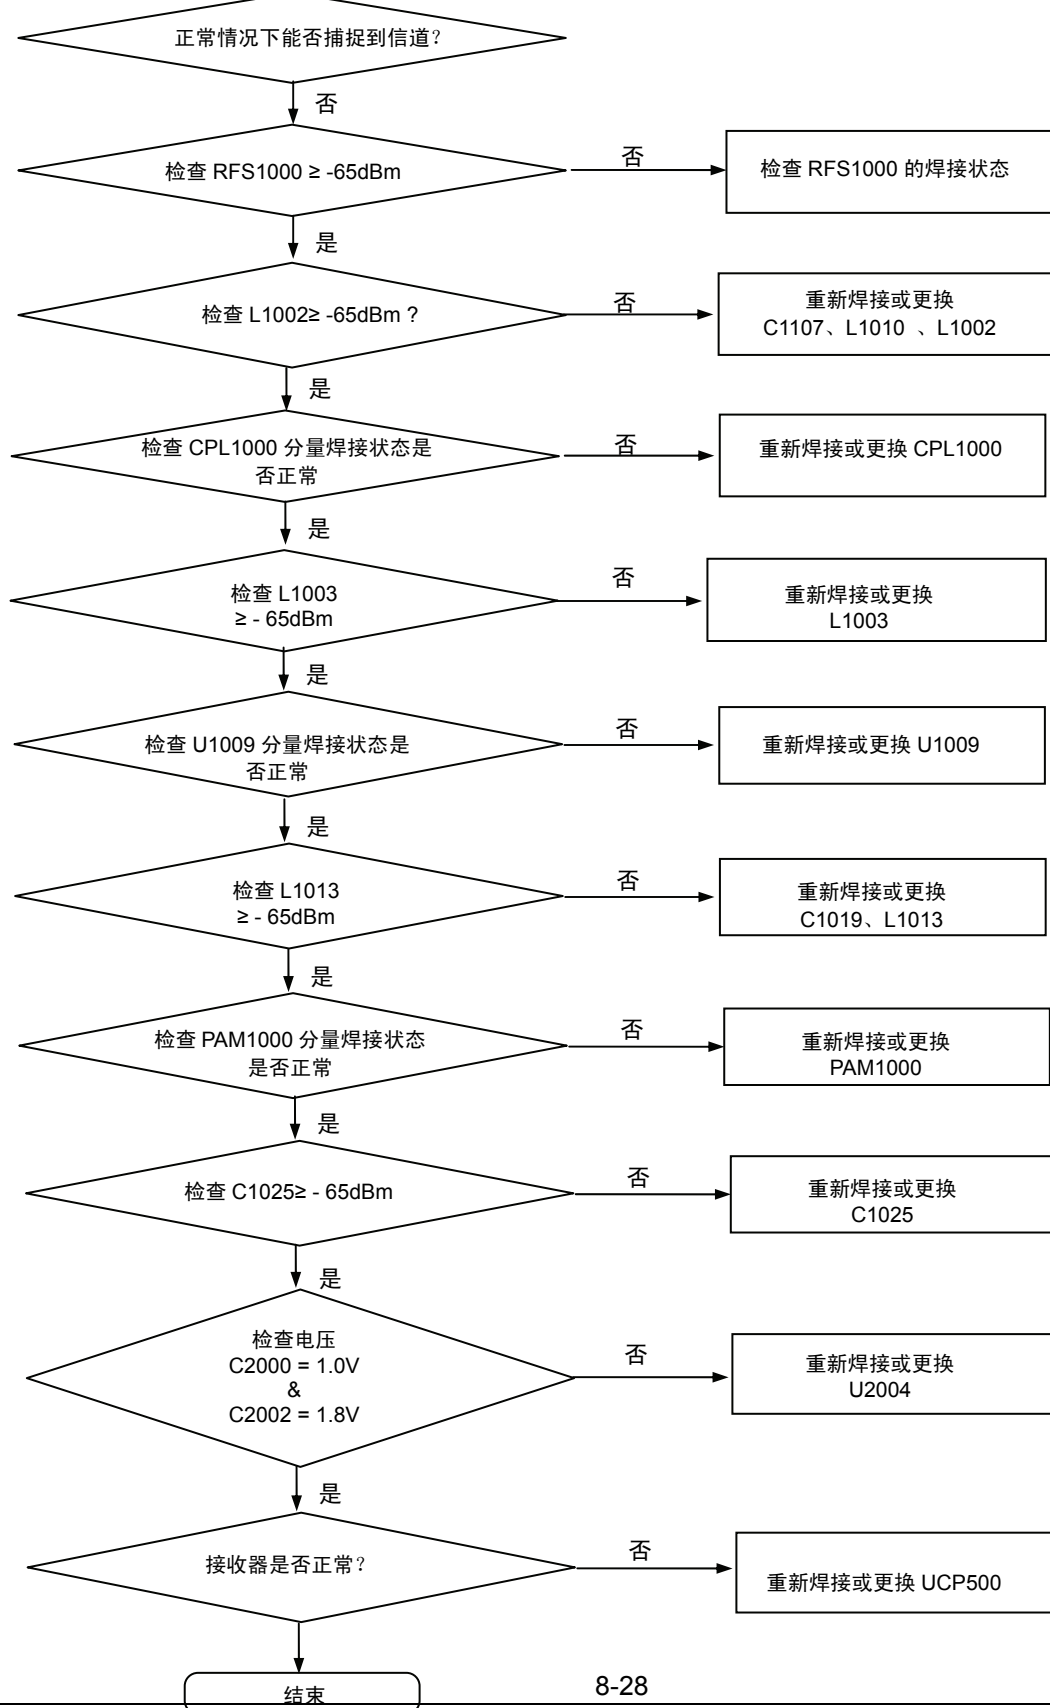


8.3 级维修

8-4-17. CDMA BC0 / GSM850 / WCDMA B5 / LTE B5、B18、B19、B26 Rx

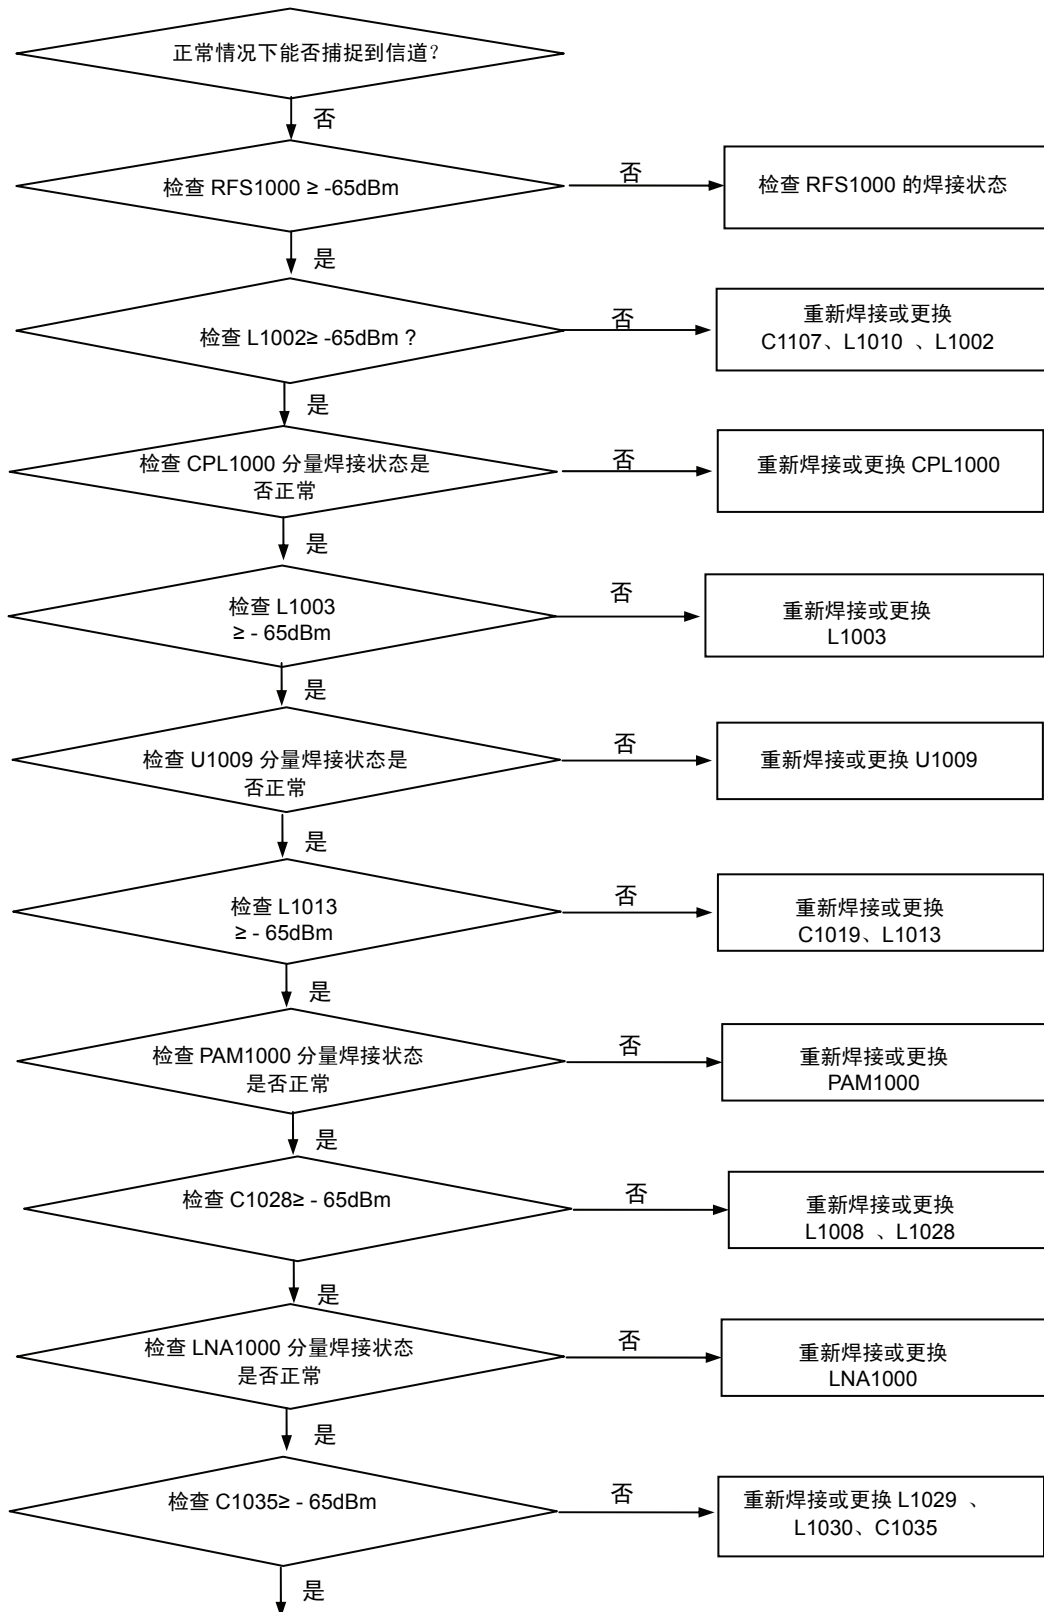


8.3 级维修

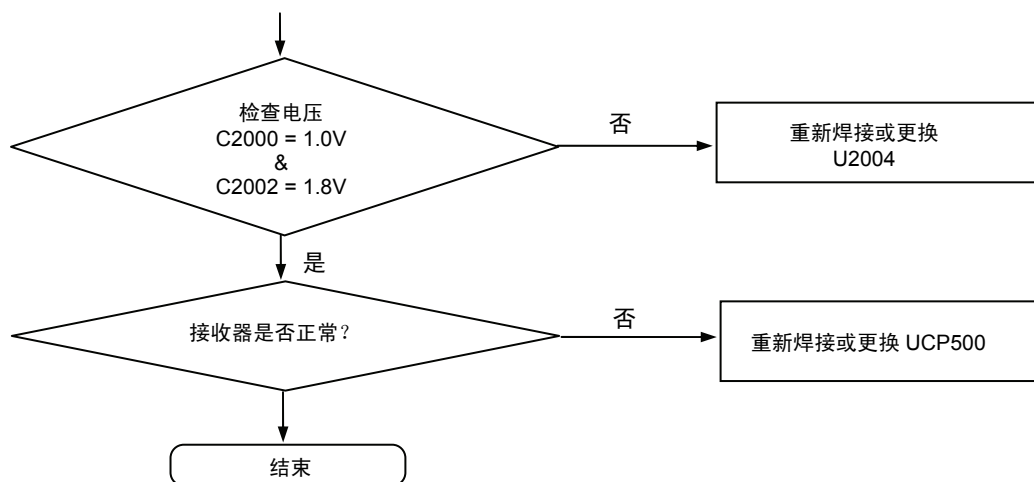


8. 3 级维修

8-4-18. LTE B13 Rx

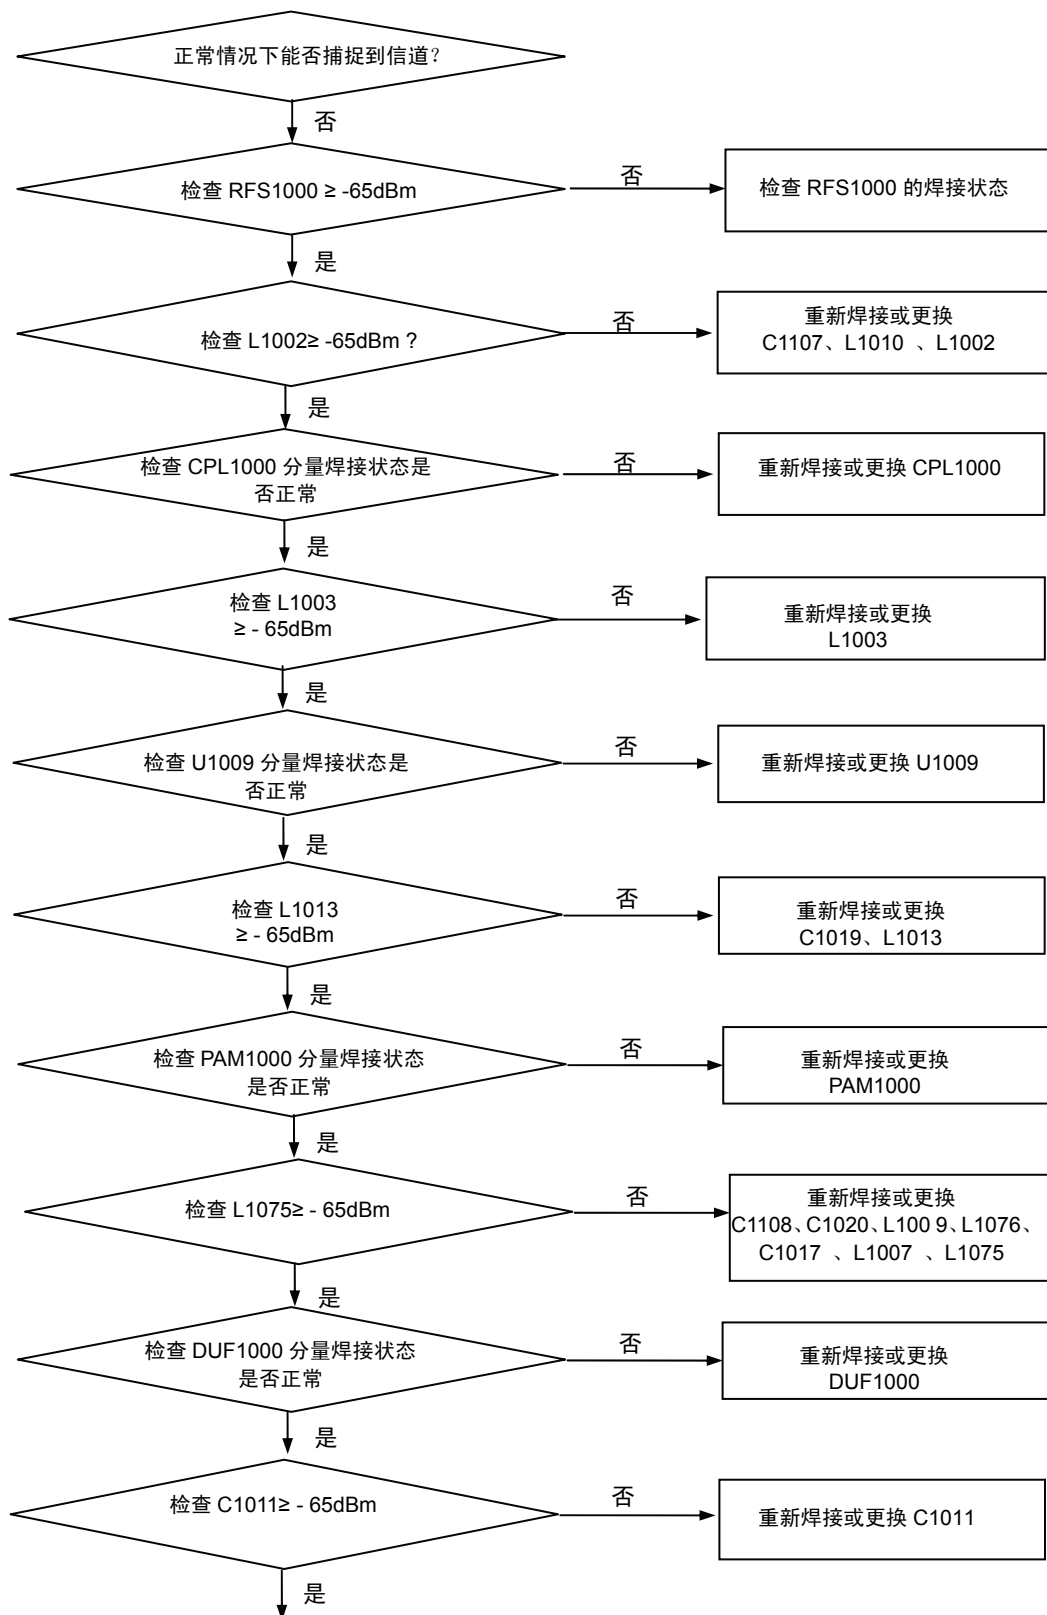


8.3 级维修

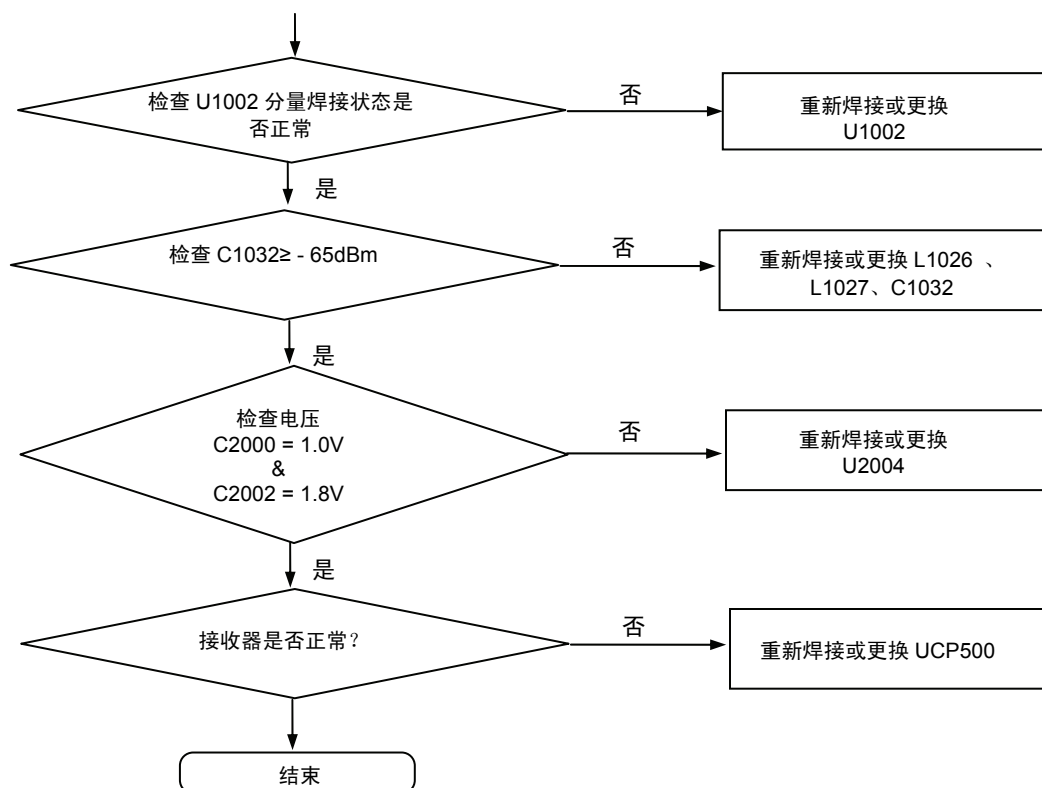


8. 3 级维修

8-4-19. LTE B20 Rx

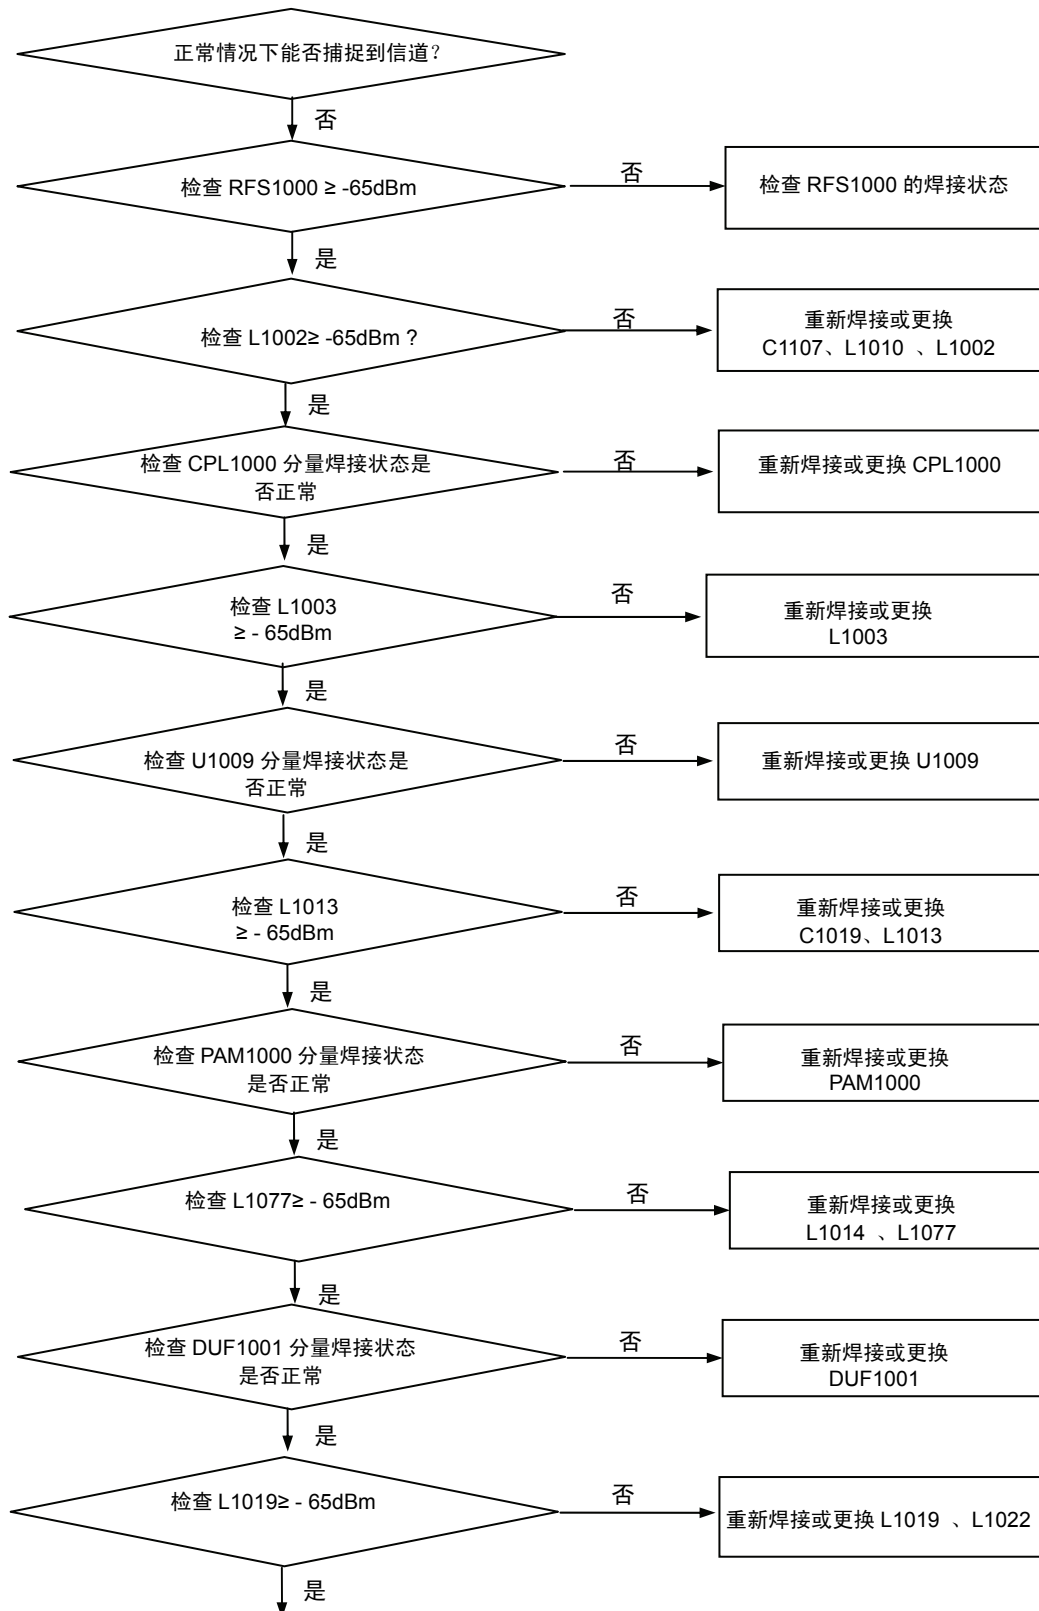


8.3 级维修

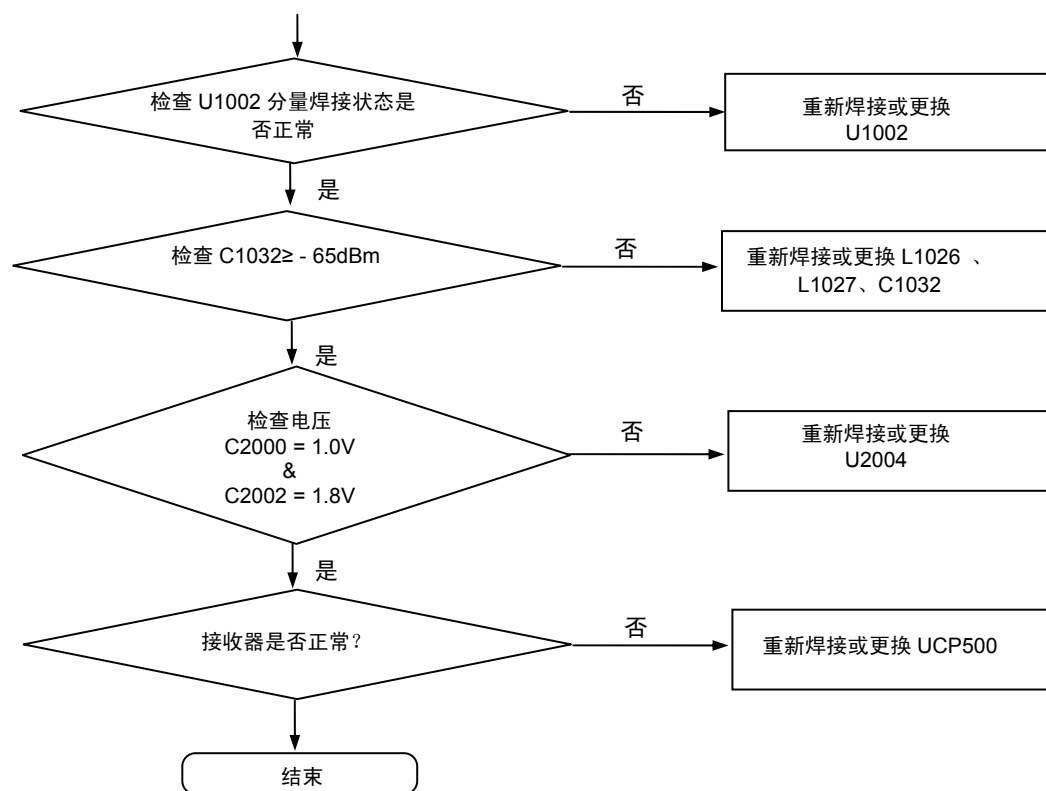


8.3 级维修

8-4-20. GSM900 / WCDMA B8 / LTE B8 Rx

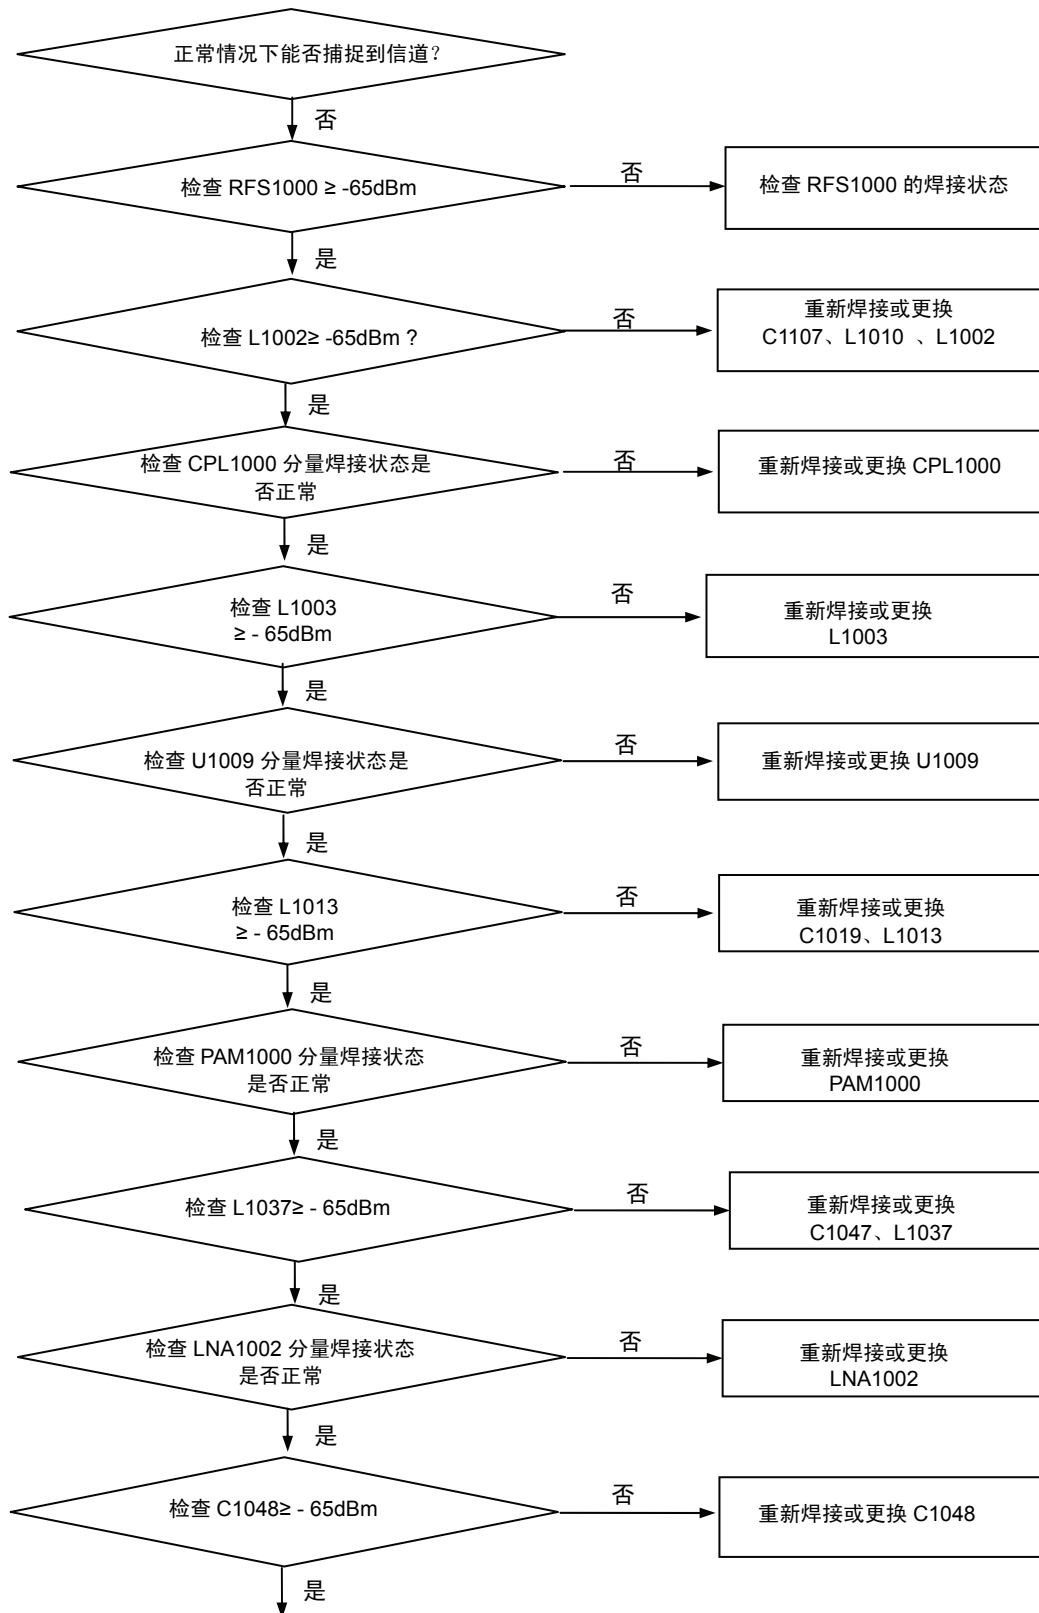


8.3 级维修

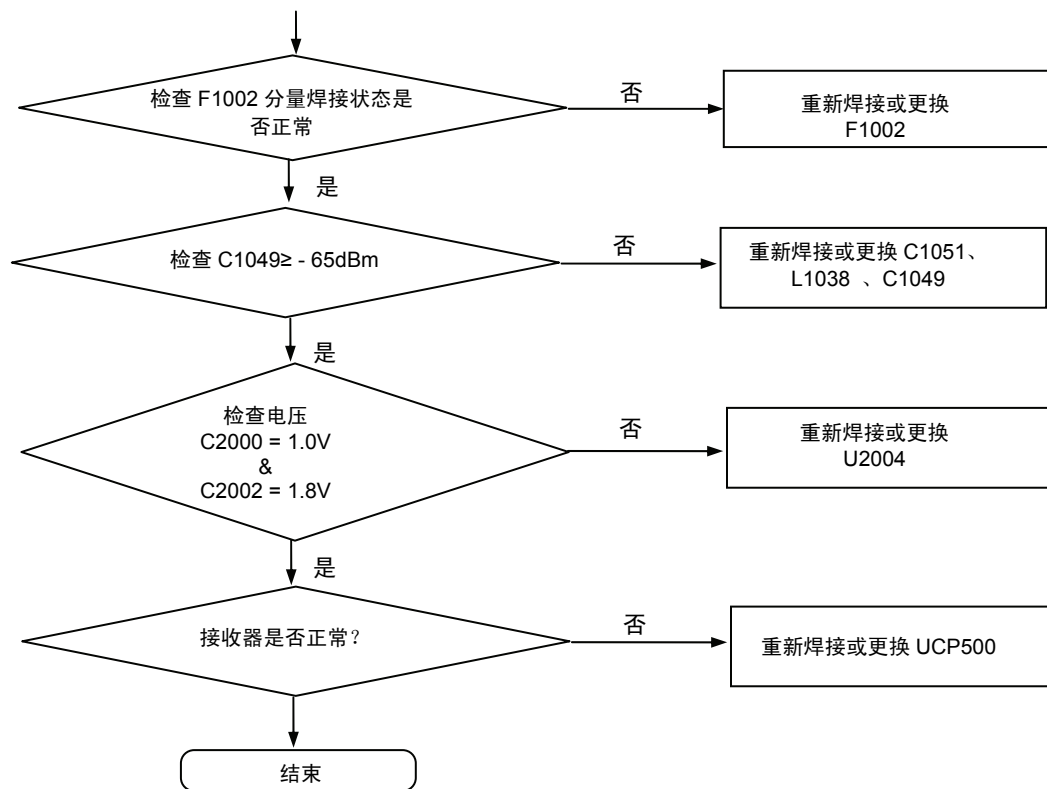


8.3 级维修

8-4-21. TD-SCDMA B34 Rx

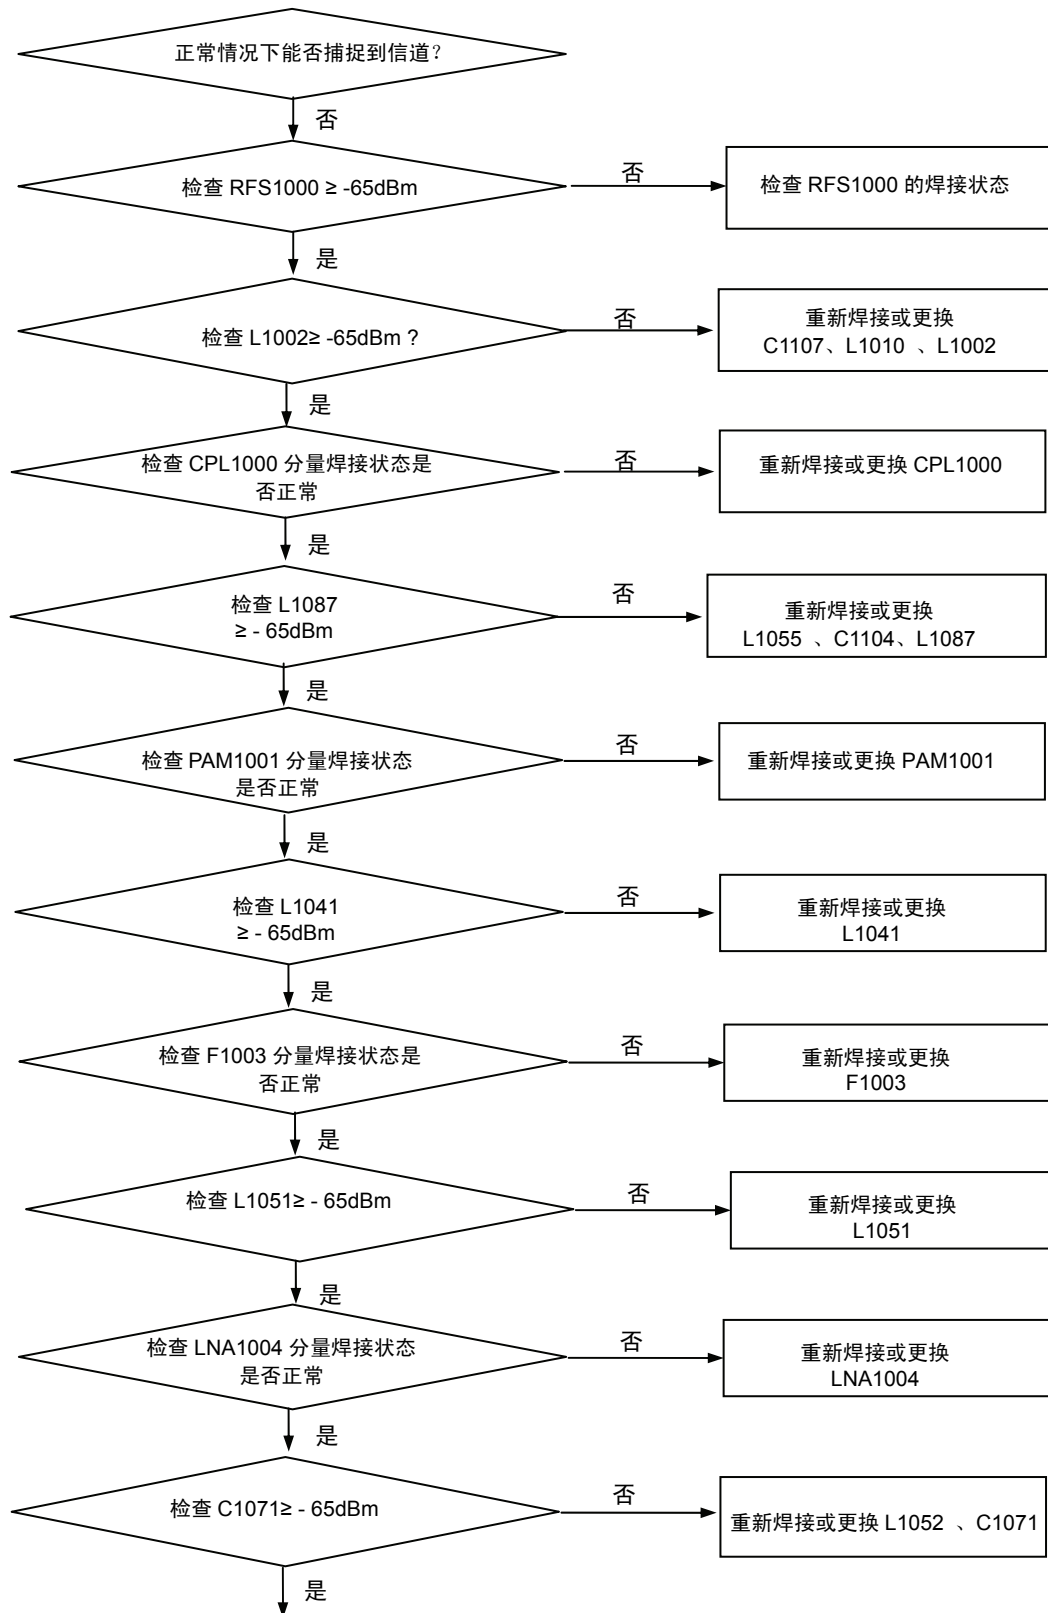


8.3 级维修

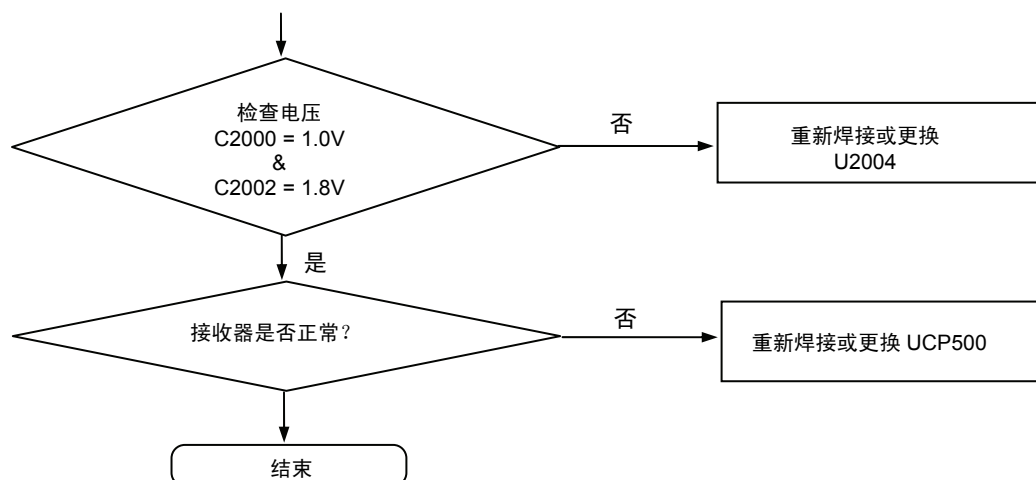


8. 3 级维修

8-4-22. TD-SCDMA B39 / LTE B39 Rx

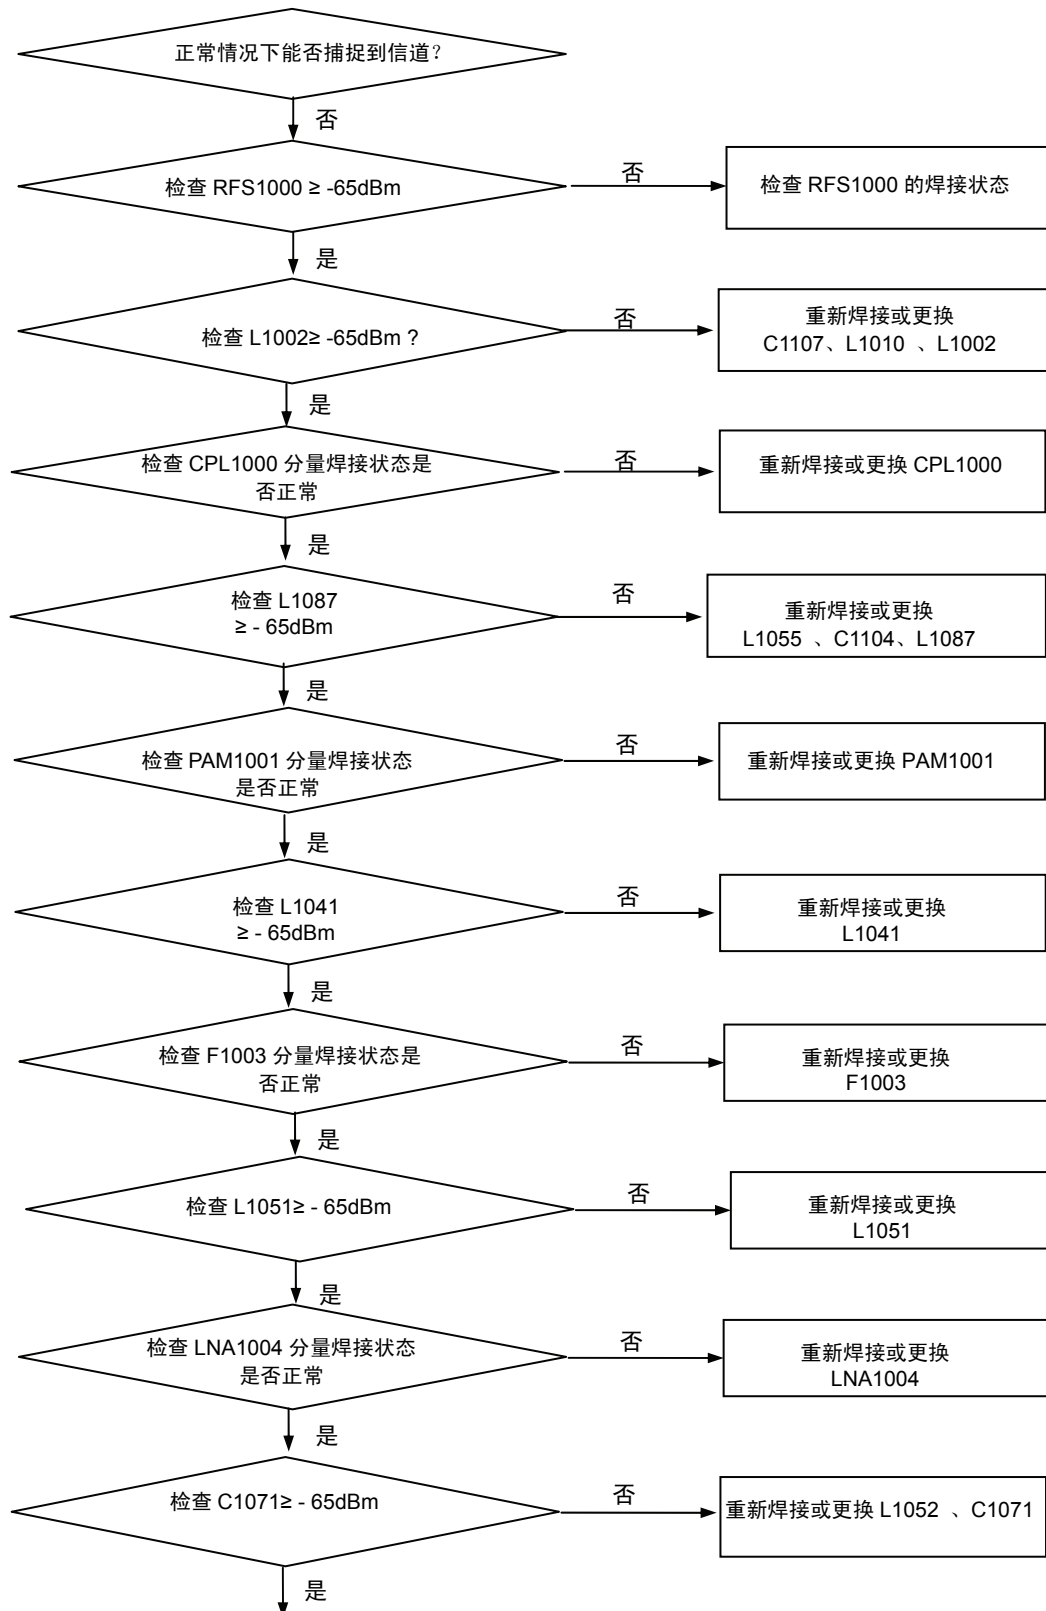


8.3 级维修

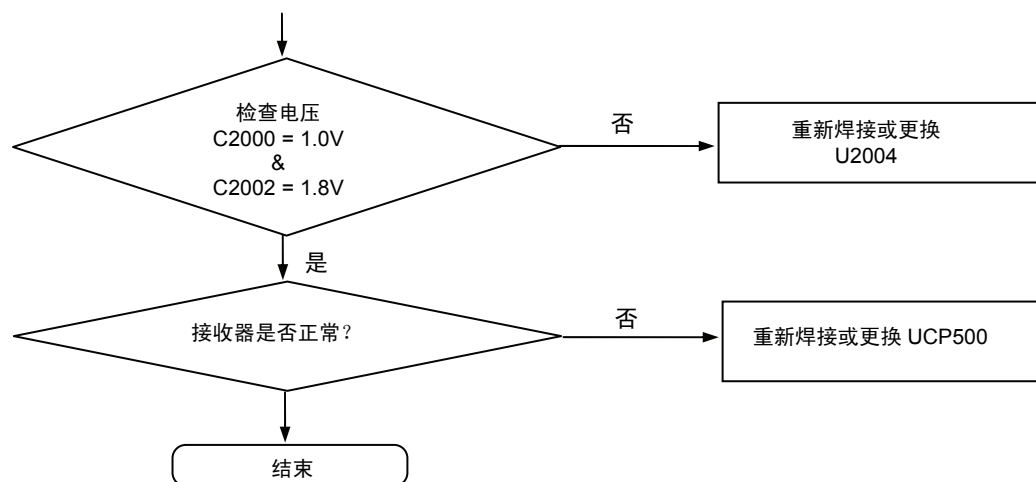


8.3 级维修

8-4-23. GSM1800 / LTE B3 Rx

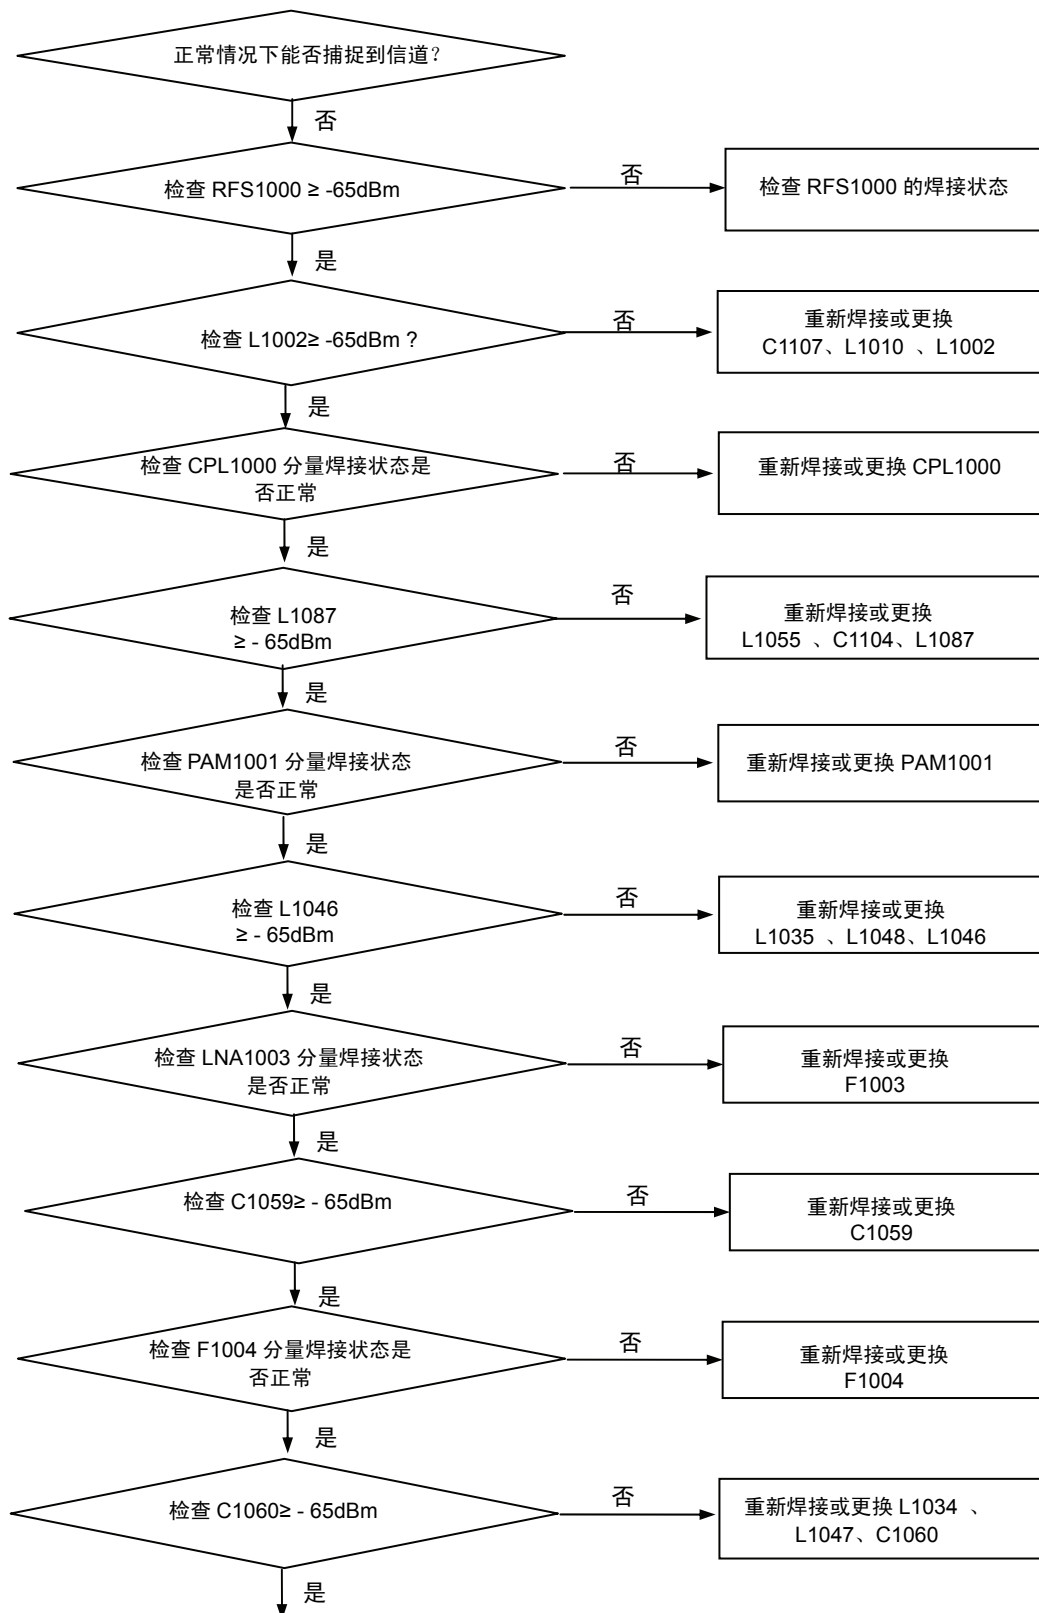


8.3 级维修

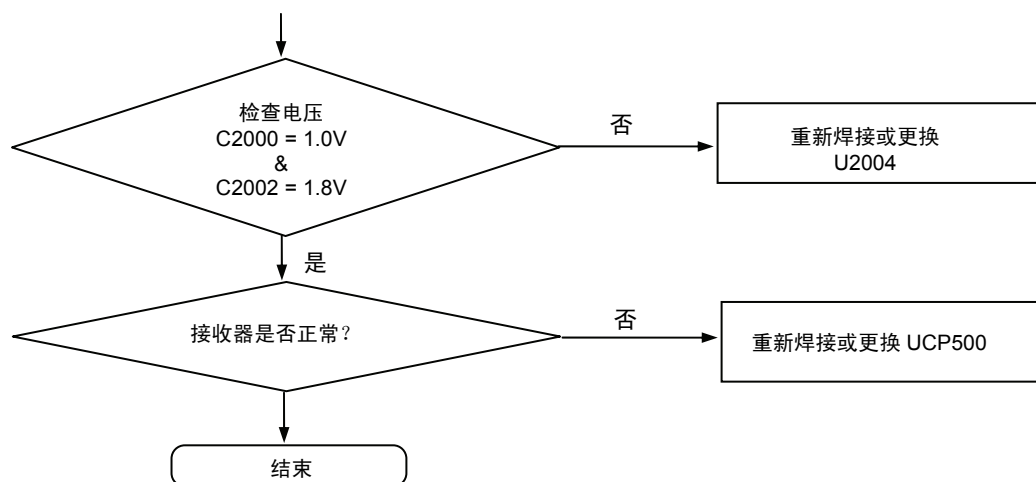


8. 3 级维修

8-4-24. GSM1900 / WCDMA B2 / LTE B2、B25 Rx

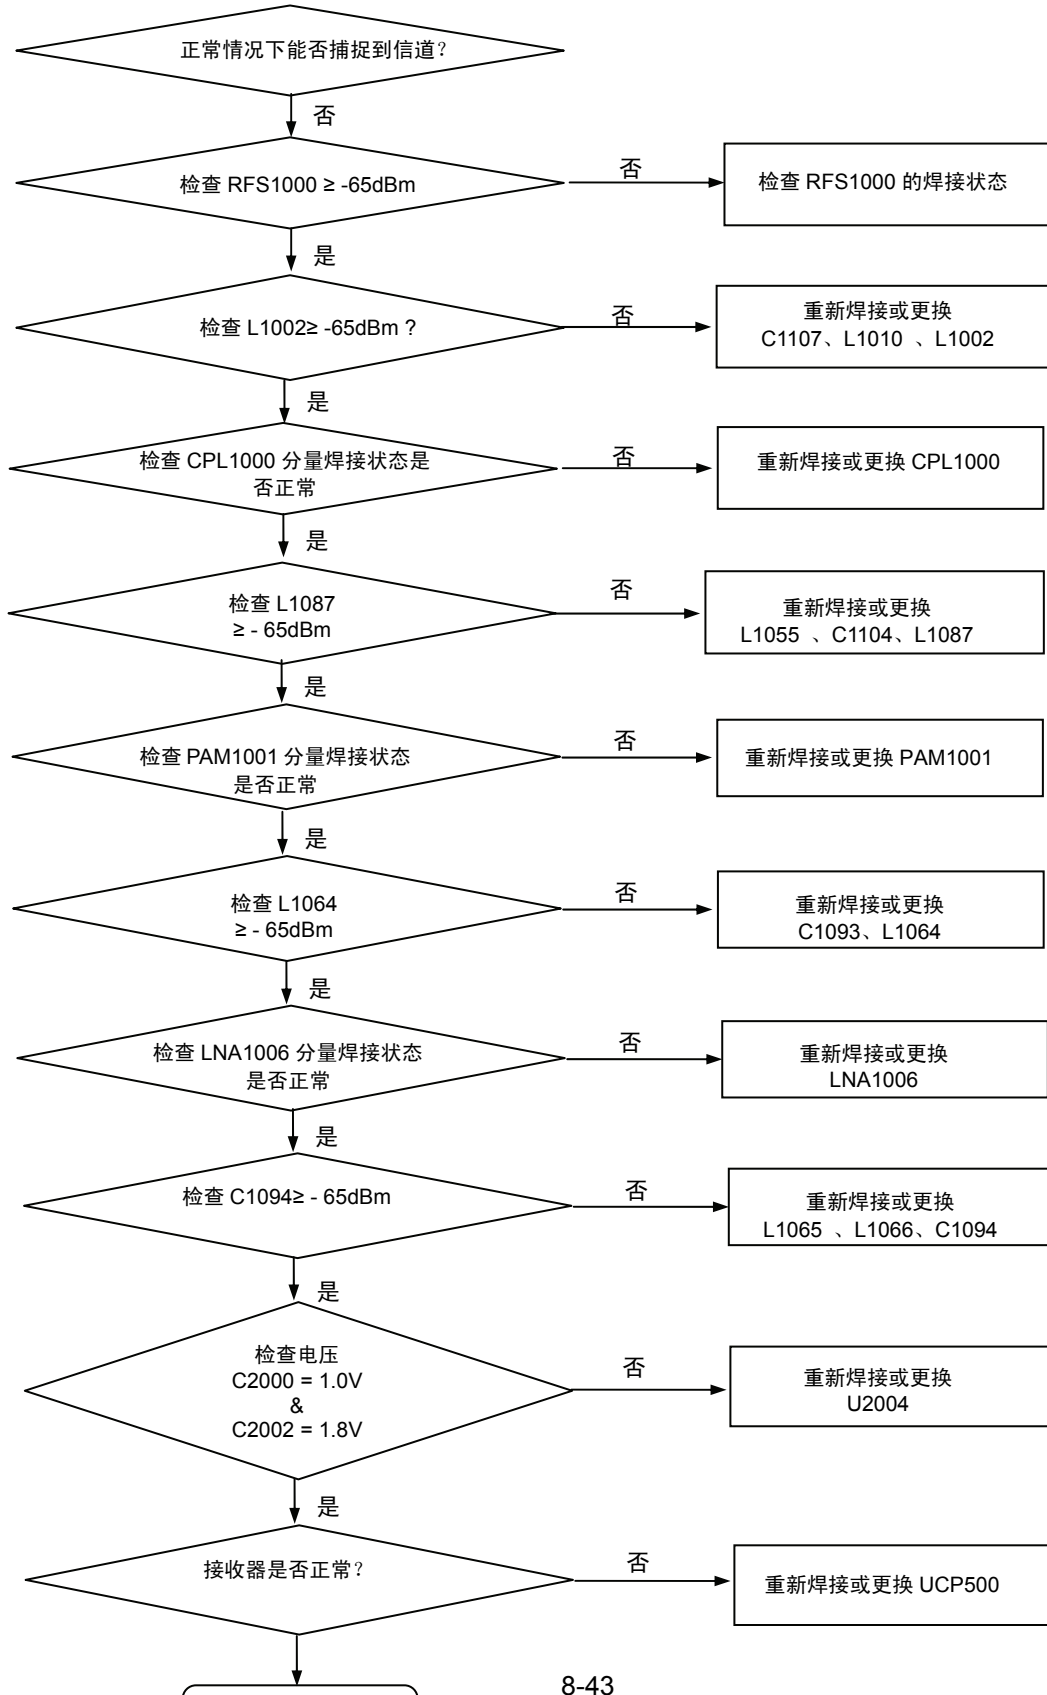


8.3 级维修

8-4-25. LTE B7 Rx

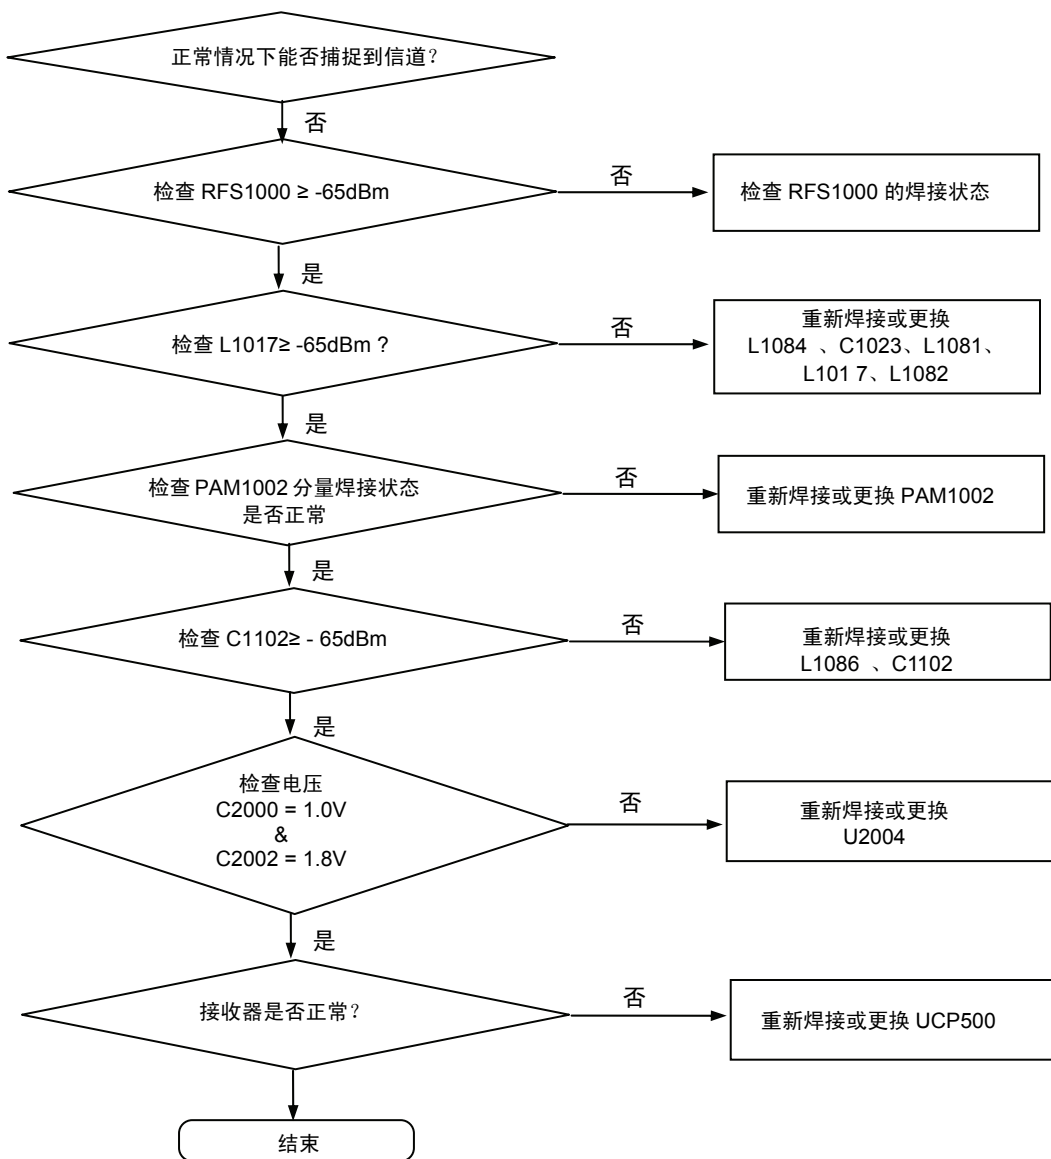


8.3 级维修

8-4-26. LTE B40 Rx

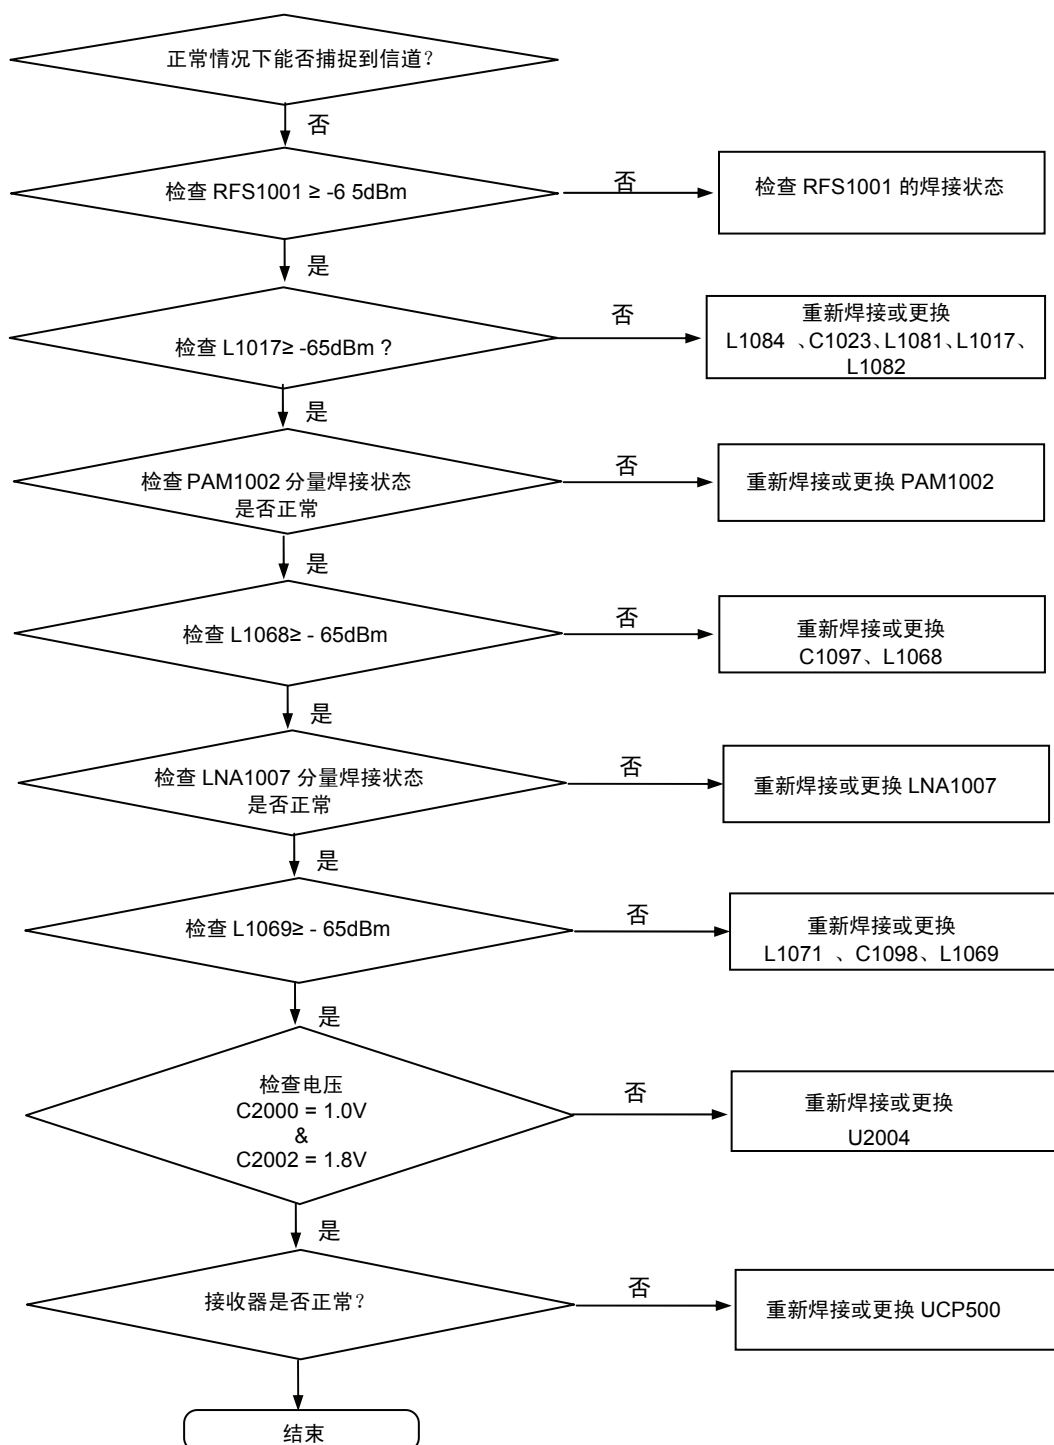


8.3 级维修

8-4-27. LTE B38、B41 Rx

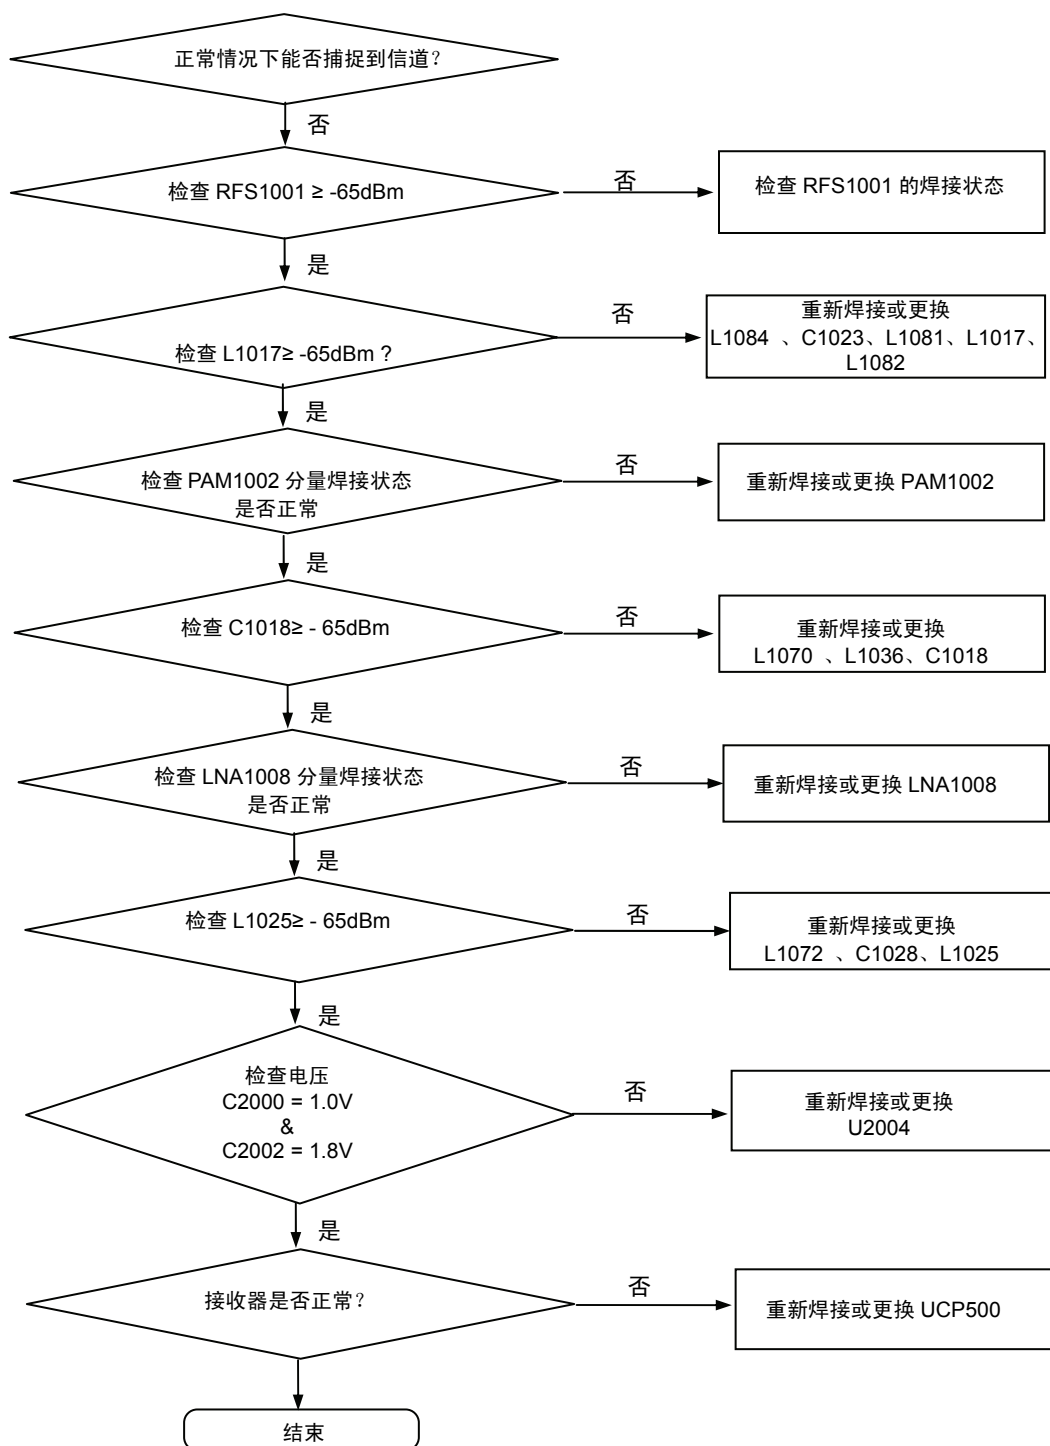


8.3 级维修

8-4-28. WCDMA B1 / LTE B1、B4 Rx

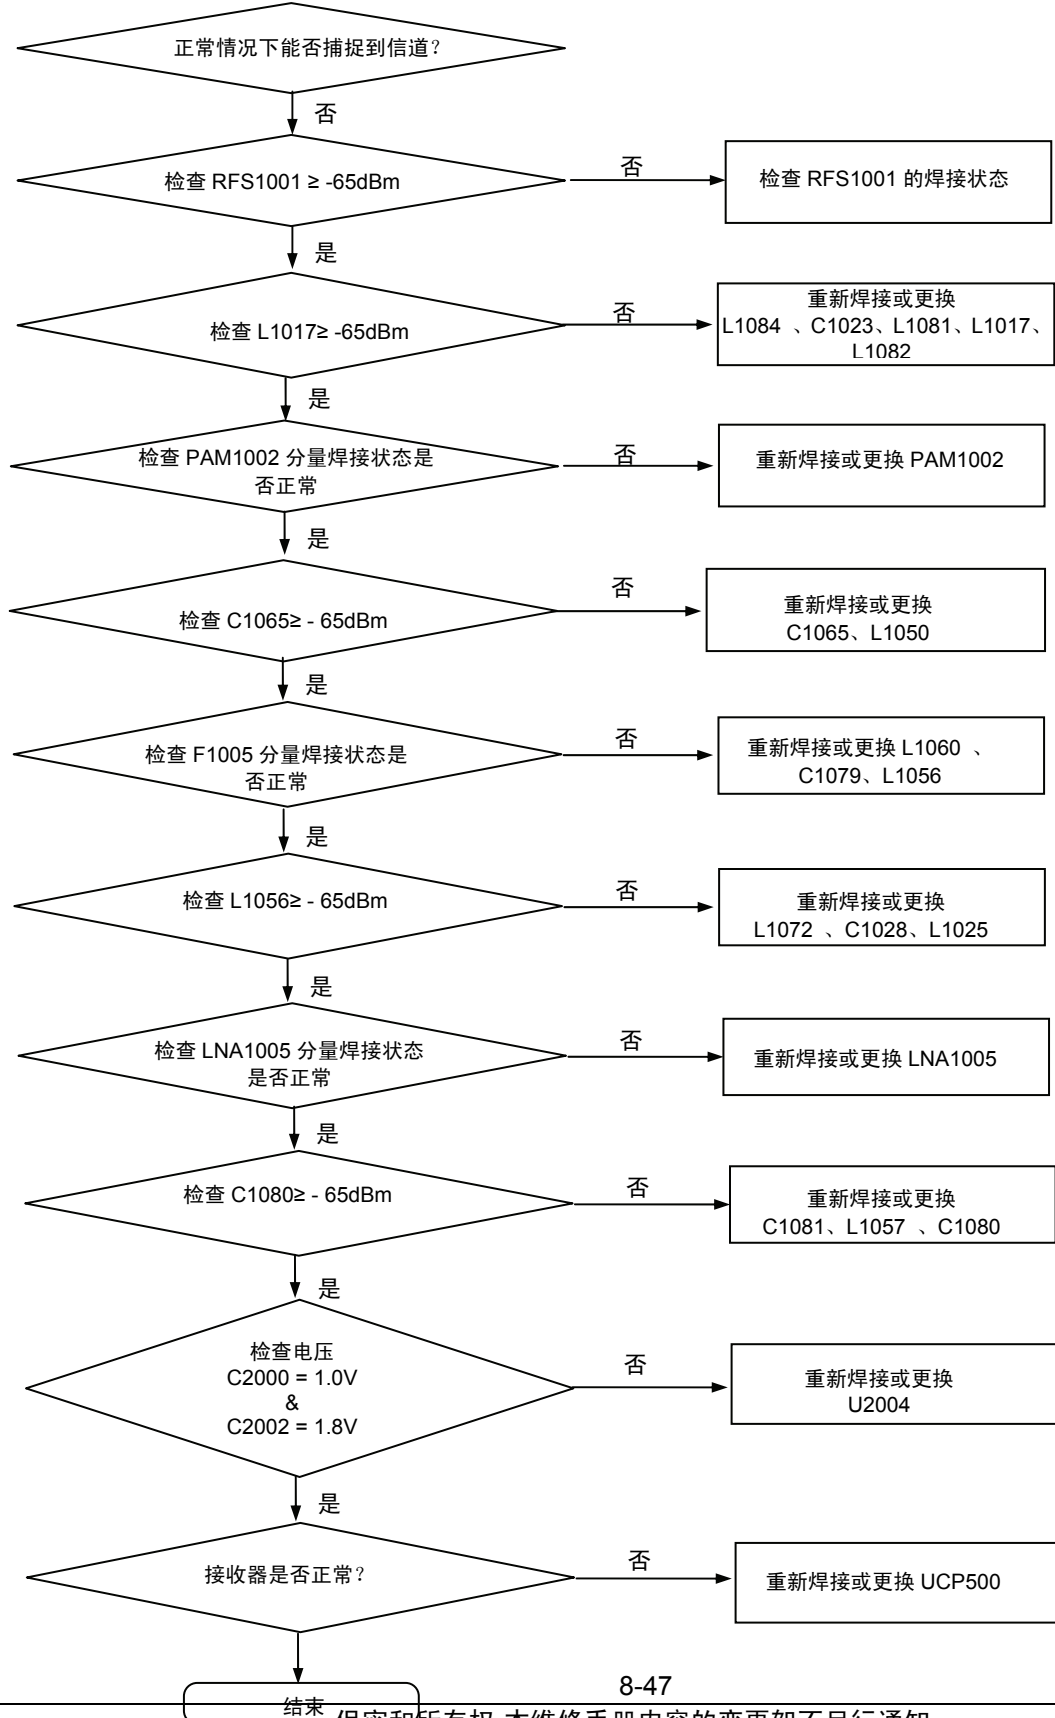


8. 3 级维修

8-4-29. GSM850 / GSM900 Tx

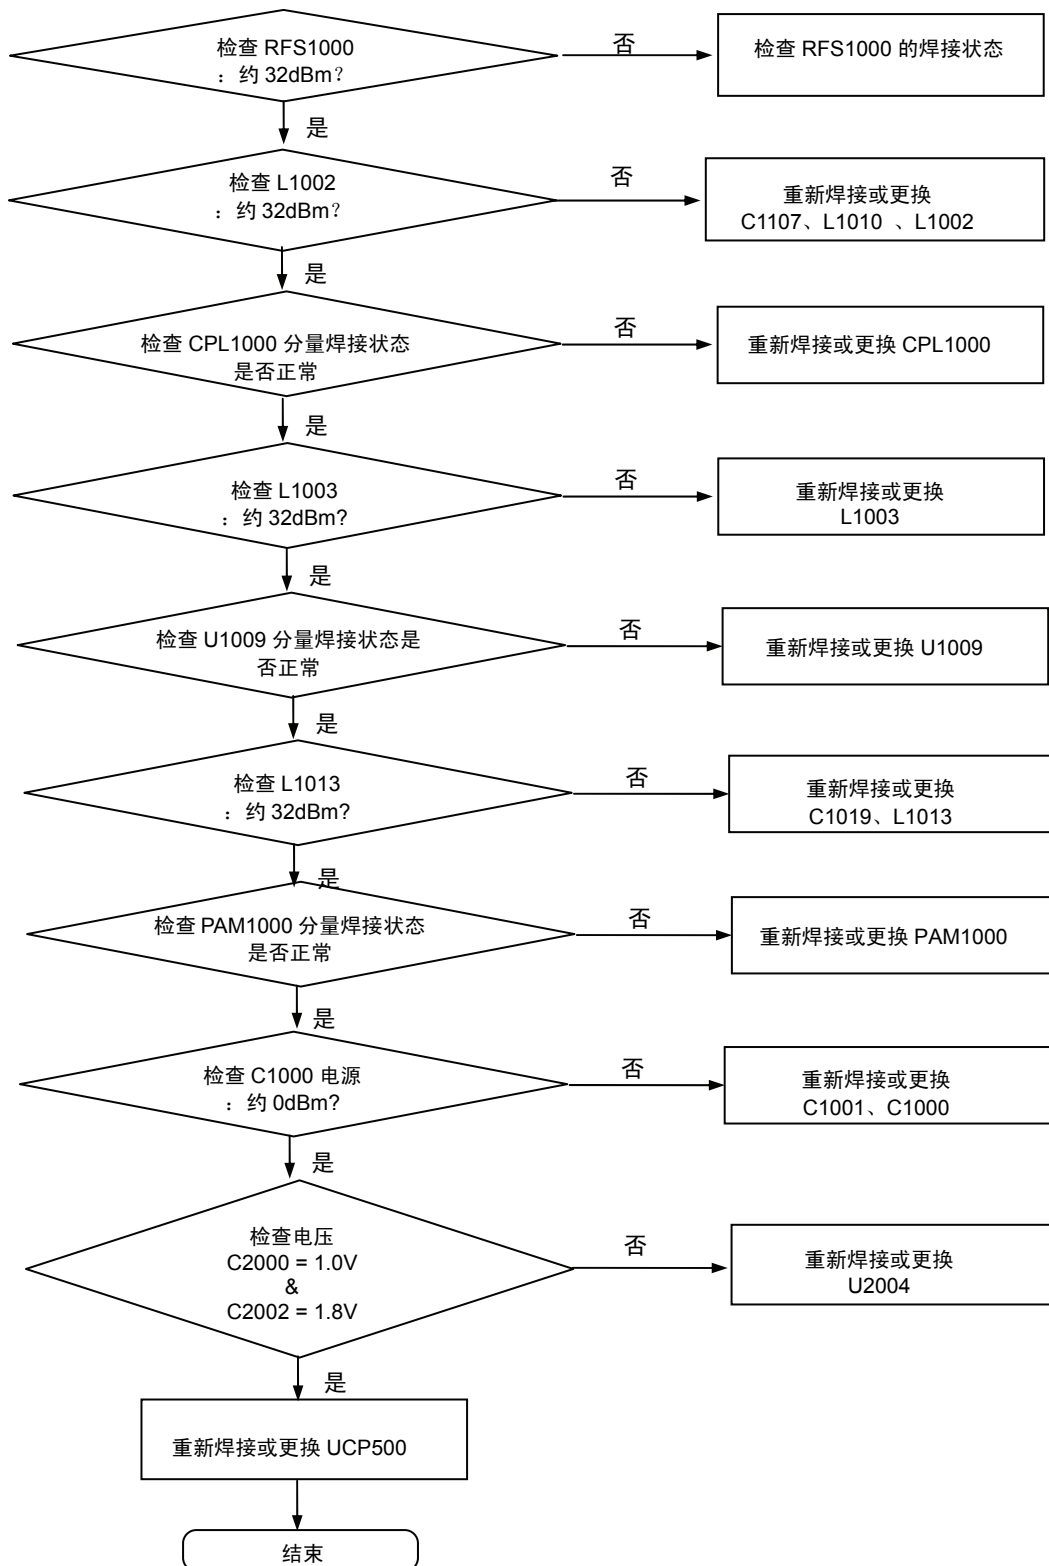


8. 3 级维修

8-4-30. CDMA BC0 / WCDMA B5、B8 / LTE B5、B8、B18、B19、B26 Tx

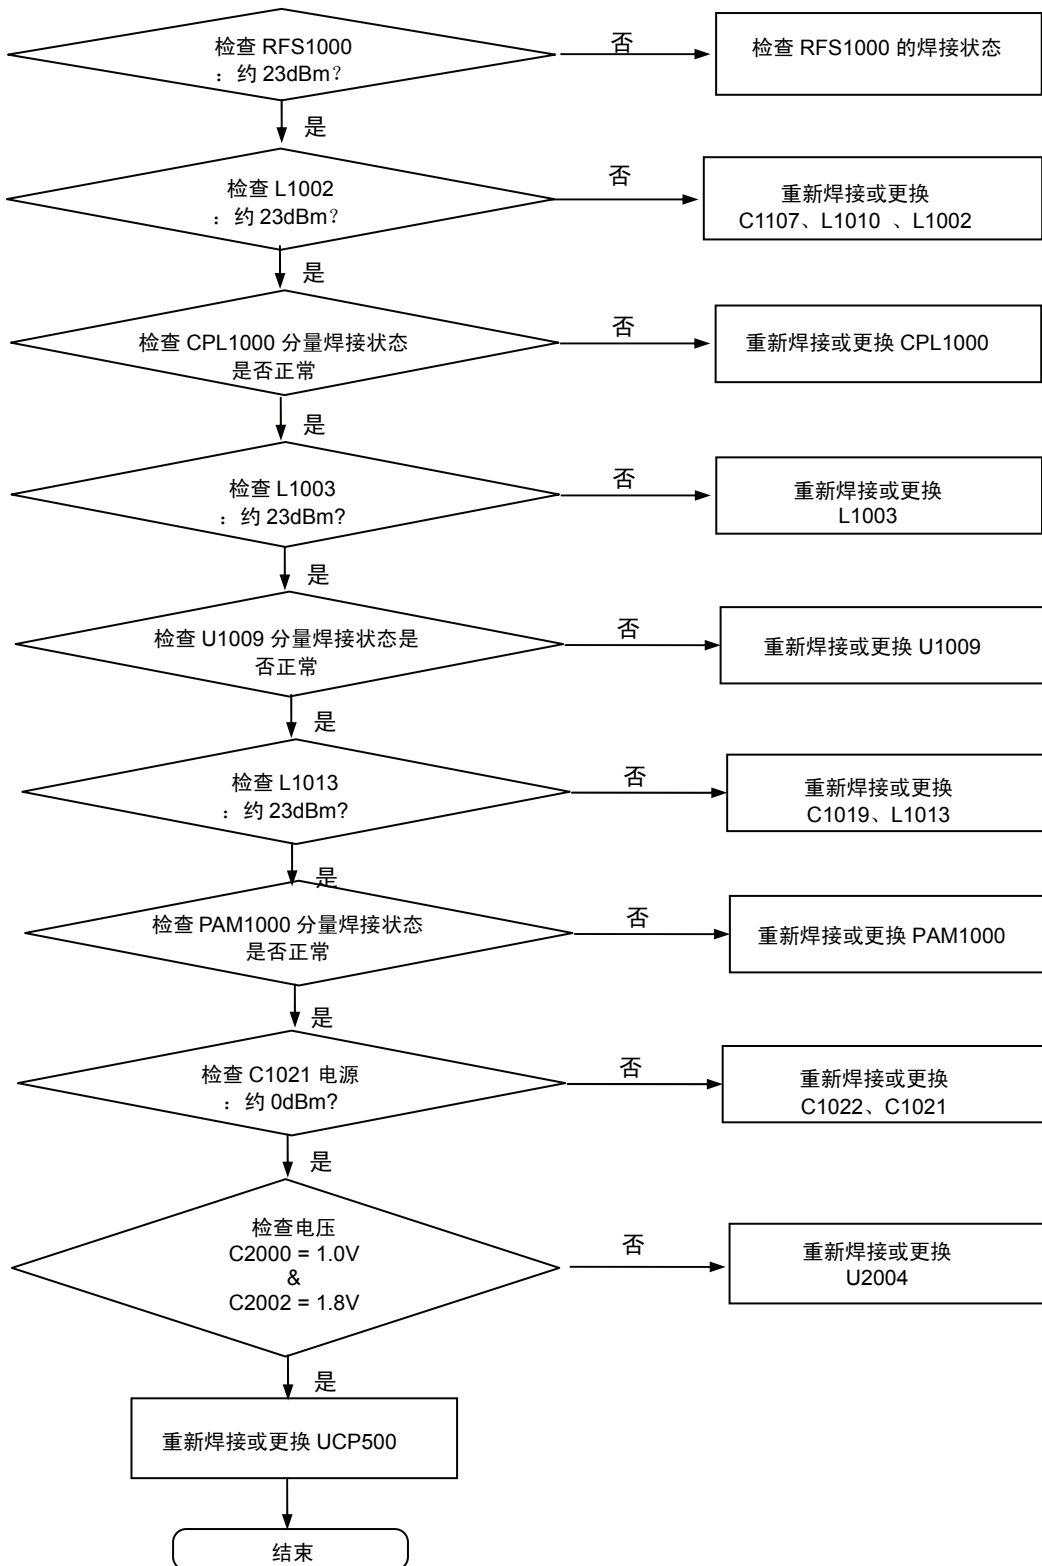


8. 3 级维修

8-4-31. LTE B12、B17 Tx

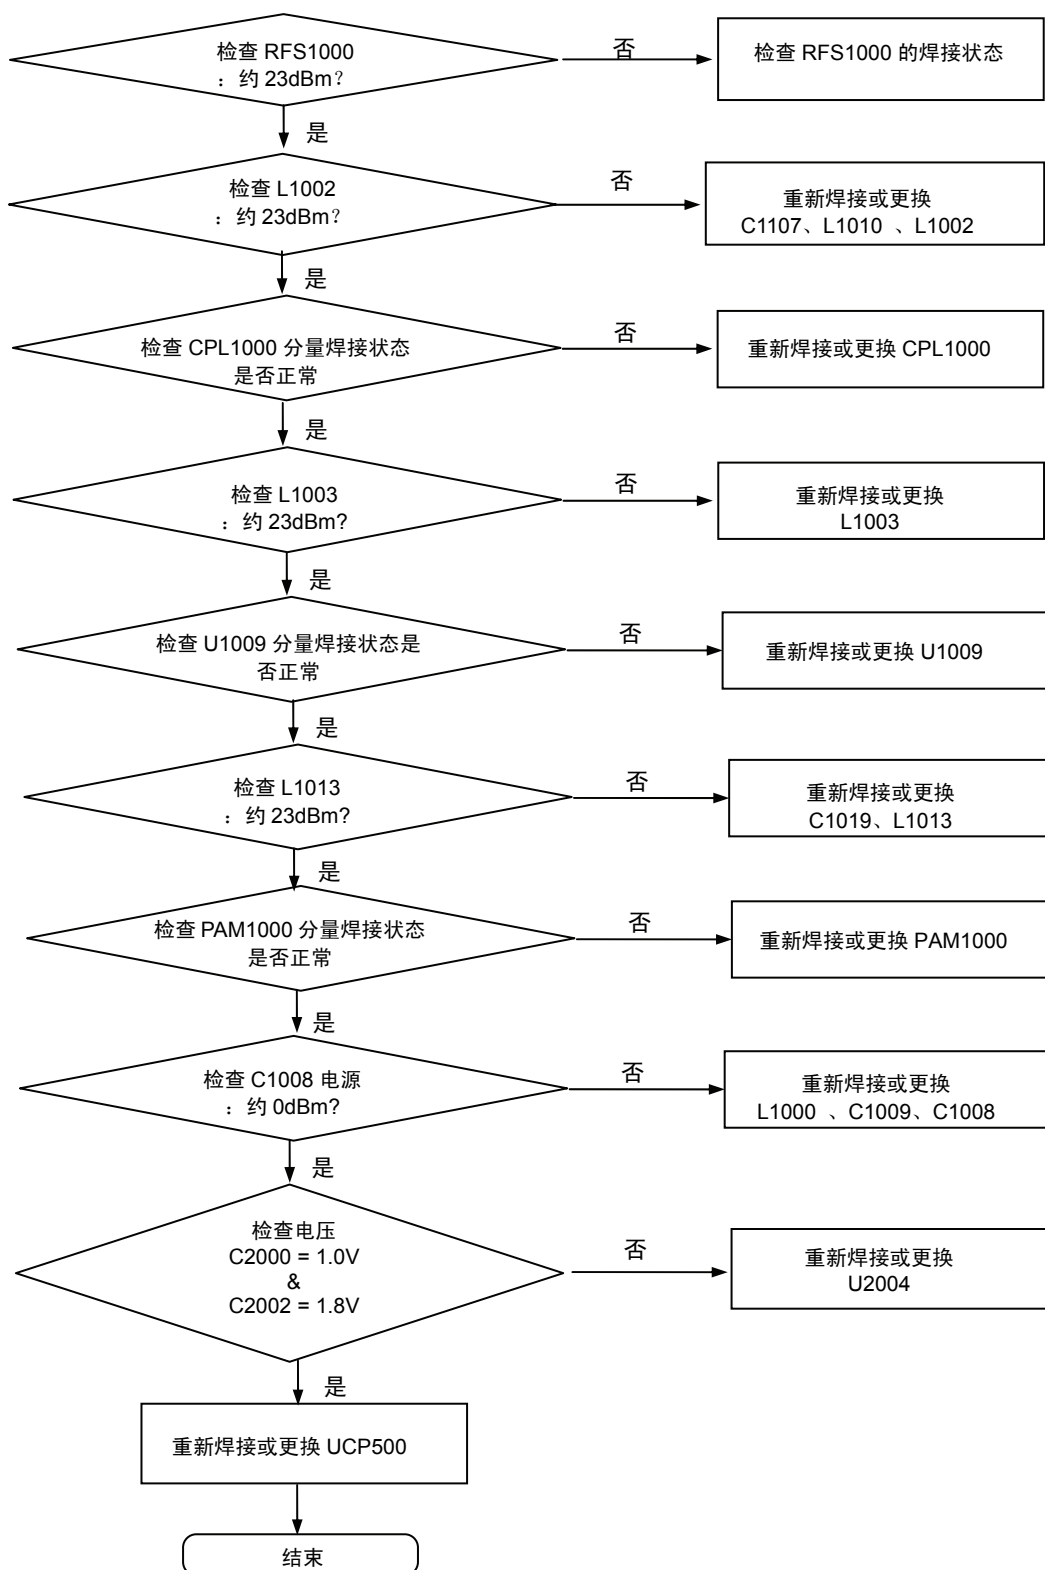


8.3 级维修

8-4-32. LTE B13 Tx

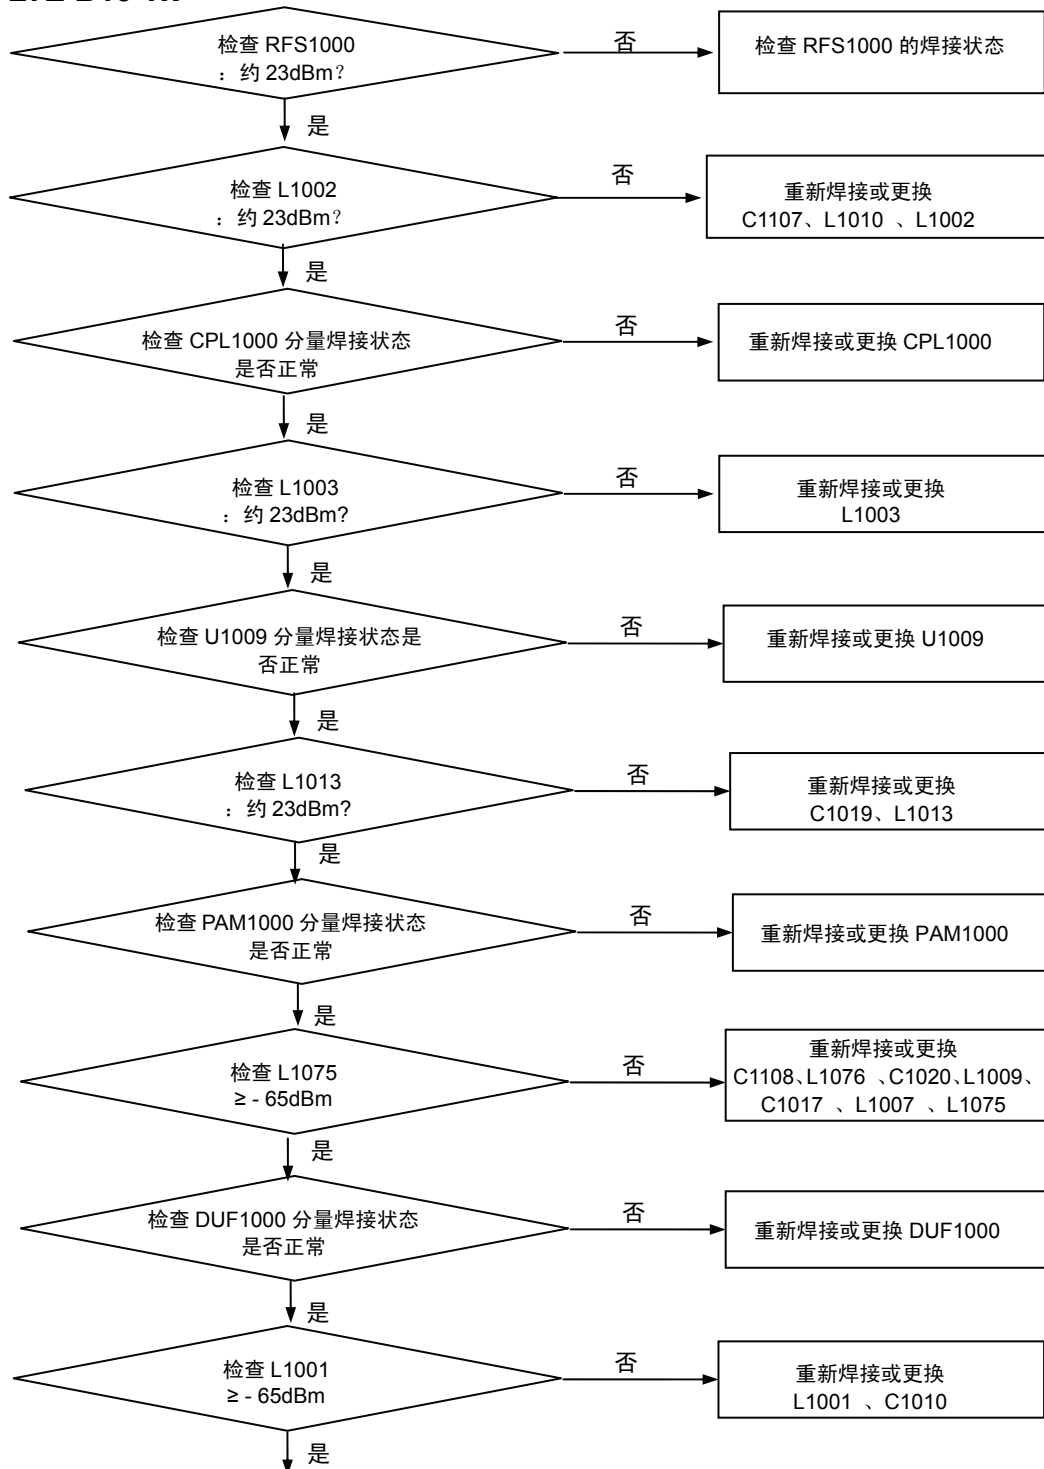


8.3 级维修

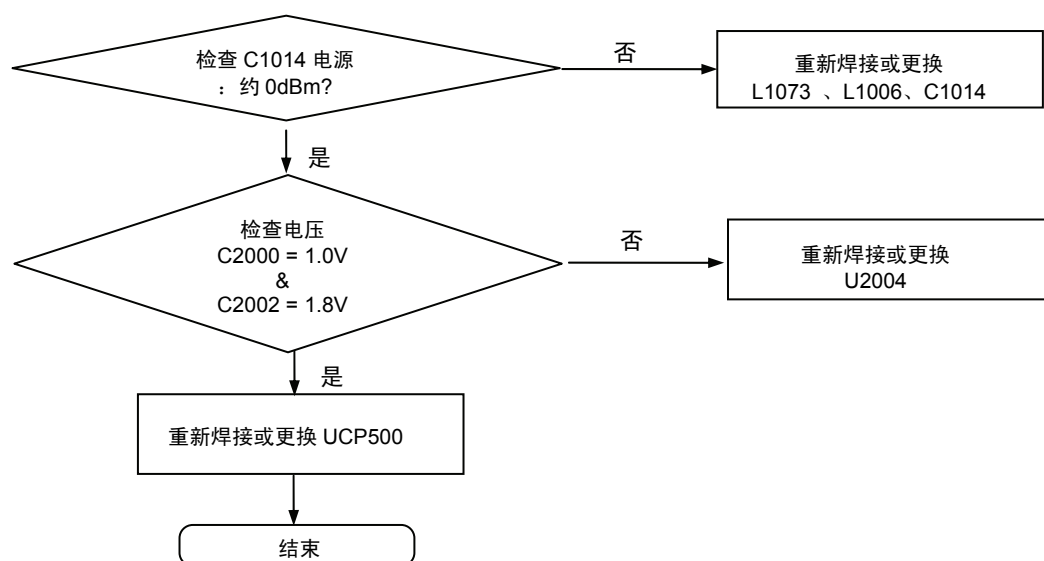


8.3 级维修

8-4-33. GSM1800、GSM1900 Tx

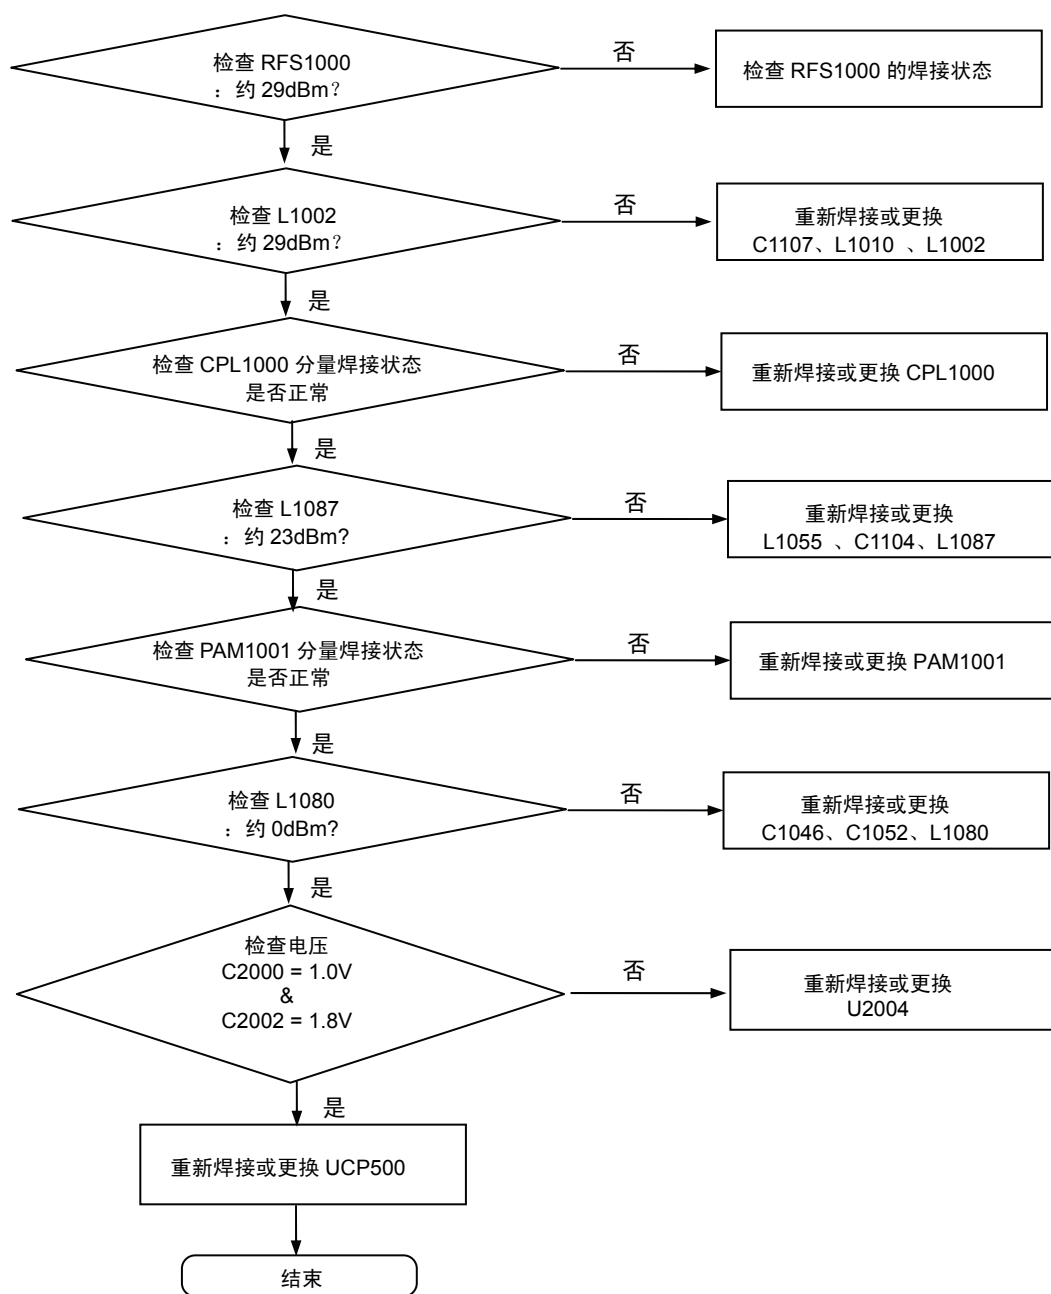


8.3 级维修

8-4-34. WCDMA B1、B2 / TD-SCDMA B34、B39 / LTE B1、B2、B3、B4、B25、B39 Tx

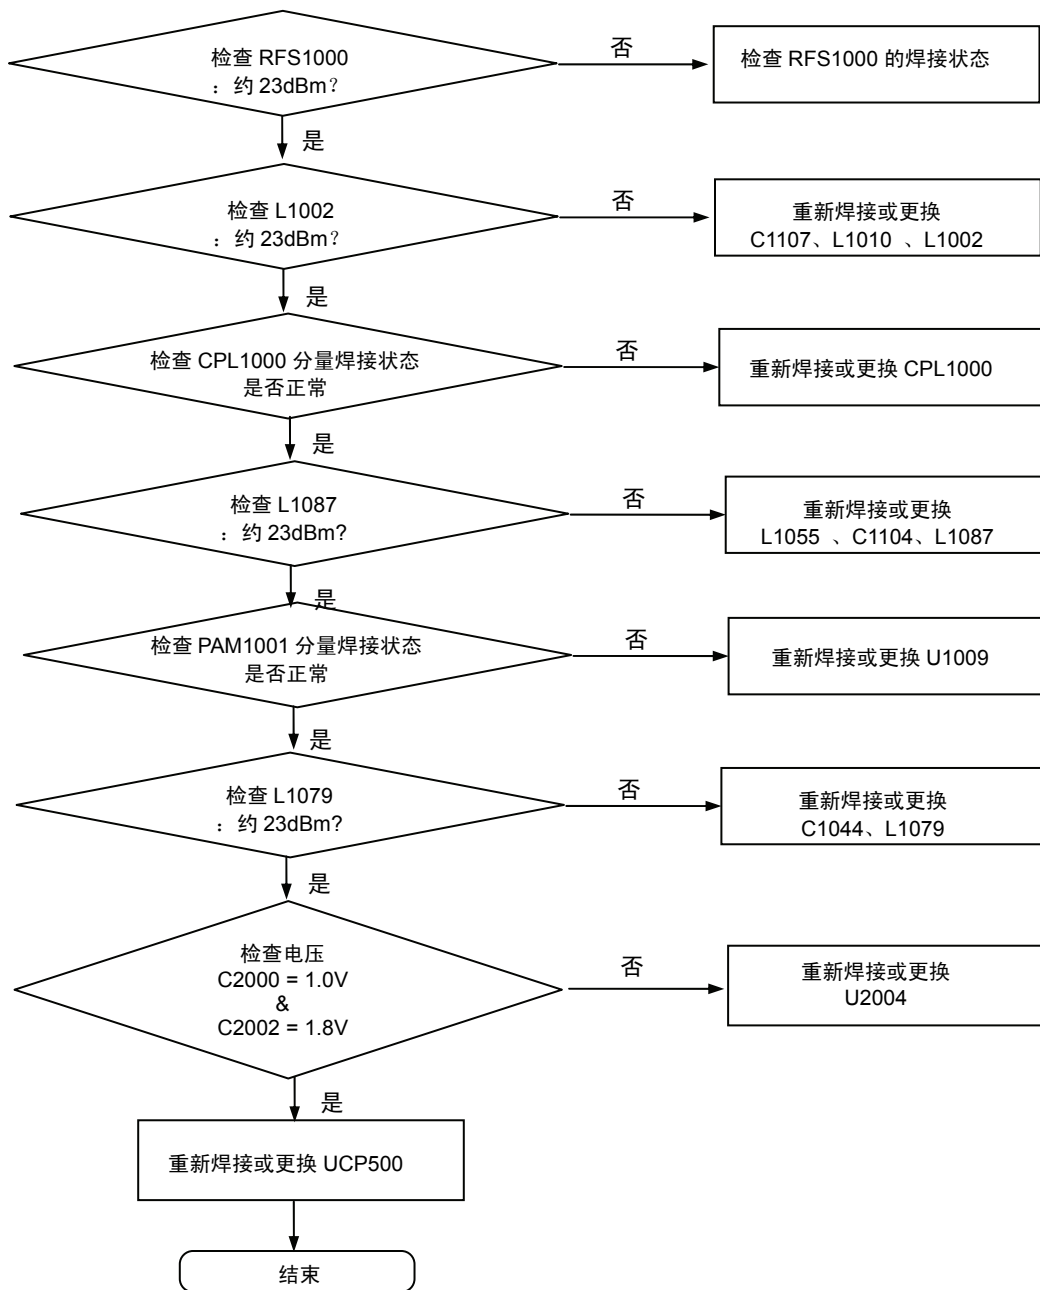


8.3 级维修

8-4-35. LTE B38、B40、B41 Tx

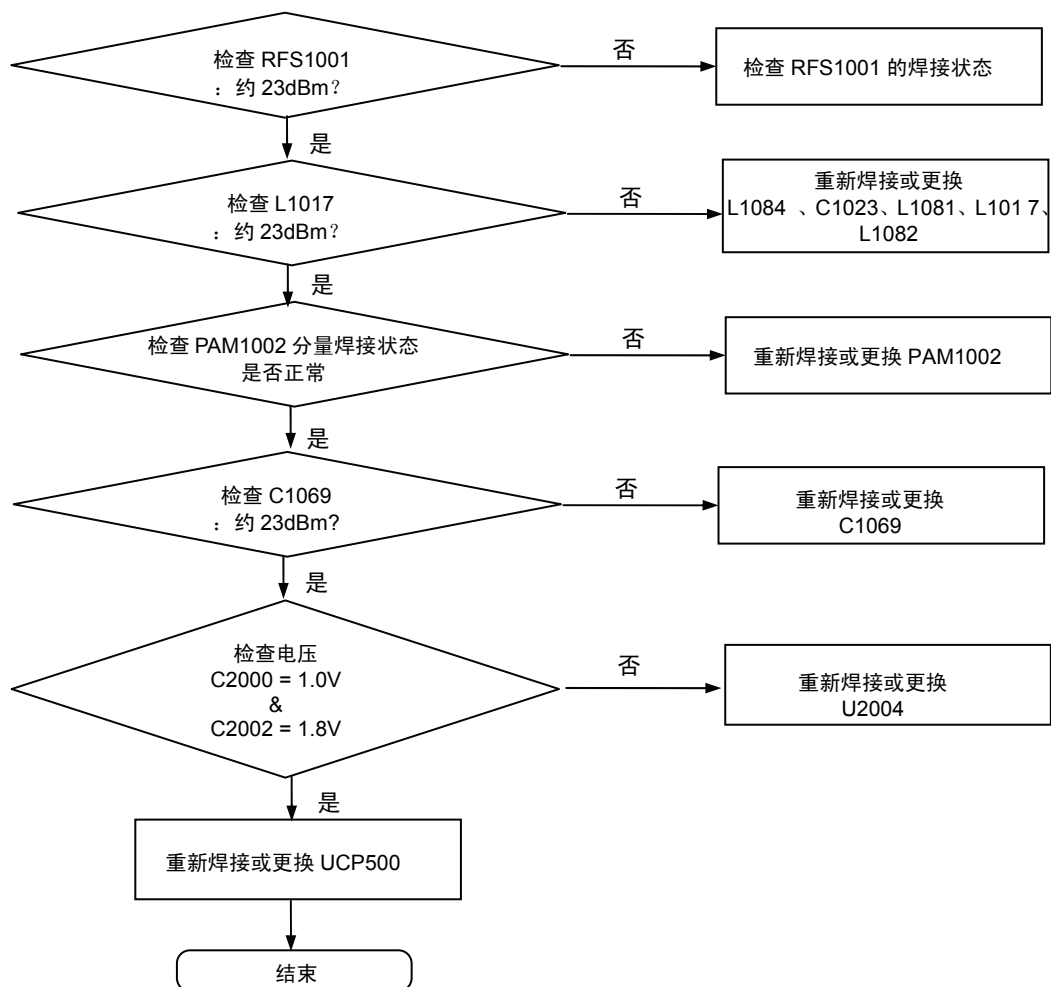


8. 3 级维修

8-4-36. LTE B7 Tx

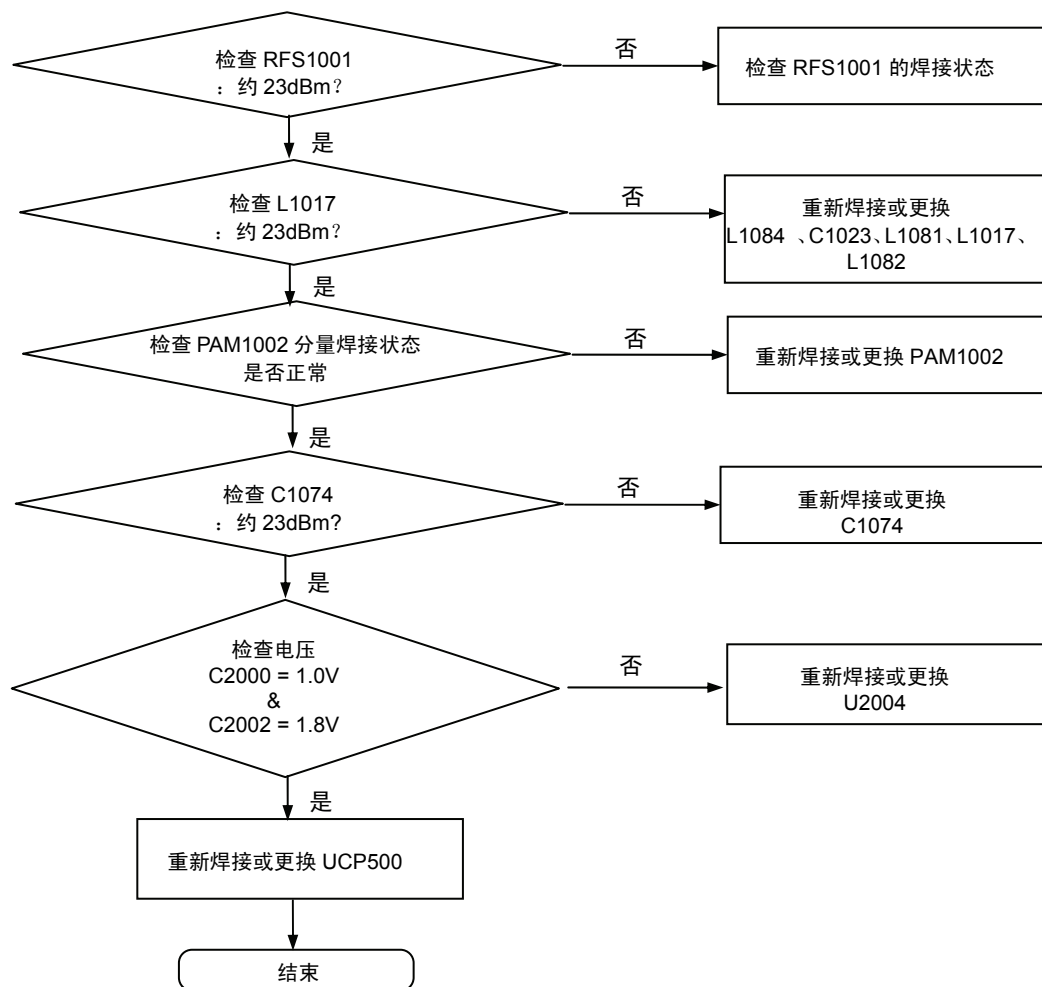


8. 3 级维修

8-4-37. LTE B20 Tx

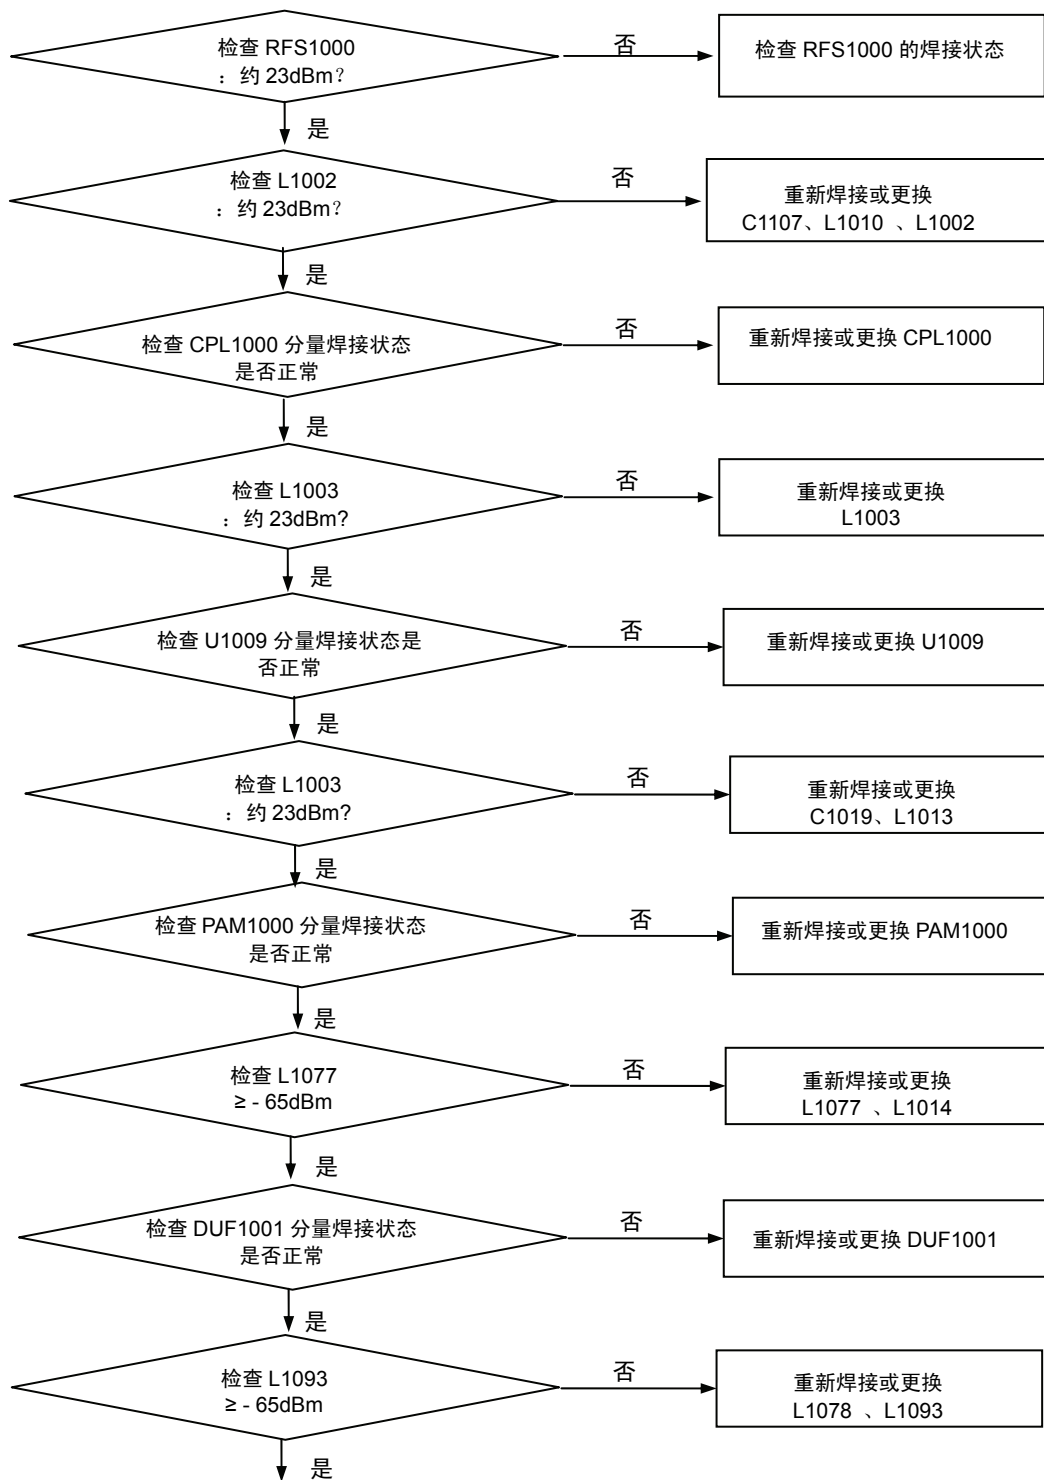

8.3 级维修

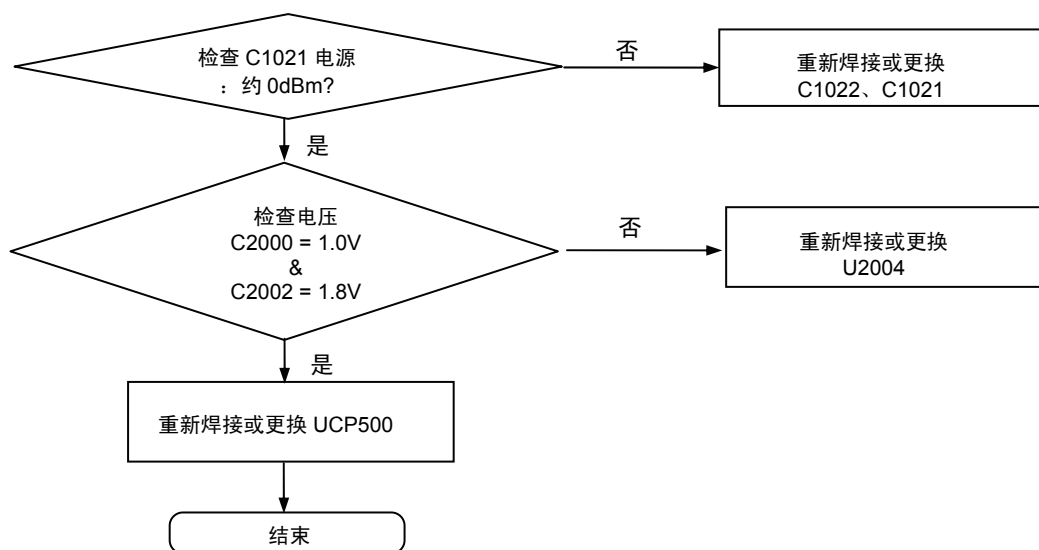

8. 3 级维修

8-5. 维修示意图

