



8. Level 3 Repair


8-1. Components Layout

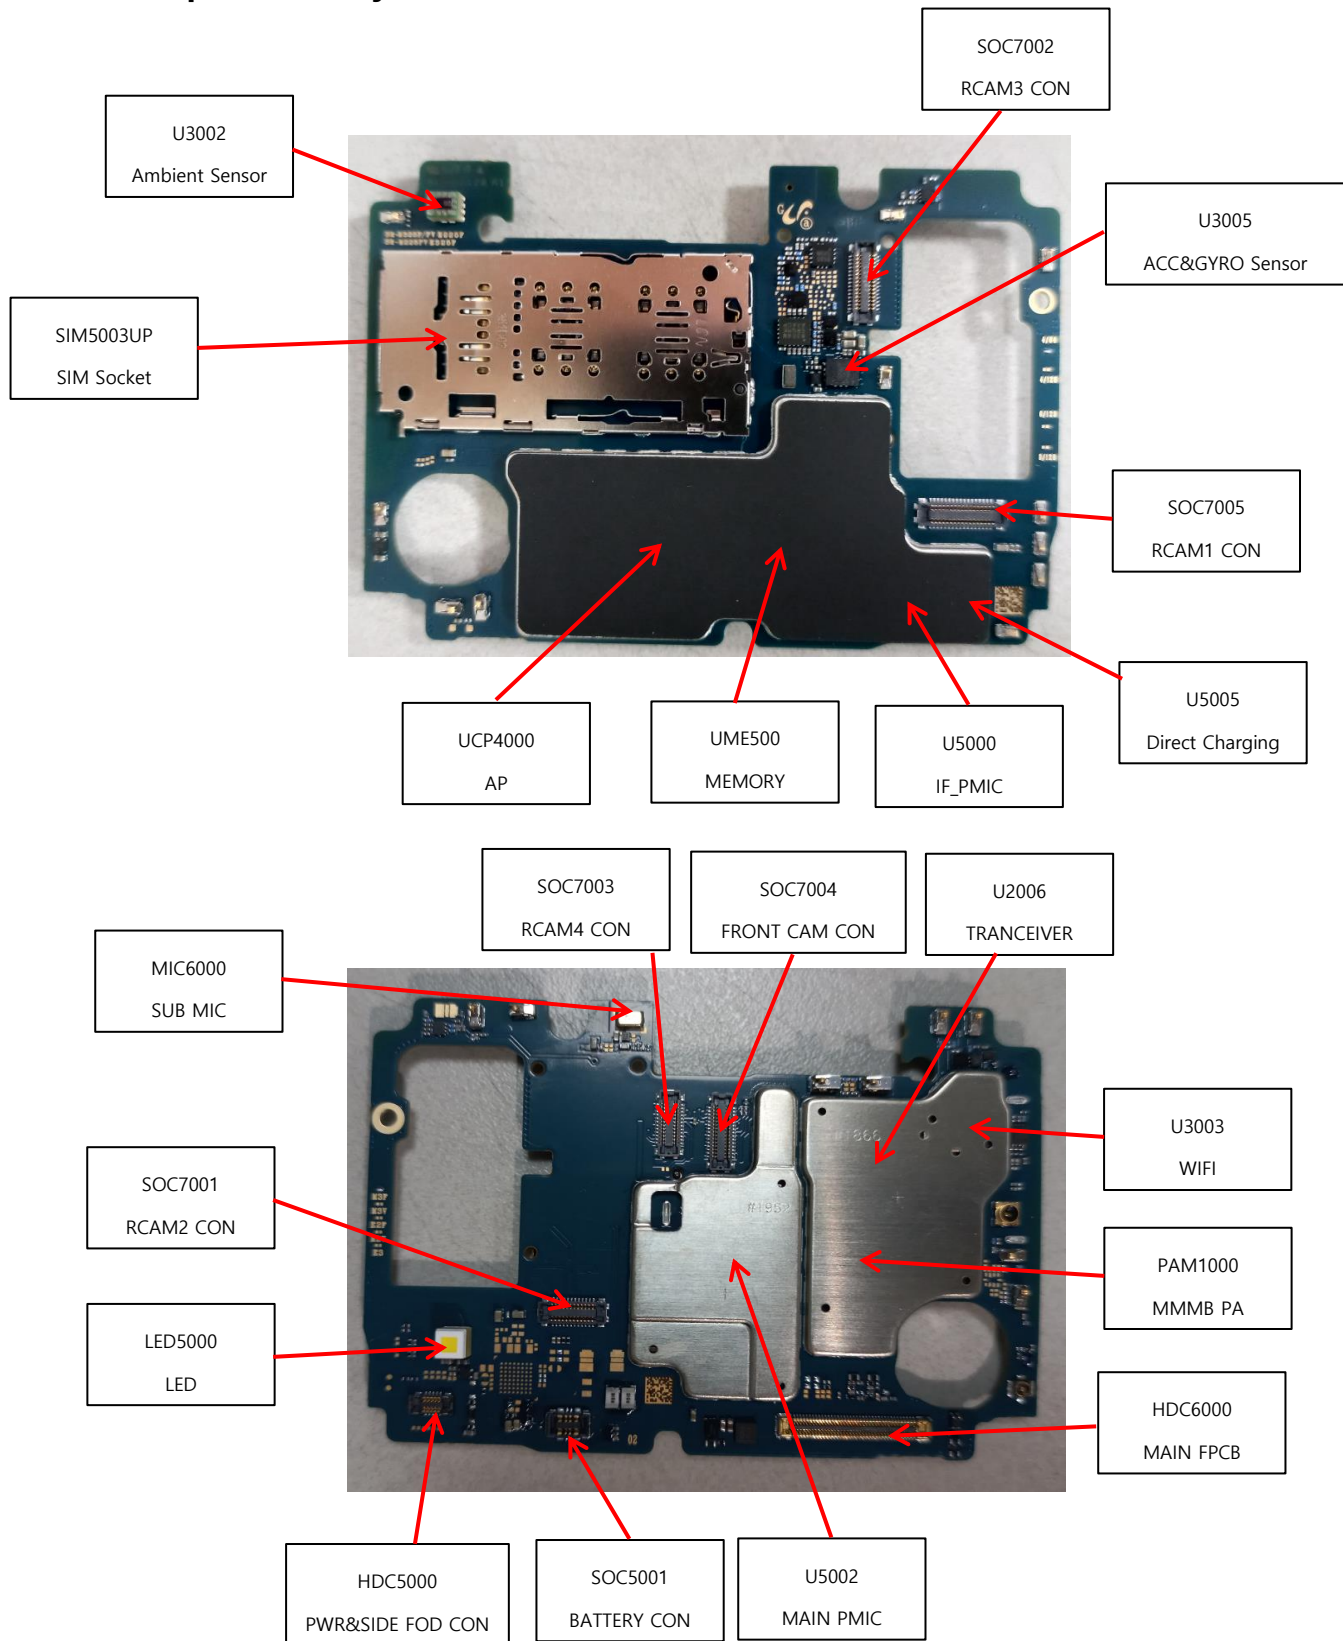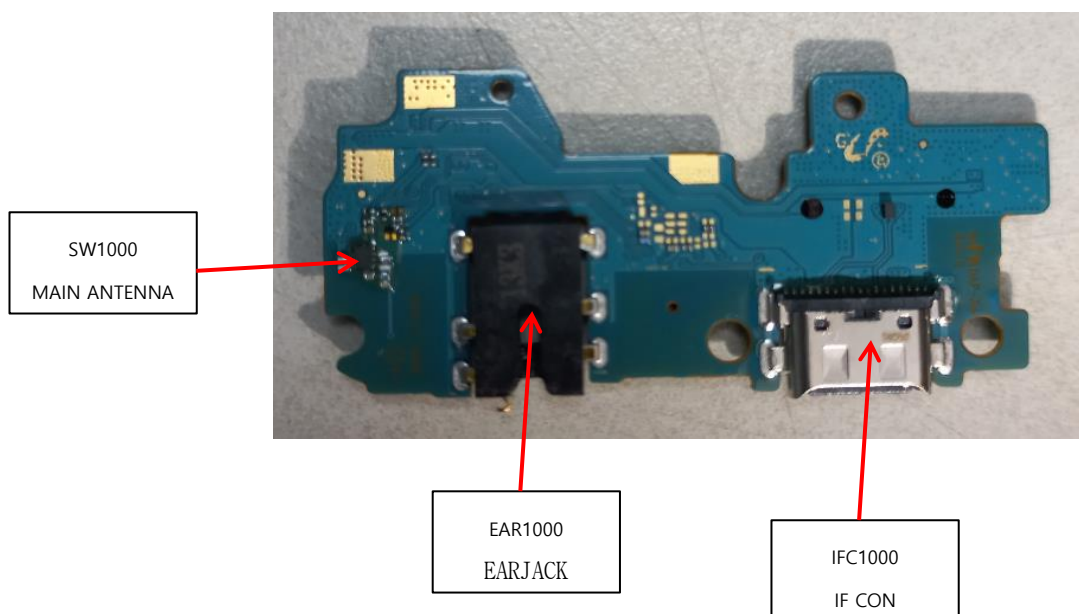

8. Level 3 Repair

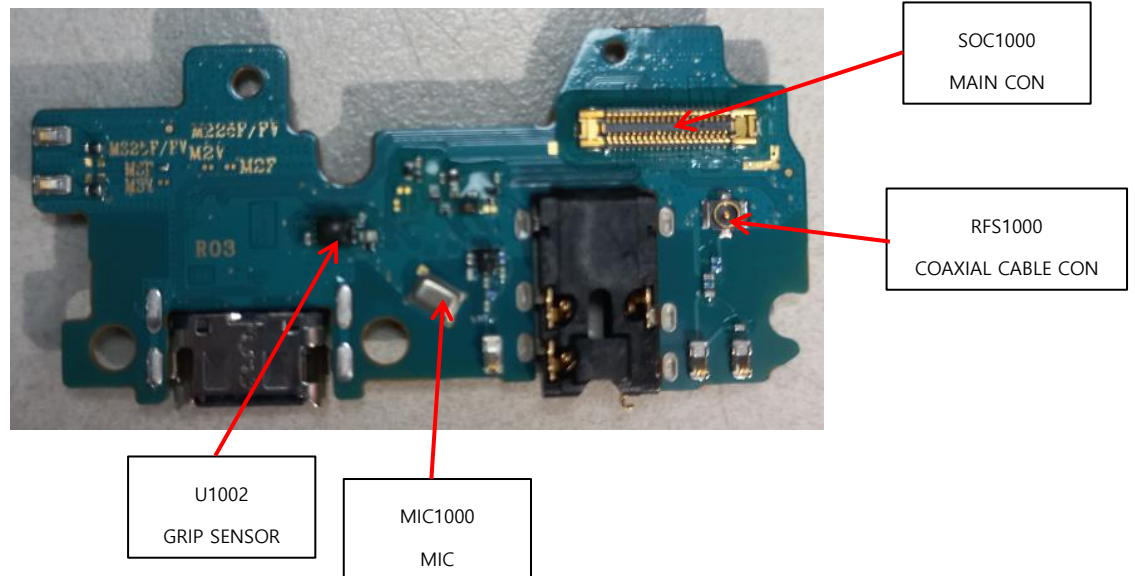


SM-M325F

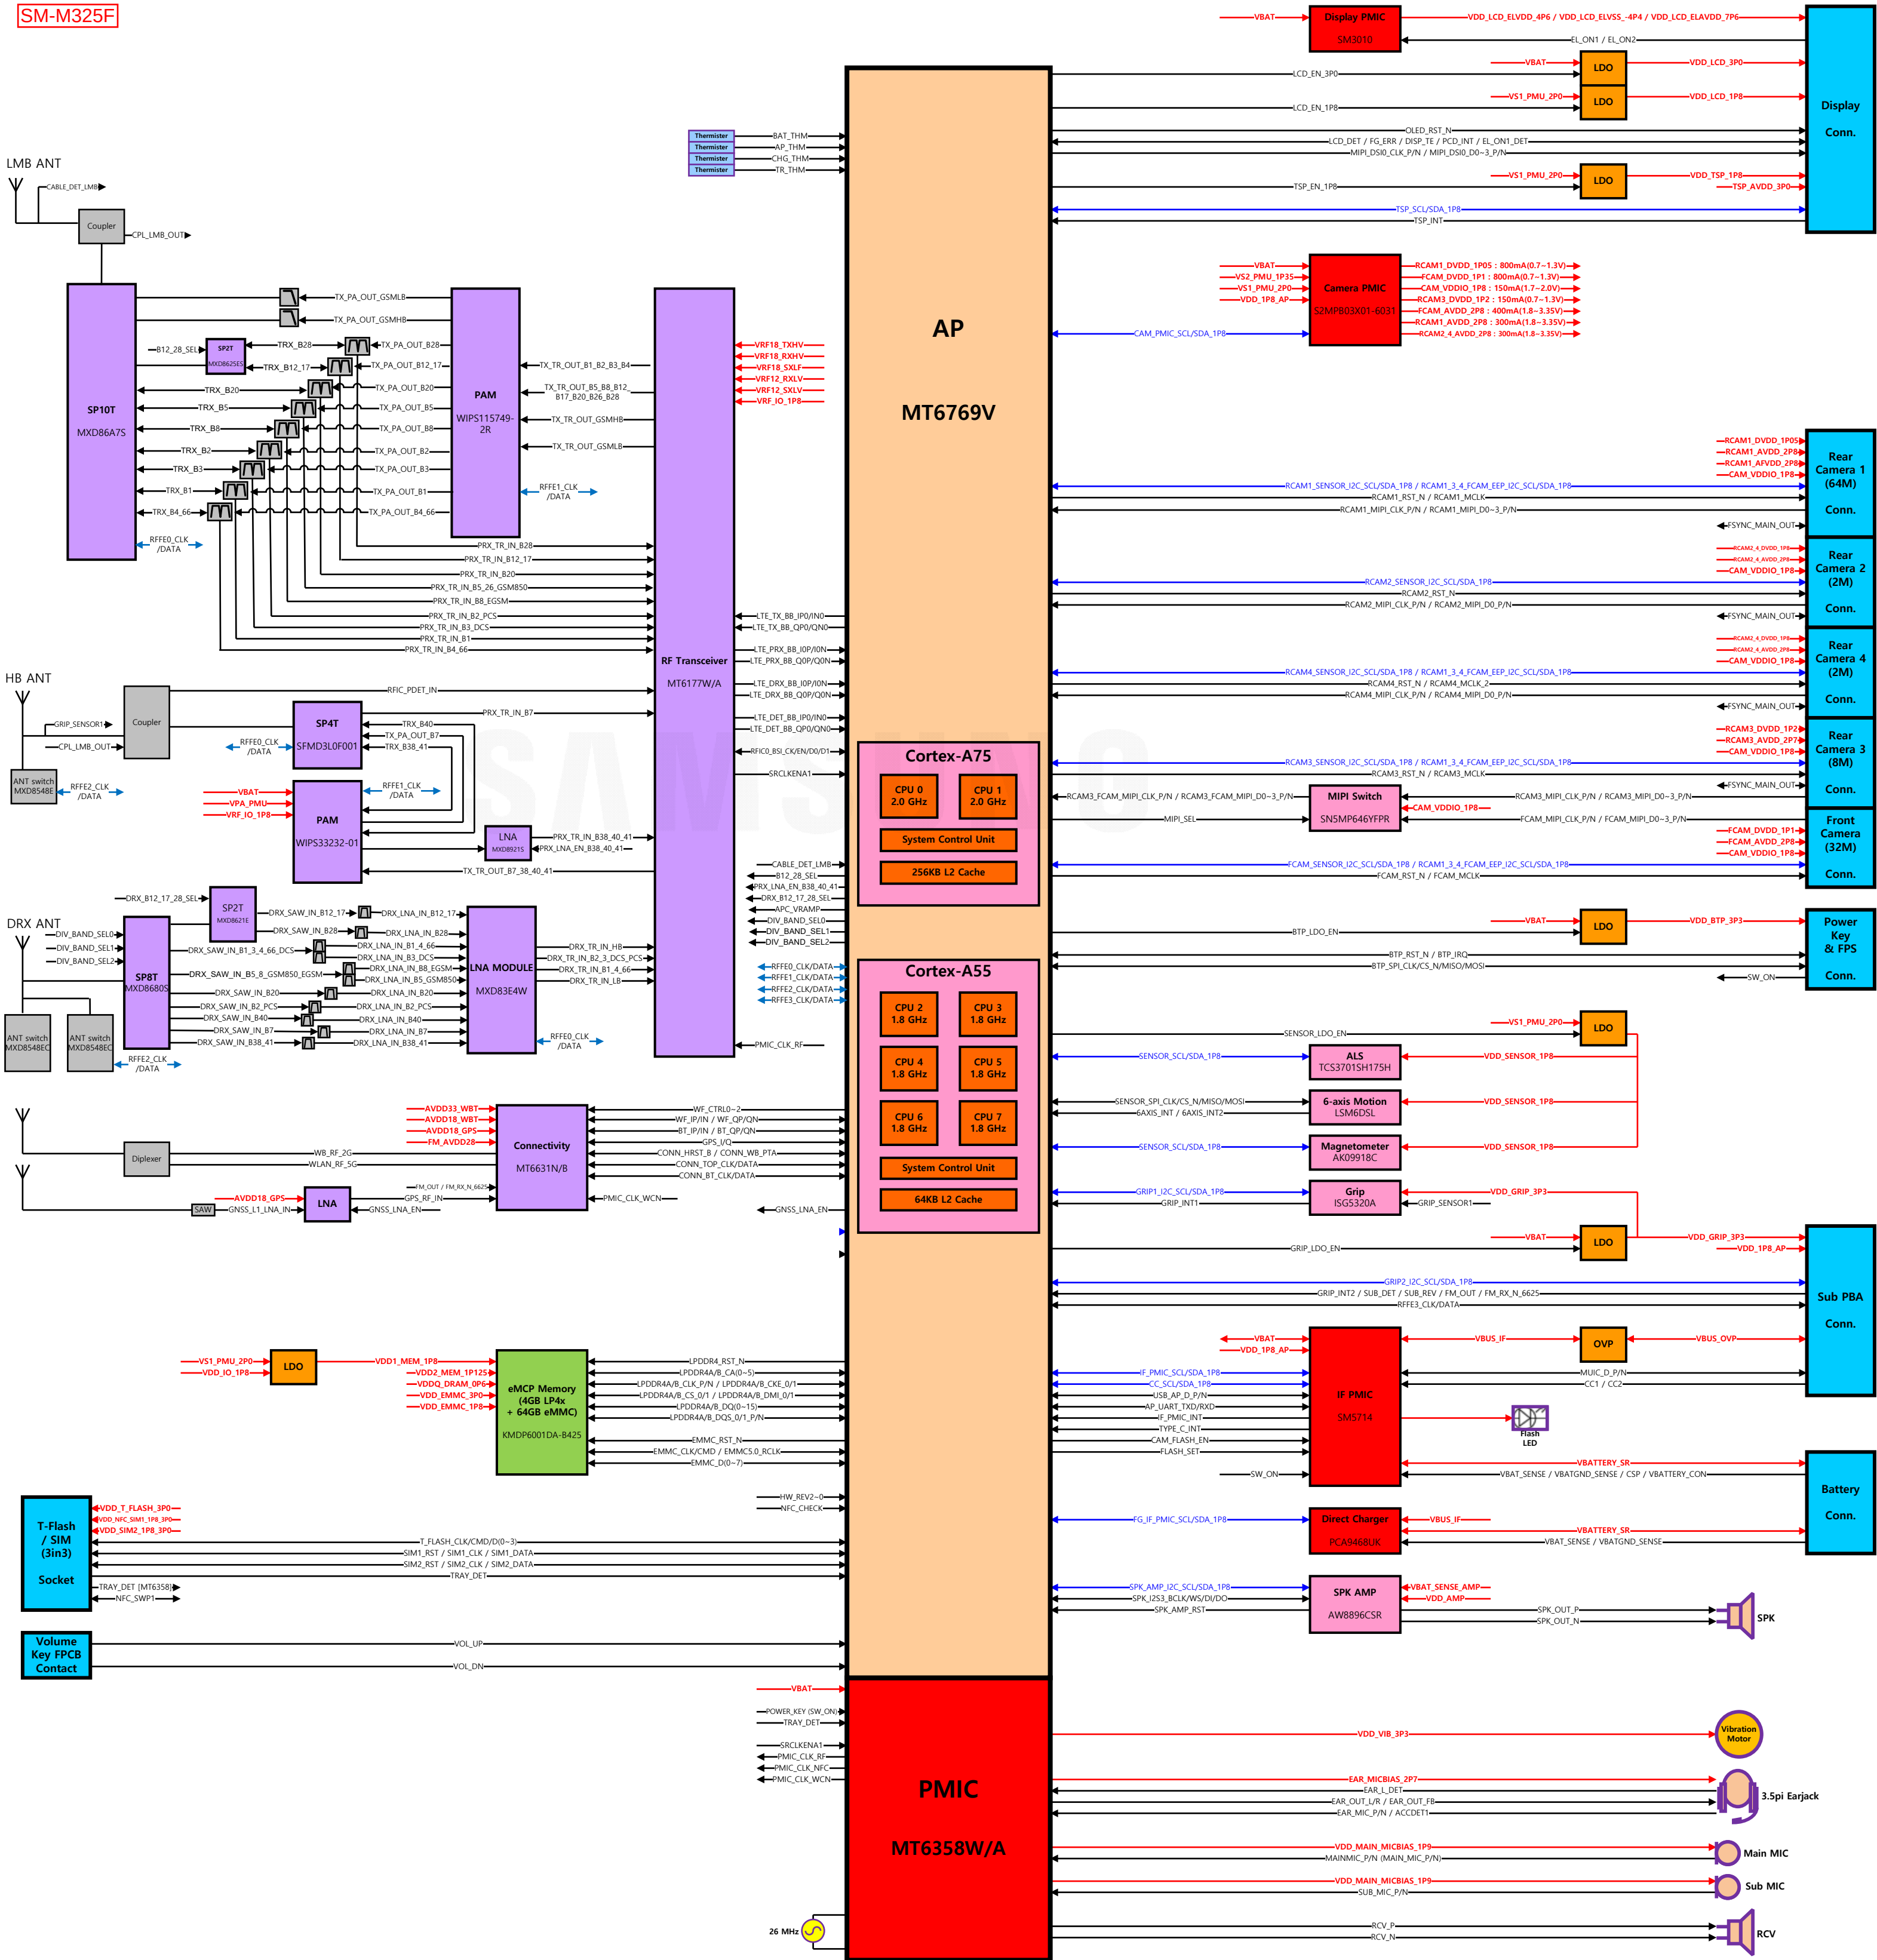



8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

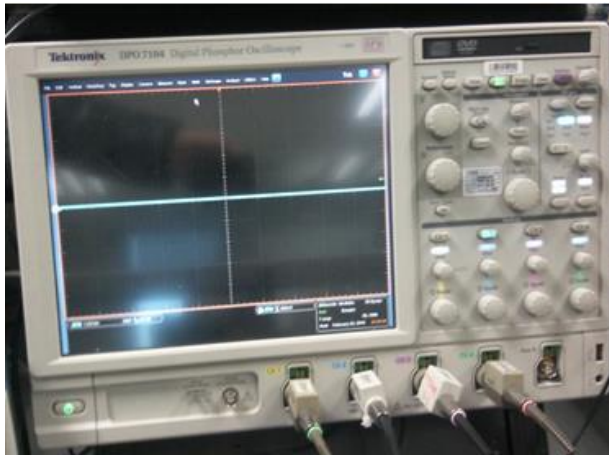

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

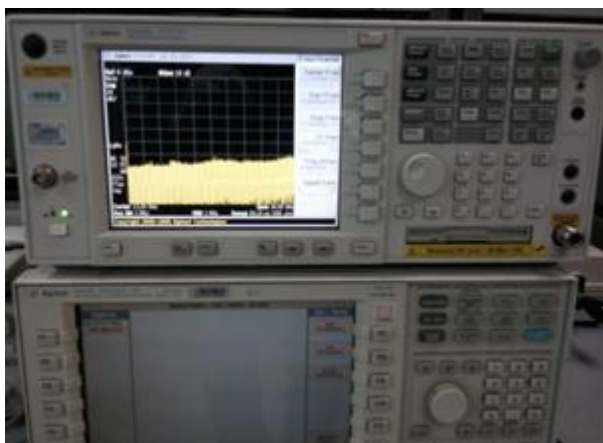


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

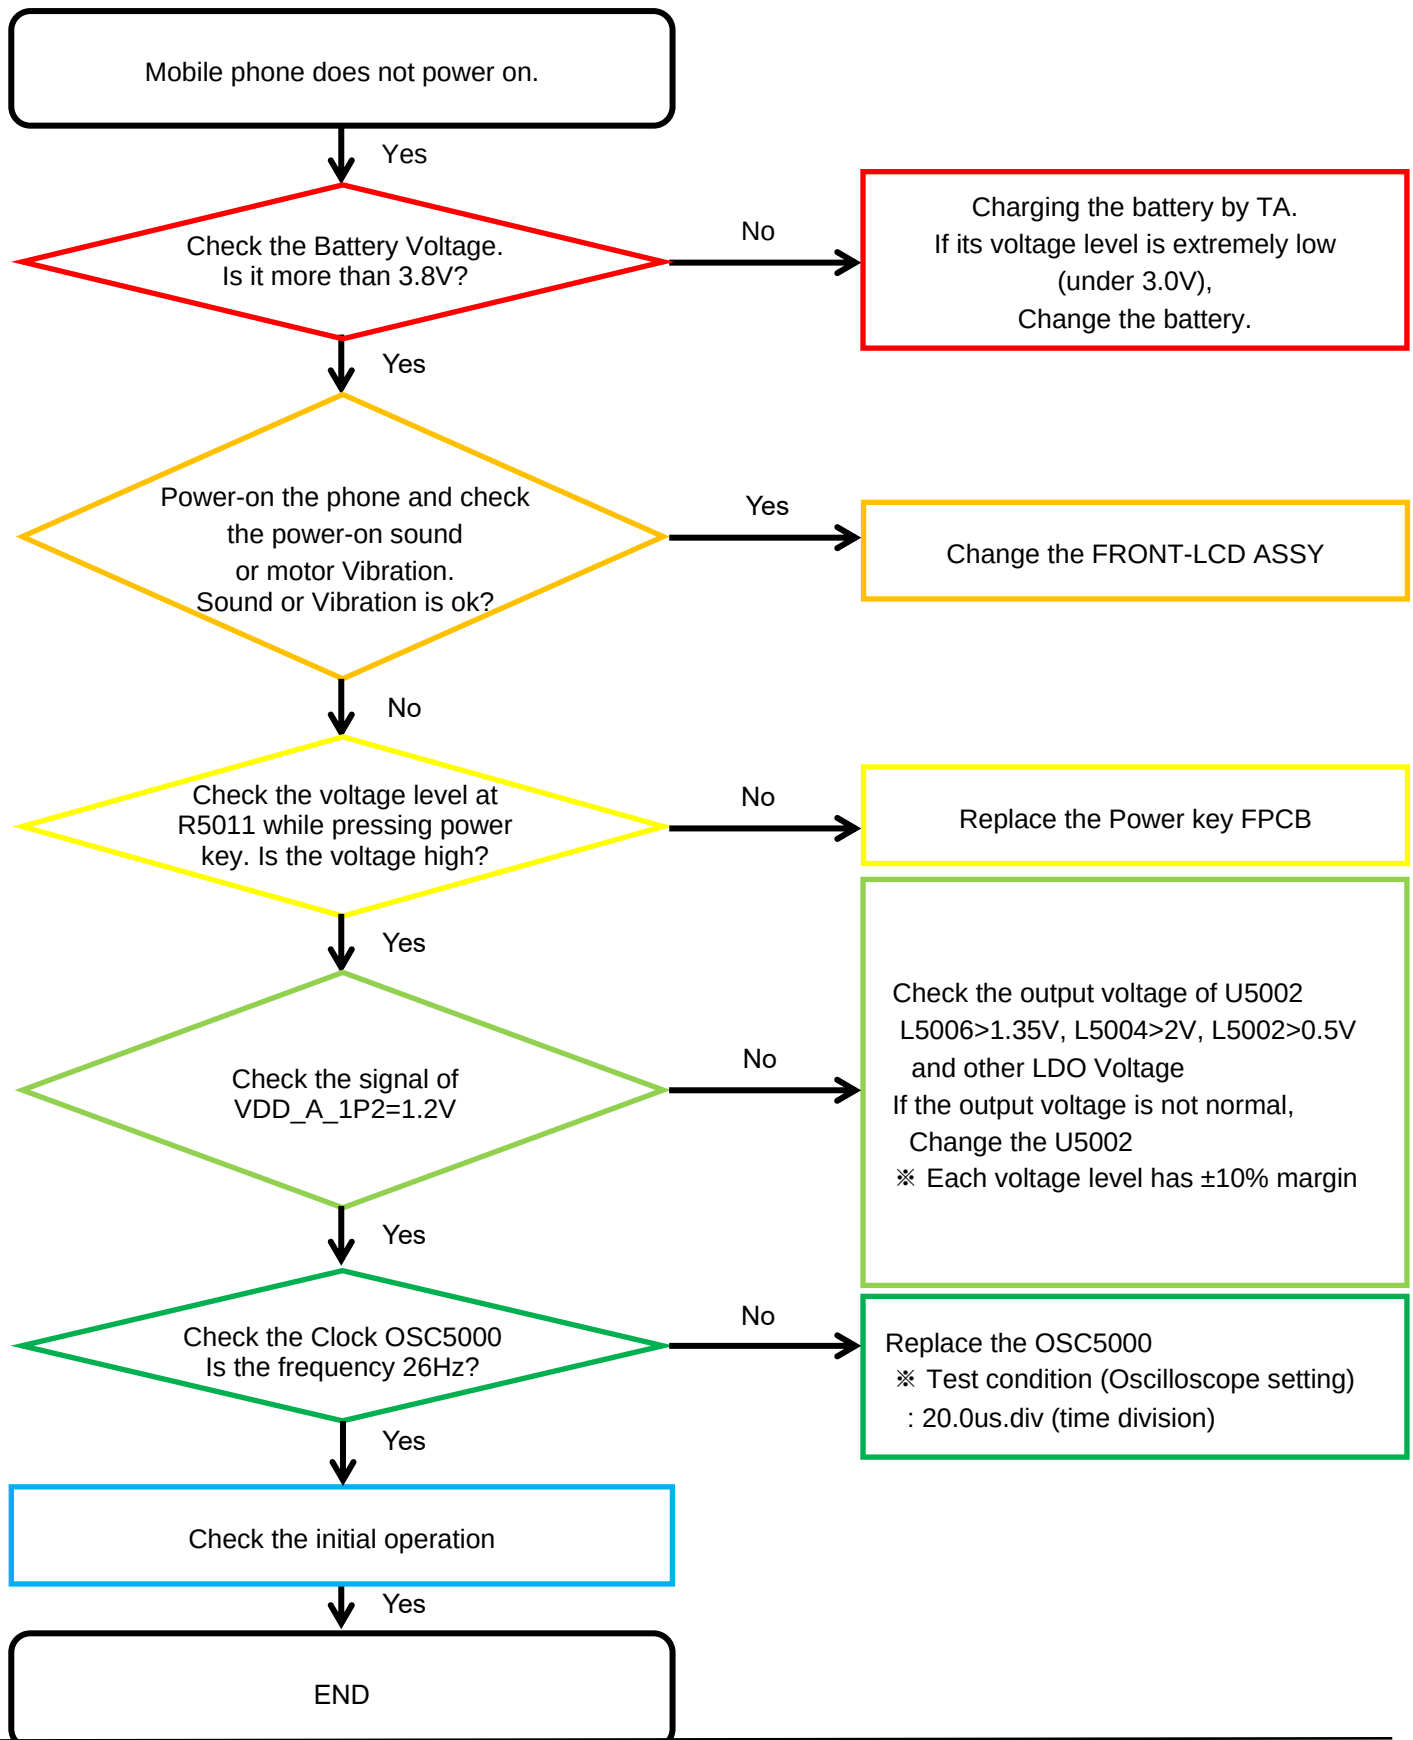


8. Level 3 Repair

8-4-2. Initial

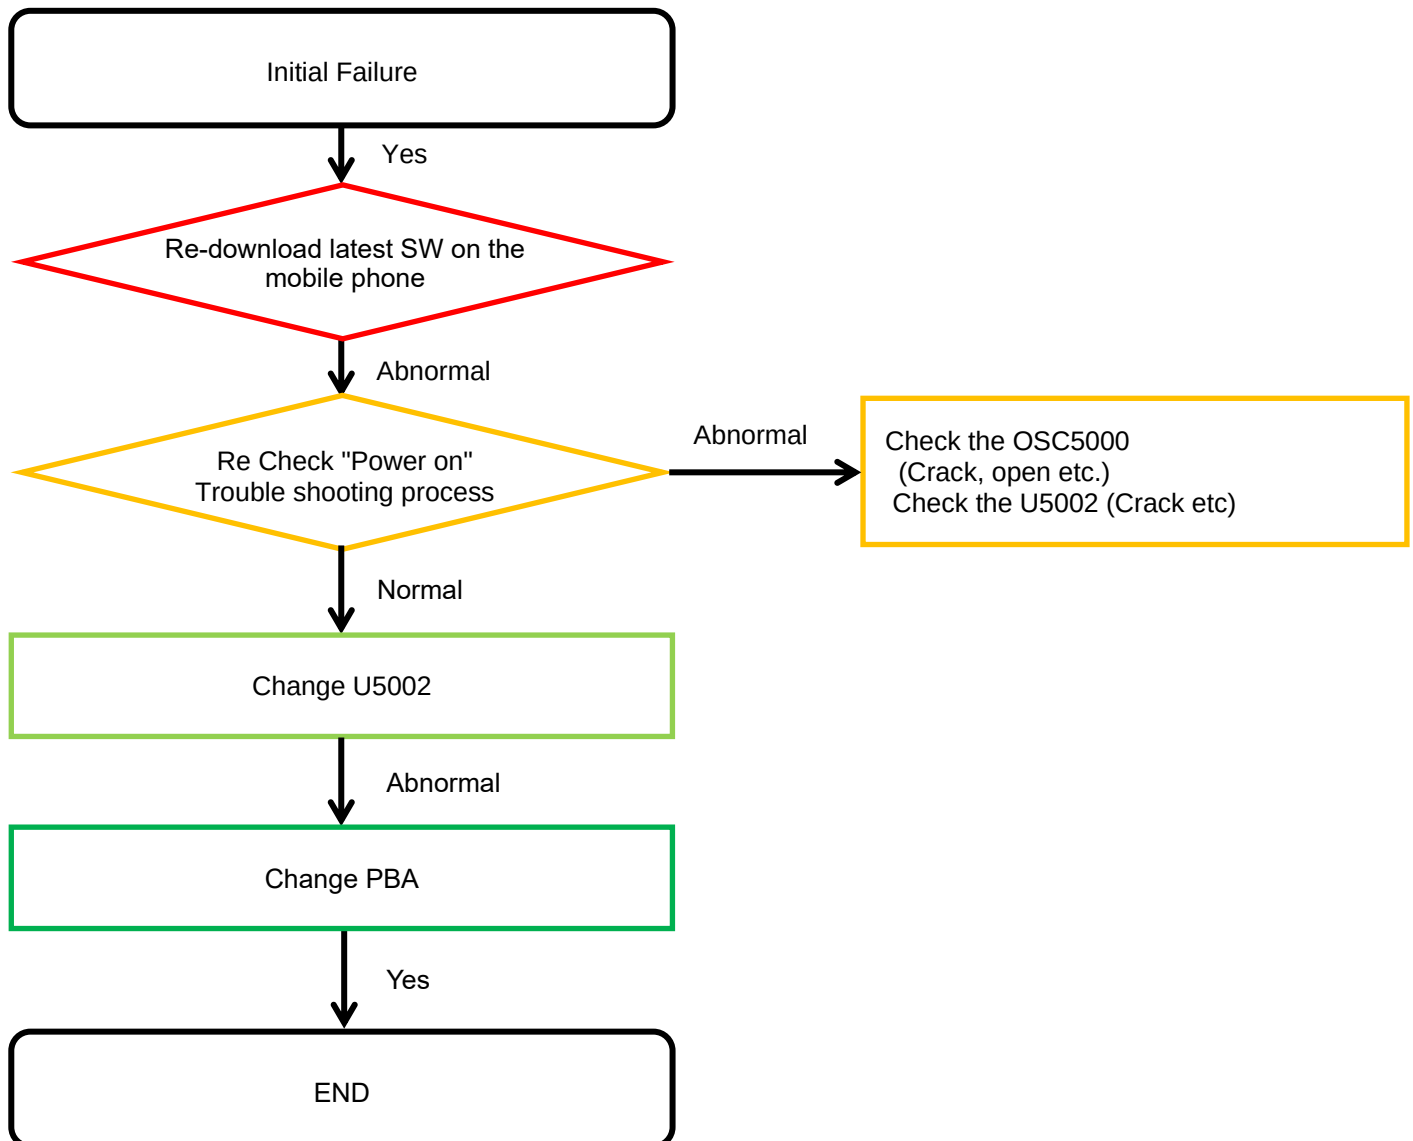


8. Level 3 Repair

8-4-3. No Service

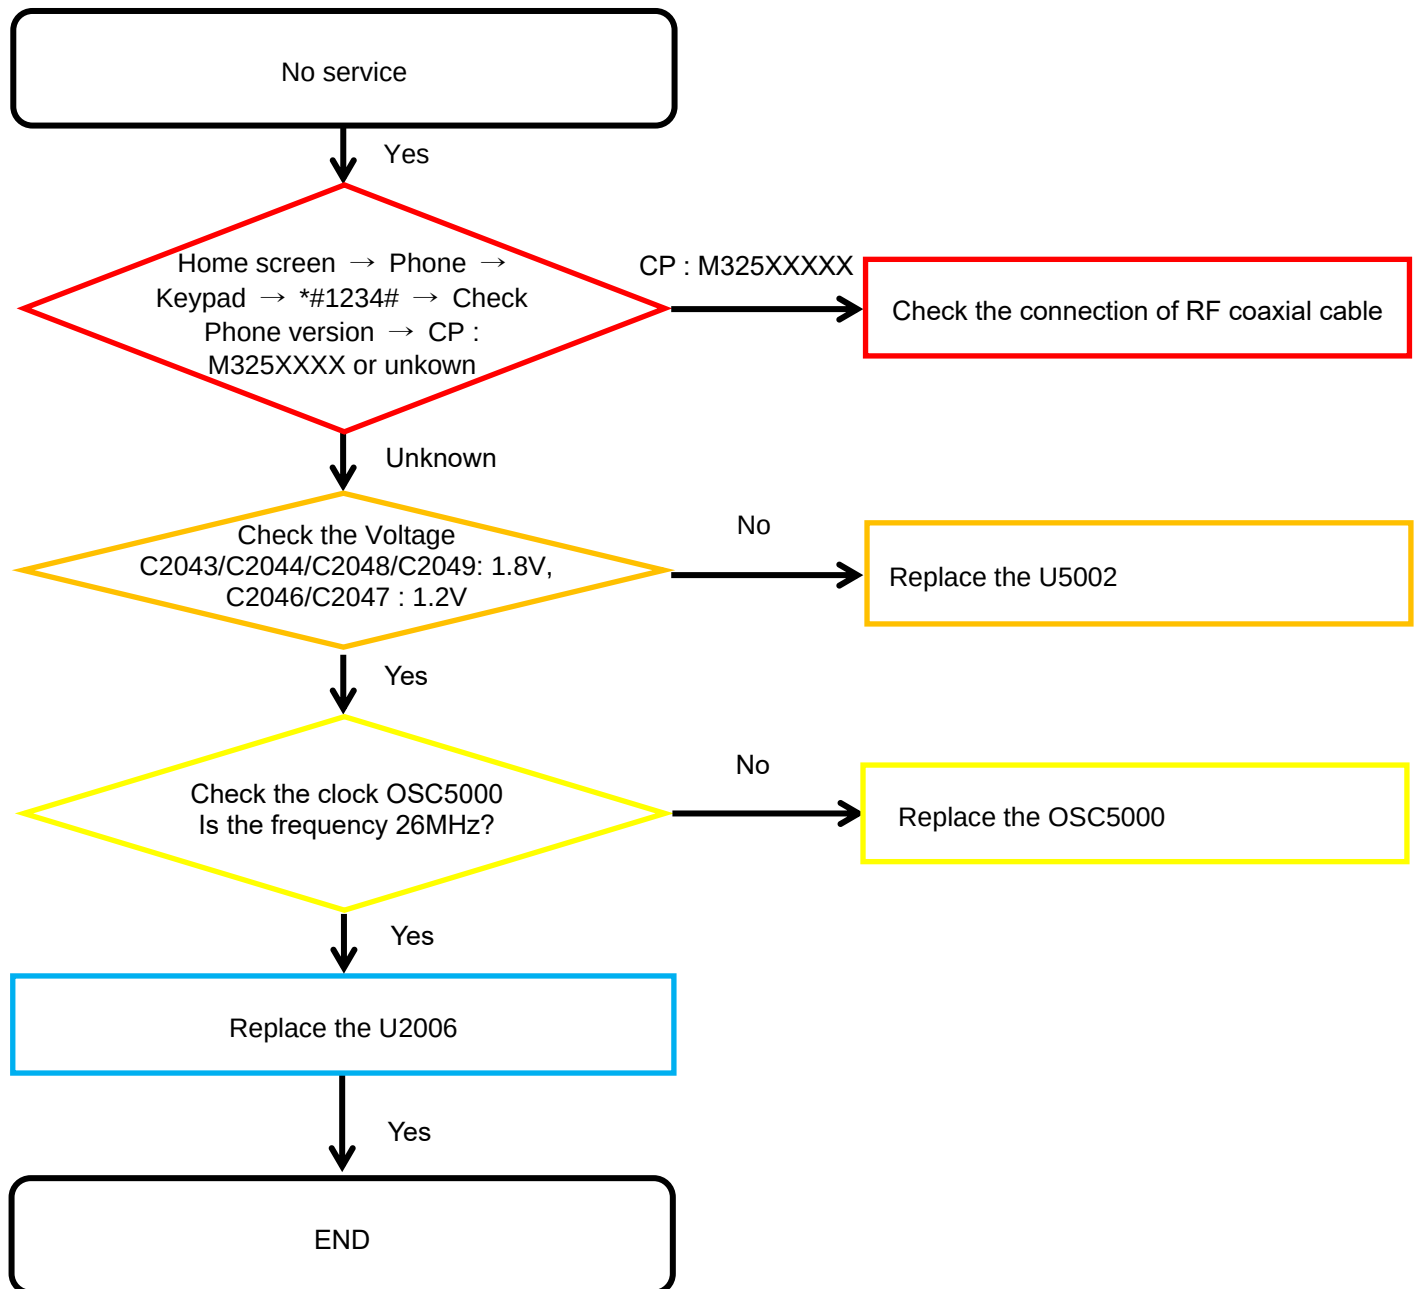


8. Level 3 Repair

8-4-4. SIM Part

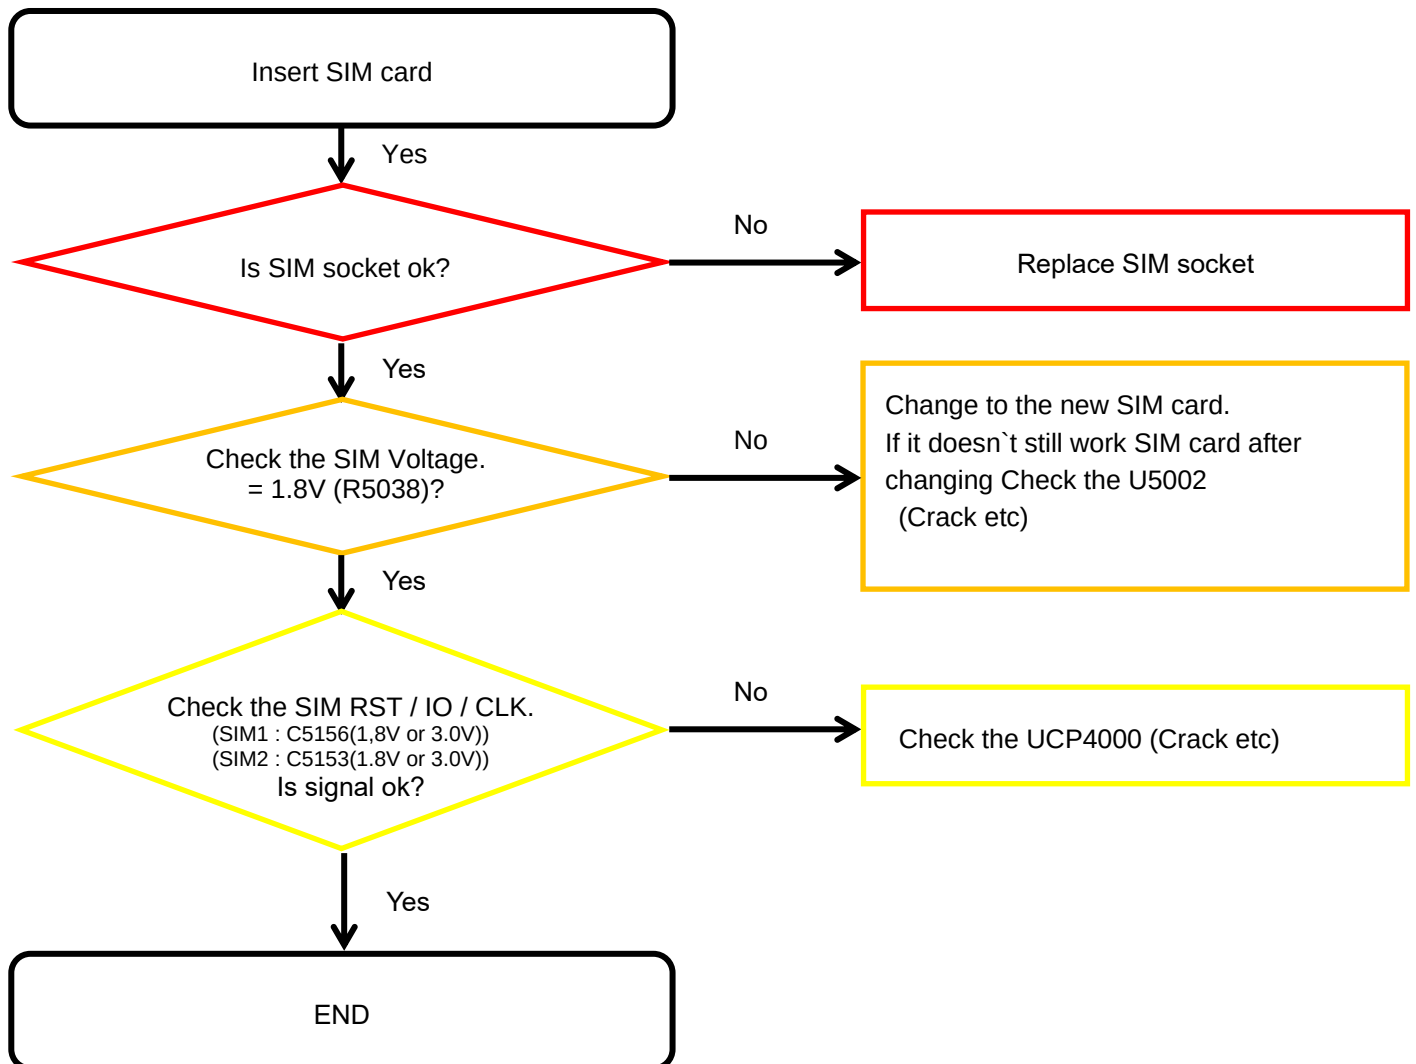


8. Level 3 Repair

8-4-5. T-Flash Part

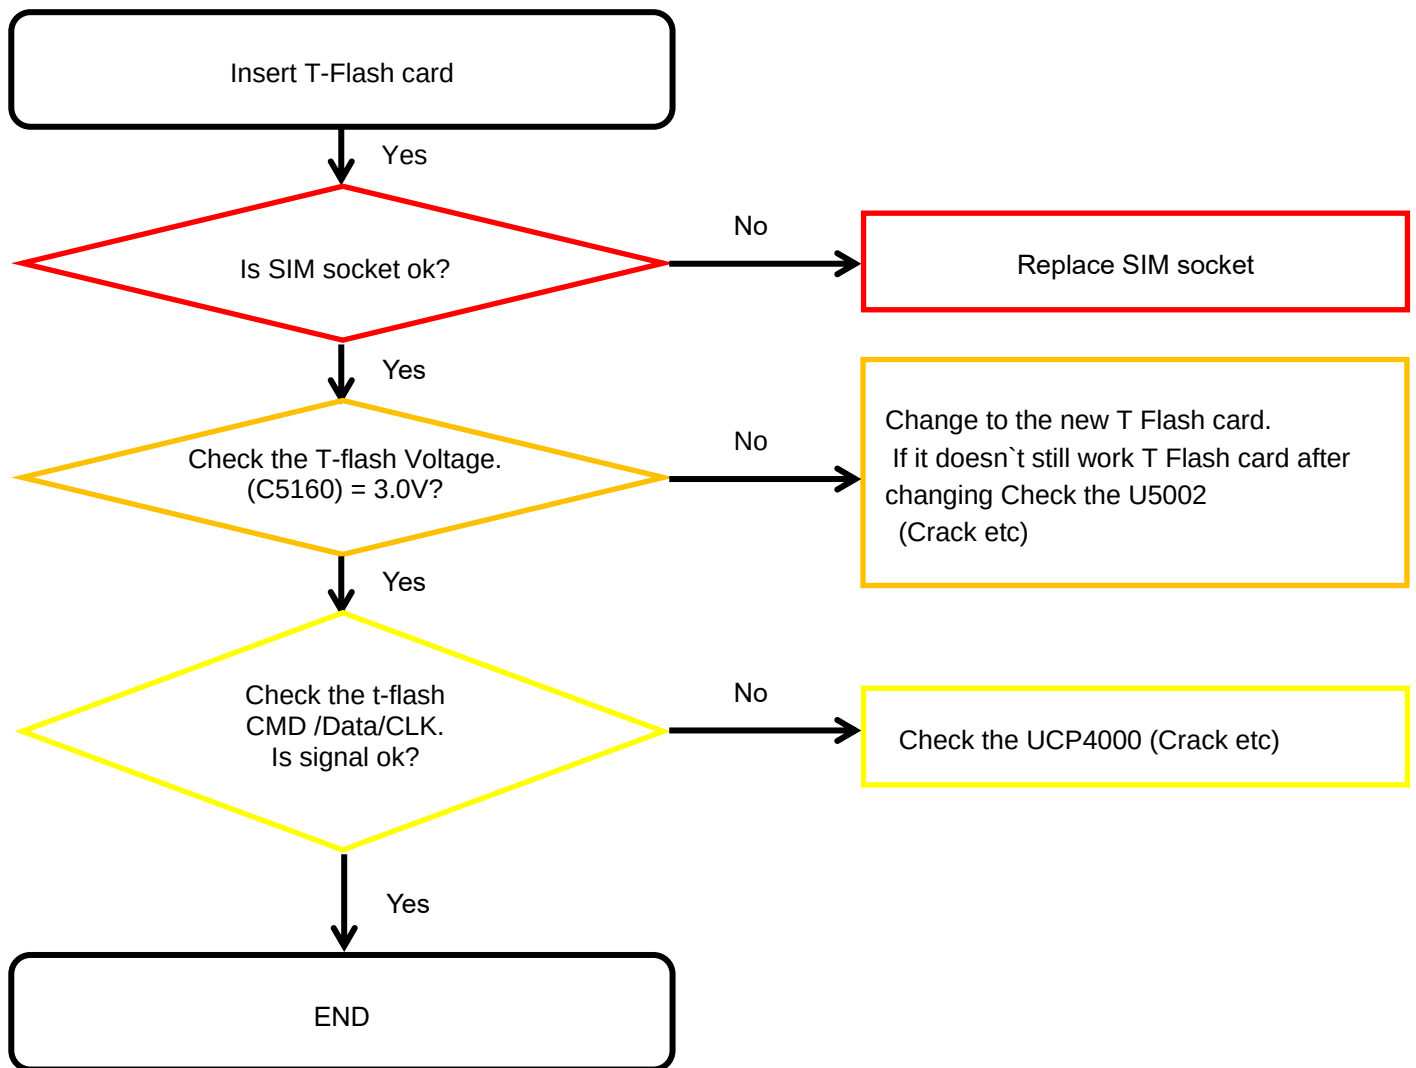


8. Level 3 Repair

8-4-6. Cable Charging Part (Normal/Fast)

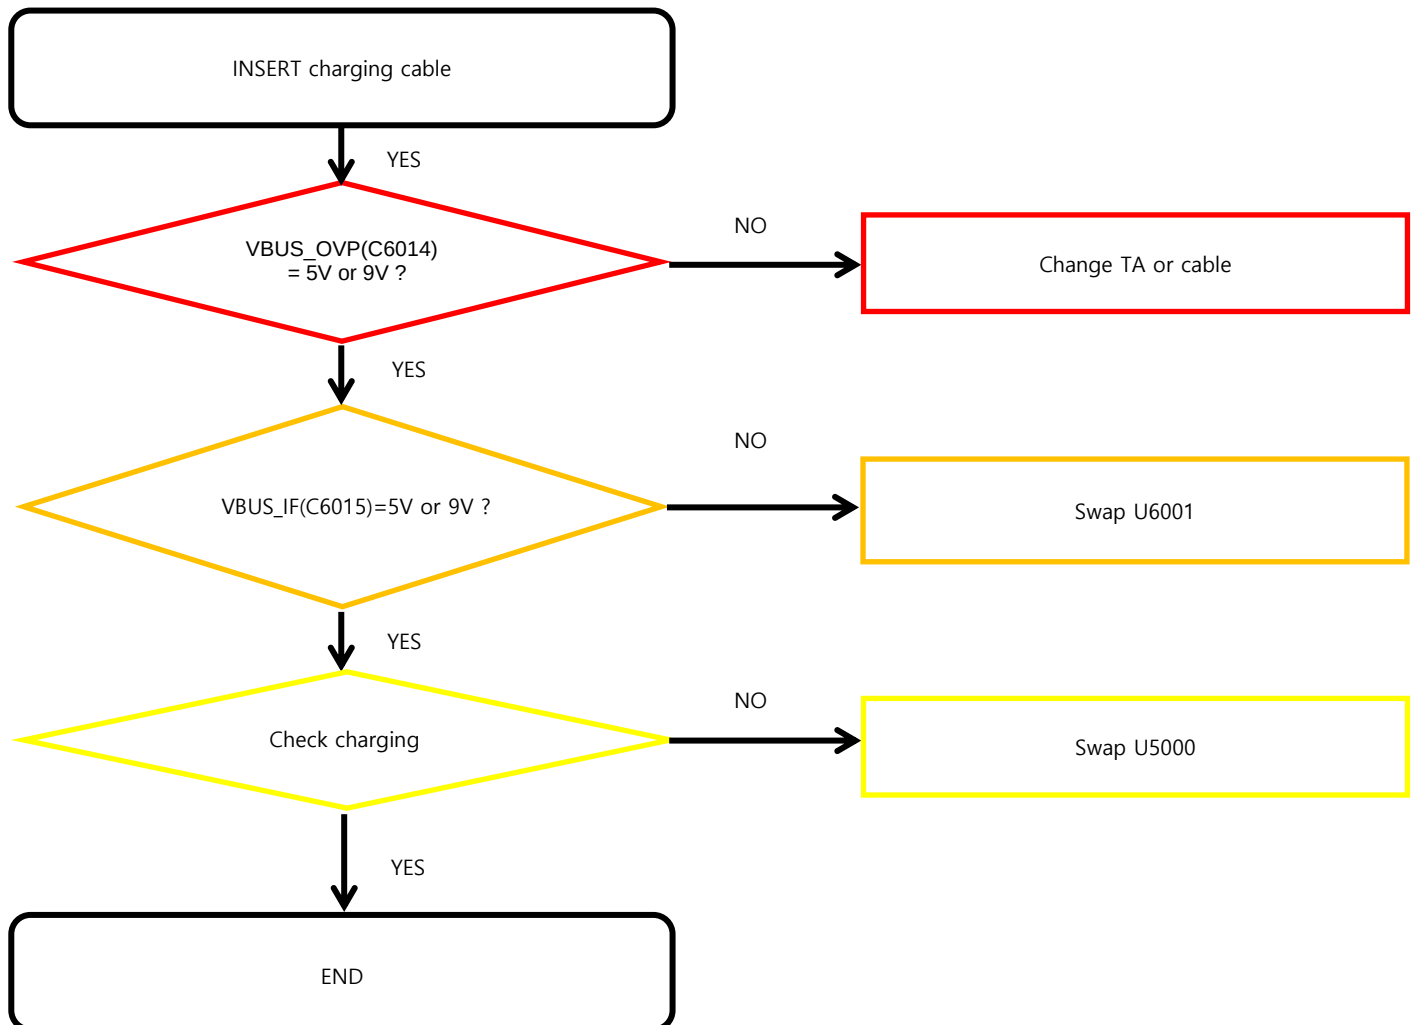


8. Level 3 Repair

8-4-7. OTG

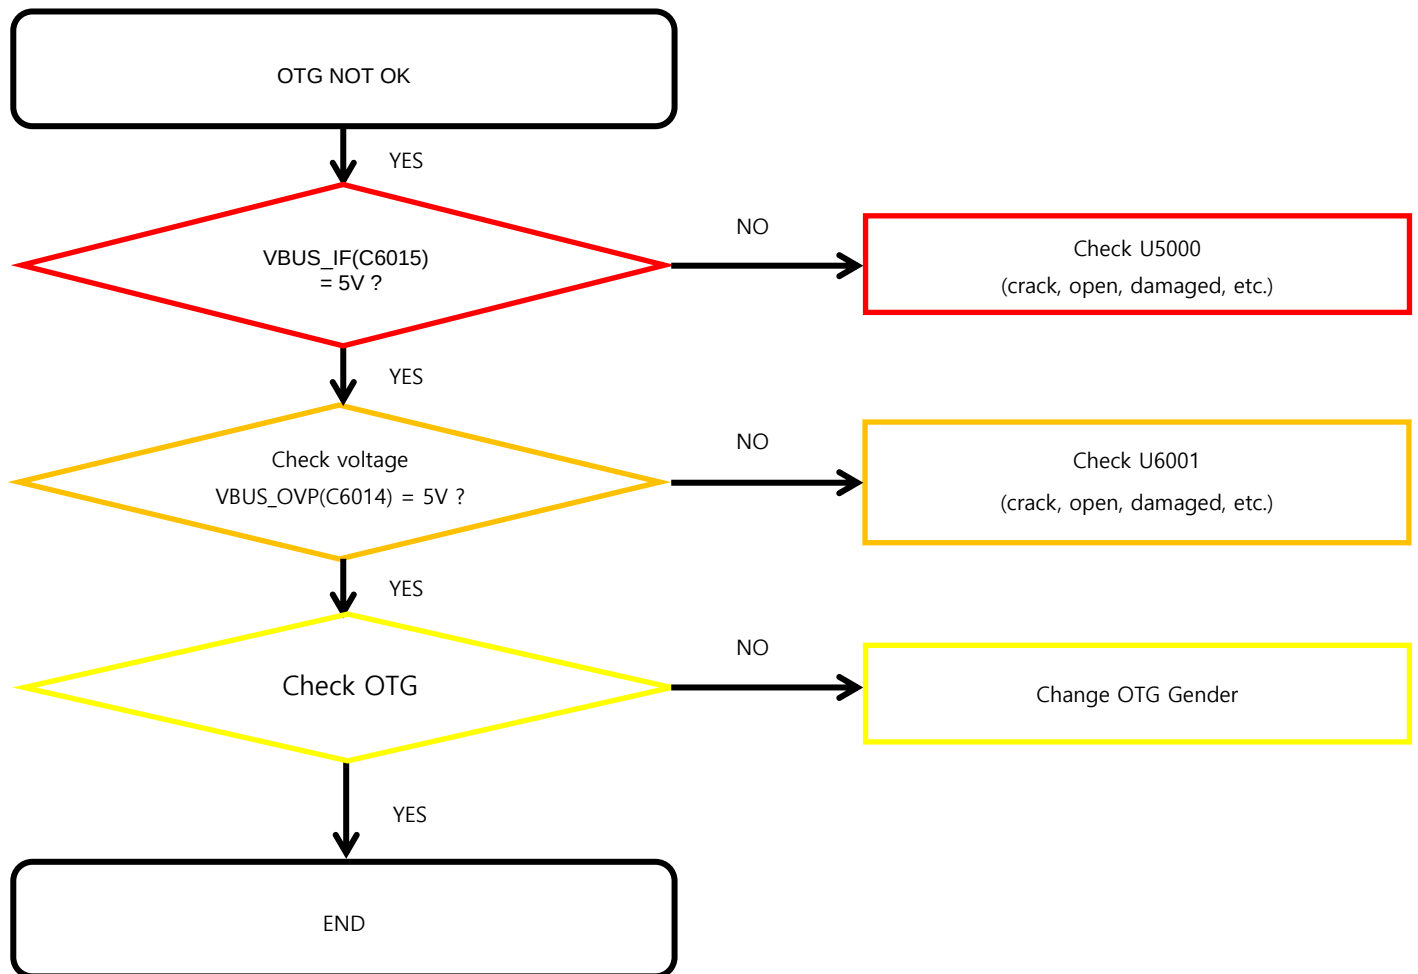


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

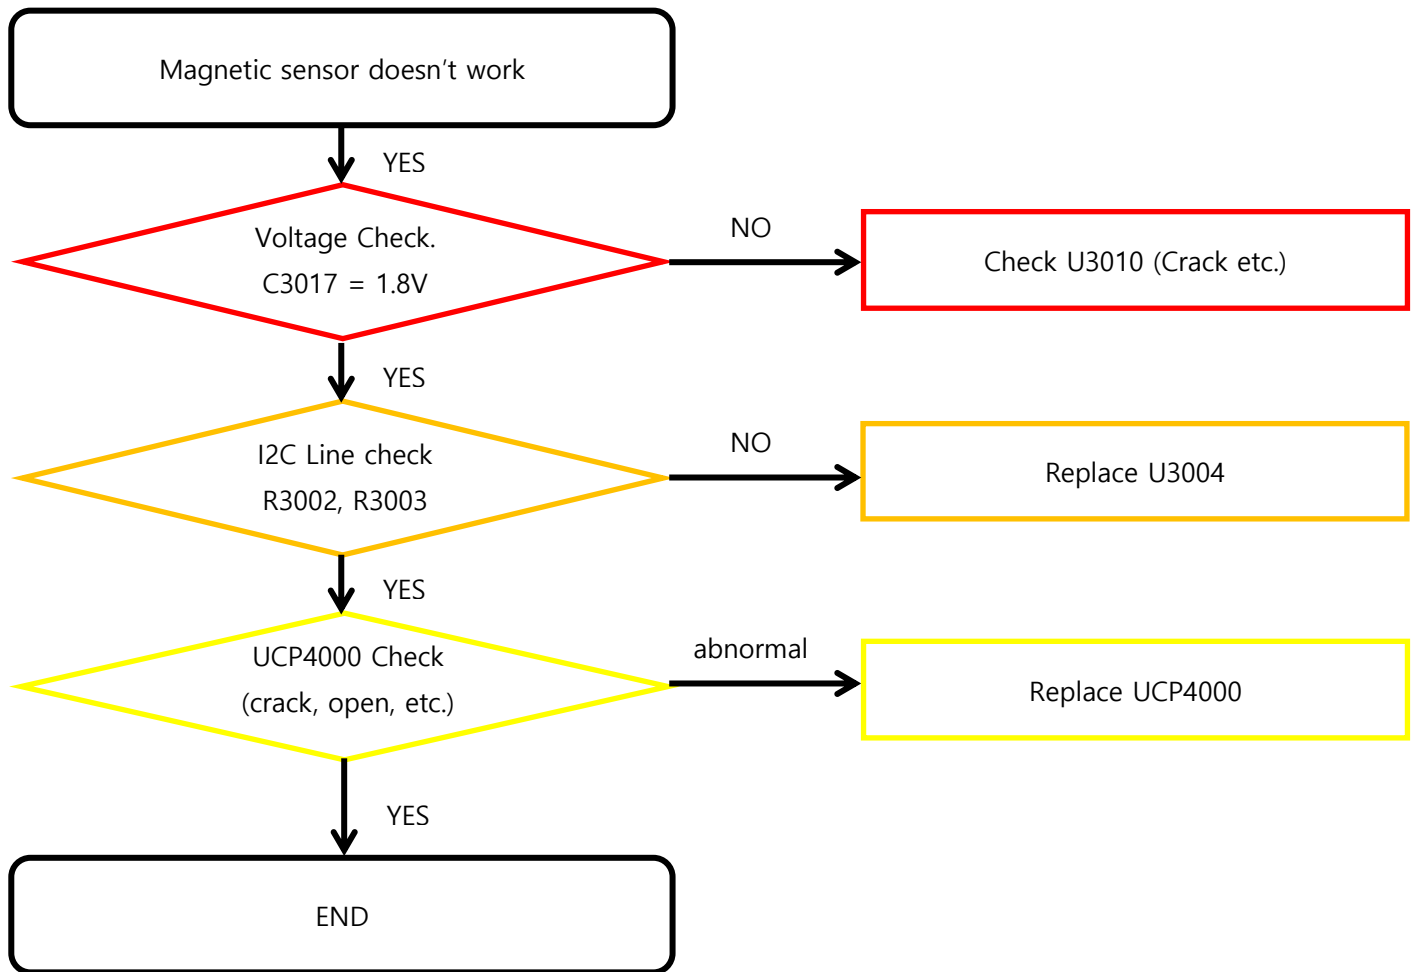


8. Level 3 Repair

8-4-8-2. Accel Sensor(6 AXIS)

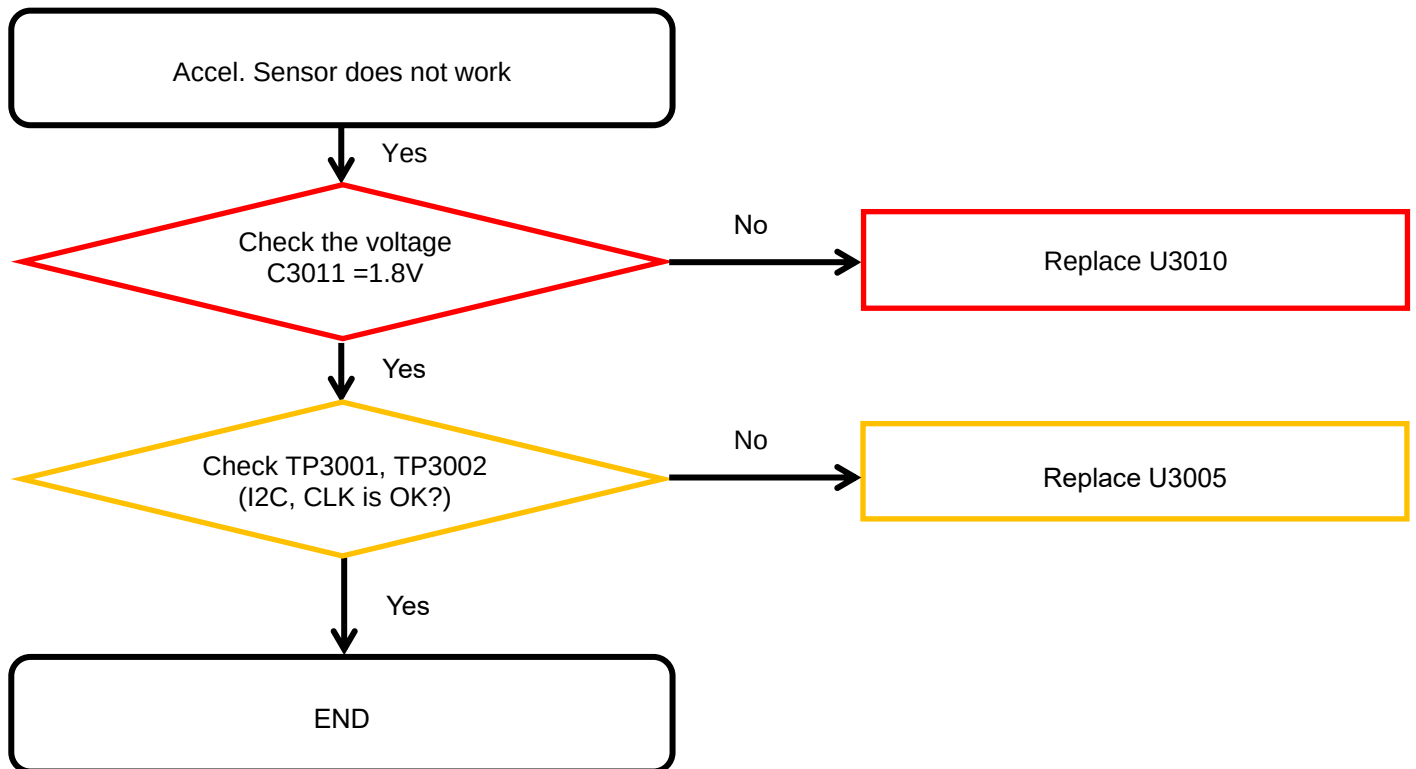


8. Level 3 Repair

8-4-8-3. RGB Light sensor

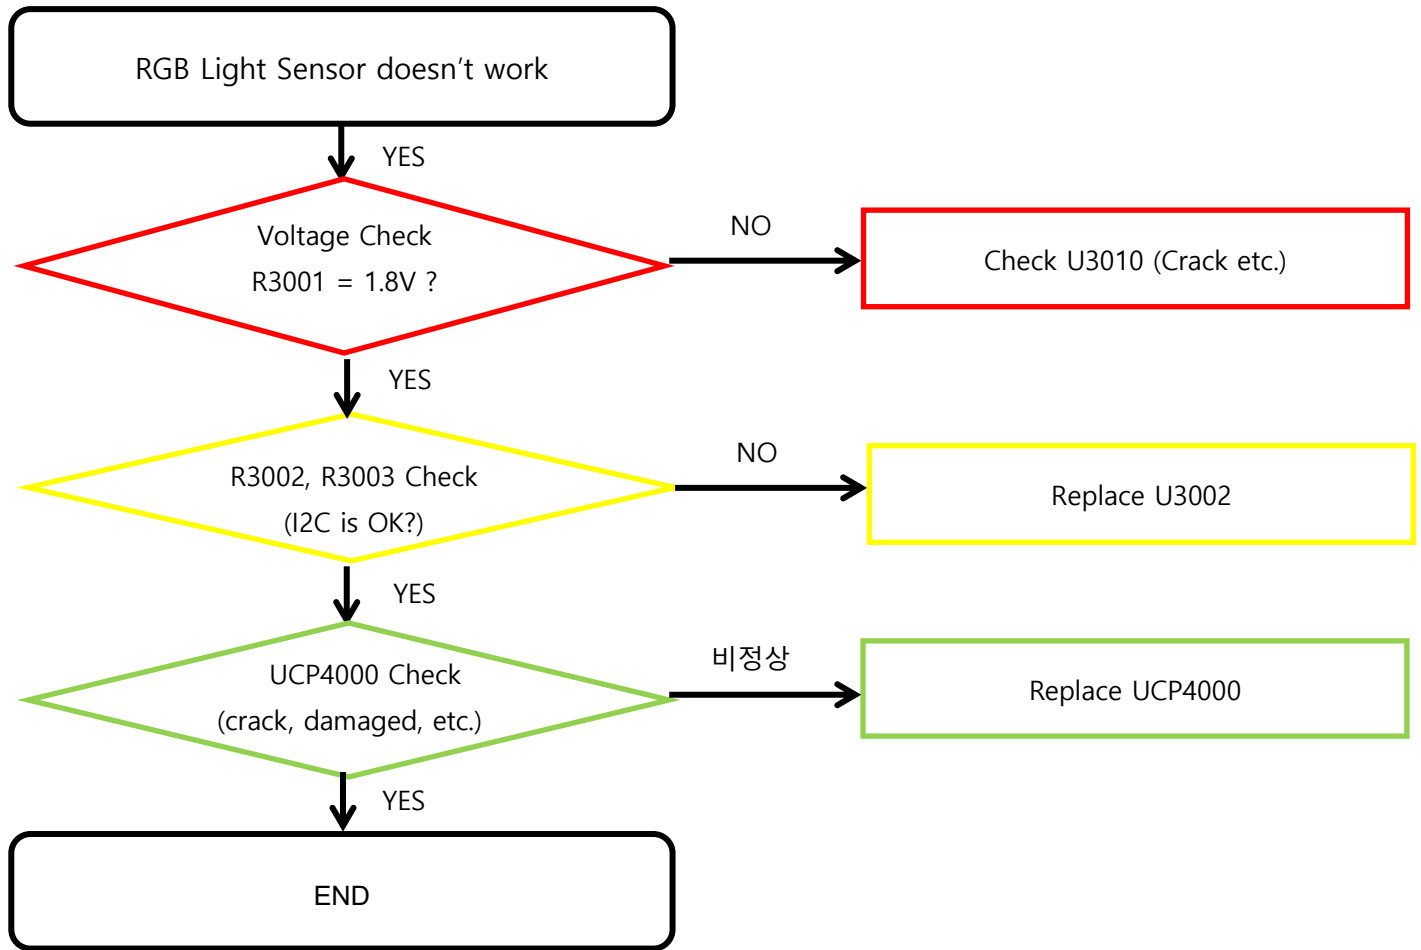


8. Level 3 Repair

8-4-8-4. Fingerprint Sensor

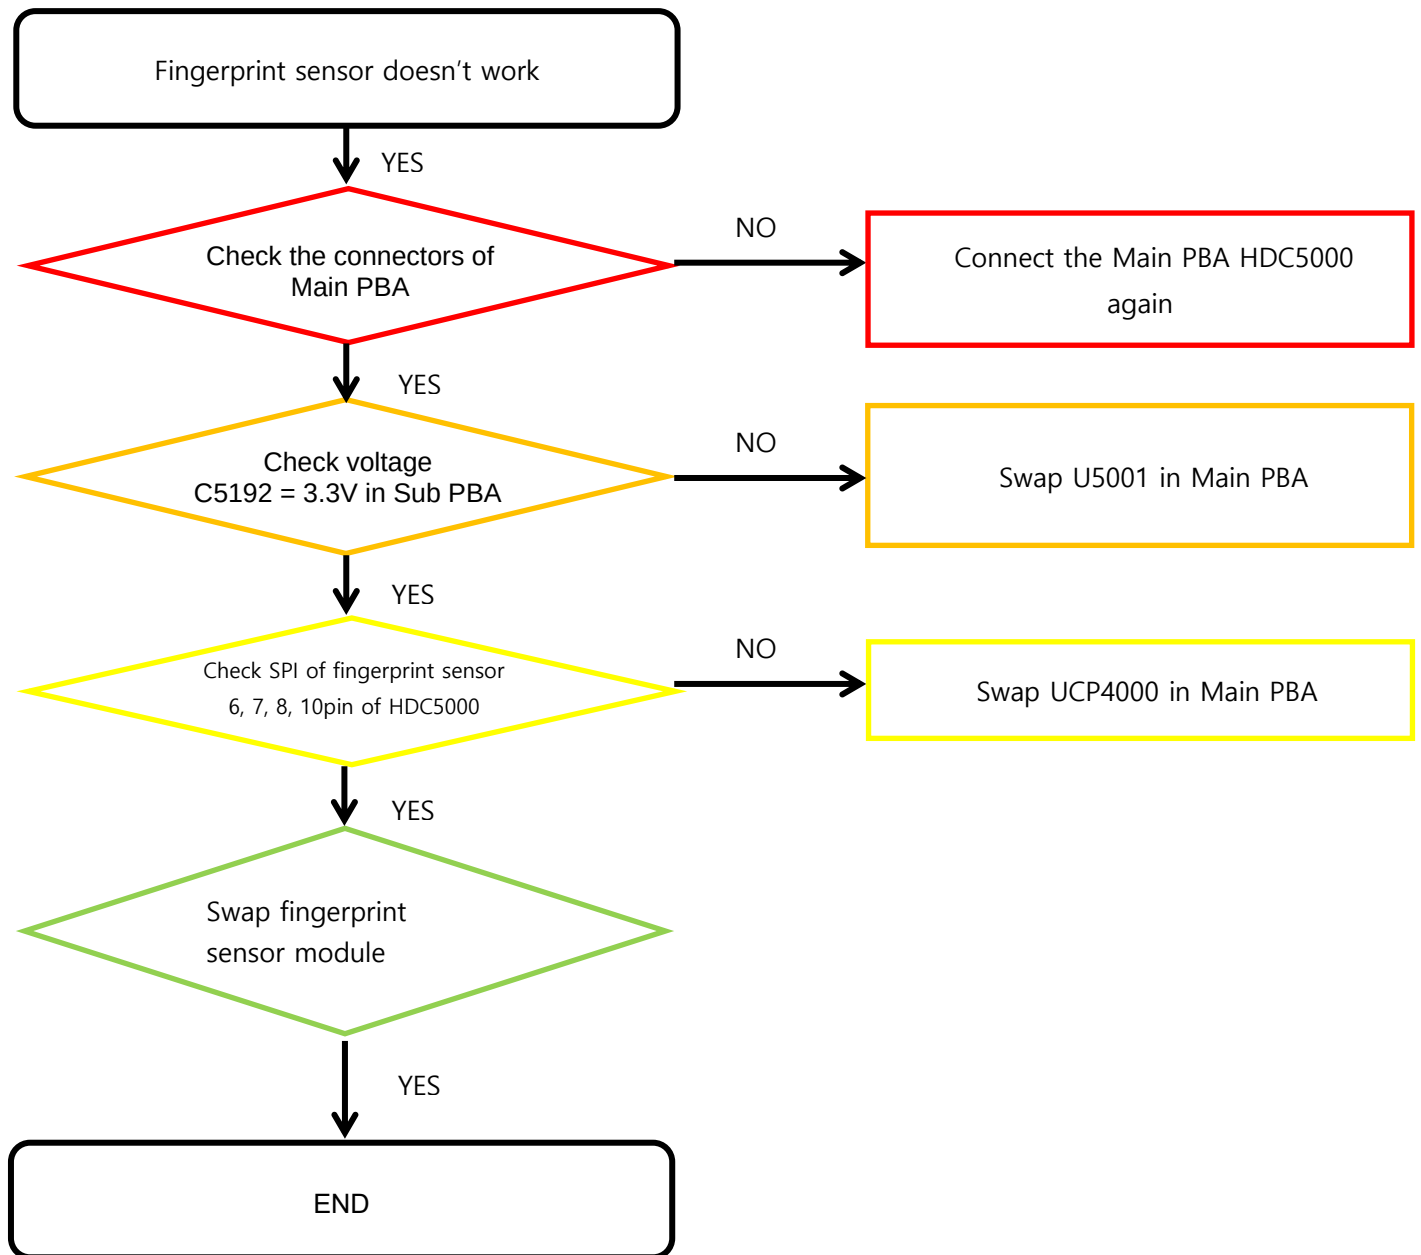


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

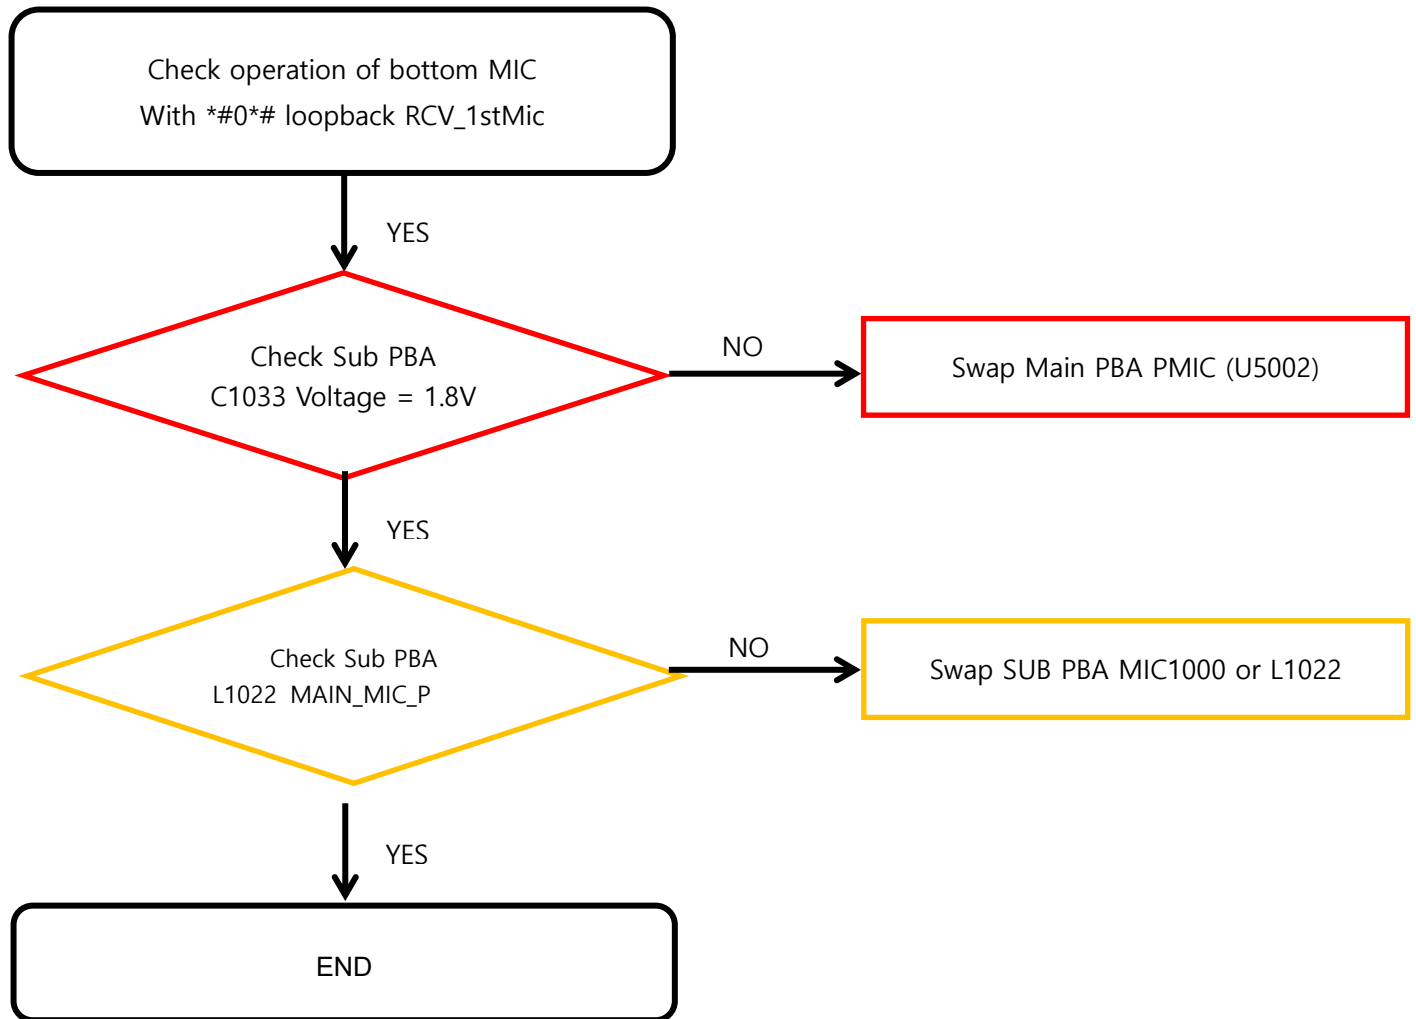


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

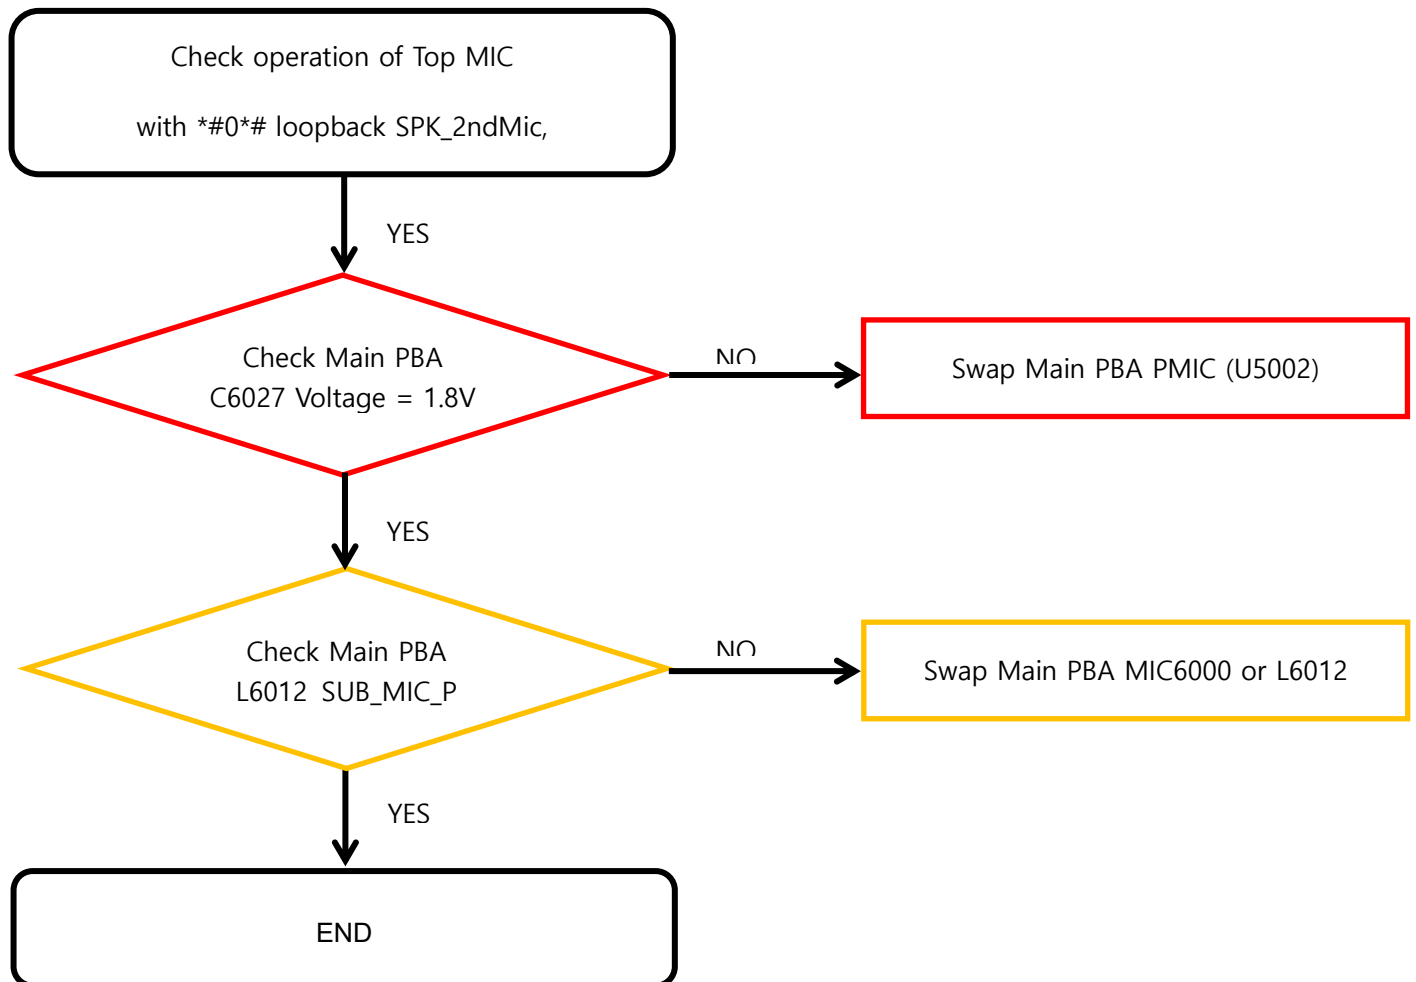


8. Level 3 Repair

8-4-10. Speaker Part - Bottom speaker

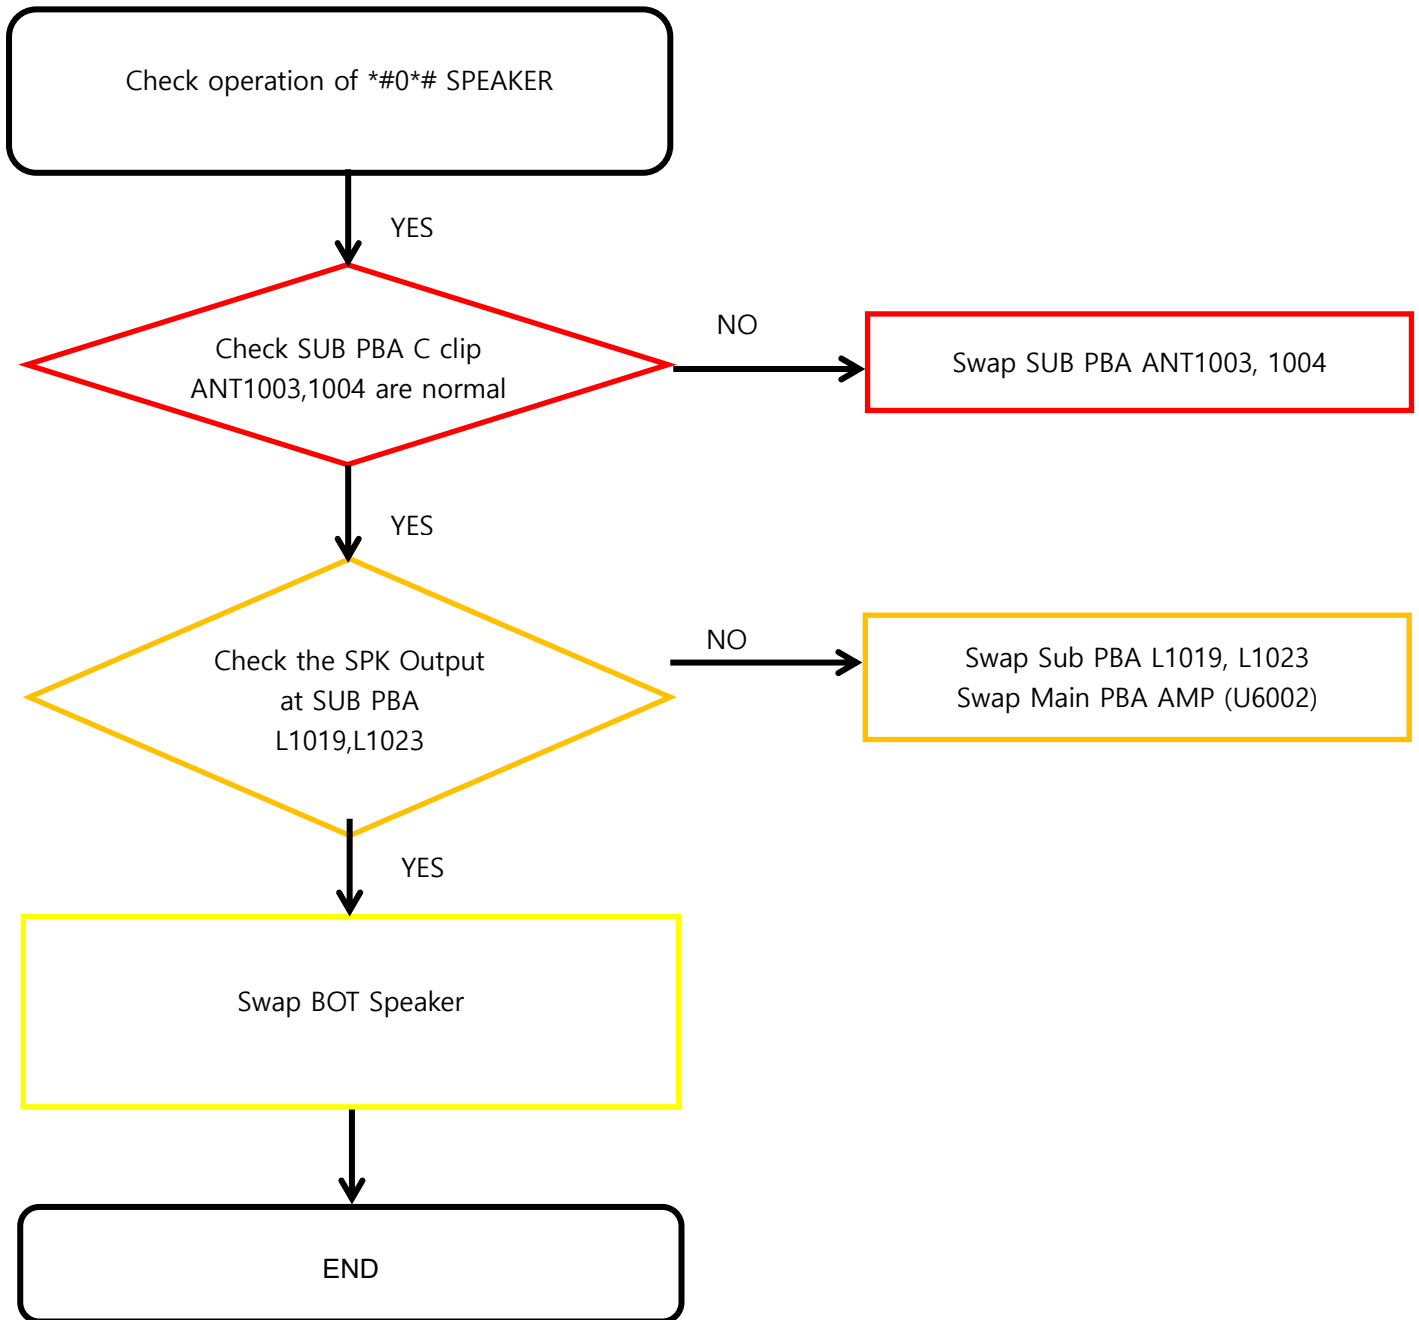


8. Level 3 Repair

8-4-11. Speaker Part - Top Receiver

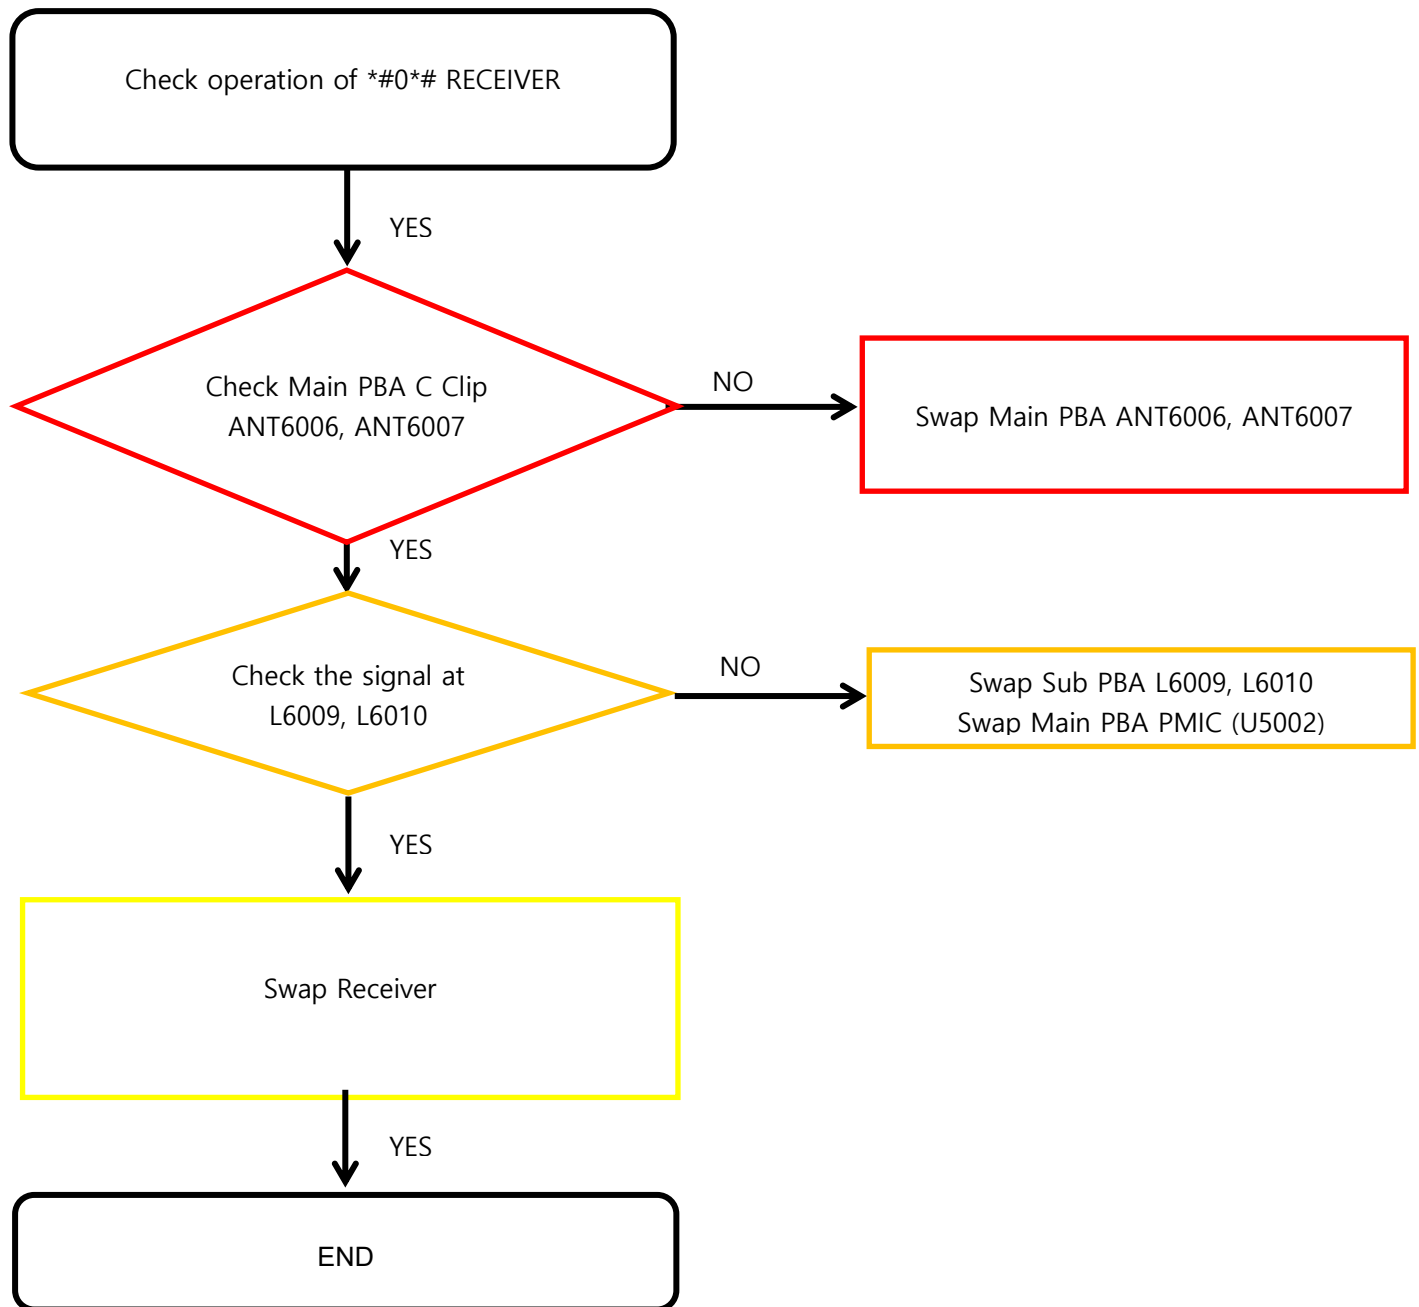


8. Level 3 Repair

8-4-12. BT/WIFI

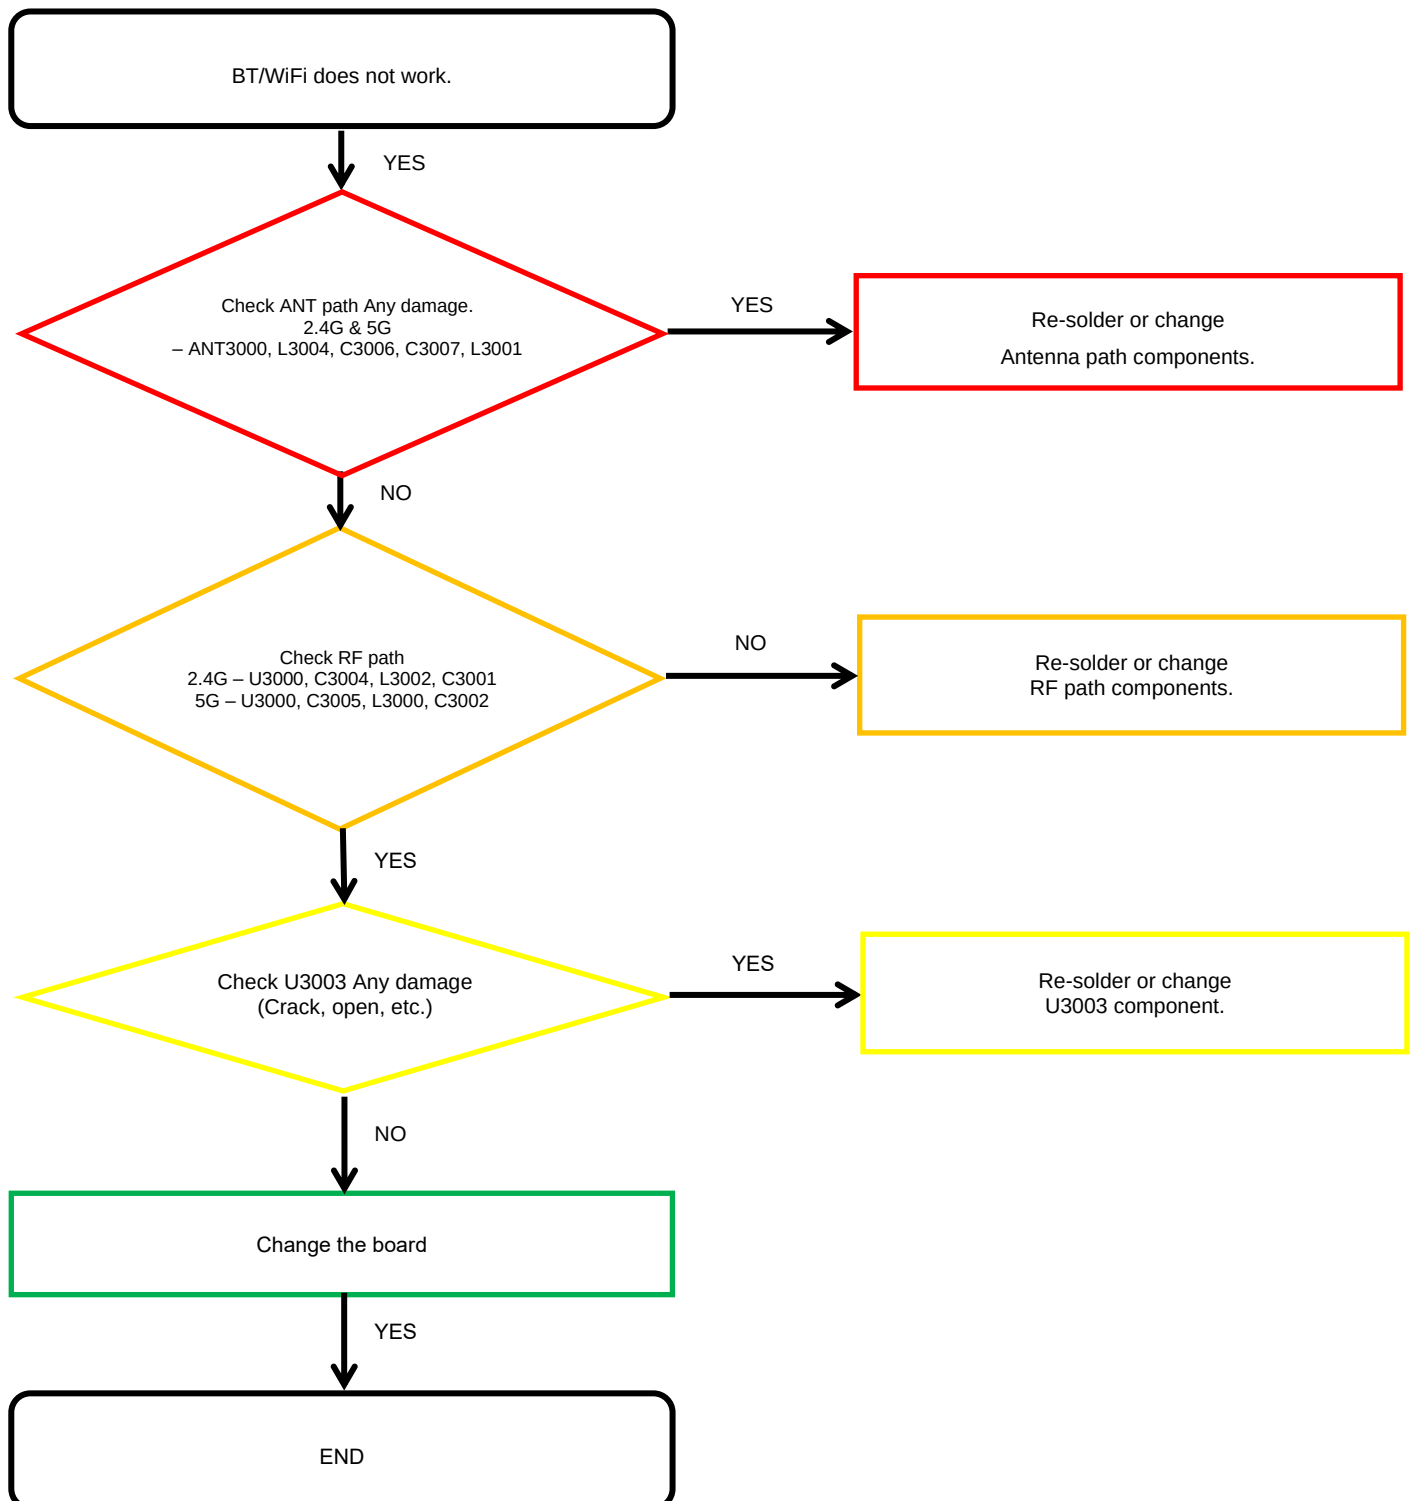


8. Level 3 Repair

8-4-13. GPS

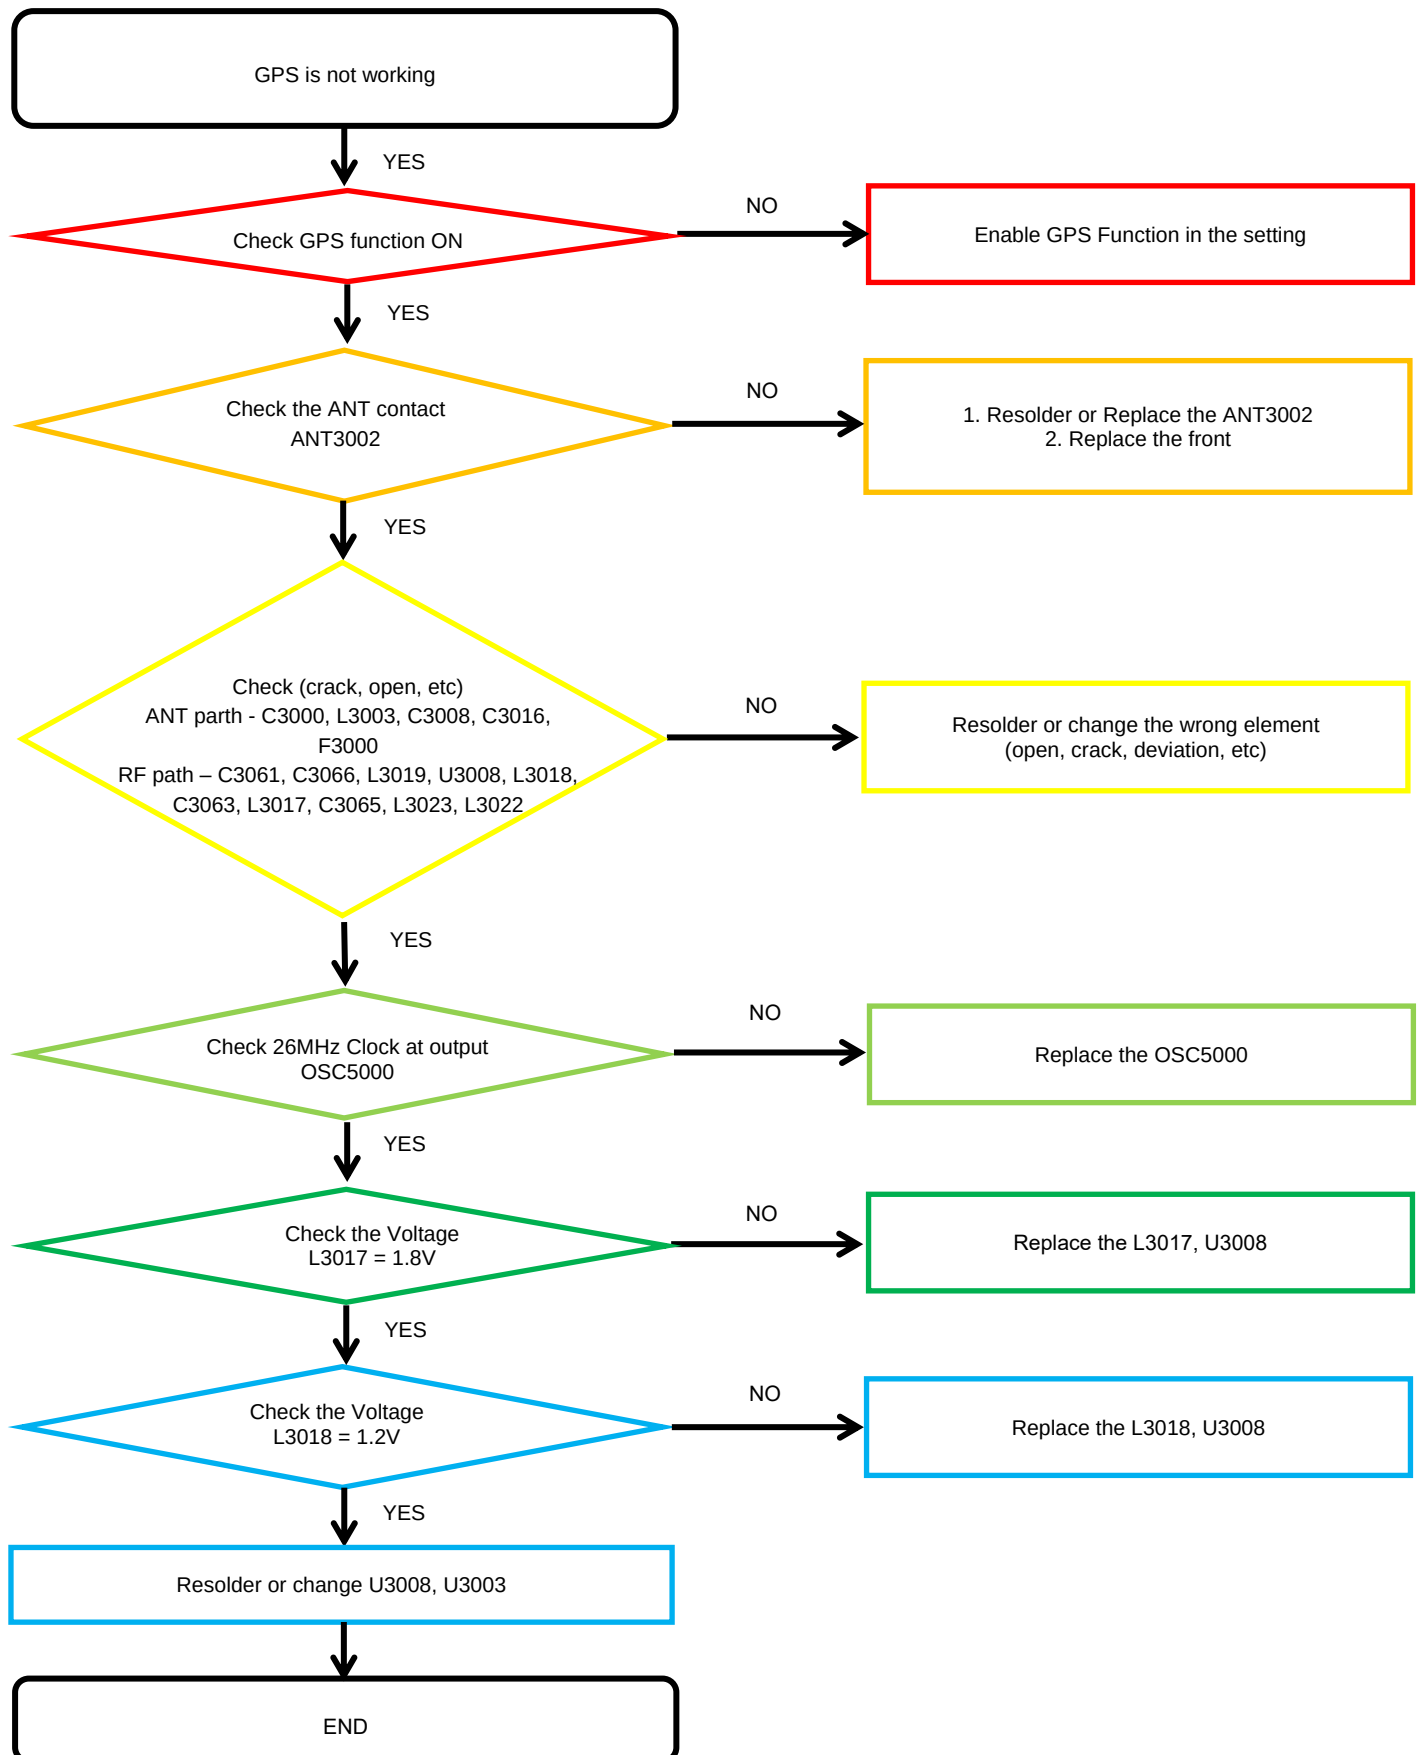


8. Level 3 Repair

8-4-14. FM Radio

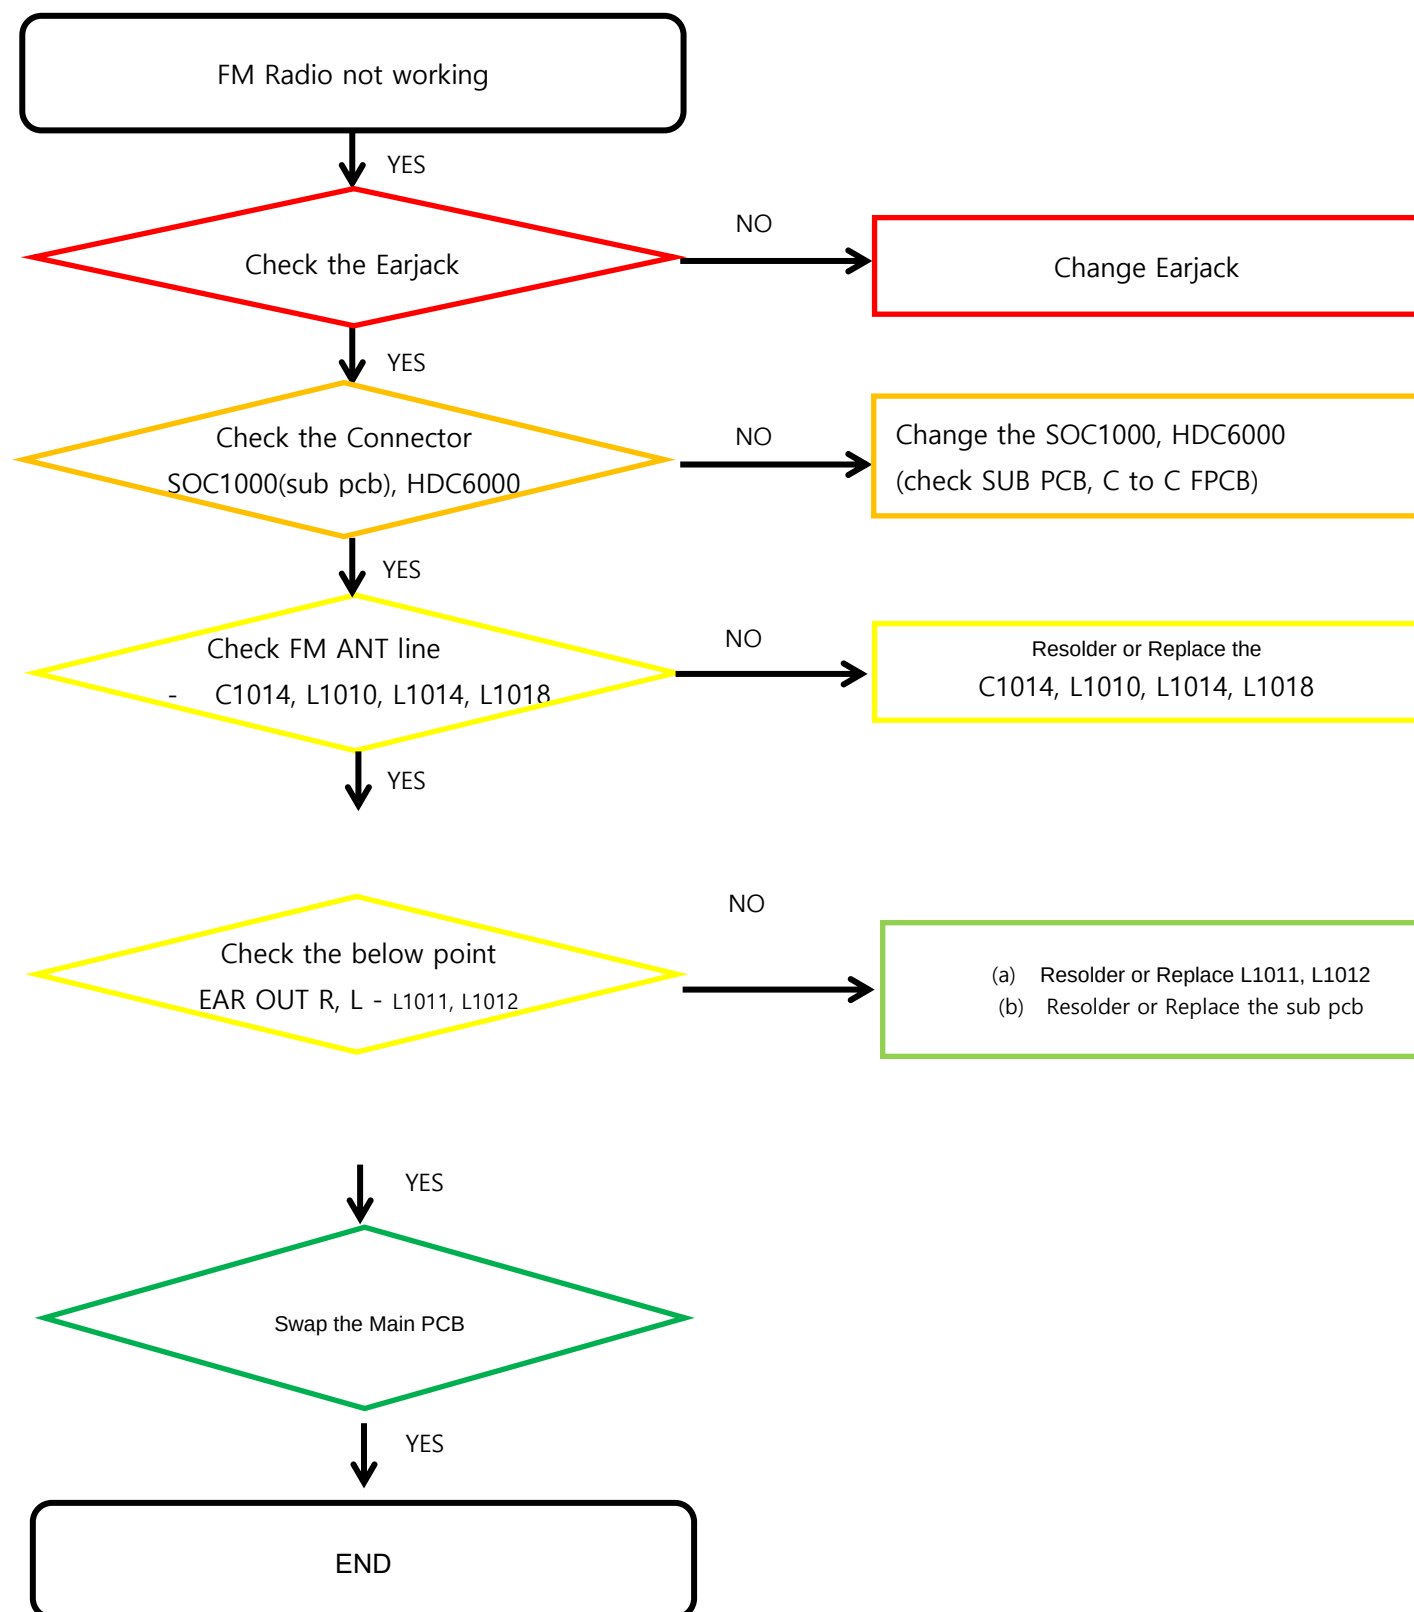


8. Level 3 Repair

8-4-15. Display

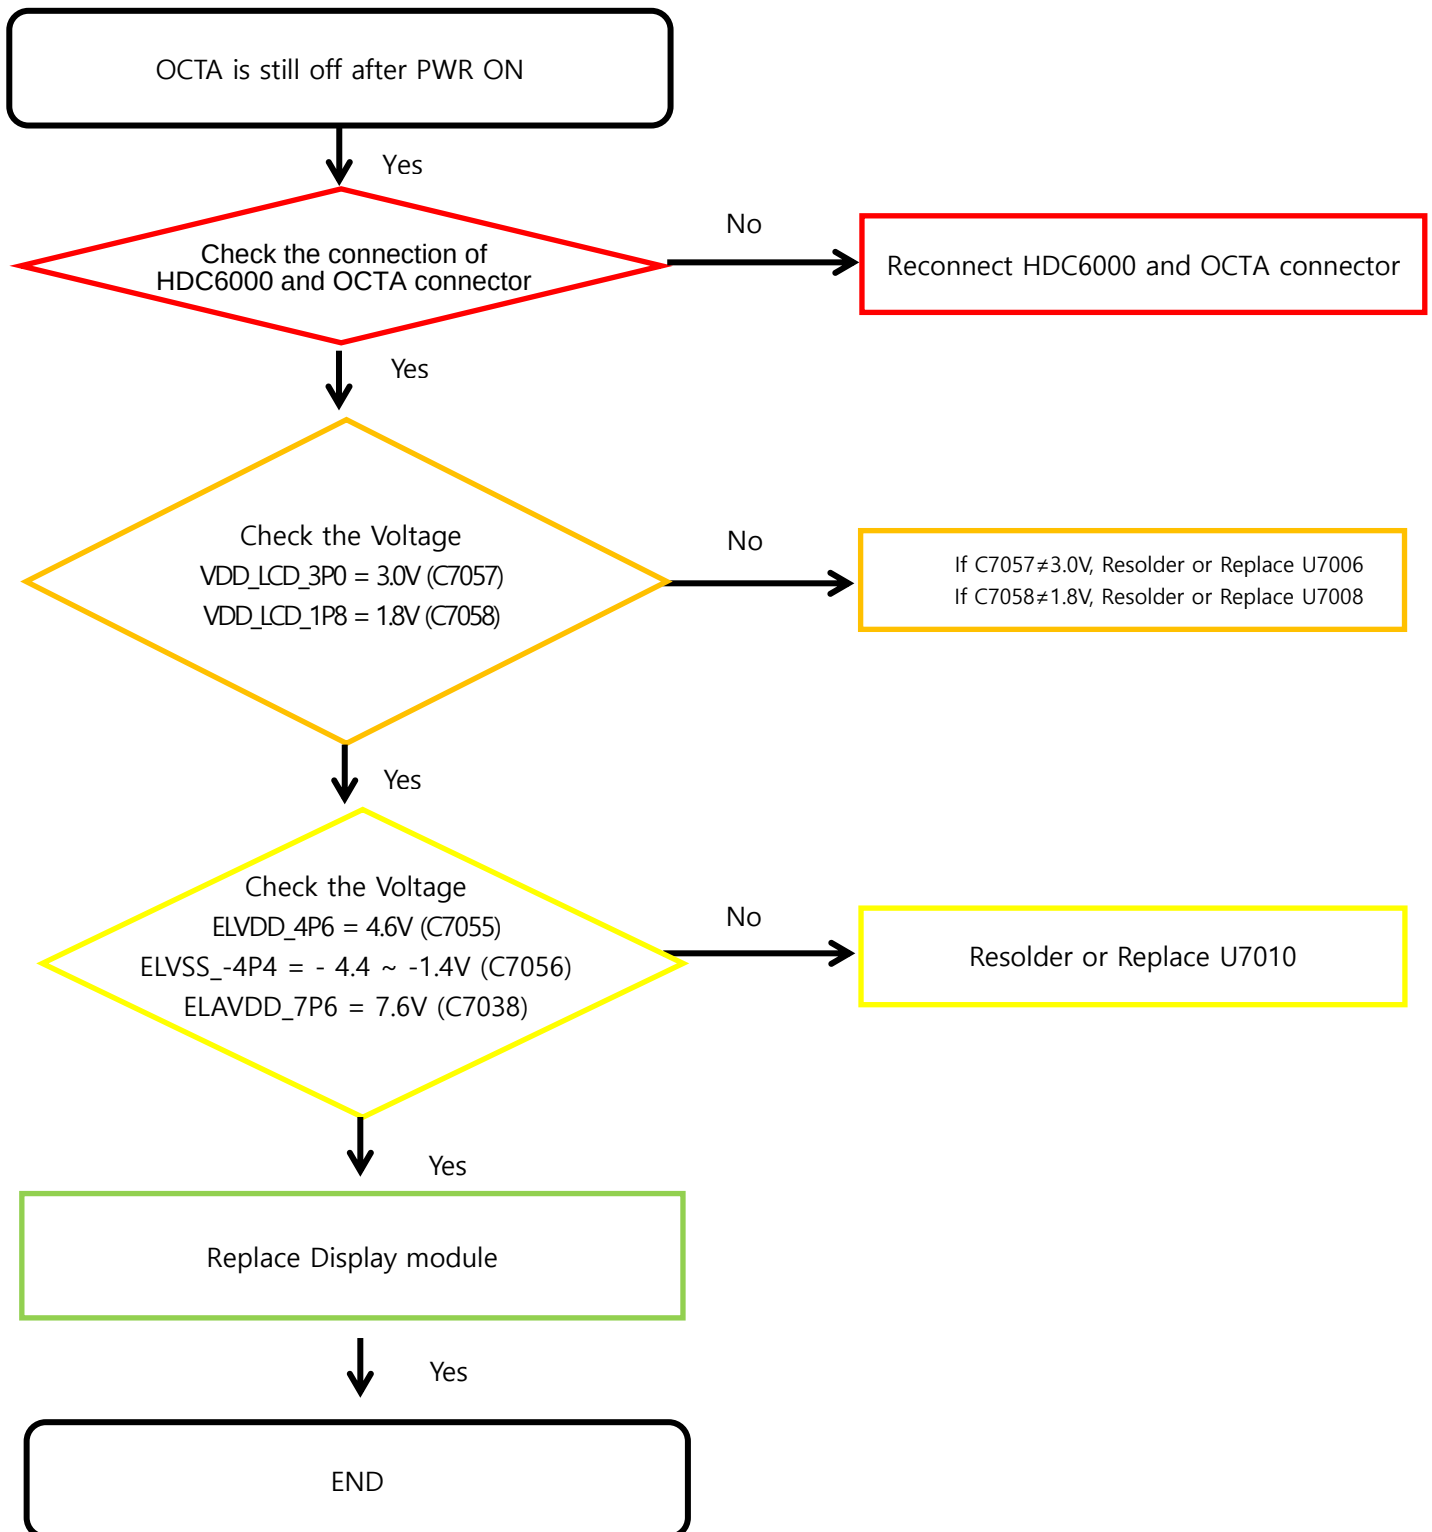


8. Level 3 Repair

8-4-16. Rear CAMERA (64M)

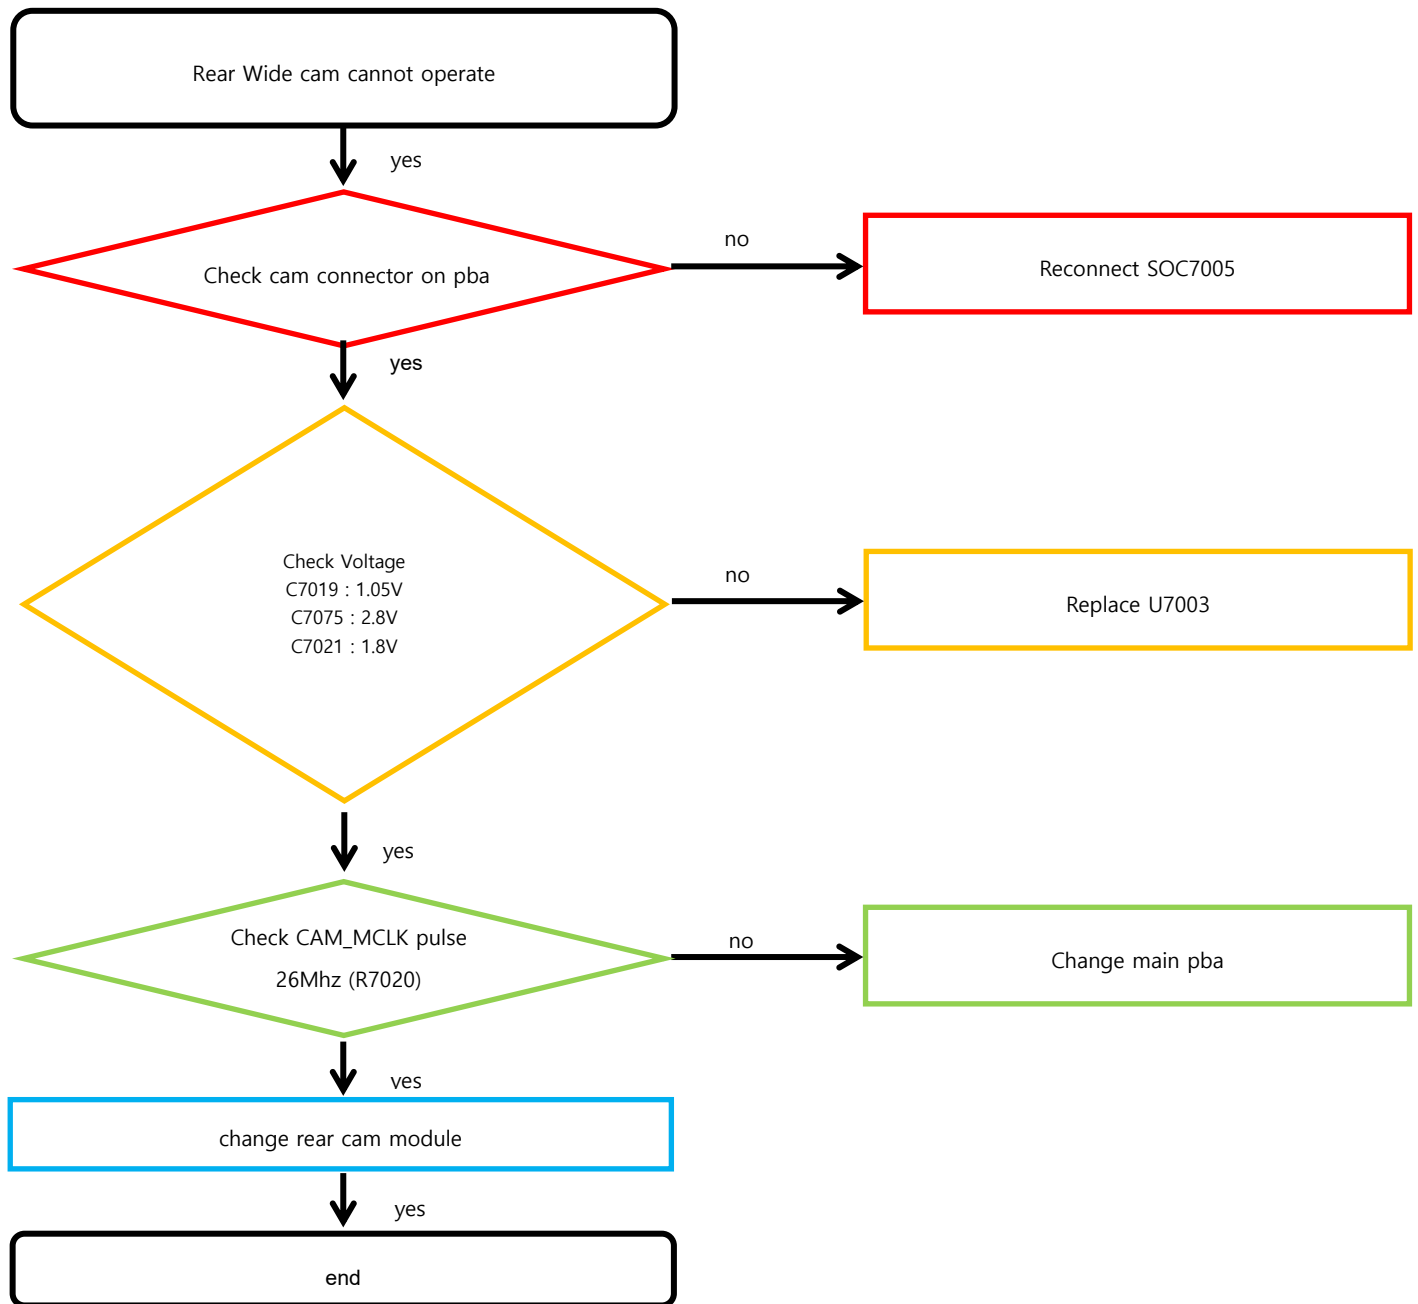


8. Level 3 Repair

8-4-17. Front Cam (20M)

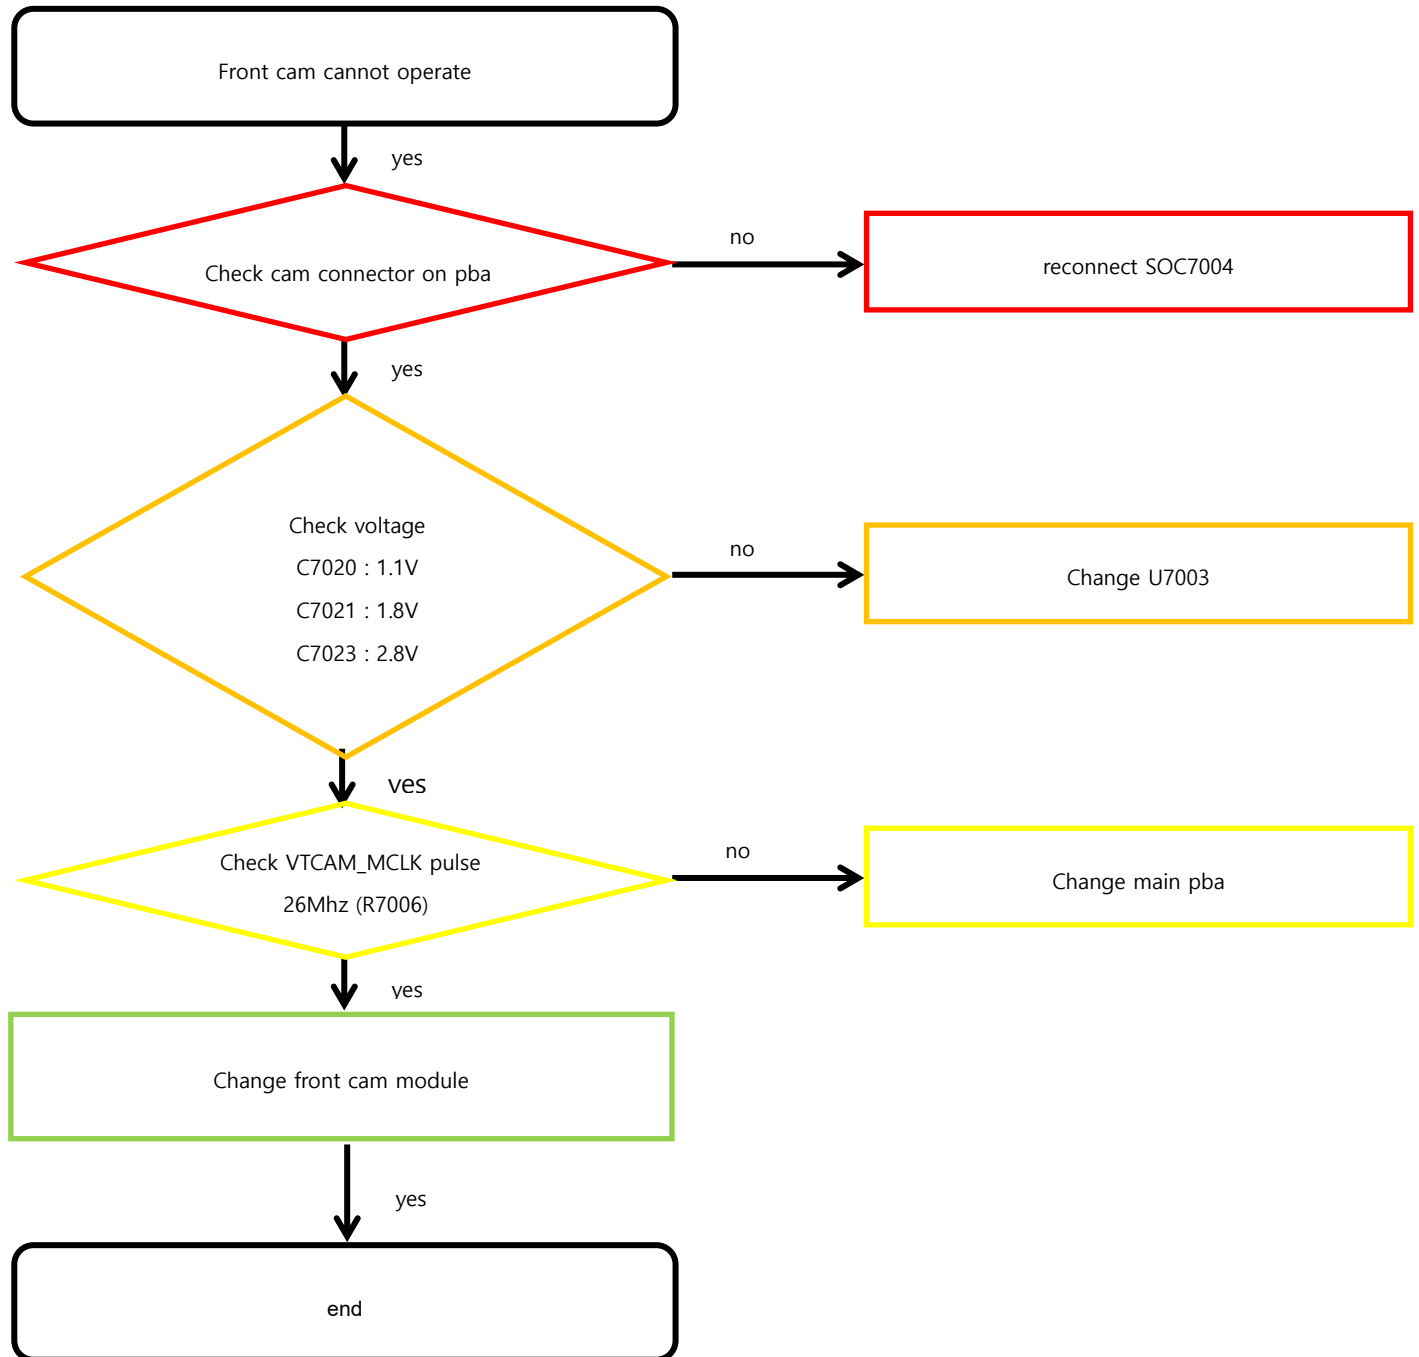


8. Level 3 Repair

8-4-18. TSP

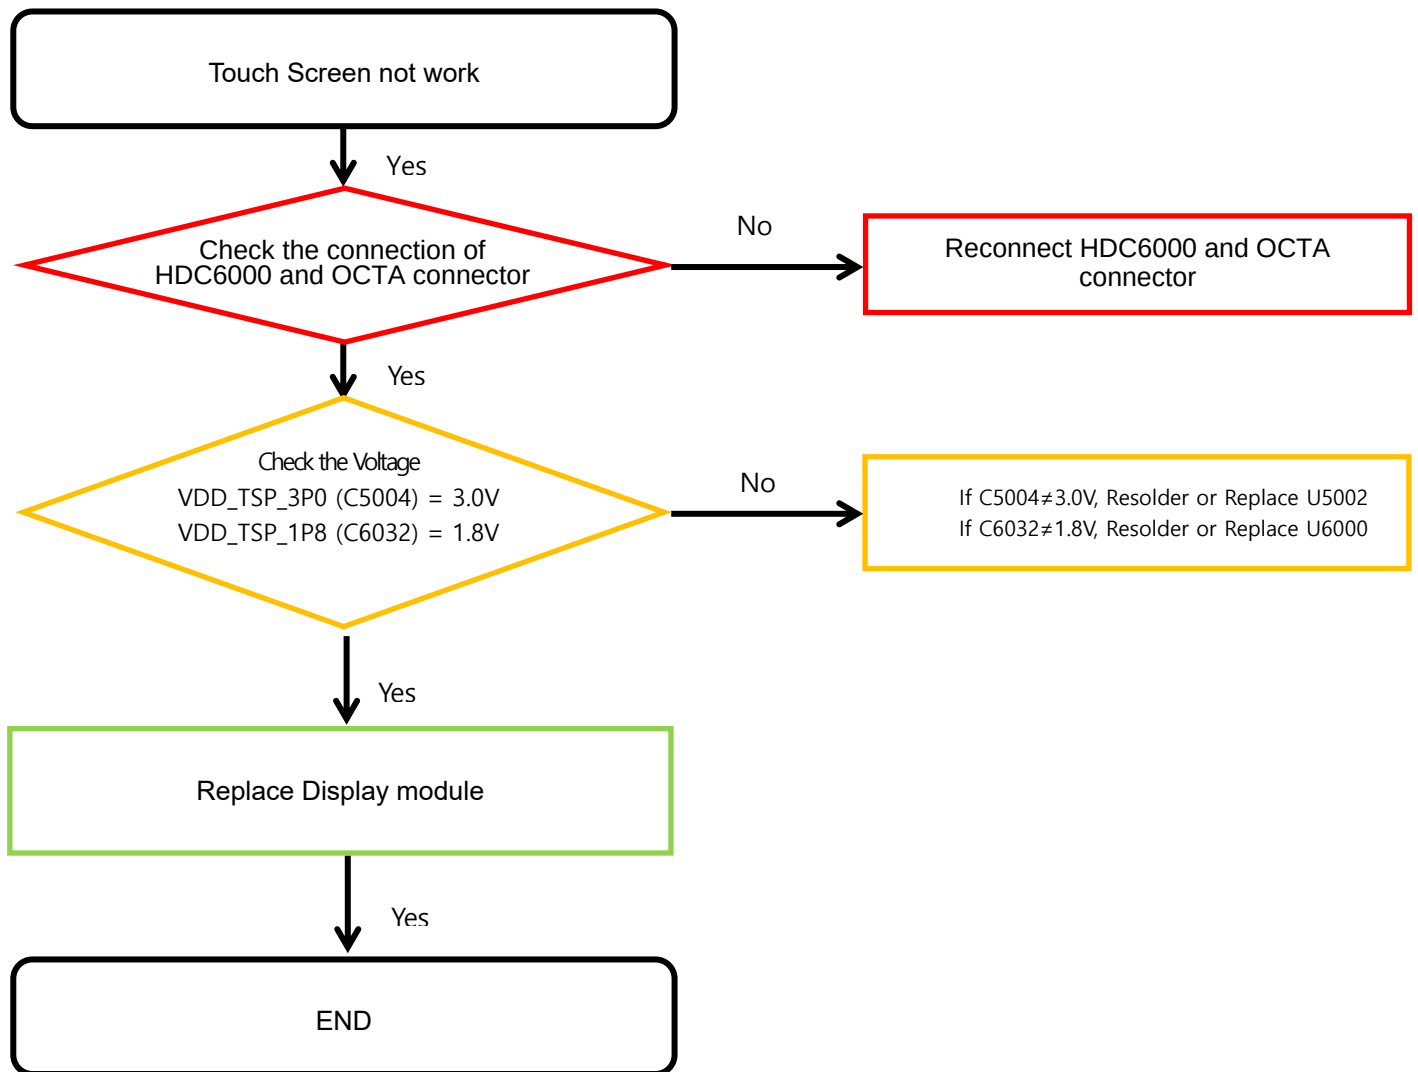


8. Level 3 Repair

8-4-19. Motor

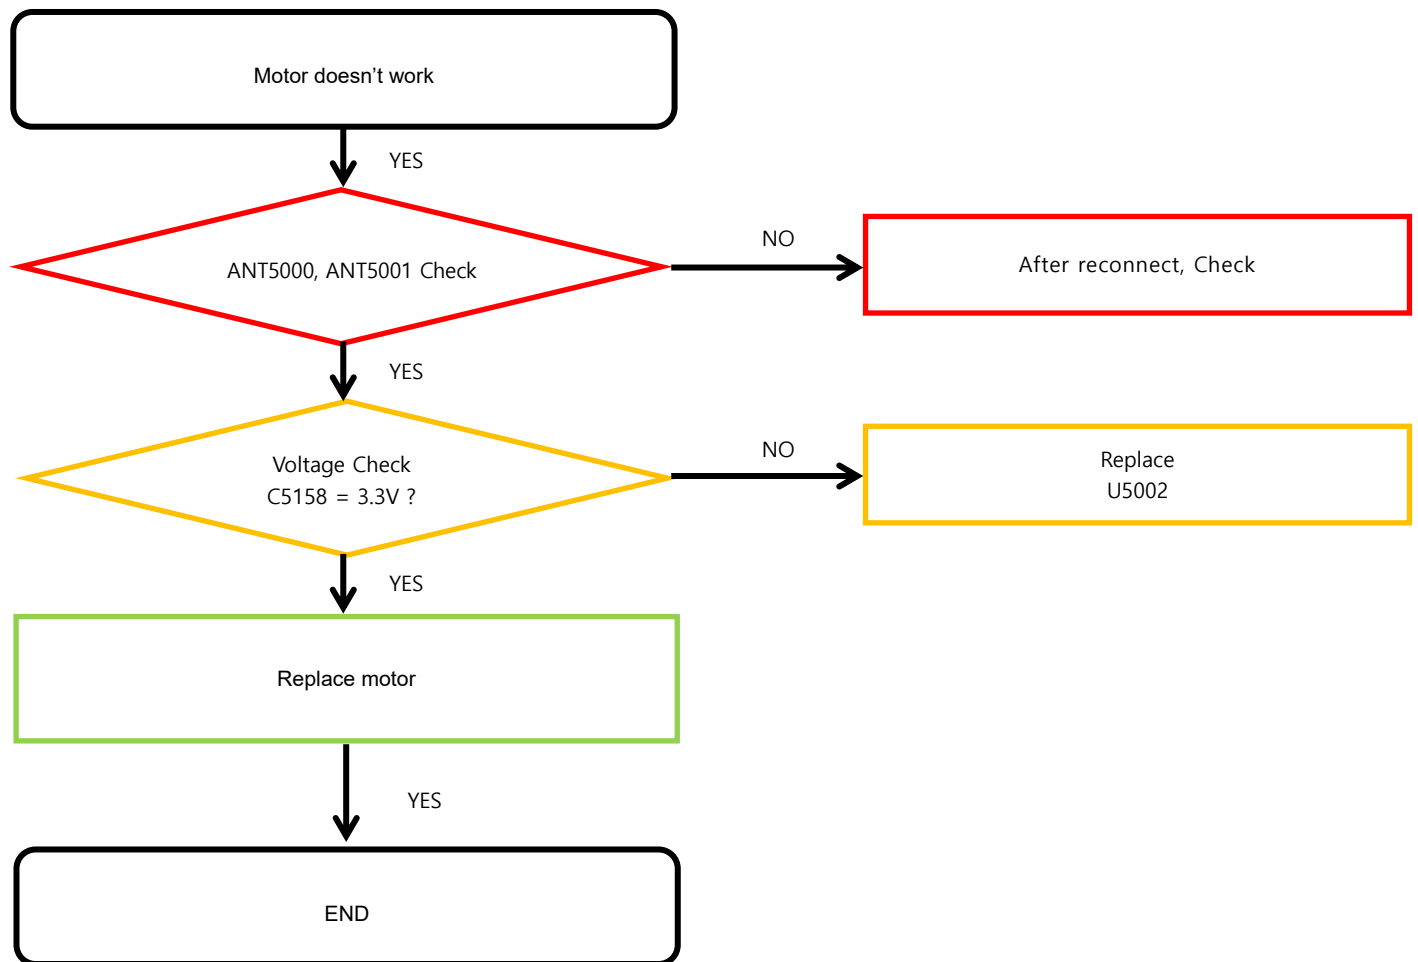


8. Level 3 Repair

8-4-20. GSM 850/900/1800, WCDMA B1/5/8, LTE B1/3/5/8/20 PRx

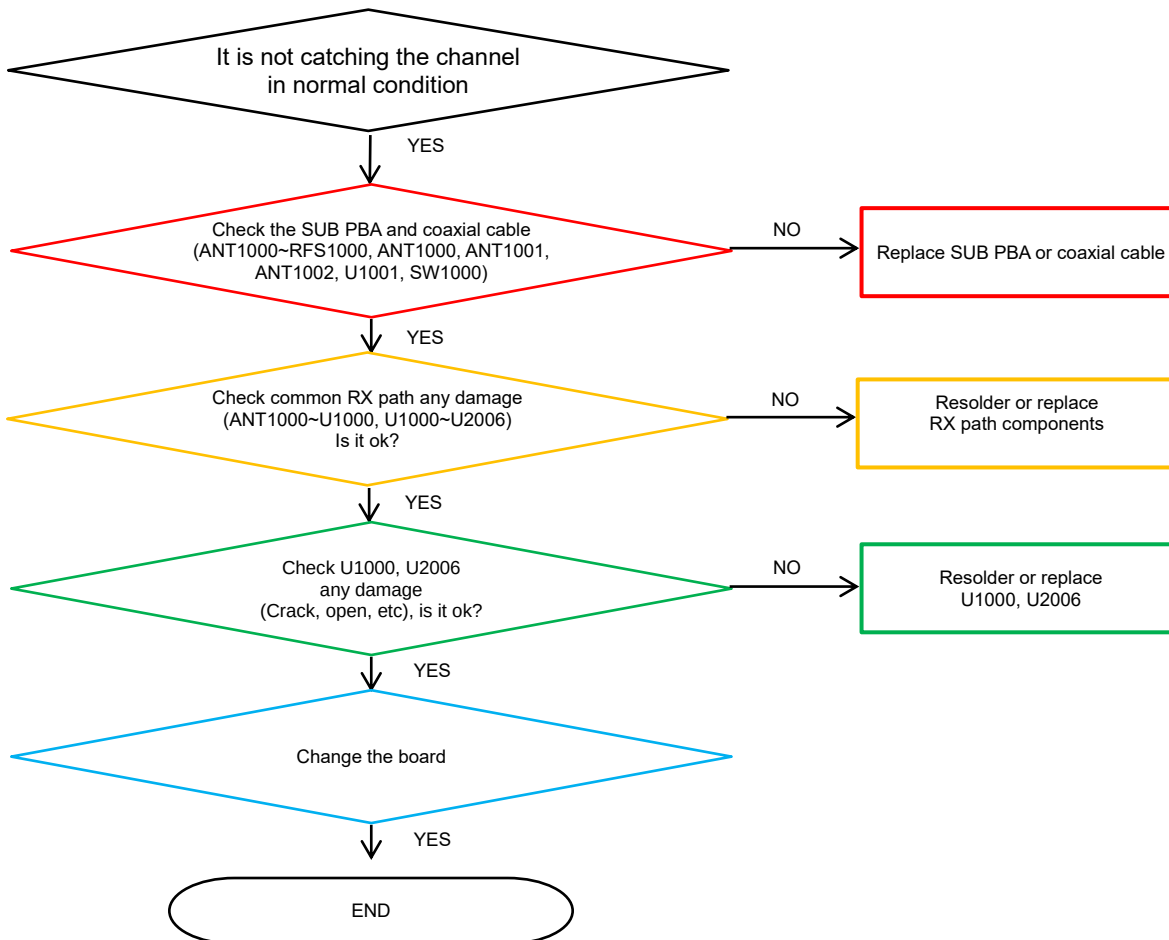


8. Level 3 Repair

8-4-21. LTE B38/40/41 PRx

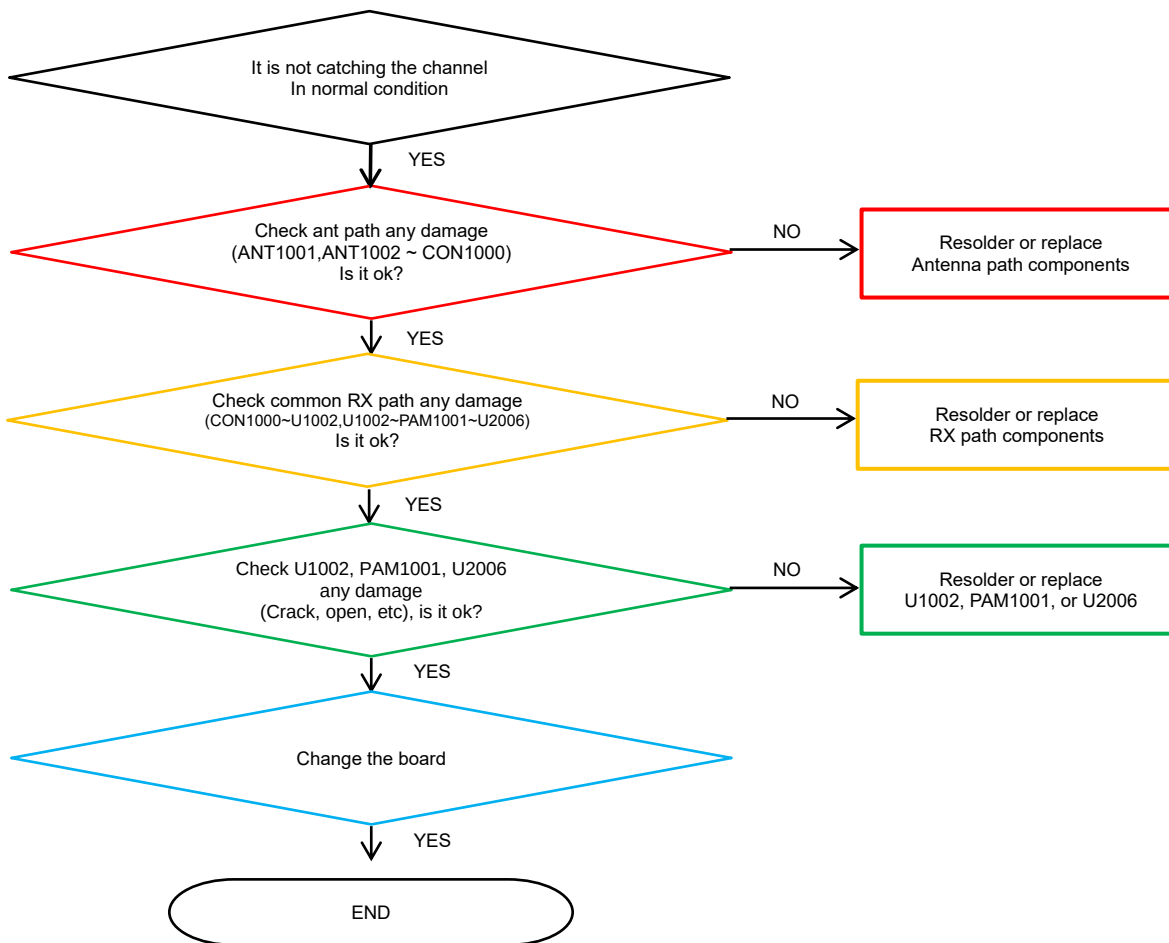


8. Level 3 Repair

8-4-22. GSM 850/900/1800, WCDMA B1/5/8, LTE B1/3/5/8/20/38/40/41 DRx

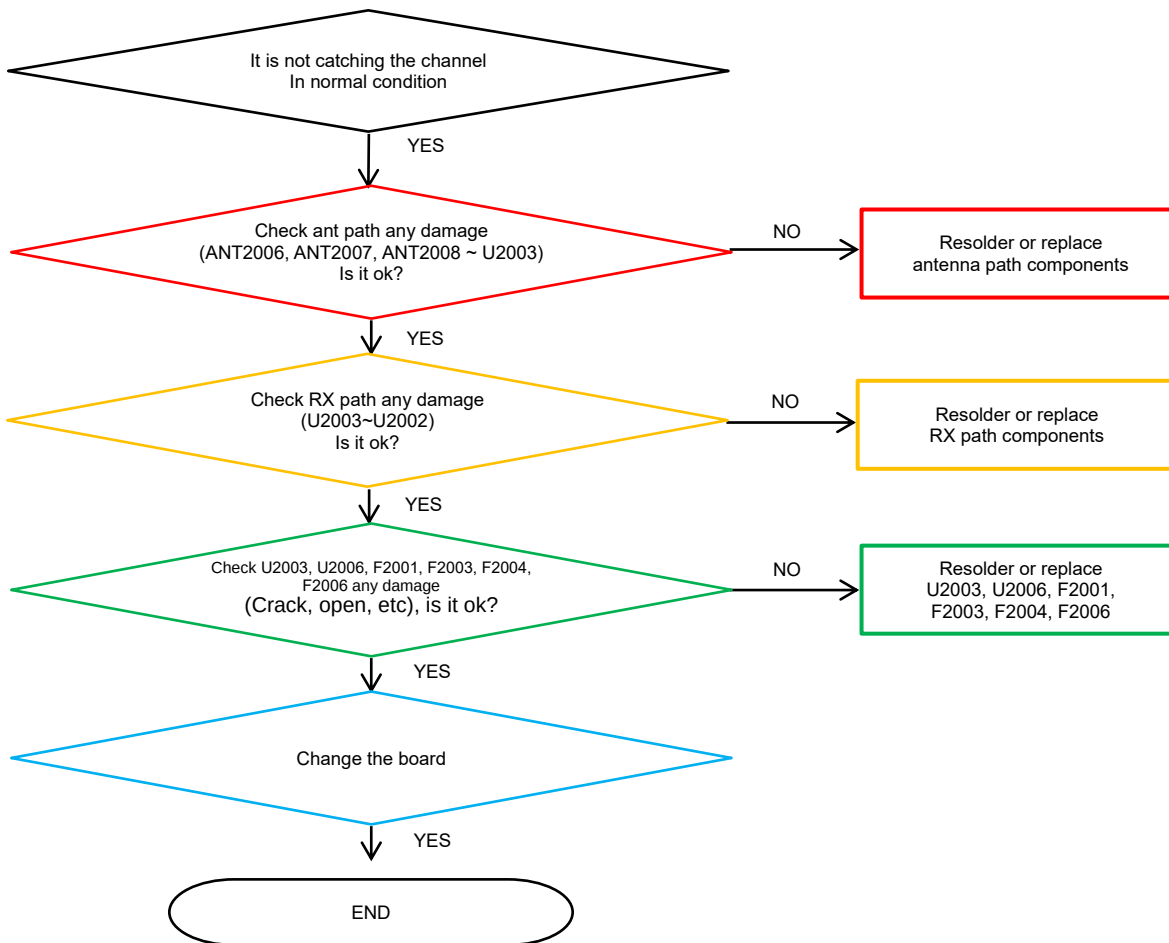

8. Level 3 Repair

8-4-23. GSM 850/900/1800, WCDMA B1/5/8, LTE B1/3/5/8/20 Tx

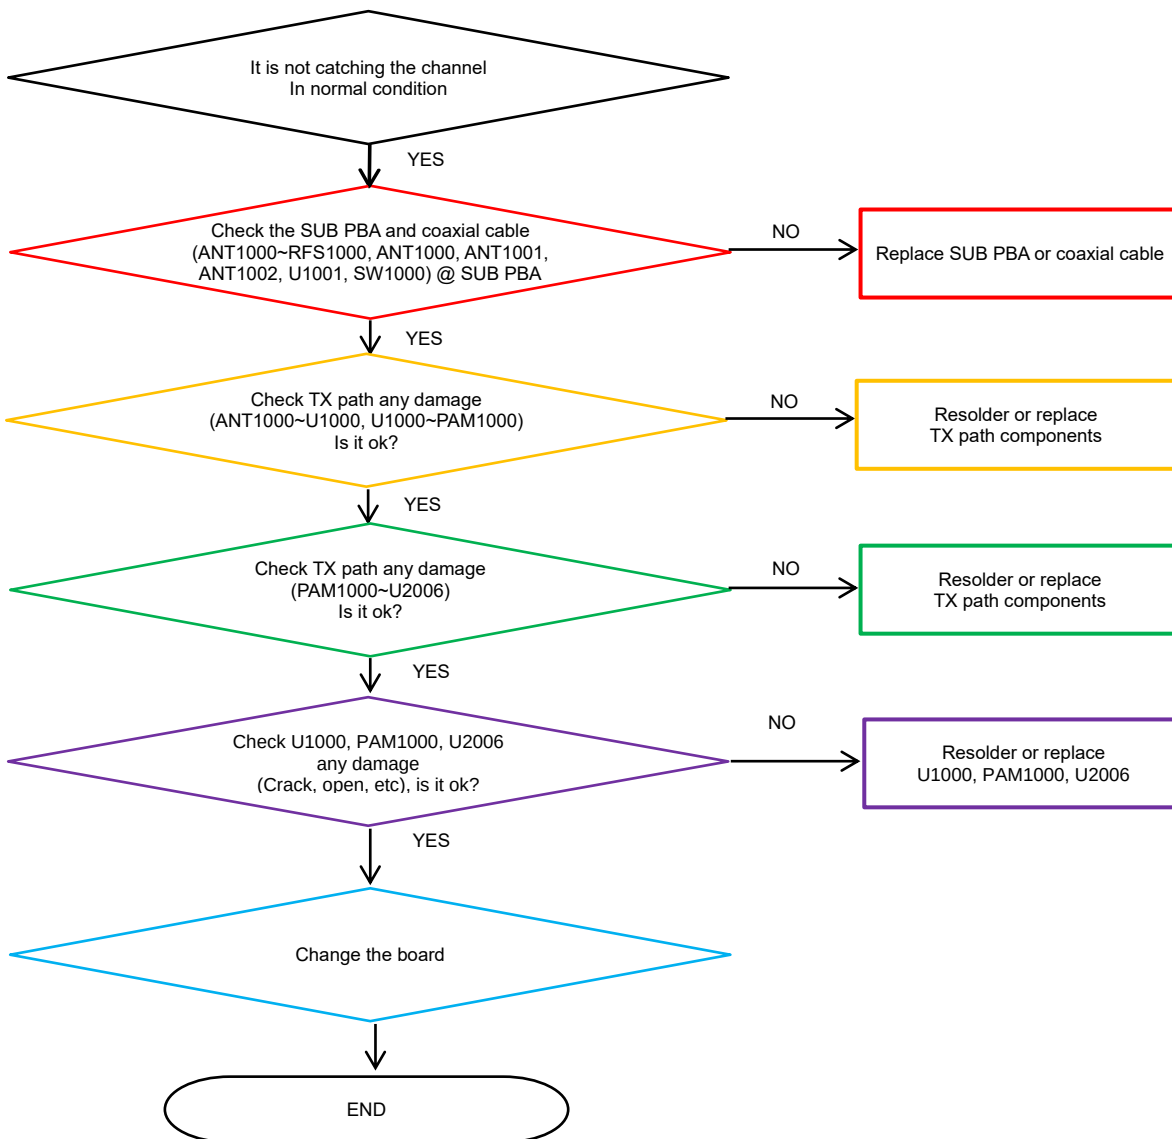

8. Level 3 Repair

8-4-24. LTE B38/40/41 Tx

