
T16 Repair Guide



Revised Record	Version	Written By	Content	Date
1	V1.0	GKAS	First Edition	2019-03-29
2	V1.2	GKAS	Updated Remote Controller Link Content; Added Remote Controller Disassembly and Assembly Content	2019-06-12
3	V1.3	GKAS	Added charger connection diagram Added charger installation notice	2020-03-13
4	V1.4	GKAS	Update aircraft disassembly and assembly English video	2020-04-07

Contents

Chapter 1 Repair Information	1
1. Purpose	1
2. Repair Notices	1
3. Anti-Static Protection	1
4. Maintenance	1
5. Battery	2
6. Charger	2
Chapter 2 Product Introduction	4
1. Aircraft	4
2. Remote Controller	4
3. Intelligent Flight Battery	4
4. Specifications	4
5. Overview	9
5.1 Diagram	10
Chapter 3 BOM and Repair Material	13
1. Aircraft BOM	13
2. Front Frame BOM	14
3. Middle Frame Module BOM	16
4. Rear Frame Module BOM	17
5. Landing Gear BOM	19
6. Short Aircraft Arm BOM	20
7. Long Aircraft Arm BOM	21
8. Spray Tank BOM	23
9. Spraying Module and Cables BOM	24
10. Delivery Pump Module BOM	25
11. Remote Controller Front Shell Module	27
12. Remote Controller Bottom Cover	28
13. Remote Controller Upper Cover	29
14. Charger 1	30
15. Charger 2	31

16.	Charger 3	32
Chapter 4 Operation Principles Diagram.....		33
1.	Aircraft.....	33
2.	Diagram	35
3.	Remote Controller.....	38
4.	Charger	39
Chapter 5 Disassembly and Assembly.....		42
1.	Tools	42
2.	Video Links (English version to be updated)	43
3.	Disassembling and Assembling the Aircraft	43
4.	Disassembling and Assembling the Aircraft Arm	54
5.	Propellers Installation Notices	58
6.	Disassembling and Assembling the Remote Controller	58
7.	Disassembling and Assembling the Remote Controller Rear Shell	61
8.	Notices.....	62
9.	Disassembling and Assembling the Charger	63
10.	Charger Assembly Notice (Torque Requirements).....	68
Chapter 6 Damage Assessment and Repair Guide.....		69
1.	Aerial-Electronics Board	69
2.	Spraying Board (Including Compass).....	71
3.	Delivery Pump.....	72
4.	Radar	72
5.	Motor/ESC	74
6.	Fluid Level Meter	75
7.	Flowmeter.....	76
8.	Power Distribution Board	76
9.	Remote Controller.....	77
10.	Charger	78
11.	Charger Indicators.....	81

Chapter 1 Repair Information

1. Purpose

- This document is to show DJI service center staff how to repair the T16. This repair guide is only for service centers or companies who have signed the confidentiality agreement and have a product repair qualification. This document cannot be distributed to other third parties or be disclosed to the public. If you find any mistakes or have any suggestions, please send an email to support.agras@dji.com.
- To find the related repair information and policies please visit: <https://www.dji.com>

2. Repair Notices

- Repair and calibration should be carried out by qualified technical staff.
- Please ensure that all operations are in an anti-static workshop.
- Please ensure that no soldering tin, screws or debris are inside the product and its components.
- Please ensure that all modules, screws, and conductive foams are mounted in place and that glue is applied properly.

3. Anti-Static Protection

- Disassembly or assembly of the external shell must be done in an anti-static workshop.
- The electronic components are electrical static sensitive devices. Electrostatic discharge (ESD) is the main cause of damage to electronic components.
- Ensure that anti-static measures are taken when transporting the electrical static sensitive devices.
- Do not operate in a strong static or magnetic field.

4. Maintenance

- Keep the drone and components away from children.
- Do not let the component come into contact with liquid.
- Do not power on the drone immediately after it has fallen into water.

5. Battery

- Do not allow the battery to come into contact with any kind of liquid. Do not leave the battery out in the rain or make it wet.
- Do not use swollen, leaking, or damaged batteries.
- Do not install or remove the battery from the aircraft when it is turned on.
- The battery needs to be used at temperatures from -10°C to 40°C.
- Do not use the battery in strong electrostatic or electromagnetic environments.
- Do not disassemble or pierce the battery in any way.
- Do not place wires or metal objects on the battery, or the battery may short-circuit.
- Do not drop or hit batteries. Do not place heavy objects on the battery.
- Electrolytes in the battery are highly corrosive. If they leak, please stay away from them.
- Keep batteries out of the reach of children.
- Do not leave the battery near heat sources.
- Keep the battery dry.
- Keep batteries away from the metal objects, such as glasses, watches, jewelry, or hairpins.
- Do not transport a damaged battery or a battery with a power level higher than 30%.
- Do not store batteries in environments with a temperature higher than 45°C or lower than 0°C.
- Do not place batteries in regular trash containers.

6. Charger

- Never allow the charger to come into contact with any liquid.
- Never use chargers that are misshapen or have broken cables.
- Do not repair the charger while the charger is connected to a power source.
- Keep the charger away from fire during maintenance, and do not repair or expose the charger cover at high temperature in the hot sun.
- Do not use or repair the charger in a strong static or magnetic field environment.
- Before powering on, use a multimeter to measure whether the charging port is short-circuited.
- Do not use a wire or other metal objects to make the positive and negative poles of the charger short circuit.
- Do not hit the charger or place heavy objects on the charger.
- There is a PCBA board inside the charger. If it is exposed, please pay attention to anti-static measures.
- Keep children away from the charger under repair.
- Do not place the charger near a heat source.
- The environment where the charger is stored should be properly dry.
- Do not transport a damaged or leaking charger.

- Do not store the charger in an environment where the room temperature exceeds 45 °C or below 0 °C.
- Do not leave the charger in a dusty workshop for maintenance.
- Do not wrongly attach the cable or tighten the screws in the charger.
- After repairing the charger, please check whether the screws are loose or have fallen into the cover.

DJI CONFIDENTIAL

Chapter 2 Product Introduction

1. Aircraft

The AGRAS™ T16 features a brand-new design including a foldable frame and quick-release spray tank and flight battery, making replacement, installation, and storage easy.

The stable and reliable modular aerial-electronics system is integrated with a dedicated industrial flight controller, OCUSYNC™ 2.0 HD transmission system, and RTK module. It has dual IMUs and barometers and adopts a propulsion control system redundancy design including both digital and analog signals to ensure flight safety. The GNSS+RTK dual-redundancy system is compatible with GPS, GLONASS, BeiDou, and Galileo. The T16 also supports centimeter-level positioning* when used with the built-in onboard D-RTK™ antennas. Dual-antenna technology provides strong resistance against magnetic interference.

The upgraded spraying system features an improvement in payload, spray rate, and spray width. It also has a new-generation electromagnetic flow meter, providing high precision and stability. The all-new digital beam forming (DBF) imaging radar features obstacle sensing and terrain following capabilities during both day and night, without being affected by light or dust. It can also plan a flight path to actively circumvent obstacles. The aircraft is equipped with a wide-angle FPV camera enabling observation of the landscape from the front of the aircraft.

2. Remote Controller

The remote controller uses the DJI OcuSync dual-band transmission system, has a maximum control distance of up to 5 km (3.11 mi)*, and is equipped with a bright, dedicated screen with the DJI MG2 app built in. Plan operations using the remote controller, an RTK handheld mapping device, or by flying the aircraft to waypoints. Along with the upgraded spraying system, flight operation is more flexible and efficient. The Multi-Aircraft Control mode of the remote controller can be used to coordinate the operation of up to five aircraft at the same time, enabling pilots to work efficiently. Replaceable batteries allows users to operate the remote controller for longer, and removable antennas make maintenance easier.

3. Intelligent Flight Battery

The T16 Intelligent Flight Battery (hereafter referred to as “the battery”) has a capacity of 17,500 mAh at a voltage of 51.8 V. The metal shell and rubber caps effectively protect the battery, and the high energy battery cells and advanced power management system allow it to provide long-lasting power to an aircraft. The T16 Intelligent Flight Battery is available in two versions: advanced and standard.

4. Specifications

- **Airframe**

Max Diagonal Wheelbase	1883 mm
Dimensions	2509×2213×732 mm (Arms and propellers unfolded) 1795×1510×732 mm (Arms unfolded and propellers folded) 1100×570×732 mm (Arms and propellers folded)

- **Propulsion System**

- **Motor**

Stator Size	100×15 mm
KV	75 rpm/V
Max Thrust	13.5 kg/rotor
Max Power	2400 W/rotor
Weight	616 g
ESC	
Max Working Current (Continuous)	40 A
Max Working Voltage	58.8 V (14S LiPo)
Foldable Propellers (R3390)	
Diameter × Pitch	33×9 in
Weight (Single propeller)	90 g

- **Spraying System**

- **Spray Tank**

Volume	Rated: 15 L, Full: 16 L
Operating Payload	Rated: 15 kg, Full: 16 kg

- **Nozzle**

Model	XR11001VS (Standard), XR110015VS (Optional, purchase separately)
Quantity	8
Max Spray Rate	XR11001VS: 3.6 L/min, XR110015VS: 4.8 L/min
Spray Width	4-6.5 m (8 nozzles, at a height of 1.5-3 m above crops)
Droplet Size	XR11001VS: 130-250 μ m, XR110015VS: 170-265 μ m (Subject to operating environment and spray rate)

Flow Meter	
Measurement Range	0.45-5 L/min
Error	< ±2%
Measurable Liquid	Conductivity > 50 µS/cm (Liquids such as water or pesticides that contains water)
• DBF Imaging Radar	
Model	RD2418R
Operating Frequency	SRRC (China)/ CE (Europe)/ FCC (United States): 24.00 GHz-24.25 GHz MIC (Japan)/ KCC (Korea): 24.05 GHz-24.25 GHz
Power Consumption	15 W
EIRP	SRRC: 13 dBm; MIC/ KCC/ CE/ FCC: 20 dBm
Altitude Detection & Terrain Follow*	Altitude detection range: 1-30 m Stabilization working range: 1.5-15 m Max slope in Mountain mode: 35°
Obstacle Avoidance System*	Obstacle sensing range: 1.5-30 m FOV: Horizontal: ±50°, Vertical: 0-10° Working conditions: Flying higher than 1.5 m over the obstacle at a speed lower than 7 m/s Safety distance: 2.5 m (Distance between the front of propellers and the obstacle after braking) Obstacle avoidance direction: Forward and backward obstacle avoidance depending on direction of flight.
IP Rating	IP67

* The effective radar range varies depending on the material, position, shape, and other properties of the obstacle.

• FPV Camera	
FOV	Horizontal: 98°, Vertical: 78°
Resolution	1280×960 30 fps
FPV Spotlight	FOV: 110°, Max brightness: 12 lux at 5 m of direct light
• Flight Parameters	
Operating Frequency	2.4000 GHz-2.4835 GHz 5.725 GHz-5.850 GHz*
EIRP	2.4 GHz SRRC/ CE / MIC/ KCC: < 20 dBm, FCC/ NCC: < 26 dBm 5.8 GHz SRRC/ NCC/ FCC: < 26 dBm
Total Weight (Excluding battery)	18.5 kg
Standard Takeoff Weight	39.5 kg
Max Takeoff Weight	40.5 kg (At sea level)
Max Thrust-Weight Ratio	2.05 (Takeoff weight of 39.5 kg)
Hovering Accuracy (With strong GNSS signal)	D-RTK enabled: Horizontal: ±10 cm, Vertical: ±10 cm D-RTK disabled: Horizontal: ±0.6 m, Vertical: ±0.3 m (Radar module enabled: ±0.1 m)
RTK / GNSS Operating Frequency	RTK: GPS L1/L2, GLONASS F1/F2, BeiDou B1/B2, Galileo E1/E5 GNSS: GPS L1, GLONASS F1, Galileo E1
Battery	DJI-approved battery pack (AB2-17500mAh-51.8V)
Max Power Consumption	5600 W
Hovering Power Consumption	4600 W (Takeoff weight of 39.5 kg)
Hovering Time**	18 min (Takeoff weight of 24.5 kg with a 17500 mAh battery) 10 min (Takeoff weight of 39.5 kg with a 17500 mAh battery)
Max Tilt Angle	15°
Max Operating Speed	7 m/s
Max Flying Speed	10 m/s (With strong GNSS signal)
Max Wind Resistance	8 m/s
Max Service Ceiling Above Sea Level	2000 m
Recommended Operating Temperature	0° to 40° C (32° to 104° F)

• Remote Controller

Model	GL300N
Operating Frequency	2.4000 GHz-2.4835 GHz 5.725 GHz-5.850 GHz*
Effective Transmission Distance (Unobstructed, free of interference)	SRRC/ MIC/ KCC/ CE: 3 km, NCC/ FCC: 5 km
EIRP	2.4 GHz SRRC/ CE / MIC/ KCC: < 20 dBm, FCC/ NCC: < 26 dBm 5.8 GHz SRRC/ NCC/ FCC: < 26 dBm
Display	5.5-inch screen, 1920×1080, 1000 cd/m ² , Android system, 4GB RAM + 16GB ROM storage
Power Consumption	16 W (Typical value)
Operating Temperature	-10° to 40° C (14° to 104° F)
Storage Temperature	Less than 3 months: -20° to 45° C (68° to 113° F) More than 3 months: 22° to 28° C (70° to 82° F)
Charging Temperature	5° to 40° C (40° to 104° F)

* To comply with local laws and regulations, this frequency is not available in some countries or regions.

**Hovering time acquired at sea level with wind speeds lower than 3 m/s.



• Remote Controller Intelligent Battery

Model	WB37-4920mAh-7.6V
Battery Type	2S LiPo
Capacity	4920 mAh
Voltage	7.6 V
Energy	37.39 Wh
Charging Temperature	5° to 40°C (40° to 104°F)

• Remote Controller Charging Hub

Model	WCH2
Input Voltage	17.3-26.2 V
Output Voltage and Current	8.7 V, 6 A
Operating Temperature	5° to 40°C (40° to 104°F)

• Remote Controller Power Adapter

Model	A14-057N1A
Input Voltage	100-240 V, 50/60 Hz
Output Voltage	17.4 V
Rated Power	57 W

T16 Intelligent Flight Battery (AB2-17500 mAh-51.8 V)

Model (AB2-17500mAh-51.8V)	
Capacity	17,500 mAh
Compatible Aircraft Models	DJI AGRAS™ T16
Compatible Battery Charger	2600W 4-Channel Intelligent Battery Charger
Voltage	51.8 V
Battery Type	Lithium Battery 14S
Energy	906 Wh
Net Weight	Approx. 6.0 kg
Operating Temperature Range	-5° to 45° C (23° to 113° F)
Charging Temperature Range	0° to 45° C (32° to 113° F)
Max Charging Power	2600 W
Charging Time*	Fast Charge: Approx. 20 mins; Slow Charge: Approx. 1 hr
Warranty Details	Advanced Version: 400 charge cycles or 12 months (whichever is sooner) Standard Version: 300 charge cycles or 9 months (whichever is sooner)

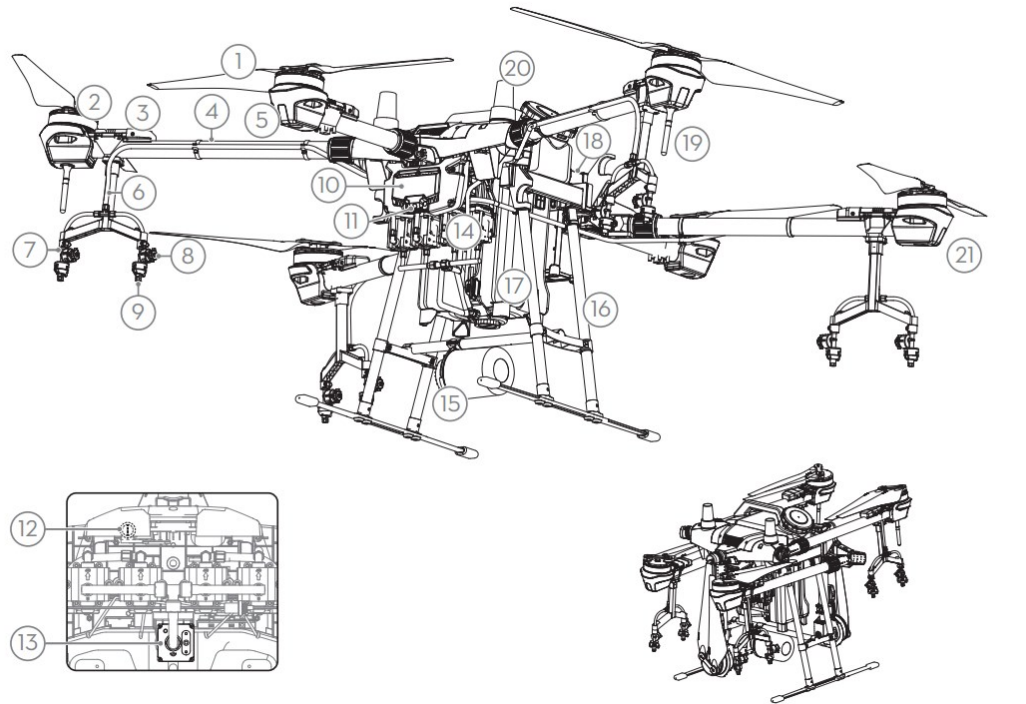
* Tested in a lab environment at a temperature of 25° C (77° F) using a 2600W 4-Channel Intelligent Battery Charger.

5 Overview



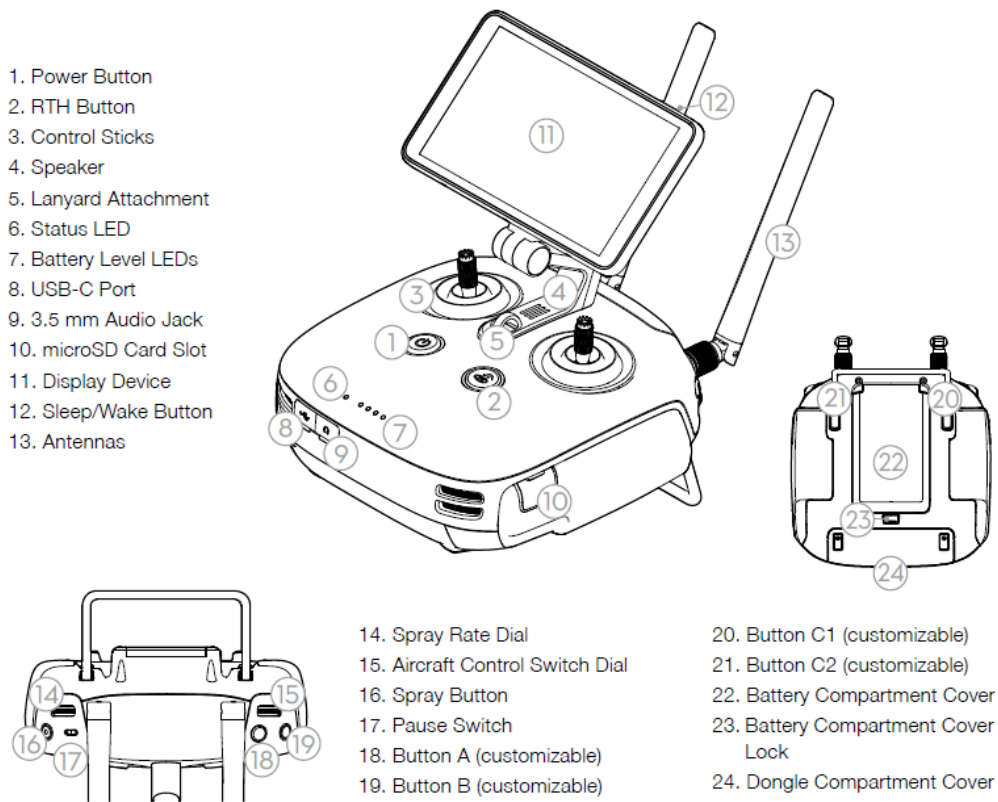
5.1 Diagram

5.1.1 Aircraft

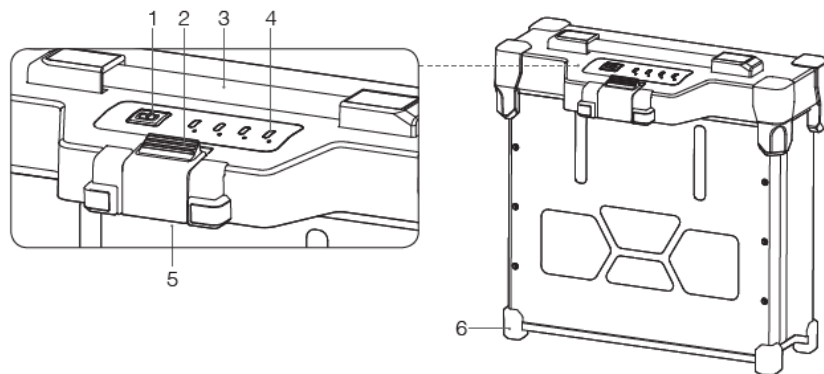


- | | | |
|--|---|---|
| 1. Propellers | 9. Nozzles | 16. Landing Gear |
| 2. Motors | 10. Aerial-Electronics System | 17. Spray Tank |
| 3. ESCs | 11. FPV Camera | 18. Battery Compartment |
| 4. Frame Arms | 12. USB-C Port (on the bottom of the aerial-electronics system, under the waterproof cover) | 19. OcuSync Antennas |
| 5. Aircraft Front LEDs (on the three front arms) | 13. Flow Meter | 20. Onboard D-RTK Antennas |
| 6. Hoses | 14. Delivery Pumps | 21. Aircraft Status Indicators (on the three rear arms) |
| 7. Sprinklers | 15. DBF Imaging Radar | |
| 8. Manual Relief Valve | | |

5.1.2 Remote Controller



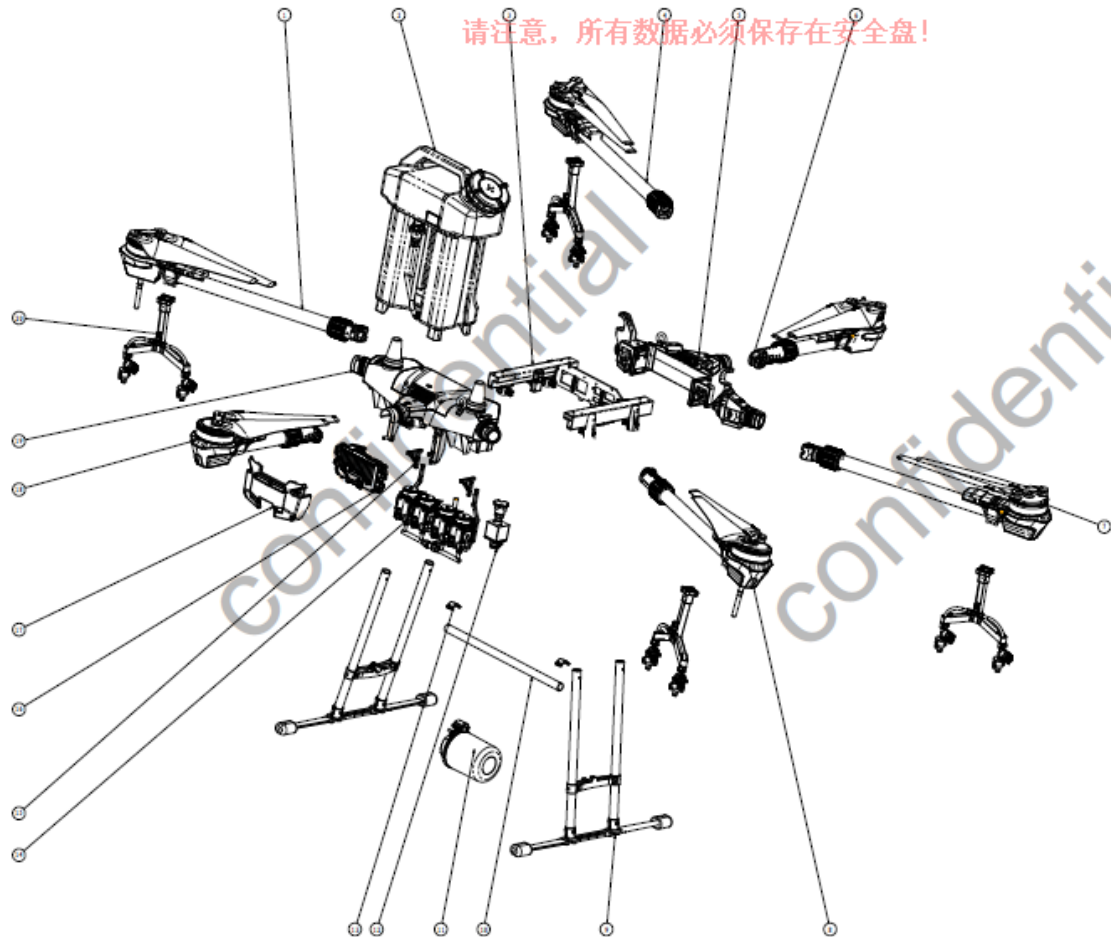
5.1.3 Battery



1. Power Button
Press to check the battery power level. Press and then press and hold to power on the battery. Only power the battery on and off when it is connected to the aircraft. Otherwise, the power ports on the battery and the aircraft will be damaged.
2. Clamp
Use the clamp to firmly attach the battery to the aircraft. Press the clamp to remove the battery from the aircraft.
3. Handle
Use the handle to carry the battery.
4. Status LEDs
Indicate the battery level. From left to right: LED 4, LED 3, LED 2, LED 1.
5. Power Port
Connects to an aircraft or battery charger.
6. Rubber Caps
Protects the battery.

Chapter 3 BOM and Repair Material

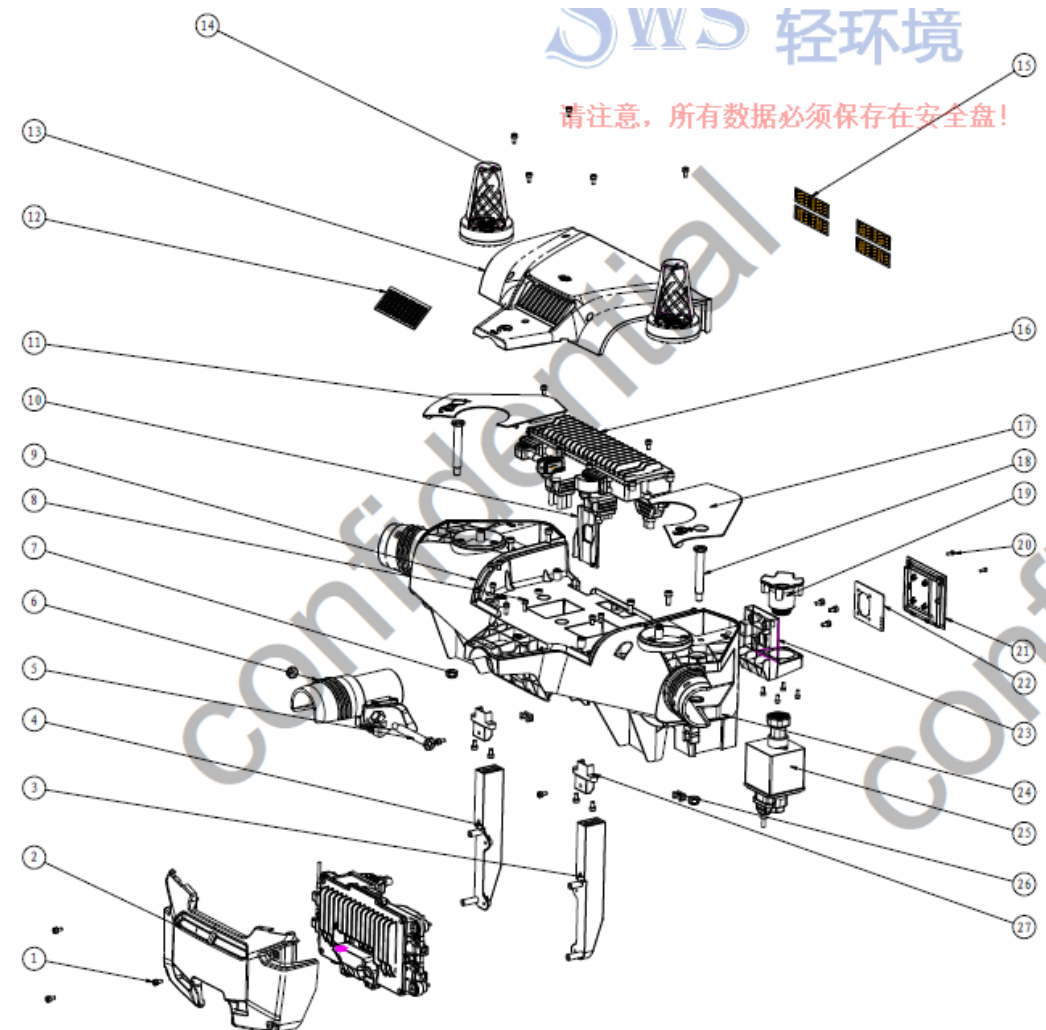
1. Aircraft BOM



Material List

No.	Material Number	Material Name	Quantity
10	YC.SJ.TG000113.03	Landing Gear-Crossbeam	1
11	BC.AG.SS000126.01	T16 Radar	1
12	BC.AG.SS000087.01	T16 Flowmeter	1
13	YC.WJ.ZZ002565.05	Landing Gear-Crossbeam Fixing	2
15	YC.WJ.ZZ002591.02	Delivery Pump-Bracket	2
16	BC.AG.SS000099.01	T16 Aerial-Electronics System Module	1
17	YC.SJ.WS002647.02	Aircraft_ Aerial-Electronics System Protection Cover_V2	1

2. Front Frame BOM



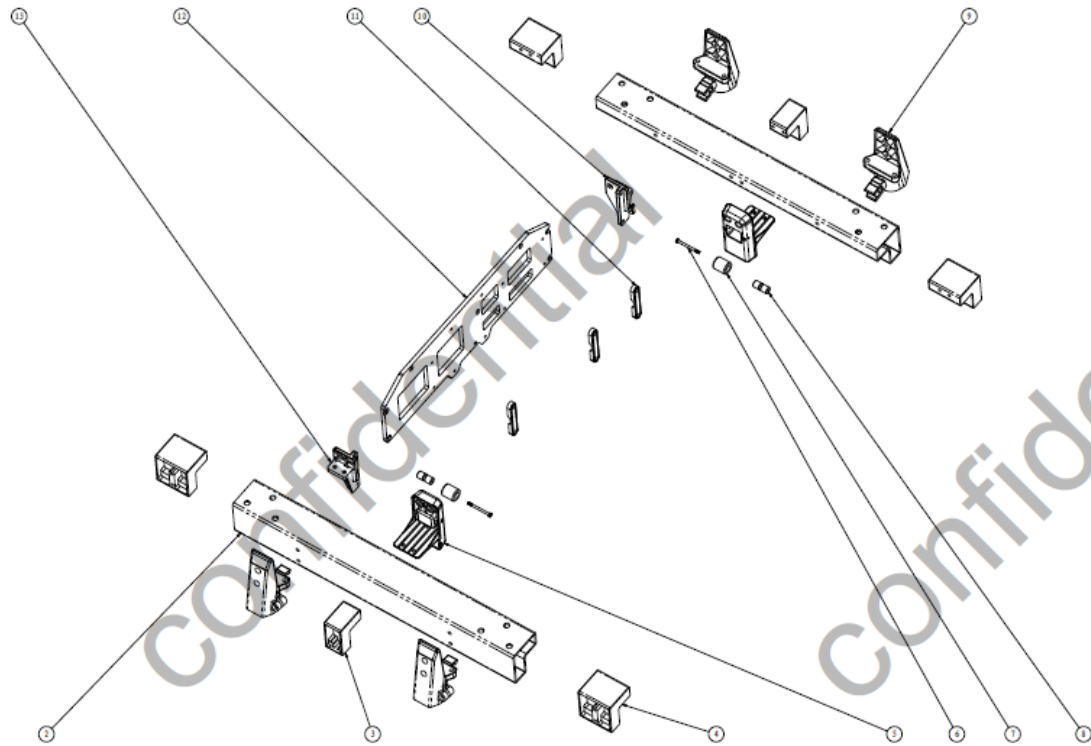
Material List

No.	Material Number	Material Name	Quantity
1	YC.WJ.L00870.02	M30-HC060060-55-85	28
3	YC.WJ.ZZ002578.04	Aircraft_Aerial-Electronics System Fixing Bracket (Left)__V4	1
4	YC.WJ.ZZ002576.04	Aircraft_Aerial-Electronics System Fixing Bracket (Right)__V4	1
5	YC.WJ.ZZ002901.02	Front Frame_Middle Arm Folding Pin_01	1
6	YC.SJ.WS002451.02	Aircraft_Front Frame Middle Arm Fixing Piece_V2	1
7	YC.WJ.LM000044.01	M60-HX100060-5103_01 Nut	3

For DJI Authorized Dealers Use Only

8	YC.WJ.L00868.02	M30-HC080080-55-85	4
9	YC.SJ.WS002449.04	Aircraft_Front Frame_V2	1
11	YC.SJ.WS002447.03	Aircraft_Front Frame Cover (Right)_V3	1
12	YC.SJ.MQ000075.02	Front Frame_Upper Cover Filter (Front)_02	1
13	YC.SJ.WS002452.03	Aircraft_Front Frame Upper Cover_V3	1
14	BC.AG.SS000103.01	RTK_Antenna Module	2
15	YC.SJ.MQ000076.02	Front Frame_Upper Cover Filter (Rear)_02	4
16	BC.AG.SS000114.01	T16 Spraying Board Module	1
17	YC.SJ.WS002450.03	Aircraft_Front Frame Arm Cover (Left)_V3	1
18	YC.WJ.ZZ002630.02	Airframe_Aircraft Arm Fixing Bolt_01	2
19	YC.SJ.WS002438.04	Spray Tank_One-Way Valve Frame Base_V4	1
23	YC.SJ.WS002494.02	Aircraft_Spray Tank Nozzle Bracket_V2	1
24	YC.WJ.ZZ002788.02	Frame_Long Fixing Bolt_01	1
25	BC.AG.SS000087.01	T16 Flowmeter	1
26	YC.SJ.WS002967.01	Rear Frame_Zip-Tie Base A_01	2
27	YC.WJ.ZZ002789.01	Aircraft_Front Frame Carbon Tube Reinforced Fixing Piece_01	2
28	YC.XJ.QT000366.01	Aircraft_Screw Holes Rubber Stopper B_01	2

3. Middle Frame Module BOM

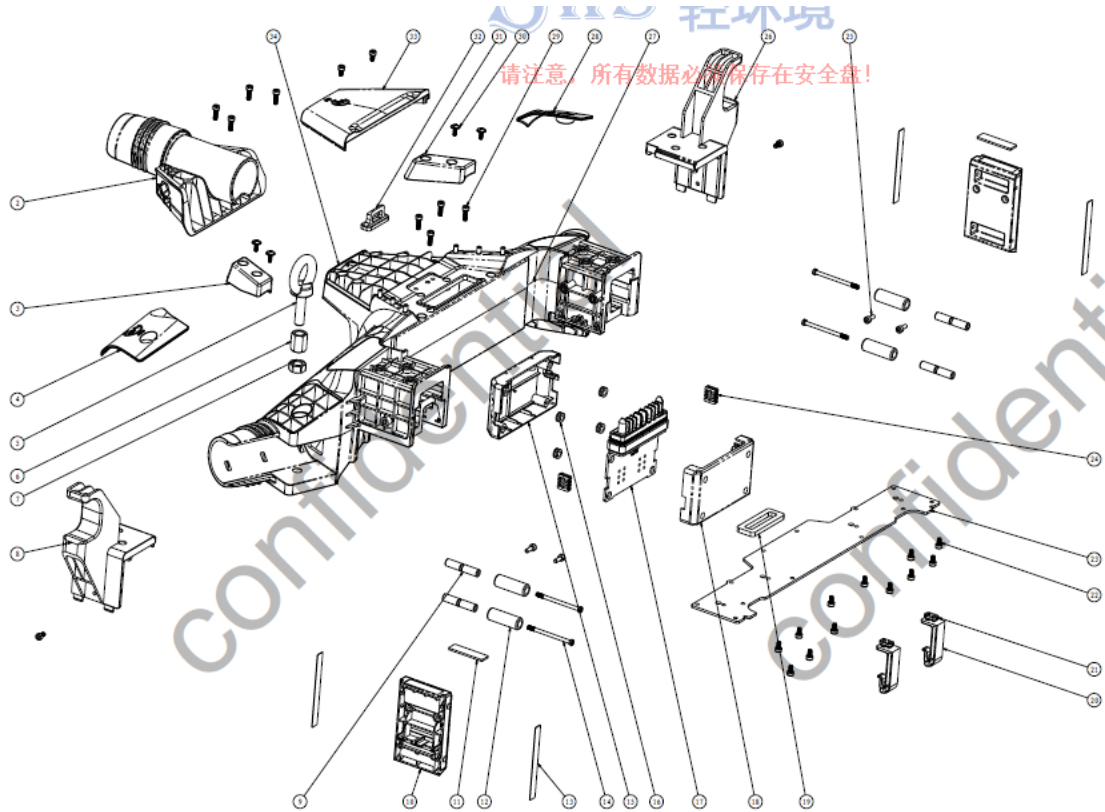


Material List

No.	Material Number	Material Name	Quantity
2	YC.SJ.TG000080.03	Frame_L-type Carbon Tube_03	2
3	YC.WJ.ZZ002629.02	Frame Carbon Tube_Internal Aluminum Block A_V2	2
4	YC.WJ.ZZ002625.02	Frame Carbon Tube_Internal Aluminum Block B_V2	4
5	YC.SJ.WS002486.02	Frame_Spray Tank Fixing Piece_01	2
6	YC.WJ.ZZ002618.02	Spray Tank Fixing Piece_Roller Shaft_01	2
7	YC.XJ.QT000247.01	Spray Tank Fixing Piece_External Roller_01	2
8	YC.SJ.WS002500.02	Spray Tank Fixing Piece_Internal Roller_01	2
9	YC.WJ.ZZ003213.01	Landing Gear_Support Rod_01	4
10	YC.WJ.ZZ002621.02	Frame_Frame Carbon Fixing Piece_V2	1
11	YC.SJ.WS002620.02	Frame_Spray Tank Limit Cable Clamp_02	3
12	YC.SJ.TB000089.01	Frame_Frame Fixing Carbon Board	1
13	YC.WJ.ZZ003200.01	Frame_Carbon Board Right Fixing	1

	Piece_01	
--	----------	--

4. Rear Frame Module BOM



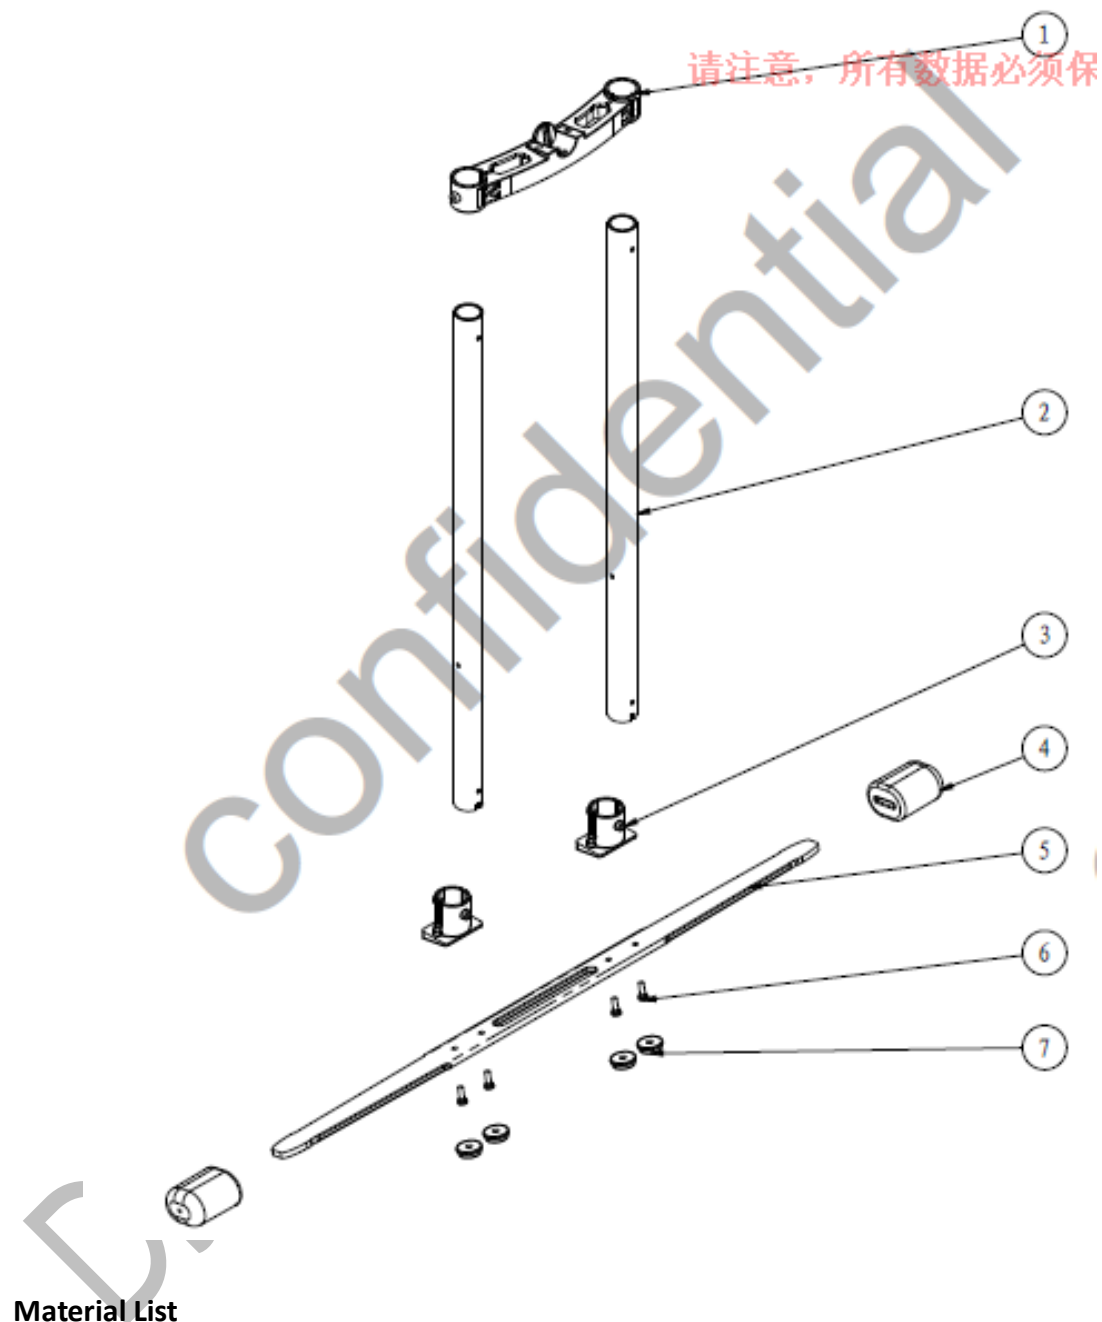
Material List

No.	Material Number	Material Name	Quantity
2	YC.SJ.WS002475.03	Rear Frame_Rear Frame Middle Arm Fixing Cover_V3	1
4	YC.SJ.WS002471.02	Rear Frame_Lateral Arm Upper Cover Left_V2	1
8	YC.SJ.WS002485.02	Rear Frame_Aircraft Arm Fixing Piece Left_01	1
9	YC.SJ.WS002499.02	Battery Fixing Piece_Internal Roller_01	4
10	YC.WJ.ZZ002617.02	Rear Frame_Battery Fixing Slider	2
12	YC.XJ.QT000246.01	Battery Fixing Piece_External Roller_01	4
14	YC.WJ.ZZ002624.02	Battery Fixing Piece_Roller Shaft_01	4
15	YC.SJ.WS002501.02	Power Distribution Board_Upper Cover_02	1

For DJI Authorized Dealers Use Only

17	BC.AG.SS000105.01	T16 Power Distribution Board (Including ESC Power Cable) 02	1
18	YC.SJ.WS002502.03	Power Distribution Board_Lower Cover_V3	1
20	YC.WJ.ZZ003653.01	Remote Controller Left Hook	1
21	YC.WJ.ZZ003652.01	Remote Controller Right Hook	1
22	YC.WJ.L00870.02	M30-HC060060-55-85	16
23	YC.SJ.TB000075.07	Rear Frame_Rear Frame Fixing Carbon Board	1
24	YC.SJ.WS002620.02	Frame_Spray Tank Limit Cable Clamp_02	2
25	YC.WJ.L00868.02	M30-HC080080-55-85	4
26	YC.SJ.WS002481.02	Rear Frame_Aircraft Arm Fixing Piece Right_01	1
28	YC.SJ.WS002483.02	Rear Frame_Rear Frame Lateral Arm Upper Cover Right_V2	1
29	YC.WJ.L00871.02	M30-HC100100-55-85	8
30	YC.WJ.LL000142.01	T25-HCW08000800-800200-5103-N	4
32	YC.WJ.ZZ002802.03	Rear Frame_Battery Buckle_01	1
34	YC.SJ.WS002478.04	Rear Frame_V4	1

5. Landing Gear BOM

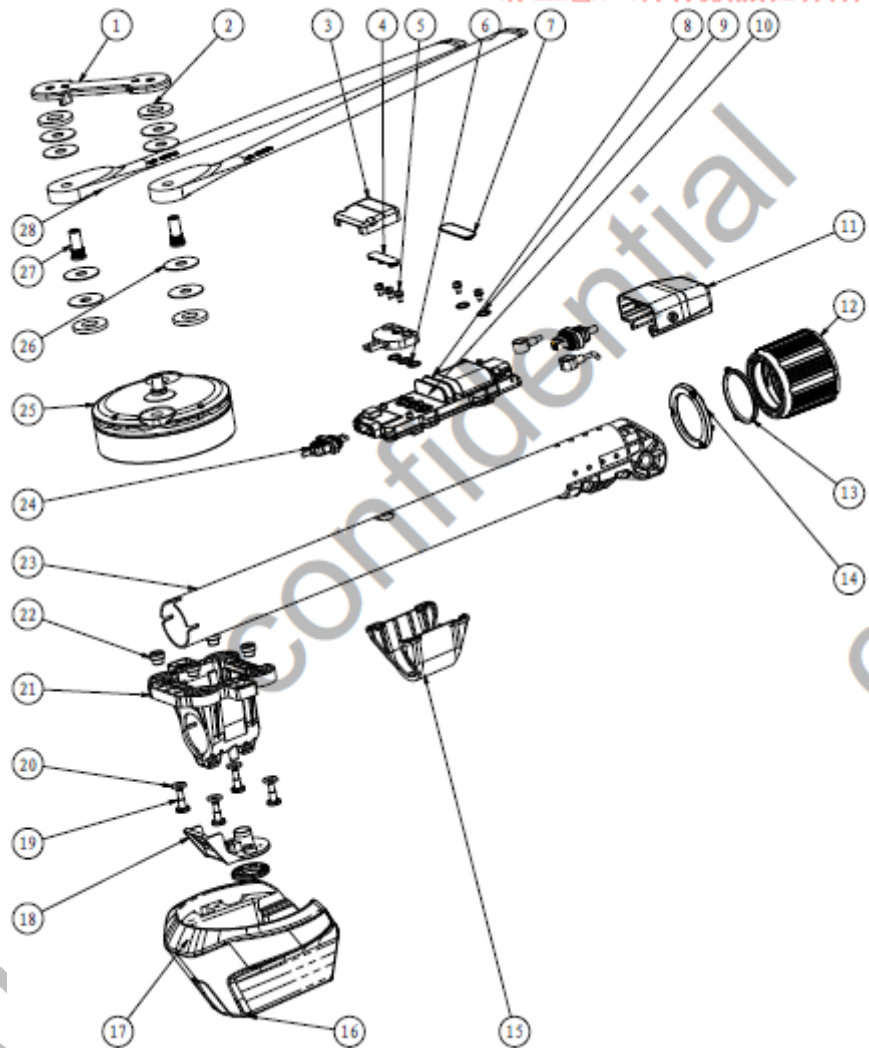


Material List

No.	Material Number	Material Name	Quantity
1	YC.SJ.WS002432.03	Landing Gear_Crossbeam	1
2	YC.SJ.TG000111.02	Landing Gear_Vertical Tube_V3	2
3	YC.SJ.WS002643.01	Landing Gear_Y-Tee Part_01	2
4	YC.SJ.WS002503.02	Landing Gear_Glass Fiber Rubber Sleeve_V2	2
5	YC.SJ.WS002431.04	Landing Gear_Support Rod	1

7	YC.XJ.QT000370.02	Landing Gear_Cushion Pad	4
---	-------------------	--------------------------	---

6. Short Aircraft Arm BOM

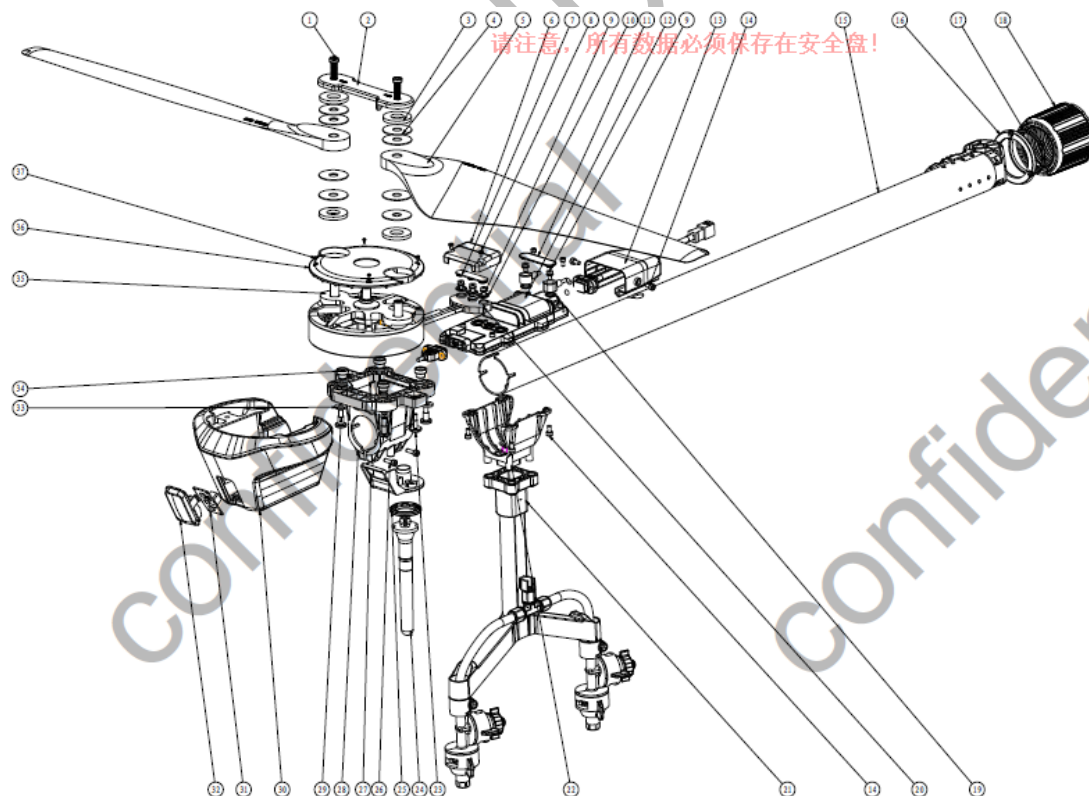


No.	Material Number	Material Name	Quantity
1	YC.WJ.ZZ002792.06/ YC.WJ.ZZ002794.06	Aircraft Arm_R3395 Propeller Adapter CCW/ Aircraft Arm_R3395 Propeller Adapter CW	2
3	YC.SJ.WS002415.03	Aircraft Arm_Motor Protection Cover_V3	1
5	YC.WJ.LL000244.01	M30-HCW00600060-055020-5103-N_01	5
11	YC.SJ.WS002831.02	ESC_Protection Cover_02	1
12	YC.SJ.WS002496.02	Aircraft Arm_Thread Locking Sleeve_02	1

For DJI Authorized Dealers Use Only

13	YC.XJ.QT000242.03	Aircraft Arm_Thread Locking Sleeve Sealing Ring_V3	1
14	YC.SJ.WS002495.02	Aircraft Arm_Thread Locking Sleeve Cover Plate_02	1
15	YC.SJ.WS002824.01	Short Aircraft Arm_Spray Lance Bracket_01	1
16	YC.QT.QT000024.04	Motor Protection Cover	1
18	YC.SJ.WS002640.05	Spray Lance Fixing Piece A	1
19	YC.WJ.LL000243.01	M40-HC01500075-100020-5103-N_01	4
21	YC.SJ.WS002380.03	Motor Fixing Base	1
23	YC.SJ.WS002405.06	Front & Rear Aircraft Arm V6	1
25	BC.AG.SS000095.01	Delivery Pump Motor	2

7. Long Aircraft Arm BOM



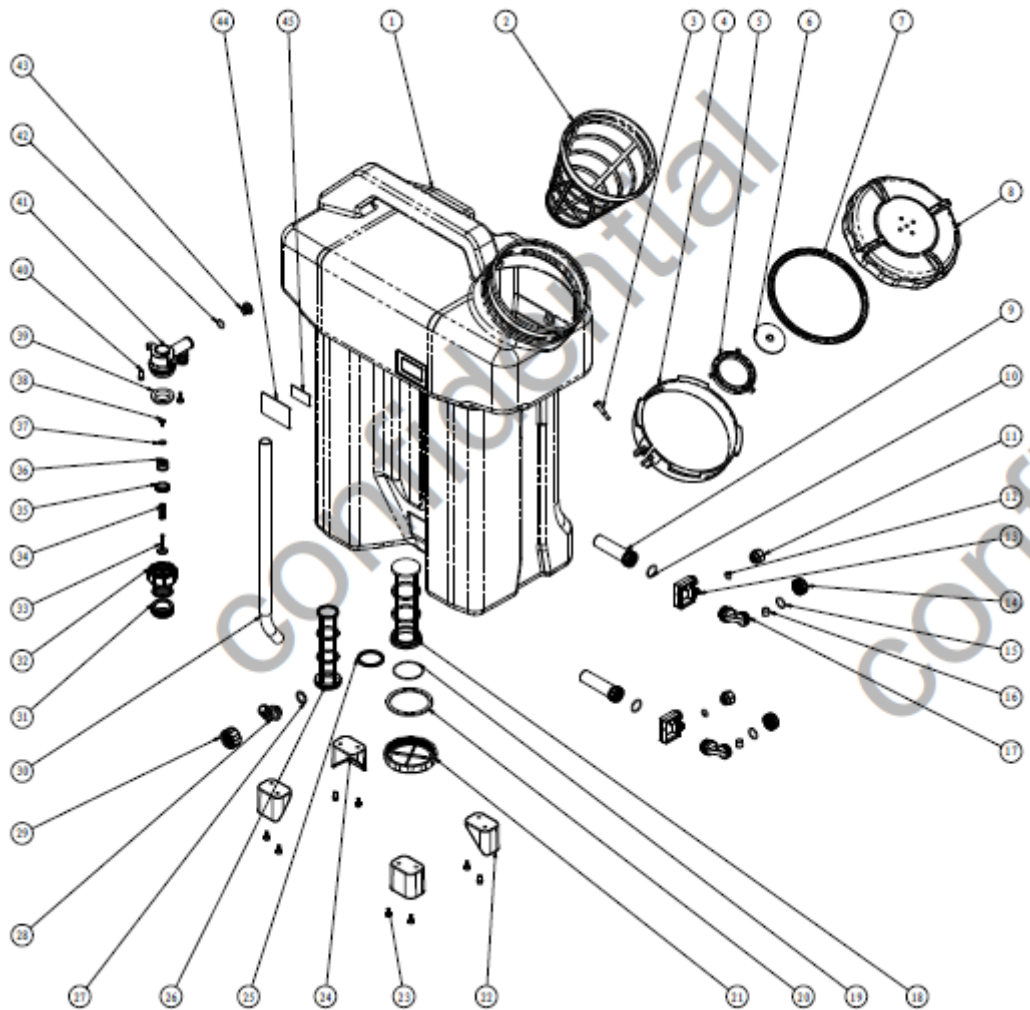
Material List

No.	Material Number	Material Name	Quantity
-----	-----------------	---------------	----------

For DJI Authorized Dealers Use Only

2	YC.WJ.ZZ002792.06/ YC.WJ.ZZ002794.06	Aircraft Arm_R3395 Propeller Adapter CCW/ Aircraft Arm_R3395 Propeller Adapter CW	1
6	YC.SJ.WS002415.03	Aircraft Arm_Motor Protection Cover_V3	1
8	YC.WJ.LL000138.01	M25-HC00400040-050020-0003-N	2
9	YC.WJ.LL000244.01	M30-HCW00600060-055020-5103-N_01	5
12	BC.AG.SS000106.01	T16 ESC Module	1
13	YC.SJ.WS002831.02	ESC_Protection Cover_02	1
14	YC.WJ.L00870.02	M30-HC060060-55-85	6
15	YC.SJ.TG000080.03	Aircraft Frame_L-Type	1
18	BC.AG.SS000107.01	Aircraft Arm_Thread Sleeve	1
22	YC.SJ.WS002621.03	Spray System_Supporting Rod	1
23	YC.WJ.LL000138.01	M25-HC00400040-050020-0003-N	2
24	YC.DZ.AA000086.02	SDR_Antenna V2	1
25	YC.SJ.WS002532.02	SDR Antenna Fixing Base_02	1
26	YC.WJ.L00871.02	M30-HC100100-55-85	2
27	YC.SJ.WS002640.05	Spray Lance Fixing Piece A	1
28	YC.SJ.WS002380.03	Motor Fixing Base	1
29	YC.WJ.LL000243.01	M40-HC01500075-100020-5103-N_01	4
30	YC.QT.QT000024.04	Motor Protective Cover	2
31	BC.AG.SS000109.01	Beacon Board (includes Aircraft Front LEDs and Aircraft Status Indicators)	1
35	BC.AG.SS000108.01	10015 Motor	1
36	YC.SJ.WS002379.04	Rotor Cover	1

8. Spray Tank BOM

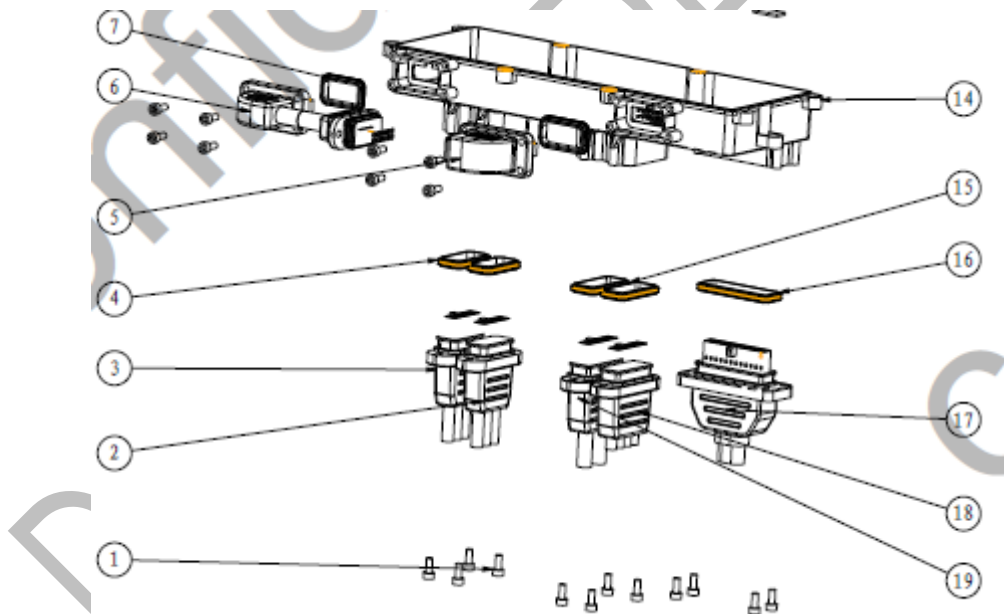


Material List

No.	Material Number	Material Name	Quantity
1	YC.SJ.WS002391.05	Spray Tank	1
2	YC.SJ.WS002504.03	Spray Tank_Intake Filter	1
3	YC.WJ.LL000211.01	M30-HC02050080-070020-5103-Y_01	1
4	YC.SJ.WS002423.02	Spray Tank Cover Ring_V2	1
5	YC.SJ.WS002421.02	Spray Tank Cover Ventilation Locking Cover	1
8	YC.SJ.WS002418.04	Spray Tank Upper Cover	1
18	YC.SJ.W01123.01	Spray Tank 50 Holes Filter	1

21	YC.SJ.WS002420.04	Spray Tank Lower Cover_V4	1
22	YC.SJ.WS002434.02	Spray Tank Front Rubber Pad	2
23	YC.WJ.L00870.02	M30-HC060060-55-85	8
24	YC.SJ.WS002437.02	Spray Tank Rear Rubber Pad	2
26	YC.SJ.W01124.01	Spray Tank 100 Holes Filter	1
28	YC.SJ.WS002417.02	Spray Tank Outlet	1
29	YC.SJ.WS002422.02	Spray Tank Outlet Locking Nut	1
30	BC.AG.SS000153.01	Hoses (10 m)	1
40	YC.WJ.L00868.02	M30-HC080080-55-85	2
41	YC.SJ.WS002441.03	Spray Tank One-Way Valve Mounting Base_V3	1

9. Spraying Module and Cables BOM



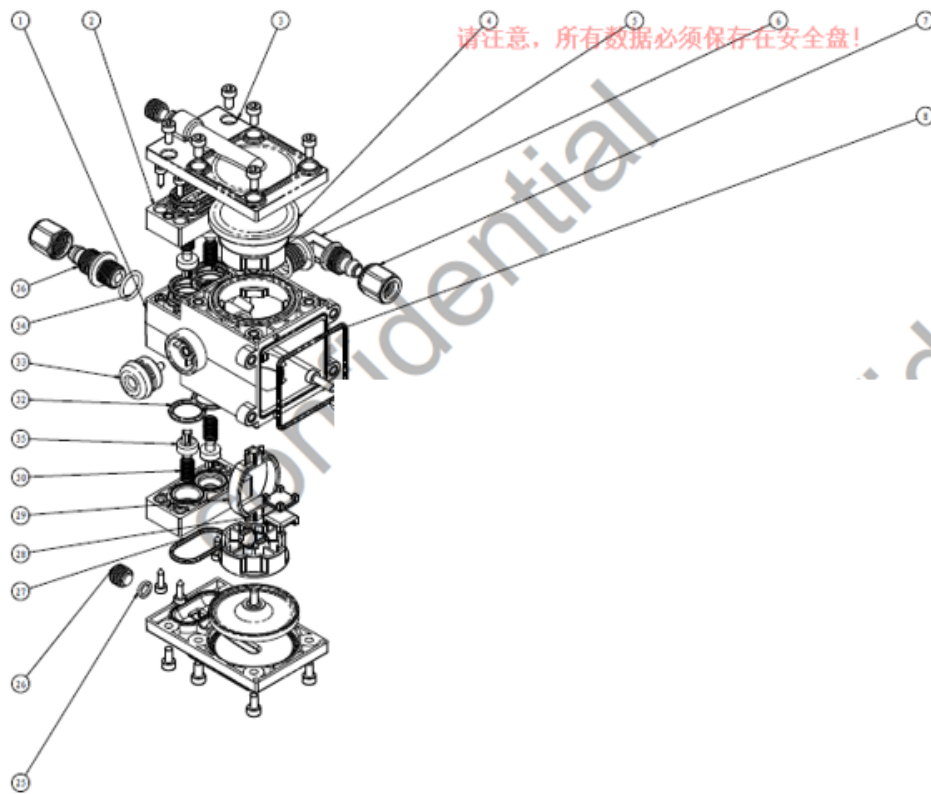
Material List

No.	Material Number	Material Name	Quantity
1	YC.WJ.L01148.00	M2.5*8 Stainless Steel Hexagon Socket Screw	20
2	YC.XC.XX000356.05	Spraying Board_Signal Cable A Connecting the Spraying Board and Propulsion ESC B_V5	1

For DJI Authorized Dealers Use Only

3	YC.XC.XX000355.04	Spraying Board_Signal Cable A Connecting the Spraying Board and Propulsion ESC A_V5	1
5	YC.XC.XX000322.05	Spraying Board_Liquid Lever Meter Cable_V5	1
6	YC.XC.DD000235.03	Radar_12 Pin Power Cable_V3	1
17	YC.XC.DD000231.04	Aerial-Electronics System_Main Power Cable_V4	1
18	YC.XC.XX000321.04	Spraying Board_Pump Cable_04	1
19	YC.XC.DD000254.05	Spraying Board_Power Signal Cable Connecting the Power Distribution Board and Spraying Board_05	1

10.Delivery Pump Module BOM



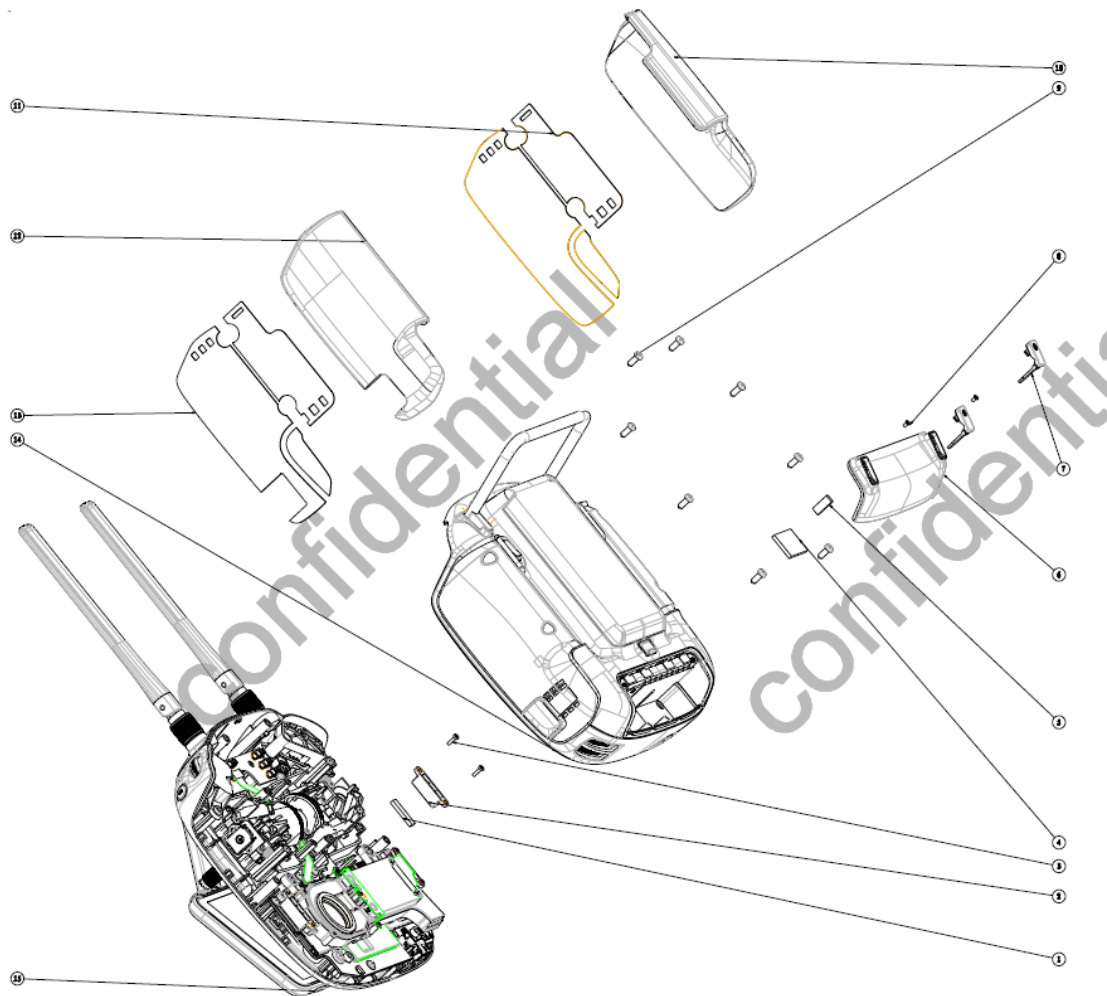
Material List

No.	Material Number	Material Name	Quantity
1, 6	BC.AG.SS000096.01	Delivery Pump Body	1
2	YC.SJ.WS002395.02	Delivery Pump_ Valve Seat_V2	2

For DJI Authorized Dealers Use Only

3	YC.SJ.WS002396.02	Delivery Pump_ Valve Cover_V2	2
4	YC.XJ.QT000230.02	Delivery Pump_ Diaphragm	1
5	YC.SJ.WS002397.03	Delivery Pump_ Diaphragm Supporting Piece_V3	2
7	YC.SJ.L00006.01	Quick-Mounting Connector Nut	2
9	YC.WJ.ZZ002592.02	Delivery Pump_Motor External Shell_V2	1
	BC.AG.SS000095.01	Delivery Pump Motor	1
26	YC.WJ.ZZ002699.02	Delivery Pump_Cover Screw_V2	2
29	YC.WJ.ZZ002594.03	Delivery Pump_Eccentric Wheel Bracket_V3	1
30	YC.WJ.TT000159.02	Delivery Pump_One-Way Valve Spring_V2	4
35	YC.SJ.J00840.01	Pump One-Way Valve Part 1	4

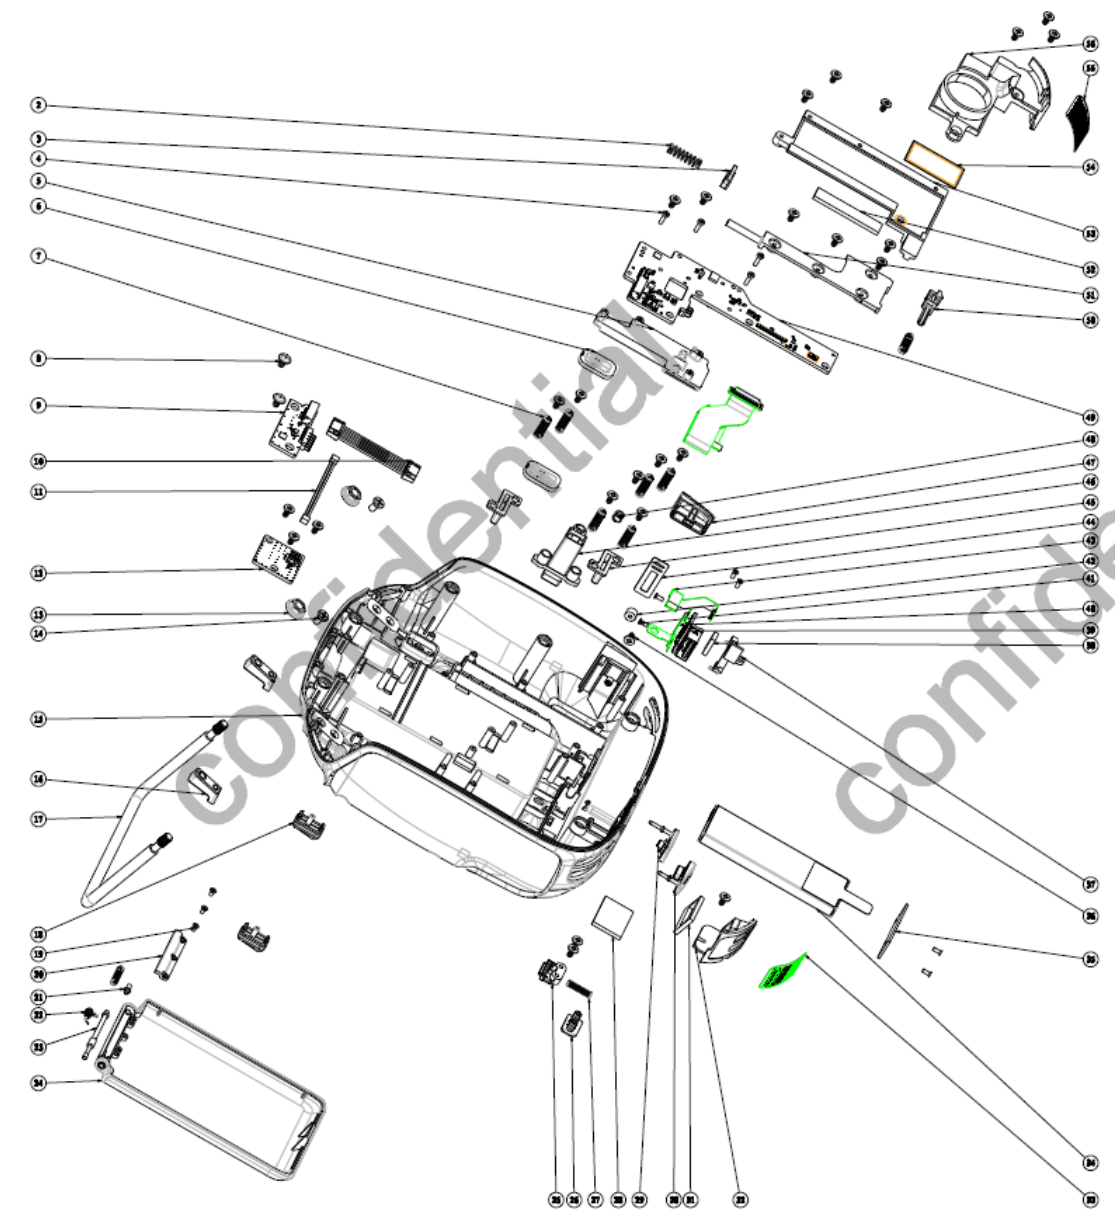
11. Remote Controller Front Shell Module



Material List

No.	Material Number	Material Name	Quantity
11	YC.SJ.WS000944.01	Remote Controller_Bottom Cover Back Adhesive_Right_01	1
13	YC.SJ.WS000943.01	Remote Controller_Bottom Cover Back Adhesive_Left_01	1

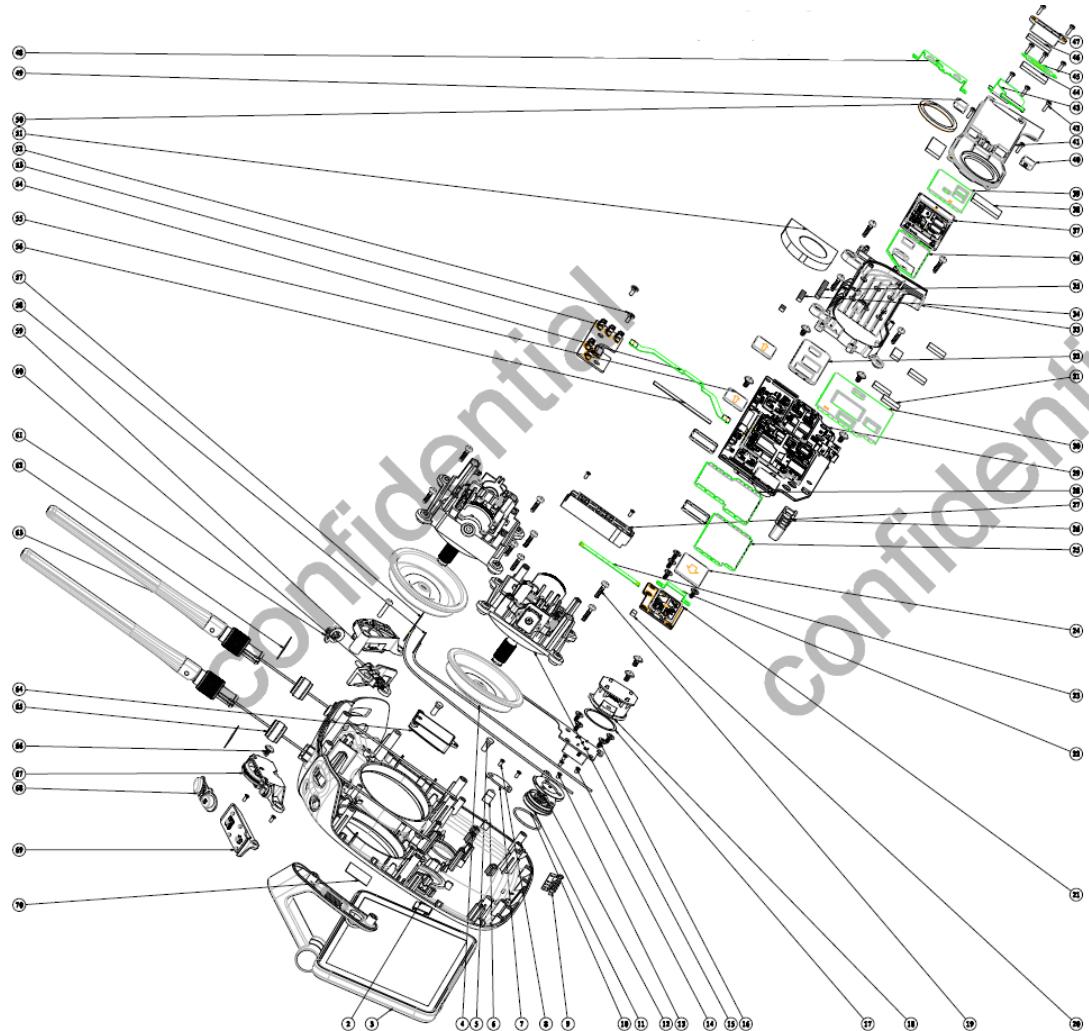
12.Remote Controller Bottom Cover



Material List

No.	Material Number	Material Name	Quantity
3	YC.SJ.WS000826.01	Remote Controller_Built-in Battery Slider_01	1
6	YC.SJ.JG000106.01	Remote Controller_C Button Silicone Rubber_01	1
34	YC.DZ.BB000025.01	Remote Controller Built-in Battery	1
49	BC.TP.SS000038.01	Remote Controller_Power Board	1

13.Remote Controller Upper Cover

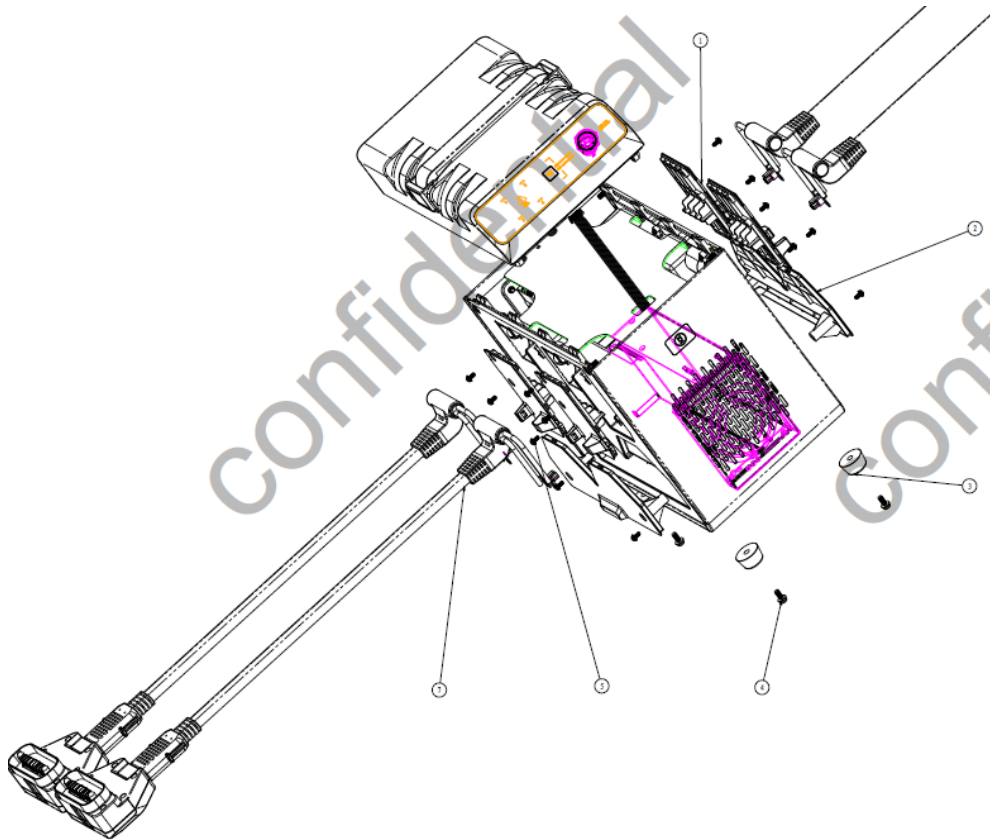


Material List

No.	Material Number	Material Name	Quantity
2	BC.TP.SS000049.01	Remote Controller_Upper Shell Board	1
3	BC.TP.SS000050.01	Remote Controller_Screen Module	1
15	BC.RM.S00002	Remote Controller Control Stick Module (Plastic)	2
21	BC.TP.SS000043.01	Remote Controller_Wi-Fi Board	1
29	BC.TP.SS000040.01	Remote Controller_Main Board	1
37	BC.TP.SS000041.01	Remote Controller_SDR Board	1
51	YC.DZ.AF000011.01	Fan	1

63	YC.DZ.A00309.02	Remote Controller_SDR Antenna	2
----	-----------------	-------------------------------	---

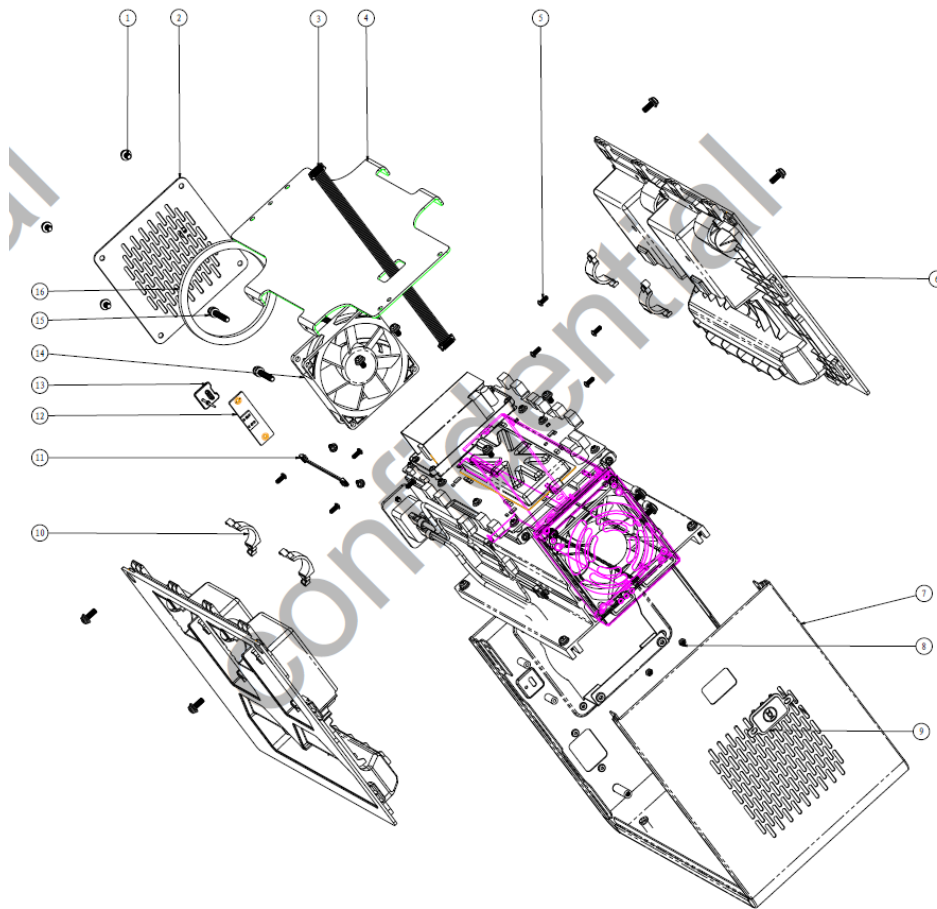
14.Charger 1



Material List

No.	Material Number	Material Name	Quantity
1	YC.SJ.WS002328.04	Charger Side Board C	4
3	YC.SJ.WS002365.01	Charger Bottom Pad	4
4	YC.WJ.LL000214.01	M4*12 Black Screw with Pad	12
5	YC.WJ.LL000215.01	M3*8 Black Screw with Pad	34
6	BC.AG.SS000128.01	TB16 Charger Plug	4
7	YC.XC.DD000227.01	Charger Battery Charging Cable	4

15.Charger 2

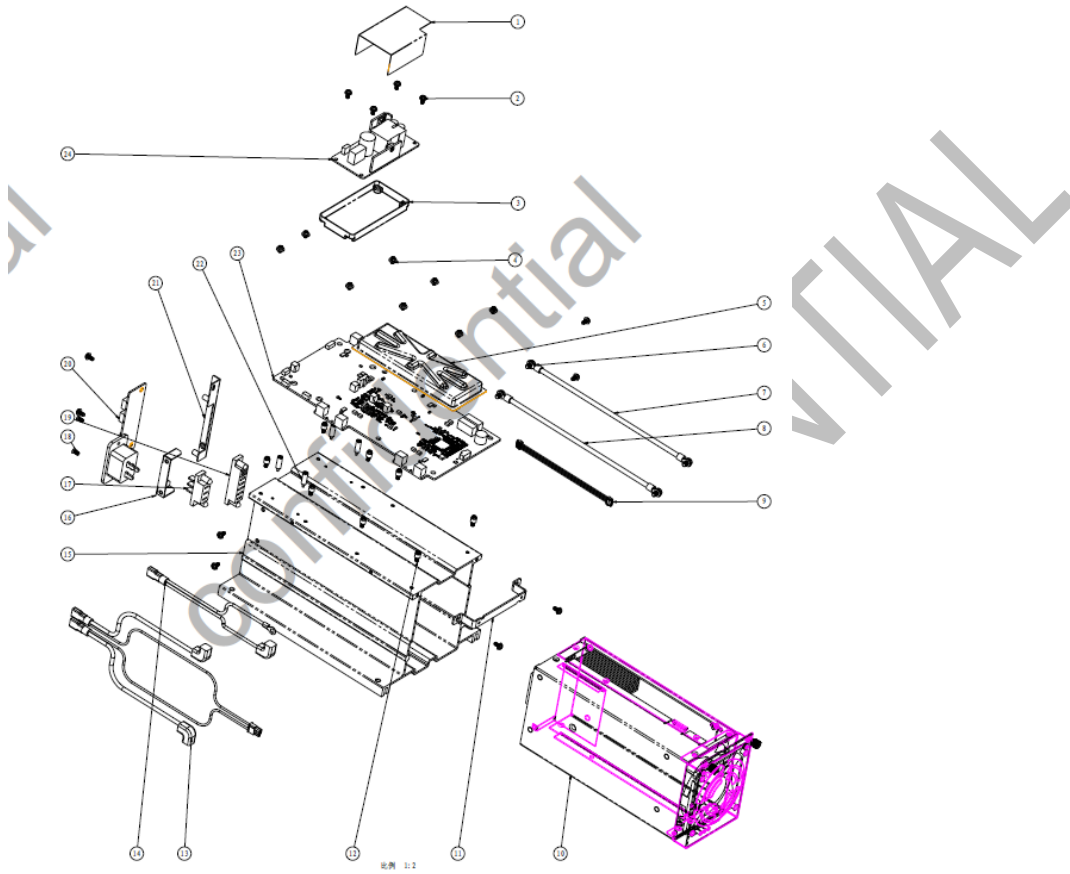


Material List

No.	Material Number	Material Name	Quantity
3	YC.XC.XX000334.01	Charger Button Boards Communication Cable	1
5	YC.WJ.LL000217.01	T30-PR00800080-055020-3125-Y_01	8
6	YC.SJ.WS002327.04	Charger Side Board A	2
7	YC.WJ.ZZ002485.04	Charger U-shaped Metal Frame	1
8	YC.WJ.LM000043.01	M3 Hexagon Nut (T=3.2 mm)	2
10	YC.SJ.WS002329.04	Charger Axis Shell B	4
11	YC.XC.XX000333.03	Four Cable Connecting Charger USB-Type C with Main Board	1
12	BC.AG.SS000122.01	Charger USB Update Adapter Board	1
13	YC.XJ.QT000175.03	Charger Type-C Silicone Rubber Stopper	1
14	YC.DZ.AF000026.01	Fan	1
15	YC.WJ.LL000218.01	M4*30 Black Screw with Pad	4

16	YC.PM.QT000098.01	Charger Fan's Sponge Sealing Ring	1
----	-------------------	-----------------------------------	---

16.Charger 3



Material List

No.	Material Number	Material Name	Quantity
1	YC.SJ.WS002745.01	Charger Auxiliary Power Insulating Sheet Upper Cover	1
2	YC.WJ.LL000215.01	M3*8 Black Screw with Pad	12
3	YC.SJ.WS002781.02	Charger Auxiliary Power Vacuum Thermoform Cover	1
5	YC.SJ.WS002335.02	Charger Main Board Anti-dust Vacuum Thermoform Cover	1
7	YC.XC.DD000238.02	Charger AC Power Output Cable (With Red Positive)	1
8	YC.XC.XX000365.02	Charger AC Power Output Cable (With Blue Negative)	1
9	YC.XC.XX000335.01	Adaptive Board Communication Cable	1

12	YC.WJ.ZZ002500.01	Charger Main Board Fixing Nut	8
13	YC.XC.DD000237.02	Charger AC Power Input Cable Positive & Negative Cable	1
18	YC.WJ.LL000219.01	M3 x 8 Black Screw	6
22	YC.WJ.ZZ002502.01	Charger_Auxiliary Power Board Supporting Nut	4
23	BC.AG.SS000118.01	Charger Management Main Board PCBA (including firmware)	1
24	YC.DZ.BC000036.01	Auxiliary Power Supply (12V)	1

Chapter 4 Operation Principles Diagram

1. Aircraft

The aircraft consists of the following six modules: aerial-electronics system, radar system, spray system, propulsion system, vision positioning system, and image transmission system. These six modules contain a total of 17 sub-modules.

1. Aerial-Electronics Board

The aerial-electronics board is the core module controlling the flight controller. It integrates the flight algorithm, image transmission, and flight controlling functions into one module. It manages the aircraft's resources.

2. Rotating Radar

The rotating radar is the obstacle avoidance module, and it serves as the sensor when the aircraft is flying. It detects front, lower, and rear obstacles, preventing aircraft crashes and injuries to people in unexpected accidents.

3. Spraying Board

The spraying board is the control system of the aircraft's core spraying function. It controls the pump and spraying volume.

4. Power Distribution Board

The power distribution board is a power transfer module that distributes the power to six motors.

5. Propulsion ESC Board

The ESC board converts the throttle information to the motor's rotation speed

information, controls the motor rotation, and provides overcurrent protection, etc.

Input Voltage	14S Maximum: 60 V
Input Power	58 V, 40 A
Maximum Current	120 A
Protection Function	Self-check, blocking protection, and short circuit protection
Protection Rating	IP67
Assembly Technology	The ESC shell is assembled and replaced independently. The motor and power cables are fixed with screws, and the signal and LED cables are attached with waterproof connectors.

6. LED Board

The LED board indicates the aircraft's current working condition. Users can know the aircraft's current working condition by the LED's color.

7. FPV Board

The FPV board transmits the camera information to the aerial-electronics board, moves the camera, and provides night illumination.

8. Barometer Board

The barometer board mainly measures the current air pressure signal and transmits the air pressure value to the aerial-electronics board.

9. Delivery Pump ESC Board

The delivery pump ESC board is the power system of the delivery pump. It controls the delivery pump motor rotation based on the signal of the spray board.

10. Liquid Level Meter

The liquid level meter tells the spraying board the dose information and reminds the user when it is necessary to add liquid.

11. Flow Meter

The flow meter is essential for high-precision spraying. It detects the pump's spraying speed and reports the information to the aerial-electronics board. In this way, the pump's spraying accuracy can be controlled.

12. RTK/GPS Board

The RTK Module provides the aircraft's location, direction, and speed information to the flight controller system. It ensures the aircraft's stability and operation accuracy.

13. Active Antenna Board

The active antenna board amplifies and adjusts the GPS weak signal to make the RTK/GPS board receive better satellite signals.

14. Propulsion Motor

The motors work with propellers to blow wind downwards and make the aircraft fly upwards. It also helps with spraying, so that the pesticide can penetrate more thoroughly.

15. Delivery Pump

The motors work with propellers to blow wind downwards and make the aircraft fly upwards. It also helps with spraying.

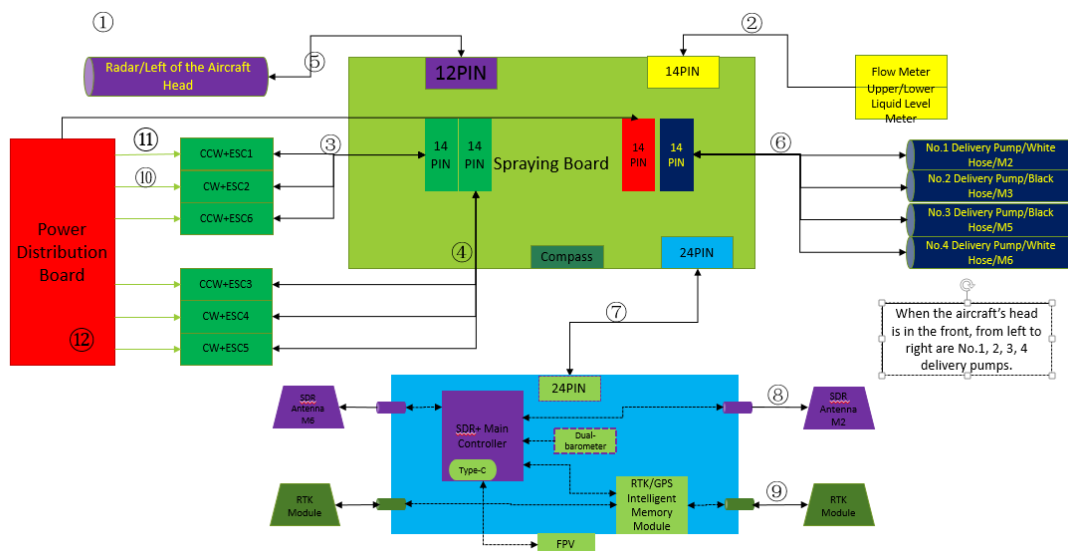
16. FPV

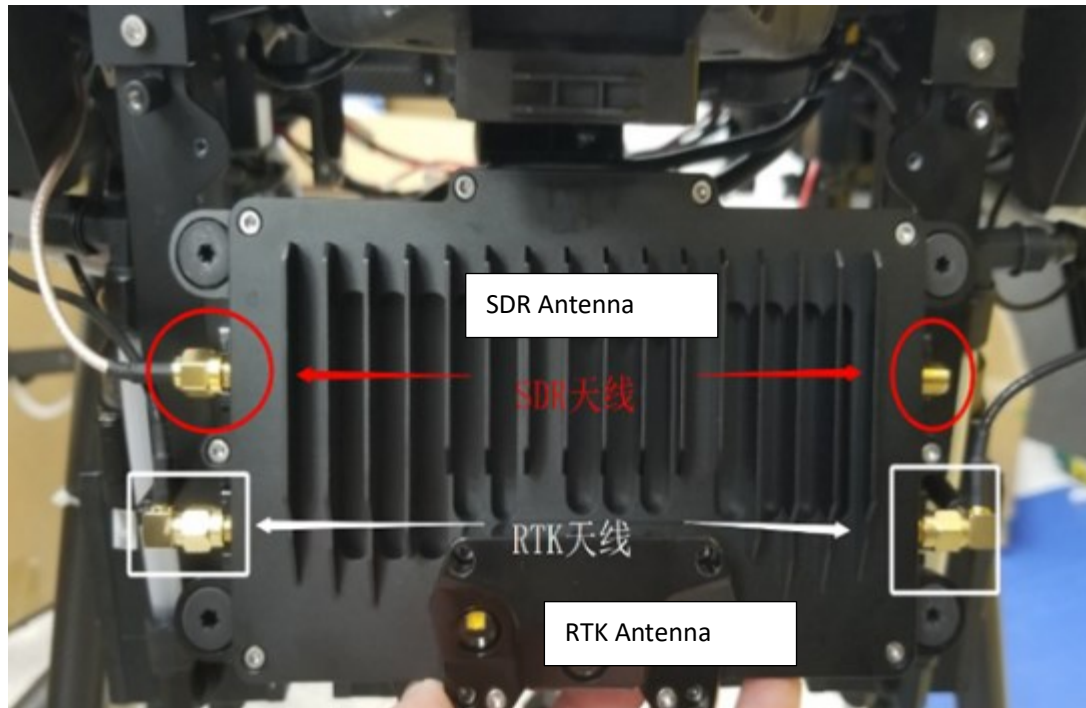
FPV, first person vision, is a camera module that converts optical signals into electrical signals and transmits them to the remote controller through image transmission.

17. Battery

The battery is the energy source of flying and spraying. It stores energy.

2. Diagram



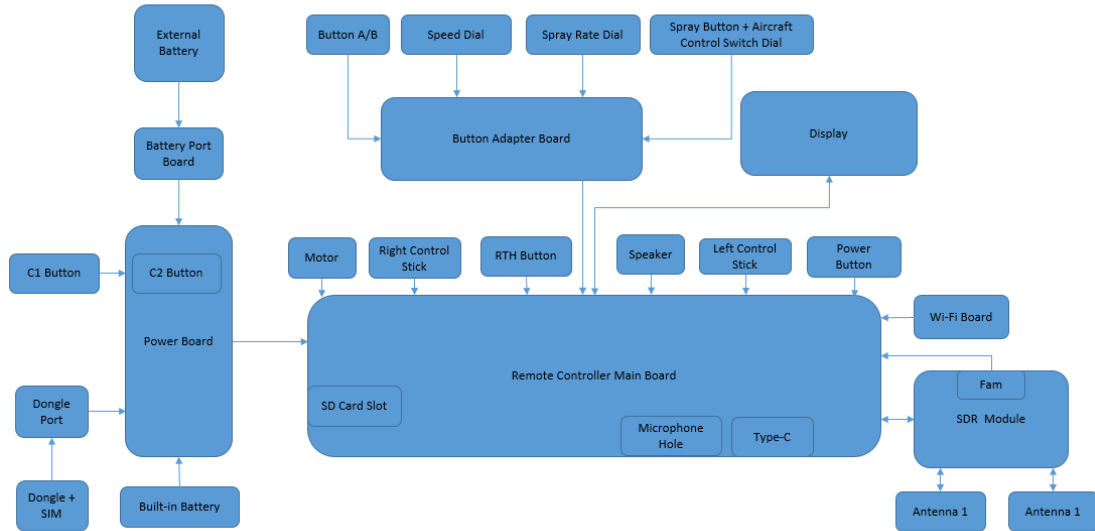


No.	Cable	Function	Material Number
1	Spraying Board_Power Signal Cable Connecting the Power Distribution Board and Spraying Board	Connects the power distribution board with the spraying board	YC.XC.DD000254.03
2	Spraying Board_Liquid Level Meter Cable	The spraying board connects the flow meter and liquid meter.	YC.XC.XX000322.03
3	AG410_Spraying Board_Signal Cable A Connecting the Spraying Board and Propulsion ESC	Connects the No.1, 2, and 6 motors to the spraying board (there are raised dots on the port).	YC.XC.XX000322.03
4	AG410_Spraying Board_Signal Cable B Connecting the Spraying Board and Propulsion ESC	Connects the No.3, 4, and 5 motors to the spraying board	YC.XC.XX000355.03
5	AG410_Radar_12 Pin Power Cable_V2	Connects the spraying board to the radar	YC.XC.DD000235.02
6	AG410_Spraying Board_Pump Cable_03	Connects the four pumps to the spraying board	YC.XC.XX000321.03

For DJI Authorized Dealers Use Only

7	AG410_Aerial-Electronics _Main Power Cable_V3		YC.XC.DD000231.03
8	RTK Antenna	Connects the aerial- electronics board to the RTK module.	YC.XC.TZ000067.03
9	OcuSync Antenna	The antenna is mounted on the arm, and it is linked to the aerial-electronics board.	
10	AG410_Barometer Power Cable	Connects the barometer to the main controller image transmission board	YC.XC.DD000229.02
11	FPV Flat Cable	Connects the FPV board to the main controller image transmission board	BC.AG.PP000012.03
12	AG410_Power Module_ESC Cable A_03	4	YC.XC.XX000359.03
13	AG410_Power Module_ESC Cable B_03	2	YC.XC.XX000358.03

3. Remote Controller



Remote Controller Main Board

- Processes all input and output signals of the remote controller.
- Controls the remote controller power supply and charging.

Adapter Board

- Contains buttons and dials.

Wi-Fi Board

- Controls the remote controller wireless network function

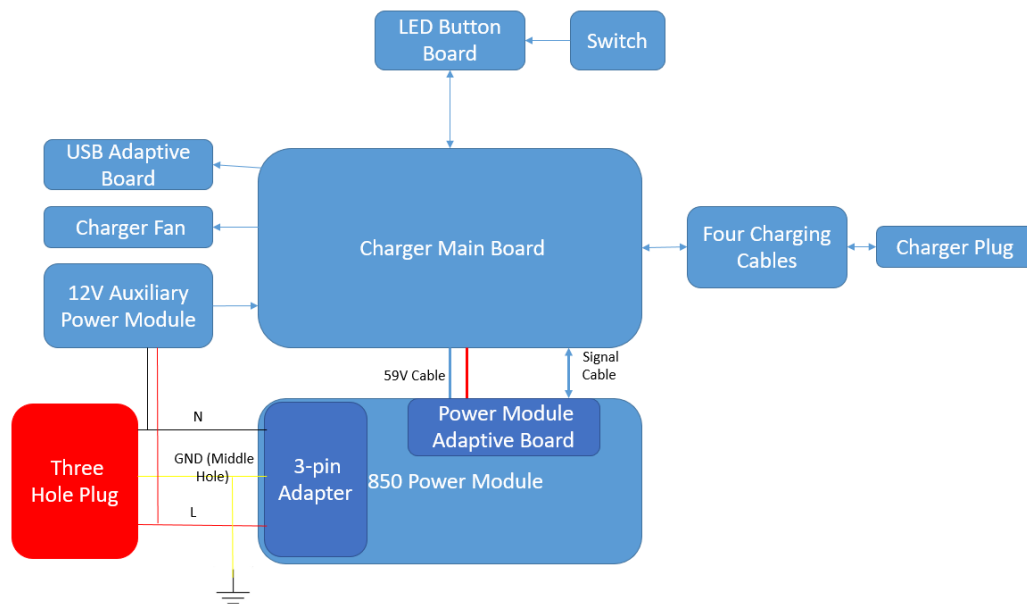
SDR Board

- Controls the remote controller image transmission function

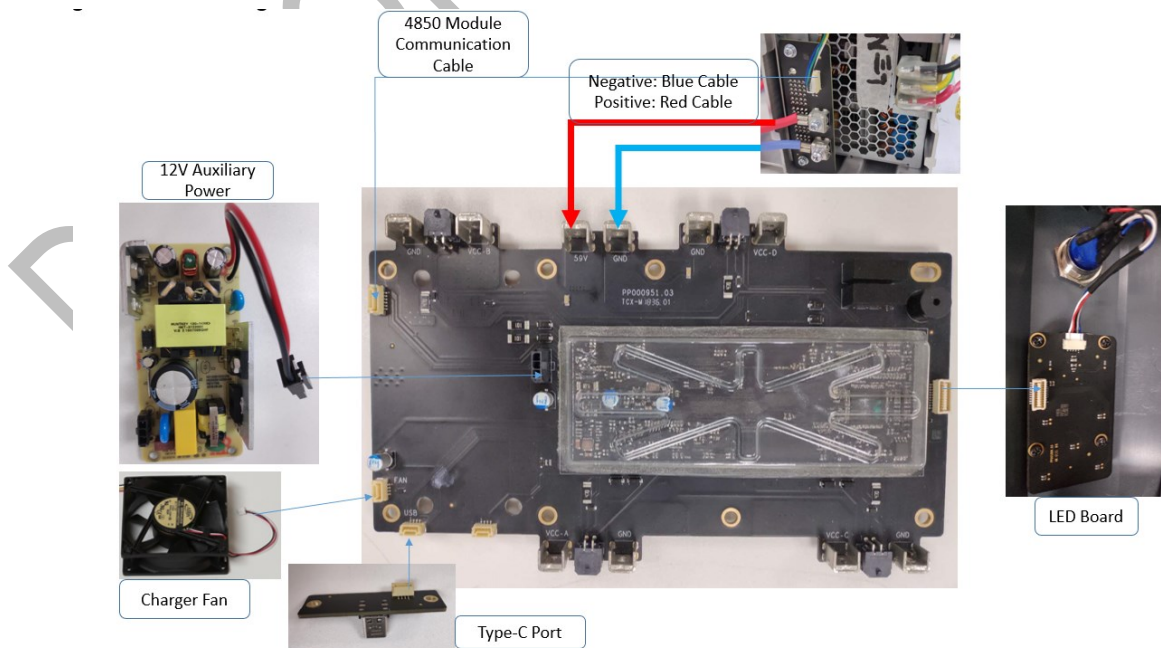
Power Board

- Power processing module

4. Charger



1. **Charger management main board:** Communicates with the battery; manages and controls the four output ports for charger fast charging, slow charging, and determines which battery is charged first; controls the color of LEDs based on the charging situation and charger status; communicates with the computer via USB port board; exports error logs; connects to the computer for updates; communicates with the 4850 power module and manages the 4850 power module output.

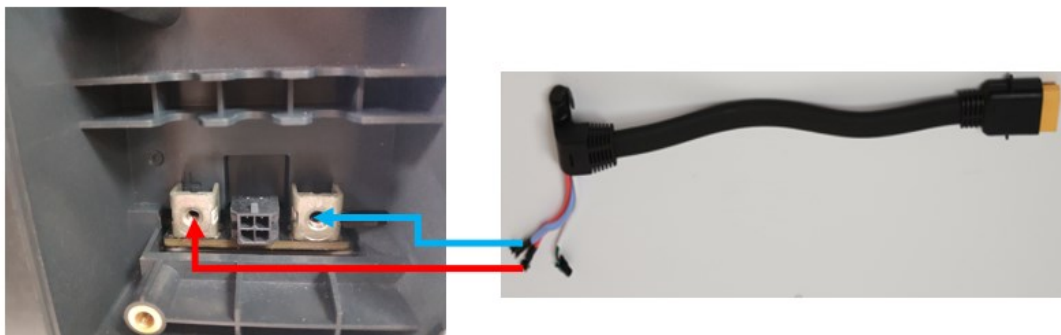


2. **4850 power module:** Transfers electric supply power to 59V DC power supply; charges the battery and communicates with the charger management main board; torque of red cable

and blue cable: 5.0-5.5Kgf.cm

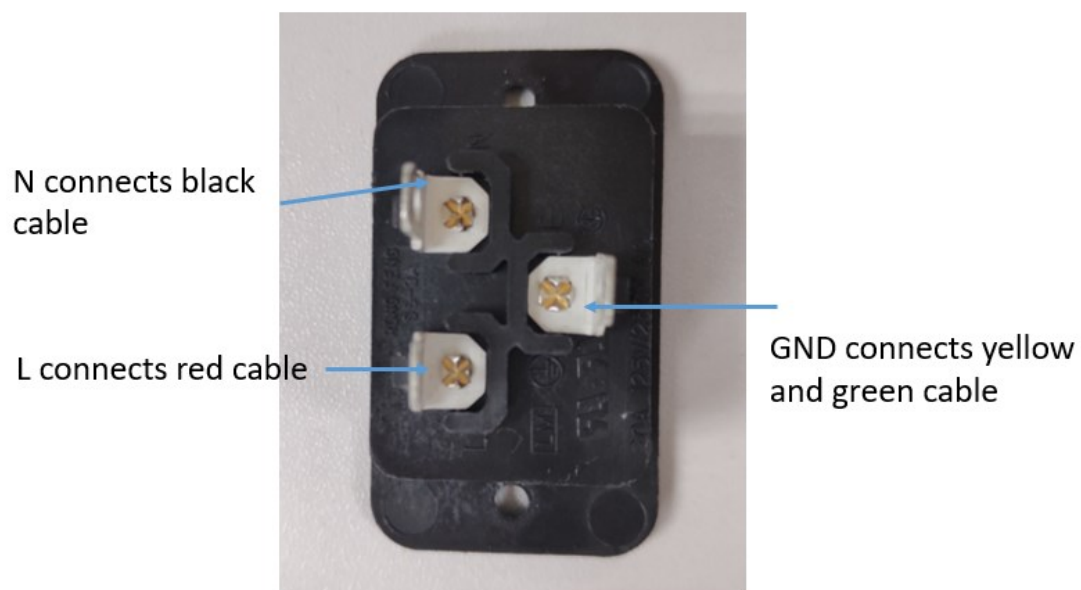


3. Auxiliary power source: Transfers electric supply power to the 59V DC power supply and supplies power to the charger management main board.
4. Battery charging port: Port connecting the charger management main board and battery; provides charging voltage and communication. Connects the red cable to the left small screw hole (positive hole). There is "+" in the port. Connects the blue cable to the right large screw hole (negative hole). There is "-" in the port. The signal cable is connected to the middle port. Torque for connecting the cable: 5.0-5.5 Kgf.cm



5. LED board: Connects the switch; transfer the switch and main board; there are seven LEDs on the board, indicating charging status of each individual port, warning, and fast/slow charging display.
6. Fan: Cool down the charger.
7. USB port adaptive board: Adapts the USB port to the main board.
8. Three-hole plug: Fire wire has an "L" mark, called the Live Wire; zero line has an "N" mark, called the Naught Wire. Another cable is earth wire, and the color is yellow and green for security.




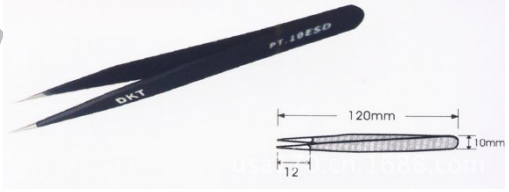
If the cables are connected incorrectly, the product may not work, or produce shock hazard.

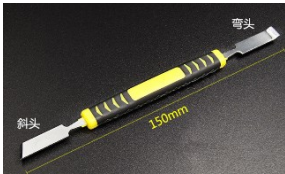


DJI CONFIDENTIAL

Chapter 5 Disassembly and Assembly

1. Tools

Tool	Specifications/Picture	
3.0 mm Hexagonal Socket Screwdriver	 3.0 mm 95.5mm 6mm	
2.5 mm Hexagonal Socket Screwdriver	 2.5 mm 91mm	
2.0 mm Hexagonal Socket Screwdriver	 2 mm 81.5mm	
1.5 mm Hexagonal Socket Screwdriver	 1.5 mm 78mm	
Phillips Screwdriver		
Tweezers (Metal)	 120mm 10mm 12	
Long Nose Pliers		
Anti-Static Tweezers		

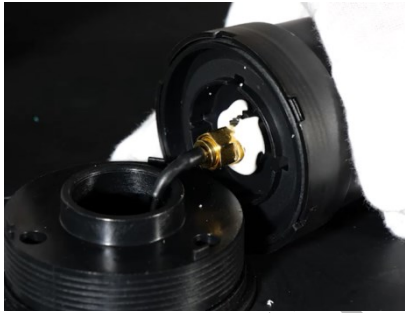
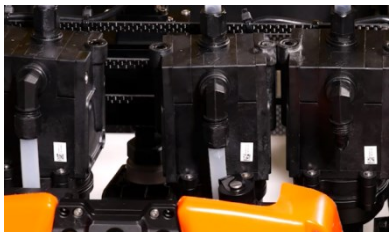
Crowbar		
Cutting Pliers		
10 mm Sleeve		
T6 Torx Screwdriver		

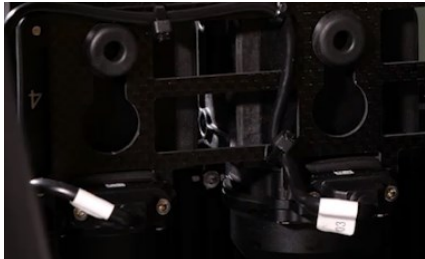
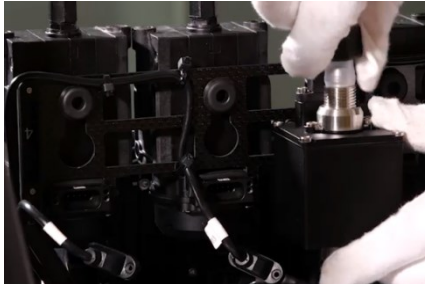
2. Video Links (English version to be updated)

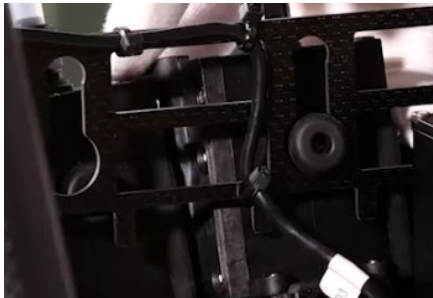
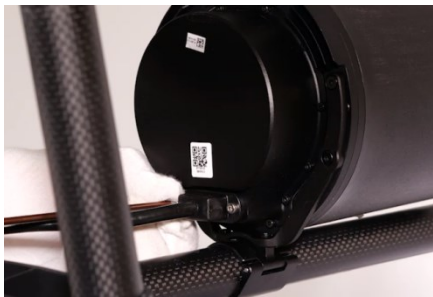
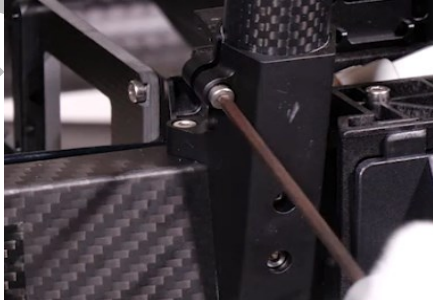
Video	Link	Key
Disassembling the Aircraft (EN)	https://pan-sec.djicorp.com/s/E44a3jA4RjKzZ7E	gkas123
Assembling the Aircraft (EN)	https://pan-sec.djicorp.com/s/Hbc8E55FpPKFicY	gkas123
Disassembling the Remote Controller	https://cdn.djivideos.com/watch/211af635-49aa-40d1-bc36-8afa08a51463?autoplay=false&poster=	
Assembling the Remote Controller	https://cdn.djivideos.com/watch/92e0f7c4-0409-4d86-9406-e7c2dbff5c39?autoplay=false&poster=	
Disassembling the charger	https://cdn.djivideos.com/watch/86a79d7a-12e6-4726-b20c-3dea489a5839?autoplay=false&poster=	
Assembling the charger	https://cdn.djivideos.com/watch/6820d80a-b85a-4ad8-bb05-2dbb3ad32f85?autoplay=false&poster=	

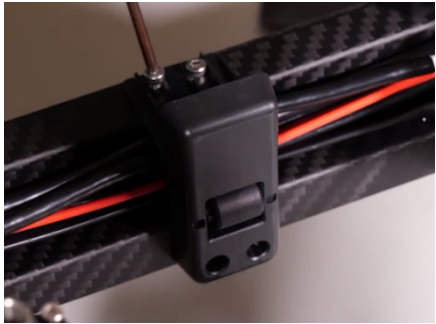
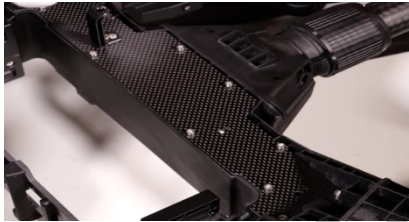
3. Disassembling and Assembling the Aircraft

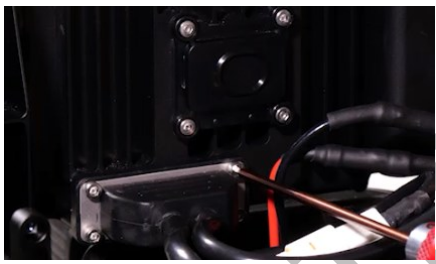
No.	Disassembly and Assembly	Picture	Notice

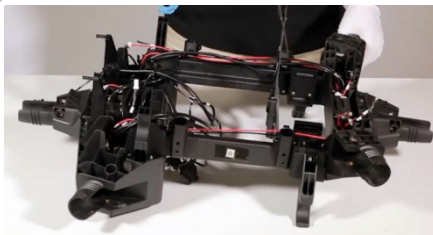
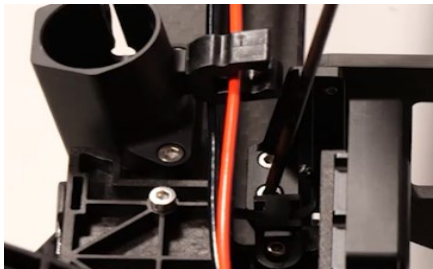
1	Use the the 2.0 hexagonal socket screwdriver to remove the three screws securing the RTK antenna, and then remove the antenna.		
2	Clean the white glue, disconnect the RTK feeder connector, and remove the RTK antenna. Remove the other RTK antenna in the same way.		Do not damage the pin inside the antenna during assembly. Remember to clean the white glue when attaching the antenna.
3	Use the tweezers to remove the four rubber pads on the screw holes of the front frame upper cover.		
4	Use the 2.0 hexagonal socket screwdriver to loosen and remove the five screws securing the front frame upper cover, then remove the upper cover.		
5	Use the 2.0 hexagonal socket screwdriver to remove the eight screws securing the 12-pin and 14-pin signal cable connectors on the spraying board. Then disconnect the two signal cables.		Note that the 14-pin port is the port connecting the flow meter and liquid level meter while the 12-pin port is the port connecting radar cable.
6	Turn over the drone. Remove the nut on the quick-release connector of the water outlet, then remove the hoses.		 一号水泵: 白管, 二号臂 二号水泵: 黑管, 三号臂 三号水泵: 黑管, 五号臂 四号水泵: 白管, 六号臂 No.1 Delivery Pump: White hoses; No.2

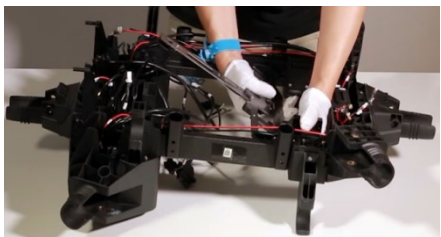
			aircraft arm; No.2 Delivery Pump: Black hoses; No.3 aircraft arm; No.3 Delivery Pump: Black hoses; No.5 aircraft arm; No.4 Delivery Pump: White hoses; No.6 aircraft arm;
7	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the spray lance, pull out the hoses from the buckle, and then remove the spray lance. Remove the other three spray lances in the same way.		Ensure that the white hoses are attached under the M2 and M6 motors while the black hoses are under M3 and M5 motors.
8	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the aerial-electronics system protective cover, then remove the cover.		
9	Use the the 3.0 hexagonal socket screwdriver to remove the eight screws securing the four delivery pumps' cable connectors. Remove the delivery pump cable.		Attach the delivery pump control cable to the corresponding delivery pump.
10	Loosen and remove the nut on the flow meter's outlet, then separate the flow meter and hoses.		

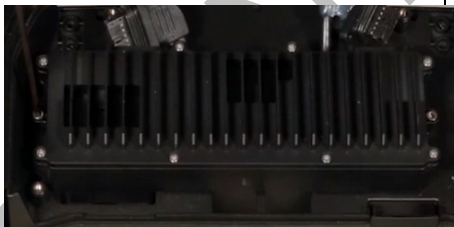
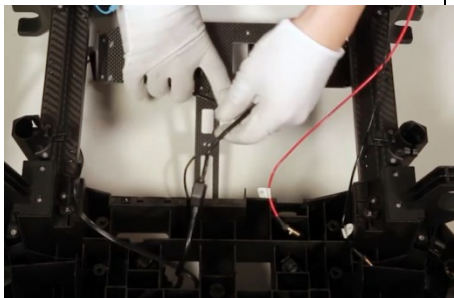
11	Press down the plastic buckles and remove the four delivery pumps.		
12	Use the 2.5 hexagonal socket screwdriver to remove the two screws securing the radar power cable connector, then disconnect the power cable.		
13	Use the 2.5 hexagonal socket screwdriver to remove the two screws securing the radar supporting piece, then remove the radar.		
14	Use the 2.5 hexagonal socket screwdriver to loosen and remove the four screws securing the landing gear vertical rod on the landing gear brace.		
15	Gently remove the landing gear module.		

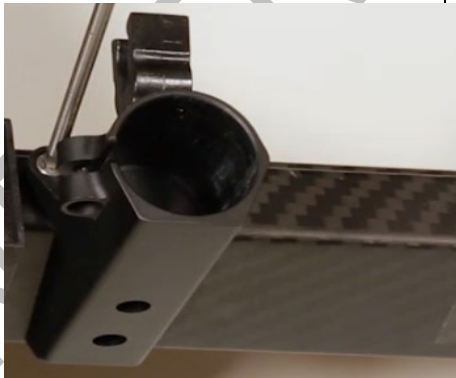
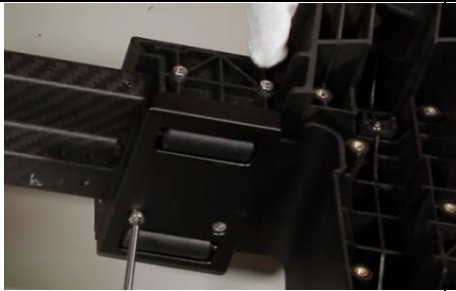
16	Use the 3.0 hexagonal socket screwdriver to remove the eight screws securing the left and right spray tanks' fixing brackets, then remove the fixing brackets.		
17	Use the 3.0 hexagonal socket screwdriver to remove the 12 screws securing the carbon board on the rear frame, and then remove the carbon board.		
18	Cut off the zip-ties with the pliers.		During assembly, arrange the cables first and tighten them with the zip-ties.
19	Use the 2.5 hexagonal socket screwdriver to remove the two screws securing the flow meter's signal cable connector, then disconnect the signal cable.		
20	Use the 2.5 hexagonal socket screwdriver to remove the three screws securing the spray tank inlet's bracket, then remove the spray tank inlet's bracket and flow meter module.		

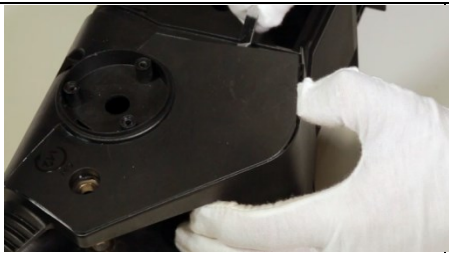
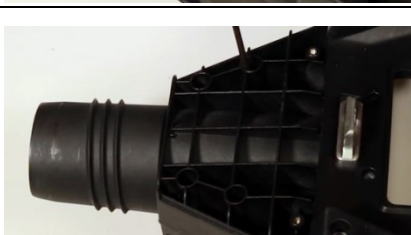
21	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the spray tank fixing bracket, then remove the fixing bracket and carbon board.		
22	Use the 2.5 hexagonal socket screwdriver to remove the four screws securing the connector of the signal cable which connects the aerial-electronics system module and spraying board. Then disconnect the signal cable.		
23	Remove the four antenna feeder connector covers on the aerial-electronics system module.		
24	Remove the SDR and RTK antenna feeder connectors.		Note that the SDR antenna port is different from the RTK antenna port.
25	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the aerial-electronics system module, then remove the module.		
26	Remove the heat-shrinkable sleeve on the M3 ESC power cable and disconnect the ESC cable.		Connect the M3 aircraft arm's ESC power cables with the cables labeled "03" on the power distribution board. Ensure that the red

			ESC power cable is connected to the red cable on the power distribution board, and the black ESC power cable is connected to the black cable on the power distribution board.
27	Remove the M3 ESC signal cable connector.		Connect the M3 aircraft arm's ESC signal cable with the cable labeled "03" which connects the M3/M4/M5 ESC and spraying board module.
28	Remove the nut securing the M3 aircraft frame arm pin with the 10 mm sleeve, then remove the pin.		Ensure that the short frame arm pin is mounted to the M1/M4 aircraft arms, while the long pin is mounted to the M2/M3/M4/M5/M6 aircraft arms.
29	Remove the M3 aircraft arm, and then remove the other five aircraft arms in the same way.		Pay attention to the installation position of each aircraft arm.
30	Use the 3.0 hexagonal socket screwdriver to remove the six screws securing the carbon board fixing piece.		

31	Keep the fluid level sensor module flat.		
32	Use the 2.5 hexagonal socket screwdriver to remove the screws securing all signal cable connectors on the spraying board, then disconnect the connectors (two ESC signal ports, power port, and delivery pump bus port).		
33	Use the 2.5 hexagonal socket screwdriver to remove the four screws securing the cable connecting the spray board and the power distribution board on the rear frame. Then remove the signal bus.		
34	Turn over the drone. Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the left and right spray tanks' two triangle supporting brackets.		
35	Remove the spray tanks' two triangle supporting brackets.		
36	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the left and right fixing brackets on the aerial-electronics system module.		

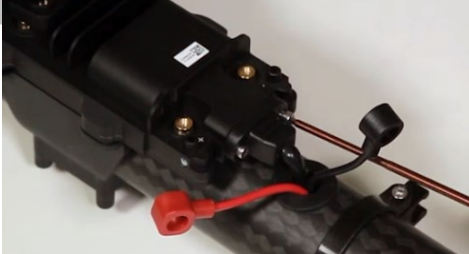
37	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the bracket which connects the airframe and aerial-electronics system module.		
38	Remove the brackets on the aerial-electronics system module.		
39	Use the 3.0 hexagonal socket screwdriver to remove the two screws securing the spraying board module, then remove the spraying board.		
40	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the power distribution board on the rear frame.		
41	Turn over the drone and remove the fluid level sensor module.		
42	Remove the power distribution board module.		

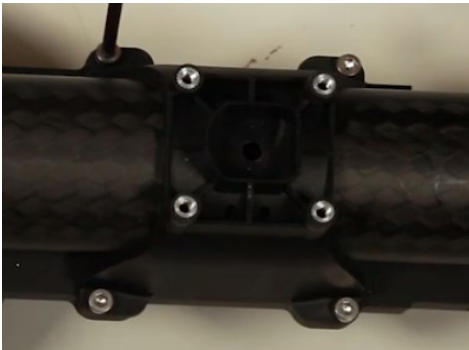
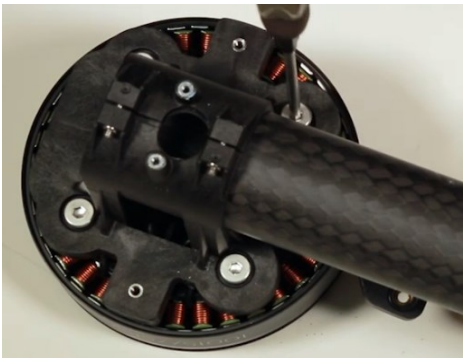
43	Remove the four screws securing the aircraft arm fixing piece, then remove the fixing piece.		
44	Remove the other three fixing pieces in the same way.		
45	Use the 2.5 hexagonal socket screwdriver to remove the 16 screws securing the four landing gear supporting pieces, then remove the supporting pieces.		
46	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the left and right battery fixing brackets, then remove the battery fixing brackets.		
47	Use the 3.0 hexagonal socket screwdriver to remove the six screws securing the left and right two RTK antenna bases, then remove the antenna bases.		

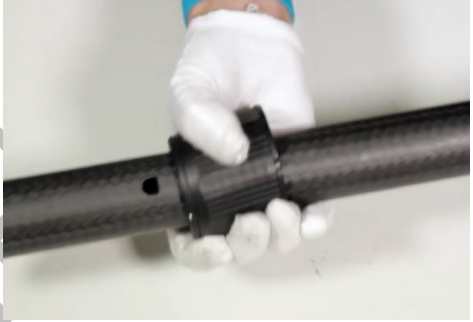
48	Turn over the drone and use the blade to open the four upper covers on the side arms of the front and rear frames.		
49	Use the 3.0 hexagonal socket screwdriver to remove the three screws securing the L-type carbon tube and rear frame. Then remove one screw on the front frame.		
50	Remove all the screw bolts by using the screwdriver. Remove the screw bolts on the L-type carbon tube in the same way.		
51	Separate the front frame, rear frame, and left and right L-type carbon tubes.		
52	Use the 2.5 hexagonal socket screwdriver to remove the four screws securing the M1 aircraft arm fixing piece, then remove the fixing piece.		
53	Use the 2.5 hexagonal socket screwdriver to remove the four screws securing the M4 aircraft rear arm upper cover, then remove the cover.		
54	Use the 2.5 hexagonal socket screwdriver to remove the four screws securing the M4 aircraft arm fixing piece, then remove the fixing piece.		

4. Disassembling and Assembling the Aircraft Arm

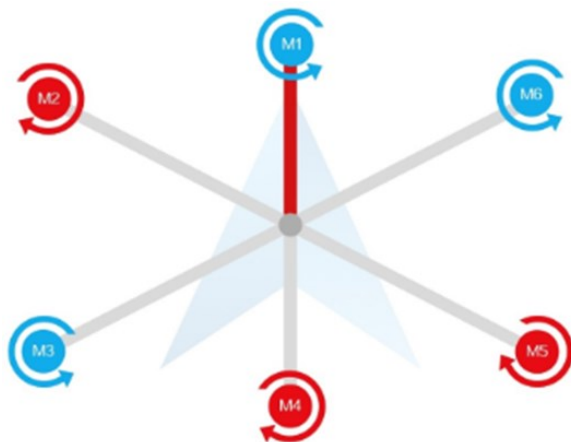
No.	Disassembly and Assembly	Picture	Notice
1	Remove the two screws securing the OcuSync antenna's fixing ring.		
2	Remove the fixing ring and disconnect the OcuSync antenna.		
3	Use the 3.0 hexagonal socket screwdriver to remove the two screws securing the motor protective cover, then remove the cover.		
4	Use the 3.5 hexagonal socket screwdriver to remove the two screws securing the upper propeller adapter, then remove the upper propeller adapter, gaskets, and propellers.		Ensure that the propellers CCW and CW are mounted properly.
5	Use the 2.5 hexagonal socket screwdriver to remove the two screws securing the ESC cable's protective cover, then remove the cover.		

6	Use the 2.5 hexagonal socket screwdriver to remove the two screws securing the ESC three-phase power supply connector's protective shell, then remove the shell.		
7	Remove the sealing pad on the screws securing the ESC power cable connectors. Then remove the sealing pad on the ESC three-phase power supply.		
8	Use the 2.5 hexagonal socket screwdriver to remove the five screws securing the ESC three-phase power supply connector and ESC power cable connectors.		There is no need to apply the screw glue during assembly.
9	Use the 2.5 hexagonal socket screwdriver to remove the two screws securing the ESC signal cable connector, then disconnect the ESC signal cable.		
10	Use the 2.5 hexagonal socket screwdriver to remove the 12 screws securing the six LEDs' signal cables, then disconnect the LED signal cables and remove the LEDs.		

11	Use the 3.0 hexagonal socket screwdriver to remove the four screws securing the ESC module, then remove the ESC module.		
12	Remove the spray lance fixing base and ESC module.		
13	Use the 3.0 hexagonal socket screwdriver to remove the two screws securing the LED's fixing bracket, then remove the bracket.		
14	Use the 3.5 hexagonal socket screwdriver to remove the four screws securing the motor, then remove the motor.		
15	Use the 3.0 hexagonal socket screwdriver to remove the two screws securing the motor base, then remove the motor base.		

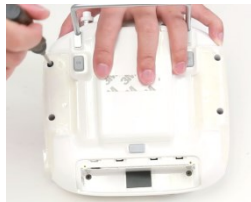
16	Remove the cable rubber and pull out the cable.		Do not damage the cable during assembly.
17	Use the 2.5 hexagonal socket screwdriver to remove the screw securing the hose's fixing piece, then remove the fixing piece.		
18	Remove the thread sleeve.		

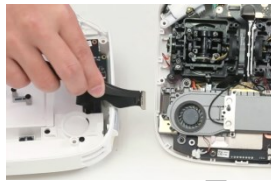
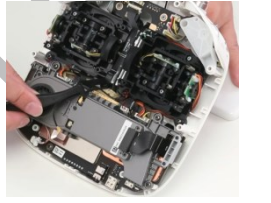
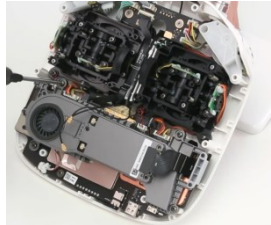
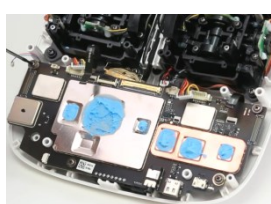
5. Propellers Installation Notices

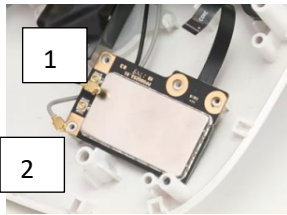
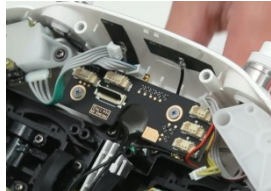
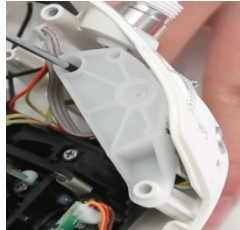
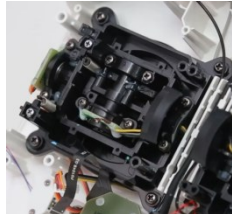
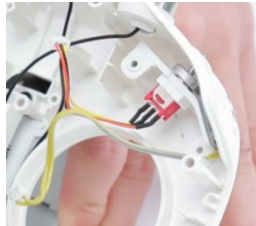


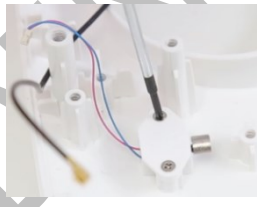
The aerial-electronics board is on the aircraft arm 1. Make sure that propellers CCW are mounted to M1, M3 and M6 motors, while propellers CW are mounted to M2, M4, and M5 motors.

6. Disassembling and Assembling the Remote Controller

No.	Disassembly and Assembly	Picture	Notice
	Remove the two antennas' metal rings and detach the antennas.		During assembly, check whether the pin on the antenna port is misshapen.
1	Open the dongle cover and remove the left and right bottom rubber pads.		
2	Remove the eight screws on the remote controller rear shell with the Phillips screwdriver.		

3	Separate the front and rear shell: There are buckles on the top and bottom of the front and rear shells. When separating the shells, press the rear shell and pull it back slightly. Otherwise, it is easy to damage the FPC cable between the front and rear shells.		Check whether the buckles on the top and bottom of the shells are mounted in place and whether there is a gap between the front and rear shells.
4	Use the Phillips screwdriver to remove the two screws securing the fixing piece of the FPC flat cable which connects the power board and main board, then remove the fixing piece and detach the FPC.		Ensure that the cable is attached in place.
5	Use the Phillips screwdriver to remove the five screws (three screws on the left mounting piece and two on the right piece) securing the left and right two mounting pieces.		
6	Remove the rubber stoppers on the antenna ports with the tweezers and disconnect the SDR antenna and FPC flat cable.		The left antenna is attached to the upper port, and the right antenna is attached to the lower port.
7	Use the Phillips screwdriver to remove the four screws securing the heat sink. Disconnect the fan power cable and remove the heat sink and SDR module.		Pass the FPC flat cable through the hole on the right side of the heat sink.
8	Use the tweezers to disconnect the motor cable, right control stick cable, RTH button flat cable, button board flat cable, screen flat cable, microphone cable, power cable, left control stick cable, and Wi-Fi cable.		Ensure the cables are attached in place.
9	Use the Phillips screwdriver to remove the four screws securing the remote controller main board.		Do not press down on the flat cable.

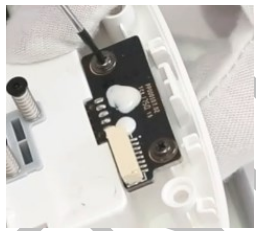
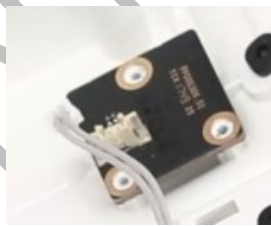
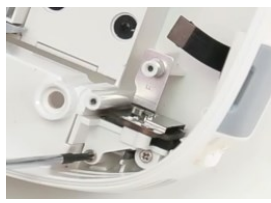
10	Use the Phillips screwdriver to remove the two screws securing the Wi-Fi antenna mounting piece, then remove the antenna. Use the Phillips screwdriver to remove the two screws securing the Wi-Fi board, and then remove the Wi-Fi board.		Ensure that the black Wi-Fi antenna is attached to the upper port (1) and white Wi-Fi antenna is attached to the lower port (2).
11	Disconnect the speed dial flat cable, A/B button flat cable, aircraft control switch dial flat cable, spray rate dial, and spray button flat cable on the adapter board. Use the Phillips screwdriver to remove the two screws securing the adapter board, then remove the adapter board.		Ensure the cables are attached to the adapter board properly.
12	Use the Phillips screwdriver to remove the screw securing the speed dial, and then remove the speed dial module.		Check whether the dial module is mounted in place.
13	Use the Phillips screwdriver to remove the two screws securing the A/B button module, then remove the A/B button module.		Check whether the A/B button module is mounted in place.
14	Use the Phillips screwdriver to remove the screw securing the spray rate dial module, then remove the dial module.		Check whether the spray rate dial module is mounted in place.
15	Use the Phillips screwdriver to remove the eight screws securing the two control stick modules, then remove the two modules.		
16	Remove the lever module as shown.		Check whether the lever module is mounted in place.

17	Remove the antenna and screen flat cable from the cable slot and use the Phillips screwdriver to remove the two screws securing the cable slot, then remove the cable slot.		Note that the Wi-Fi grey antenna is under the cable slot.
18	Use the Phillips screwdriver to remove the two screws securing the screen module, then remove the screen module. Do not damage the flat cable on the screen module.		
19	Use the Phillips screwdriver to remove the two screws securing the RTH button, then remove the RTH button module.		Check whether the RTH button is mounted in place.
20	Use the Phillips screwdriver to remove the two screws securing the motor, then remove the module and mounting piece.		

7. Disassembling and Assembling the Remote Controller

Rear Shell

No.	Disassembly and Assembly	Picture	Notice
1	Use the Phillips screwdriver to remove the two screws securing the built-in battery cover, then remove the battery and cover.		
2	Use the Phillips screwdriver to remove the three screws securing the right dustproof module on the power board, then remove the module.		

3	Use the Phillips screwdriver to remove the four screws securing the built-in battery bracket on the power board, then remove the bracket.		
4	Disconnect the cable on the power board, use the Phillips screwdriver to remove the two screws securing the power board, and then remove the power board.		Check whether the power board is mounted in place.
5	Disconnect the cables on the battery port board and C3 button board. Use the Phillips screwdriver to remove the two screws securing the battery port board, and then remove the battery port board.		Check whether the power button board is mounted in place.
6	Use the Phillips screwdriver to remove the three screws securing the C3 button board, and remove the C3 button board.		Check whether the C3 button board is mounted in place.
7	Use the Phillips screwdriver to remove the two screws securing the USB port board, and remove the USB port board.		Check whether the USB port board is mounted in place.

8. Notices

No.	Notices	Picture
1	Ensure that the eight screws on the remote controller rear shell are removed.	

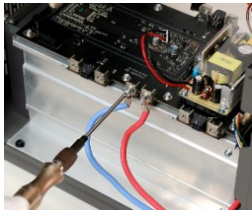
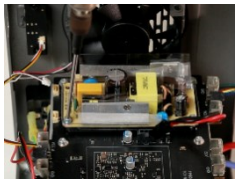

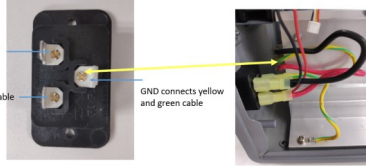
2	Press the middle of remote controller rear shell (there is a buckle inside) down vertically with the right hand thumb, and hold the handle with the other four fingers. Hold the screen bracket with the left hand and press down the right thumb with the left thumb. Then pull the handle to the right to separate the front and rear shell. Do not press down on the front shell.	
3	The buckle on the front shell is shown on the right figure. Do not press down on the front shell.	
4	The buckle on the rear shell is shown on the right figure. To separate the rear and front shells, press the middle of the remote controller rear shell.	
5	Press the middle of the remote controller rear shell as shown.	
6	Gently separate the front shell and rear shell. Otherwise, the flat cable may be damaged.	

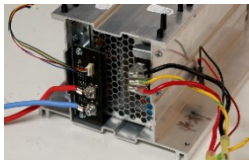
9. Disassembling and Assembling the Charger

No.	Disassembly and Assembly	Picture	Notice
1	Check whether the anti-dismantle sticker on the charger is removed. If yes, no warranty repair service is provided. When mounting the screws, the		The anti-dismantle sticker needs to be attached after installation.

	screw glue is required.		
2	Remove the four charger plugs.		
3	Remove the six screws securing the two charger side boards C on the charger side board A module, then remove the charger side boards C.		
4	Remove the battery charging cables.		There is a cable clamp on the communication cable, so it cannot be removed with too much force. Note that the red cable is attached to the left small screw hole, and the blue cable is on the right larger hole. The cables must be attached to the correct positive and negative poles, and the screws on the left and right are different. Torque for installation: 5.0-5.5kgf.cm
5	Remove the two charger side boards C on the charger side board A module, and remove the two charging cables in the same way.		
6	Remove the four screws on the charger bottom pads and then remove the pads.		Do not use too much force during installation. Otherwise, the pads may be damaged by the screws.
7	Remove the four screws securing the charger upper cover module.		
8	Remove the upper cover and disconnect the charger button board's communication cable.		Slowly remove the upper cover to avoid damaging the communication cable.

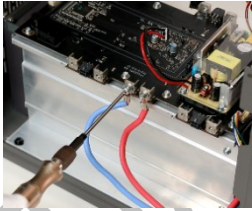
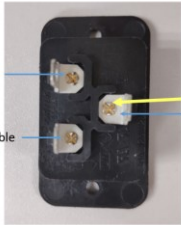
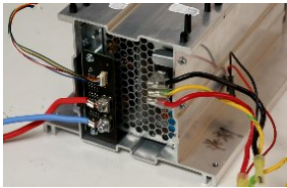
8.1	Disconnect the switch cable and remove the switch with the pliers.		Do not lose the waterproof rubber ring. The whole switch part is a material. When installing, pay attention not to install the switch in the opposite direction. Ensure that the circular silk print faces downwards.
8.2	Remove the four screws securing the LED board, then remove the LED board and shielding foam.		
8.3	Remove the charger silicone rubber stopper and button cap.		
8.4	Remove the two screws' shielding pieces on the handle.		
8.5	Remove the two screws and nuts securing the handle.		
9	Remove the four screws securing the charger fixing plate, then remove the plate.		
10	Remove the two charger side board A modules.		When installing, arrange the input cables to prevent them from being crushed during installation.
11	Disconnect the adaptive board's communication cable, fan's cable, four core cable connecting the USB Type-C to main board, AC power cable, auxiliary power board cable, and button board's communication cable.		Do not pull out the cable with buckle. Note that there is a locating pole of the auxiliary power cable. Make sure that the fire wire and zero line are attached correctly

12	Remove the screws securing the AC power cable (positive red cable) and AC power cable (negative blue cable).		During installation, ensure that the red cable is attached to the small screw hole (positive pole) while the blue cable is attached to the large screw hole (negative pole). Torque: 5.0-5.5 kgf.cm
13	Remove the four screws securing the auxiliary power board, then remove the board. Remove the charger auxiliary power vacuum thermoform cover and main board anti-dust vacuum thermoform cover.		
14	Remove the eight screws securing the charger management main board PCBA (with firmware), then remove the PCBA.		
15	Remove the eight cooling pads.		If the cooling pad is replaced, thermal oil must be applied.
16	Remove the four screws securing the 4850 power board module and GND, then remove the module.		
17	Disconnect the four core cable connecting USB Type-C and main board, remove the two screws securing USB update adaptive board, then remove the adaptive board.		
18	Remove the two screws securing the AC power plug, then remove the plug.		Pay attention to the installation direction as shown.
19	Remove the four screws securing the fan's metal cover, then remove the cover.		If only the fan is damaged, there is no need to remove the upper cover.

20	Remove the four screws securing the fan and then remove the fan and foam.		Pay attention to the installation direction. Make sure that the sticker with the silk print faces outward, and that the cable is near the yellow sticker.
21	Remove the whole 4850 module.		
21.1	Disconnect the AC power input cables (negative and positive), AC power input cable GND, AC power output blue cable (negative), AC power output red cable (positive), and six core cable connecting the 4850 module adaptive board and main board.		Ensure that the fire wire, zero line, and earth wire are attached correctly. The red and blue cables cannot be connected incorrectly. Torque: 5.5±0.5kgf.cm
21.2	Remove the two screws securing the charger bracket-02, then remove the bracket-02.		
21.3	Remove the 3-pin adapter.		
21.4	Remove the two screws securing the charger power adaptive board, then remove the board.		
21.5	Remove the two screws securing the charger bracket-01, then remove the bracket-01.		
21.6	Remove the four screws securing the power module bracket B, then remove the bracket and power board.		

21.7	Remove the four screws securing the fan module, clean the white glue, disconnect the cable, and then remove the fan.		Apply the white glue on the connector when installing.
------	--	---	--

10. Charger Assembly Notice (Torque Requirements)

1	Ensure that the torque is 5.0-5.5Kgf.cm when connecting the red and blue power cables.	
2	Ensure that the torque is 5.0-5.5Kgf.cm when connecting the battery charging cable.	
3	Fire wire has an "L" mark, called Live Wire, zero line has an "N" mark, called as Naught Wire. Another cable is earth wire, and the color is yellow and green.   GND connects yellow and green cable	

Chapter 6 Damage Assessment and Repair Guide

1. Aerial-Electronics Board

Module 1	Issue	Cause Analysis	Solution
	Firmware package update failure	1. There is a network error.	Ensure that the network is stable before the update.
		2. The aerial-electronics system module is not connected well.	Ensure that all the modules are connected well.
		3. The connection is poor.	1. Replace the Type-C cable. 2. Replace the USB-C port.
		4. The aerial-electronics board is damaged.	Replace the aerial-electronics board.
	The drone drifts during hovering.	1. There is an error with the IMU calibration.	Replace the aerial-electronics board.
		2. If the GPS signal is strong and the motors are working normally, check whether the aerial-electronics system module makes abnormal sound or is obstructed.	Replace the aerial-electronics board.
	The drone cannot fly in a straight line.	1. There is an error with the compass calibration.	Replace the spraying board.
		2. When the compass is calibrated successfully, check whether the aerial-electronics system module works normally.	Replace the aerial-electronics board.
	There is an error with the main controller data.	1. Power off the drone and wait about 5 minutes, then power on the drone to check whether the issue is fixed.	Replace the aerial-electronics board.
	Linking failure	1. Check whether the remote controller firmware matches the drone's	Update the remote controller and drone to the same firmware version, or update

		firmware.	the firmware to the latest version.
		2. The aerial-electronics board is damaged.	Replace the aerial-electronics board.
	The image transmission distance is short, there is no image transmission, or the image transmission screen freezes.	1. Check whether the remote controller firmware matches the drone's firmware.	1. Update the remote controller and drone to the same firmware version. 2. Update the remote controller and drone firmware to the latest version.
		2. Check whether the aerial-electronics system and remote controller antenna and feeder are damaged.	1. Replace the antenna. 2. Replace the feeder.
		3. The aerial-electronics board is damaged.	Replace the aerial-electronics board.
	The drone cannot maintain the flight height.	The aerial-electronics board is damaged.	Replace the aerial-electronics board.
	The lamp does not light up.	1. "Front lamp brightness" in the app is not turned on.	1. Enable "Front lamp brightness". 2. Replace the delivery pump.
	The satellites cannot be searched, or the signal is lost.	2. The aerial-electronics board is damaged.	Replace the aerial-electronics board.
		1. There is environmental interference, or the remote controller firmware does not match the drone's firmware.	Find a new operating environment or update the firmware.
		2. The RTK antenna is not connected well.	Disconnect the RTK antenna and attach it again.
		3. Use a normally functioning RTK antenna to check whether the issue is fixed.	Replace the RTK antenna.
		4. Use a normally functioning aerial-electronics board to check whether the issue is fixed.	Replace the aerial-electronics board.
	RTK Error	Check whether the left and right antennas are attached wrongly.	Attach the antennas again.

	The drone is switched to GPS mode from RTK mode.	1. Check whether the remote controller firmware matches the drone's firmware.	Update the remote controller firmware and drone firmware.
		2. Check whether the RTK mobile station is far away from the drone.	Place the RTK mobile station close to the drone.
	The flight time is short.	The aerial-electronics board is damaged.	Replace the aerial-electronics board.

2. Spraying Board (Including Compass)

Module	Issue	Cause Analysis	Solution
Spraying Board	It is unable to read the battery information.	1. Check whether the battery signal cable on the power distribution board is damaged.	1. Replace the battery signal cable. 2. Replace the spraying board.
		2. The spraying board is damaged.	Replace the spraying board.
	The delivery pump does not work.	The spraying board is damaged.	Replace the spraying board.
	There is no flowmeter and liquid level meter data.	The spraying board is damaged.	Replace the spraying board.
	The radar does not work.	The spraying board is damaged.	Replace the spraying board.
	The motor ESC does not work.	The spraying board is damaged.	Replace the spraying board.
	The compass calibration is failed.	1. There is environmental interference.	1. Find a new operating environment and calibrate the compass again. 2. Replace the spraying board.
		2. The spraying board is damaged.	Replace the spraying board.
	There is no compass value.	The spraying board is damaged.	Replace the spraying board.
	The drone cannot fly in a straight line.	The spraying board is damaged.	Replace the spraying board.

3. Delivery Pump

Module	Issue	Cause Analysis	Solution
Delivery Pump	Some delivery pumps do not work after being powered on.	1. Check whether the delivery pump cable is connected well.	1. Attach the cable in place. 2. Replace the delivery pump.
		2. The delivery pump motor is damaged.	1. Replace the delivery pump motor module. 2. Replace the delivery pump.
		3. The delivery pump's diaphragm is damaged.	1. Replace the delivery pump's diaphragm. 2. Replace the delivery pump.
	All delivery pumps do not work after being powered on.	1. Check whether the delivery pump cable is damaged.	1. Replace the delivery pump cable. 2. Replace the delivery pump.
		2. Check whether the spraying board is damaged.	Replace the spraying board.
	Self-check error and warnings shown during the operation	Use a normally functioning delivery pump or hoses to check whether or not there is an error with the hoses or nozzle.	Ensure that the hoses are connected properly and that there is no leakage from the nozzle.
	Leakage or rusty	The delivery pump sealing ring or the delivery pump cavity is damaged.	1. Replace the sealing ring or delivery pump cavity. 2. Replace the delivery pump.

4. Radar

Module	Issue	Cause Analysis	Solution
--------	-------	----------------	----------

Radar	The radar does not rotate.	1. Check whether the radar cable is damaged.	1. Replace the radar cable. 2. Replace the radar.
		2. The radar is damaged.	Replace the radar.
	The radar cannot rotate smoothly.	The radar is damaged.	Replace the radar.
	The radar altitude maintaining and obstacle avoidance function is unavailable.	1. Check whether "Obstacle Avoidance Radar" is enabled in the app.	1. Turn on "Obstacle Avoidance Radar". 2. Replace the radar.
		2. After powering on, the radar works abnormally.	Replace the radar.
	Water damage	The radar is damaged.	Replace the radar.

5. Motor/ESC

Module	Issue	Cause Analysis	Solution
Motor/ESC	All motors signal alerts and cannot turn on.	1. Check whether the cable is connected well.	1. Remove the cable and insert it again. 2. Replace the cable.
		2. Check whether there are any warnings shown on the app.	Check the product following the app instructions.
		3. Check whether the spraying board is damaged.	Replace the spraying board.
		4. Check whether the aerial-electronics board is damaged.	Replace the aerial-electronics board.
	M1, M2, and M6 motors signal alerts and cannot turn on.	1. Check whether the cable connector is damaged.	1. Remove the cable and insert it again. 2. Replace the cable.
		2. Check whether the spraying board is damaged.	Replace the spraying board.
	M3, M4, and M5 motors make alert and cannot turn on.	1. Check whether the cable connector is damaged.	1. Remove the cable and insert it again. 2. Replace the cable.
		2. Check whether the spraying board is damaged.	Replace the spraying board.
	One motor cannot turn on.	1. Check whether there is an error with the ESC firmware.	Update the firmware again.
		2. Check whether the cable is damaged.	1. Remove the cable and insert it again. 2. Replace the cable.
	The motor makes abnormal sounds.	The motor shaft is misshapen or worn.	Replace the motor.
	The motor cannot rotate smoothly.	The motor shaft is misshapen.	Replace the motor.
	The ESC indicator does not light up.	1. The ESC board is damaged, and the powering on test fails.	Replace the ESC board.
		2. The LED board does not light up.	Replace the LED.

6. Fluid Level Meter

Module	Issue	Cause Analysis	Solution
Fluid Level Meter	The volume of the liquid in the spray tank is not accurate.	1. The liquid level meter cannot be mounted in place.	Mount the liquid level meter again.
		2. Check whether the liquid level meter is damaged.	Replace the liquid level meter.
	The volume of the liquid cannot be read.	Check whether the liquid level meter is damaged.	Replace the liquid level meter.

7. Flowmeter

Module	Issue	Cause Analysis	Solution
Flowmeter	The flow data cannot be read.	1. Check whether the cable has a poor connection or is damaged.	1. Remove and attach the cable again.
		2. Check whether the spraying board is damaged.	Replace the spraying board.
	The flow data is inaccurate.	Check whether the flow meter is damaged.	Replace the flow meter.

8. Power Distribution Board

Module	Issue	Cause Analysis	Solution
Power Distribution Board	The drone cannot be powered on.	1. Check whether the power distribution board is damaged.	Replace the power distribution board.
		2. Check whether the power cable is short-circuited.	Replace the power cable.
	The battery communication is poor.	1. Check whether the power cable is short-circuited.	Replace the power cable.
		2. Check whether the cable is damaged.	Replace the battery signal cable.
		3. Use a normally functioning battery to check whether the issue is fixed.	Replace the battery.
		4. Use a normally functioning spraying board to check whether the issue is fixed.	Replace the spraying board.
		5. Use a normally functioning spraying board to check whether the issue is fixed.	Replace the spraying board.

9. Remote Controller

Module	Issue	Cause Analysis	Solution
Remote Controller	The remote controller cannot be turned on.	Check the connection between battery port board, power board, remote controller main board, and power button, and check whether the cables are connected well.	Replace the defective component.
	DJI Assistant 2 cannot be connected.	1. The version of DJI Assistant 2 is not compatible for the product.	Download the corresponding version of DJI Assistant 2 on the DJI official website and update the firmware version to the latest.
		2. The driver installation failed.	1. Reinstall the DJI Assistant 2 software. 2. Replace the PC.
		3. The main board is damaged.	Replace the main board.
	Linking failure	1. Check whether the remote controller firmware matches the drone's firmware.	1. Update the remote controller firmware to the latest. 2. Update the aircraft firmware to the latest.
		2. The SDR board is damaged.	Replace the RF board.
		3. The main board is damaged.	Replace the main board.
	The remote controller signal is lost within the specified flight range.	1. The antenna is damaged.	Replace the antenna.
		2. The SDR board is damaged.	Replace the RF board.
		3. The main board is damaged.	Replace the main board.
	The screen is malfunctioning.	The screen or coaxial cable is broken.	Replace the screen.
	Satellite search is abnormal.	The remote controller screen is damaged.	Replace the screen.
	Wi-Fi cannot be connected.	1. Check whether the Wi-Fi antenna is damaged or not connected well.	Replace or reattach the Wi-Fi antenna.
		2. The Wi-Fi board is	Replace the Wi-Fi board.

		damaged.	
		3. The main board is damaged.	Replace the main board.
	The button is malfunctioning.	The button is damaged.	Replace the button.
		The adapter board is damaged.	Replace the adapter board.
		The main board is damaged.	Replace the main board.

10.Charger

Module	Issue	Cause Analysis	Solution
Charger	The charger does not power on (the LED does not light up and the fan does not rotate).	The auxiliary power is damaged, so there is no 12 V output for the charger management main board.	Replace the auxiliary power.
		The charger management main board is damaged.	Replace the charger management main board.
		The switch is damaged.	Replace the switch.
		The cable connecting the button board and the charger management main board is damaged.	Replace the corresponding cable.
		The AC power cable is damaged, or the negative and positive cables are loose.	Replace or reinsert the AC power cable, negative cable, and positive cable.
	The charger can be powered on, but the ports cannot be used to charge.	The 4850 power module is damaged.	Replace the 4850 power module.
		The charger management main board is damaged.	Replace the charger management main board.
	One port cannot be used to charge.	The corresponding charging cable is not connected well or damaged.	Perform a visual inspection and replace the charging cable.
		The corresponding charging cable is not connected well or damaged.	Perform a visual inspection and replace the charging plug.
		The charger	Replace the charger management

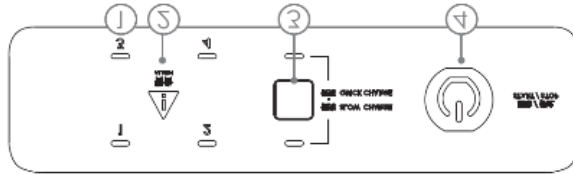
For DJI Authorized Dealers Use Only

		management main board is damaged.	main board.
	The power button LED lights up, but the fan does not rotate.	The fan is damaged.	Replace the fan.
		The corresponding charging cable is not connected well or damaged.	Replace the charger management main board.
	Insert the battery and the corresponding port's LED blinks yellow continuously.	The corresponding charging cable is damaged or not connected well.	Perform a visual inspection and replace the charging cable.
		The corresponding charging plug is damaged or not connected well.	Perform a visual inspection and replace the charging plug.
	Insert the battery and the corresponding port's LED blinks yellow twice or four times.	There is an error with the battery.	Replace the battery.
	Insert the battery and the corresponding port's LED blinks continuously (after the battery is inserted for about 10 seconds).	The battery is not inserted well or a non-official battery is used.	Replace the battery.
	Insert the battery and the corresponding port's LED blinks yellow twice.	The port is short-circuited.	Check whether the charging plug or charging cable is short-circuited.
	Insert the battery and the corresponding port's LED does not light up and the warning indicator is solid yellow.	The 4850 power module is damaged.	Replace the 4850 power module.
		The charger management main board is damaged.	Replace the charger management main board is damaged.
	Insert the battery and the corresponding	The fan of the 4850 power module is damaged.	Replace the fan and 4850 power module.

	port's LED does not light up and the warning indicator blinks twice.		
	Insert the battery and the corresponding port's LED does not light up and the warning indicator blinks three times.	The charger's fan is damaged.	Replace the charger's fan.
	Insert the battery and the corresponding port's LED does not light up, the warning indicator blinks once, and the charger makes "DDD" sounds.	The fan of the 4850 power module is damaged.	Replace the 4850 power module.
	Insert the battery and the corresponding port's LED does not light up, the warning indicator lights up, and the charger makes "DD.DD.DD" sounds.	The charger management main board is damaged.	Replace the charger management main board is damaged.
	The USB port cannot be used to connect and update.	The USB adaptive board is damaged.	Replace the USB adaptive board.
		The charger management main board is damaged.	Replace the charger management main board is damaged.
	The fast charging and slow charging modes cannot be switched.	The LED board is damaged.	Replace the LED board.
		The charger management main board is damaged.	Replace the charger management main board is damaged.

11.Charger Indicators

The indicators are shown as below:



LEDs 1, 2, 3 and 4 on the left of the operational panel:

Charging Indicators

LED Blinking Pattern	Warning Sound	Description
 Solid yellow	/	The battery in the corresponding position to the number is connected and queued to charge.
 Solid green	/	The battery in the corresponding position to the number is fully charged.
 Blinks yellow once continuously	/	The temperature of the battery in the corresponding position to the number is too low, and the charging current is limited.
 Blinks yellow twice continuously	/	There is a large difference between the input voltage and the battery voltage.
 Blinks yellow three times continuously	/	The temperature of the battery in the corresponding position to the number is too low, and the battery charger has stopped charging.
 Blinks yellow four times continuously	/	The temperature of the battery in the corresponding position to the number is too high, and the battery charger has stopped charging.

 Blinks red once continuously	D.D.D...	The battery in the corresponding position is not correctly connected or an unauthorized battery is connected (this warning will only appear 10 seconds after the battery is connected).
 Blinks red twice continuously	DD.DD.DD...	The connector short-circuited. Please check the battery or the battery charger.
 Solid red	DDD.DDD...	Critical error detected.

Charging Indicators

LED Blinking Pattern	Warning Sound	Description
 Solid yellow	/	The battery in the corresponding position to the number is connected and queued to charge.
 Solid green	/	The battery in the corresponding position to the number is fully charged.
 Blinks yellow once continuously	/	The temperature of the battery in the corresponding position to the number is too low, and the charging current is limited.
 Blinks yellow twice continuously	/	There is a large difference between the input voltage and the battery voltage.
 Blinks yellow three times continuously	/	The temperature of the battery in the corresponding position to the number is too low, and the battery charger has stopped charging.
 Blinks yellow four times continuously	/	The temperature of the battery in the corresponding position to the number is too high, and the battery charger has stopped charging.

8 © 2019 DJI All Rights Reserved.

 Blinks red once continuously	D.D.D...	The battery in the corresponding position is not correctly connected or an unauthorized battery is connected (this warning will only appear 10 seconds after the battery is connected).
 Blinks red twice continuously	DD.DD.DD...	The connector short-circuited. Please check the battery or the battery charger.
 Solid red	DDD.DDD...	Critical error detected.

Warning Indicator Description:

If the battery is inserted, connect the outer power source and power on the charger. If the LED does not light up, there may be an error with the charger, and the warning indicator will display as follows.

Warning Indicator	Warning Sound	Description
Solid red	/	Self-diagnosis abnormal
Solid yellow	/	The input voltage is too low
Blinks yellow twice continuously	/	The fan of the 4850 module is abnormal
Blinks yellow three times continuously	/	The battery charger fan is abnormal
Blinks red once continuously	D.D.D.....	The 4850 module is abnormal
Solid red	DD.DD.DD.....	Main board is abnormal

Note: The above material numbers, material names, disassembly operations and damage assessment process will continue to be updated. The content mentioned above is for reference only.