


3V Power



R10



LED3




BootLoader Board

U3




C18



C17



R16




CANH



R15



R17



CANL

J5

● RB3/AN	RDO/PWM	●
● RDY/RST	RD11/INT	●
● RG9/CS	RB8/RX	●
● RG6/SCK	RB14/TX	●
● RG7/MISO	RF5/SCL	●
● RG8/MOSI	RF4/SDA	●
● VCC 3V	VCC 5V	●
● GND	GND	■

R4



C16

J3



RB12


RB11

RB10


VCC 3V

GND


PIN 31 PIN 32

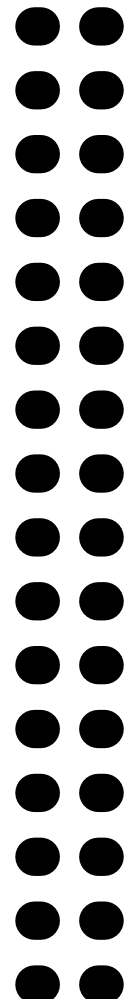


C12




C15

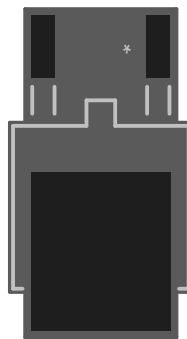

U2



C7





C11



C14

PIN 63 PIN 64

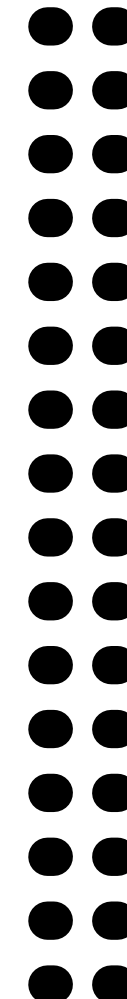

C2

J4



RD2


RD3

RD10

RD9

RB13

J2

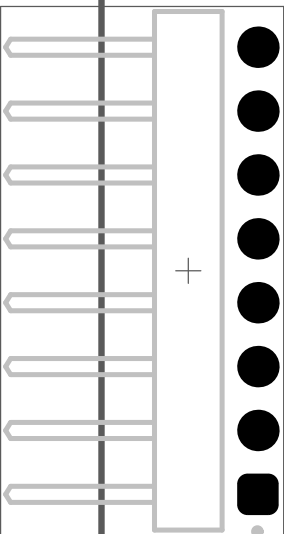

RB10

RB13

N/C

RB6/PGC


RB7/PGD

GND


VCC 3V

MCLR


T3

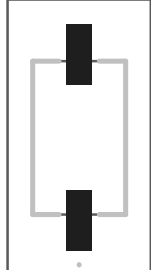

RESET



R7



C8



R2



T2



R9



R8



LED2



LED1




T1

R11



FP1

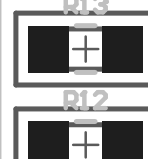

R13



R12



J1

