SuperOS-101

SHORTCUT GUIDE

EDITION 2026-10-22 · CUSTOM FIRMWARE FOR THE SH-101
SUPEROS + THE ORIGINAL FIRMWARE · MIDI ON DIN AND USB-C

Every SuperOS function on one drawing each: the panel, the controls involved, the order to press them, and the LEDs the SH-101 shows while you do it. Find the function, look at the picture, follow the numbered steps.



Panel photo: Wikipedia user 909 bd, Wikimedia Commons, CC BY-SA 3.0.

READING THE DRAWINGS

○ Black ring: press this.
● Red ring and red label: hold it while you do the rest.
- - - Blue dashed box: any key in that group.

LEDS

● lit ◒ blinking ○ off
On the photo a lit LED glows red; a blinking one is half lit inside a dashed red ring. The box beside each drawing repeats the seven LEDs large. Keys are numbered 1 to 32 from the lowest F; key 8 is the lowest C.

WORDS

A + B: hold A, then press B. Tap: press and release. Playing: the sequencer runs. Clock: the LFO / CLK RATE, or MIDI clock with sync on. The header gives the mode and when it works.

CONTENTS

PLAYING

1 Keyboard 3
2 Hold 3
3 Transpose Switch 4
4 Portamento Auto 4

ARPEGGIO

5 Arpeggio 5
6 Random Arpeggio 5
7 Arpeggio Octave Range 6
8 Arpeggio and Hold 6

SEQUENCER

9 Record a Pattern 7
10 Ties, Rests, Ratchets, Undo 7
11 Play and Stop 8
12 Correct and Add 8
13 Real-Time Record 9
14 Pattern Select 9
15 Song 10
16 Instant Switch 10
17 Play Direction 11
18 Shift 11
19 Nudge 12
20 Loop Length, Live 12

RANDOMIZE AND SCALE

21 Randomize 13
22 Scale 13

PERFORMANCE MODES

23 Performance / SuperOS Mode 14
24 Performance Rows 14
25 Row 1: Global 15
26 Row 2: Pitch 16
27 Row 3: Time 17
28 Ratchet 18
29 Write and Reset 19

TRANSPOSE AND TUNE

30 Key Transpose 20
31 Transpose Mode 20
32 Pedal as Key Transpose 21
33 Tune 21

CONFIG MENU

34 Enter and Leave 22
35 Firmware: SuperOS or Original 22
36 MIDI Clock Sync 22
37 Clock Division 23
38 Accent, Cutoff, LFO Sync 24
39 Direction and Pedal 24
40 Sync Delay 25
41 Start Mode and MIDI Thru 25

MIDI SYNC


42 Host Transport 26

REFERENCE

LEDs, every gesture, MIDI 27

1 KEYBOARD

KEYBOARD | NOTHING LIT

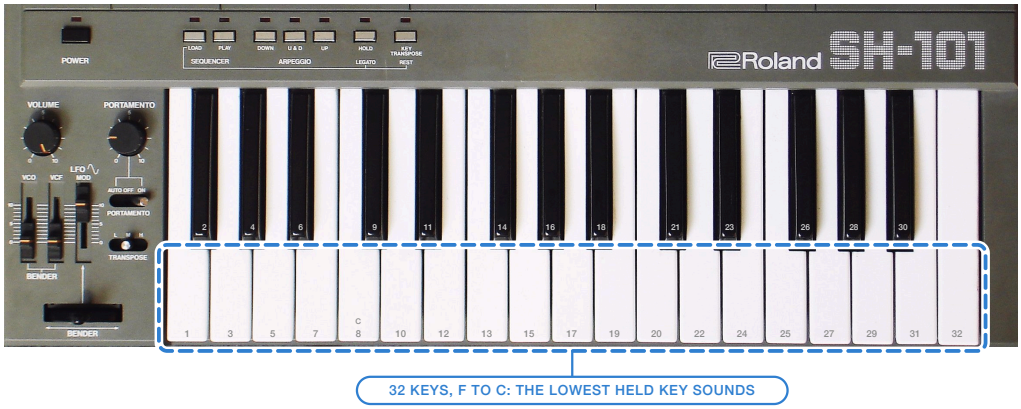

LOAD PLAY DOWN U&D UP HOLD KEY TR.
OFF OFF OFF OFF OFF OFF OFF


No LED: plain keyboard mode. Keys 8 and 15 held, key 8 (the lower) sounds.

1. With no function LED lit, the keyboard plays the voice directly.
2. Hold two keys: the lower one sounds. Let it go and the other one takes over.
3. Key 1 is the lowest F, key 8 the lowest C, key 32 the top C.

NOTE
With the ENV TRIG switch on GATE+TRIG the priority is the last key pressed instead. MIDI notes 53 to 84 act as keys 1 to 32.

2 HOLD

KEYBOARD OR ARPEGGIO | ANY TIME

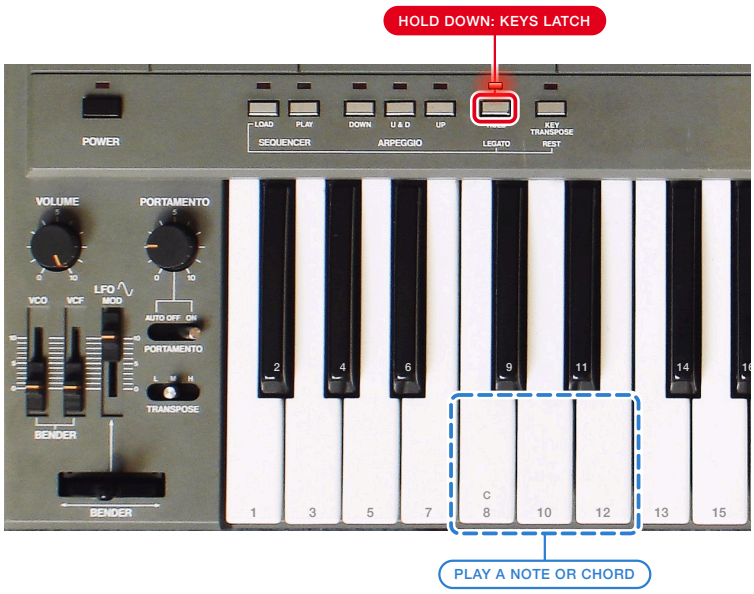

LOAD PLAY DOWN U&D UP HOLD KEY TR.
OFF OFF OFF OFF OFF ON OFF


HOLD lit while the button (or the pedal) is down: the keys played keep sounding.


1. Keep HOLD pressed, or press the HOLD pedal.
2. Play keys: they keep sounding after you let go. A new chord replaces the latched one.
3. Release HOLD (or the pedal): the latched keys are released and the LED goes out.

NOTE
The HOLD LED follows the button and the pedal: it is lit only while one of them is down. A pedal on the HOLD jack is the hands-free way to latch.

3 TRANSPOSE SWITCH

KEYBOARD | ANY TIME

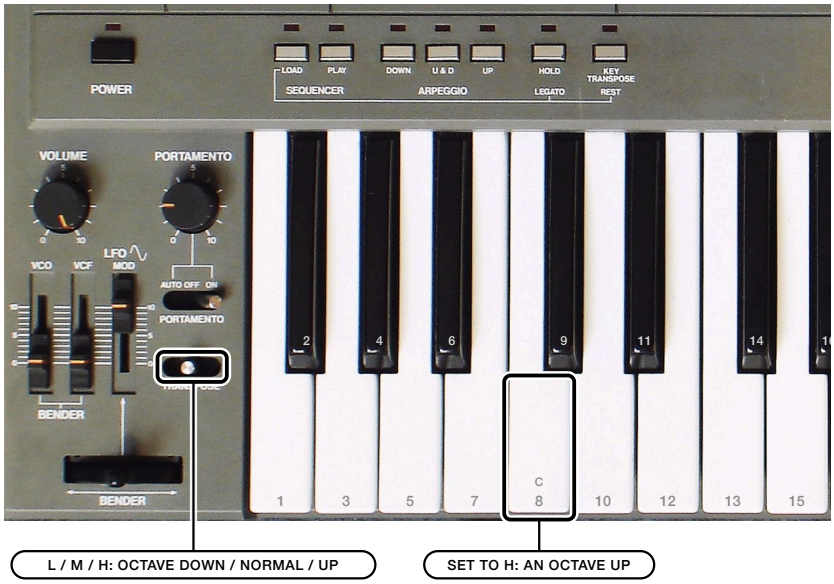



No LED. The switch is read with every key.


1. Set TRANSPOSE to L, M or H: the keyboard plays an octave down, as marked, or an octave up.
2. Keys you record take the octave the switch is at; a stored pattern keeps it.


NOTE

The TRANSPOSE switch works on keys, the arpeggio and recording, as on the stock SH-101. While a sequence plays it picks the performance row instead (Performance Modes). Tune (below) assumes M.

4 PORTAMENTO AUTO

KEYBOARD, ARPEGGIO, SEQUENCER | SWITCH ON AUTO

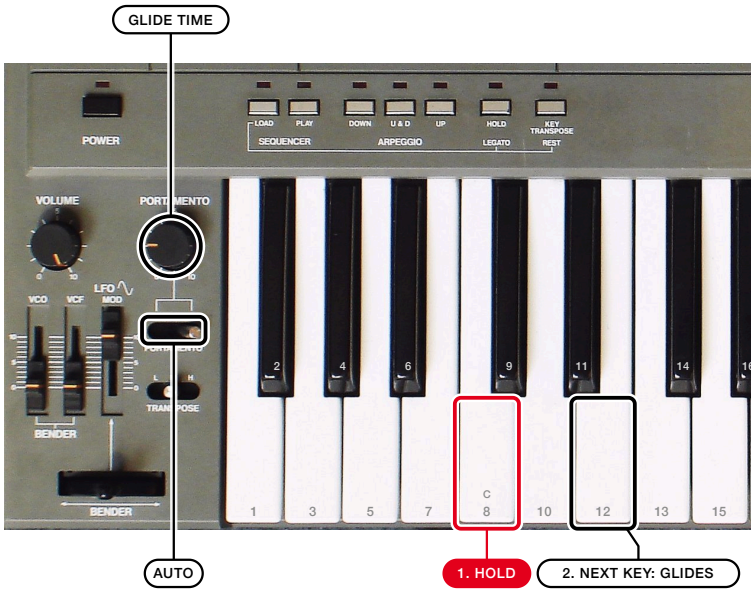



No LED. Key 12 pressed while key 8 is held: legato, so it glides.


1. Set the PORTAMENTO switch to AUTO and the PORTAMENTO knob to the glide time.
2. Play legato (the next key before you let go of the last): the pitch glides.
3. Play detached: each note starts on its own pitch.

NOTE

The firmware pulses PORTAMENTO OFF on every fresh note, so on AUTO only legato keys and legato (tied) sequencer steps glide. ON and OFF ignore it, as stock.

5 ARPEGGIO

ARPEGGIO | FROM KEYBOARD MODE

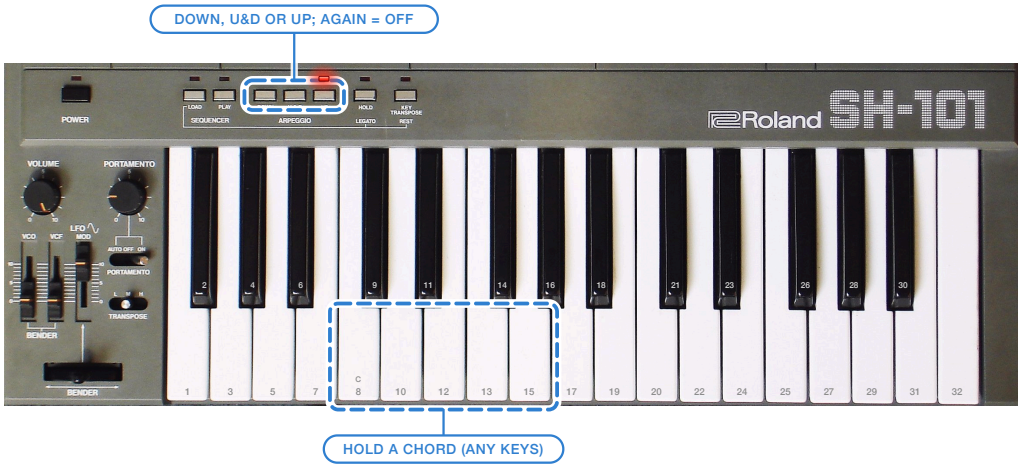

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	OFF	OFF	OFF	ON	OFF	OFF

UP lit: arpeggio up over keys 8, 12, 15.


1. Press UP, DOWN or U&D: its LED lights.
2. Hold a chord: the notes play one after another at the LFO / CLK RATE (or the MIDI clock with sync on).
3. Press another direction to change it; press the lit button again to go back to the keyboard.

NOTE

Each arpeggio note retriggers the envelope; CV / GATE OUT and MIDI OUT follow it.

6 RANDOM ARPEGGIO

ARPEGGIO | FROM KEYBOARD OR ARPEGGIO

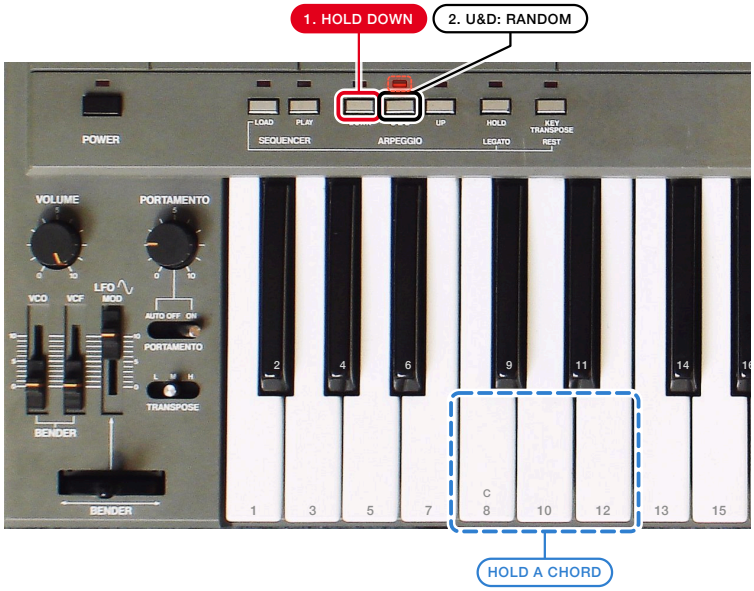


LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	OFF	OFF	BLINK	OFF	OFF	OFF

U&D blinking: random arpeggio.

1. Press DOWN and U&D together: the U&D LED blinks.
2. Held keys play in random order, never the same note twice in a row when there is a choice.
3. DOWN + U&D together again: back to the keyboard.

7 ARPEGGIO OCTAVE RANGE

ARPEGGIO | ARPEGGIO ON

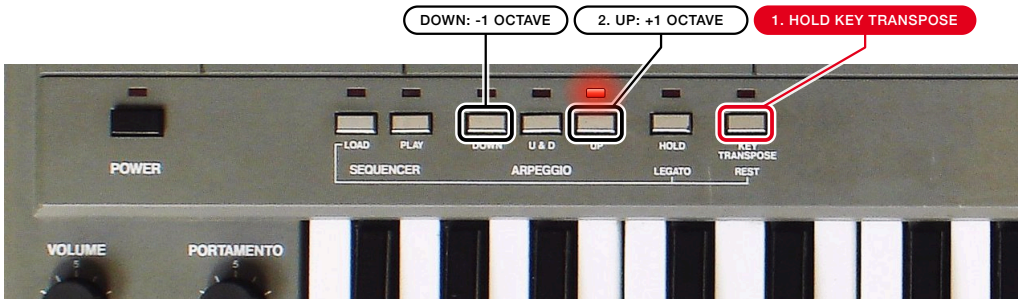

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	OFF	OFF	OFF	ON	OFF	OFF

UP still lit: the range changed, the mode did not. No LED shows the range.


1. With an arpeggio on, hold KEY TRANSPOSE.
2. UP adds an octave, DOWN takes one away: 1 to 3 octaves.
3. UP climbs octave by octave, DOWN starts at the top, U&D bounces across the whole span, random picks an octave too.

NOTE

The range is kept across power-off. It needs an arpeggio running: in keyboard mode KEY TRANSPOSE + UP does nothing to the range.

8 ARPEGGIO AND HOLD

ARPEGGIO | ARPEGGIO ON

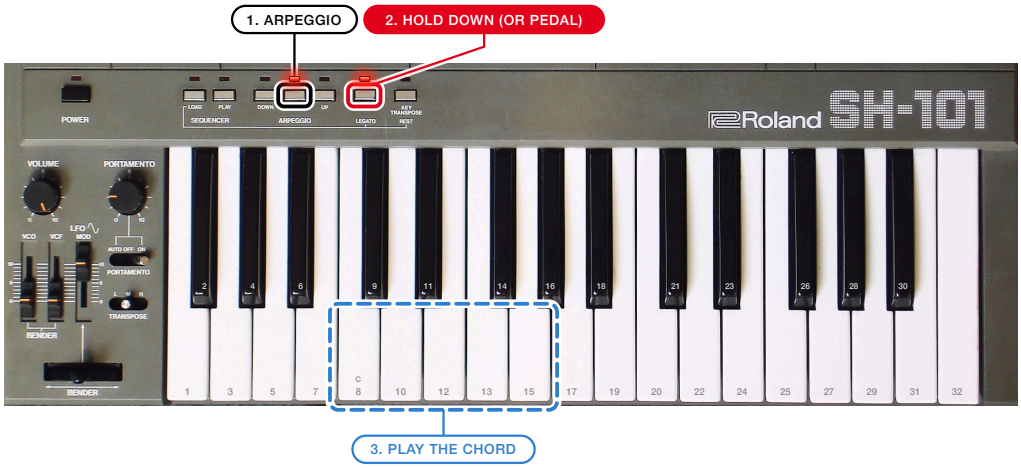


LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	OFF	OFF	ON	OFF	ON	OFF

U&D and HOLD lit: the chord keeps arpeggiating after the keys are released.

1. Pick an arpeggio direction.
2. Keep HOLD down, or press the pedal, and play the chord: it keeps running with the keys released.
3. A new chord replaces it. In this state transpose mode (Transpose chapter) moves it with single keys.

9 RECORD A PATTERN

LOAD | FROM STOP

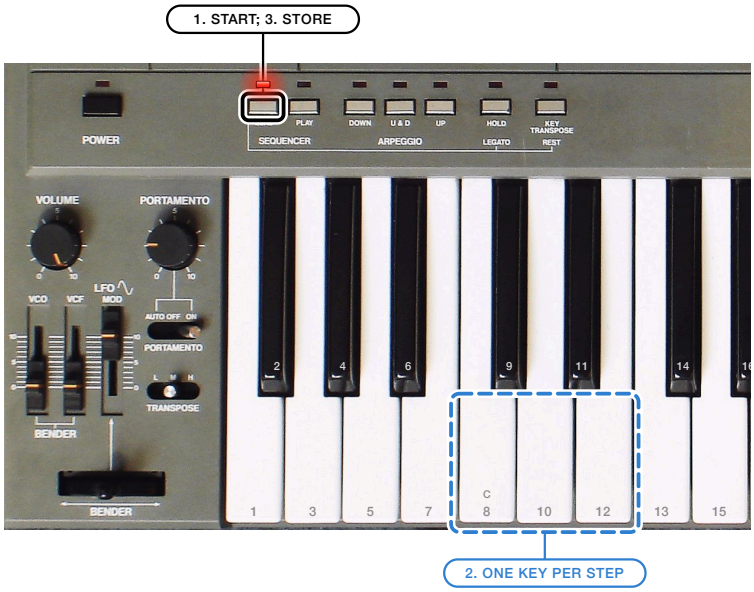

LOAD PLAY DOWN U&D UP HOLD KEY TR.
ON OFF OFF OFF OFF OFF OFF


LOAD lit: recording. Two steps entered.

1. Stopped, press LOAD: the LED lights and the current pattern is cleared.
2. Play the notes, one key per step. Timing does not matter: every key is one step.
3. Press LOAD again: the pattern is stored and the LED goes out.

NOTE
Up to 128 steps, 16 patterns, kept across power-off. PLAY + key 1-16 picks the pattern to record into (Pattern Select).

10 TIES, RESTS, RATCHETS, UNDO

LOAD | RECORDING

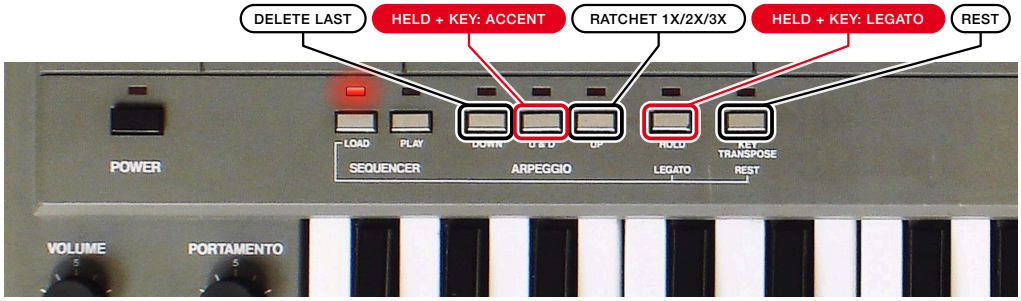

LOAD PLAY DOWN U&D UP HOLD KEY TR.
ON OFF OFF OFF OFF OFF OFF


LOAD lit. Recorded: key 8, key 10 tied, a rest, key 12 (then ratcheted and taken back).

1. Hold HOLD while pressing a key: that step is legato (no retrigger, glides on AUTO).
2. KEY TRANSPOSE enters a rest.
3. UP cycles the last step's ratchet: 1x, 2x, 3x hits inside the step.
4. DOWN takes the last step back; press it again to go further back.
5. Hold U&D while pressing a key: an accented step (needs the board's filter and accent wires).

NOTE
The stock panel prints LEGATO under HOLD and REST under KEY TRANSPOSE for this.

11 PLAY AND STOP

SEQUENCER PLAY | KEYBOARD MODE

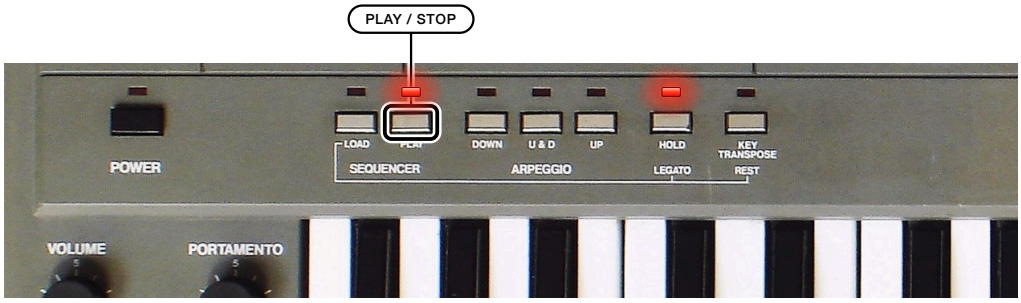

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF


PLAY lit: the pattern runs at the LFO / CLK RATE.

1. Press PLAY: the LED lights and step 1 sounds at once, the next steps at the LFO / CLK RATE (or the MIDI clock with sync on).
2. Press PLAY again to stop.

NOTE
With MIDI sync on, PLAY only arms: the first step waits for the clock (MIDI Sync).

12 CORRECT AND ADD

LOAD | PLAYING

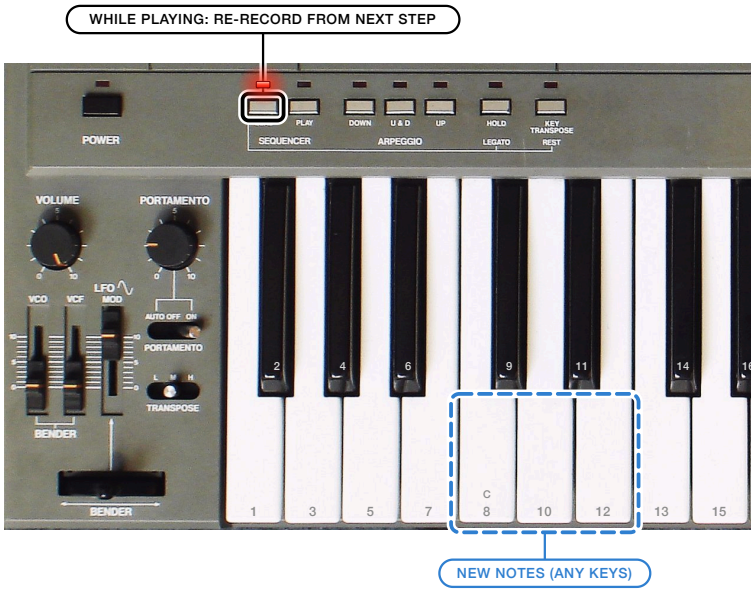

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
ON	OFF	OFF	OFF	OFF	OFF	OFF


LOAD lit: recording again from the step after the one that was sounding.

1. While the pattern plays, press LOAD. Playback stops and the LOAD LED lights.
2. The keys overwrite from the step after the one that was sounding. Steps after the ones you correct stay as they were. If the last step was sounding, the new steps go after it.
3. LOAD again stores.

NOTE
The stock SH-101's Correcting and Adding. LOAD from stop starts a new pattern instead.

13 REAL-TIME RECORD

SEQUENCER PLAY | PLAYING

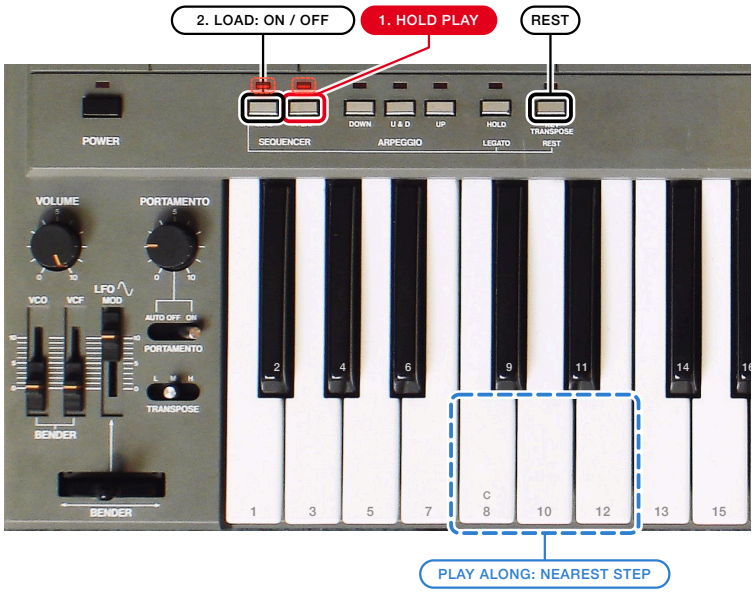

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
BLINK	BLINK	OFF	OFF	OFF	OFF	OFF

PLAY and LOAD alternating: real-time record.


1. While playing, hold PLAY and press LOAD: the PLAY and LOAD LEDs alternate.
2. Keys overwrite the step they land on (the next step once the step is half over). A key held past the half-step ties into the next step. KEY TRANSPOSE writes a rest.
3. Hold PLAY and press LOAD again to end. The edits are stored when playback stops.

NOTE

An empty pattern gets 16 rest steps to record into.

14 PATTERN SELECT

SEQUENCER | STOPPED OR PLAYING

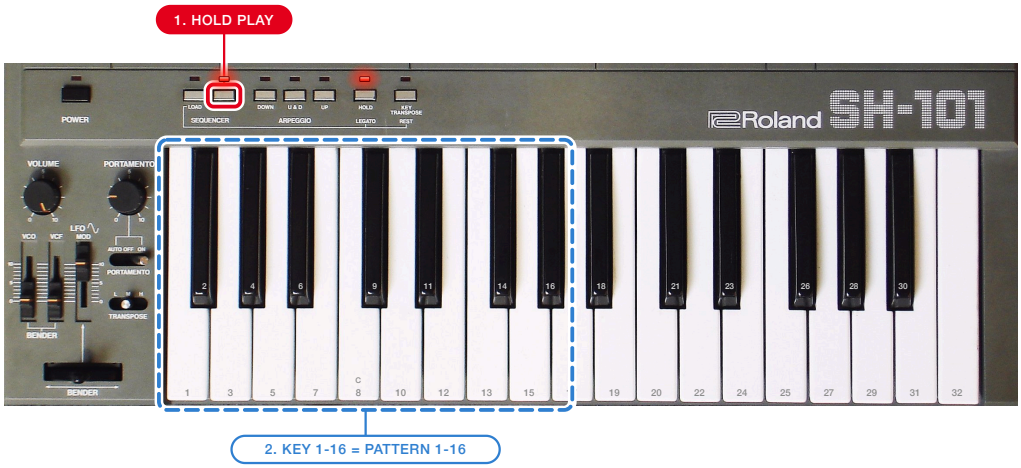

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

Pattern 2 picked from stop: it plays when PLAY is released.


1. Hold PLAY and press one of the 16 lowest keys (key 1 = pattern 1).
2. From stop, the pattern starts when you release PLAY.
3. While playing, it follows at the end of the current pass.

NOTE

MIDI program change 0 to 15 does the same. Hold PLAY and press nothing to toggle play as usual. With PLAY held, UP / DOWN / U&D randomize and KEY TRANSPOSE sets the scale (Randomize and Scale).

15 SONG

SEQUENCER | STOPPED OR PLAYING

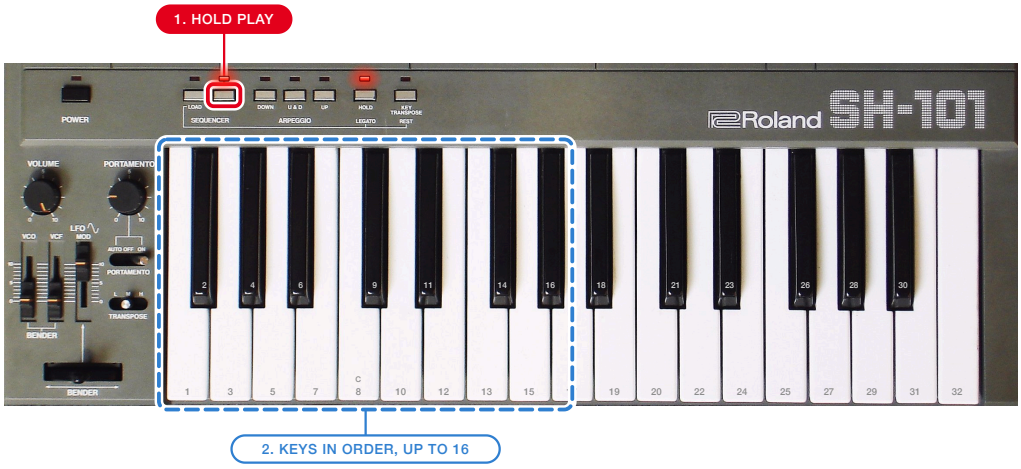

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

Song 1, 2, 1, 3 started from stop.


1. Hold PLAY and press several of keys 1-16 in the order to play them.
2. Release PLAY: from stop the song starts; while playing it starts at the end of the pass.
3. Each pattern plays once, then the next; the song loops.

NOTE

Picking a single pattern, or an instant switch, ends the song.

16 INSTANT SWITCH

SEQUENCER PLAY, SUPEROS MODE | PLAYING, HOLD LED OFF

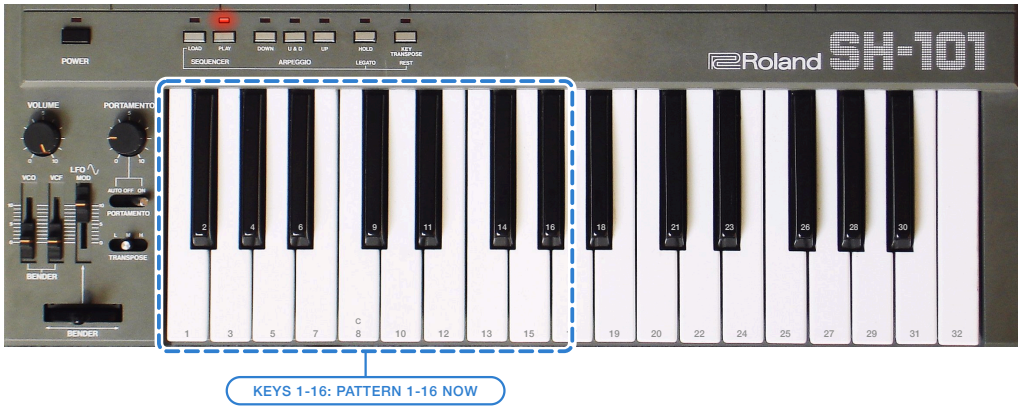

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	OFF	OFF

PLAY lit, HOLD off (SuperOS mode). Pattern 2 took over at the same position.


1. In SuperOS mode (HOLD + LOAD, HOLD LED off), press one of keys 1-16 while playing.
2. That pattern takes over at the next step, at the same position (modulo its length).

NOTE

Patterns whose lengths are multiples of each other stay in step. In performance mode row 1 keys 25-31 switch patterns 1-7 the same way.

17 PLAY DIRECTION

SEQUENCER PLAY | PLAYING

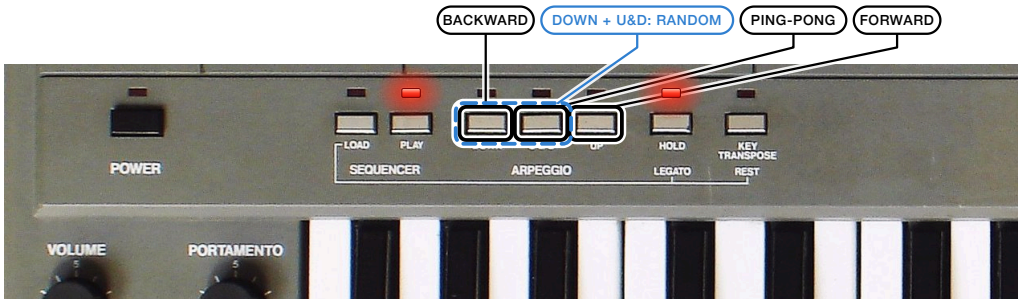

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

PLAY stays lit: the arpeggio LEDs do not show the direction.


1. While playing, with PLAY not held, press UP (forward), DOWN (backward), U&D (ping-pong), or DOWN and U&D together (random).
2. Ping-pong repeats its end steps (1 to n, then n to 1), so a round trip is 2n steps and stays on the bar.
3. The direction is kept across power-off.

NOTE

Config menu keys 15-18 set it too. With PLAY held these buttons randomize the pattern instead (Randomize and Scale).

18 SHIFT

SEQUENCER PLAY | PLAYING

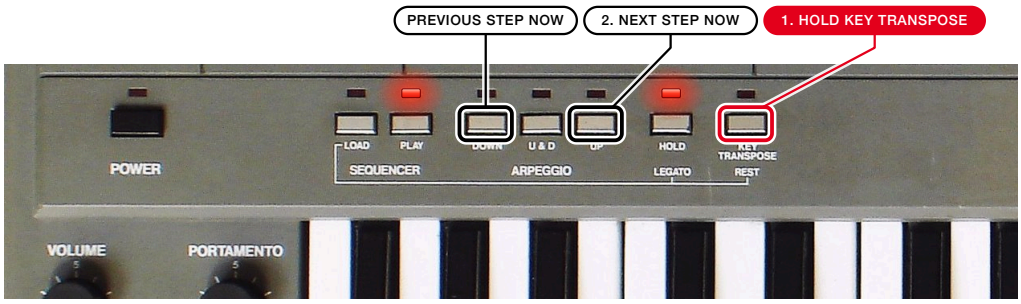


LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

PLAY lit; the pattern moved one step ahead of the clock.

1. While playing, hold KEY TRANSPOSE.
2. UP plays the next step at once, DOWN the previous one: the pattern moves against the clock.

19 NUDGE

SEQUENCER PLAY | PLAYING

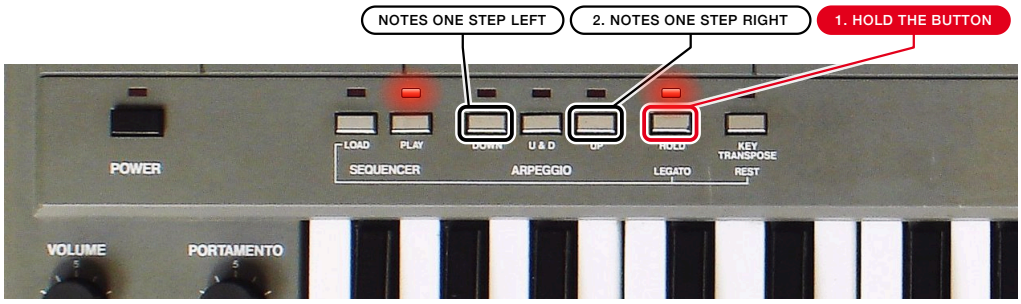

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

PLAY lit (HOLD lights only while held). The notes moved, the timing did not.


1. While playing, hold the HOLD button.
2. UP moves every note one step right (later), DOWN one step left (earlier). Ratchets and accents move with their steps; the pattern wraps around.
3. The move lands at the next half-step: the sounding note has already started and the next one is not chosen yet, so nothing is cut or doubled and the beat never moves.

NOTE

Unlike Shift, which moves the playhead against the clock, Nudge moves the notes inside the pattern. The web editor has the same as ◀ Nudge / Nudge ▶ (Shift + arrow keys), with Undo.

20 LOOP LENGTH, LIVE

SEQUENCER PLAY | PLAYING

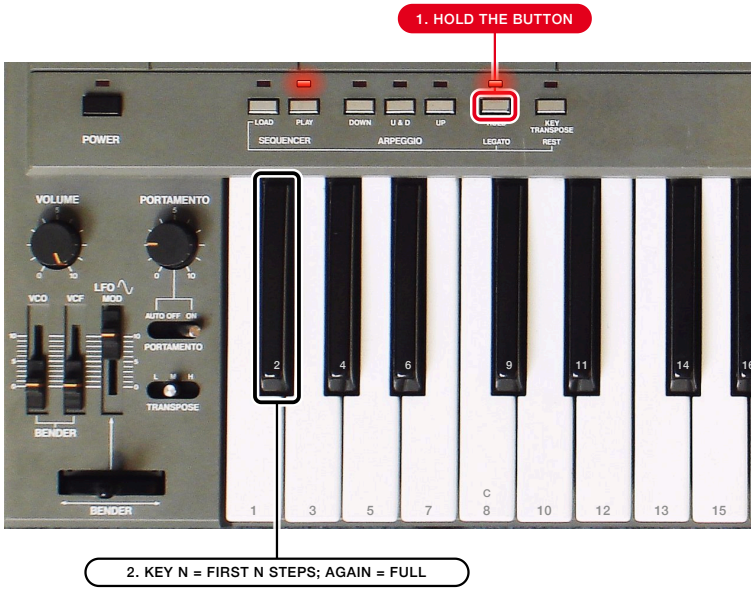

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

Key 2 with HOLD held: only the first 2 steps loop.


1. While playing, hold the HOLD button and press key n: only the first n steps loop (key 1 = 1 step).
2. The same key again: the full pattern.


NOTE

Nothing is erased. The HOLD pedal does not do this; it keeps its hold (or transpose) job.

21 RANDOMIZE

SEQUENCER | STOPPED OR PLAYING

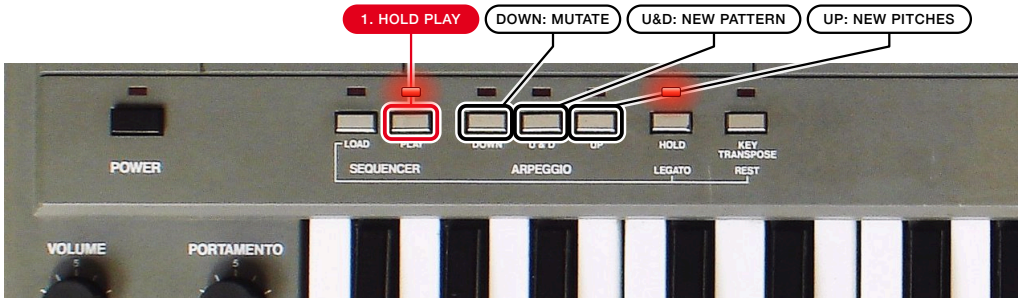



PLAY stays lit: a new pattern while playing. No LED shows a randomize.


1. Hold PLAY and press U&D: a new pattern, rhythm and pitch.
2. PLAY held + UP: new pitches, the rhythm stays. PLAY held + DOWN: mutate, 2 to 4 small edits.
3. It works stopped or playing and never starts play. Written notes land in the pattern's scale when one is on. UP and DOWN need a pattern with steps.


NOTE

Under PLAY held these buttons no longer switch the arpeggio or the direction. The current pattern is changed in place and stored like any edit.

22 SCALE

SEQUENCER | STOPPED OR PLAYING

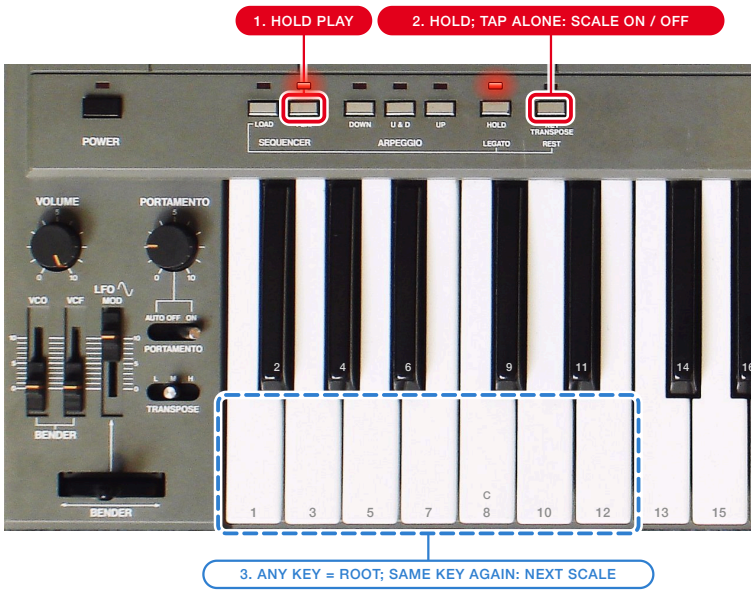



PLAY stays lit: C root, second scale. No LED shows the scale.


1. Hold PLAY and KEY TRANSPOSE and press a key: that note is the root, with Major. Key 8 = C.
2. Still holding KEY TRANSPOSE, press the same key again to step through the 35 scales, Major first.
3. Hold PLAY and tap KEY TRANSPOSE alone: scale on / off.


NOTE

The scale belongs to the pattern and is stored with it. It is non-destructive: the output snaps to the nearest scale note (the lower one on a tie) before any transpose, and the steps themselves are unchanged. Under PLAY held, KEY TRANSPOSE neither transposes nor counts toward the transpose-mode double tap.

23 PERFORMANCE / SUPEROS MODE

ANY MODE BUT LOAD | ANY TIME

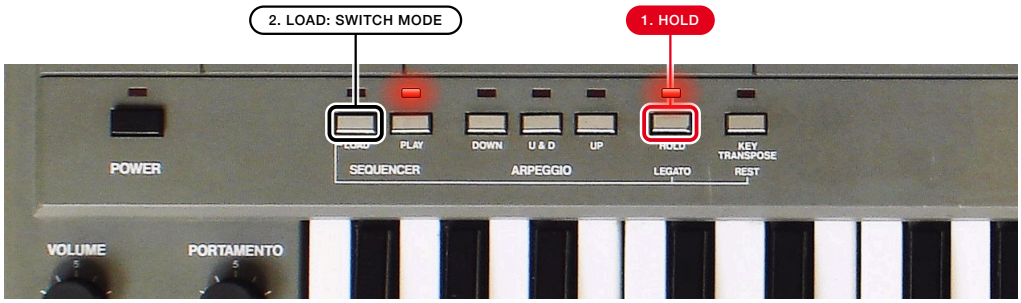

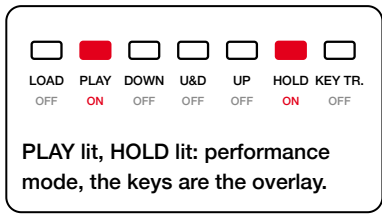

PLAY lit, HOLD lit: performance mode, the keys are the overlay.

1. Hold HOLD and press LOAD: performance mode on or off. The choice is saved.
2. Performance mode: while a sequence plays the HOLD LED stays lit and the keys are the performance rows. The HOLD LED flashes three times when you switch it on.
3. SuperOS mode: HOLD LED off (one flash when you switch), the keys switch patterns 1-16 while playing.


NOTE

Ratchet recording, randomize and mutate (PLAY + UP / DOWN / U&D), nudge, shift, loop length and the scale gestures work in both modes: they use a held function button. Performance choices keep playing in SuperOS mode until reset.

24 PERFORMANCE ROWS

SEQUENCER PLAY | PLAYING





PLAY lit. TRANSPOSE on M: the keys are row 2, Pitch.


1. While a sequence plays, the keys are the overlay strip above them.
2. The TRANSPOSE switch picks the row: L = 1 Global, M = 2 Pitch, H = 3 Time.
3. A choice stays on until you press the same key again or reset it. Nothing is written into the pattern.

NOTE

Only while playing with no function button held: HOLD + key, PLAY + key and KEY TRANSPOSE + key keep their jobs. Stopped, the keys play notes and the switch sets the octave. The web editor can turn the overlay off.


25 ROW 1: GLOBAL

SEQUENCER PLAY | PLAYING, TRANSPOSE ON L

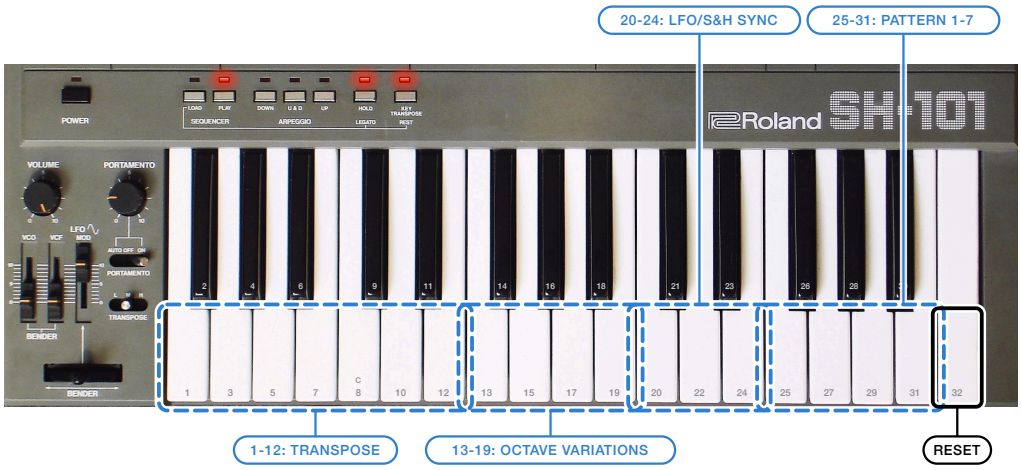

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	ON

KEY TRANSPOSE lit: key 10 transposed the pattern up 2, from the next step.

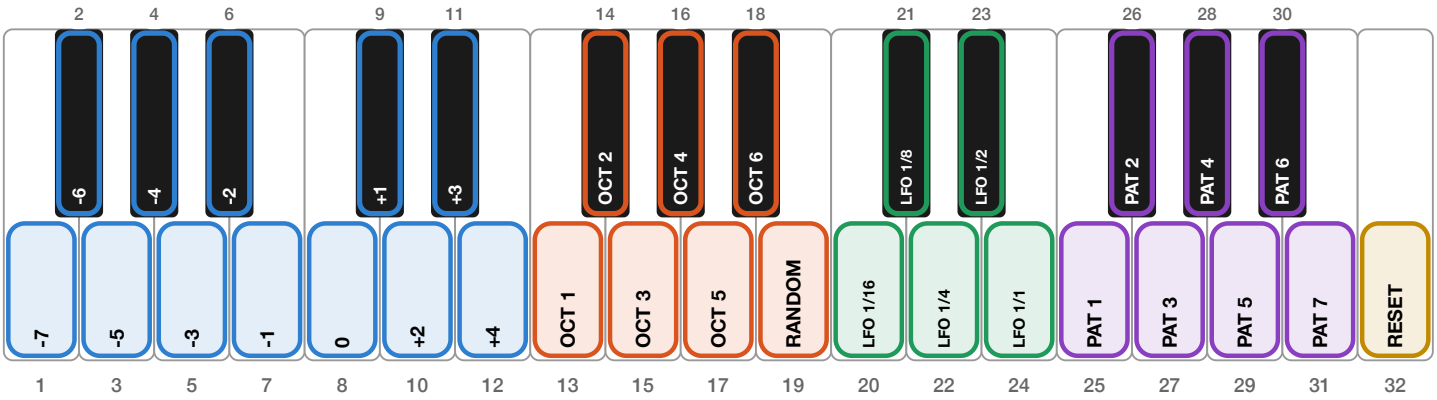


1. Keys 1-12 transpose from the lowest C (key 8 = none), from the next step on.
2. Keys 13-19: octave variations 1-7 (7 = a random octave each step).
3. Keys 20-24: the LFO (and its random S&H) restarts on a 1/16, 1/8, 1/4, 1/2 or 1/1 grid. The same key again stops the restart.
4. Keys 25-31: patterns 1-7, switched at the next step, at the same position.


NOTE

Key 32 alone clears the row (transpose, octaves, LFO sync); held + a key turns that function off. Every choice lands on the next step, never on the sounding note.


26 ROW 2: PITCH

SEQUENCER PLAY | PLAYING, TRANSPOSE ON M

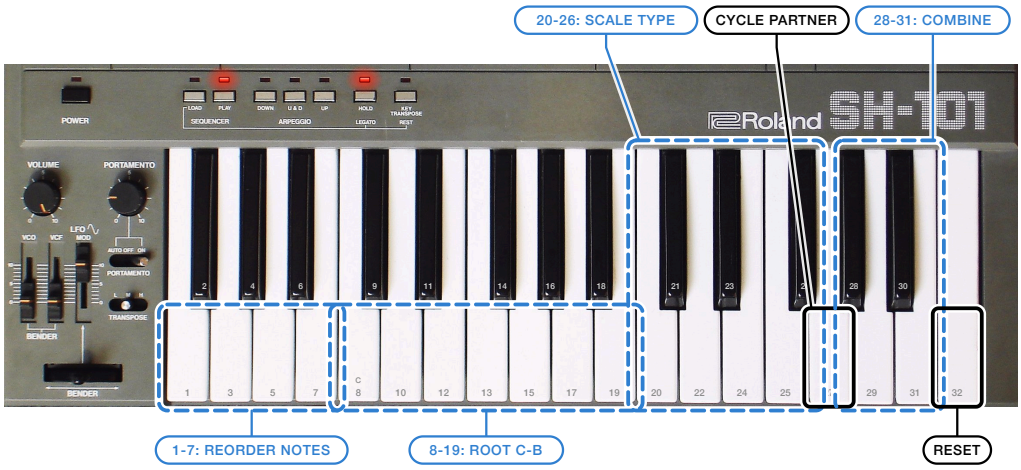

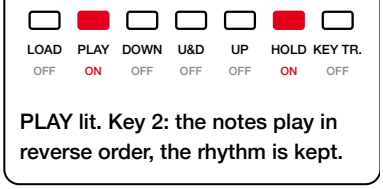

PLAY lit. Key 2: the notes play in reverse order, the rhythm is kept.

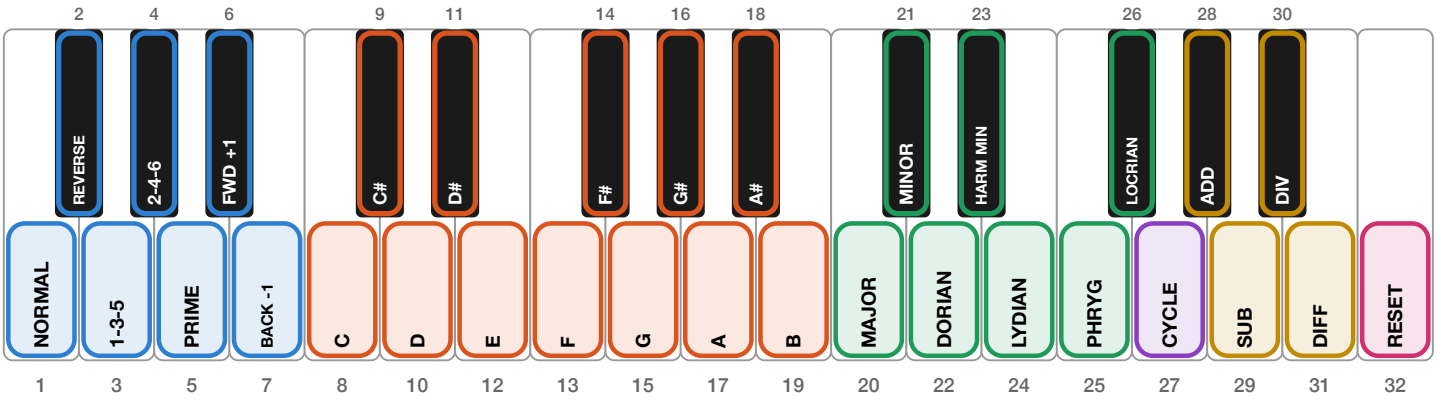


1. Keys 1-7 reorder the notes (rests stay): as written, reverse, 1st 3rd 5th first, 2nd 4th 6th first, a prime stride, and one forward / one back, which move one note further every loop pass.
2. Keys 8-19 set the quantizer root, keys 20-26 the type: major, minor, dorian, harmonic minor, lydian, phrygian, locrian. The quantizer acts after reorder and combine, so it scales the combined notes too. Its key again turns the scale off, and on again.
3. Key 27 cycles the partner pattern through the saved ones; keys 28-31 combine the pitches with it: add, subtract, divide, difference.


NOTE

A root alone uses major, a type alone uses C. With no partner picked, it is the next pattern. Key 32 alone clears the row; key 32 held + a key turns that function off.

27 ROW 3: TIME

SEQUENCER PLAY | PLAYING, TRANSPOSE ON H

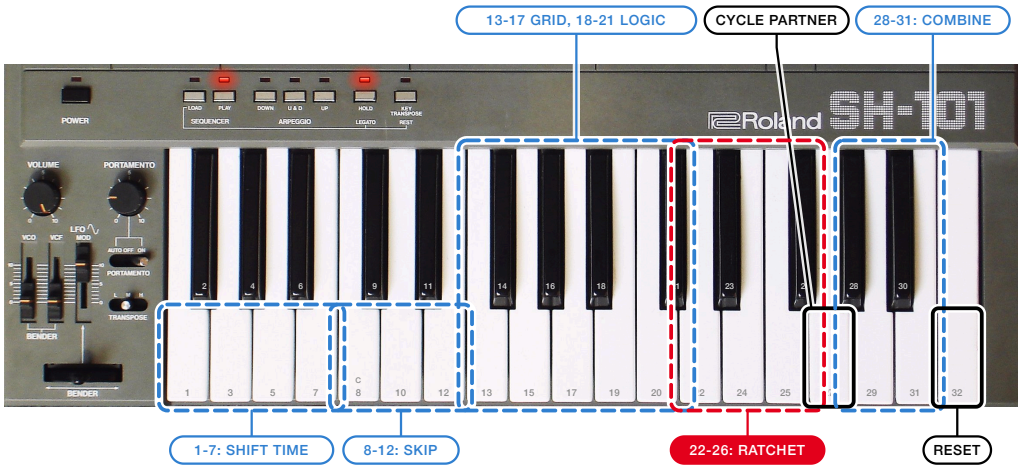



PLAY lit. Key 5: the pattern plays a sixteenth later.




1. Keys 1-7 shift time: 1/4 right, left; 1/8 right, left; 1/16 right, left; 3/16 right.
2. Keys 8-12 skip every 4th, every 8th, even, odd or every 5th clock: silent, the pattern waits.
3. Keys 13-17 pick a grid (1/4 1/8 1/16 1/4T 1/16T), keys 18-21 how it meets the step clock (NOR OR AND XOR): OR adds steps, AND deletes them.
4. Key 27 cycles the rhythm partner through the saved patterns; keys 28-31 combine the rhythm with it: AND OR NOR XOR.

NOTE

The grid follows the MIDI clock when it drives the SH-101. Ratchet (keys 22-26) is on the next page. Key 32 alone clears the row.


28 RATCHET

SEQUENCER PLAY | PLAYING, TRANSPOSE ON H

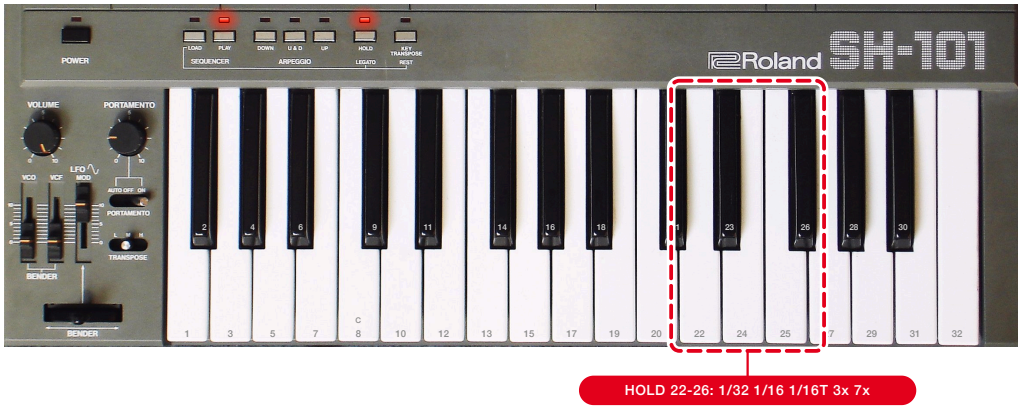

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

PLAY lit. Key 23 held: from the next step its note repeats every sixteenth.

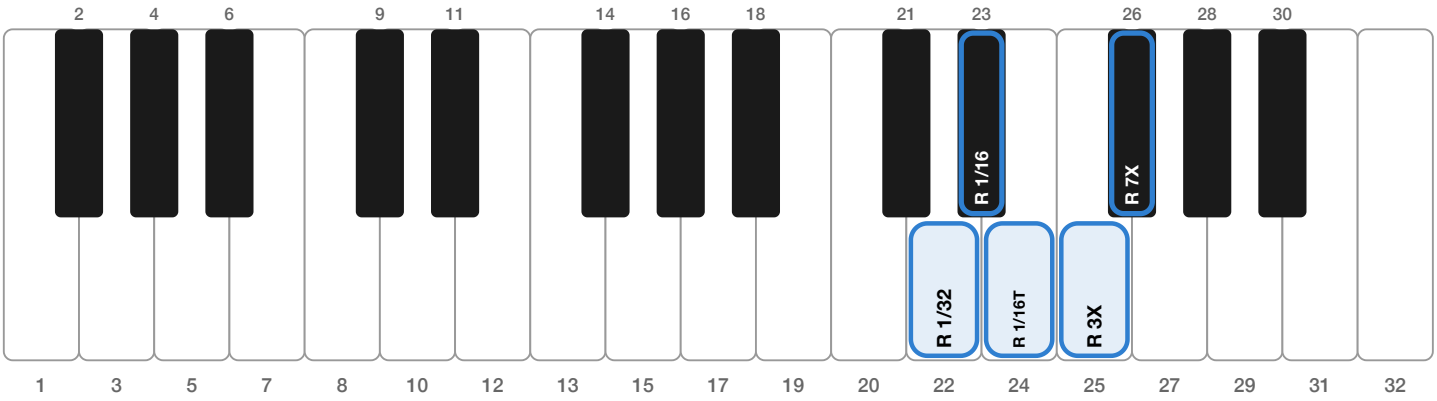

1. Hold one of keys 22-26: from the next step its note repeats at 1/32, 1/16, 1/16 triplets, 3 or 7 times a step.
2. The pattern runs on underneath: let go and it carries on where it would be.


NOTE

Ratchet is the one function that does not latch.

29 WRITE AND RESET

SEQUENCER PLAY | PLAYING





PLAY lit: still playing, now from the written pattern.


1. KEY TRANSPOSE + LOAD while playing writes one pass of what plays into the pattern: reorder, quantizer, combine, octave variation, shift and transpose become its notes. An active scale stays on as the pattern's own.
2. Those settings are then cleared, so the new pattern is the baseline and sounds the same. The LFO/S&H sync and the timing ones (skip, add/delete, ratchet) stay on.
3. Key 32 tapped clears its row; held for 1 second it clears all three rows.


NOTE

Writing changes the stored pattern; everything else in the overlay never does.

30 KEY TRANSPOSE

ANY MODE BUT LOAD | ANY TIME

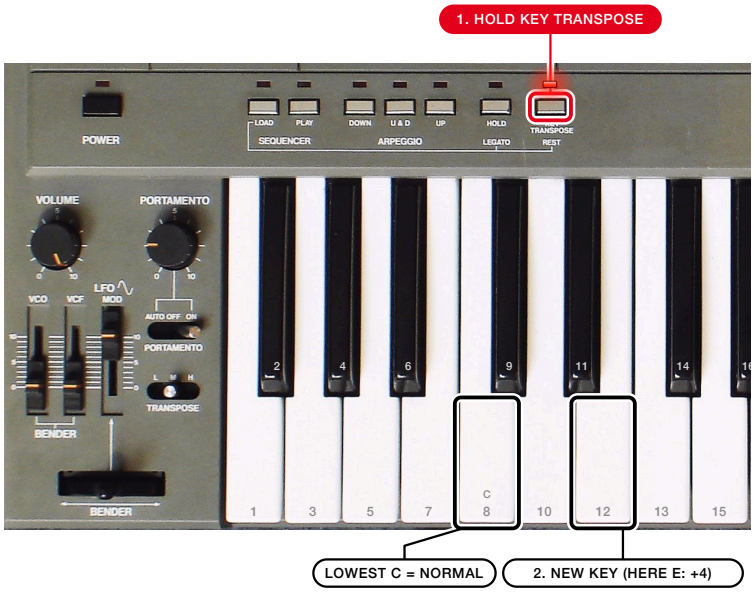



KEY TRANSPOSE lit: transposed up 4 semitones (key 12 = E).


1. Hold KEY TRANSPOSE and press a key: everything that plays moves by its distance from the lowest C (key 8). The LED stays lit.
2. It stays after you let go: keyboard, arpeggio and sequencer all follow.
3. KEY TRANSPOSE + key 8 returns to normal and the LED goes out.


NOTE

Unlike the stock SH-101 the transpose also reaches CV OUT and MIDI OUT.

31 TRANSPOSE MODE

SEQUENCER PLAY OR HELD ARPEGGIO | ANY TIME

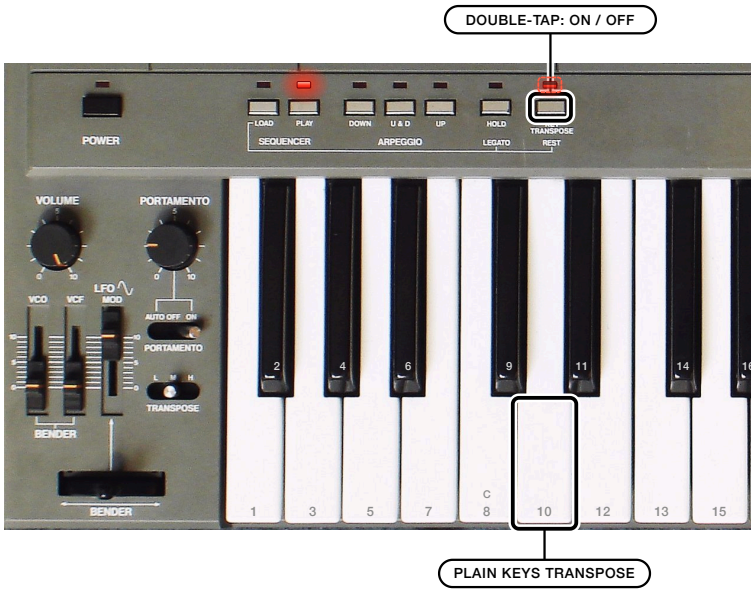





KEY TRANSPOSE blinking: transpose mode. Key 10 moved the pattern up 2.

1. Tap KEY TRANSPOSE twice quickly: its LED blinks.
2. While the sequencer plays, or an arpeggio runs latched by HOLD, plain keys transpose: no button to hold.
3. Double-tap again to leave; the last transpose stays.

32 PEDAL AS KEY TRANSPOSE

CONFIG MENU, THEN ANY MODE | SET ONCE

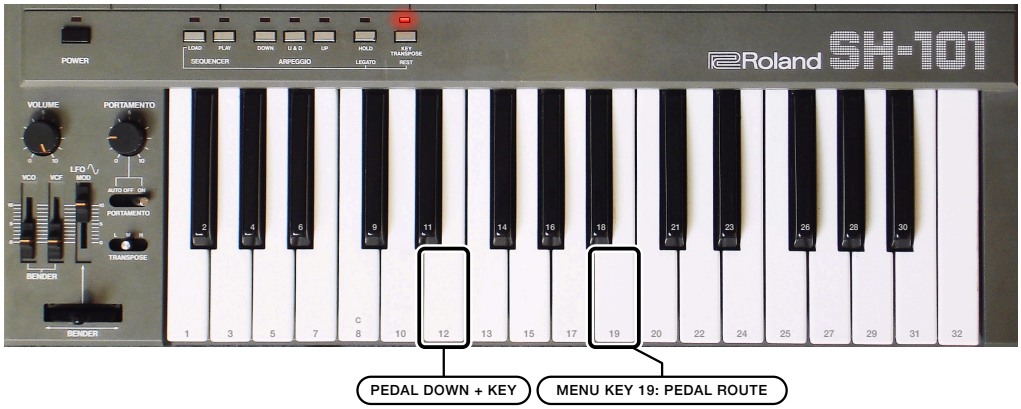

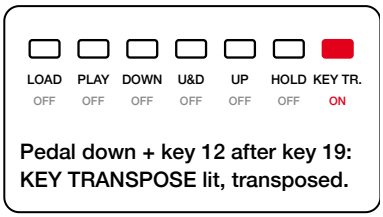

Pedal down + key 12 after key 19: KEY TRANSPOSE lit, transposed.


1. In the config menu press key 19: the HOLD pedal jack now acts as the KEY TRANSPOSE button.
2. Hold the pedal and press a key to transpose; double-tap it for transpose mode; in LOAD it enters a rest.
3. Key 19 again in the menu: back to HOLD.


NOTE

Kept across power-off. The HOLD button keeps working as HOLD.

33 TUNE

KEYBOARD | KEYBOARD MODE

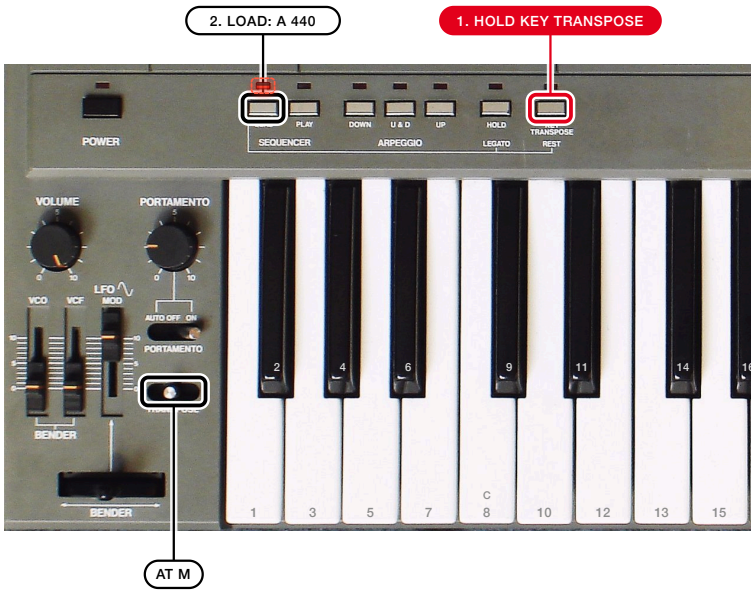

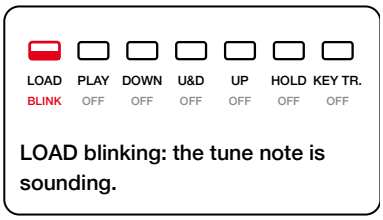

LOAD blinking: the tune note is sounding.

1. From keyboard mode, hold KEY TRANSPOSE and press LOAD: the LOAD LED blinks and an A sounds with the gate open.
2. At 8' with TRANSPOSE on M it is 440 Hz; MIDI OUT sends note 69 for a tuner.
3. Set TUNE, then press any function button to leave.

34 ENTER AND LEAVE

CONFIG MENU | ANY TIME




LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

Menu: HOLD lit; PLAY lit = SuperOS is running.

1. Hold HOLD and KEY TRANSPOSE together for 2 seconds (or while switching on).
2. The HOLD LED lights, the gate closes, and LOAD (original firmware) or PLAY (SuperOS) shows the firmware that is running. KEY TRANSPOSE lit = MIDI clock sync on.
3. Press KEY TRANSPOSE to leave. Every setting is kept across power-off.

35 FIRMWARE: SUPEROS OR ORIGINAL

CONFIG MENU | IN THE MENU

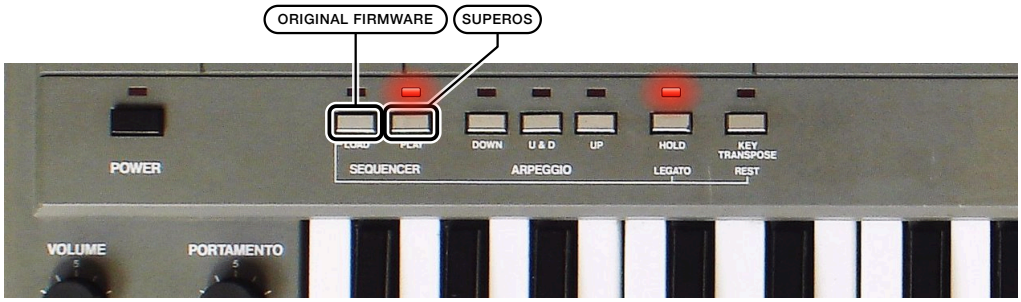

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

PLAY lit: SuperOS is running.


1. In the menu, LOAD switches to the original firmware: the instrument's original program.
2. PLAY switches to SuperOS. The switch is immediate.
3. The choice is kept; the menu works the same way in both.

NOTE

With the original firmware the SH-101 behaves as from the factory (100 steps, stock arpeggio), with MIDI and clock sync added. Its power-on test mode (LOAD + KEY TRANSPOSE) works there.

36 MIDI CLOCK SYNC

CONFIG MENU | IN THE MENU

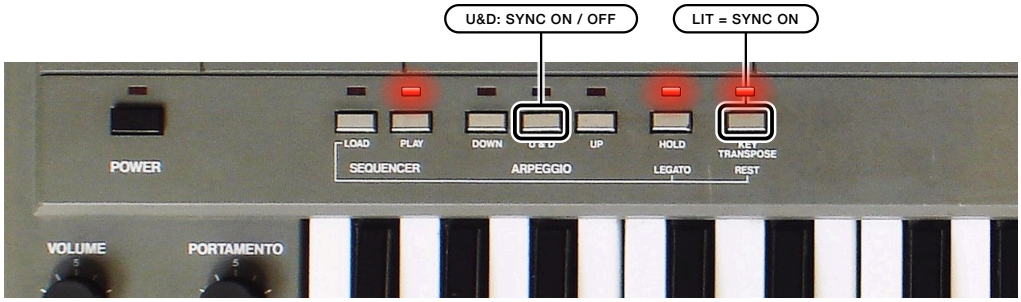


LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	ON


KEY TRANSPOSE lit: MIDI clock sync is on.

1. In the menu, press U&D to switch MIDI clock sync on or off.
2. KEY TRANSPOSE lit = on. The arpeggio and sequencer then follow MIDI clock (MIDI Sync).

37 CLOCK DIVISION

CONFIG MENU | IN THE MENU

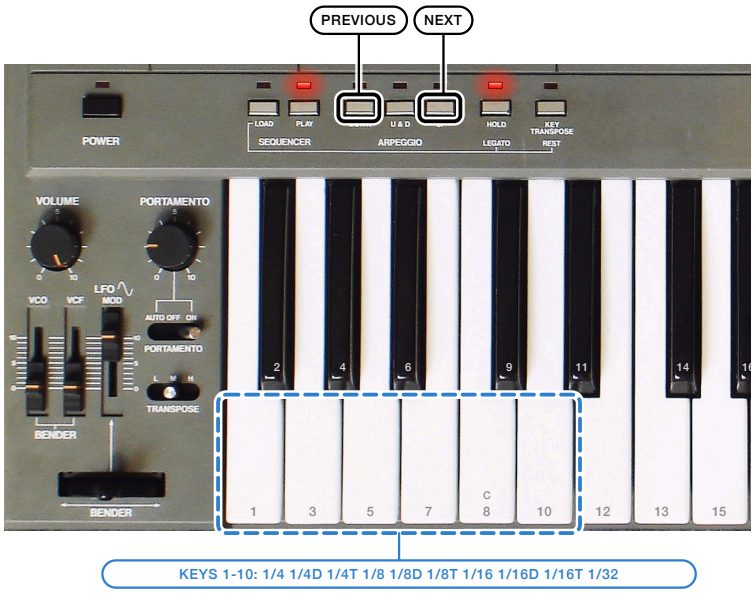

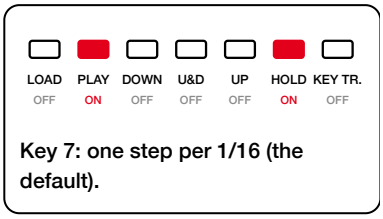

Key 7: one step per 1/16 (the default).


1. In the menu, press one of keys 1-10 for the step length: 1/4, 1/4 dotted, 1/4 triplet, 1/8, 1/8 dotted, 1/8 triplet, 1/16, 1/16 dotted, 1/16 triplet, 1/32.
2. Or step through them with UP and DOWN.

NOTE

No LED shows the division. It applies with MIDI sync on.

38 ACCENT, CUTOFF, LFO SYNC

CONFIG MENU | IN THE MENU

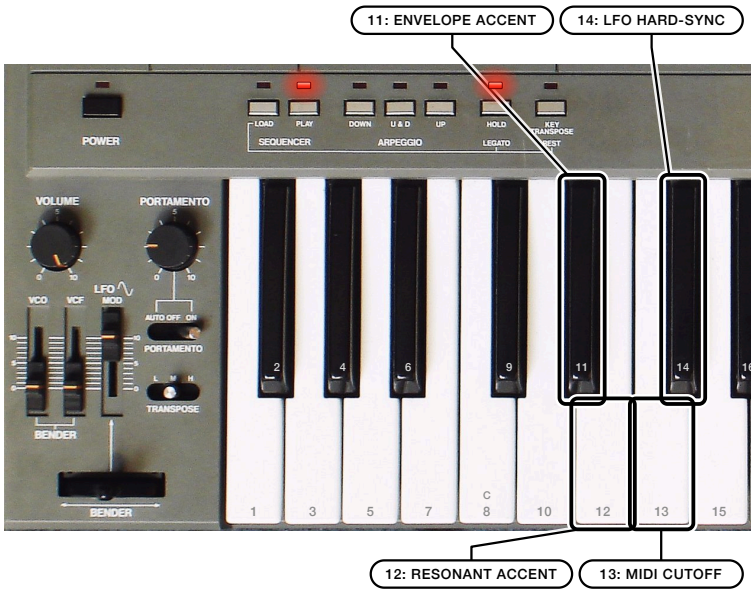

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF


Key 12: resonant accent.

1. Key 11 / 12: accent model for notes at MIDI velocity 100 or more and accented steps: envelope (follows the synth's envelope) or resonant (a short sweep that builds up over accents).
2. Key 13: MIDI filter cutoff (CC 74) on / off.
3. Key 14: LFO hard-sync on / off. On: with MIDI sync the LFO is reset to the clock. Off: the LFO runs free for modulation while the steps still follow the clock.

NOTE
Accent and cutoff need the board's filter and accent wires. No LED shows these settings.

39 DIRECTION AND PEDAL

CONFIG MENU | IN THE MENU

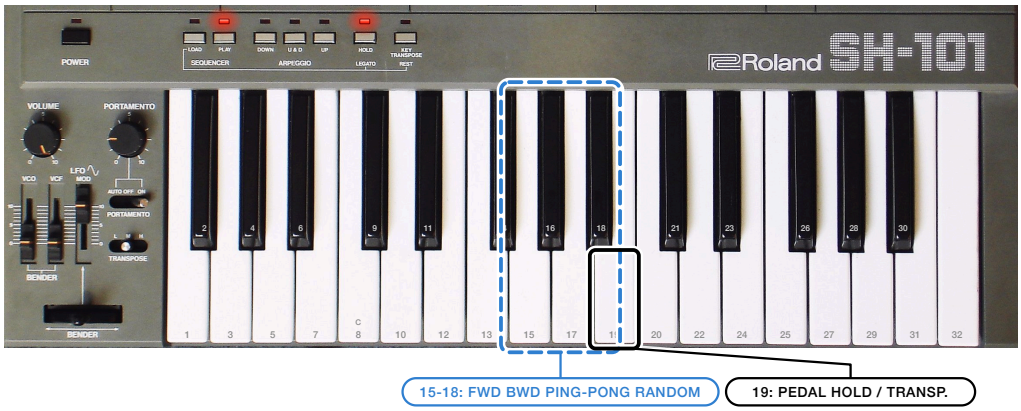


LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

Key 17: ping-pong.

1. Keys 15-18 set the sequencer direction: forward, backward, ping-pong (the end steps repeat), random (the same setting as the buttons while playing).
2. Key 19 switches the pedal jack between HOLD and KEY TRANSPOSE.

40 SYNC DELAY

CONFIG MENU | IN THE MENU

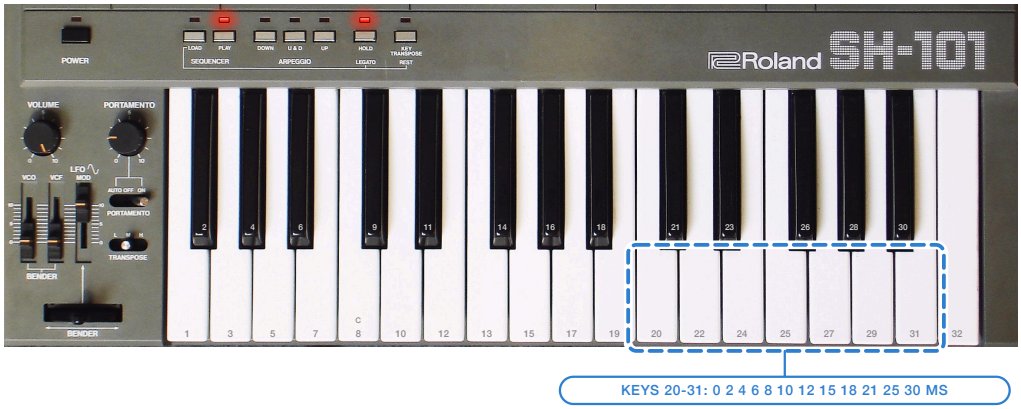

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

Key 24: 8 ms later than the clock.


1. Keys 20-31 set how much later than the incoming MIDI clock the SH-101 plays: 0, 2, 4, 6, 8, 10, 12, 15, 18, 21, 25 or 30 ms.
2. Use it to line the SH-101 up with slower gear or a delayed listening path.

NOTE

Only with MIDI sync on. The editor can set 0 to 60 ms.

41 START MODE AND MIDI THRU

CONFIG MENU | IN THE MENU

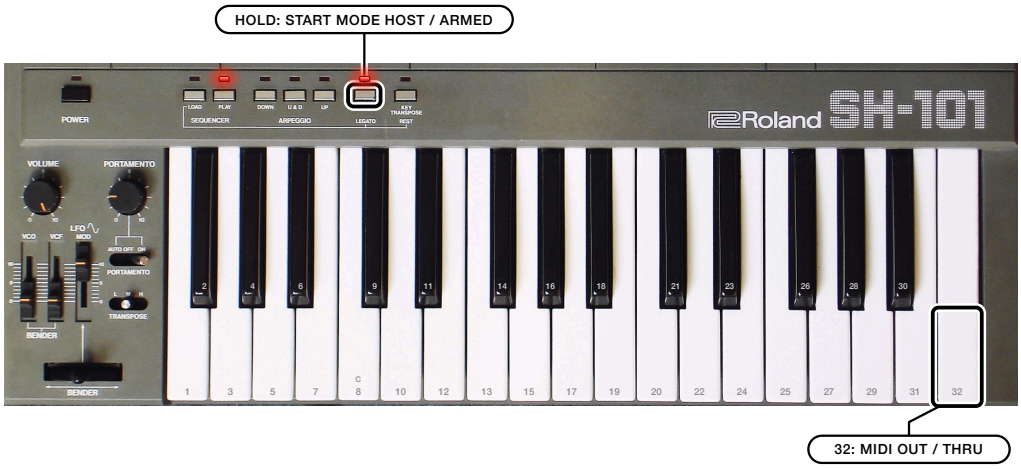

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

Menu LEDs unchanged: no LED shows these settings.


1. HOLD switches the start mode. Host (the default): the host's MIDI Start plays the SH-101. Armed: Start plays only a pattern you queued with PLAY; Stop sends it back to step 1, still queued.
2. Key 32 switches the MIDI OUT jack: OUT sends the notes the SH-101 plays, THRU passes on what arrives at MIDI IN and sends none of its own notes.

NOTE

Both are kept across power-off. Start mode acts only with MIDI sync on. The web editor shows and sets both.

42 HOST TRANSPORT

SEQUENCER, SYNC ON | MIDI CLOCK SYNC ON

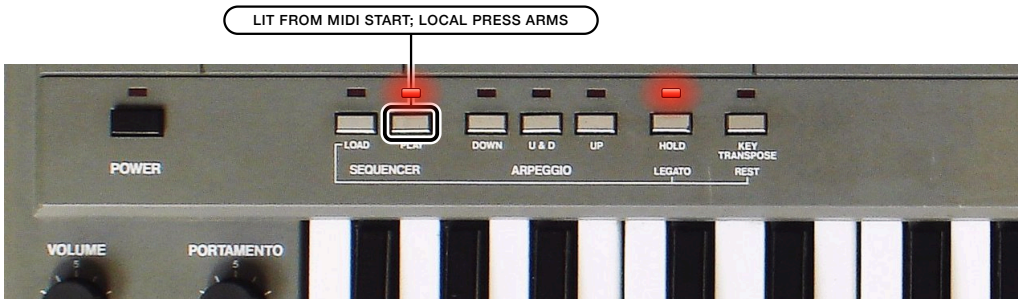

LOAD	PLAY	DOWN	U&D	UP	HOLD	KEY TR.
OFF	ON	OFF	OFF	OFF	ON	OFF

PLAY lit: the host's Start started the sequencer.

1. With sync on, MIDI Start starts the sequencer from the first clock, MIDI Stop stops it.
2. Pressing PLAY yourself only arms it: the first step waits for the host's clock.
3. A synced SH-101 never runs on its own: no clock, no steps. The arpeggio follows the clock too.

NOTE

Start does not interrupt a running arpeggio or LOAD. With sync off, Start only rewinds a pattern that is already playing. While the clock drives the SH-101, the KEY TRANSPOSE LED blinks on the beat. Start mode Armed (Config Menu HOLD) changes step 1: see Start Mode and MIDI Thru.

LEDS

LED	MEANING
LOAD lit	Recording (LOAD); in the menu: original firmware running
LOAD blinks	Tune
PLAY lit	Sequencer playing (or armed); in the menu: SuperOS running
PLAY + LOAD alternate	Real-time record
DOWN / U&D / UP lit	Arpeggio direction
U&D blinks	Random arpeggio
HOLD lit	HOLD button or pedal down; playing in performance mode; in the menu: the menu is open
KEY TRANSPOSE lit	A transpose is active; in the menu: MIDI clock sync on
KEY TRANSPOSE blinks	Fast: transpose mode. On the beat: MIDI clock is driving the SH-101

PLAYING

GESTURE	FUNCTION
Keys	play; the lowest held key sounds
HOLD button or pedal down + keys	keys latch while it is down
TRANSPOSE switch L / M / H	octave down / normal / up
PORTAMENTO switch AUTO	only legato notes glide

ARPEGGIO

GESTURE	FUNCTION
UP / DOWN / U&D	arpeggio; same button again = off
DOWN + U&D together	random arpeggio; again = off
Arp on: KEY TRANSPOSE + UP / DOWN	octave range 1-3
Arp + HOLD or pedal + chord	latched arpeggio

SEQUENCER

GESTURE	FUNCTION
Stopped: LOAD, keys, LOAD	record a new pattern
In LOAD: HOLD + key / KEY TRANSPOSE / UP / DOWN / U&D + key	legato / rest / ratchet / undo / accent
PLAY	play / stop
Playing: LOAD	re-record from the next step
Playing: PLAY + LOAD	real-time record on / off
PLAY + key 1-16	pattern (stopped: starts; playing: at loop end)
PLAY + several keys 1-16	song, up to 16, loops
SuperOS mode, playing: key 1-16	switch to pattern 1-16 now
Playing: UP / DOWN / U&D / DOWN + U&D	forward / backward / ping-pong / random
Playing: KEY TRANSPOSE + UP / DOWN	shift a step ahead / back
Playing: HOLD button + UP / DOWN	nudge the notes a step right / left
Playing: HOLD button + key n	loop the first n steps; again = full

RANDOMIZE AND SCALE

GESTURE	FUNCTION
PLAY + U&D / UP / DOWN	new pattern / new pitches / mutate
PLAY + KEY TRANSPOSE + key / tap	scale root (again = next scale) / scale on-off

PERFORMANCE MODES

GESTURE	FUNCTION
HOLD + LOAD	performance mode (HOLD LED lit while playing) / SuperOS mode
Playing: TRANSPOSE L / M / H	performance row Global / Pitch / Time
Row 1 (L): keys 1-12 / 13-19 / 20-24 / 25-31 / 32	transpose / octaves / LFO sync / patterns / reset
Row 2 (M): keys 1-7 / 8-19 / 20-26 / 27 / 28-31	reorder / root / scale / partner / combine pitch
Row 3 (H): keys 1-7 / 8-12 / 13-21 / 27 / 28-31	shift / skip / add-delete / partner / combine rhythm
Row 3 (H): hold key 22-26	ratchet from the next step
Playing: KEY TRANSPOSE + LOAD / key 32 held 1 s	write what plays / reset every row

TRANSPOSE AND TUNE

GESTURE	FUNCTION
KEY TRANSPOSE + key	transpose; + key 8 (lowest C) = normal
Double-tap KEY TRANSPOSE	transpose mode on / off
Menu key 19	pedal acts as KEY TRANSPOSE
Keyboard mode: KEY TRANSPOSE + LOAD	tune note A 440; any button exits

CONFIG MENU

GESTURE	FUNCTION
HOLD + KEY TRANSPOSE 2 s	config menu; KEY TRANSPOSE exits
Menu: LOAD / PLAY	original firmware / SuperOS
Menu: U&D	MIDI clock sync on / off
Menu: keys 1-10, UP / DOWN	clock division
Menu: keys 11-14	accent envelope / resonant, MIDI cutoff, LFO hard-sync
Menu: keys 15-18 / 19	sequencer direction / pedal route
Menu: keys 20-31	sync delay 0-30 ms
Menu: HOLD / key 32	start mode Host / Armed, MIDI OUT / THRU

MIDI SYNC

GESTURE	FUNCTION
Sync on: MIDI Start / Stop	run the sequencer; PLAY only arms

MIDI

Notes 53 to 84 on the receive channel act as keys 1 to 32 (they arpeggiate and record); other notes 36 to 99 play the voice. Program change 0 to 15 selects pattern 1 to 16. CC 74 moves the filter cutoff and velocity 100 or more accents a note (with the board's filter and accent wires). Everything played goes out on MIDI OUT at velocity 100, accented steps at 127. The web editor edits patterns and settings over USB-C or DIN.

RESYNC

The editor's Resync button puts the sequence back on the one. It has no panel gesture. Direction, loop length, pattern switches and clock-division changes never move the sequence off the grid.

ABOUT THESE PAGES

The LEDs in every drawing are the ones the firmware shows after the keys of that function, on a fresh machine, drawn on a photo of the panel (lit LEDs glow red; a blinking LED is half lit inside a dashed ring).

Panel photo: Wikipedia user 909 bd, Wikimedia Commons, CC BY-SA 3.0. The panel images in this guide are adaptations of that photo, under the same license (creativecommons.org/licenses/by-sa/3.0).