

BlueJay 1v2

Pin breakout & notes

3V3 is always available.
Aux3V3 is switchable.

NFC on JST
at bottom

Hdr3

- 1 Gnd
- 2 P1.02/NFC1
- 3 SPI2.SCK/P1.03/NFC2
- 4 SPI2.MISO/P1.06
- 5 SPI2.MOSI/P1.08
- 6 IIC.SCL/P1.04
- 7 IIC..SDA/P1.05
- 8 3V3

Hdr2

- 1 Gnd
- 2 P0.00
- 3 P0.01
- 4 P0.02
- 5 P1.07
- 6 P1.09
- 7 P1.10
- 8 5Vext

Hdr1 SWD

- 1 Gnd
- 2 /Reset
- 3 SWDIO
- 4 SWDCLK
- 5 3V3

Hdr5 QSPI


- 1 Gnd
- 2 D0
- 3 D1
- 4 D2
- 5 D3
- 6 SCK
- 7 P2.06
- 8 Aux3V3

Hdr4

- 1 Gnd
- 2 P1.11
- 3 P1.12
- 4 3V3
- 5 P2.07
- 6 P2.08
- 7 P2.09
- 8 Aux3V3

Jpr1

Jump 1-2 for
battery.
Jump 2-3 for
external power.

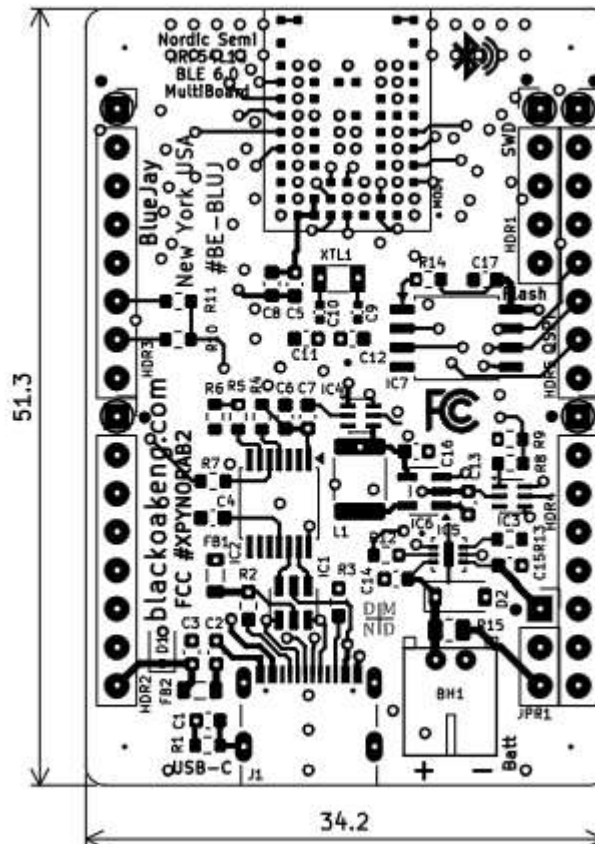

External 5V power may
come from USB or Hdr2.8.

USB-C

If functionality such as IIC,
QSPI, or SPI is not needed
these pins may be re-tasked.

Black Oak Engineering
precision electronic instruments

