


Leader — System interconnections

Board interfaces and battery power · not to scale

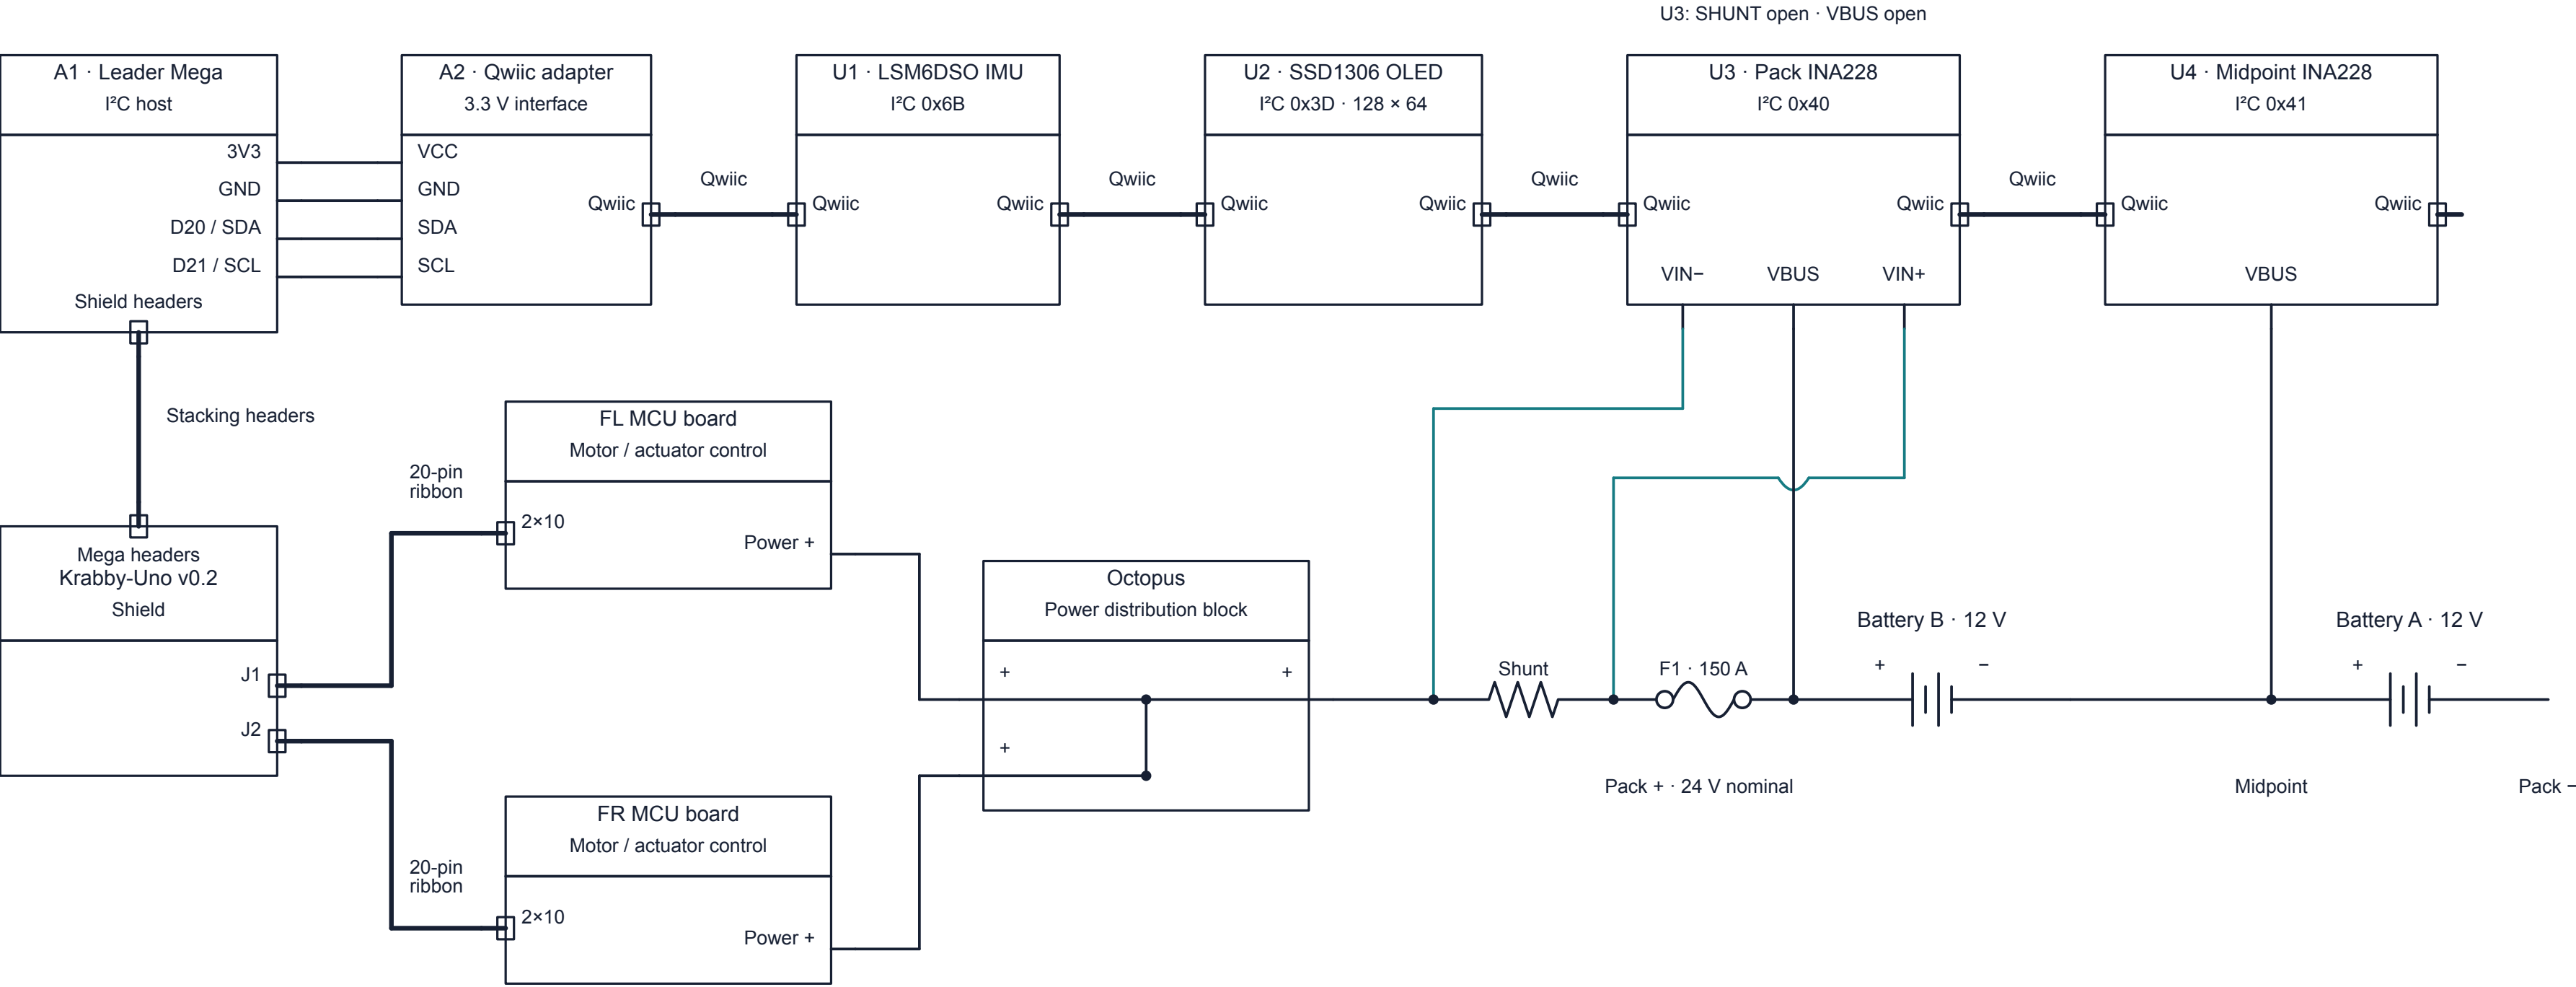

CAUTION: Ensure +3V3 is never accidentally connected to Mega 5V.