Wavence Network Interface Module (NIM) Quick Start Guide

3DB 29363 AAAA RJZZA 08

Documentation Center

NIM Product Information

The Networking Interface Module (NIM) is an optional element which can be attached on a UBT-T/-S/-m/T XP in Full Outdoor mode.
The NIM brings additional ports to the UBT along with enhanced features.
It can be used in tail configurations and also in nodal sites, expanding the usage of cost effective Full Outdoor configurations over the network.
The NIM is powered by the UBT it is attached on.

Serial Number to be used for license upgrade can be retrieved via WebCT or by “License upgrade number” label placed on NIM.

NIM Port Information

NIM front side

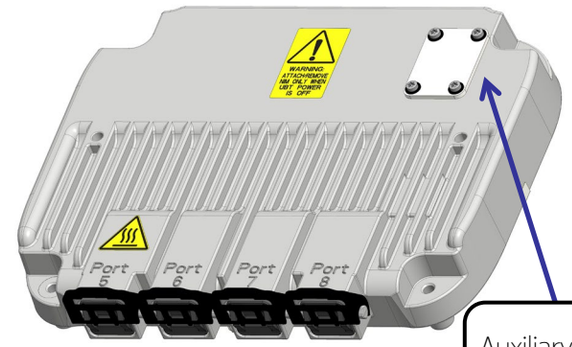

Note: 2 different part numbers
Option for UBT-S/T/m:
with UBT-NIM Connection Board (included with NIM)

Option for UBT-T XP:
with UBT-T XP – NIM Connection Board (separate item)

Auxiliary port (future use)

Port 5: SFP 1/2.5/10 Gbps Optical Interface

Port 6: SFP 1/2.5/10 Gbps Optical Interface

Port 7: SFP 1/2.5/10 Gbps Optical Interface

Port 8: RJ45 100 Mbps / 1Gbps Ethernet Electrical External Interface

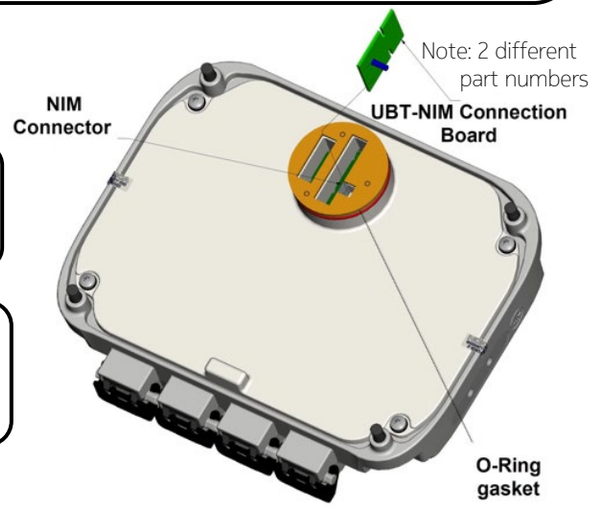

NIM back side

Warnings

ATTACH/REMOVE NIM ONLY WHEN UBT POWER IS OFF.
(Indicated also in the yellow warning sticker on front side of NIM).

Do not install NIM and UBT on antenna in raining conditions.
Verify the integrity of O-Ring gasket before assembling NIM to UBT.

Common plastic, white foam, cellophane, and masking adhesive tapes must not come in contact with Electrostatic-Sensitive Devices (ESDs) or their packaging.
An ESD can withstand voltage spikes of only 10 to 100 volts and can be damaged or effectively destroyed by a discharge that might go unnoticed by a technician. Some devices have built-in protection. However, because this protection is effective only against the lower levels of electrostatic charges, a false sense of security often prevails.
Common plastics (synthetic insulating materials), clothing, and paper or cardboard are the most common sources of static charges.
Observe special precautions when the ESD sign is displayed.

Handling cards
Although the risk of damage to an ESD is reduced considerably after it is assembled into a circuit designed to protect sensitive components, take the following precautions to reduce static charges to harmless levels:
- Handle all cards as ESDs unless they are known not to contain electrostatic sensitive parts.
- Wear wrist ground strap, connected to grounded coiled cord before and while touching or handling cards containing ESS devices. The wrist strap (PN 1AD 01247 0001) is an elasticized band connected to the coiled cord connected to the rack frame ground.
- Store (even temporarily), pack, and ship cards in antistatic bags or containers.
- Do not handle printed circuit board or components unnecessarily. Use plastic handle.
- Do not use synthetic bristled brushes or acid brushes to clean cards.
- Handle failed cards with same precautions as good cards.

ESD components are protected when properly packaged in conductive or antistatic packaging.
Acceptable packaging is marked as either conductive or antistatic.


ELASTICIZED BAND


COILED CORD

All Rights Reserved © NOKIA 2025

Wavence Network Interface Module (NIM) Quick Start Guide

3DB 29363 AAAA RJZZA 08

Manufacturing

1. Install the UBT-NIM or UBT-T XP-NIM connection board on the NIM

a. Remove Cap 1.

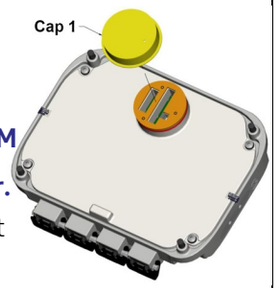

b. Insert the UBT-NIM connection board in the NIM connector.

Note: 2 different part numbers.

The orientation is given by a key.

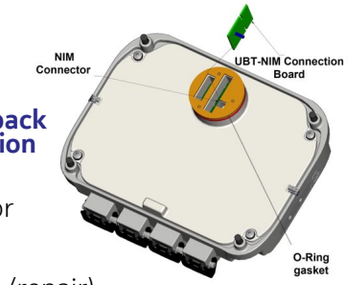

c. Put Cap 1 back until installation on UBT.

Keep Cap 1 for future needs (maintenance /repair).

2. Remove plugs 1 on UBT

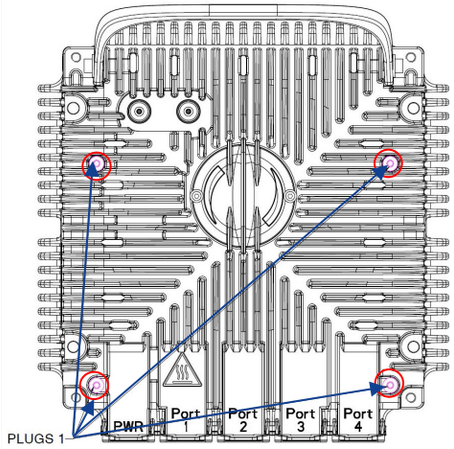

Use flat edge pliers.

Quantity of plugs 1: 4

3. Remove NIM cap on UBT

Perform this task just before installing NIM.

a. **Unscrew both hexagon socket head cap screws using an M2.5 Allen wrench.**

b. **Slightly turn NIM cap (either on the left or on the right) and pull it.**

Keep screws and NIM cap for future needs.

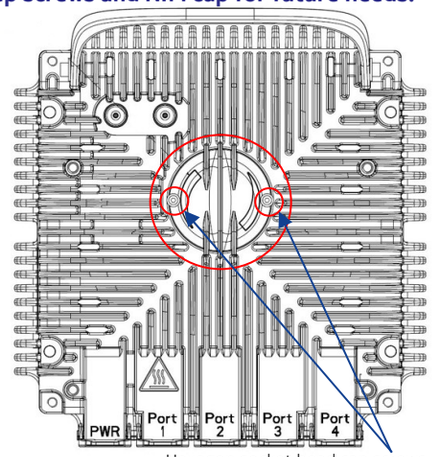

Hexagon socket head cap screws

4. Screw the captive screws through the NIM box

Note: Apply grease all over the thread of the fixing screws and only on those screws. A grease tube is supplied with the Grounding and Mounting Kit of UBT.

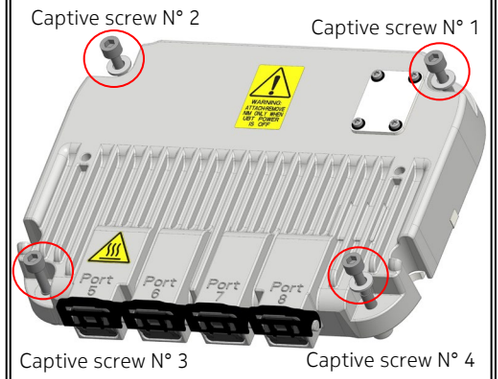

Do not use the plastic washer at screw N°3 to ground the NIM properly. There is no paint at this location on NIM box to ensure a proper metallic contact.

5. Align and connect the NIM on the UBT

First, unplug UBT OCTIS connectors.

Hint: Use both captive screws number 1 and 2 and the NIM connector for easier alignment.

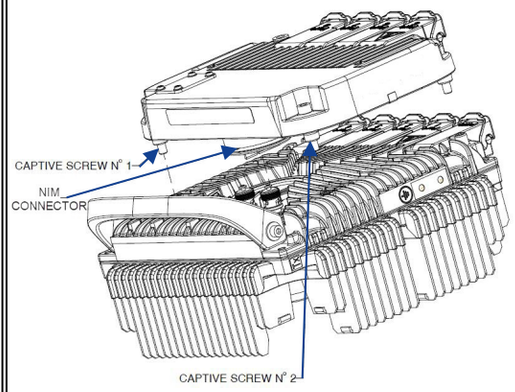

6. Tighten the NIM on the UBT

a. **Finger tighten all captive screws. Recommended order: 1,2, 3, 4.**

b. **Tighten all captive screws using tightening torque 7.6 Nm (M6 Allen wrench). Recommended order: 1, 4, 2, 3.**

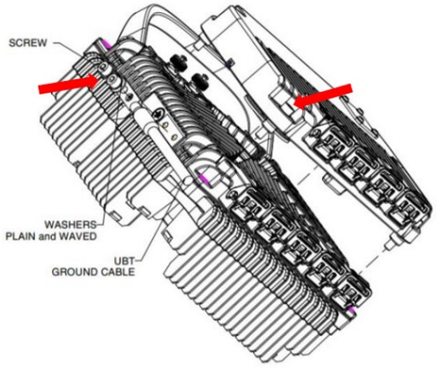

DRAWING NOT CONTRACTUAL: The shapes of parts may be different, but the assembling process remains valid.

7. Ground the UBT

After installation on the antenna:

a. Install the UBT grounding cable towards the site grounding bar.

b. Apply grease on the grounding screw of the UBT (red arrows) and only on that screw. A grease tube is supplied with the Grounding and Mounting Kit of UBT.

8. Flip the UBT OCTIS levers

Remove the lever and plug it again on the opposite side of the OCTIS connectors. Note: Only for the UBT OCTIS connectors.

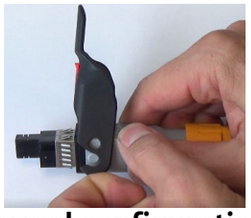

Normal configuration:

Lever on OCTIS logo side

Reverse configuration:

Lever on manufacturer logo side

9. Plug the OCTIS connectors on the UBT and NIM.

Note: This step is done after installation on the antenna.

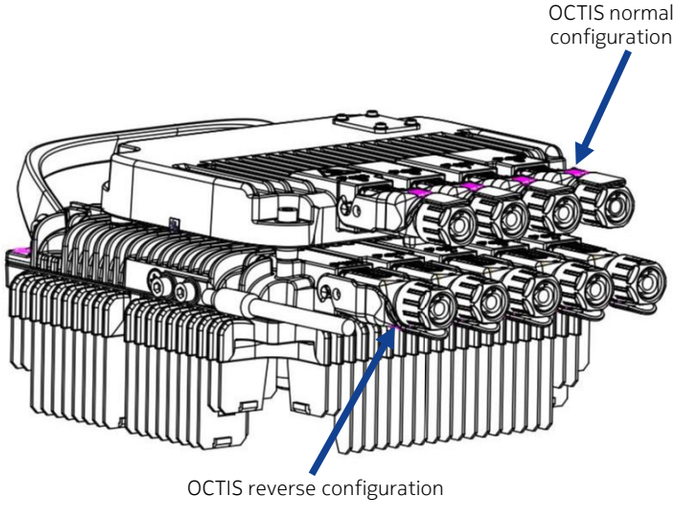

10. NIM and OCTIS caps

a. Plug cap of NIM port inside corresponding OCTIS cap.

b. Attach OCTIS cap with tie-wrap on the UBT handle.

Note: In this way, we avoid losing any caps during maintenance activity.

Contact support

Product documentation: https://documentation.nokia.com/aces/cgi-bin/au_doc_list.pl and select 9500 MPR (Microwave Packet Radio).

Technical Support: https://customer.nokia.com/s/product2/01t41000004g9E8AAI/9500-mpr-microwave-packet-radio