



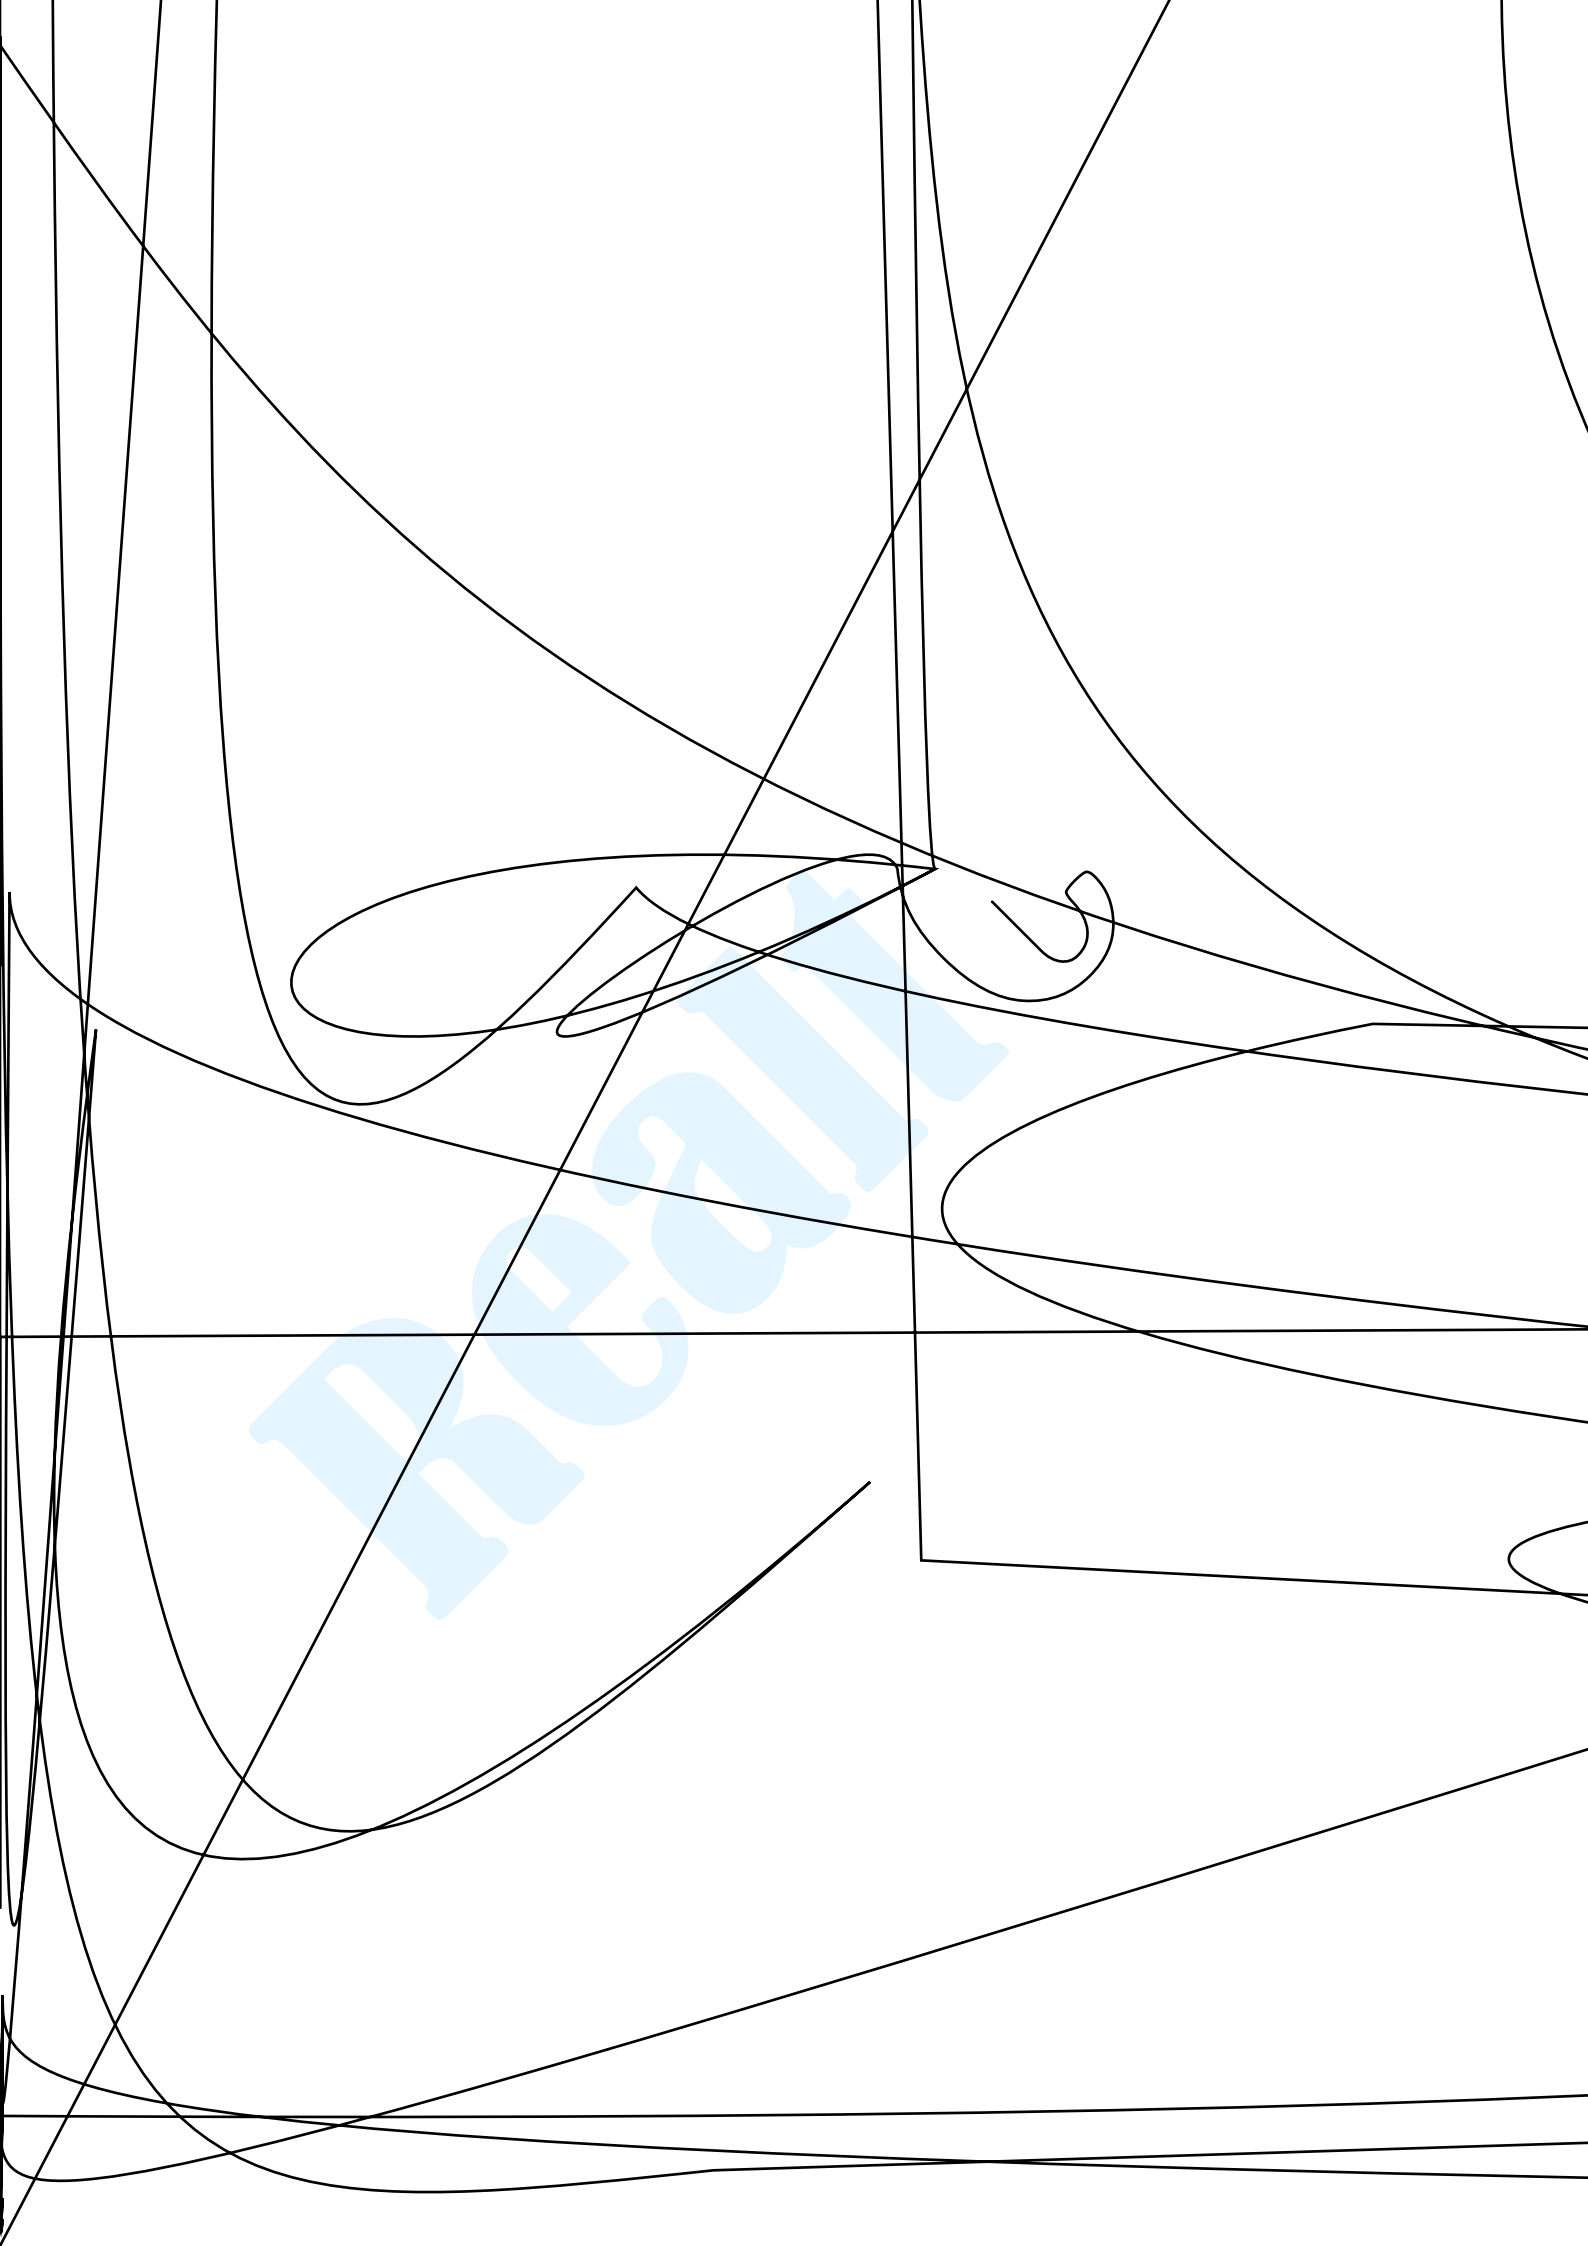

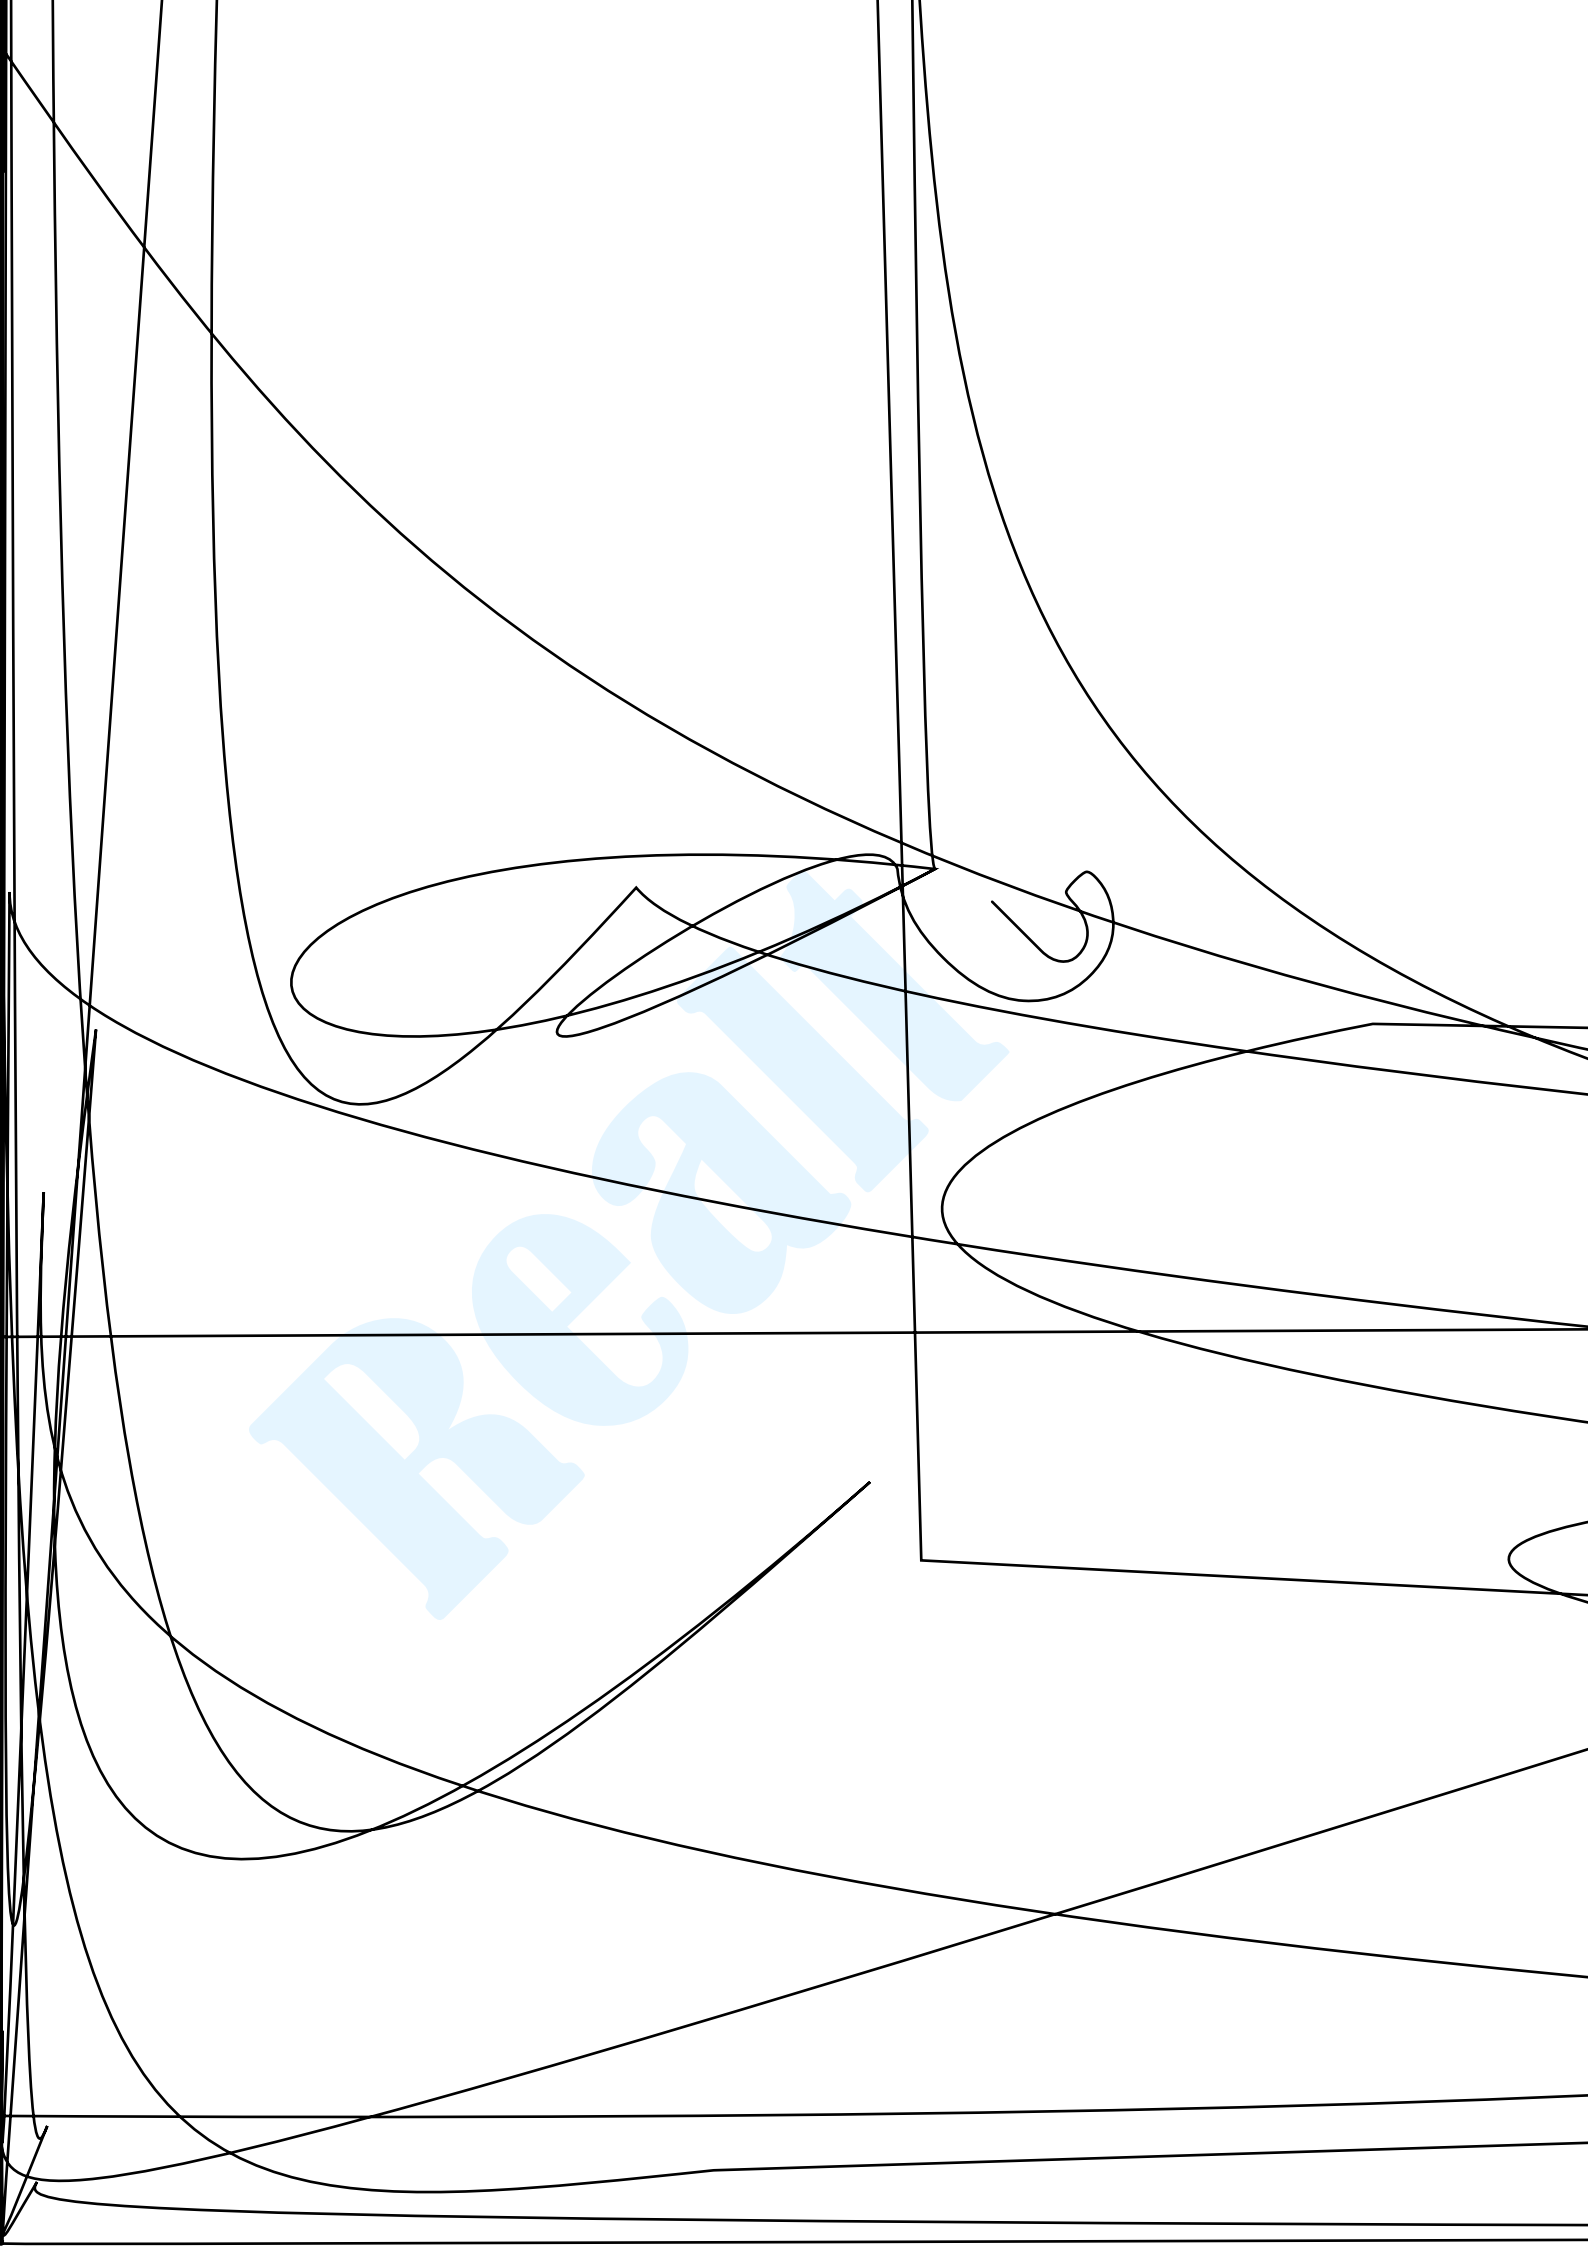

[parameters]	parameter explanation	[val] constraints
ap	Connect to AP by address	[mac_addr]
ssid	Set the ssid, join (I)BSS	[ssid]
mode	Set operation mode	{Managed Ad-hoc}
key/enc[ryption]	Set keys and security mode	{N open restricted off}

Example – connect AP with ssid SSID:

```
# iwconfig wlan0 mode Managed
# iwconfig wlan0 ssid "SSID"
```

Example – connect AP with mac address XX:XX:XX:XX:XX:XX:

```
# iwconfig wlan0 mode Managed
# iwconfig wlan0 ap XX:XX:XX:XX:XX:XX
```

Example – connect IBSS with ssid SSID:

```
# iwconfig wlan0 mode Ad-hoc
# iwconfig wlan0 ssid "SSID"
```

Example – set key for WEP encryption:

```
# iwconfig wlan0 key 0123456789
```

3. Connecting with wpa_cli and wpa_supplicant

To use authentication method such as WPA/WPA2 and connection method such as WPS, we can use the supplicant daemon, wpa_supplicant, with the control program, wpa_cli. Please refer to:

[document/wpa_cli_with_wpa_supplicant.pdf](#)

Most of Linux distributions have wpa_supplicant and wpa_cli inside. And actually, Network Manager utility takes use of wpa_supplicant to control Wi-Fi functionality. For systems which do not have wpa_supplicant, we provide a wpa_supplicant package in our software release packages. Please refer to:

wpa_supplicant_hostapd/
and

document/ Wireless_tools_porting_guide.pdf.

4. DHCP/Setting Manually

After starting up the Wi-Fi interface and connect to AP successfully, the network needs to obtain an IP address and other settings such as netmask, gateway and DNS, before transmit/receive data and access networks. This can be done by DHCP or setting manually.

4.1. dhclient

To acquire the network settings with DHCP protocol, you can use dhclient daemon:

```
# dhclient wlan0
Listening on LPF/wlan0/00:1b:fc:85:5e:1e
Sending on   LPF/wlan0/00:1b:fc:85:5e:1e
Sending on   Socket/fallback
DHCPREQUEST of 172.21.69.92 on wlan0 to 255.255.255.255 port 67
DHCPACK of 172.21.69.92 from 172.21.69.254
bound to 172.21.69.92 -- renewal in 265914 seconds.
```

4.2. ifconfig

To set network settings manually, you can use ifconfig command. Here we simply set IP address and netmask:

```
# ifconfig wlan0 172.21.69.92 netmask 255.255.255.0
```