Zebra Licensing

Product Reference Guide

Zebra Technologies | 3 Overlook Point | Lincolnshire, IL 60069 USA
zebra.com

MN-000000-0EN Rev A

Copyright

This PDF is generated from Zebra product documentation and is intended for internal use. All specifications and information are subject to change without notice.

Contents

1. **Licensing**
2. **Obtaining an Emulator License Key**
3. **Activating a License Key in Aurora Focus**
4. **Deactivating a License Using the Web HMI**
5. **Deactivating a License**
6. **Deprovisioning a License from a Device**
7. **Best Practices for Provisioning Devices**
8. **Frequently Asked Questions**
9. **Deactivating a License Using the Web HMI**
10. **Bridging an Internet Connection to FS/VS Devices**
11. **Activating a License Using the Web HMI**
12. **Obtaining an Emulator License Key**
13. **License Types and Toolsets**
14. **Provisioning a License to a Device**

Licensing

This section contains licensing information for Zebra Aurora Focus.

Download PDF

Obtaining an Emulator License Key

Use Aurora Focus to obtain an emulator license key.

1. Click **Help** from the top navigation menu in Aurora Focus.

2. Select **License** from the drop-down menu.

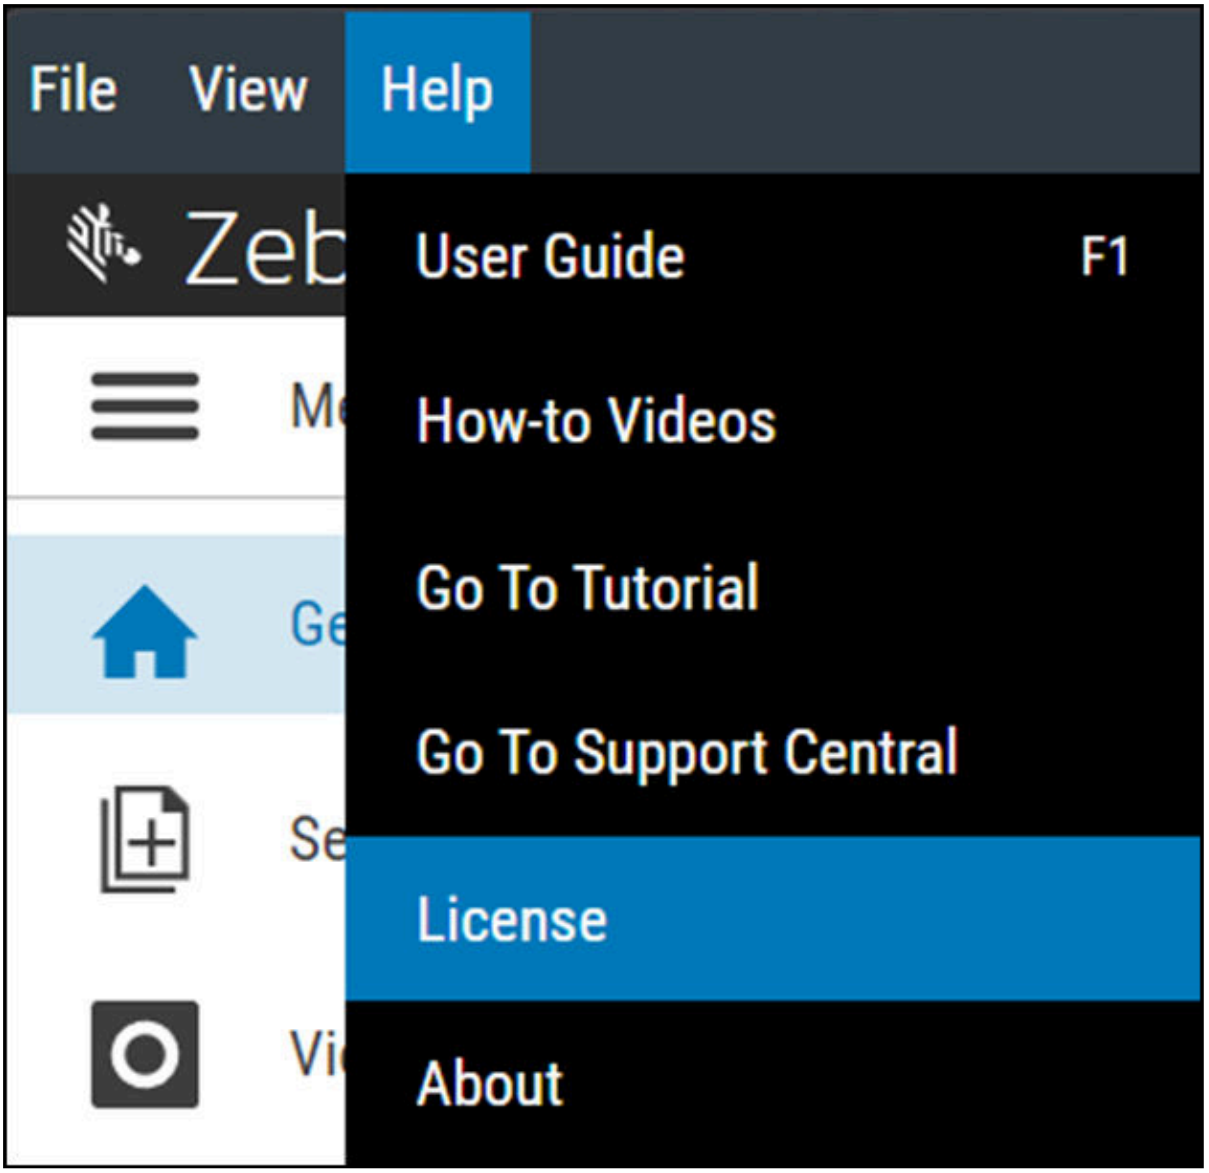

3. Observe the **License** Activate popup and click the link:

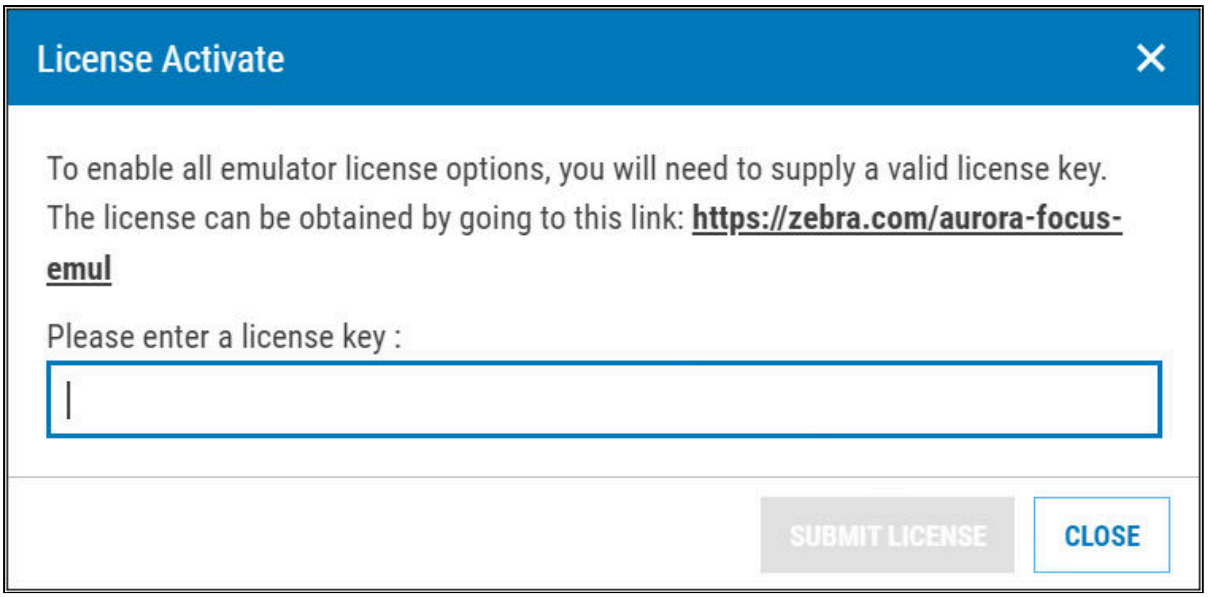

4. Enter your email address. This becomes your User ID.

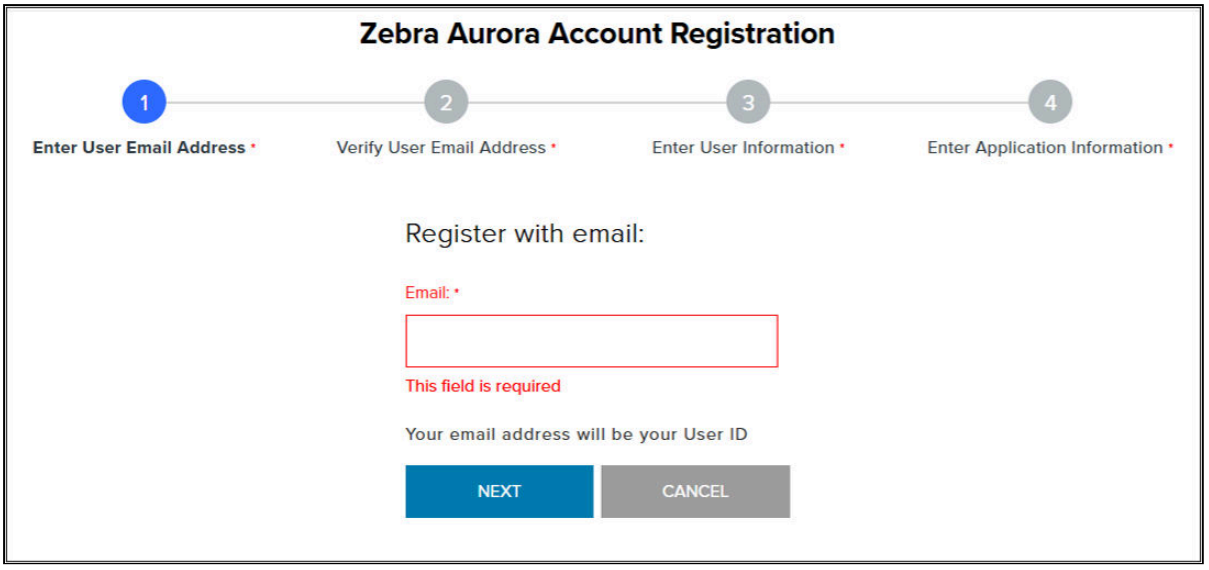

5. Click **Next**.

6. Verify your email address by entering the verification code sent to your inbox.

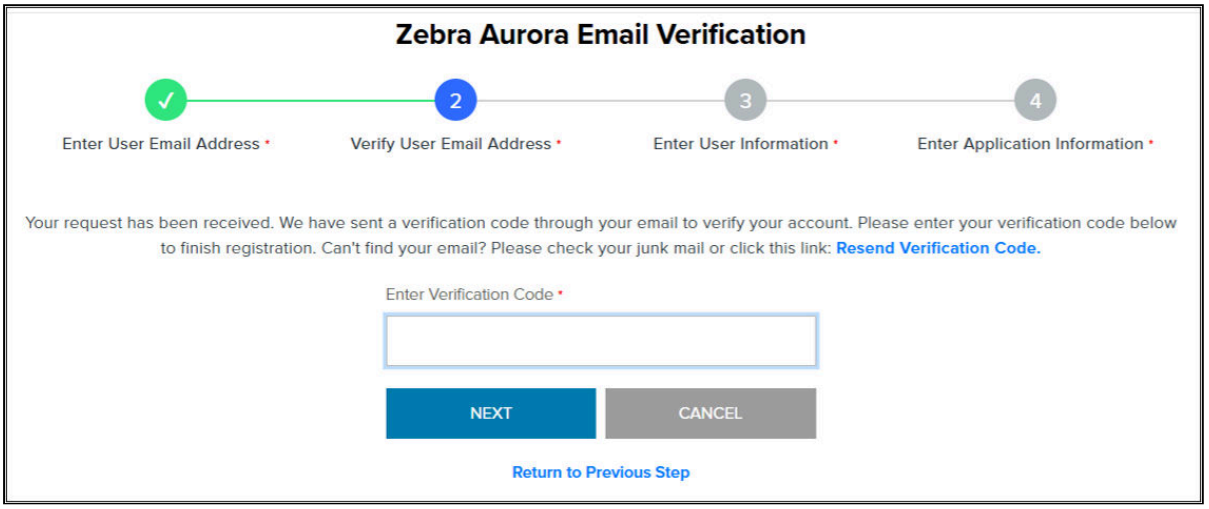

7. Click **Next**.

8. Enter your name and password, then select your country from the drop-down menu.

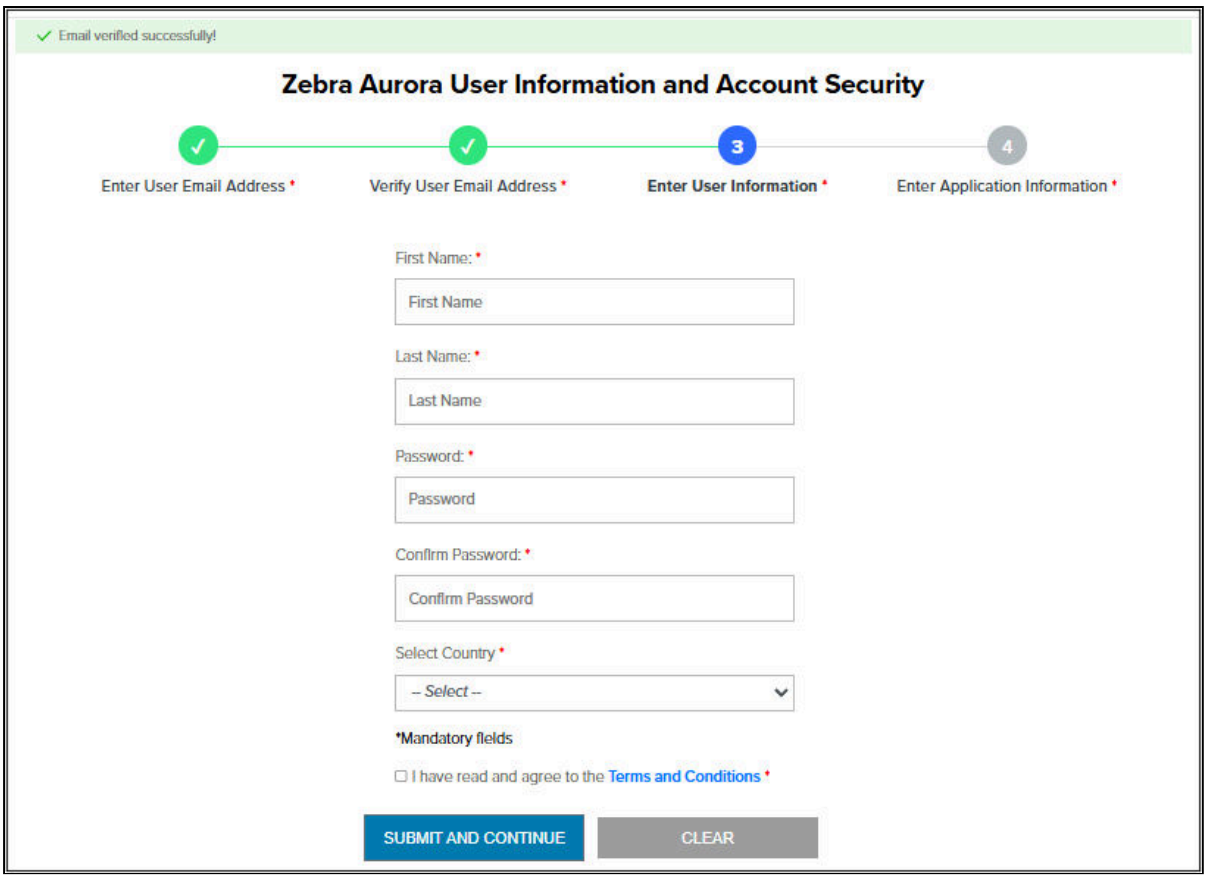

9. Click **Submit and Continue**.

10. Enter your user and company information and provide the number of licenses you are requesting.

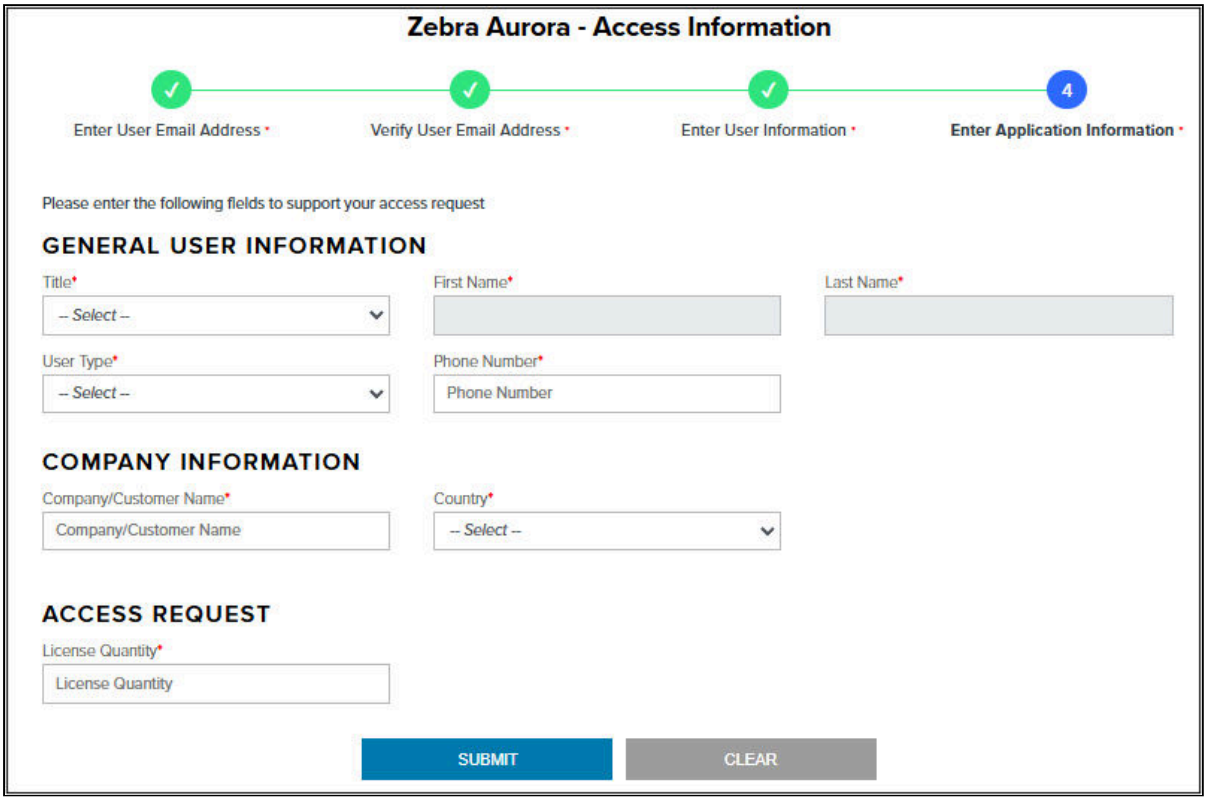

11. Click **Submit**.

12. Enter the **Activation ID** into the **License Key** field after registration to activate the license.

Activating a License Key in Aurora Focus

Use the **Device Licensing** tab in Aurora Focus to manage licenses and remotely provision them to devices.

> **NOTE**
>
> Activating, deactivating, and syncing operations require access to the Aurora Focus Desktop application with a direct internet connection.

1. Select **Device Licensing** from the menu in Aurora Focus.

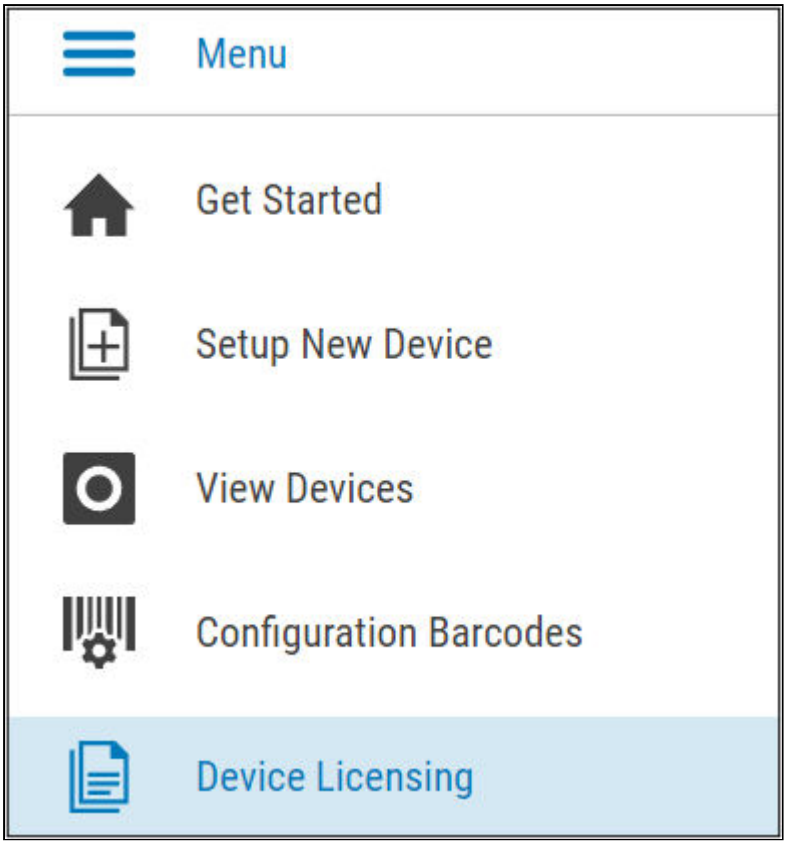

2. Enter the **PKID** from the Zebra License Notification email and the **Number of Seats to Activate**.

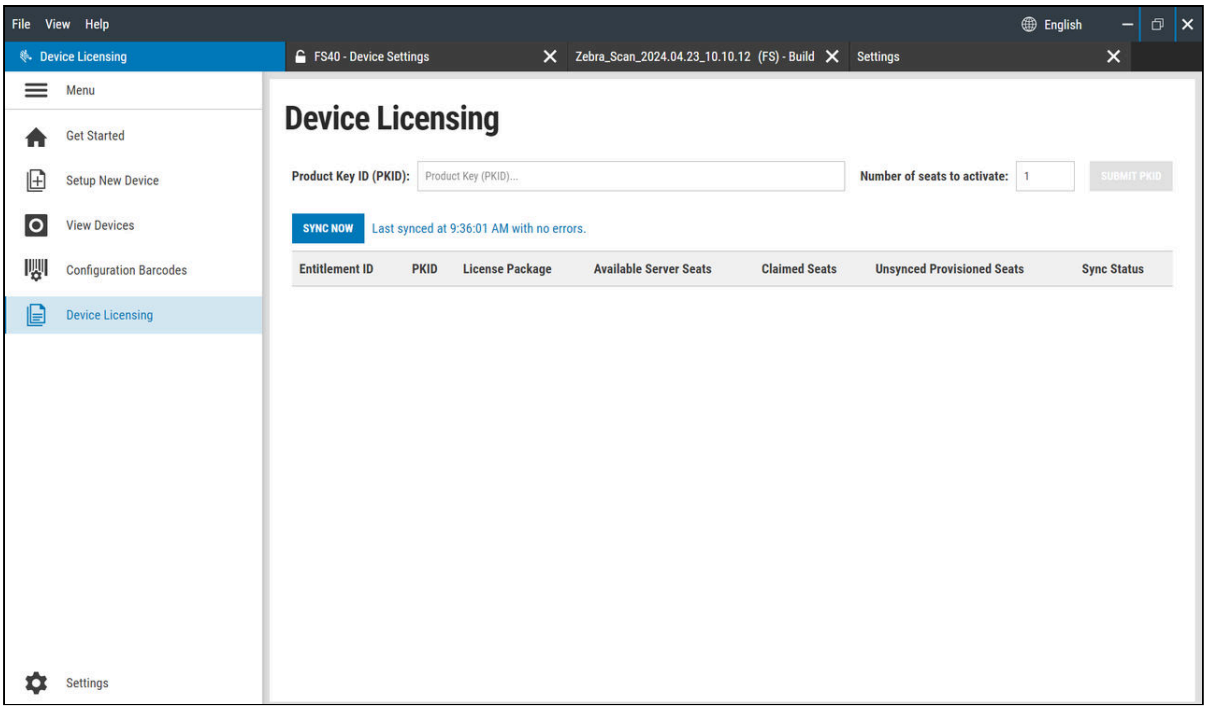

> **NOTE**
>
> The number of seats to activate must be less than or equal to the number of available server seats. The maximum is 25 seats per activation.

3. Click **Submit License Key**.

4. Click **Sync Now** to view a list of active entitlement IDs and associated devices.

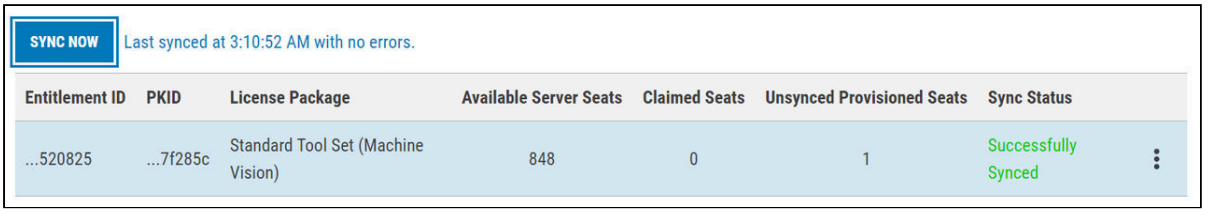

- The **License Key** is a **PKID** and a unique identifier for the license.
- **Available Seats** refers to the number of upstream seats on the server that are available for activation.
- **Claimed** Seats refers to the seats claimed by this instance of Aurora Focus software but not yet provisioned to an FS/VS device.
- **Unsynced Provisioned Seats** refers to the number of seats claimed by Aurora Focus and provisioned to a device.
- **Unclaimed** seats can be released back to the license server or can be used to provision another device.

Deactivating a License Using the Web HMI

Use the Web HMI to deactivate a license on the device while connected to the internet.

> **NOTE**
>
> Only provisioned licenses can be released.

1. Click to release the license back to the license server.

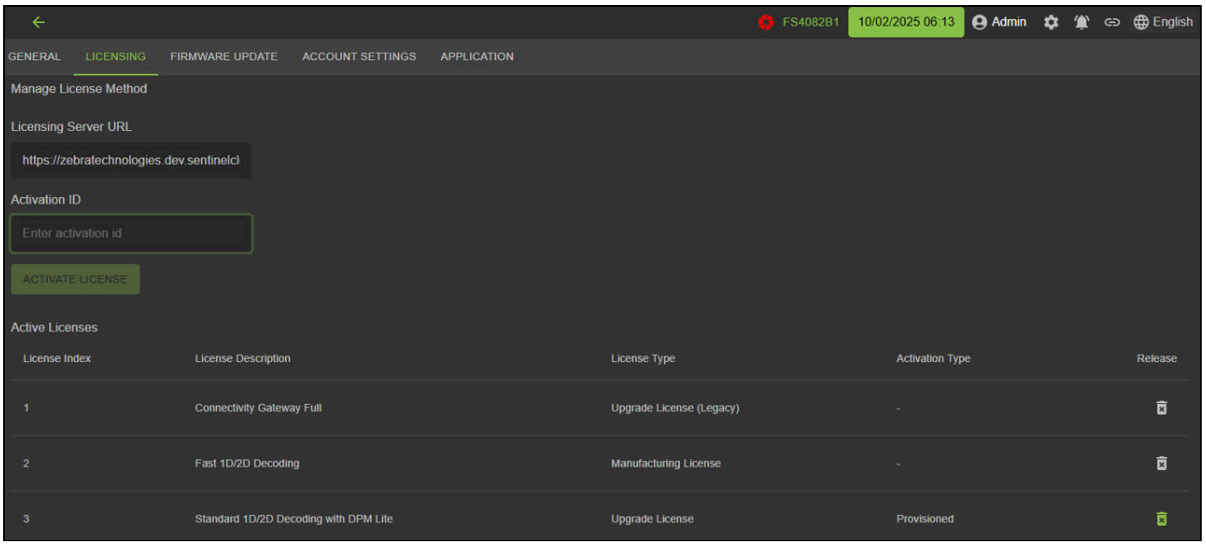

2. Observe that the license is removed from the list of **Active Licenses**.

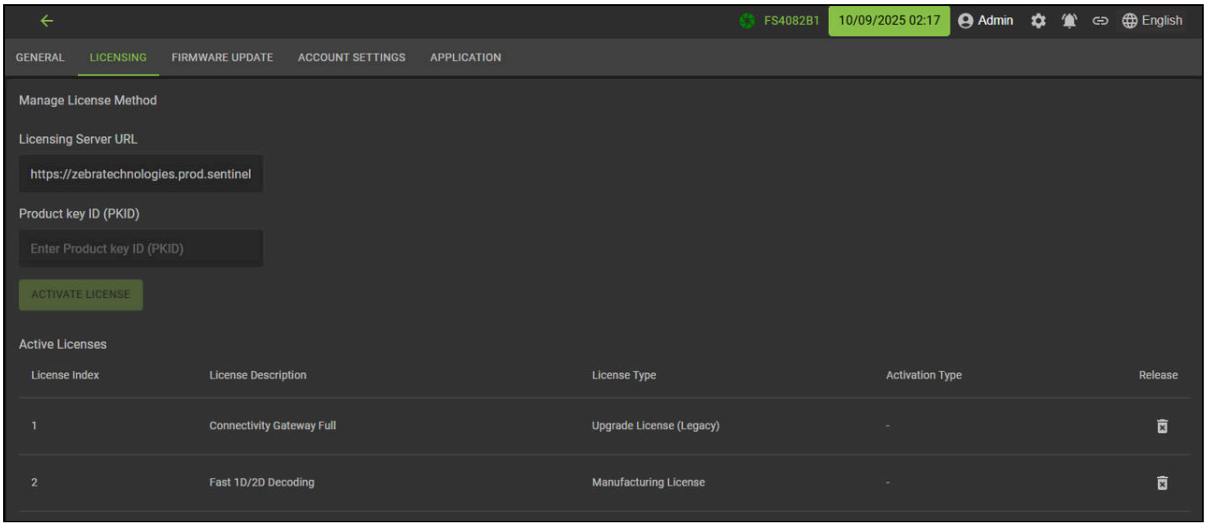

Deactivating a License

Deactivate a license using Aurora Focus.

1. Click and select **Deactivate** from the menu.

2. Select the number of seats to deactivate.

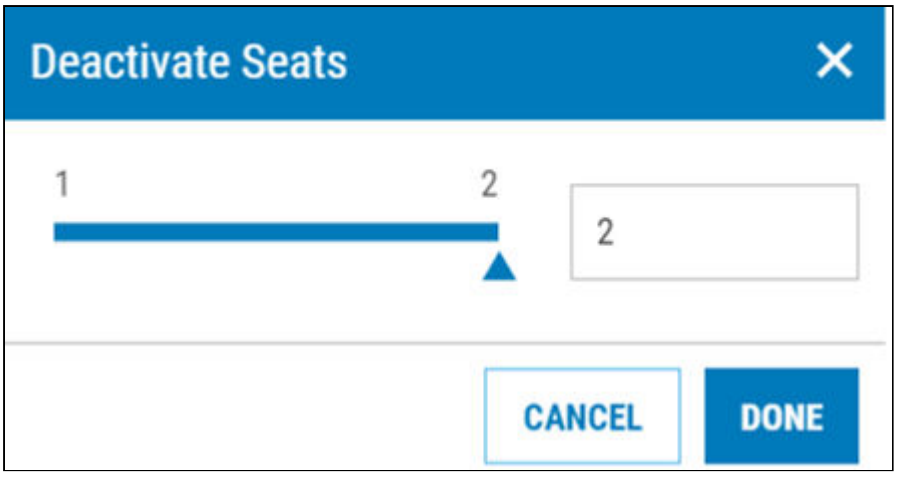

3. Click **Sync Now** to view the updated list of license keys.

Deprovisioning a License from a Device

Devices can be deprovisioned using Aurora Focus and released back to the license server as needed.

1. Go to **View Devices** and ensure that the device is managed by clicking **Manage**.

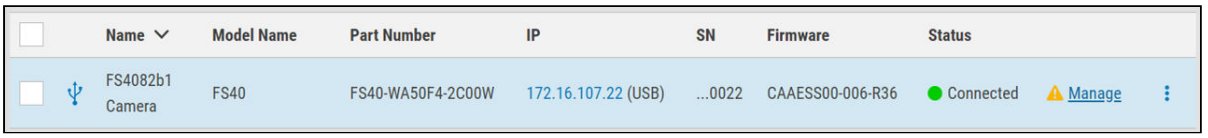

2. Go to the **Licensing** tab in **Device Settings** and click **Enable Edit Mode**.

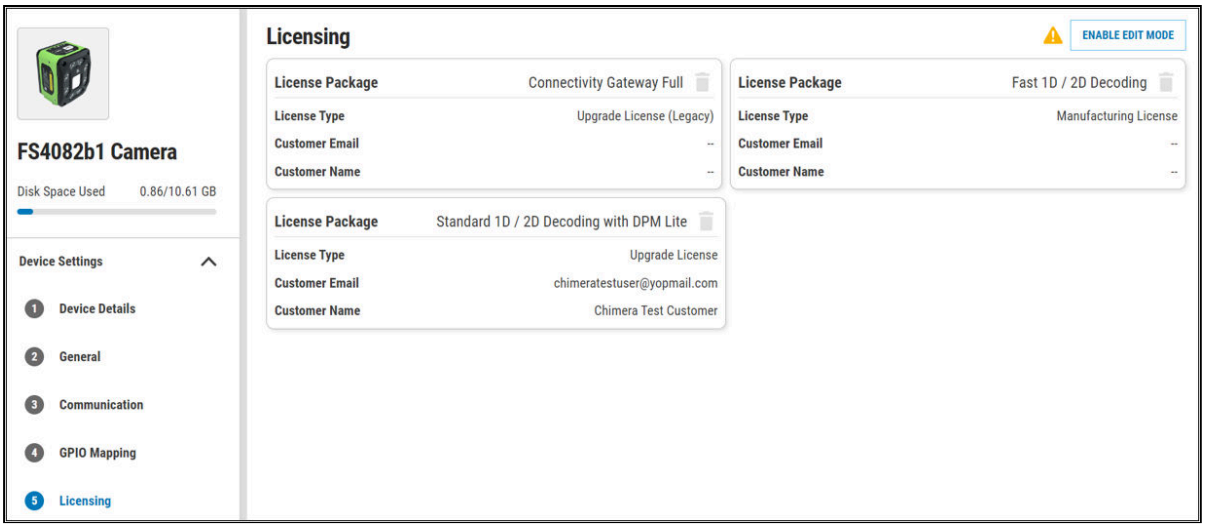

3. Click to release the license back to the server.

4. Close the **Device Settings** tab and unmanage the device.

5. Return to the **Device Licensing** tab to confirm that the deprovisioned license was released and returned to the pool of claimed seats.

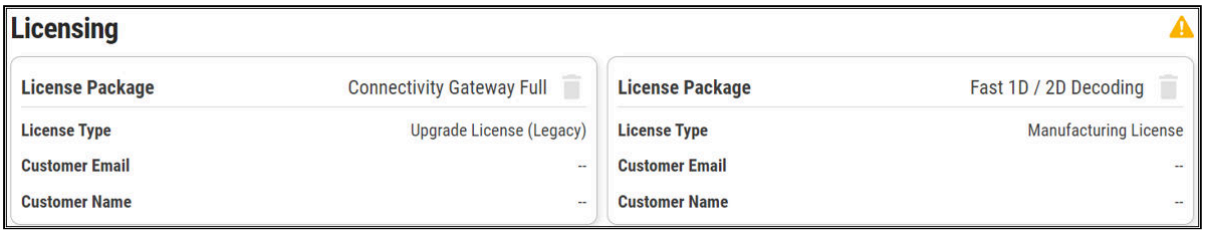

Best Practices for Provisioning Devices

Review the following best practices when provisioning a device to a license.

- Activate only the required number of seats that you want to use for provisioning devices.
- Do not hold on to claimed seats in Aurora Focus longer than needed.
    - This enables another user to use them to provision other devices.
- Syncronize provisioned seats to the license server frequently to ensure you are utilizing the active licenses on the device.

Frequently Asked Questions

Review the answers to frequently asked questions in this section to understand the licensing procedure.

What happens if I update the firmware of an FS/NS/VS device to a version matching Aurora Focus 9.4 or greater?

- Factory-applied licenses continue to work, while previously applied device upgrade licenses also continue to work unless a device factory reset operation is performed beforehand with the license storage option selected or the device???s license storage is corrupted. If this occurs, re-activate the license using the information in the Zebra License Manager Migration Notification email.

Can I continue to use an FS/NS/VS device with firmware matching Aurora Focus 9.3 or lower after December 31, 2025?

- Factory-applied and device upgrade licenses are perpetual, so they will continue to work after both dates.

How do I recover from a deleted license storage on a device with firmware matching Aurora Focus 9.3 or lower after December 31, 2025?

- If the license was applied using the offline activation method, upgrade the device to firmware matching Aurora Focus 9.4 or greater and re-activate the license using the information provided in the Zebra License Manager Migration Notification email.

How do I handle replacing a device with firmware matching Aurora Focus 9.3 or lower with device upgrade licenses activated after the release of Aurora Focus 9.4 with matching device firmware?

- Obtain a replacement device with the equivalent factory-applied licenses for Aurora Focus 9.3 or lower and Aurora Focus 9.4 or greater with matching firmware. You can also have the replacement device with firmware matching Aurora Focus 9.4 or greater and obtain the required device upgrade license using the standard method.

What happens if I obtain a device upgrade licenses before the release of Aurora Focus 9.4 and matching device firmware but do not activate all of them before December 31, 2025?

- To activate the remaining device upgrade licenses, you must upgrade to Aurora Focus 9.4 or greater, Then, you must match the device firmware and use the information provided in the Zebra License Manager Migration Notification email.

Can I obtain a device emulation license for Aurora Focus 9.3 or lower after the release of Aurora Focus 9.4?

- No

Does a device emulation license obtained before the Aurora Focus 9.4 release and activated before December 31, 2025, continue to work after that date?

- Yes, the device emulation license is valid until its 1-year term expires.

Do the part numbers or SKUs for FS/NS/NS device upgrade licenses remain the same when the new licensing system starts?

- Yes, the part numbers or SKUs remain the same.

Are Aurora Design Assistant, Aurora Imaging Library, and Aurora Vision Studio/Library affected by the Zebra Software Licensing system change?

- They are not affected because they utilize different licensing systems that are not currently changing.

Deactivating a License Using the Web HMI

Use the Web HMI to deactivate a license on the device while connected to the internet.

> **NOTE**
>
> Only provisioned licenses can be released.

1. Click to release the license back to the license server.

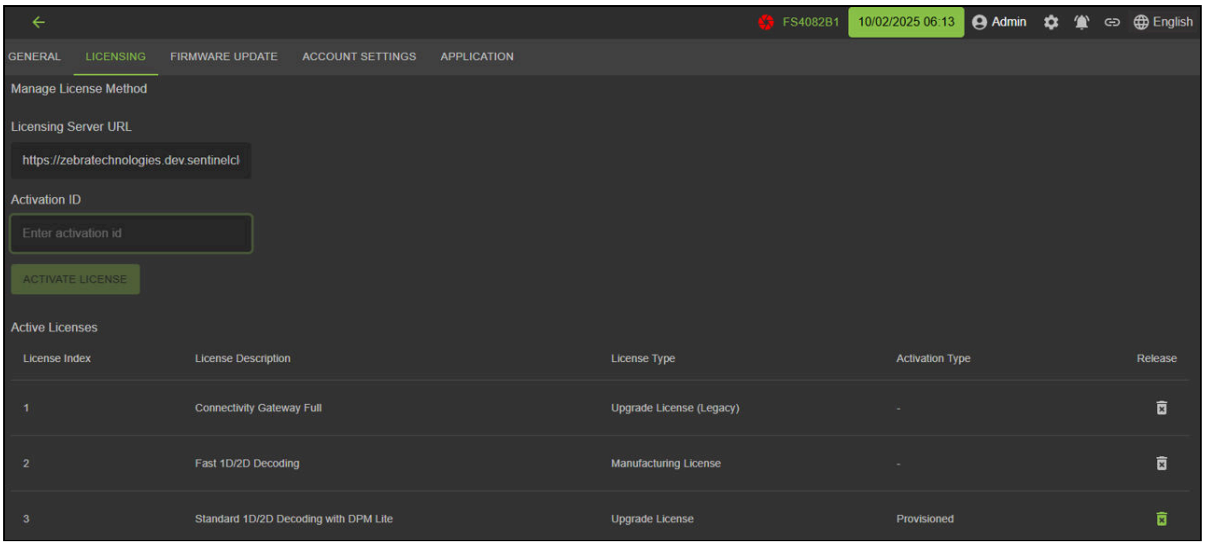

2. Observe that the license is removed from the list of **Active Licenses**.

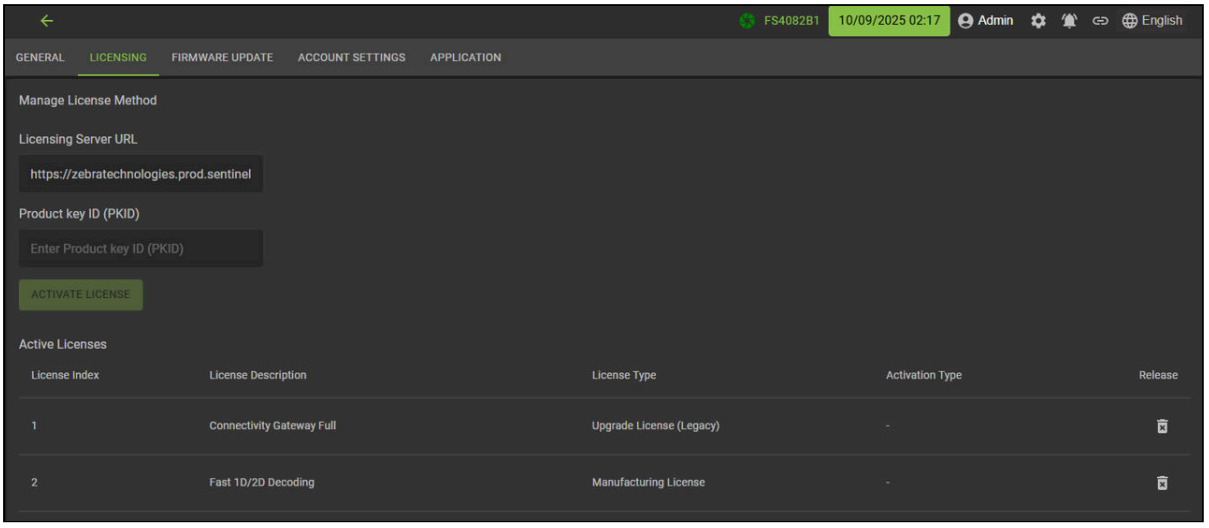

Bridging an Internet Connection to FS/VS Devices

To add a license to an FS/VS device using an online licensing server, the device must have access to the internet. The device can be connected through a router connected to the internet. But in cases where that is not possible or convenient, the internet connection of a laptop or desktop computer running Windows can be shared with the device. To share internet to a device connected to the computer over USB, these steps must be performed on the device first (does not need to be done for devices connected over Ethernet): 1.

Open Aurora Focus.

Manage the device to which you want to share Internet.

Navigate to the Communication tab.

Click Enable Edit Mode and OK if prompted with a warning about stopping jobs.

Navigate to the USB tab under Network Settings.

Select Enable DHCP, and click Apply.

To share the internet connection to a device when connected over USB or when plugged into a PoE switch that is plugged into the computer or dock's Ethernet port:

1. Navigate to Windows Control Panel > Network and Sharing Center > Change adapter settings.
2. Right-click on the connection that provides Internet. This is typically Wi-Fi, but can also be Ethernet.
3. Click Properties.
4. Click the Sharing tab.
5. Select Allow other network users to connect through this computer's internet connection.
6. In the Home networking connection drop-down, select the connection over which you want to share internet, if the option appears. This may be something such as Ethernet or Ethernet 5. If there is only one option for the connection, the drop-down does not display.
7. If there are multiple Ethernet options, to find out which adapter is using the USB RNDIS, open a command prompt and type ipconfig /all. Locate your device's USB IP (it typically matches a DHCP Server, as shown in the screenshot below). Locate the Ethernet adapter name for that section. Select that option in the menu.
8. Click OK.

Reconnect and reboot the device.

To share the internet connection to multiple devices connected over USB and Ethernet simultaneously:

1. Navigate to the Windows Control Panel > Network and Sharing Center > Change adapter

settings.

Ctrl-click the USB or Ethernet connections that the devices are connected to so they are highlighted simultaneously.

Right-click any of the highlighted connections and click Bridge connections.

Right-click the connection that is providing Internet.

Click Properties.

Click the Sharing tab.

Select Allow other network users to connect through this computer's internet connection.

On the Home networking connection menu, select the bridged connection you just made if the option appears at all. If there is only one option for the connection, the drop-down will not display.

Click OK.

Reconnect and reboot the device(s). Identifying the DHCP Server

```
Ethernet adapter Ethernet 2:

   Connection-specific DNS Suffix  . :
   Description . . . . . . . . . . . : Remote NDIS Compatible Device
   Physical Address. . . . . . . . . : 56-00-14-F8-1A-EB
   DHCP Enabled. . . . . . . . . . . : Yes
   Autoconfiguration Enabled . . . . : Yes
   Link-local IPv6 Address . . . . . : fe80::e20e:c047:5143:1b5%9(Preferred)
   IPv4 Address. . . . . . . . . . . : 172.16.111.241(Preferred)
   Subnet Mask . . . . . . . . . . . : 255.255.0.0
   Lease Obtained. . . . . . . . . . : Tuesday, May 23, 2023 5:07:05 PM
   Lease Expires . . . . . . . . . . : Friday, June 2, 2023 5:07:05 PM
   Default Gateway . . . . . . . . . : 172.16.1.1
   DHCP Server . . . . . . . . . . . : 172.16.92.50
   DHCPv6 IAID . . . . . . . . . . . : 630091326
   DHCPv6 Client DUID. . . . . . . . : 00-01-00-01-2B-EA-E3-78-B0-0C-D1-40-02-4E
   DNS Servers . . . . . . . . . . . : fec0:0:0:ffff::1%1
                                       fec0:0:0:ffff::2%1
                                       fec0:0:0:ffff::3%1
   NetBIOS over Tcpip. . . . . . . . : Enabled
```

To test that a device has access to the internet, SSH into it and run ping google.com. If the connection to the server is successful, the device can connect to a licensing server over the internet.

Activating a License Using the Web HMI

Apply a device license, view available licenses, and deactivate licenses online using the Aurora Focus Web HMI.

1. Open the Aurora Focus Web HMI by entering the device's IP address into a web browser or clicking the IP address link under **View Devices** in Aurora Focus.

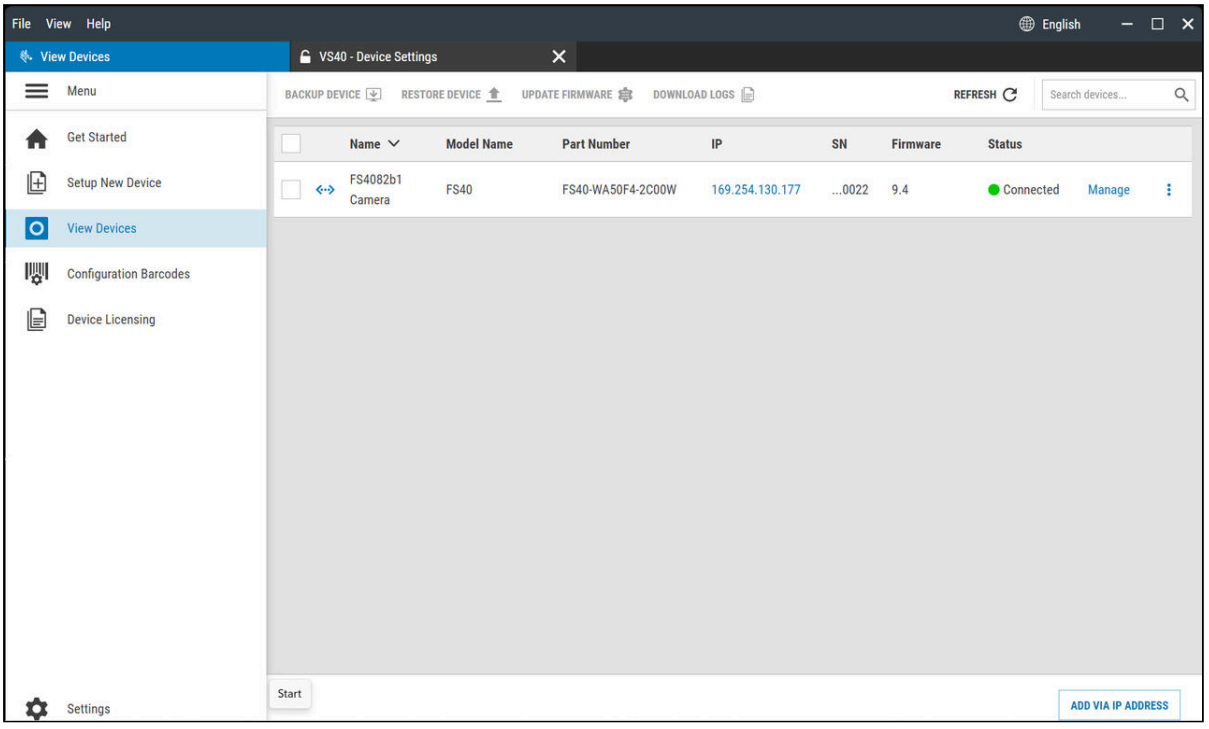

2. If you are logged in as an Operator, click to log in to the HMI as an Admin.



3. Use the default credentials for an Admin account:

- Username: admin
- Password: admin

4. After you log in as an Admin, click to access the settings menu.



5. Select the Licensing tab.

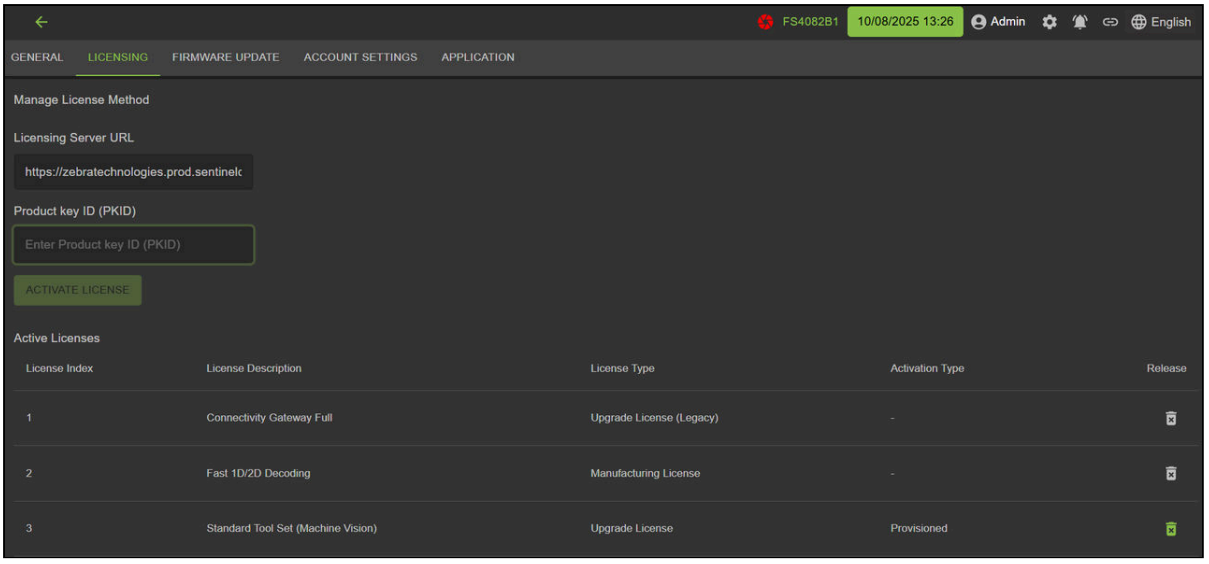

6. Ensure the following URL is present in the Licensing Server URL form field:

https://zebratechnologies.prod.sentinelcloud.com/ems/api/

Enter the **Product Key ID (PKID)** provided in the email when the license is procured.

7. Click **Activate License**.

8. The Active Licenses provides the following information:

- **License Index:** displays the license number.

- **License Description:** displays the license's feature or toolset name, for example, Connectivity Gateway Full or FS1D/2D Decoding.

- **License Type:** indicates the type of license and system version on which it was acquired. For example, Fast 1D/2D Decoding with DPM Full.

    - **Upgrade License (Legacy)** - an upgrade license activated using the legacy system. For example, Advanced Toolset (Machine Vision).

    - **Upgrade License** - an upgrade license using the current system. This license type can be provisioned in Aurora Focus and released in the Web HMI.

- **Activation Type** - licenses applied using the current system are provisioned.

- **Release:** Click to release the license back to the device's license server.

Obtaining an Emulator License Key

Use Aurora Focus to obtain an emulator license key.

1. Click **Help** from the top navigation menu in Aurora Focus.

2. Select **License** from the drop-down menu.

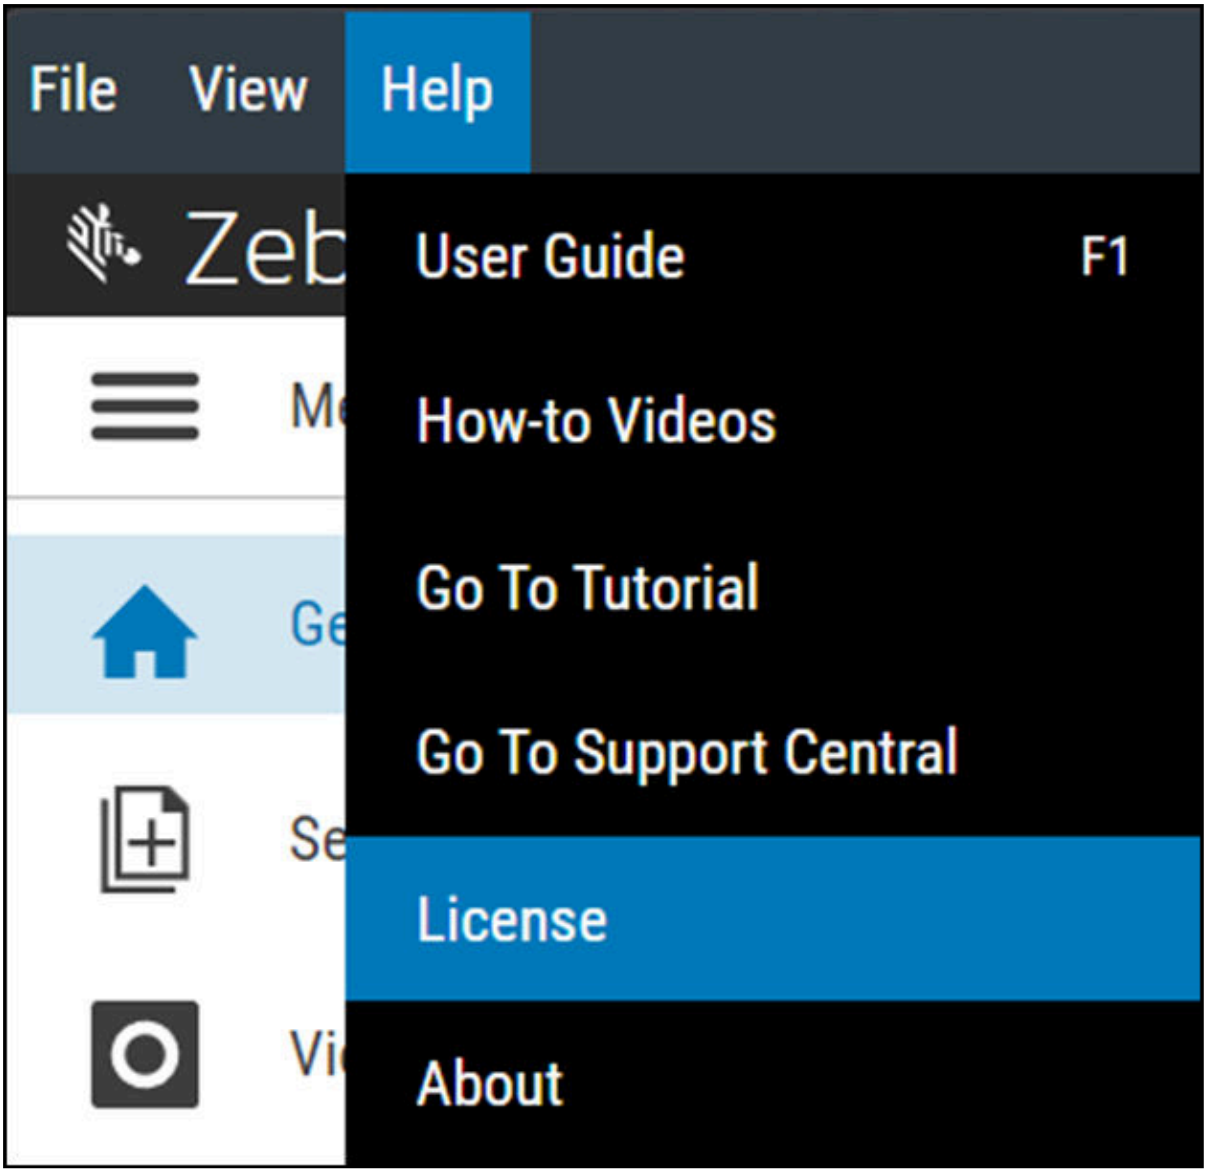

3. Observe the **License Activate** popup and click the link:

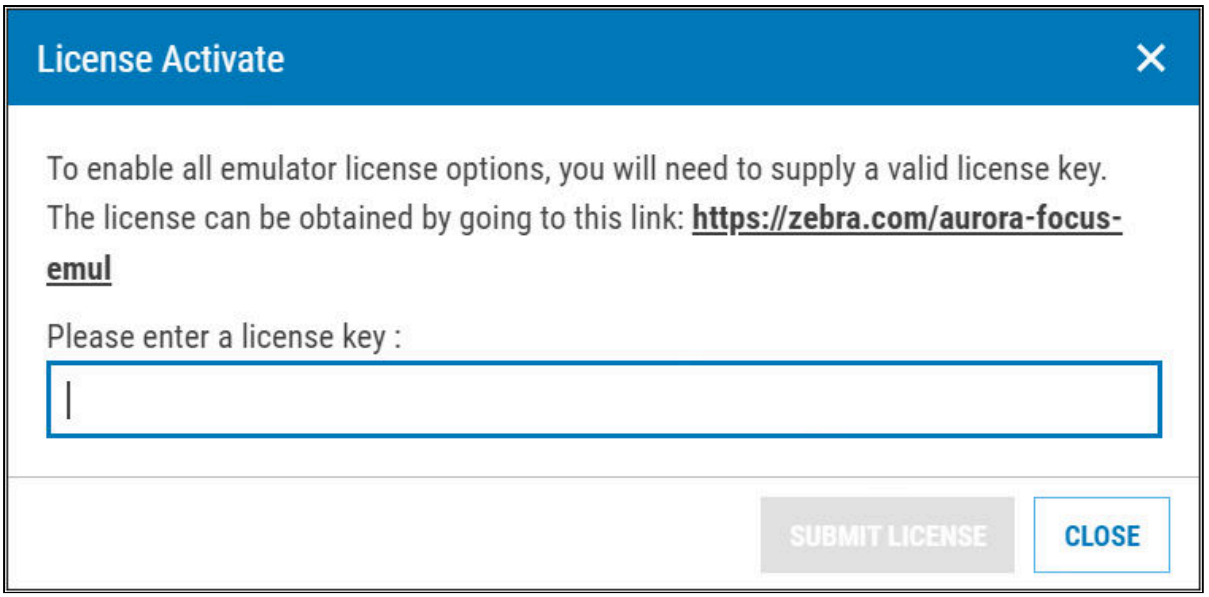

4. Enter your email address. This becomes your User ID.

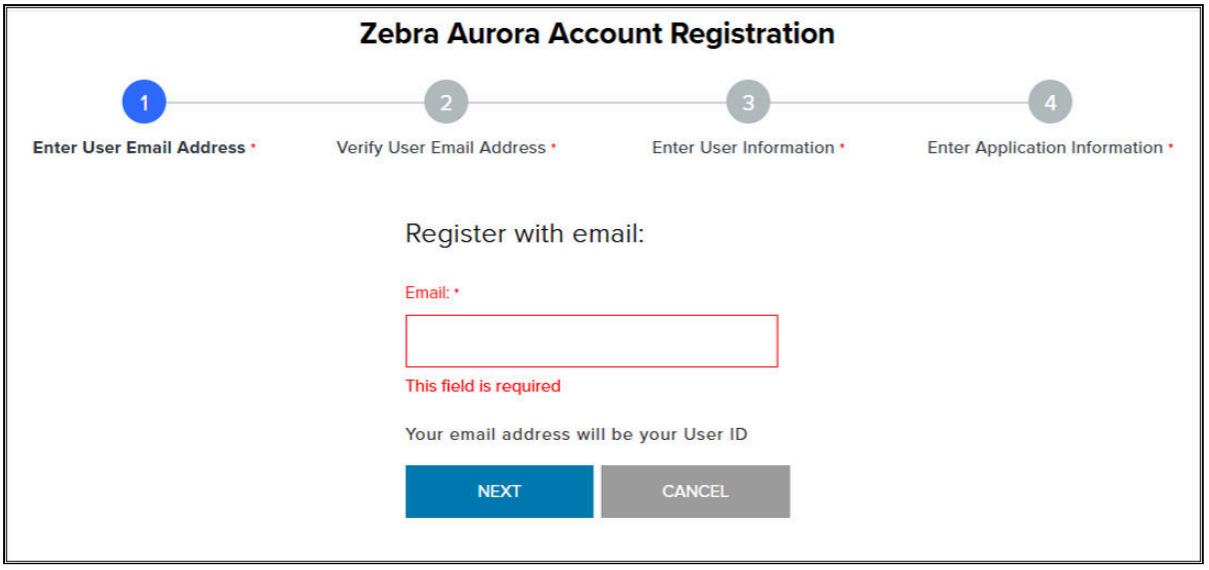

5. Click **Next**.

6. Verify your email address by entering the verification code sent to your inbox.

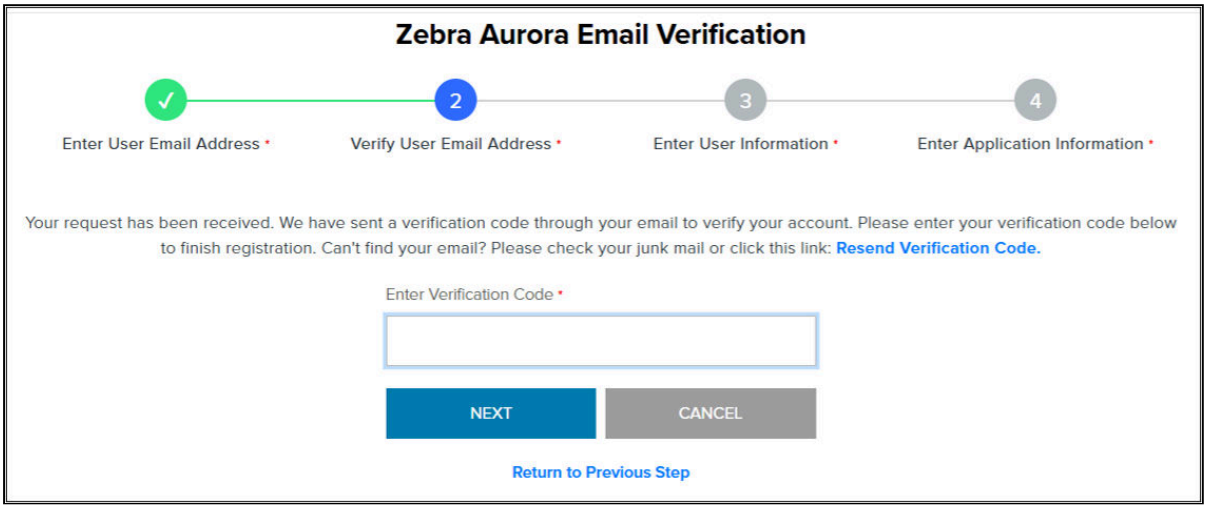

7. Click **Next**.

8. Enter your name and password, then select your country from the drop-down menu.

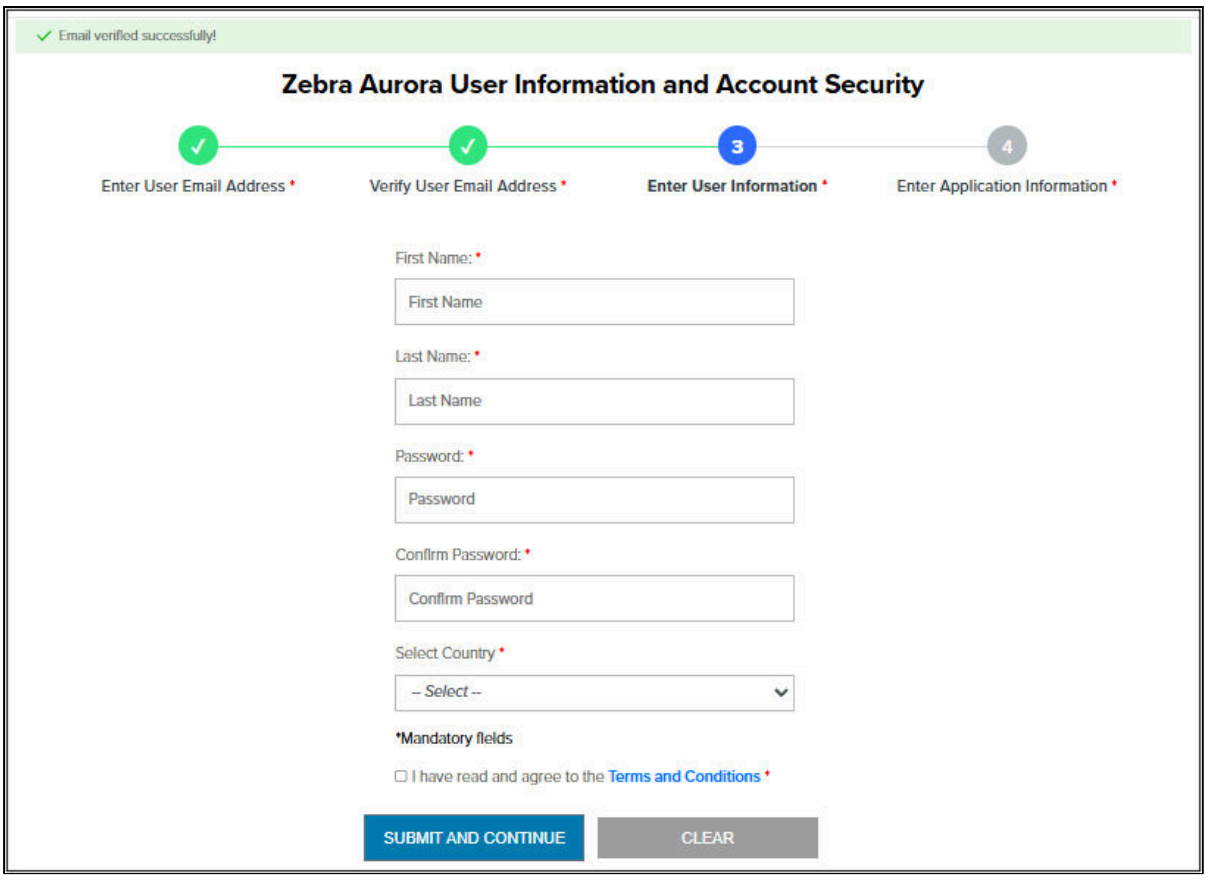

9. Click **Submit and Continue**.

10. Enter your user and company information and provide the number of licenses you are requesting.

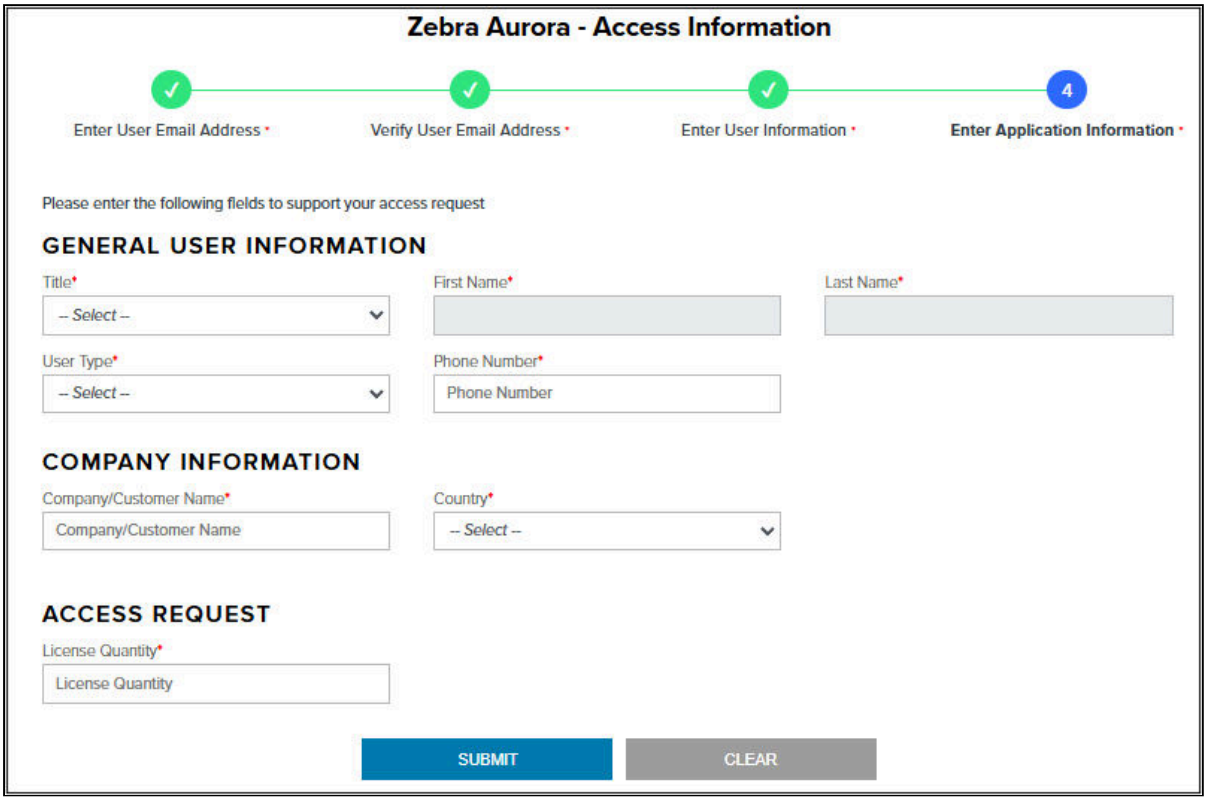

11. Click **Submit**.

12. Enter the **Activation ID** into the **License Key** field after registration to activate the license.

License Types and Toolsets

The following table outlines available licenses and their corresponding part number. Each license is associated with a toolset.

Part Number	Web HMI Name	Description	Toolset	Applicable Devices
LIC-SEN001-0100	Sensor Toolset (Machine Vision)	Upgrade to Sensor Toolset.	MV Sensor	FS10, FS20, FS40, FS42, FS70, FS80
LIC-SEST01-0100	Standard Toolset (Machine Vision)	Fixed Industrial Scanner toolset upgrade from Sensor to MV toolset.	MV Standard	VS20, VS40/70
LIC-STD001-0100	Standard Toolset (Machine Vision)	Fixed Industrial Scanner upgrade to the Standard MV toolset (includes DPM and Fast 2D).	MV Standard	FS10/20, FS40/70, FS42, FS80
LIC-DPM001-0200	Fast 1D/2D Decoding with DPM Full	Full DPM (1D/2D/DPM), 60 frames per second. Enables Datacode decoding libraries for DPM reading and enhanced 2D.	Datacode	FS10/20, FS40/70, FS42, FS80; VS20, VS40/70
LIC-2DF001-0200	Fast 1D/2D Decoding	Fast 1D/2D, 60 frames per second (DPM not included).	None	FS10/20, FS40/70, FS42, FS80; VS20, VS40/70
LIC-OCR002-0100	Deep Learning Based OCR	Deep Learning OCR for VS devices.	Deep Learning OCR and MV Essential	VS20, VS40/70, NS42
LIC-OCR003-0100	Deep Learning Based OCR	Deep Learning OCR for FS devices.	Deep Learning OCR and MV Essential	FS40/70, FS42, FS80
LIC-AD002-0100	Deep Learning Based Anomaly Detection	Deep Learning based Anomaly Detection upgrade license for NS42 devices.	Deep Learning Anomaly Detection and MV Essential	NS42
LIC-AD003-0100	Deep Learning Based Anomaly Detection	Deep Learning based Anomaly Detection upgrade license for FS42 devices.	Deep Learning Anomaly Detection and MV Essential	FS42
LIC-10LF-0000	Connectivity Gateway Lite	Gateway Connectivity Lite, for FS10 devices.	None	FS10
LIC-20LF-0000	Connectivity Gateway Lite	Gateway Connectivity Lite, for FS20 devices.	None	FS20
LIC-47LF-0000	Connectivity Gateway Lite	Gateway Connectivity Lite, for FS40/FS70 smart cameras.	None	FS40, FS42, FS70 (pre-enabled on FS80)

Part Number	Web HMI Name	Description	Toolset	Applicable Devices
LIC-EXLF-0000	Connectivity Gateway Full	Gateway Connectivity Full, for FS and VS devices.	None	FS40, FS42, FS70, FS80, VS40, VS70

Toolset List

Tool	Sensor	Essential	Standard	DL OCR	DL AD	Datacode	License / Notes
Read Barcode (Standard)							Available on any FS, VS, or NS device without an additional license.
Read DPM						X	LIC-DPM001-0200
Read DPM and Barcode						X	LIC-DPM001-0200
Datacode						X	LIC-DPM001-0200
Deep Learning OCR				X			LIC-OCR002-0100 or LIC-OCR003-0100
Locate Object	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Locate Object Plus		X	X				Enabled by: LIC-OCR002-0100, LIC-OCR003-0100, LIC-AD002-0100, LIC-AD003-0100, LIC-STD001-0100, LIC-SEST01-0100
Locate Edge	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Locate Blob		X	X				
Locate Circle	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Binarize		X	X				
Dilate		X	X				
Erode		X	X				

Tool	Sensor	Essential	Standard	DL OCR	DL AD	Datacode	License / Notes
Open		X	X				
Close		X	X				
Gradient Full		X	X				
Gradient Horizontal		X	X				
Gradient Vertical		X	X				
Object P/A	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Object Plus P/A		X	X				
Brightness	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Contrast	X	X	X				
Edge Detect	X	X	X				
Blob P/A		X	X				
Anomaly Detection					X		LIC-AD002-0100 or LIC-AD003-0100
Distance	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Circle Diameter	X	X	X				
Measure Object Width		X	X				

Tool	Sensor	Essential	Standard	DL OCR	DL AD	Datacode	License / Notes
Pixel Count	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Blob Count		X	X				
Edge Count	X	X	X				Available in VS/NS without additional license; available on FS with LIC-SEN001-0100.
Locate Object Count	X	X	X				
Flaw Detection (Edges)		X	X				
Flaw Detection (Intensity)		X	X				

Provisioning a License to a Device

Use the Device Licensing tab in Aurora Focus to provision licenses to devices remotely.

Provisioning licenses to devices without internet access while the devices are connected to Aurora Focus.

1. Click ⋮ and select

Provision from the menu.

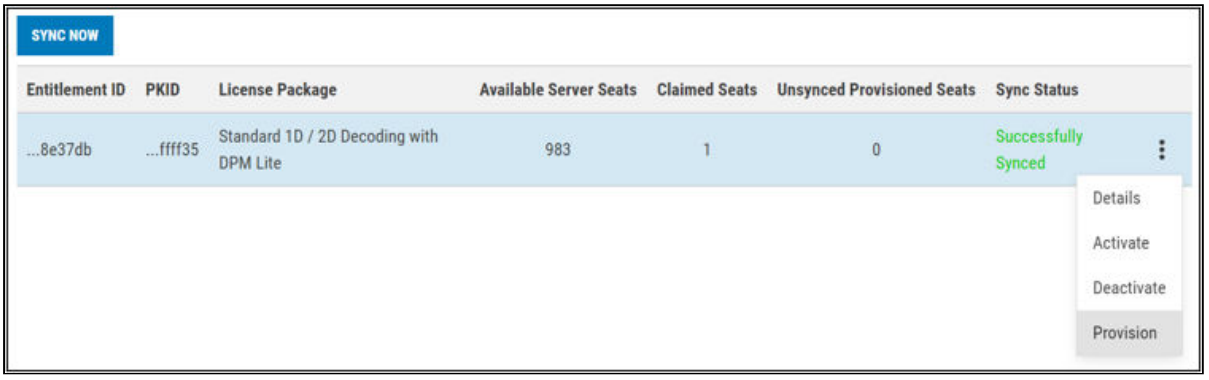

2. Select the device to provision the license to and click Done.

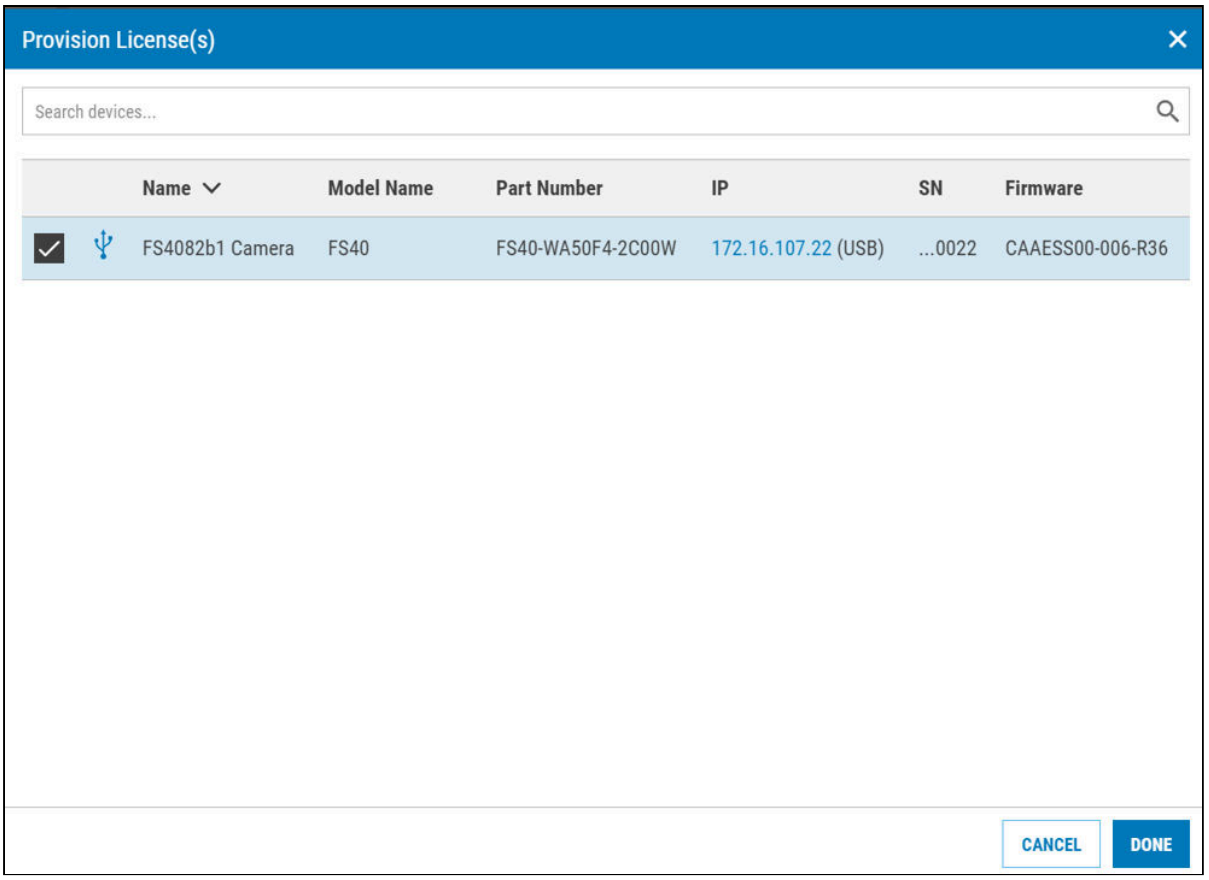

3. Observe the Device Successfully Provisioned notification.