



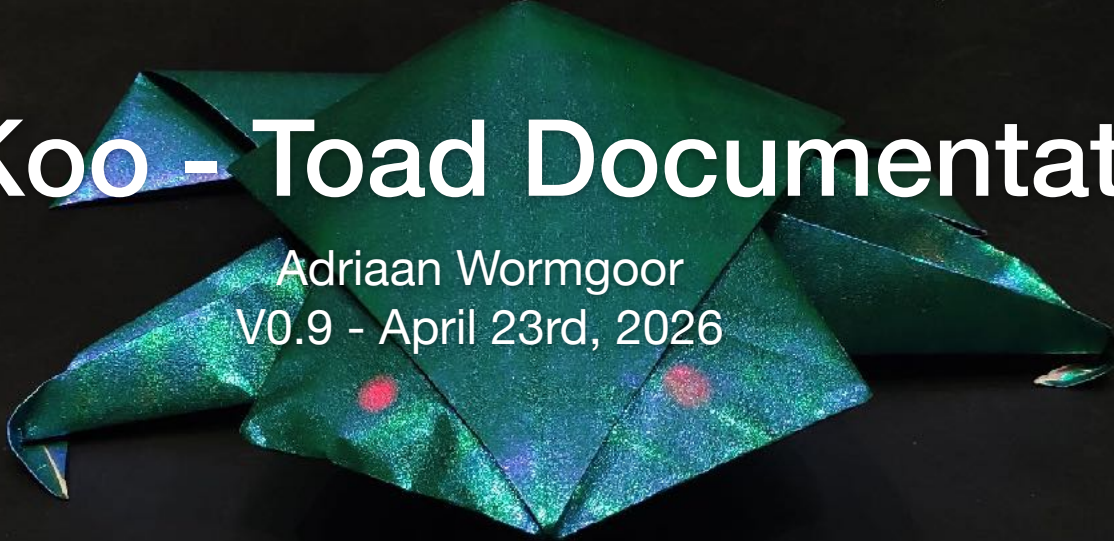

Jaha Koo - Toad Documentation

Adriaan Wormgoor
V0.9 - April 23rd, 2026

Transmitter: MIDI connection

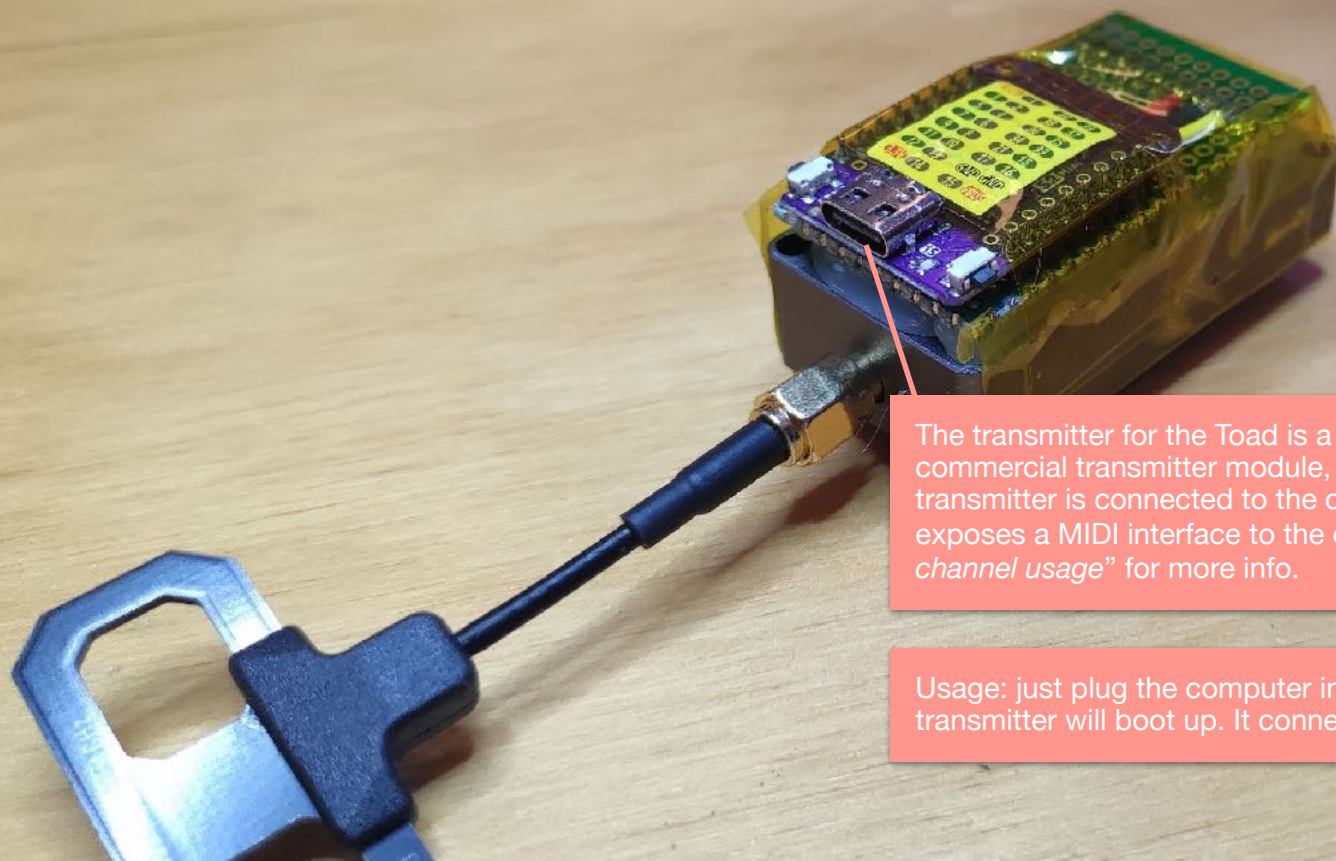

The transmitter for the Toad is a microcontroller strapped to a commercial transmitter module, which it interfaces with. The transmitter is connected to the computer with a usb-c cable. This exposes a MIDI interface to the computer. See section “*MIDI channel usage*” for more info.

Usage: just plug the computer in to the usb-c port and the transmitter will boot up. It connects automatically to the Toad

MIDI channel usage

- When plugged in to the computer (using the usb-c port on the transmitter), the computer should detect a new MIDI device. The transmitter does not need to be switched on for this.
- All MIDI commands should be Control Change (CC) commands, over MIDI Channel 1.

Left motor - range 62->0 is backward speed, range 64->127 is forward speed. Value 63 = stopped	CC 1, range [0-127]**
Right motor	CC 2, range [0-127]**
Left eye	CC 3, range [0-127]
Right eye	CC 4, range [0-127]

** Range 62->0 = backward speed. Range 64->127 = forward speed. Value 63 = stopped