


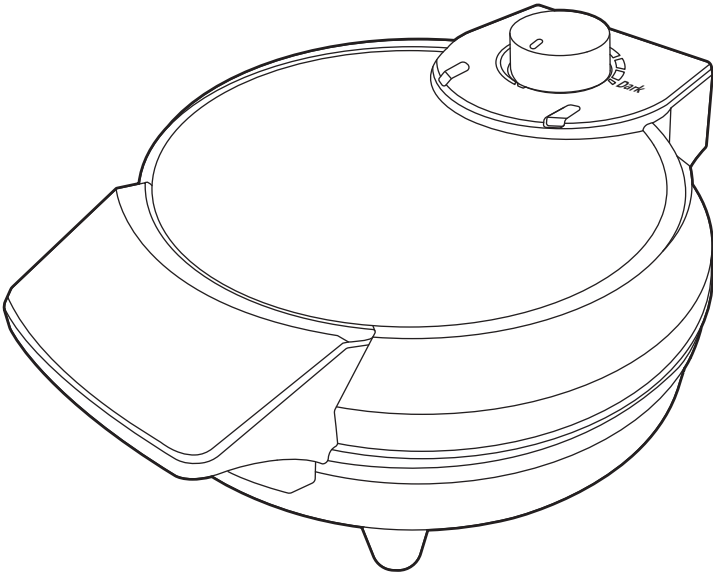

Waffle Maker
Gaufrier
Gofrera

B0DM57DNLQ

US



Table of Contents

1. Important Safeguards	3
1.1 Instructions for polarized plug	3
1.2 Additional Safety Instructions for Canada	4
2. Intended Use	4
3. Before First Use	4
4. Appliance Description	5
5. Control Knob Description	5
6. Operation	6
6.1 Making waffles	6
6.2 Reheating waffles	7
7. Tips	7
8. Recipes	7
8.1 Basic waffles	7
8.2 Cinnamon waffles	8
8.3 Chocolate waffles	8
9. Cleaning, Storage and Maintenance	9
9.1 Cleaning	9
9.2 Storage	9
9.3 Maintenance	9
10. Frequently Asked Questions	10
11. Specifications	10
12. Feedback and Help	10

1. IMPORTANT SAFEGUARDS



Read these instructions carefully and retain them for future use. If this appliance is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed including the following:

- ▶ Read all instructions.
- ▶ Do not touch hot surfaces. Use handles or knobs.
- ▶ To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- ▶ Close supervision is necessary when any appliance is used by or near children.
- ▶ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- ▶ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- ▶ The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- ▶ Do not use outdoors.
- ▶ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ▶ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ▶ Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- ▶ To disconnect, turn the control knob to "off", then remove plug from wall outlet.
- ▶ Do not use appliance for other than intended use.
- ▶ Do not immerse in water.
- ▶ Do not operate the appliance with the lid open.
- ▶ Do not stand or lean over the appliance when opening it. Hot steam may be released.
- ▶ Always place the appliance on a level, heat-resistant surface.
- ▶ Use a trivet to prevent heat from damaging any solid surface countertops.
- ▶ Appliance is intended for household use.

1.1 Instructions for polarized plug

WARNING Risk of injury!

Any other servicing than mentioned in this manual should be performed by an authorized service representative.

- ▶ This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- ▶ A short supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- ▶ Extension cords are available and may be used if care is exercised in their use.

- ▶ If an extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

1.2 Additional Safety Instructions for Canada

- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ▶ Children should be supervised to ensure that they do not play with the appliance.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ▶ The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ▶ This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

2. Intended Use

- ▶ This appliance is intended for making and reheating waffles.
- ▶ This appliance is intended for household use only.
- ▶ This appliance is intended to be used in dry indoor areas only.

3. Before First Use




DANGER Risk of suffocation!

Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- ▶ Remove all the packing materials.
- ▶ Remove and review all components before use.
- ▶ Check the appliance for transport damages.
- ▶ Clean the appliance before first use.
- ▶ Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.
- ▶ The appliance may emit a slight smell or smoke when it is first used. This is entirely safe and harmless. Ensure there is adequate ventilation in the room.
- ▶ Place the appliance on a level, heat-resistant surface.

4. Appliance Description

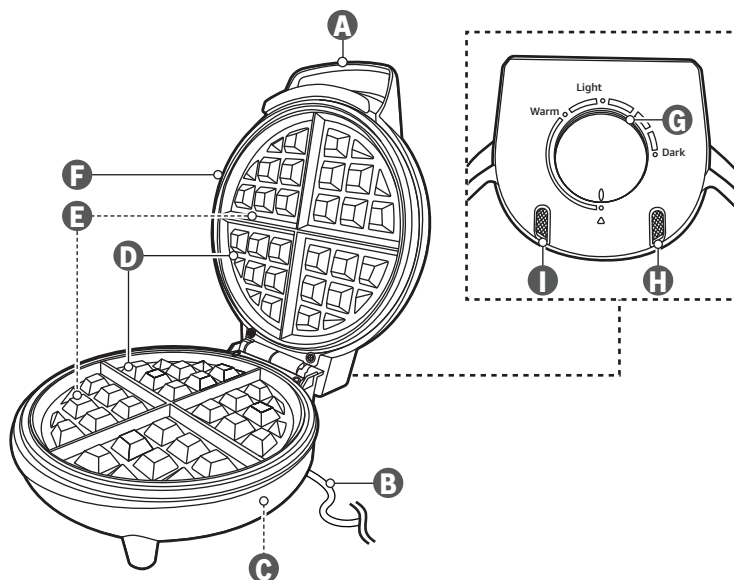

- A** Handle
- B** Supply cord with plug
- C** Cord storage
- D** Cooking surfaces
- E** Heating elements
- F** Lid
- G** Control knob
- H** Ready indicator (green color)
- I** Power indicator (red color)

5. Control Knob Description

Setting	Description
•	Off position. The appliance does not heat up.
WARM	Reheats waffles from 194°F to 266°F (90°C to 130°C) without overcooking.
LIGHT	Cooks waffles from 350°F to 400°F (177°C to 205°C) for a light to medium shade.
DARK	Cooks waffles from 375°F to 425°F (190°C to 218°C) for a medium to dark shade.

6. Operation

⚠ CAUTION Risk of burns!


The appliance becomes hot during operation and may release steam. Use heat-resistant gloves when opening or closing the lid (F).

6.1 Making waffles



NOTICE

- ▶ Always preheat the appliance. Wait for the ready indicator (H) to light up before adding waffle batter.
- ▶ Do not overfill the bottom cooking surface (D) to prevent waffle batter from overflowing.
- ▶ Make a test batch to determine the appropriate amount of waffle batter to use. It is recommended to use approx. 1/2 cup (118ml) per waffle. Adjust the amount of waffle batter as needed for subsequent batches.
- ▶ It is normal for the ready indicator (H) to light up and go off during cooking.

1. Connect the power plug (B) to a suitable outlet. The power indicator (I) lights up.
2. Lift the handle (A) to open the lid (F) (Fig. 1).

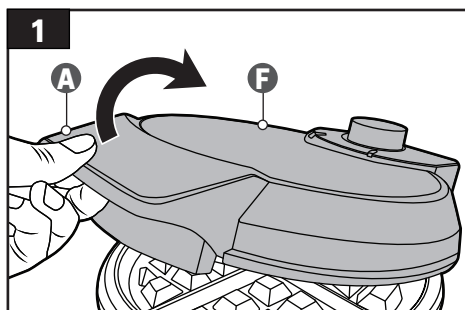

3. Lightly spray or apply cooking oil to the cooking surfaces (D) according to preference (Fig. 2). Add oil to the cooking surfaces (D) in between cooking if necessary.
4. Lower the handle (A) to close the lid (F).
5. Rotate the control knob (G) to the desired shade level. The appliance starts preheating.
6. When the appliance is preheated (approx. 3-5 minutes on **DARK**), the ready indicator (H) lights up.
7. Open the lid (F) (Fig. 1).
8. Pour approx. 1/2 cup (118ml) of waffle batter into the center of the bottom cooking surface (D) (Fig. 3). Make sure to fill all crevices.

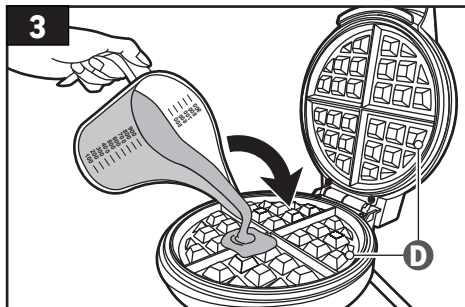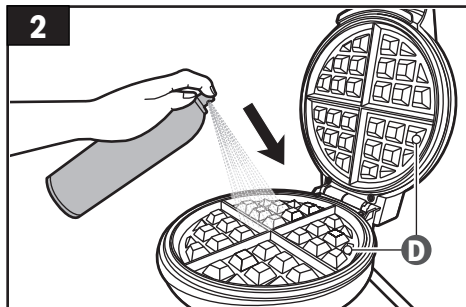

9. Close the lid (F).
10. Cooking time may vary from 3-6 minutes. Let the waffle cook for at least 3 minutes before opening to check. If it is not thoroughly cooked, close the lid (F) again to continue cooking.
11. Cook the waffle until it is done to your preference.
12. When the waffle is done, open the lid (F). Use wooden/silicone utensils to remove the waffle.
13. Place the waffle on a wire rack to cool down.
14. To continue to make more waffles, repeat steps 5 to 10.
15. After use, rotate the control knob (G) to the arrow marked on the appliance. Disconnect the appliance from the outlet. Let it cool down before cleaning.

6.2 Reheating waffles

1. Connect the power plug (B) to a suitable outlet. The power indicator (I) lights up.
2. Rotate the control knob (G) to **WARM**. The appliance starts preheating.
3. When the appliance is preheated (approx. 2 minutes), the ready indicator (H) lights up.
4. Lift the handle (A) to open the lid (F) (Fig. 1).
5. Place a waffle onto the bottom cooking surface (D).
6. Lower the handle (A) to close the lid (F).
7. Reheating time may vary from 3-6 minutes. Let the waffle reheat for at least 2 minutes before opening to check. If it is not hot enough, close the lid (F) again to continue reheating.
8. When the waffle is thoroughly reheated, open the lid (F). Use wooden/silicone utensils to remove the waffle.
9. Place the waffle on a wire rack to cool down.
10. To continue to reheat more waffles, repeat steps 4 to 10.
11. After use, rotate the control knob (G) to the arrow marked on the appliance. Disconnect the appliance from the outlet. Let it fully cool down before cleaning.

7. Tips

- ▶ Mix waffle batter to a slightly lumpy consistency. Do not overmix to avoid waffles becoming tough.
- ▶ Use room temperature ingredients for best results.
- ▶ Add a small amount of water or milk to refrigerated waffle batter to thin it out. Cold waffle batter may take a longer time to thoroughly cook to completion.
- ▶ Close the lid (F) immediately after removing a waffle to maintain a consistent temperature for subsequent batches.
- ▶ Freeze leftover waffles for a convenient meal. Separate each waffle with wax paper and place them in an airtight container. Store in the freezer for up to 4 months for best flavor.
- ▶ For an indulgent treat, serve waffles with ice cream, sprinkles, fruit or any preferred toppings.

8. Recipes

8.1 Basic waffles

Ingredients (4 cups (1.1L) of batter):

2 cups (240g)	all purpose flour
2 tbsp (25g)	sugar
2 tbsp (28g)	baking powder
1 tsp (6g)	salt
1 3/4 cups (420ml)	milk
1/2 cup (120ml)	vegetable oil
2	eggs

Preparation:

1. In a medium mixing bowl, mix the flour, sugar, baking powder and salt together.
2. In a separate bowl, whisk the milk, vegetable oil and eggs until combined.
3. Gradually add the wet ingredients to the dry ingredients while whisking.
4. Whisk until the batter is even and smooth.

8.2 Cinnamon waffles

Ingredients (two 7in (18cm) round waffles):

1 cup (120g)	all purpose flour
1/2 teaspoon (2g)	baking soda
1 1/2 teaspoons (6g)	baking powder
1/2 teaspoon (3g)	salt
1 1/2 tablespoons (19g)	sugar
1/4-1/2 teaspoon (0.65-1g)	cinnamon
2	eggs, separated
4 tablespoons (56g)	unsalted butter, melted and slightly cooled
1 cup (240ml)	buttermilk
2 teaspoons (8ml)	vanilla extract

Preparation:

1. Separate the egg whites from the egg yolks into two small, separate bowls. Set the egg whites aside.
2. In a medium mixing bowl, beat the egg yolks, vanilla, buttermilk and melted butter until combined.
3. In a separate bowl, mix the dry ingredients together.
4. Add the wet ingredients to the dry ingredients. Stir until combined.
5. Whip the egg whites until they form soft, stable peaks. Fold them gently into the waffle batter until combined.

8.3 Chocolate waffles

Ingredients (two 7in (18cm) round waffles):

1 cup (120g)	all purpose flour
1 teaspoon (4g)	baking powder
1/2 teaspoon (3g)	salt
1 cup (200g)	sugar
1/2 cup (50g)	unsweetened cocoa powder
2	eggs, lightly beaten
4 tablespoons (56g)	unsalted butter, melted and slightly cooled
1 cup (240ml)	buttermilk
2 teaspoons (8ml)	vanilla extract

Preparation:

1. In a small bowl, lightly beat the eggs.
2. In a medium mixing bowl, mix the dry ingredients together.
3. Add the eggs, buttermilk and vanilla extract to the dry ingredients. Stir until combined.
4. Slowly whisk the melted butter into the waffle batter until combined.

9. Cleaning, Storage and Maintenance

⚠ WARNING Risk of electric shock!

- ▶ To prevent electric shock, unplug the appliance before cleaning.
- ▶ During cleaning do not immerse the electrical parts of the appliance in water or other liquids. Never hold the appliance under running water.

⚠ CAUTION Risk of burns!

Let the appliance cool down completely before cleaning or storage.

9.1 Cleaning

9.1.1 General cleaning



- ▶ Clean the appliance after each use.
- ▶ To clean the exterior of the appliance, wipe with a soft, slightly damp cloth.
- ▶ Wipe the appliance dry after cleaning.
- ▶ Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the appliance.

9.1.2 Cleaning the cooking surfaces

1. Remove any crumbs from the cooking surfaces (D).
2. Absorb excess oil using a dry paper towel.
3. Wipe the cooking surfaces (D) with a soft, slightly damp cloth and a small amount of mild dish soap.
4. Wipe away any soap residue with a clean, slightly damp cloth.
5. Let the cooking surfaces (D) dry completely before the next use.

9.2 Storage

- ▶ Store the appliance in a dry area. Keep away from children and pets.
- ▶ Store the supply cord (B) by wrapping it loosely around the cord storage (C) (Fig. 4).
- ▶ Store the appliance vertically to maximize countertop space (Fig. 5).

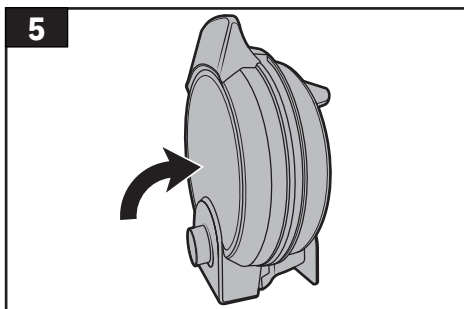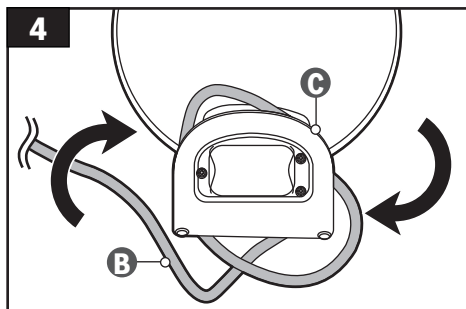

9.3 Maintenance

⚠ WARNING Risk of injury!

Any other servicing than mentioned in this manual should be performed by an authorized service representative.

This appliance contains no user serviceable parts. Do not attempt to disassemble the appliance.

10. Frequently Asked Questions

Problem	Solution
Why is the waffle not fully cooked?	The appliance was not preheated, not set to the maximum heat setting or the cooking time was insufficient. Make sure to fully preheat the appliance before use, cook using the maximum heat setting or extend the cooking time.
Why does the ready indicator (H) turn on and off during cooking?	This is normal operation of the thermostat, which automatically switches on and off to maintain the optimal cooking temperature of the cooking surfaces (D). This is not a malfunction. Use the appliance as normal.
Why is preheating necessary? What happens if I do not preheat the appliance?	Without proper preheating, the waffle will not develop a golden and crispy texture and the required cooking time will be longer. It is recommended to always fully preheat the appliance using the maximum heat setting before adding waffle batter.
How can I achieve golden-brown waffles?	Before cooking, lightly spray a small amount of cooking oil or dust a small amount of cake flour onto the cooking surfaces (D). Make sure the appliance is fully preheated and extend the cooking time according to your preference. Longer cooking time results in a crispier waffle.
How do I determine the cooking time for waffles?	It is recommended to refer to the instructions on the waffle mix packaging for precise cooking times. Generally, the waffle is fully cooked when there is no steam escaping from the appliance.

11. Specifications

Model number	AB-258NA
Rated voltage	120V~, 60Hz
Rated power input	760W
Temperature range	194°F to 425°F (90°C to 218°C)

12. Feedback and Help

We would love to hear your feedback. Please consider leaving a rating and review through your purchase orders. If you need help with your product, log in to your account and navigate to the customer service / contact us page.