




X456UJ Repair Guide

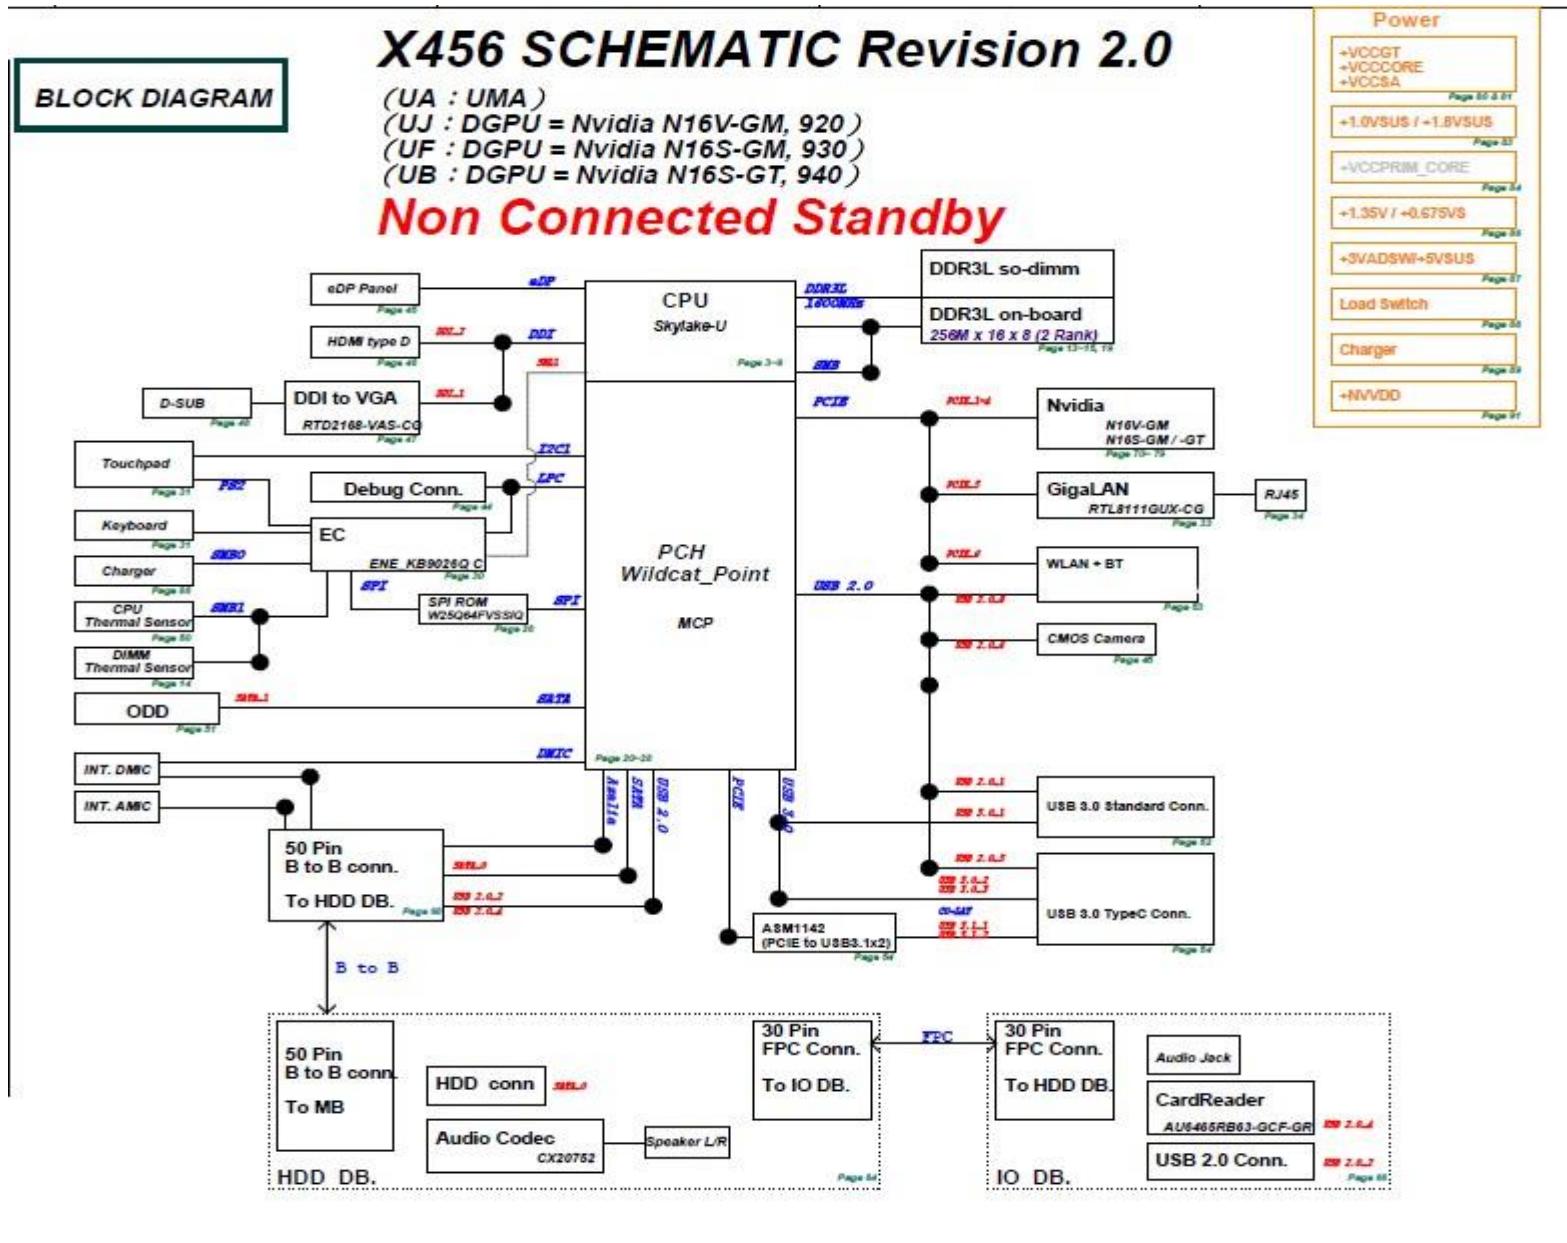


POWER FLOW

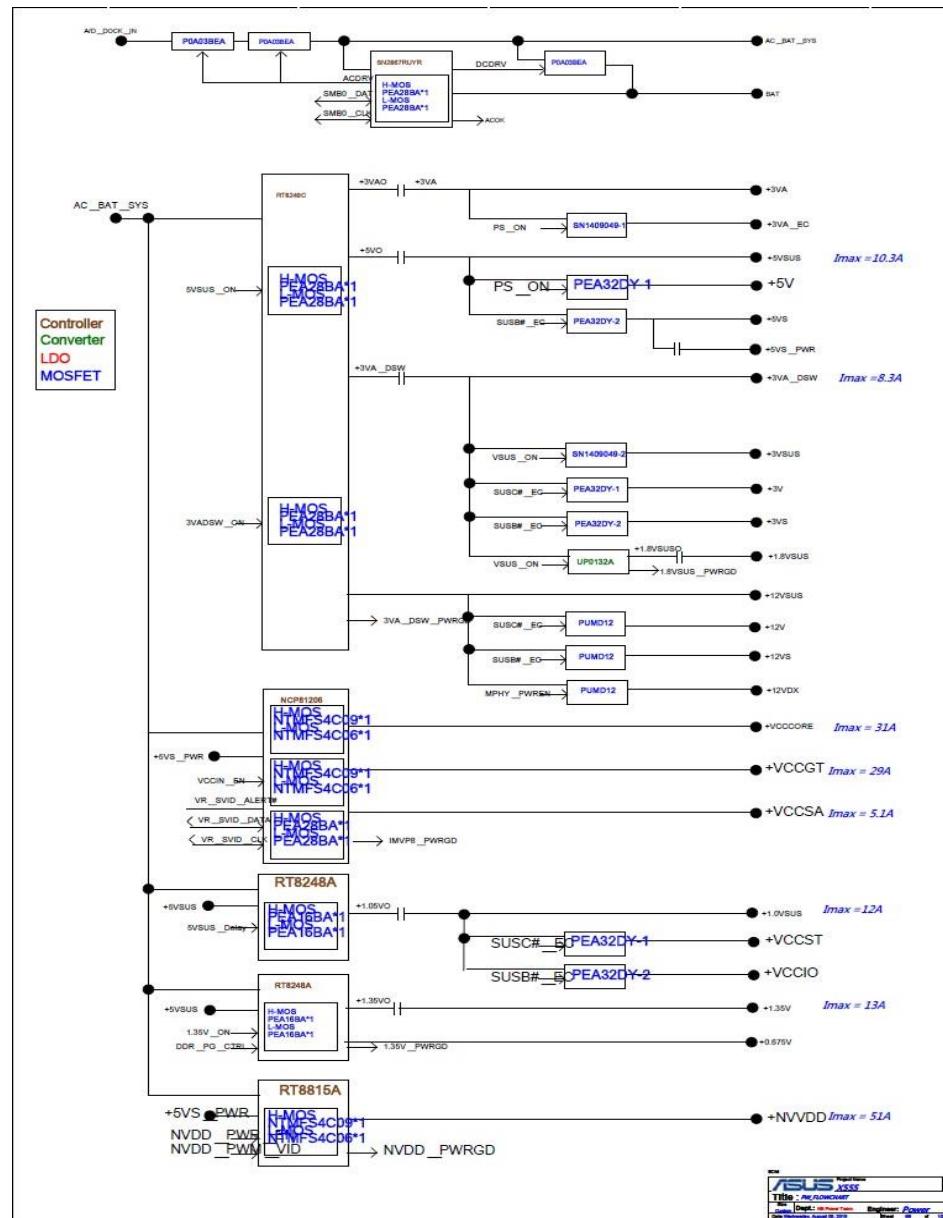


POWER ON SEQUENCE

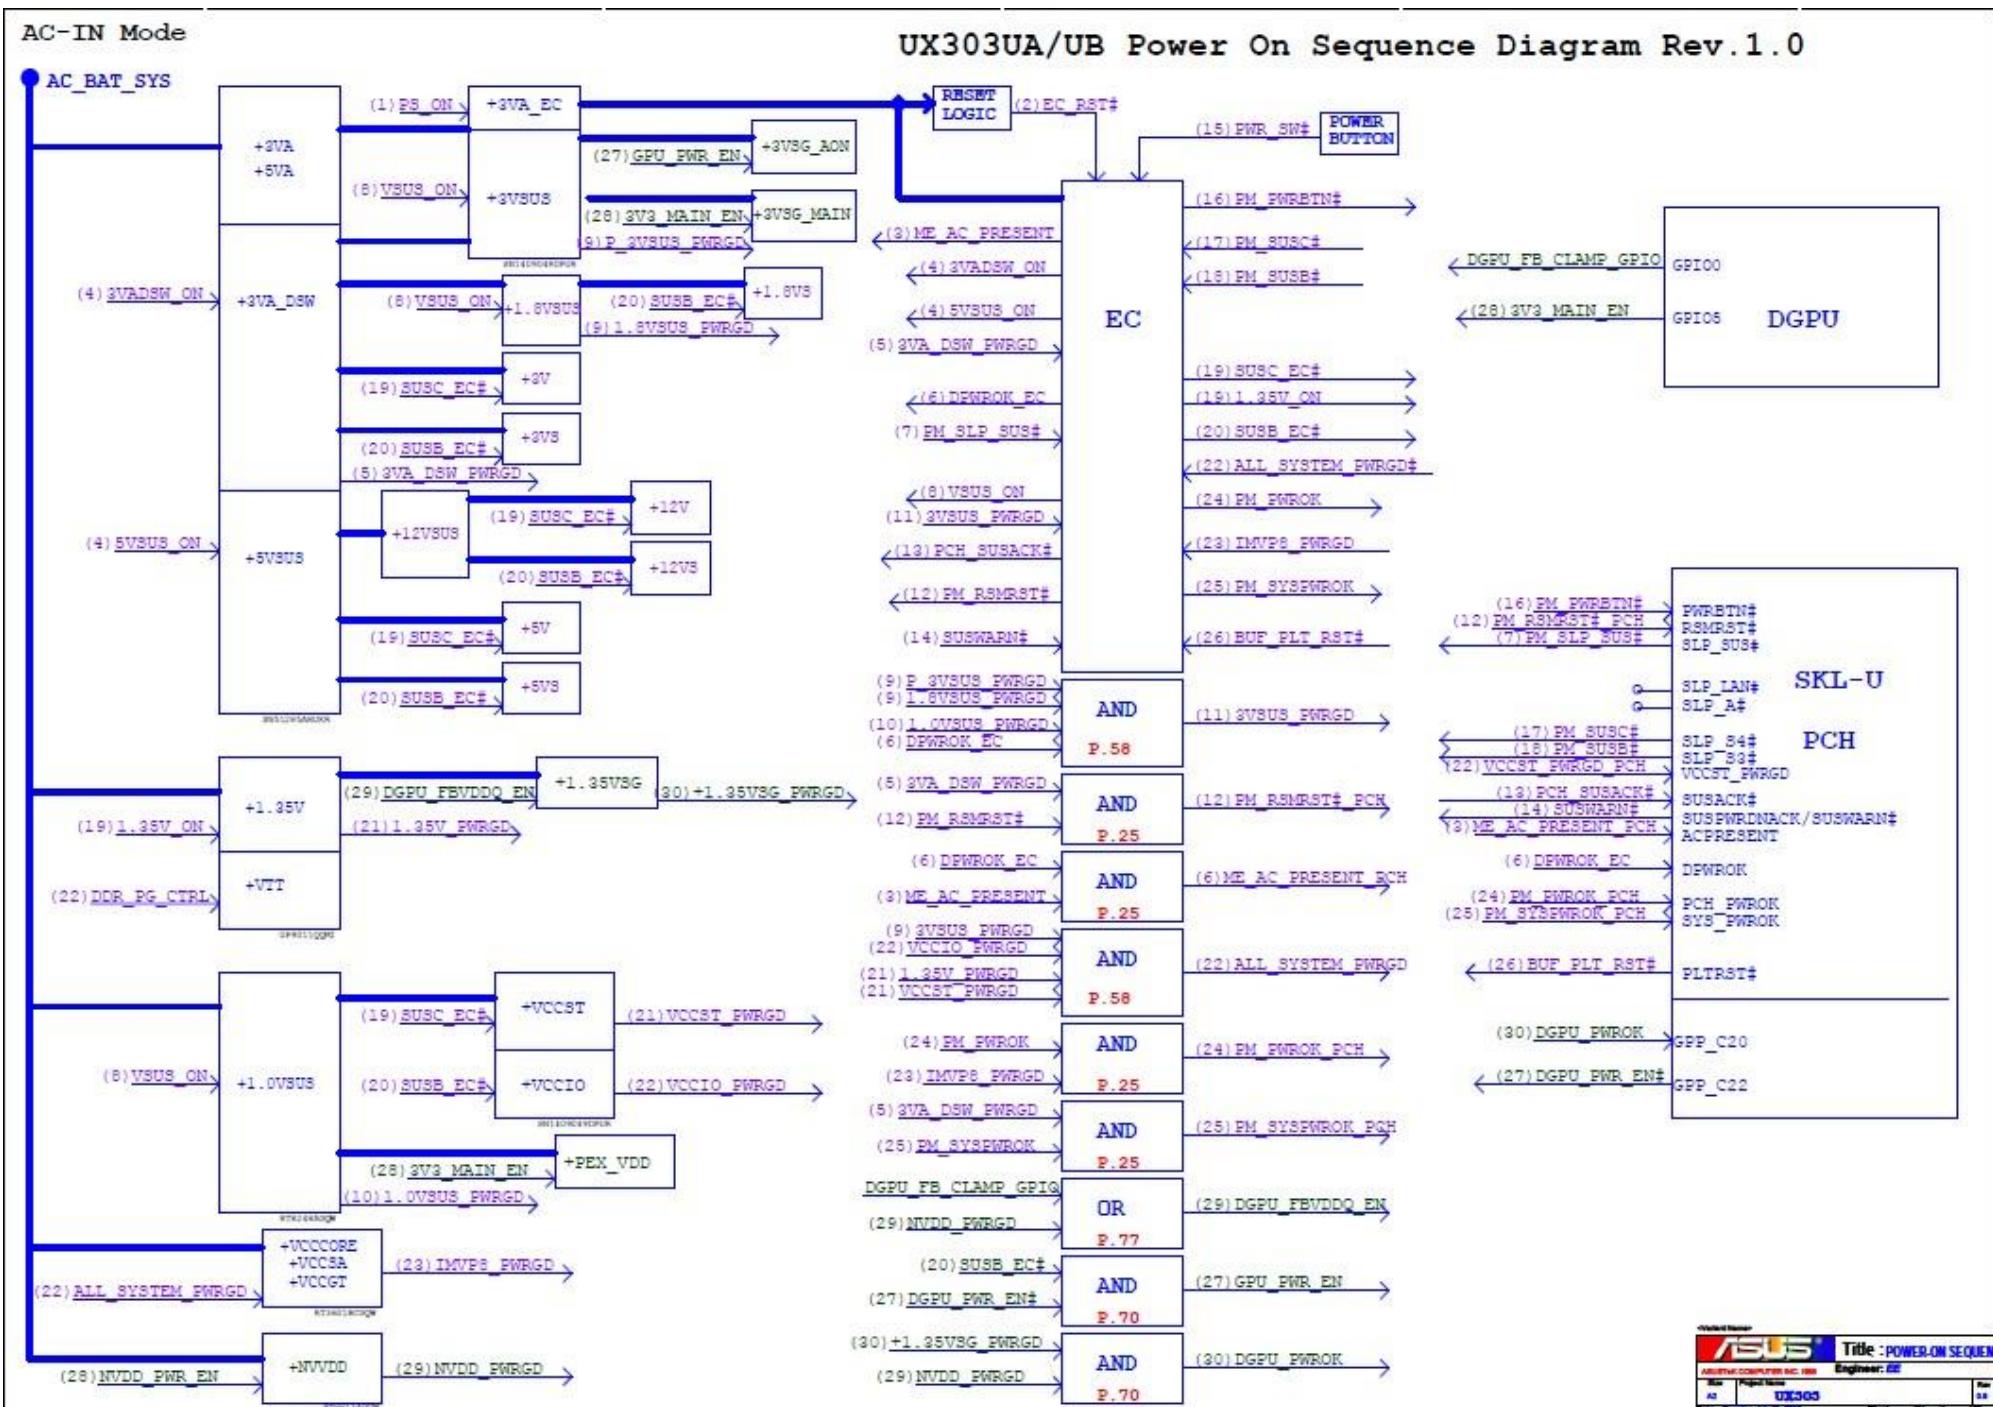

AC POWER ON SEQUENCE

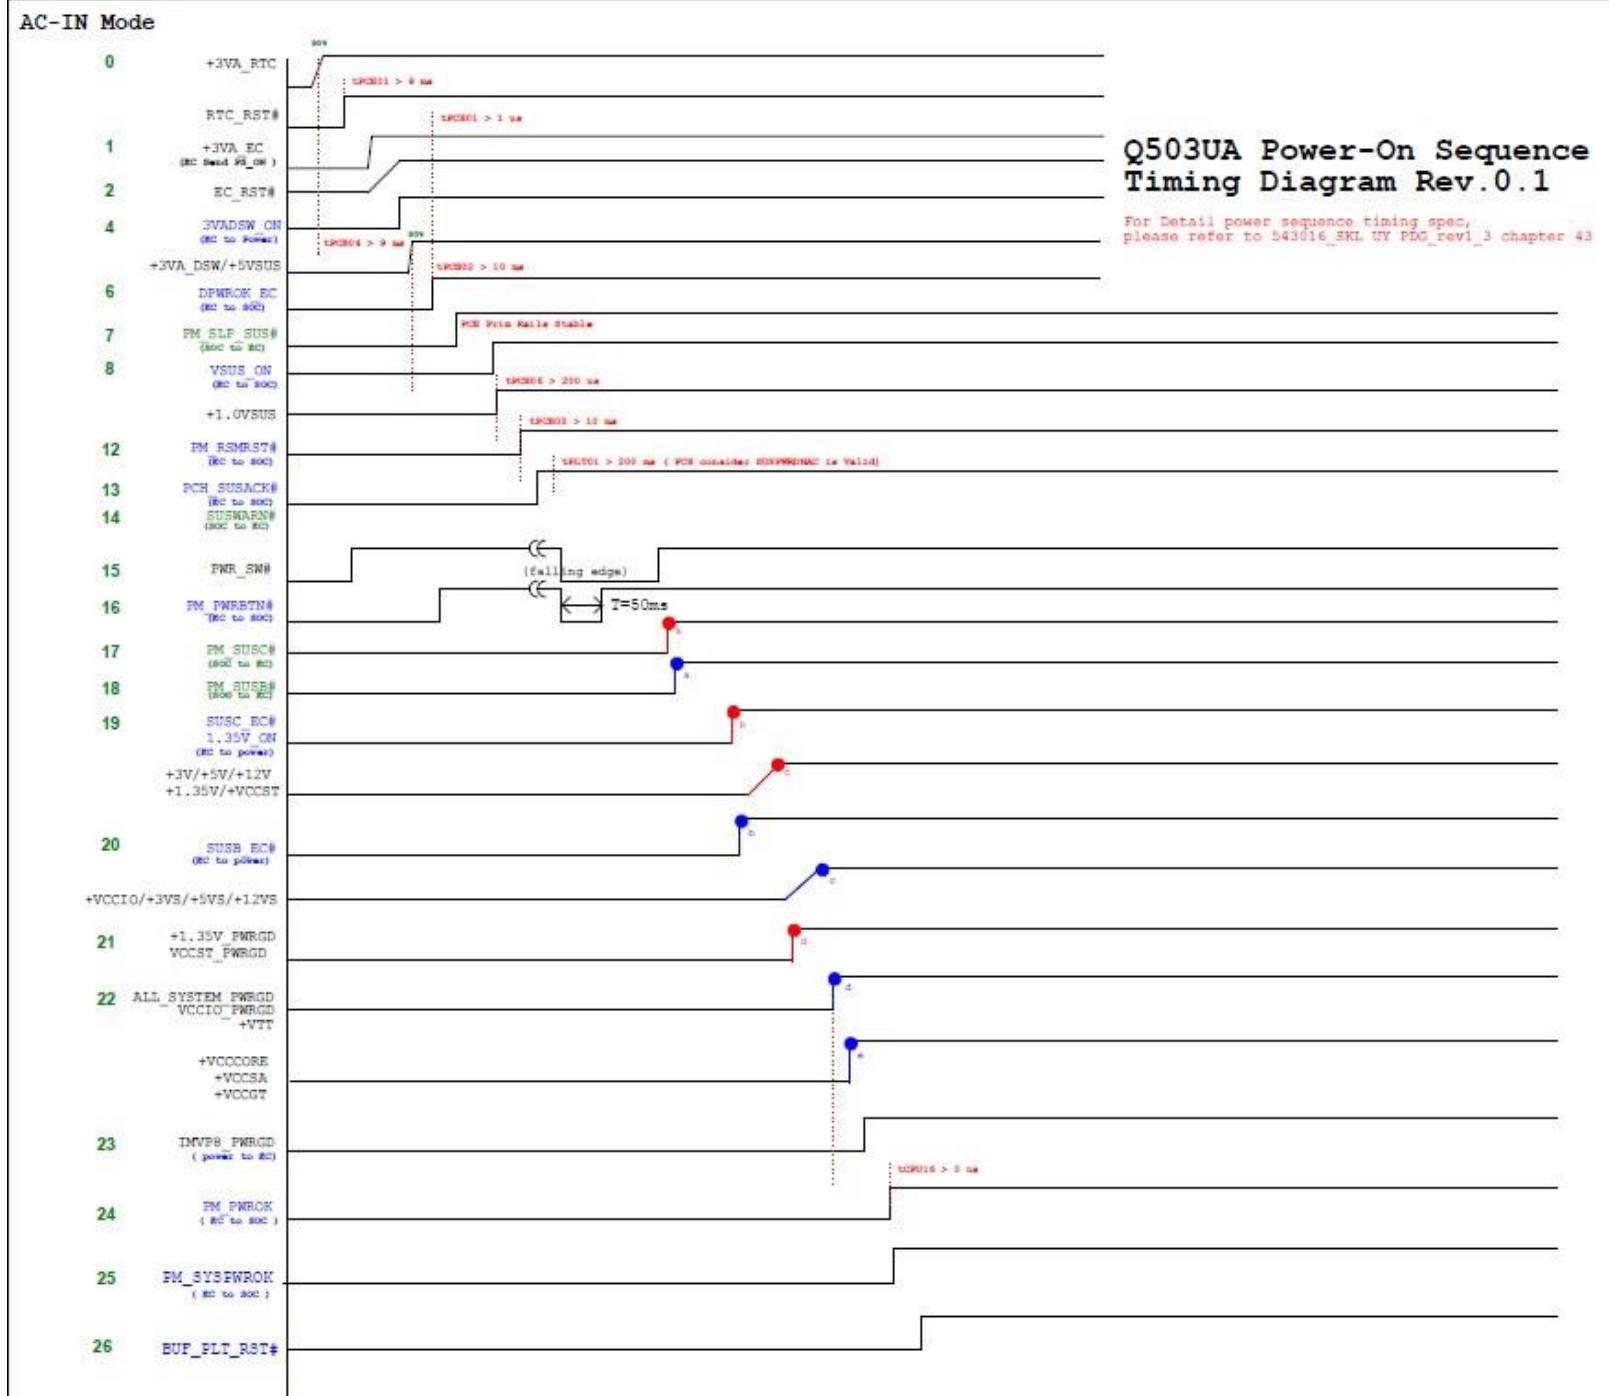

Signal Measure Point-Bottom

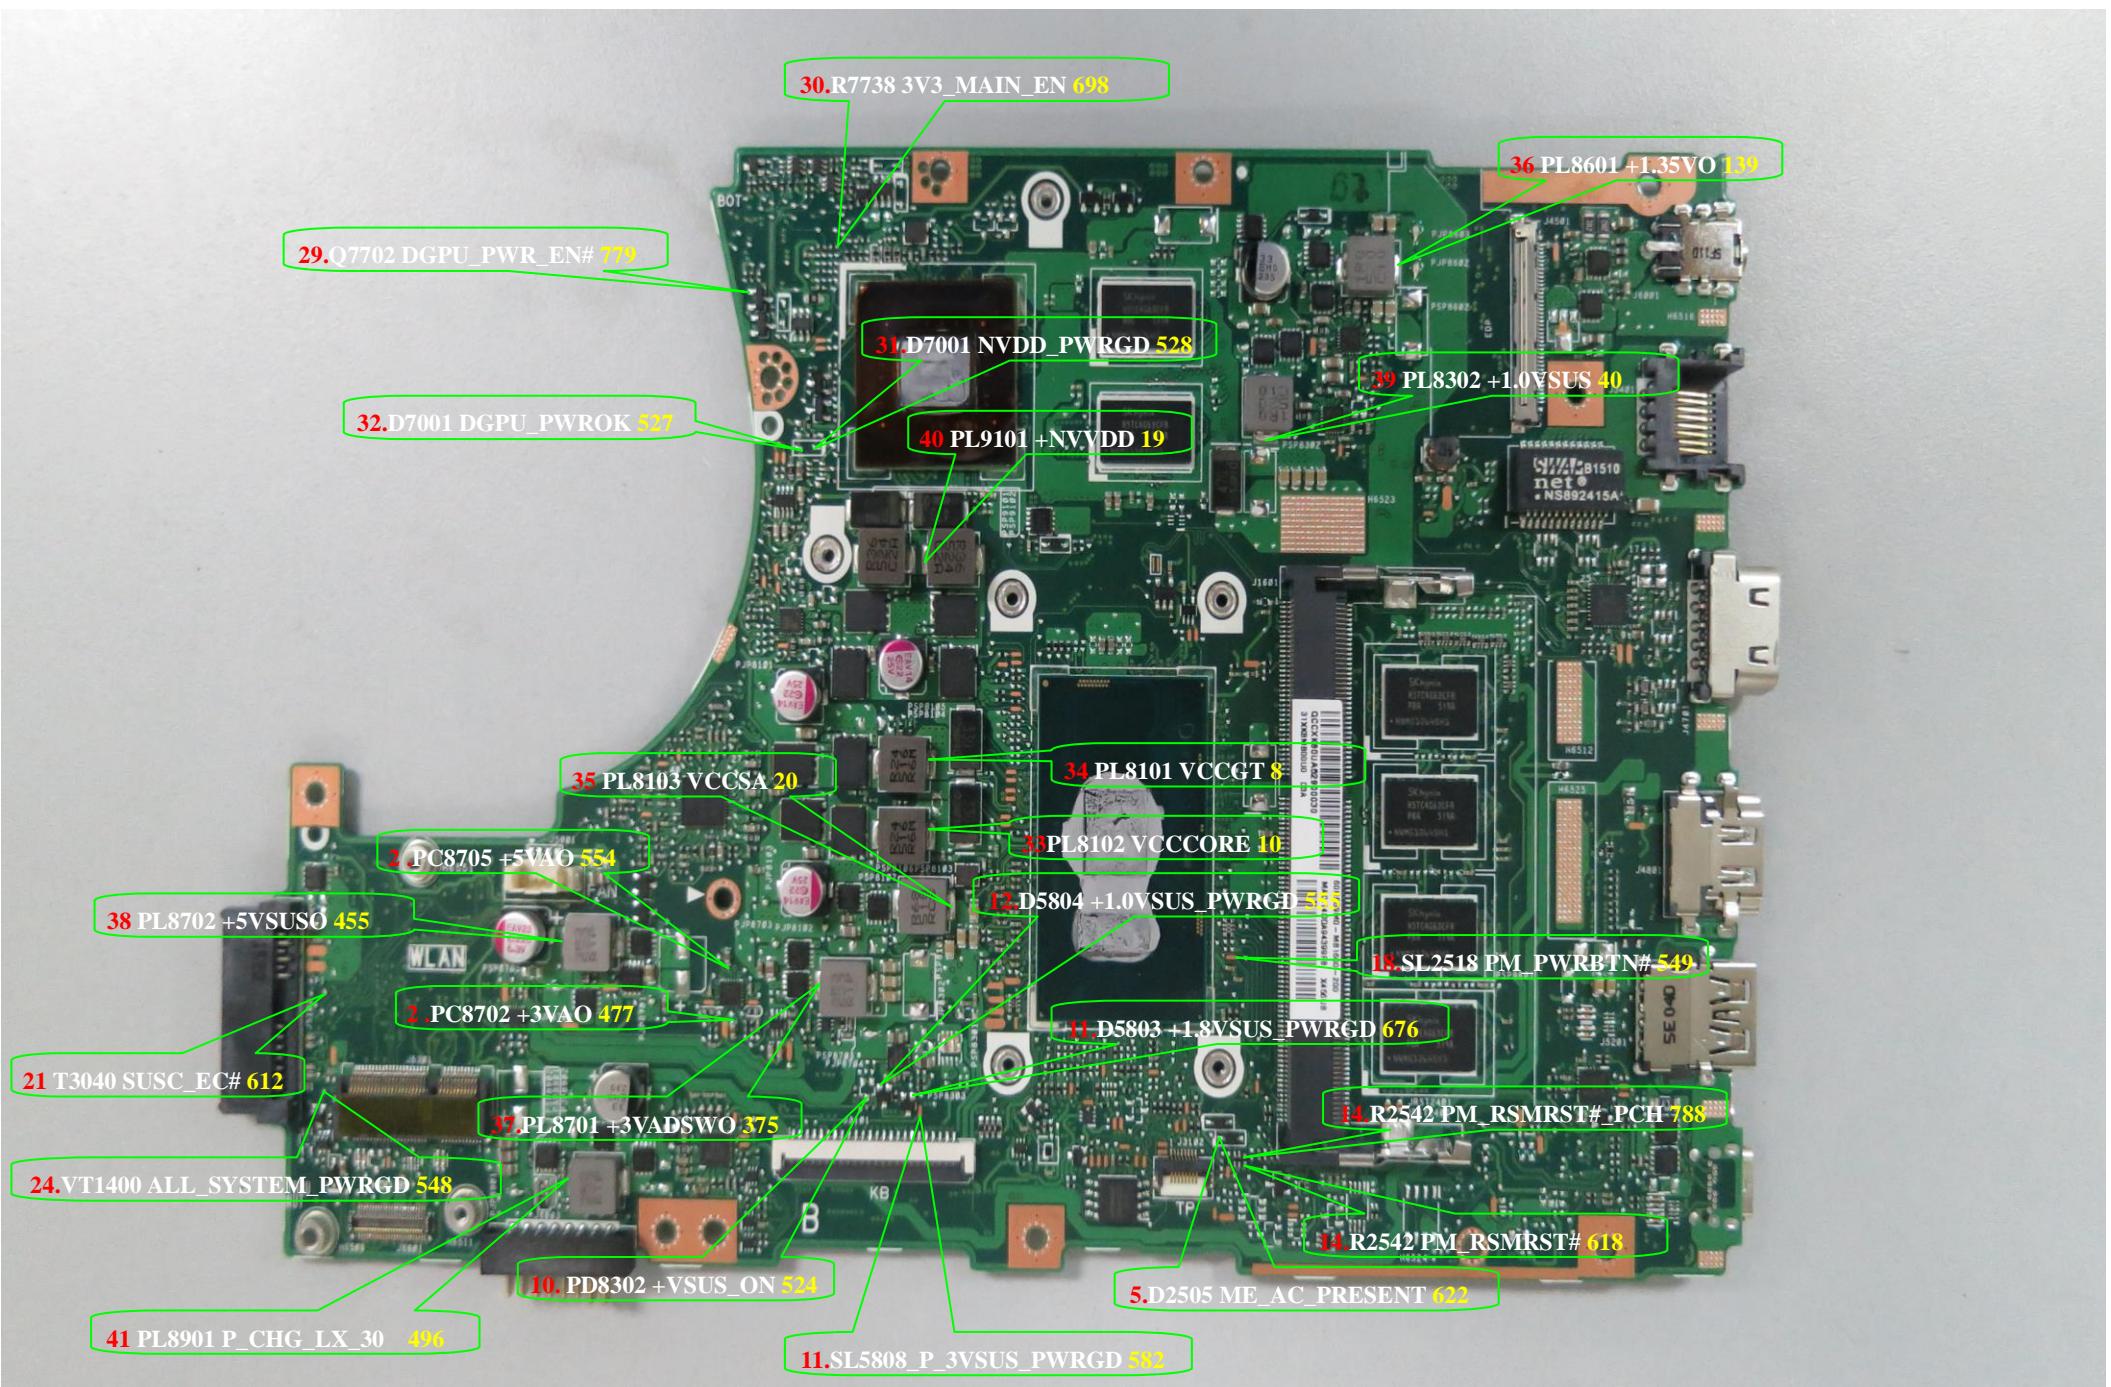

Signal Measure Point-Top

