



GE VERNOVA

ADMS

16.25.1

Coded Translation Editor User Guide

Copyright

Copyright 2026, GE Vernova and/or its affiliates ("GE Vernova"). All Rights Reserved.

GE and the GE Monogram are trademarks of General Electric Company used under trademark license.

This document is the confidential and proprietary information of GE Vernova and may not be reproduced, transmitted, stored, or copied in whole or in part, or used to furnish information to others, without the prior written permission of GE Vernova.

Change History

Date	Change Description
Jan 26, 2023	ADMS 3.16: • Editorial and formatting updates.
Oct 20, 2023	ADMS 16.1.0: • The product version numbering has changed. The prefix '3' is no longer included in the version numbering for ADMS.
Feb 23, 2024	ADMS 16.5.0: • Updated Coded Translation Parameters Grid.
Mar 25, 2024	ADMS 16.7.0 • Updated document format and styling.

Contents

1. Introduction	4
2. User Interface Overview	5
2.1. File Menu and Toolbar	5
2.2. Coded Translation Items Grid	6
2.3. Coded Translation Parameters Grid	7
3. Using the Coded Translation Editor	10
3.1. Starting the Coded Translation Editor	10
3.2. Modifying a Coded Translation Item	10
3.2.1. Modifying a Coded Translation Item Parameter	11
3.3. Adding a New Coded Translation Item	11
3.3.1. Adding a New Coded Translation Item Parameter	12
3.4. Deleting a Coded Translation Item	13
3.4.1. Deleting a Coded Translation Item Parameter	14
4. Applying Changes to the ADMS Client	15

1. Introduction

The Coded Translation Editor is a support tool provided with ADMS.

The main purpose of this tool is to define translations (human-readable names and descriptions) for values from the source code. The translated values are widely used in the Outage Management System (OMS) to show incident details on tabular displays and the network view.

The output of the Coded Translation Editor is an XML configuration file (CodedTranslationConfig.xml), which contains all coded translation items with pre-defined translation values.

You can configure any ADMS tabular display to use coded translation values to display a number of different images or texts, while other available grid tabular display options are limited to presenting only pre-configured items. (For more information, refer to the *Grid Tabular Builder User Guide*.)

In the following image, the first column of the Results Summary grid display is configured to use the DeviceType coded translation item. This allows displaying over 30 different device type images.

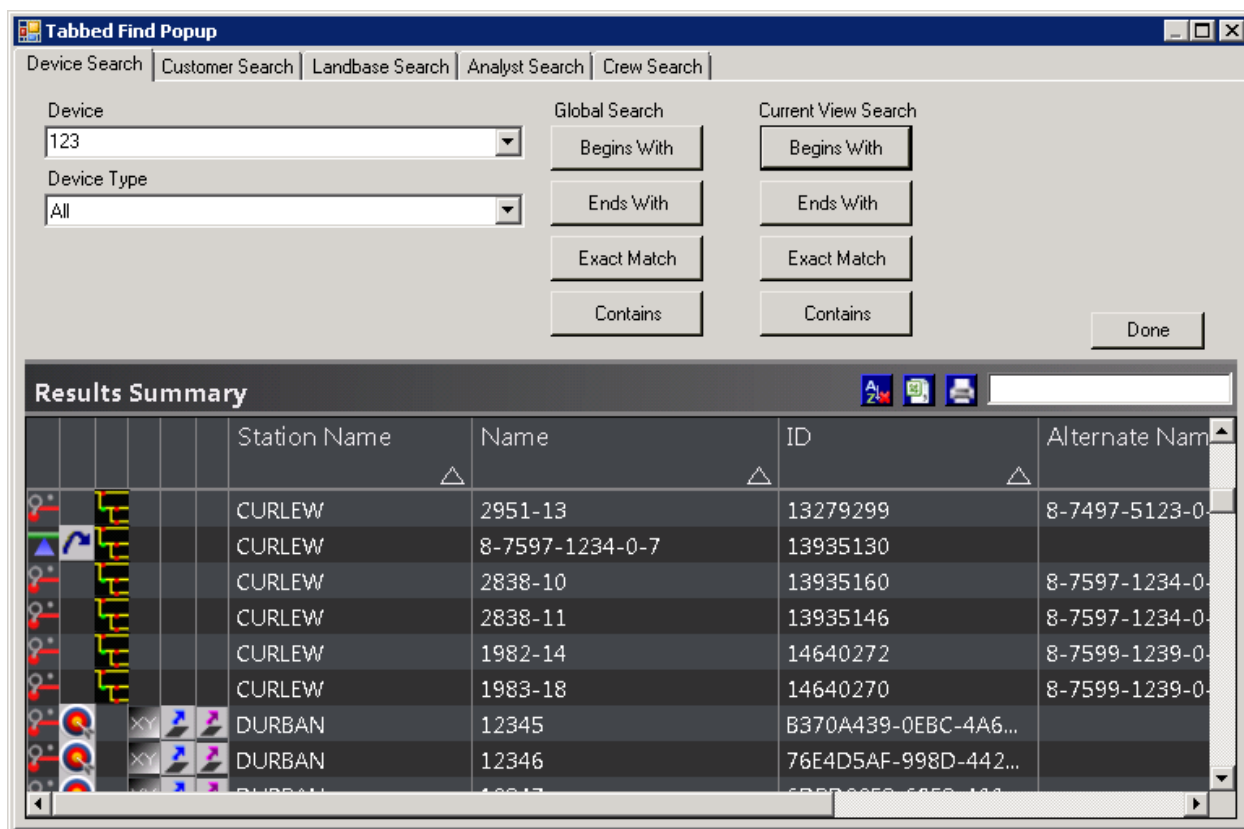


Figure 1. Using Coded Translation Items

2. User Interface Overview

This chapter provides an overview of the Coded Translation Editor fields and controls.

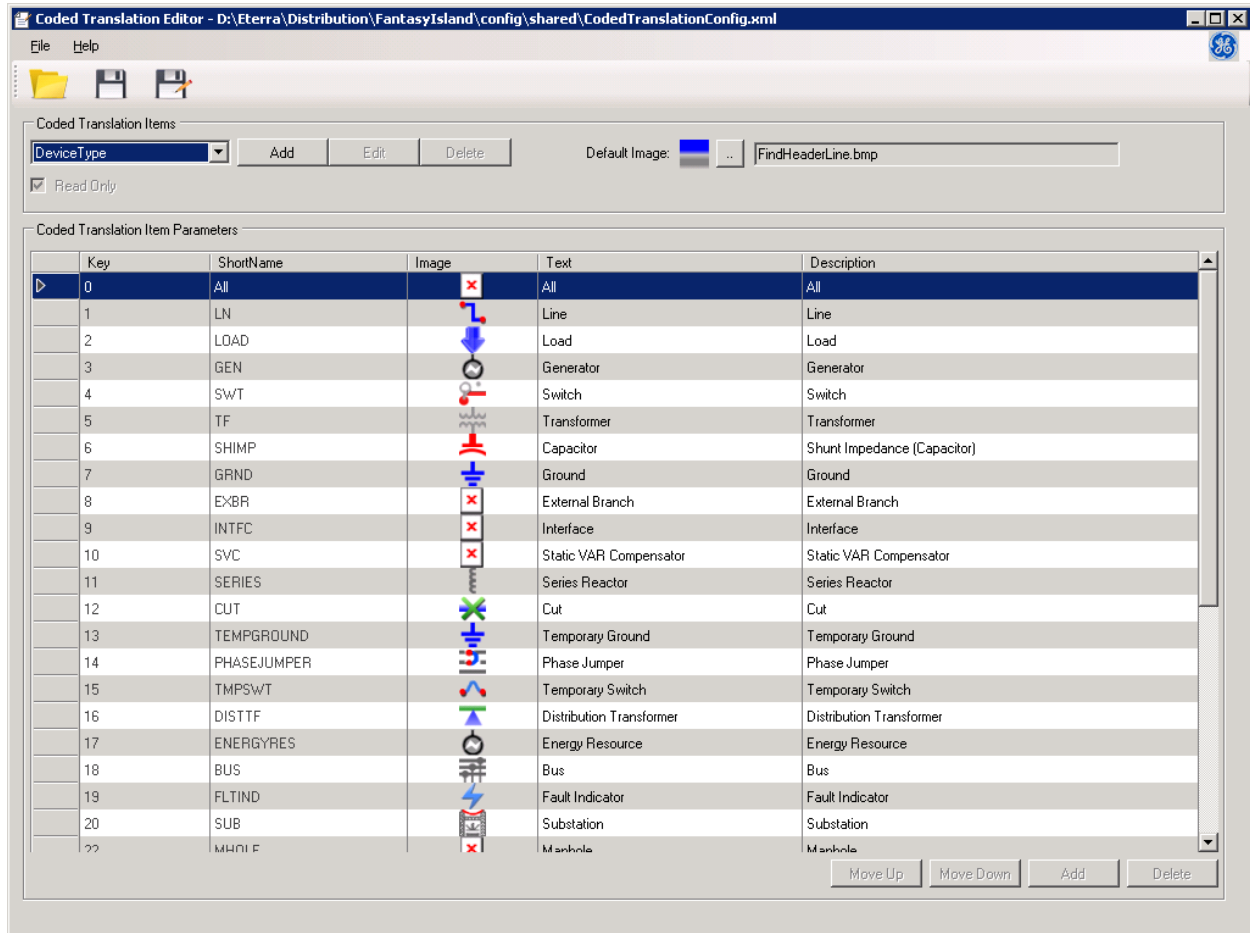


Figure 2. Coded Translation Editor Tool

2.1. File Menu and Toolbar

The toolbar and the File menu include the following options:

- **Open:** Opens an existing configuration file that contains all the codes and definitions. The default file path is %IDMS_ROOT%\config\shared\CodedTranslationConfig.xml
- **Save:** Saves changes to the currently open configuration file.
- **Save As:** Saves all changes to another configuration file.

The Coded Translation Editor allows saving the configuration file under different names. However, when it starts, it automatically opens the default configuration file.

- **Exit:** Closes the application.

2.2. Coded Translation Items Grid

Use the Coded Translation Items grid to add, remove, and modify coded translation items.


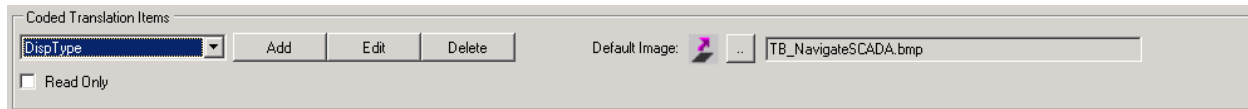


Figure 3. Coded Translation Items

The Coded Translation Items grid contains the following fields and buttons:

- **Coded Translation Items:** Select a coded translation item from the list of existing items. These coded translation item names match the names in the source code.
- **Add:** Click this button to add a new coded translation item.
Invokes the Add New Coded Translation Item dialog box.
- **Edit:** Click this button to edit the selected coded translation item's name.
Invokes the Edit Coded Translation Item dialog box with the selected item name displayed.
- **Delete:** Click this button to delete the currently selected coded translation item and its configurations.
- **Default Image:** Click this button to set a default bitmap for the currently selected coded translation item from the default location (usually %IDMS_ROOT%\bitmaps). The default image is shown for items with no images specified. The red-X image  indicates that the default bitmap is not specified.
 - **Image Preview:** Displays the icon of the selected image file.
 - **Image Browsing Button:** Opens the Select Image dialog box with the default bitmap location path to select the needed image.
 - **Image Name:** Displays the bitmap image file name.
- **Read Only:** Check this box to set the selected coded translation item to a read-only state. An example scenario would be when the short name must match the name in the code; otherwise, certain functionality might break.

A confirmation message appears:

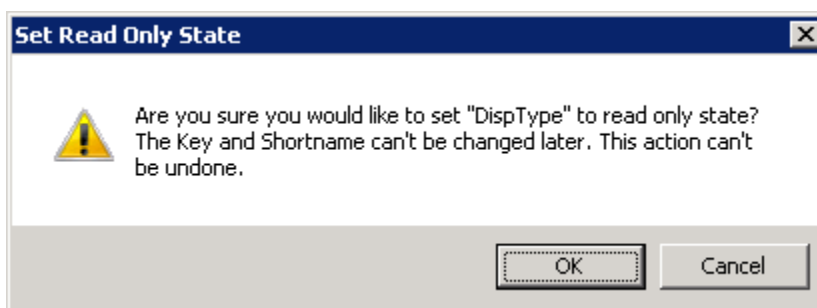

2.3. Coded Translation Parameters Grid

The Coded Translation Parameters grid contains the list of parameters for the selected coded translation item.

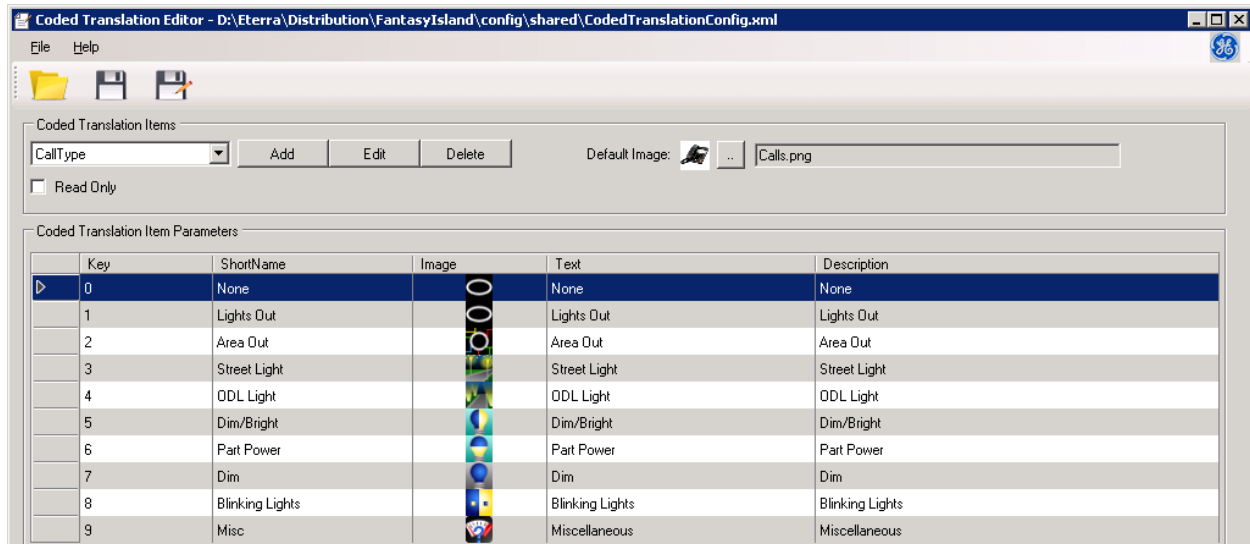


Figure 4. Coded Translation Item Parameters Grid

The Coded Translation Item Parameters grid contains the following columns:

- **Key:** A numerical value, usually representing a list number or a code for the coded translation item's parameter. These values cannot be edited when the Read Only option is set.


! Important

The coded translation item parameters must be sorted by the Key value in ascending order. Otherwise, the related functionality may not operate correctly.

i Note

The Key values are stored as numbers in journal files. For example, 00000 is stored as 0, and 00124 is stored as 124.


- **ShortName:** The short name for the coded translation item's parameter (for example, CrewAssigned). The short name is returned when coded translation items are used together with query helpers to translate a numeric value returned by a query helper into human-readable text. If the Read Only option is set (for example, for a hard-coded name), the ShortName column items are unavailable.

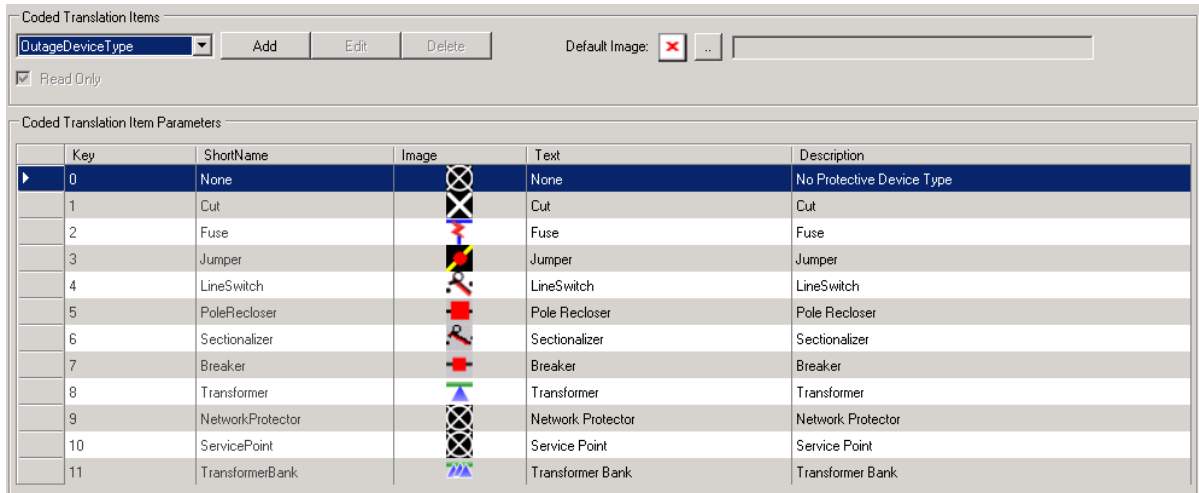

- **Image:** A preview of the bitmap image assigned to the coded translation item's condition. The red-X image indicates that the bitmap is not specified.

To select the new image, click on the image icon.

- **Text:** The text that supplements the short name. The text can be a URL (which runs a command in the background and is not visible to a user) or a longer descriptive string used only by the Coded Translation Editor's user.

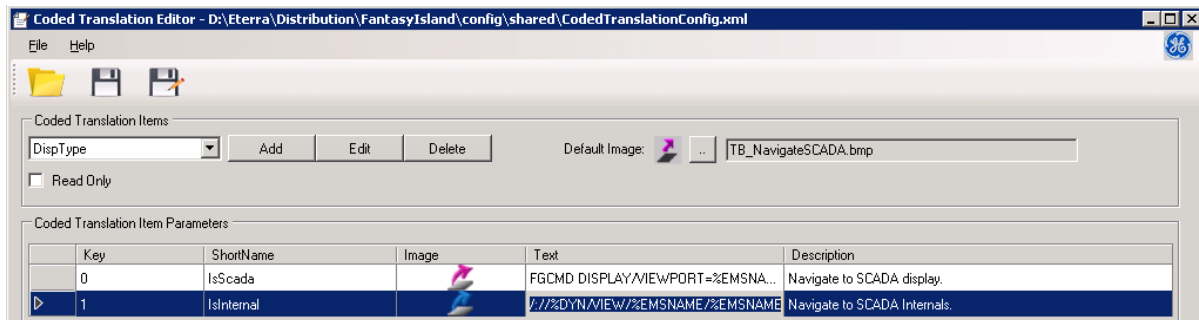

- **Description:** A description or explanation of the coded translation item's parameter, which appears as an item's tooltip.

The buttons on the Coded Translation Item Parameters Grid include:

- **Move Up:** Click this button to move a selected parameter a row up in the list.
- **Move Down:** Click this button to move a selected parameter a row down in the list.
- **Add:** Click this button to insert a new row at the bottom of the list.
- **Delete:** Click this button to delete the currently selected line in the Coded Translation Item Parameters grid.

The context menu includes the following options:

- **Copy Row:** Click to copy the currently selected row.
- **Paste Row:** Click to paste the previously copied row. The row is pasted at the bottom of the list.

- **Add Row:** Click to insert a new line at the bottom of the list.
- **Delete:** Click to delete the currently selected line.

Coded Translation Item Parameters

	Key	ShortName	Image
	0	None	
▶	1	Lights Out	
	2	Area Out	
	3	Street Light	
	4	ODL Light	
	5	Dim/Bright	

 Copy Row
 Paste Row
 Add Row
 Delete Row

3. Using the Coded Translation Editor

The Coded Translation Editor allows an analyst to manipulate and configure all values used by the ADMS grid tabular displays and on the geographic network view, including the following operations:

- Configure existing coded translation items from the `CodedTranslationConfig.xml` file
- Modify names and configurations of the existing coded translation items

Note

All coded translation item names should be as in the source code. You can modify the coded translation item names only if they are misspelled in the configuration file and differ from those in the source code.

- Add and configure new coded translation items if any are supplied by developers, and if they exist in the source code and not in the configuration file
- Delete the currently opened coded translation item and all related configurations, if the item was removed from the source code and is no longer used in the grid tabular displays

3.1. Starting the Coded Translation Editor

To start the Coded Translation Editor, from the Start menu go to All Programs > Eterra > Distribution > Tools > Configuration Tools > Coded Translation Editor.

3.2. Modifying a Coded Translation Item

Note

All coded translation item names should be the same as in the source code. You can modify the coded translation item names only if they are misspelled in the configuration file and differ from those in the source code. You cannot modify names or move or delete the coded translation items with the Read Only option set.


To modify a coded translation item:

1. Select an item from the Coded Translation Items list.

The Coded Translation Item Parameters grid is populated with the data from the configuration file.

2. To edit the coded translation item name, click the Edit button.

The Edit Coded Translation Item dialog box appears. The Name field contains the selected item name.

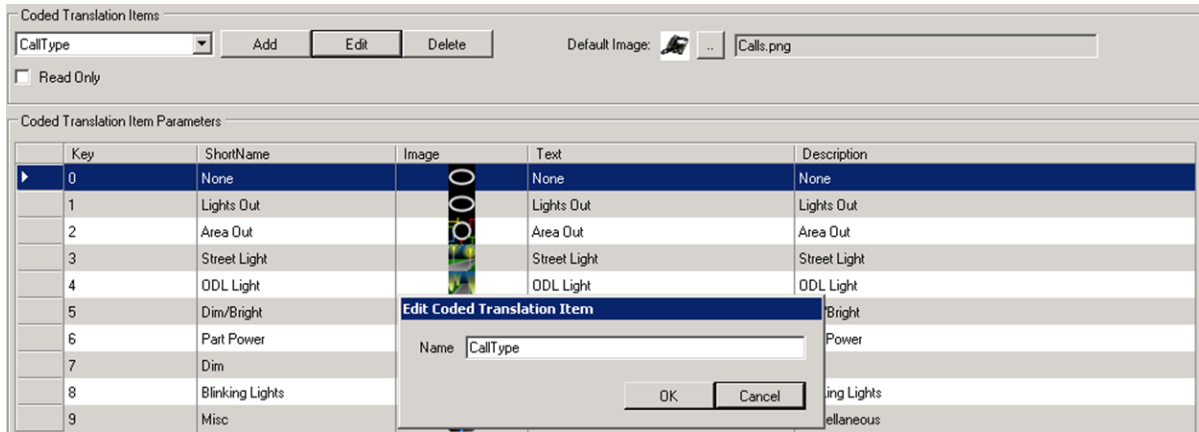

3. Update the name, and then click OK.
4. As needed, use the Browse button  to update the coded translation item's default image.

3.2.1. Modifying a Coded Translation Item Parameter

Note

You cannot modify Key or ShortName parameters or delete parameters of the coded translation items with the Read Only option set.

To modify the grid parameters:

1. Double-click and modify the desired parameter in the grid.
2. To change the bitmap image, click on the corresponding bitmap preview, and then select a new file from the list of bitmaps.
3. To save the changes and update the coded translation item list, click the Save button.

3.3. Adding a New Coded Translation Item

Note


You can add and configure new coded translation items only if they exist in the source code and are not present in the configuration file. For example, when a developer adds a new item name to the source code by the user's request, you can add and configure the item in the Coded Translation Editor tool.

To add a new coded translation item:


1. Click Add.

The Add New Coded Translation Item dialog box appears.

2. Enter the new item's name exactly as it appears in the source code, and then click OK.

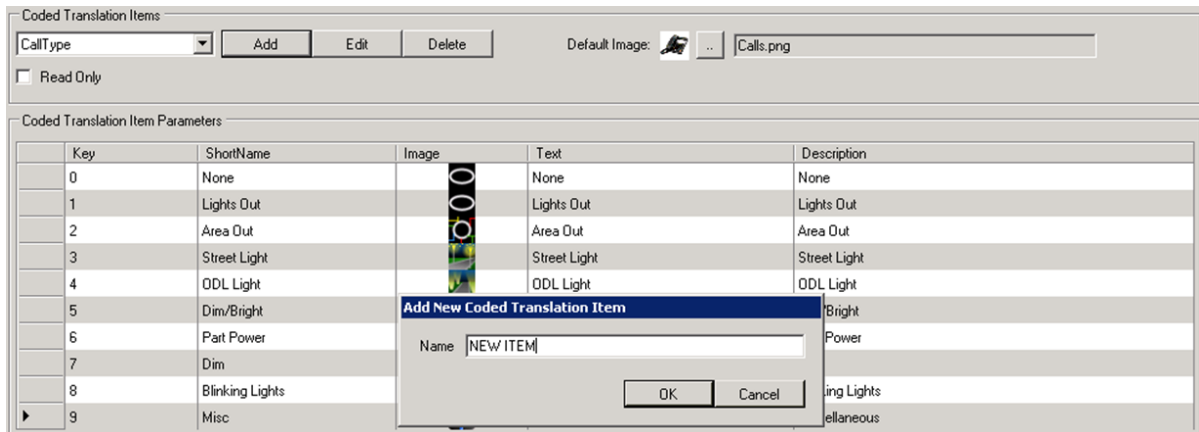

3. Select the new item's name from the Coded Translation Items list.

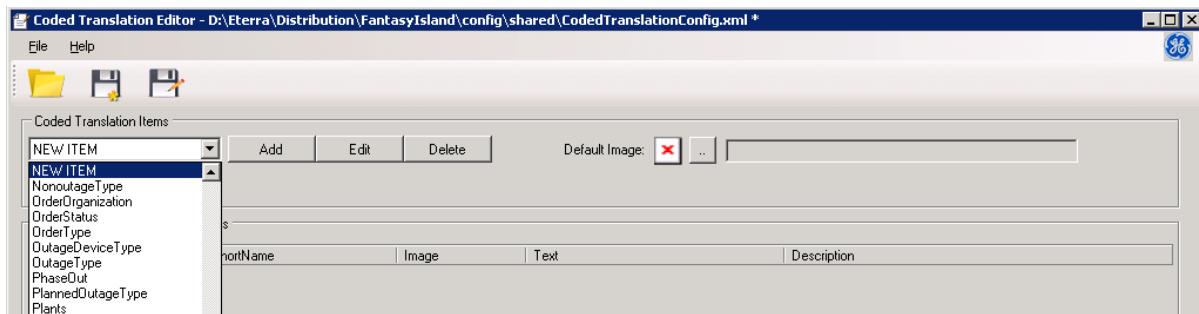


4. As needed, use the Browse button  to select the coded translation item's default image.
5. To prevent any item's modification in the future (if needed), select the ReadOnly check box.

3.3.1. Adding a New Coded Translation Item Parameter

To add parameters to the Coded Translation Item Parameters grid:

1. Click Add.
2. Double-click on the grid's fields to enter the content where needed.
3. To set the bitmap image, click on the corresponding Image field and select a file from the list of bitmaps in the Select Image dialog box.

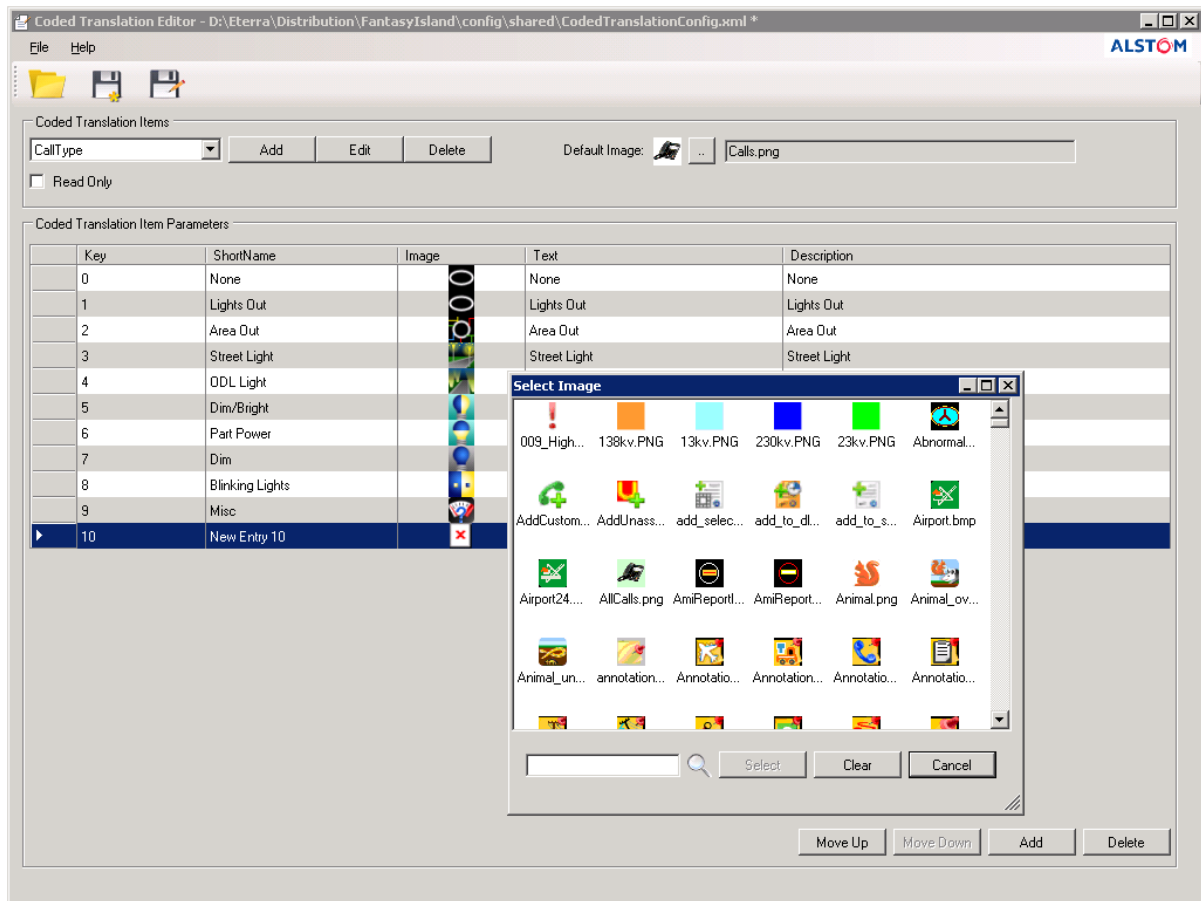

4. To save the changes and update the coded translation item list, click Save.

3.4. Deleting a Coded Translation Item

Caution

Delete the currently opened coded translation item and all of the configurations related to it only if the item was removed from the source code and is no longer used in the grid tabular displays.

To delete a coded translation item:

1. Select an item you want to delete from the Coded Translation Items list.

The Coded Translation Item Parameters grid is populated with the data from the configuration file.

2. Click Delete.

The coded translation item is deleted.

3.4.1. Deleting a Coded Translation Item Parameter

To delete a coded translation parameter:

1. Select the parameter row you want to delete in the grid.
2. Click Delete.


The coded translation item parameter is deleted.

4. Applying Changes to the ADMS Client

After the Coded Translation Editor configuration file has been changed and saved, those changes must be applied to the client.

To apply the changes to the local ADMS client, the path to the new configuration file must be specified in the client's `netconf.xml` file using the Net Dynamics Configuration Editor tool.

1. Open the Dynamics Configuration Editor by clicking Start > All Programs > Eterra > Distribution > Tools > Configuration Tools > Net Dynamics Configuration Editor.
2. On the RT tab, scroll down to the OMS section, and specify the name of the Coded Translation Editor configuration file in the OMS Coded Translation Config File field.

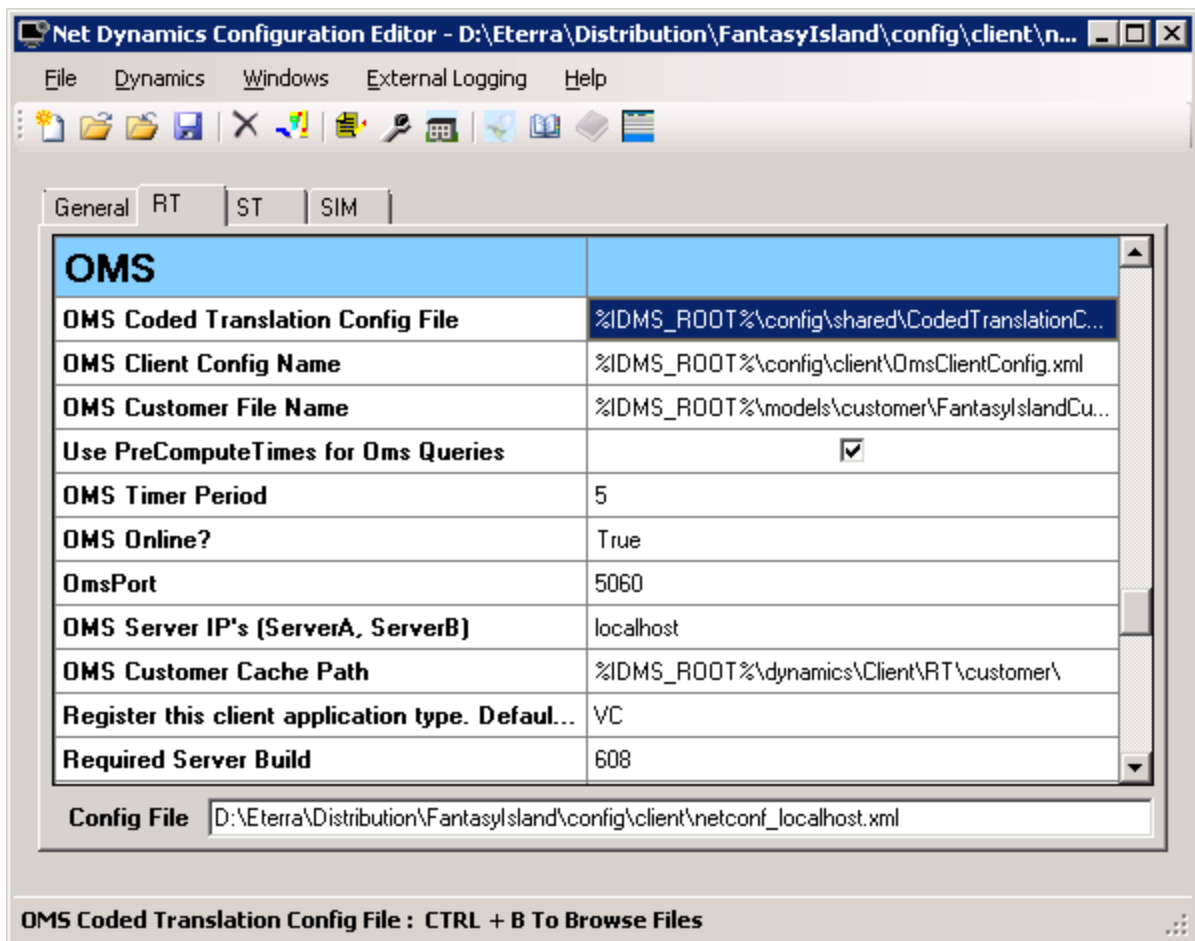

3. Similarly, specify the new file on the ST and SIM tabs.
4. Click File > Save to save the changes.