



GE VERNOVA

ADMS

16.25.1

Customer List Compiler User Guide

Copyright

Copyright 2026, GE Vernova and/or its affiliates ("GE Vernova"). All Rights Reserved.

GE and the GE Monogram are trademarks of General Electric Company used under trademark license.

This document is the confidential and proprietary information of GE Vernova and may not be reproduced, transmitted, stored, or copied in whole or in part, or used to furnish information to others, without the prior written permission of GE Vernova.

Change History

Date	Change Description
Jan 26, 2023	ADMS 3.16: • Editorial and formatting updates.
Oct 20, 2023	ADMS 16.1.0: • The product version numbering has changed. The prefix '3' is no longer included in the version numbering for ADMS.
Dec 12, 2023	ADMS 16.3.0: • Updated Conversion Tab. • Updated Compiling a Customer File.
Feb 16, 2024	ADMS 16.5.0: • Updated Loading Customer Data.
Mar 25, 2024	ADMS 16.7.0: • Updated document format and styling.
Apr 29, 2025	ADMS 16.17.0: • Updated Conversion Tab.
May 8, 2025	ADMS 16.18.0: • Updated Dedicated Fields Tab.

Contents

1. Introduction	5
1.1. Functional Overview	5
1.2. Customer Input File Example	6
2. Overview of Customer List Compiler Displays	7
2.1. Customer List Compiler Controls	7
2.2. Conversion Tab	7
2.3. Dedicated Fields Tab	9
2.4. Data Schema Tab	14
2.5. Region Schema Tab	16
2.6. View Customer Binary File Data Tab	17
2.7. Search Tab (Flexible Search)	21
2.8. Customer File Configuration Warnings	22
3. Using the Customer List Compiler	24
3.1. Starting the Customer List Compiler Tool	24
3.2. Creating a New Schema File	24
3.3. Uploading an Existing Schema	25
3.4. Editing the Schema	26
3.4.1. Editing the Dedicated Fields Parameters	26
3.4.2. Editing the Data Schema Parameters	26
3.4.2.1. Adding New Items to the Data Schema Tab	27
3.4.2.2. Copying an Item on the Data Schema Tab	28
3.4.2.3. Deleting an Item on the Data Schema Tab	28
3.4.3. Editing the Region/Management Area Schema Parameters	29
3.4.3.1. Managing the Company	29
3.4.3.2. Managing Child Areas	30
3.4.4. Configuring Customer Model Encryption	30
3.5. Compiling a Customer File	31
3.6. Compiling a Customer TSV File	32
3.7. Compiling a Customer File with Non-ASCII Characters	33
3.8. Reviewing the Results	34
3.9. Performing Command-Line Operations	35
3.10. Modeling Load Using Customer Compiler	37
4. Using the Customer Merge Tool	41
4.1. Running the Customer Merge Tool	41
4.2. Preparing Files for the Customer Merge Tool	42
4.3. Updating Customer Information	43
4.4. Automating the Customer File Merge Process	43
4.5. Pushing a New Customer File	43
5. Using the Customer Loader Tool	44
5.1. Loading Customer Data	44

5.2. Updating Customer Data	46
5.3. Stopping the Load Process	47
5.4. Configuring the Customer Loader Task in PROCMAN.....	47

1. Introduction

The customer model file is an immutable, compiled, and indexed store of all static customer information. The ADMS Customer List Compiler tool prepares a customer file so it can be efficiently accessed by the various ADMS components.

The individual electric utilities maintain their customer information in a third-party customer information system (CIS). This data is exported in a text file, which the Customer List Compiler uses as the input file to compile the data for the ADMS. Each line in the exported file contains all data values related to a given electrical customer.

1.1. Functional Overview

The Customer List Compiler process overview is shown in the below image.

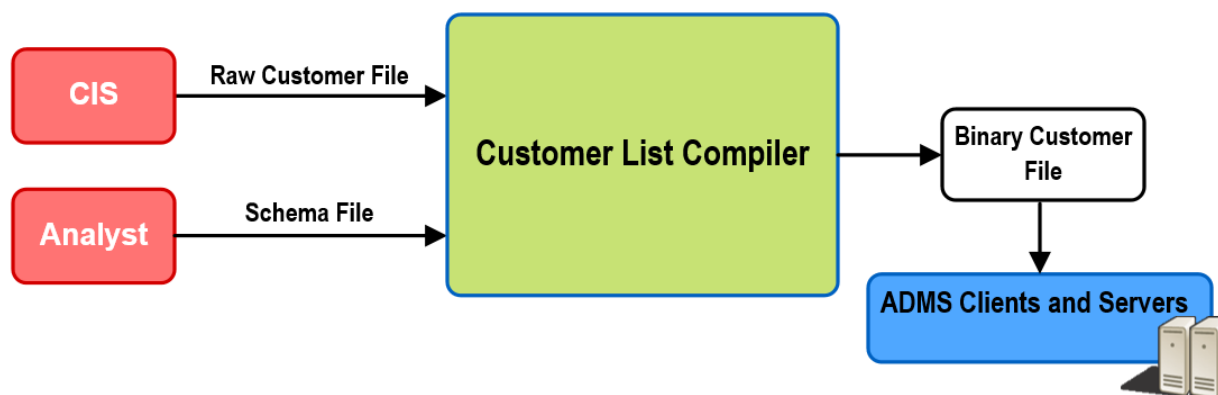


Figure 1. Customer List Compiler Process Overview

- **Input file:** Raw customer file (*.txt). Exported customer data containing one line of text for each electrical customer.
- **Schema file:** A schema must be available at compile time for the Customer List Compiler to interpret the customer information in the input file. An analyst prepares and configures the *_customerSchema.xml schema file.
- **Output file:** Compiled customer file (*.bpcl). The customer binary file created by the Customer List Compiler after processing the customer input file.

The Customer List Compiler performs the following functions:

- Reads and compiles the customer data file from CIS.
- Writes the resulting .bpcl file in the default
%IDMS_ROOT%\ToolsWorkspace\CustomerCompiler\ folder.

The generated customer file is ready to be used in the ADMS system. For further processing and propagation to the ADMS client consoles, the file can be uploaded to the Model Manager tool's input folder, along with other Model Manager input files. For more information, refer to the *Model*


You can also load customer data from a customer file to the Archive database using the Customer Loader tool. For more details, refer to the *ADMS Archive User Guide*.

1.2. Customer Input File Example

The Customer List Compiler's main purpose is to process the content of the customer input file, including all pertinent information related to each electrical customer in the system. The text file is usually exported from a CIS system, but might require data from multiple external systems.

Customer data is private, and any copies of this file should be treated with sensitivity. The information for each customer is contained in one line per meter in the text file. The various customer properties are organized in distinct columns. Each line has the same structure for all customer types.

In the example below, the Account Number (1) entry starts in position 0 and has a length of 10 characters for all customer lines, while the Customer Name (2) starts in position 10 and has a length of 56 characters. This information must be described in the XML schema file at compile time.

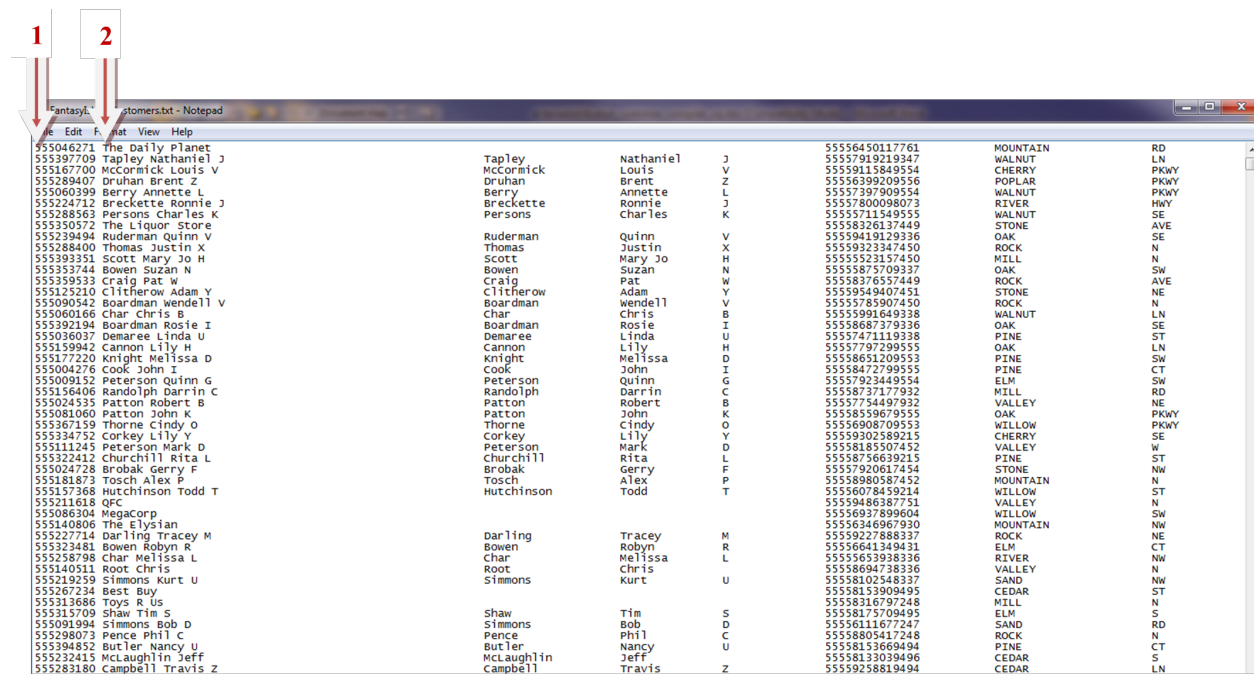

555046271	The Daily Planet	Tapley	Nathaniel	J	55556450117761	MOUNTAIN	RD
55597709	Tapley Nathaniel J	McCormick	Louis	V	5557919219347	WALNUT	LN
555167700	McCormick Louis V	Druhan	Brent	Z	5559115849554	CHERRY	PKWY
555289407	Druhan Brent Z	Berry	Annette	L	5556399209556	POPLAR	PKWY
555060399	Berry Annette L	Breckette	Ronnie	J	5557397909554	WALNUT	PKWY
555224712	Breckette Ronnie J	Persons	Charles	K	555780098073	RIVER	HWY
555288563	Persons Charles K	Ruderman	Quinn	V	5555711549555	WALNUT	SE
555350572	The Liquor Store	Thomas	Justin	X	5558326137449	STONE	AVE
555239494	Ruderman Quinn V	Scott	Mary Jo	H	5559419129336	OAK	SE
555288400	Thomas Justin X	Bowen	Suzan	N	5559323347450	ROCK	N
555393351	Scott Mary Jo H	Craig	Pat	W	5555523157450	MILL	N
555353744	Bowen Suzan N	Clitherow	Adam	Y	5555875709337	OAK	SW
555359533	Craig Pat W	Wendell	Chris	B	5558376557449	ROCK	AVE
555125210	Clitherow Adam Y	Boardman	Rosie	I	5559349407451	STONE	NE
555090542	Boardman Wendell V	Cannon	Lily	H	555785907450	ROCK	N
555060166	Char Chris B	knigh	Melissa	D	5555991649338	WALNUT	LN
555392194	Boardman Rosie I	Cook	John	I	5558687379336	OAK	SE
555036037	Denaree Linda U	Peterson	Quinn	G	5557471119338	PINE	ST
555159942	Cannon Lily H	Randolph	Darrin	C	5557797299555	OAK	LN
555177220	knigh Melissa D	Patton	Robert	B	5558651209553	PINE	SW
555004276	Cook John I	Patton	John	K	5558472799555	PINE	CT
555009152	Peterson Quinn G	Thorne	Cindy	O	5557923449554	ELM	SW
555156406	Randolph Darrin C	Corkey	Lily	Y	5558737177932	MILL	RD
555024533	Patton Robert B	Peterson	Mark	D	555754497932	VALLEY	NE
555081060	Patton John K	Churchill	Rita	L	5558559679555	OAK	PKWY
555367159	Thorne Cindy O	Brobak	Gerry	F	5556908709553	WILLOW	PKWY
555334752	Corkey Lily Y	Tosch	Alex	P	5559302589215	CHERRY	SE
555111245	Peterson Mark D	Hutchinson	Todd	T	5558185507452	VALLEY	W
555322412	Churchill Rita L				5558756639215	PINE	ST
555024728	Brobak Gerry F				5557920617454	STONE	NW
555181873	Tosch Alex P				5558980587452	MOUNTAIN	N
555157368	Hutchinson Todd T				5556078459214	WILLOW	ST
555211618	QCFC				5559486387751	VALLEY	N
555086304	MegaCorp				5556937899604	WILLOW	SW
555140806	The Elysian				5556346967930	MOUNTAIN	NW
555227714	Darling Tracey M				5559227888337	ROCK	NE
555323481	Bowen Robyn R				5556641349431	ELM	CT
555258798	Char Melissa L				5555653938336	RIVER	NE
555140511	Root Chris				5558694738336	VALLEY	N
555219239	Simmons Kurt U				5558102548337	SAND	NW
555267234	Best Buy				5558153909495	CEDAR	ST
555313686	Toys R Us				5558316797248	MILL	N
555315709	Shaw Tim S				5558175709495	ELM	S
555091994	Simmons Bob D				5556111677247	SAND	RD
555298073	Pence Phil C				5558805417248	ROCK	N
555394852	Butler Nancy U				5558153669494	PINE	CT
555232415	McLaughlin Jeff				5558133039496	CEDAR	S
555283180	Campbell Travis Z				5559258819494	CEDAR	LN

Figure 2. Customer Input File Example

Note

If the input customer file includes non-ASCII characters (for example, Cyrillic, Chinese), the input file and schema should be changed as described in [Compiling a Customer File with Non-ASCII Characters](#).

2. Overview of Customer List Compiler Displays

The Customer List Compiler supports multiple tabbed views. This chapter describes the views, and their fields and controls.

2.1. Customer List Compiler Controls

In the Customer List Compiler tool, the File menu includes the following commands:

- **New:** Opens a new blank schema.
- **Open Schema:** Invokes the Open dialog box and allows the analyst to browse to and open a saved schema file.
- **Save Schema:** Opens the Save As dialog box and allows the analyst to save changes in the currently open customer schema file.
- **Export Regions from Schema:** Opens the Save As dialog box and allows the analyst to export regions from a schema file into an XML file for use in Switching Orders or other purposes.
- **Open Customer Binary File:** Invokes the Open dialog box and allows the analyst to further review the compiled customer binary file (.bpcl) used in the ADMS system.
- **Compile Customer TSV File:** Compiles a customer binary file from a customer TSV file.

This option can be applied to compile customer files that contain special characters, as described in [Compiling a Customer File with Non-ASCII Characters](#).

- **Save Customer TSV File:** Click to save the customer binary file's data in the Tab-Separated Values (TSV) file.
- **Generate SQL Script from Customer Schema:** Invokes the Save SQL Script dialog box to create an SQL script that updates the CUSTOMER table with output fields from the schema file in the Archive database. You can then populate the CUSTOMER table with customer data using any appropriate methods.

Note

This option is obsolete. It is recommended to use the Customer Loader tool to load customer data in the Archive database. For more information, see [Using the Customer Loader Tool](#).

- **Exit:** Closes the application.

2.2. Conversion Tab

The Conversion tab provides controls to compile the customer input file; this tab shows the file

processing status and displays log records.

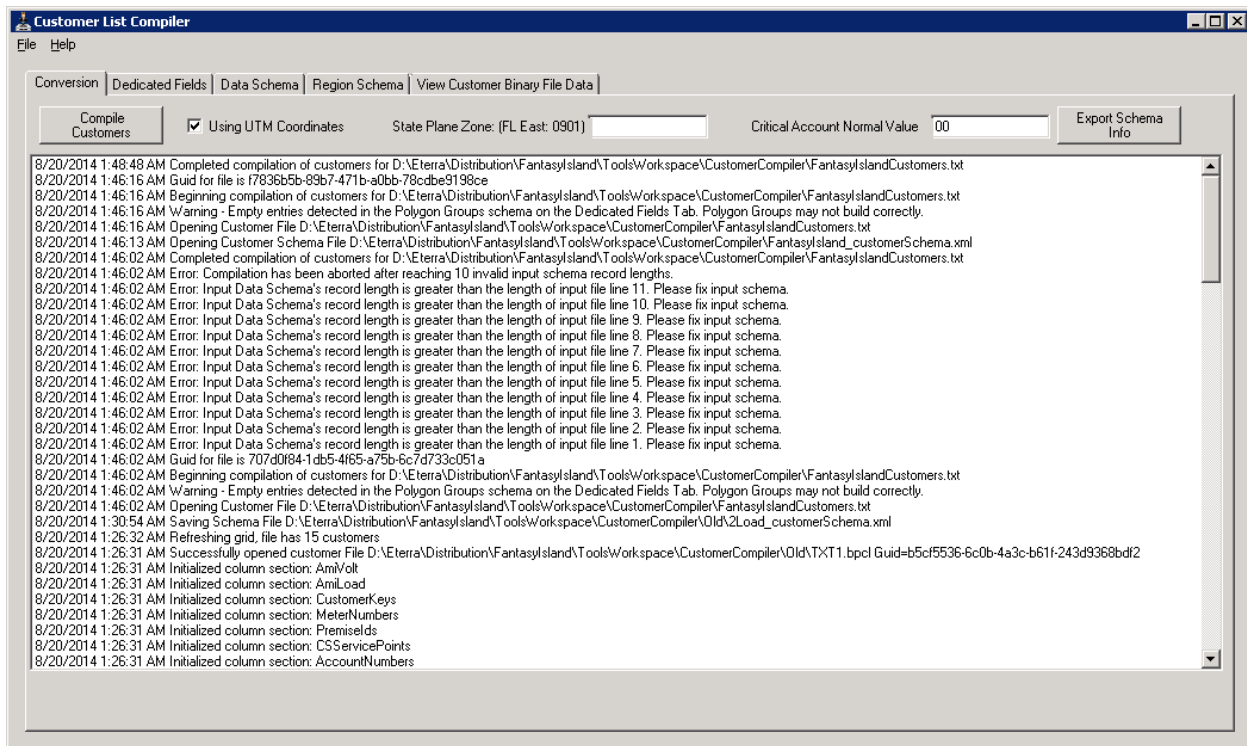


Figure 3. Conversion Tab

The Conversion tab contains the following fields and controls:

- **Compile Customers:** Click this button to be prompted for the location of the customers.txt file and to start the compilation process.
- **Using UTM Coordinates:** Set this check box to compile the customer list using the Universal Transverse Mercator (UTM) coordinate system.
- **State Plane Zone:** Enter a zone number to compile the customer list using the State Plane coordinate system.


To find a State Plane zone, navigate to <http://www.ngs.noaa.gov/TOOLS/spc.shtml>.

Note

Either UTM or State Plane coordinate system should be used to compile customer location data.

- **Critical Account Normal Value:** The Key value of the default critical account type. For example, if the default critical account type is Not Critical, enter the 00 value. The number of characters entered should equal the length of the field definition in the Dedicated Fields List in the schema.

Critical account types are defined by the CriticalType coded translation item. For more information, see the *Coded Translation Editor User Guide*.

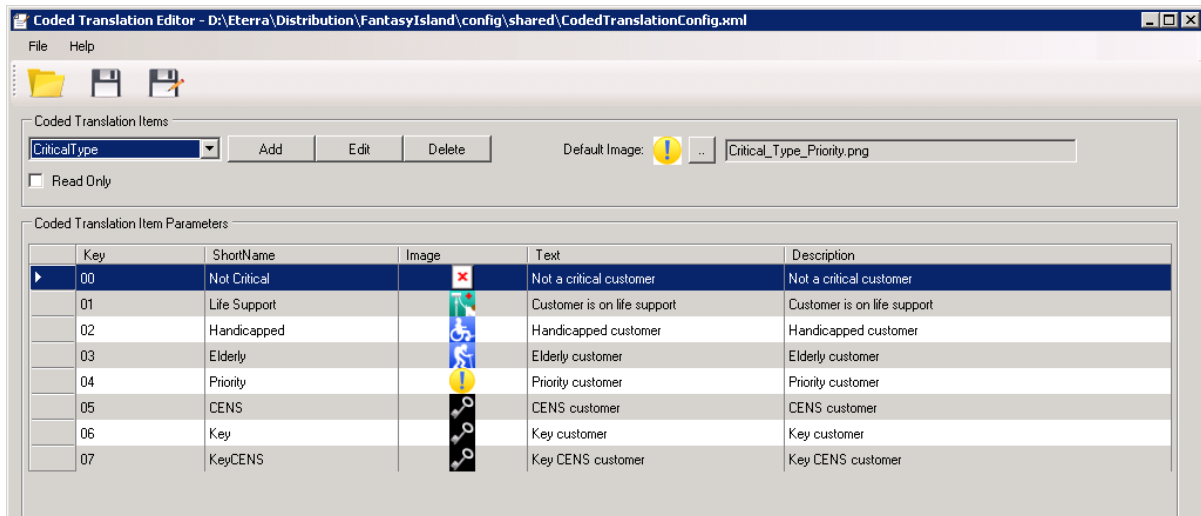

- **Circular layout:** Check this checkbox to compile the customer list, spreading customers sharing the same location in a circular layout, with the center at the location they currently share.
- **Distance to center:** Set a distance from 0.1 to 100, to use for spreading customers. The smaller the distance, the closer together the customers will be.
- **Export Schema Info:** Click this button to export information from a schema file into a text file for debugging purposes.
- **Create File with Small HAMT for backwards Compatibility:** Select this checkbox to create a customer file with a smaller Hashed Array Mapped Trie (HAMT), ensuring compatibility with older client, server, and interface applications. If not selected, a larger HAMT will be used by default.

2.3. Dedicated Fields Tab

The Dedicated Fields tab allows the analyst to configure aspects of the XML schema file.

The dedicated fields are mandatory in the schema. They are used by the client and server for specific purposes and must have the corresponding names in the customer model. For example, the ServicePoint field is used to map customer meters to the electrical network.

The schema file matches the required fields between the input and the output customer list files. The required fields are used by various ADMS applications, and their position, length, and flag values must be specified in the schema. If a given data value is not available in the input file, then 0 should be entered for both the Position and Length input fields. Because these data components are used programmatically by the server and client software, the analyst must ensure that appropriate data is being used for each item.

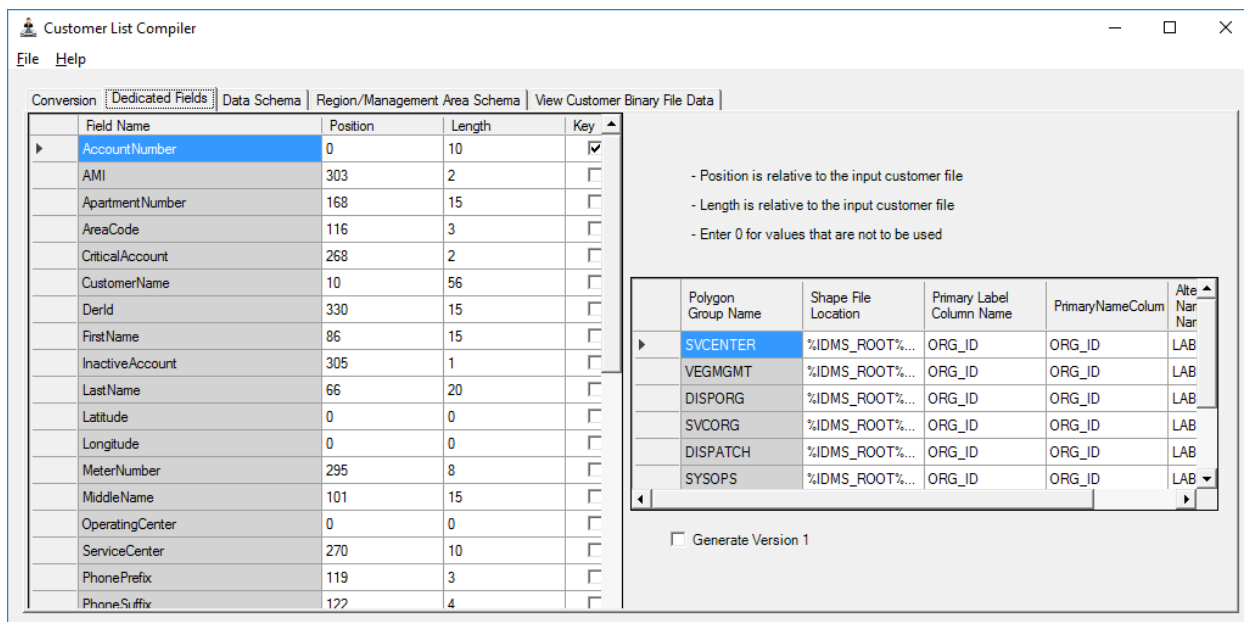


Figure 4. Dedicated Fields Tab

The Dedicated Fields tab's parameters include:

- **Field Name:** Required fields list (non-editable).
 - **AccountNumber:** The customer's account number. This is typically the billing ID or account number that shows up on the customer's statement.
 - **AMI:** Indicates whether a customer has an AMI meter or not. If not, AMI ping messages cannot be sent to customer meters.

The values in the customer input file can be:

- **0:** Customer is not AMI capable.
- **1:** Customer is AMI capable.
- **ApartmentNumber:** The customer's apartment number.
- **AreaCode:** The area code of the customer's phone number.
- **CriticalAccount:** The key of the customer's critical type 1.
- **CustomerName:** The customer's full name.
- **DerId:** The customer's associated DMS distributed energy resource (DER) record ID. Deprecated.
- **FirstName:** The customer's first name.
- **InactiveAccount:** A Boolean value indicating if the customer's account is inactive. If the customer's account is not used, set this field to 1. If it is used, set this field to 0.
- **LastName:** The customer's last name.
- **Latitude/Longitude:** The latitude/longitude coordinates of the customer's location (if applicable).

This field is used when the customer cannot provide X/Y coordinates. Note that the appropriate conversion system must be specified, either by selecting the Using UTM option or specifying the State Plane Zone value on the Conversion tab.

- **MeterNumber:** The customer's meter number.

Note that the customer's meter number must be unique for the Automated Metering Infrastructure (AMI) interface and match the associated meter number in the AMI system to support messages to and from the meter (for example, pinging or meter out).

- **MiddleName:** The customer's middle name.
- **OperatingCenter:** The name of the service center the customer belongs to. Used for backward compatibility with **e-terra***distribution* 3.7 and earlier. Use **ServiceCenter** instead.
- **ServiceCenter:** The name of the service center the customer belongs to. All valid customers must be associated with a service center.
- **PhonePrefix:** The customer's phone prefix.
- **PhoneSuffix:** The customer's phone suffix.
- **PhoneNumber:** The customer's phone number, including area code, phone prefix, and phone suffix.
- **ServicePoint:** The ID of the service point the customer belongs to. For example, SP_<Distribution Transformer ID>. This field is required to connect the customer model with the electrical model.
- **SpecialAccount:** Indicates if this is a special account (for example, police). When this option is selected, all calls from these customers appear on the 911 Calls tab in the Outage Management system. Deprecated.
- **StreetName:** The customer's street name.
- **StreetNumber:** The customer's street number.
- **StreetSuffix:** The customer's street suffix (St., Pl., Ave., and so on).
- **PremiseID:** The identification number of the customer's premises.
- **X/Y:** The customer's position on the X/Y coordinate system (this coordinate system must match that of the GIS extract).
- **LoadCategory:** The customer's load category (for example, Residential, Commercial).

The load category can be obtained from the customer file, station model file, or the `global.csv` file. If the load category is not available in the customer file or the station model file, the load category from the `global.csv` file is applied. This category in the CSV file is from either the default load category, if defined, or the first load category in the list. For primary meters, the load category from the customer file has priority over the load category from the station model file.

- **Zipcode:** The zip code from the customer's address.
- **AmiLoad:** A Boolean value to indicate that the customer's AMI meter supports load data reporting (0/1). If load data reporting is supported, set this field to 1; if it is not supported,

set to 0.

If not using the AMI interface with meter measurements, set the Position and Length of this field to 0.

- **AmiVolt:** A Boolean value to indicate that the customer's AMI meter supports voltage data and voltage exception reporting (0/1). If the voltage data and exception reporting is supported, set this field to 1; if it is not supported, set to 0.

If not using the AMI interface with meter measurements, set the Position and Length of this field to 0.

- **LoadID:** The customer's associated DMS load record ID.

Note

LoadID field is mandatory for correct AMI association.

- **ServiceDrop:** The customer's service drop. Deprecated.
- **HazardousCustomer:** A description about a hazardous condition on the customer's property (for example, vicious dog) for the safety of crews assigned to an associated incident. A customer is flagged as being hazardous if a hazardous description is provided. Hazardous customers have a different icon on the geographic network view.
- **CriticalAccount2:** The key of the customer's critical type 2.
- **CriticalAccount3:** The key of the customer's critical type 3.
- **CriticalAccount4:** The key of the customer's critical type 4.
- **CriticalAccount5:** The key of the customer's critical type 5.

For more information about customer model fields, refer to the *Customer Field Definition Mapping Tables* document.

- **Position:** A zero-based column index specifying where the first character of the given field value is found in the customer record.

The position is relative to the first character of the line.

Note

If Position and Length field values are set to -1, the tool does not import the specified data. Alternatively, you can set the Position and Length values to 0 for entries that are not applicable.

- **Length:** Length of the field value in characters

Note

If Position and Length field values are set to -1, the tool does not import the specified data. Alternatively, you can set the Position and Length values to 0 for entries that are not

applicable.

If an entry is not applicable, set the Position and Length values to 0.

- **Key:** Select this box to mark the field as a primary "Customer Key" used to uniquely identify a customer in the ADMS system.

The customer key is a concatenation of fields that are unique for the utility. For example, a customer with two meters for two buildings has a single account number, but the customer may have two meters with different premise IDs. Therefore, for some utilities two or more fields must be checked, and hence, combined to create a unique identifier.

The unique key can be reviewed in the CustomerKey column of the Column Sections data section on the View Customer Binary File Data tab.

Note

Customer keys are unique and serve as the primary key for all orders and incidents. Changing a customer key in a production environment is not recommended, as it may affect data consistency. If a change is required, perform it only in a system where no incidents or orders exist.

- **Squeeze Spaces:** Select this box to remove extra spaces in the field. If selected, more than one space between words in a string will be removed.

The Polygon section of this tab includes options for polygons that represent regions, organizations, or other geographically delimited areas:

- **Polygon Group Name:** The name of the polygon group to be built into the customer file. Polygon groups can be used to associate a device or a position on the map with a service center or work organization. The default polygon groups are as follows:
 - **SVCENTER:** Polygon groups for service centers.
 - **VEGMGMT:** Polygon groups for vegetation management organizations.
 - **DISPORG:** Polygon groups for dispatch organizations.
 - **SVORG:** Polygon groups for service organizations.
 - **DISPATCH:** Polygon groups for dispatch organizations.
 - **SYSOPS:** Polygon groups for system operations organizations.
 - **FOREST:** Polygon groups for vegetation and forestry management organizations.
 - **CM:** Polygon groups for service organizations.
 - **PWRQUAL:** Polygon groups for power quality management organizations.
- **Shape File Location:** Specifies the Path and file name for the respective shape file. For example, %IDMS_ROOT%\ToolsWorkspace\CustomerCompiler\FantasyIslandSvcCenters.shp.

Note

The following files from the shape file set must be present in the compiler's input directory: *.shp, *.dbf, and *.shx

- **Primary Label Column Name:** The respective column name in the shape file that points to the label of each polygon/feature in each row. For example, for service center shape files, this field contains an abbreviation of the service center (such as 3LIONSSC, WSTA, or NEAB).
- **Primary Name Column Name:** A column name in the shape file that points to the name of each polygon/feature in each row. For example, for service center shape files, this field contains a service center name (such as 3 Lions, West Alpha, or Northeast Bravo).
- **Alternate Name Column Name:** A column name in the shape file that points to the alternate name of each polygon/feature in each row. For example, for service center shape files, this field contains an alternate name of the service center, if it has one.

Under the Polygon section, the following option can be selected:

- **Generate Version 1:** When checked, the binary customer file is compiled in a pre-3.2 release format *.bpcl file. Select this option only if you need an old file format. The setting for this option is saved in the schema file.

2.4. Data Schema Tab

The Data Schema tab allows the analyst to configure the schema file. Besides mandatory Dedicated Fields data, the schema's data section can include any customer-related data. Some possibilities are:

- Marketing rep's name (for large commercial/industrial customers)
- Unpaid disconnect
- Property description (useful if someone has two meters and two accounts; for example, "house" and "shop")
- Customer load data

This data can be accessed via general-purpose queries on the Grid Tabular displays. The dedicated data values are used by ADMS applications such as the Call Entry application and the OMS Server, but it is possible for a custom application to query the customer file for any data included in the data section of the customer file.

The Average Load feature allows for calculating the average load for customers. Given the monthly power consumptions data (kWh1–kWh12) for each customer in the input file and schema, the feature calculates the average kW parameter (kW field in the output schema) for each customer. For more details, see [Modeling Load Using Customer Compiler](#).

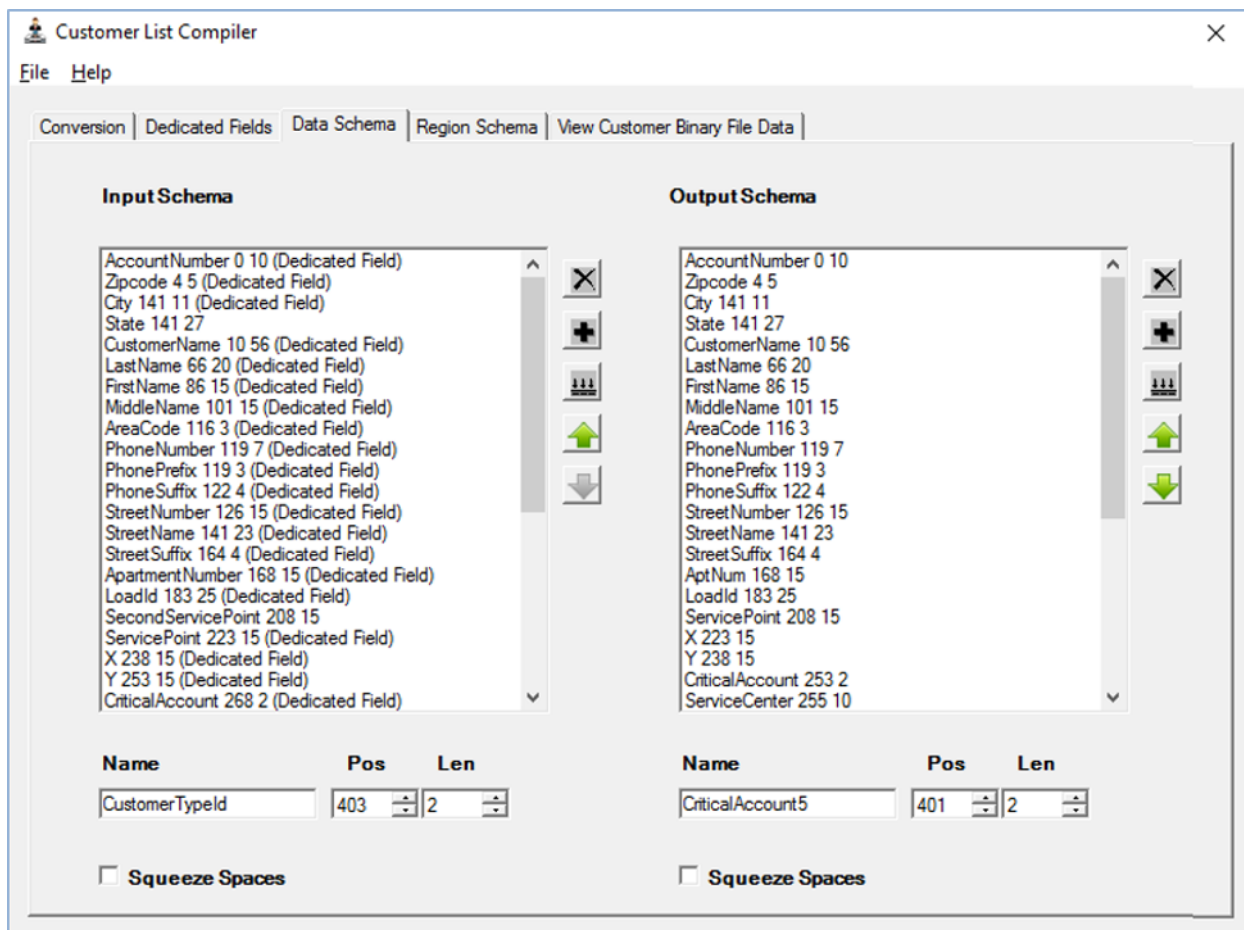


Figure 5. Data Schema Tab

The Data Schema tab's fields and controls include:

- **Input Schema:** Specifies the name, start position, and length for the data in the customer input .txt file.
- **Output Schema:** Specifies the name, position, and length for the data in the compiled customer file's data section.

To display a column in a table on the View Customer Binary File Data tab, the name must be the same in the input and output schemas.

- **Name:** Click on a parameter in the Input or Output Schema panels to display the parameter in the Name field for editing, or enter a new parameter.
- **Pos:** Edit or enter a zero-based column index specifying where the given field value is found in the customer record.
- **Len:** Enter or edit the length of the field value.
- **Squeeze Spaces:** Select this box to remove extra spaces in the field.
- **Delete Button:** Click to delete the selected record.
- **Add Button:** Click to copy and add the selected record, or add a new record entered in the

Name/Pos/Len fields.

-  **Update Button:** Update the selected record modified in the Name/Pos/Len fields.
-  **Up Button:** Move the selected record up the list.
-  **Down Button:** Move the selected record down the list.

Note

The dedicated fields in the Input Schema can be modified only on the Dedicated Fields tab.

2.5. Region Schema Tab

The Region Schema tab allows an analyst to create management areas hierarchical relationships within a company. You can customize the upper hierarchy levels (logical hierarchy group). By default, five levels of groupings are defined: Company, State, County, City, and Service Center.

The lower hierarchy levels (electrical hierarchy group), which include Station and Feeder, are defined for network devices in the Distribution Network Object Model (DNOM). These levels are excluded from the Region Schema because they are defined in the electrical model as part of the GIS extract and conversion. They cannot be customized by the user.

Currently a customer model supports only one company, which may include a number of child entries, such as cities. Each city may include a number of service centers (operating centers), which are logical and geographic groupings of customers.

Note

Service centers are modeled in DNOM and represent logical groupings of electrical devices. Service centers in the customer model usually cover the same areas as service centers in DNOM, thus their names and IDs must match.

Note

Service center IDs in the customer and crew models must match. For more information about the crew model, refer to the *OMS Crew Modeling User Guide*.

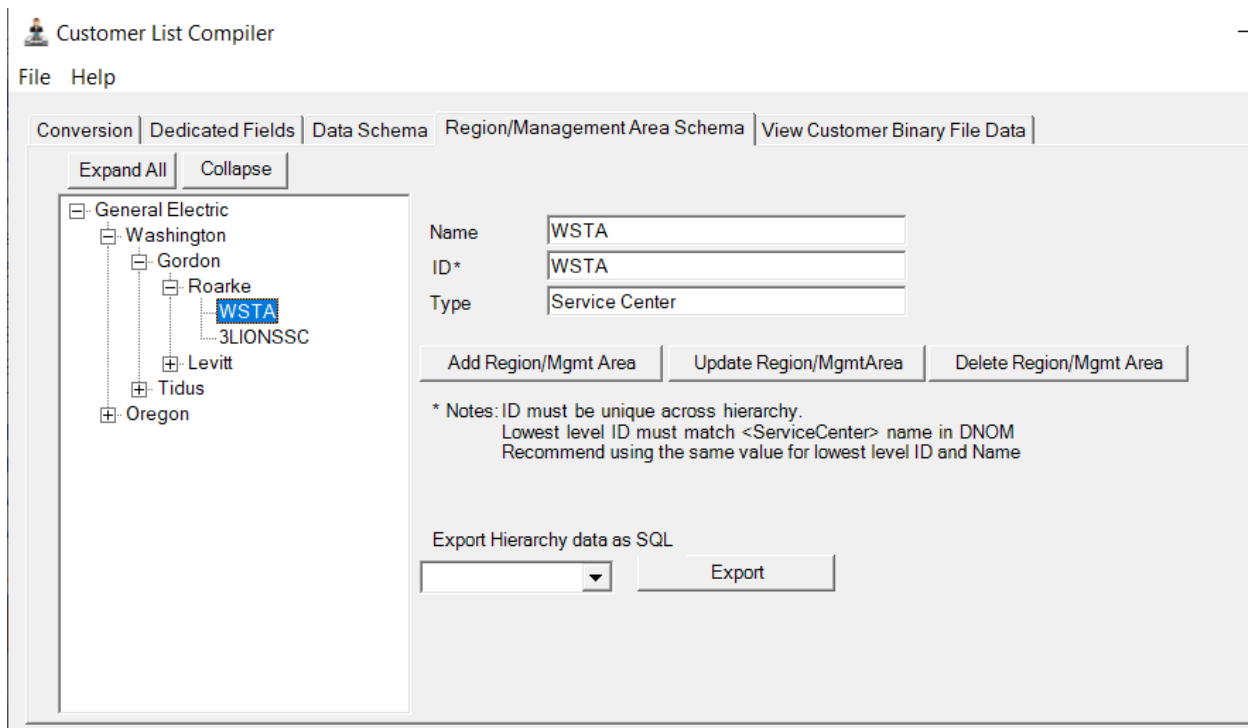


Figure 6. Region Schema Tab

The Region Schema Tab shows the available region schema and contains the following fields and controls:

- **Expand All:** Expands all fields of the region tree.
- **Collapse All:** Collapses all fields of the region tree.
- **Name:** Descriptive name of a region.
- **ID:** Short cryptic ID of a region (the ID is usually found in the customer input file).
- **Type:** Entry type (for example, company, state, county, city, service center).
- **Add Region/MgmtArea:** Adds a company or adds a child area to the selected group.
- **Update Region/MgmtArea:** Updates the selected hierarchy group.
- **Delete Region/MgmtArea:** Deletes the selected hierarchy group.
- **Export Hierarchy data as SQL:** Generates Oracle or Microsoft SQL scripts to load the management areas hierarchy from a schema file into the Archive database.

2.6. View Customer Binary File Data Tab

Using the View Customer Binary File Data tab, the analyst can examine and verify the content of the compiled binary customer file after a new customer input file has been processed.

The desired binary customer file can be accessed by clicking File > Open Customer Binary File.

Index	AMILOAD	AMIVOLT	LOADID	ACCOUNTN	PREMISEID	METERNUM	SERVICEPOI	DERID	HAZARDOUS	OPERATING	SERVICECE	CRI1
0	1	1	34749009R	555085551	55508555155	198231IK	SP_3474901			STHD	STHD	00
1	1	1	34749009R	555385202	55538520255	522867PQ	SP_3474901			STHD	STHD	00
2	1	1	34749009R	555125516	55512551655	307175QA	SP_3474901			STHD	STHD	00
3	1	1	34749009R	555007240	55500724055	549238Y	SP_3474901			STHD	STHD	00
4	1	1	34749009R	555040312	55504031255	491205LP	SP_3474901			STHD	STHD	00
5	1	1	34749009R	555295230	55529523055	5431140Q	SP_3474901		Hazardous cu	STHD	STHD	00
6	1	1	34749009R	555228995	55522899555	170410GS	SP_3474901			STHD	STHD	00
7	1	1	34749009R	555071198	55507119855	171009XQ	SP_3474779			STHD	STHD	00
8	1	1	11238382R	555090627	55509062755	519563EQ	SP_1123839			CTLC	CTLC	00
9	1	1	11238382R	555349751	55534975155	263837UV	SP_1123839			CTLC	CTLC	00
10	1	1	11238382R	555046014	55504601455	257427NT	SP_1123839			CTLC	CTLC	00
11	1	1	11238382R	555109170	55510917055	516501DD	SP_1123839			CTLC	CTLC	00
12	1	1	11238382R	555139551	55513955155	210687RQ	SP_1123839			CTLC	CTLC	00
13	1	1	11238382R	555270071	55527007155	179392DP	SP_1123839			CTLC	CTLC	00
14	1	1	11238382R	555292470	55529247055	447288AW	SP_1123839		Vicious dog r	CTLC	CTLC	00
15	1	1	11238382R	555000327	55500032755	496868VO	SP_1123839			CTLC	CTLC	00
16	1	1	11238382R	555114161	55511416155	192676KE	SP_1123839			CTLC	CTLC	00
17	1	1	11238382R	555116883	55511688355	414988QK	SP_1123839			CTLC	CTLC	00
18	1	1	11238382R	555271542	55527154255	385145CH	SP_1123839			CTLC	CTLC	00
19	1	1	11238382R	555113054	55511305455	494430NX	SP_1123839			CTLC	CTLC	00

Figure 7. View Customer Binary File Data Tab

The View Customer Binary File Data tab includes the following fields and controls:

- **Output Customer Fields:** Select a specific data section of the customer file.

The following data sections can be displayed:

- **Memory Section:** Contains geographic coordinates and customer account data fields that are loaded in the client's memory to draw customer symbols on the geographic network view.

Index	X	Y	INACTIVEAC	CRITICALAC	SPECIALAC	HAZARDOUS
0	956405.00	714795.00	0	0	0	0
1	956548.00	714841.00	0	0	0	0
2	956433.00	714684.00	0	0	0	0
3	956532.00	714676.00	0	0	0	0
4	956405.00	714810.00	0	0	0	0
5	956530.00	714816.00	0	0	0	1
6	956419.00	714669.00	0	0	0	0
7	956522.00	714713.00	0	0	0	0
8	941165.10	753718.50	0	0	0	0
9	941273.10	753760.30	0	0	0	0
10	941188.90	753883.40	0	0	0	0
11	941296.10	753887.90	0	0	0	0
12	941178.60	753755.80	0	0	0	0
13	941259.50	753767.10	0	0	0	0
14	941173.60	753869.90	0	0	0	1
15	941270.60	753898.10	0	0	0	0
16	941157.40	753749.00	0	0	0	0
17	941267.20	753729.80	0	0	0	0
18	941190.60	753860.80	0	0	0	0
19	941292.00	753880.00	0	0	0	0

- **All Fields:** Contains all customer data as specified by the input and output schemas on the

Data Schema tab.

Customer List Compiler

File Help

Conversion | Dedicated Fields | Data Schema | Region Schema | View Customer Binary File Data

Output Customer Fields All Fields Refresh Data Customer Start Index 0 Count 1000

	Index	AMILoad	AMIVolt	LoadID	AccountN	PremiseID	MeterNum	ServicePOI	DERID	HAZARDOUS	OPERATING	SEI
▶	0	1	1	34749009XR	555085551	55508555155	198231IK	SP_3474901			STHD	STH
	1	1	1	34749009XR	555385202	55538520255	522867PQ	SP_3474901			STHD	STH
	2	1	1	34749009XR	555125516	55512551655	307175QA	SP_3474901			STHD	STH
	3	1	1	34749009XR	555007240	55500724055	549238XY	SP_3474901			STHD	STH
	4	1	1	34749009XR	555040312	55504031255	491205LP	SP_3474901			STHD	STH
	5	1	1	34749009XR	555295230	55529523055	5431140Q	SP_3474901		Hazardous cu	STHD	STH
	6	1	1	34749009XR	555228995	55522899555	170410GS	SP_3474901			STHD	STH
	7	1	1	34749009XR	555071198	55507119855	171009XQ	SP_3474779			STHD	STH
	8	1	1	11238382XR	555090627	55509062755	519563EQ	SP_1123839			CTLC	CTL
	9	1	1	11238382XR	555349751	55534975155	263837UV	SP_1123839			CTLC	CTL
	10	1	1	11238382XR	555046014	55504601455	257427NT	SP_1123839			CTLC	CTL
	11	1	1	11238382XR	555109170	55510917055	516501DD	SP_1123839			CTLC	CTL
	12	1	1	11238382XR	555139551	55513955155	210687RQ	SP_1123839			CTLC	CTL
	13	1	1	11238382XR	555270071	55527007155	179392DP	SP_1123839			CTLC	CTL
	14	1	1	11238382XR	555292470	55529247055	447288AW	SP_1123839		Vicious dog r	CTLC	CTL
	15	1	1	11238382XR	555000327	55500032755	496868VO	SP_1123839			CTLC	CTL
	16	1	1	11238382XR	555114161	55511416155	192676KE	SP_1123839			CTLC	CTL
	17	1	1	11238382XR	555116883	55511688355	414988QK	SP_1123839			CTLC	CTL
	18	1	1	11238382XR	555271542	55527154255	385145CH	SP_1123839			CTLC	CTL

- **Column Section:** Contains fields that need to be read in to create a dictionary. (For example, there is a dictionary of service points to service point index, and customer keys to customer index.)

Customer List Compiler


File Help

Conversion | Dedicated Fields | Data Schema | Region Schema | View Customer Binary File Data


Output Customer Fields Column Sections Refresh Data Customer Start Index 0 Count 1000

	Index	AccountNum	MeterNumber	ServicePoint	PremiseID	CustomerKey	LoadID	AmiLoad	AmiVolt	DerID	HazardousCu
▶	0	555085551	198231IK	SP_3474901	55508555155	55508555155	34749009XR	1	1		
	1	555385202	522867PQ	SP_3474901	55538520255	55538520255	34749009XR	1	1		
	2	555125516	307175QA	SP_3474901	55512551655	55512551655	34749009XR	1	1		
	3	555007240	549238XY	SP_3474901	55500724055	55500724055	34749009XR	1	1		
	4	555040312	491205LP	SP_3474901	55504031255	55504031255	34749009XR	1	1		
	5	555295230	5431140Q	SP_3474901	55529523055	55529523055	34749009XR	1	1		Hazardous cu
	6	555228995	170410GS	SP_3474901	55522899555	55522899555	34749009XR	1	1		
	7	555071198	171009XQ	SP_3474779	55507119855	55507119855	34749009XR	1	1		
	8	555090627	519563EQ	SP_1123839	55509062755	55509062755	11238382XR	1	1		
	9	555349751	263837UV	SP_1123839	55534975155	55534975155	11238382XR	1	1		
	10	555046014	257427NT	SP_1123839	55504601455	55504601455	11238382XR	1	1		
	11	555109170	516501DD	SP_1123839	55510917055	55510917055	11238382XR	1	1		
	12	555139551	210687RQ	SP_1123839	55513955155	55513955155	11238382XR	1	1		
	13	555270071	179392DP	SP_1123839	55527007155	55527007155	11238382XR	1	1		
	14	555292470	447288AW	SP_1123839	55529247055	55529247055	11238382XR	1	1		Vicious dog r
	15	555000327	496868VO	SP_1123839	55500032755	55500032755	11238382XR	1	1		
	16	555114161	192676KE	SP_1123839	55511416155	55511416155	11238382XR	1	1		
	17	555116883	414988QK	SP_1123839	55511688355	55511688355	11238382XR	1	1		
	18	555271542	385145CH	SP_1123839	55527154255	55527154255	11238382XR	1	1		

- **DOTS Section:** Contains random call and AMI likelihood outage probability factors for the Distribution Operator Training Simulator (DOTS). These values are used instead of run-time random values to make repeatable scripts with a customer file. The random values are between 0 and 1.

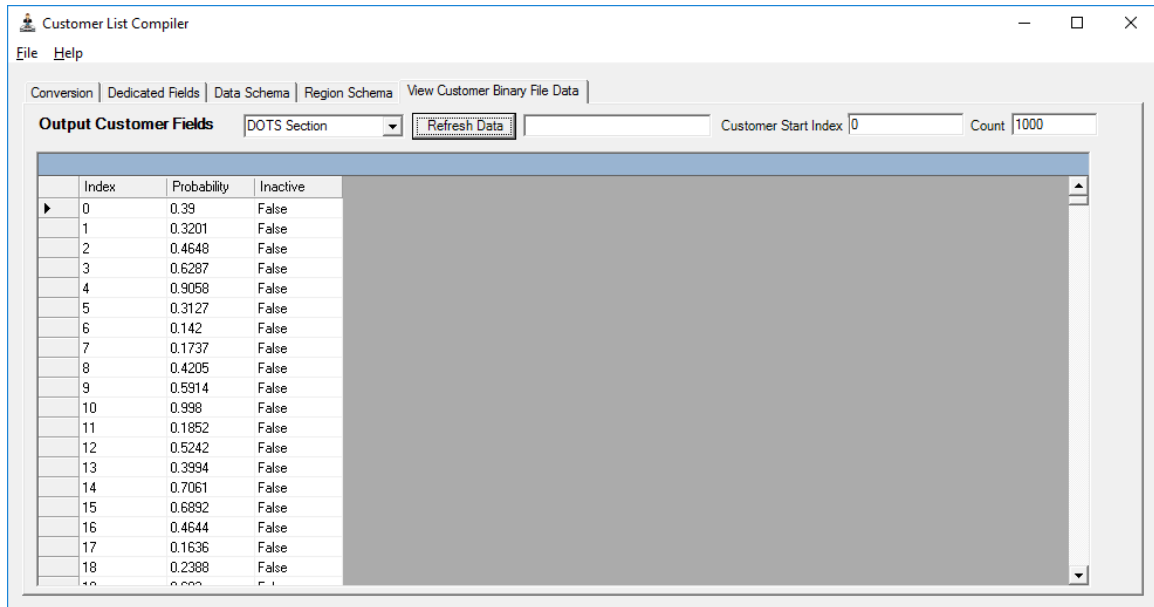

- **<Polygon_Group_Name>**: Shows polygons for defined polygon groups.

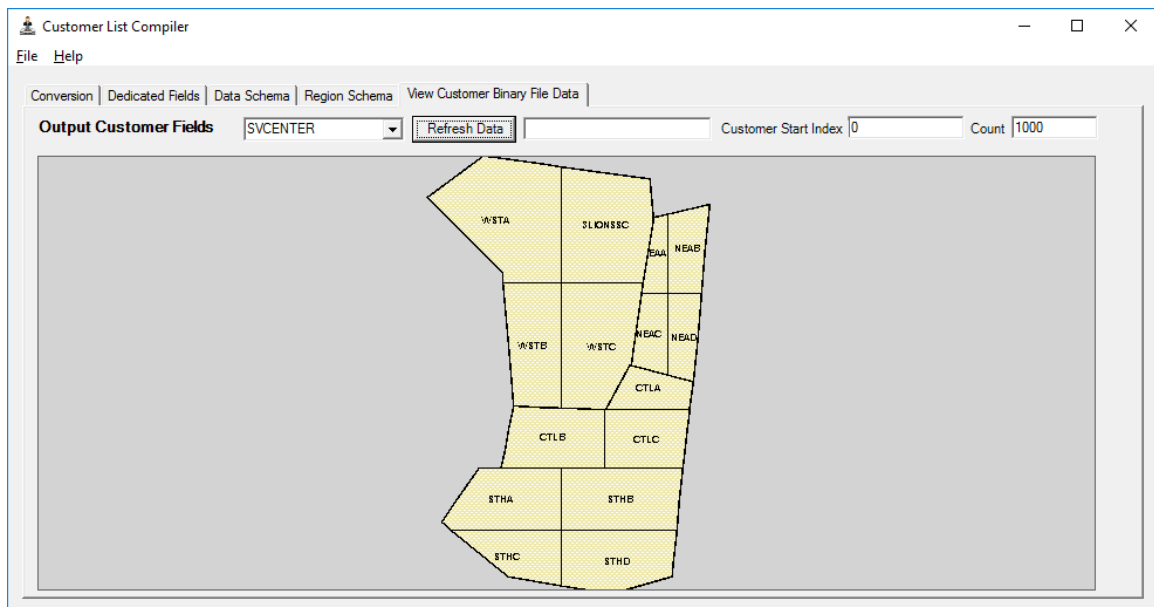

- **Refresh Data**: Enter a query into the text field and click Refresh to display the results.

For example, enter "FirstName=Paul and LastName=Druhan" and click Refresh to search for and display all matches with those values.

The screenshot shows the 'Customer List Compiler' application window. It has a menu bar with 'File' and 'Help'. Below the menu bar are several tabs: 'Conversion', 'Dedicated Fields', 'Data Schema', 'Region Schema', and 'View Customer Binary File Data'. The 'Data Schema' tab is active. Below the tabs, there is a section titled 'Output Customer Fields' with a dropdown menu set to 'All Fields', a 'Refresh Data' button, a search filter 'FIRSTNAME=Paul AND LASTNAME=Druhan', and a 'Customer Start Index' set to 0. Below this is a table with 11 columns: 'ACTIVEAC', 'SPECIALAC', 'CUSTOMER', 'LASTNAME', 'FIRSTNAME', 'MIDDLENAM', 'AREACODE', 'PHONENUM', 'PHONEPREF', 'PHONESUFF', and 'STREETNUM'. The table contains 8 rows of data for customers named 'Druhan Paul'.

ACTIVEAC	SPECIALAC	CUSTOMER	LASTNAME	FIRSTNAME	MIDDLENAM	AREACODE	PHONENUM	PHONEPREF	PHONESUFF	STREETNUM
0		Druhan Paul	Druhan	Paul	G	555	5915940	591	5940	9245
0		Druhan Paul	Druhan	Paul	K	555	5910068	591	0068	9471
0		Druhan Paul	Druhan	Paul	L	555	5606059	560	6059	7579
0		Druhan Paul	Druhan	Paul	B	555	5803688	580	3688	9470
0		Druhan Paul	Druhan	Paul	S	555	5908015	590	8015	9441
0		Druhan Paul	Druhan	Paul	R	555	5865587	586	5587	9348
0		Druhan Paul	Druhan	Paul	S	555	5761511	576	1511	7478
0		Druhan Paul	Druhan	Paul	K	555	5804412	580	4412	9411

- **Customer Start Index:** Start index of the customer data range to display.
- **Count:** Number of customer records to display starting from the Customer Start Index.

2.7. Search Tab (Flexible Search)

Use the Search tab to perform a flexible search.

Flexible Search improves customer data searches, increasing efficiency and accuracy compared to the previous method.

The previous customer search assumed that imported customer files included fields such as First Name, Middle Name, Last Name, Street Number, Street Address and Street Name in "Dedicated Fields".

Flexible Search instead uses Customer Name and Address dedicated fields. Names and addresses are assumed to be words separated by one or more spaces, in any order.

Flexible Search supports single-line entry for searching customers and can be tested in the Customer List Compiler. Searches are also supported by Meter Number, Customer Key, Account Number, Service Center, Service Point and Phone Number.

To use Flexible search, the Customer Schema must include "Address" and "CustomerName" as dedicated fields. If the customer file updated into the Customer List Compiler does not contain these fields, warning messages appear in the Customer List Compiler log window.

Testing Flexible Search

- Add and configure the Address field in the Dedicated Fields tab of the Customer List Compiler, if it is not already configured. The CustomerName field is included by default. The SqueezeBlanks setting can be applied to a dedicated field to handle data with extra spaces.
- Compile the customer file. The Customer List Compiler creates additional search trees based on the Address and CustomerName fields. If the Address field length or position is set to 0, search results may not be accurate.

- Open the compiled customer binary file in the Customer List Compiler and go to the Search tab.

Note

The search starts after three characters are entered. Results are ranked by relevance, and the list of potential customers is displayed in order of the number of matches to name and address words.

Customer List Compiler

File Tools Help

Conversion | Dedicated Fields | Data Schema | Region/Management Area Schema | View Customer Binary File Data | Search

boardman lucy oak

Score	Name	Address	Phone Num...	Account Number	Meter Number	Service Point	Match
5.4	Boardman Lucy D	9419 OAK SE	5679198	555146499	485671XE	SP_34457827	NAME1=BOARDMAN NAME2=LUCY ADDR2=OAK
4.9	Boardman Lucy R	9399 ELM SE 104	5687580	555009973	3508500P	SP_33434442	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy M	8058 MOUNTAIN W	5801893	555242076	280194WV	SP_17027731	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy G	7820 RIVER PL	5612109	555191372	488974XL	SP_19821261	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy X	7215 MILL N	5717672	555226335	340760YX	SP_34649406	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy K	9415 POPLAR CT 1...	5602204	555222196	403496LN	SP_32795177	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy G	7178 VALLEY NE 104	5729360	555130774	152660FK	SP_32843836	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy G	7185 RIVER PL	5777619	555103069	498351QX	SP_34530493	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy K	9482 ELM SW	5594374	555377073	296067JK	SP_155022907	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy E	7343 MILL NW	5765196	555346010	163806CN	SP_13581153	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy Q	9581 POPLAR E	5592747	555341337	365084HS	SP_19230028	NAME1=BOARDMAN NAME2=LUCY
4.9	Boardman Lucy M	7143 VALLEY RD	5720361	555260516	425812NP	SP_33419456	NAME1=BOARDMAN NAME2=LUCY
3.5	Boardman Russ F	9397 OAK PKWY	5954234	555033436	291468HM	SP_8981500	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Ross W	9547 OAK S	5728964	555147656	187467ZE	SP_34449041	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Rick S	9132 OAK ST	5726587	555234711	430600FT	SP_16566869	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Jim T	9572 OAK E	5870061	555309355	317367FT	SP_10687552	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Chrissie	9343 OAK CT 152	5722084	555371631	544225LM	SP_8519221	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Jeff J	9336 OAK CT 105	5631658	555204054	351095JX	SP_18376925	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Victor X	9470 OAK CT	5873266	555011676	408660PR	SP_13519003	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Aaron M	9374 OAK ST	5681852	555386976	260949MF	SP_11600915	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Nathaniel	9417 OAK CT	5589541	555216282	470267JL	SP_18931065	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Tracey P	9640 OAK S 125	5906102	555322015	550502UX	SP_9308806	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Ben A	9210 OAK ST	5925902	555131330	500402VQ	SP_9518146	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman David Y	9391 OAK E	5773941	555375983	410392HK	SP_158865356	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Bill H	9433 OAK LN	5915771	555133368	315300GL	SP_12299539	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Kenneth Y	9569 OAK ST	5777604	555260566	403572IH	SP_34437843	NAME1=BOARDMAN ADDR2=OAK
3.5	Boardman Heath Q	9386 OAK LN	5844773	555038398	538389WS	SP_15633421	NAME1=BOARDMAN ADDR2=OAK

Figure 8. Search tab window

2.8. Customer File Configuration Warnings

The current version of the Customer List Compiler detects whether a customer file is compatible with Flexible Search. If the file is not compatible, warning messages describe the steps required to configure it correctly.

If the warnings are ignored, Flexible Search is not activated. The previous search method remains available, but results may vary.

Case I : The customer binary file is not compatible with Flexible Search because it does not contain FlexFields. This occurs when the file has not been recompiled with the current version of the Customer List Compiler.

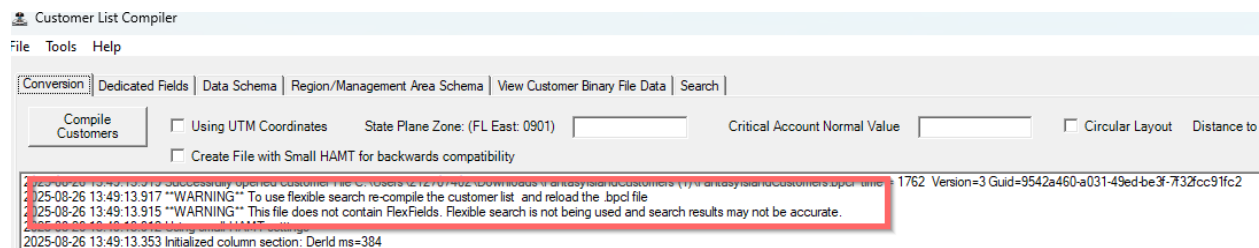


Figure 9. Warnings Case I

To solve this warning, recompile the customer file with the current version of the Customer List Compiler. After recompilation, open the generated file. A message confirms that the file is now using Flexible Search.

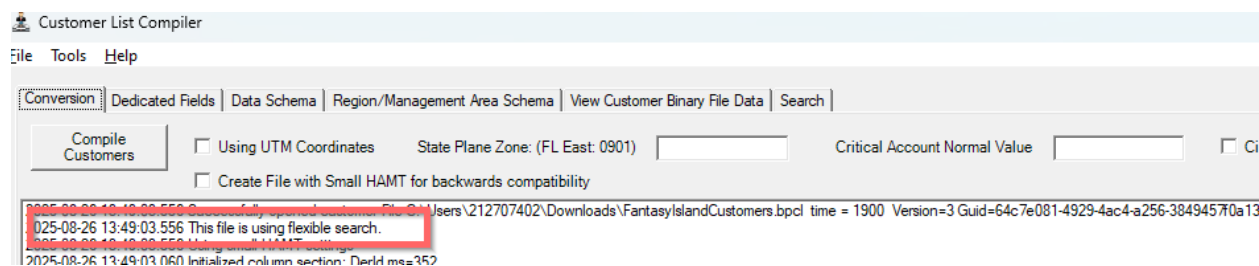


Figure 10. Using Flexible Search correctly message

Case II: The current file does not contain a dedicated field called ADDRESS, which is required to compile the Flexible Search fields correctly.

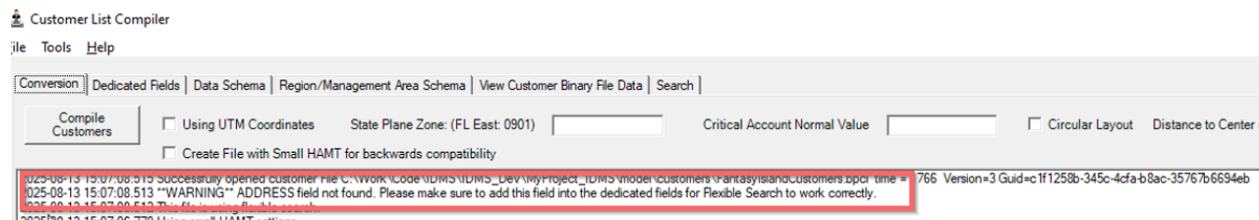


Figure 11. Warnings Case I

To Solve this warning, add the ADDRESS field to the Dedicated Fields in the customer schema and recompile the file.

After recompilation, open the generated file in the Customer List Compiler. A message confirms that the file is now using Flexible Search.

3. Using the Customer List Compiler

This chapter describes how to operate the Customer List Compiler application.

3.1. Starting the Customer List Compiler Tool

You can access the Customer List Compiler application using the following path: Programs > Eterra > Distribution > Tools > Modeling Tools.

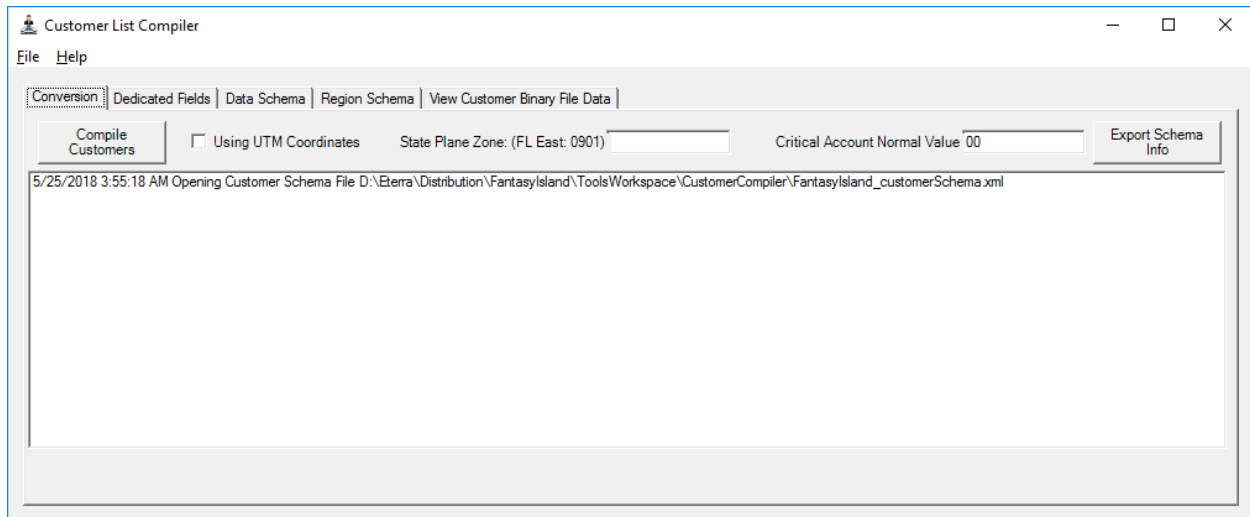


Figure 12. Customer List Compiler Tool

3.2. Creating a New Schema File

To create a schema file:

1. Click File > New to open a blank schema.
2. Navigate to the Dedicated Schema tab of the Customer List Compiler tool.

All the fields in the tab have a "-1" data value.

Conversion	Dedicated Fields	Data Schema	Region Schema	View Customer Binary File
	Field Name	Position	Length	
►	AccountNumber	-1	-1	
	AMI	-1	-1	
	ApartmentNumber	-1	-1	
	AreaCode	-1	-1	
	CriticalAccount	-1	-1	
	CustomerName	-1	-1	

3. Specify the position and length parameters for each of the required fields, as described in [Editing the Dedicated Fields Parameters](#).
4. Navigate to the Data Schema tab.
5. Add the mandatory fields from the Dedicated Fields tab and other desired customer data, in the order it appears in the input customer .txt file, to the Input Schema panel.
6. Add the matching fields to the Output Schema fields, in the order they appear in the output binary file.
7. Follow the instructions provided in [Editing the Data Schema Parameters](#).
8. Navigate to the Region Schema tab.
9. Add regions, as described in [Editing the Region/Management Area Schema Parameters](#).
10. Click File > Save Schema.

The Save As dialog box appears.

11. Enter the new schema name (*_customerSchema.xml) and browse to the desired schema location.

By default, the schema file is stored in the %IDMS_ROOT%\ToolsWorkspace\CustomerCompiler folder.

12. Click the Save button.

3.3. Uploading an Existing Schema

The schema file allows the Customer List Compiler to interpret the customer information in the input file. The schema file must be uploaded at compile time, or prepared by the analyst using the Dedicated Fields tab and Data Schema tab, as described in [Creating a New Schema File](#).

To upload an existing schema file:

1. Click Start > Programs > Eterra > Distribution > Tools > Modeling Tools and start the Customer List Compiler application.
2. Click File > Open Schema.

The Open dialog box opens.

3. Navigate to the schema location.

By default, the schema file is located at %IDMS_ROOT%\ToolsWorkspace\CustomerCompiler.

4. Select the desired schema file (*_customerSchema.xml) to use for the compilation.
5. Click the Open button.

Performed actions are logged on the Conversion tab. The Dedicated Fields tab, the Data Schema tab, and the Region Schema tab are populated with data from the uploaded schema file.

3.4. Editing the Schema

The analyst can edit the existing schema parameters by following the steps described in the sections below.

3.4.1. Editing the Dedicated Fields Parameters

To edit the Dedicated Fields tab's parameters:

1. Open a schema file.
2. Navigate to the Dedicated Fields tab of the Customer List Compiler tool.
3. Note the following parameters in the input customer file for each dedicated field, and edit if needed in the Dedicated Fields tab:
 - **Position:** A zero-based column index specifying where the given field value is found in the customer record
 - **Length:** Length of the field value

Note

If a dedicated field data value is not available in the input file, enter 0 for both input fields.

4. Click File > Save Schema.

3.4.2. Editing the Data Schema Parameters

The Data Schema file allows the analyst to configure the schema file. Besides mandatory dedicated fields data, the schema's additional data section can include any customer-related data.

Note

The Input Schema's dedicated fields can be modified only on the Dedicated Fields tab.

To edit the input schema parameters of the Data Schema tab:

1. Open a schema file.
2. Navigate to the Data Schema tab of the Customer List Compiler tool.
3. To display the parameter in the Name field for editing, click on a parameter in the Input Schema panel.
4. In the Name field, modify the name of the item in accordance with the data provided in the input .txt file.
5. In the Pos field, modify a zero-based column index specifying where the given field value is found in the customer record.

6. In the Len field, modify the length of the field value.
7. To update the selected record modified in the Name/Pos/Len fields, click the Update button .

The selected record in the Input Schema panel is updated with the changes.

8. Save the changes via the File > Save Schema menu.

To edit the output schema parameters of the Data Schema tab:

1. To display the parameter in the Name field for editing, click on an item in the Output Schema panel.
2. In the Name field below the Output Schema panel, modify the name of the item.
3. In the Pos field, modify a zero-based column index specifying where the given field value is found in the compiled customer file.
4. In the Len field, modify the length of the field value.
5. To update the selected record modified in the Name/Pos/Len fields, click the Update button .

The selected record in the Output Schema panel is updated with the changes.

6. Save the changes via the File > Save Schema menu.

3.4.2.1. Adding New Items to the Data Schema Tab

The schema's data section can include any customer-related data to be used by the ADMS application for general queries.

1. Open the schema file.
2. In the Name field below the Input Schema panel, enter the name of the item in accordance with the data provided in the input .txt file.
3. In the Pos field, modify a zero-based column index specifying where the given field value is found in the customer record.
4. In the Len field, modify the length of the field value.
5. To add the new record entered in the Name/Pos/Len fields, click the Add button .

The new record appears in the Input Schema panel.

6. Repeat the steps above to create a new matching record in the Output Schema tab, and enter the Pos/Len parameters with regards to where the record appears in the compiled binary customer file.

MeterNumber 295 8 (Dedicated Field)
 AMI 303 2 (Dedicated Field)
 AmiVolt 327 1 (Dedicated Field)
 AmiLoad 329 1 (Dedicated Field)
 InactiveAccount 305 1 (Dedicated Field)
 SpecialAccount 325 1 (Dedicated Field)
 Address 126 57 True
 DerId 330 15 (Dedicated Field)
 NEW_RECORD 345 6

Name	Pos	Len
NEW_RECORD	345	6

☒ Squeeze Spaces

7. Click File > Save Schema to save the changes.

3.4.2.2. Copying an Item on the Data Schema Tab

To copy an item:

1. Click on an item in the Input Schema or Output Schema panels.
2. To copy and add the selected record, click the Add button .

The duplicate of the selected record appears at the bottom of the list.

InactiveAccount 305 1 (Dedicated Field)
 SpecialAccount 325 1 (Dedicated Field)
 Address 126 57 True
 DerId 330 15 (Dedicated Field)
 NEW_RECORD 345 6
 NEW_RECORD 345 6 True

Name	Pos	Len
NEW_RECORD	345	6

3. Select the duplicate record, and edit as described in [Editing the Data Schema Parameters](#).
4. Click File > Save Schema.

3.4.2.3. Deleting an Item on the Data Schema Tab

To delete an item:

1. Click on an item in the Input Schema or Output Schema panels.
2. To delete the selected record, click the Delete button .

The record is now deleted.

3. Click File > Save Schema.

3.4.3. Editing the Region/Management Area Schema Parameters

Use the Region/Management Area Schema tab to add, modify, or delete the company and child areas.

The maximum level of the hierarchy is 10. Element IDs must be unique.

Caution

There is an 8-character limitation in the PERMIT ID schema; therefore, the hierarchy area group ID must not exceed 8 characters.

3.4.3.1. Managing the Company

Only one company can exist on the Region Schema tab.

To add a company:

1. Remove the existing company, if any.
2. Enter a descriptive name for the company in the Name field.
3. Enter a short identifier in the ID field.
4. Add an entry type in the Type field.
5. Click Add.

To modify a company:

1. Select a company from the region tree.
2. Update the Name, ID, and Type fields as needed.
3. Click Update.

To delete a company:

- Select a company from the region tree and then click Delete.

Note

When deleting a company, all belonging hierarchy entries (for example, cities and service centers) are deleted. To keep hierarchy entries, you can modify the company data using the Update option.

3.4.3.2. Managing Child Areas

To add a child area, such as a city or service center:

1. Select a parent area.
2. Enter a descriptive name for the child in the Name field.
3. Enter a short identifier in the ID field.
4. Add a type in the Type field.
5. Click Add.

To modify a child area:

1. Select an area from the region tree.
2. Update the Name, ID, and Type fields as needed.
3. Click Update.

To delete a child area:

- Select an area from the region tree and then click Delete.

Note

When you delete an area, all child areas belonging to this area are deleted.

3.4.4. Configuring Customer Model Encryption

Note

The customer model encryption requires an encryption key to be defined in the system. For more information, refer to the *ADMS Installation Guide*.

The schema file also specifies whether the Customer List Compiler creates an encrypted customer model file.

The encryption parameters are as follows:

- **EncryptionMode:** Specifies whether the Customer List Compiler creates encrypted customer models. Possible values are None, Encrypted, and Both.
 - **None:** If set to None (or the <EncryptionMode> parameter is not defined), the tool does not encrypt model files. (Customer files are created with the usual ".bpcl" suffix.)
 - **Encrypted:** Specifies that the tool encrypts model files. (Customer files are created with the usual ".bpcl" suffix.)
 - **Both:** Specifies that the tool produces both encrypted and unencrypted customer models (the ".bpcl" file is created for the encrypted model, and the ".bpcl.unencrypted" file is created for the not encrypted model). This mode can be used for testing and during

migration phases.

- **EncryptionKeyScope:** Encryption key scope.
- **EncryptionKeyVersion:** Encryption key version.
- **EncryptionKeyStorageType:** Encryption key storage type.
- **EncryptionKeyStorageAddInfo:** Encryption key description.


To enable the customer model file encryption:

1. Open the schema file in a text editor.
2. Add encryption parameters to the schema.

Complete the parameters according to the key to be used for the encryption. For example:

```
<EncryptionMode>Encrypted</EncryptionMode>
<EncryptionKeyScope>KADMS</EncryptionKeyScope>
<EncryptionKeyVersion>1</EncryptionKeyVersion>
<EncryptionKeyStorageType>Default</EncryptionKeyStorageType>
<EncryptionKeyStorageAddInfo> </EncryptionKeyStorageAddInfo>
```

3. Save the schema.
4. Open the schema in the Customer List Compiler.
5. Check that the message log shows encryption information and does not contain errors.

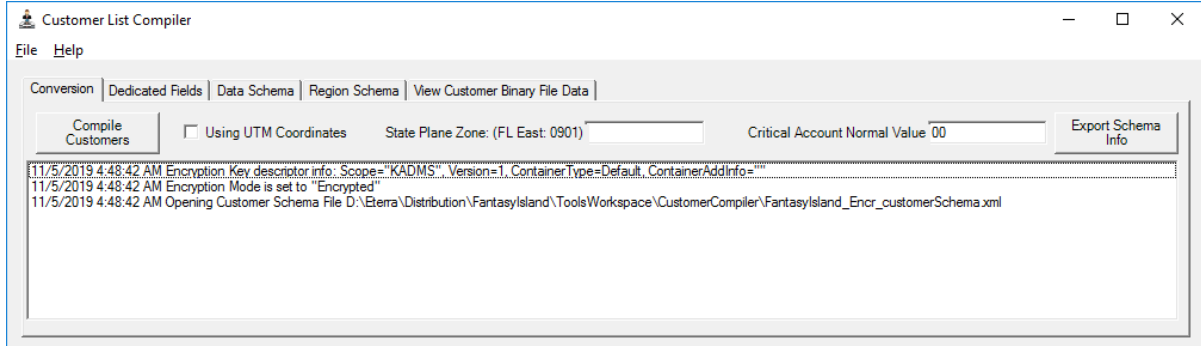

i Note

To use encrypted files, the same encryption key must be defined for users that encrypt files and for users that run applications which use the encrypted files.

3.5. Compiling a Customer File

To compile a customer file:

1. Click Start > Programs > Eterra > Distribution > Tools > Modeling Tools, and start the Customer List Compiler application.

2. Click File > Open Schema, and navigate to the customer schema XML file.

The default location of the file is the %IDMS_ROOT%\ToolsWorkspace\CustomerCompiler folder.

3. Edit the schema file if needed, as described in [Editing the Schema](#).
4. If needed, on the Conversion tab, select the State Plane Zone or UTM Coordinate System to be used in the output binary file, as described in [Conversion Tab](#).
5. Click the Compile Customers button.

The Open dialog box appears.

6. Browse to the location of the input customer .txt file and click Open.

The progress bar appears on the bottom of the Conversion tab showing the current status and progress of the compilation process.

All actions are recorded in the log messages on the Conversion tab.

Once the compilation finishes successfully, the completed message appears on the Conversion tab.

The output binary customer file (.bpcl) is generated. The default output location is:
%IDMS_ROOT%\ToolsWorkspace\CustomerCompiler.

3.6. Compiling a Customer TSV File

Customer Tab-Separated Value (TSV) files are created by saving the binary file's data using the Save Customer TSV file option.

To compile a customer TSV file:

1. Click Start > Programs > Eterra > Distribution > Tools > Modeling Tools and start the Customer List Compiler application.
2. Click File > Schema.

The Open dialog box opens.

3. Navigate to the schema location, and open the schema file that has been updated as described above.
4. Click File > Compile Customer TSV File.
5. Navigate to the customer file that has been updated as described above, and click Open.

The intermediate file is generated. The Column Mapping pop-up window appears.



6. Edit the fields in the Column Mapping pop-up to map the input customer file column names to the fields in the data section of the schema, and then click OK.

The Compiler process the data and creates a *.bpcl file.

7. Open the *.bpcl file and verify the data as described in [View Customer Binary File Data Tab](#).

3.7. Compiling a Customer File with Non-ASCII Characters

By default, customer files are saved with the ANSI encoding. The ANSI encoding recognizes only ASCII characters (characters that are found on a standard English keyboard) that need one byte to

encode. The columns contain the specified number of characters (i.e., bytes) and are separated by spaces.

The problem occurs when entering non-ASCII characters (for example, Latin, Cyrillic, or Chinese) that need two and more bytes to encode. In this case, the existing structure corrupts, as the data are shifted and do not match the columns. As a result, an incorrect binary file is compiled.

To correctly enter non-ASCII characters and compile the customer file, perform the following steps.

1. Click File > Save Customer TSV to save the customer file in the Tab-Separated Value (TSV) format.
2. Open the created customer TSV file with Notepad++.

The first row includes column names delimited by tabs. The data rows include customer data delimited by tabs.

3. From the Encoding menu, change the file encoding to UTF-8.

UTF-8 encoding correctly displays non-ASCII characters.

4. Enter data with non-ASCII characters.
5. Save the file.
6. Open a schema file.
7. Increase field lengths of columns with special characters.

The schema field length is no longer the number of characters, but the number of bytes. The length represents how many bytes the field contains in UTF-8 encoding.

8. Compile the customer file as described in [Compiling a Customer TSV File](#).

3.8. Reviewing the Results

Once the output binary customer file is generated, the analyst can review the results.

1. Navigate to the View Customer Binary File Data tab.
 2. Click File > Open Customer Binary File.
- The Open dialog box appears.
3. Browse to the location of the output file.
 4. Select the .bpcl file and click Open.
 5. On the View Customer Binary File Data tab, click Refresh Data.

The tab is populated with the data from the compiled file.

6. To switch to another output fields view, select the desired view in the Output Customer Fields list, and click Refresh Data.

The list is re-populated with the selected customer field data.

7. Filter the area of the customer record to display via the Customer Start Index and Count.

For example, to view a string of the customer's account data with the count of 200 characters from the column position index of 800, enter 800 in the Customer Start Index and 200 in the Count field, and click the Refresh Data button. The tab now displays 200 records from the position of 800 in the output customer file to the position 999.

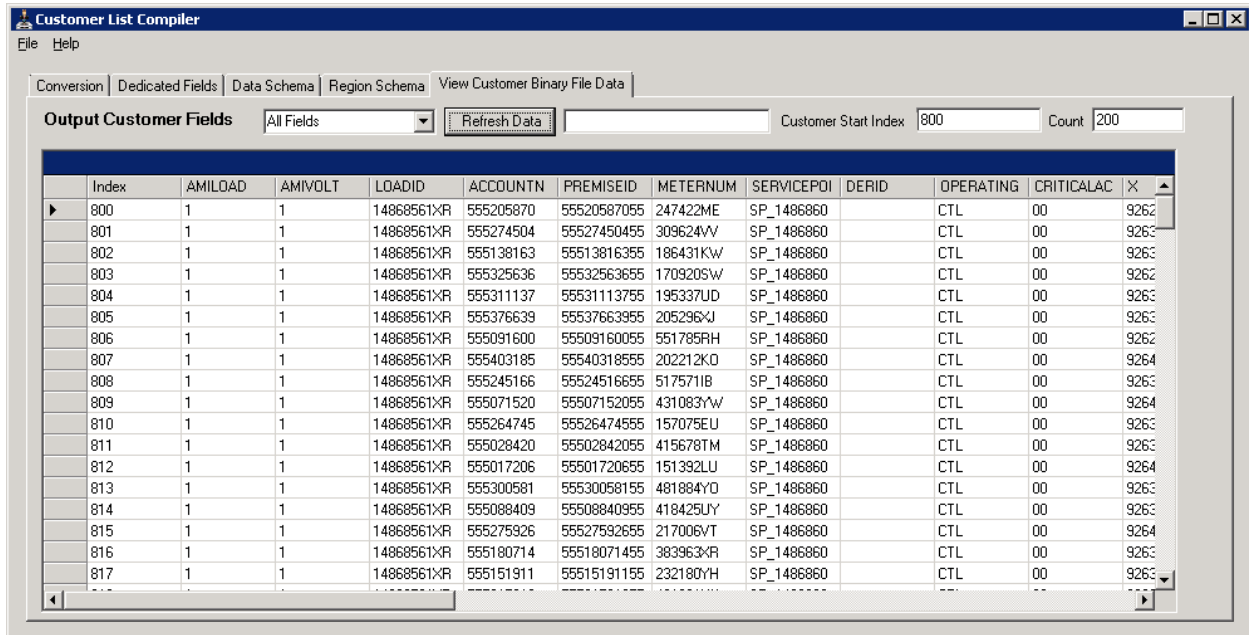


Figure 13. Filtering a Range of Customer Records

3.9. Performing Command-Line Operations

The Customer List Compiler provides a command-line interface so that compiling customer information can be incorporated into "build" scripts as part of the model management process.

The Customer List Compiler supports the following command-line arguments:

-CONVERT

Indicates that the program is running in a command-line background without the user interface.

-SCHEMA "schema file path"

Specifies the location and name of the customer schema file to use. This argument is required when running the program from the command line.

-INPUT "customer input data file path"

Specifies the path to the customer input data.

-OUTPUT "customer output data file path" or "output SQL script file path"

Specifies the path to the customer output data or the path to the output SQL script for creating the CUSTOMER table.

-GENERATESQLTABLE


Generates an SQL script for creating the CUSTOMER table with dedicated fields from the schema file in the Archive database.

-DBMS

Specifies the relational database management system (MSSQL or ORCL) for which to create an SQL script for creating the CUSTOMER table.

-HELP

Shows descriptions of available command-line arguments.

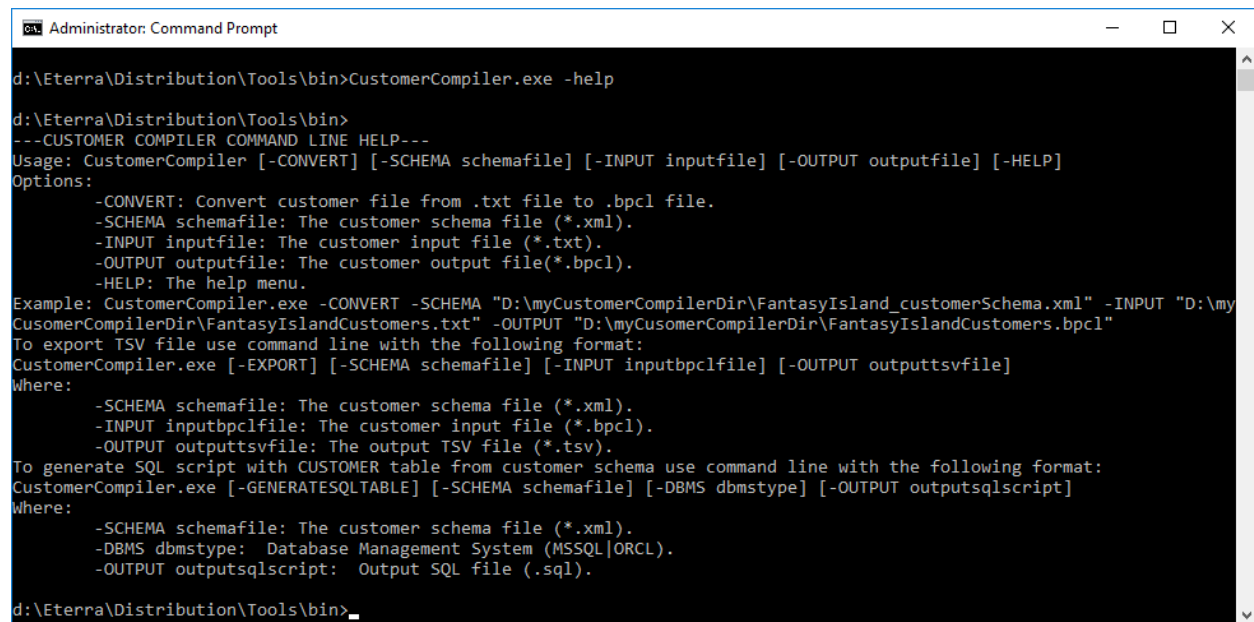

```
Administrator: Command Prompt
d:\Eterra\Distribution\Tools\bin>CustomerCompiler.exe -help

d:\Eterra\Distribution\Tools\bin>
---CUSTOMER COMPILER COMMAND LINE HELP---
Usage: CustomerCompiler [-CONVERT] [-SCHEMA schemafilename] [-INPUT inputfile] [-OUTPUT outputfile] [-HELP]
Options:
  -CONVERT: Convert customer file from .txt file to .bpcl file.
  -SCHEMA schemafilename: The customer schema file (*.xml).
  -INPUT inputfile: The customer input file (*.txt).
  -OUTPUT outputfile: The customer output file(*.bpcl).
  -HELP: The help menu.
Example: CustomerCompiler.exe -CONVERT -SCHEMA "D:\myCustomerCompilerDir\FantasyIsland_customerSchema.xml" -INPUT "D:\myCustomerCompilerDir\FantasyIslandCustomers.txt" -OUTPUT "D:\myCustomerCompilerDir\FantasyIslandCustomers.bpcl"
To export TSV file use command line with the following format:
CustomerCompiler.exe [-EXPORT] [-SCHEMA schemafilename] [-INPUT inputbpclfile] [-OUTPUT outputtsvfile]
Where:
  -SCHEMA schemafilename: The customer schema file (*.xml).
  -INPUT inputbpclfile: The customer input file (*.bpcl).
  -OUTPUT outputtsvfile: The output TSV file (*.tsv).
To generate SQL script with CUSTOMER table from customer schema use command line with the following format:
CustomerCompiler.exe [-GENERATESQLTABLE] [-SCHEMA schemafilename] [-DBMS dbmstype] [-OUTPUT outputsqlscript]
Where:
  -SCHEMA schemafilename: The customer schema file (*.xml).
  -DBMS dbmstype: Database Management System (MSSQL|ORCL).
  -OUTPUT outputsqlscript: Output SQL file (.sql).

d:\Eterra\Distribution\Tools\bin>
```

To compile customer data from the command prompt:

1. Open the Windows command prompt.
2. At the command prompt, start the Customer List Compiler with the following arguments:

```
-CONVERT -SCHEMA <specify the schema file> -INPUT <specify the customer input data file> -OUTPUT
<specify customer output data file>
```

For example:

```
CustomerCompiler -convert -schema
"%idms_root%\ToolsWorkspace\CustomerCompiler\FantasyIsland_customerSchema.xml" -input
"%idms_root%\ToolsWorkspace\CustomerCompiler\FantasyIslandCustomers.txt" -output
"%idms_root%\ToolsWorkspace\CustomerCompiler\FantasyIslandCustomers.bpcl"
```

To generate an SQL script for creating the CUSTOMER table in the Archive database from the command prompt:

1. Open the Windows command prompt.
2. At the command prompt, start the Customer List Compiler with the following arguments:

```
-GENERATESQLTABLE -SCHEMA <specify the schema file> -DBMS <specify the database type, MSSQL or ORCL> -OUTPUT <specify the output SQL file>
```

For example:

```
CustomerCompiler -GENERATESQLTABLE -SCHEMA  
"%idms_root%\ToolsWorkspace\CustomerCompiler\FantasyIsland_customerSchema.xml" -DBMS MSSQL -OUTPUT  
"%idms_root%\ToolsWorkspace\CustomerCompiler\MSSQL_CUSTOMER.sql"
```

3.10. Modeling Load Using Customer Compiler

The Customer Compiler provides an option to calculate the average customer load that can be inserted at service points. In addition, the Customer Compiler can calculate average monthly power consumption.

To calculate average load and power consumption:

1. Prepare a customer input file (.txt) with columns for monthly power consumption data (kWh1-kWh12). Note the lengths and positions of the monthly consumption fields.
2. Open the Customer List Compiler application.
3. Open a schema file.
4. Navigate to the Data Schema tab.
5. Add fields for monthly power consumption (KWH1-KWH12) to the input schema. Enter the positions and lengths of the monthly consumption fields according to their location in the customer input file.

The names of the fields for monthly power consumption must be exactly "KWHX" (all uppercase).

6. Add a field for the average load (KW) to the output schema.

The name of the field for the average load must be exactly "KW" (all uppercase). The field must be added at the last position of the output schema, which would be the Field Start + Field Length of the last field in the output schema. The field length must be set to zero.

7. Add a field for the average power consumption (AverageKWH) to the output schema.

Customer List Compiler

File Help

Conversion | **Dedicated Fields** | Data Schema | Region Schema | View Customer Binary File Data

Input Schema

- SpecialAccount 325 1 (Dedicated Field)
- AmiVolt 327 1 (Dedicated Field)
- AmiLoad 329 1 (Dedicated Field)
- DerId 330 15 (Dedicated Field)
- HazardousCustomer 345 50 (Dedicated Field)
- CriticalAccount2 395 2 (Dedicated Field)
- CriticalAccount3 397 2 (Dedicated Field)
- CriticalAccount4 399 2 (Dedicated Field)
- CriticalAccount5 401 2 (Dedicated Field)
- CustomerTypeId 403 2
- KWH1 406 9
- KWH2 416 9
- KWH3 426 9
- KWH4 436 9
- KWH5 446 9
- KWH6 456 9
- KWH7 466 9
- KWH8 476 9
- KWH9 486 9
- KWH10 496 9
- KWH11 506 9
- KWH12 516 9

Name	Pos	Len
KWH12	516	9

☐ Squeeze Spaces

Output Schema

- ServicePoint 223 15
- X 238 15
- Y 253 15
- CriticalAccount 268 2
- ServiceCenter 270 10
- OrgLevel2 280 10
- Feeder 290 5
- MeterNumber 295 8
- AMI 303 2
- InactiveAccount 305 1
- SpecialAccount 325 1
- AmiVolt 327 1
- AmiLoad 329 1
- DerId 330 15
- HazardousCustomer 345 50
- CriticalAccount2 395 2
- CriticalAccount3 397 2
- CriticalAccount4 399 2
- CriticalAccount5 401 2
- CustomerTypeId 403 2
- KW 405 0
- AverageKWH 405 0**

Name	Pos	Len
AverageKWH	405	0

☐ Squeeze Spaces

Note

The name of the field for the average load must be exactly "AverageKWH" (all uppercase). The field must be added at the last position of the output schema, which would be the Field Start + Field Length of the last field in the output schema. The field length must be set to zero.

- Click File > Save Schema to save the changes.
- Navigate to the Conversion tab and click Compile Customers.
- Select the customer input file and click Open.

The output binary customer file (.bpcl) is generated.

To review the average load and power consumption:

- Click File > Open Customer Binary File and select the generated customer file.
- Navigate to the View Customer Binary File Data tab.
- Select the All Fields option from the Output Customer Fields list and click Refresh.

The KW and AVERAGEKWH columns are populated with the average load and the average monthly power consumption.

Customer List Compiler

File Help

Conversion | Dedicated Fields | Data Schema | Region Schema | View Customer Binary File Data

Output Customer Fields: All Fields Refresh Data Customer Start Index: 0 Count: 1000

ARTMENTNUM	SECONDSERVICE	ORGLLEVEL2	FEEDER	AMI	CUSTOMERTYPE	KW	AVERAGEKWH	COMPANYID
	SP_34749018	WIDGEON	F3540	1	00	1.666666666666...	1200	GE
	SP_34749018	WIDGEON	F3540	1	03	1.805555555555...	1300	GE
	SP_34749018	WIDGEON	F3540	1	02	1.944444444444...	1400	GE
	SP_34749018	WIDGEON	F3540	1	04	1.527777777777...	1100	GE
	SP_34749018	WIDGEON	F3540	1	02	1.388888888888...	1000	GE
	SP_34749018	WIDGEON	F3540	1	01	1.25	900	GE
	SP_34749018	WIDGEON	F3540	1	00	1.111111111111...	800	GE
	SP_34749018	WIDGEON	F3540	1	00	0.972222222222...	700	GE
	SP_11238391	AARON	F5467	1	00	0.833333333333...	600	GE
	SP_11238391	AARON	F5467	1	00	0.694444444444...	500	GE
	SP_11238391	AARON	F5467	1	00	1.180555555555...	850	GE
	SP_11238391	AARON	F5467	1	00	1.319444444444...	950	GE
	SP_11238391	AARON	F5467	1	00	0.347222222222...	250	GE
	SP_11238391	AARON	F5467	1	00	0.416666666666...	300	GE
	SP_11238391	AARON	F5467	1	00	0.277777777777...	200	GE
	SP_11238391	AARON	F5467	1	00	0.694444444444...	500	GE

Customer Compiler computes the average load (KW) as follows:

1. Calculates the total consumption (Total kWh) by summing up all the kWhs.
2. Calculates the total number of days (Total Days) by multiplying the number of non-zero months by 30, where 30 is the number of days in a month.
3. Calculates the average load (kW). $\text{kW} = \frac{\text{Total kWh}}{\text{Total Days} \times 24}$, where 24 is the number of hours in a day.

Customer Compiler computes the average monthly power consumption (AverageKWh) as follows:

1. Calculates the total consumption (Total kWh) by summing up all the kWhs.
2. Calculates the average power consumption (AverageKWh). $\text{AverageKWh} = \frac{\text{Total kWh}}{\text{Number of non-zero months}}$.

The Load calculations can be further adjusted using the Converter tool as follows:

Load Evaluation Parameters

Load Evaluation Multiplier: 0.0036 ☐ Evaluate Load from Power

Load Evaluation Constant: 0.5851 ☒ Evaluate Load from Energy

- If the Customer Compiler was used to calculate Average Load (kW), select "Evaluate Load from Power".

When this option is selected, the Converter uses load values from the customer file.

- If the Customer Compiler was used to calculate Average Consumption (AverageKWh), select "Evaluate Load from Energy".

When this option is selected, the Converter calculates loads as follows:

- The AverageKWh value is multiplied by the "Load Evaluation Multiplier". "Load Evaluation Constant" is then added to the resulting value to get the final average load (kW) value.

The calculated values are inserted into the available phases across the relevant load.

For more information about the Converter, refer to the *ADMS Modeling Overview and Converter User Guide*.

4. Using the Customer Merge Tool

This chapter describes how to operate the Customer Merge tool. This tool is a console application for updating the input customer list file (*.txt). The Customer Merge tool helps minimize the time and disk space needed for processing the customer list, particularly since many customer records do not change.

The Customer Merge tool automates the process of merging incremental customer updates into the customer list. The tool can process multiple incremental update files that were created since the last customer list file update. Each incremental update file can contain multiple records to be used for creating, updating, or deleting records in the customer list.

For example, you need to regularly (for example, monthly) perform a full update of an input customer list file. For this purpose, you may frequently (for example, daily) prepare incremental update files with any customer updates since the last update. Then you can run the Customer Merge tool to merge all incremental updates into the previous input customer list file.

4.1. Running the Customer Merge Tool

To run the Customer Merge tool, at the command prompt, enter a command with the following syntax:

```
<Directory Path>CustomerMergeTool.exe /InputFile <CustomerData.txt> /SchemaFile  
<CustomerData_customerSchema.xml> [/OutputPath <directory or file path>]
```

For example:

```
D:\eterra\Distribution\Tools\bin>CustomerMergeTool.exe /InputFile  
"%IDMS_ROOT%\ToolsWorkspace\CustomerCompiler\FantasyIslandCustomers.txt" /SchemaFile  
"%IDMS_ROOT%\ToolsWorkspace\CustomerCompiler\FantasyIsland_customerSchema.xml"
```

The following arguments are included in this command:

- **/InputFile:** Path to the full customer data file.

For example:

```
"%IDMS_ROOT%\ToolsWorkspace\CustomerCompiler\FantasyIslandCustomers.txt"
```

Note that:

- The input file directory is searched for one or more incremental customer files (<CustomerData>_YYYY_MM_DD_HHMM.txt).
- Incremental customer files must follow the DateTime naming convention (<CustomerData>_YYYY_MM_DD_HHMM.txt).
- Each customer entry in an incremental customer file must be prefixed with a CUD character

that defines the merge operation type ("C" for create, "U" for update, and "D" for delete) and a space character.

For example, "C 555085551 ..." for creating a record for a customer with account number 555085551.

- Incremental customer files must follow the input the customer schema (the CUD prefixes are not considered in entry length calculations).
- The Customer Merge tool identifies unique customers by customer key.
- **/SchemaFile:** Path to the customer schema file. This is assumed to have key(s) defined at <ColumnSchemas><Name>CustomerKeys</Name>.

For example:

```
"%IDMS_ROOT%\ToolsWorkspace\CustomerCompiler\FantasyIsland_customerSchema.xml"
```

- **/OutputPath:** This argument is used to create an output file with a name and path that you define explicitly. This parameter is optional and can be a directory path or a file path.

If this argument is not used, the output file is placed in the same directory as the input file and has the file name <InputFileName>_Merged.txt.

For example:

```
"%IDMS_ROOT%\ToolsWorkspace\CustomerCompiler\MergedFiles\FantasyIslandCustomers_Merged.txt"
```

- **/ForceOutput:** This argument is optional. If used, it forces this program to create an output file even if no incremental files are found in the input folder.
- **-Help:** Provides descriptions of available command-line arguments.

4.2. Preparing Files for the Customer Merge Tool

To prepare files for the Customer Merge tool, place the following files in the input folder:

- Original customer file (*.txt) (for example, FantasyIslandCustomers.txt).
- Original customer schema file (*.xml) (for example, FantasyIsland_customerSchema.xml).
- Incremental customer update files (for example, FantasyIslandCustomers_2014_08_18_0908.txt and FantasyIslandCustomers_2014_08_25_1120.txt).

Ensure that incremental customer update files meet the following requirements:

- Use the file name format: <Original Customer File Name>_YYYY_MM_DD_HHMM.txt.
- Each record in a file must be prefixed with a CUD character that defines the merge operation type (C create, U update, D delete) and a space.
- Each record in a file must follow the input the customer schema (the CUD prefixes are not considered in field length calculations).

Warning

Ensure that unrelated files do not appear in the input folder.

4.3. Updating Customer Information

To update customer information in the original customer file:

1. Place a copy of the incremental customer files, the schema file, and the original customer file in the input folder.
2. Start the command prompt with administrator privileges.
3. Access the directory that contains CustomerMergeTool.exe.
4. Run the tool as described in [Running the Customer Merge Tool](#).
5. After the command is executed, a new merged file with a name similar to the following is created: *<Original Customer File Name>_merged.txt*.

The original customer data is updated with the incremental data into the new file.

Note

Adding new customer data and updating and deleting the original data in the same incremental file is supported.

4.4. Automating the Customer File Merge Process

You can use the Model Manager Application's support for invoking scripts to automate the customer file merge, build, and compile process.

For an example script that shows how to merge and compile a customer file, check your Tools kit at %IDMS_ROOT%\ToolsWorkspace\ModelManagerFolders\Scripts.

4.5. Pushing a New Customer File

You can dynamically push a new customer file, without restarting servers and clients, to the path specified by the OMS Customer File Name parameter in Net Dynamics Configuration Editor. For more details, refer to the *Net Dynamics Configuration Editor User Guide*.

5. Using the Customer Loader Tool

Use the Customer Loader tool to load or update customer data from a customer model file in the CUSTOMER table in the Archive database.

Note

In Oracle, when archiving customer data, you might need to enlarge the data and index tablespaces in the Archive database. For more information, refer to the *ADMS Relational Database Installation Guide*.

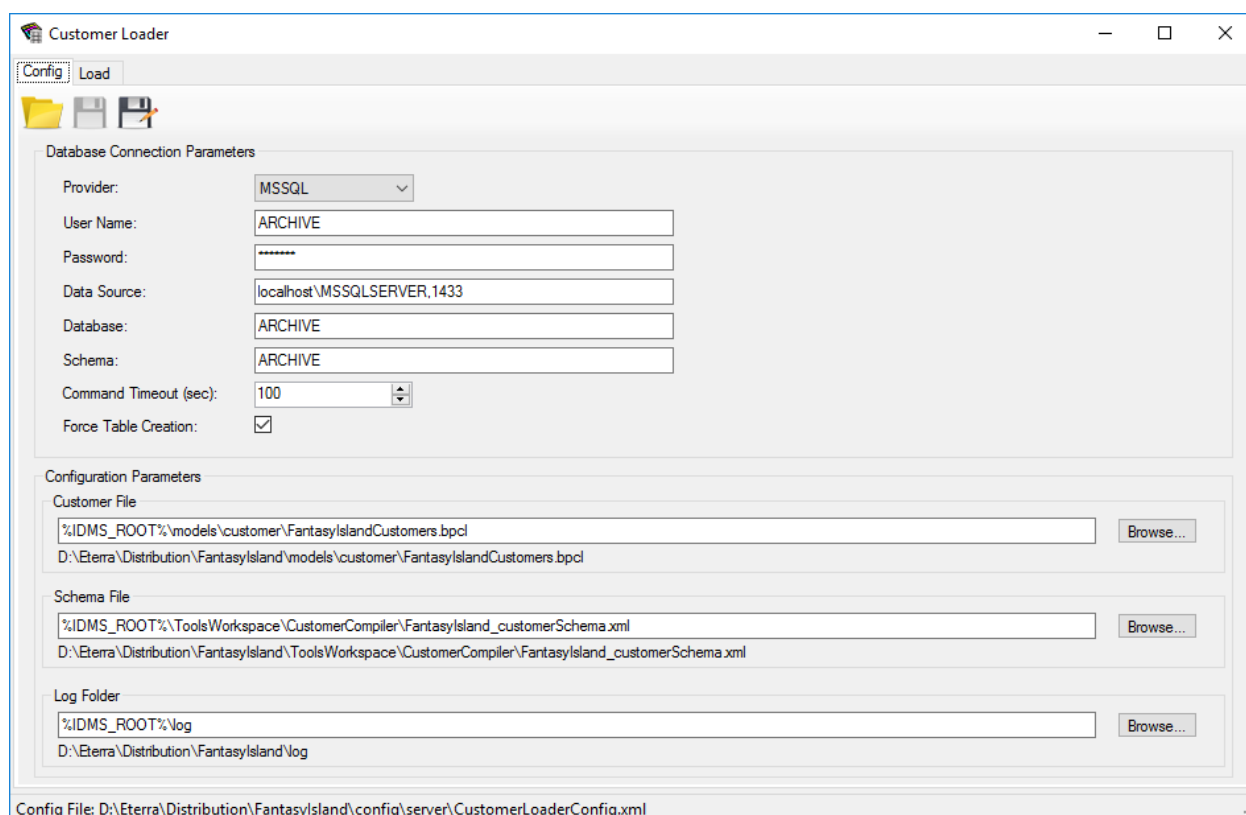


Figure 14. Customer Loader

5.1. Loading Customer Data

To load customer data into the Archive database:

1. From the Windows Start menu, navigate to All Programs > Eterra > Distribution > Server > Customer Loader.

The Customer Loader tool opens.

2. Configure the Database Connection Parameters:

- Choose a provider from the drop-down list, either Oracle or MSSQL.

- Enter the database user name and password in the User Name and Password text boxes.
- Enter the data source. This text defines the database service name used to access the database.

For SQL Server, the format is host\<SQL_Server_Instance_Name>,port.

For Oracle, the format is host:port/<Database_Service_Name>.

- Enter the database name (for MSSQL only).
- Enter the database schema name (for MSSQL only).
- Enter the timeout for loading customer data in the database. The load process cancels after this time period expires.
- Specify whether the Customer Loader tool needs to update the CUSTOMER table in the Archive database. (Use this option if the customer file schema has changed.)


Note

The _old customer file needs to be copied manually to the standby systems or configured in FileUpdater to move from Enabled to Standby.

3. Configure the Configuration Parameters:

- Specify the path to the compiled customer file (*.bpcl).
- Specify the path to the customer schema file.
- Specify the path to the folder where the Customer Loader log will be written.

4. On the Load tab, click Load.

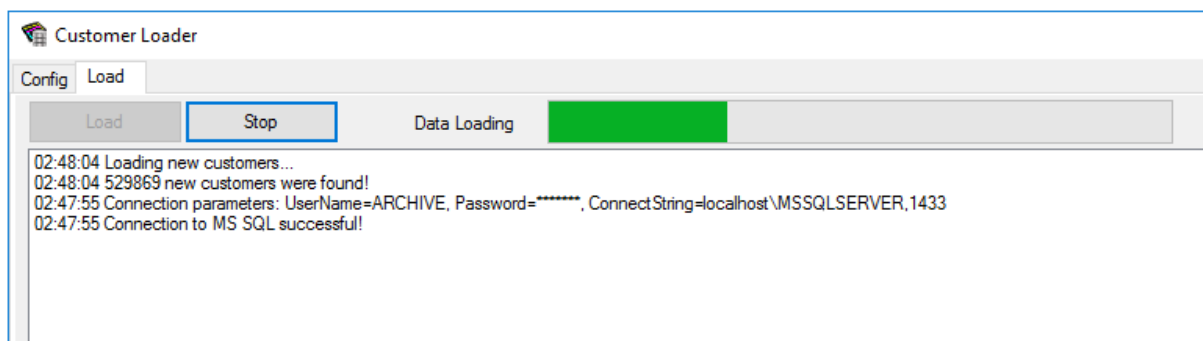

The customer data load process starts. The Customer Loader tool updates the CUSTOMER table columns and populates the table with the data from the customer file. The Customer Loader log shows the processing status.

Note

When you create or update the Archive database, the CUSTOMER table is created with the CUSTOMER_KEY column only.

5.2. Updating Customer Data

To update customer data in the Archive database:

1. From the Windows Start menu, navigate to All Programs > Eterra > Distribution > Server > Customer Loader.

The Customer Loader tool opens.

2. In the Customer Loader, configure the Database Connection Parameters and Configuration Parameters.
3. On the Load tab, click Load.

The Customer Loader starts updating the table columns and customer data in the CUSTOMER table in the Archive database. The Customer Loader log shows the number of inserted and removed customers.

Note

The Customer Loader also includes the file watcher feature: when the Customer Loader is running and you modify the specified customer file, the Customer Loader automatically starts to update customer data in the CUSTOMER table in the Archive database.

Tip

You can also run the Customer Loader application continuously using PROCMAN.

The Customer Loader identifies unique customers by customer key and updated customers by CRC. Removed customers are still stored in the database; the IS_DELETED and DELETED_TIME columns for these customers are populated accordingly.

When updating customer data, the Customer Loader creates a <DatabaseProvider><Customer_File_Name>Old_bc.bpcl file in the folder with the customer file. This new file contains differences in the customer data.

After a successful update, the Customer Loader renames this file to <DatabaseProvider><Customer_File_Name>Old.bpcl. If the update is terminated incorrectly (not using the Stop button) the Customer Loader keeps this file.

Caution

Do not remove the <DatabaseProvider><Customer_File_Name>Old.bpcl or <DatabaseProvider><Customer_File_Name>Old_bc.bpcl files. Otherwise, the Customer Loader loses differences and re-creates the CUSTOMERS table in the Archive database. This results in losing information for deleted customers.

5.3. Stopping the Load Process

To stop loading or updating customer data in the Archive database:

- On the Load tab, click Stop.

The Customer Loader cancels the current load or update process.

5.4. Configuring the Customer Loader Task in PROCMAN

The Customer Loader application can run continuously using PROCMAN. The default Fantasy Island model already includes the Customer Loader task (CUSTLOAD).

To add the Customer Loader process to the PROCMAN model as a passive task:

- Create the CUSTLOAD task and its corresponding flag and node records, as shown in the figure below.

! Important

Add the /BATCH parameter to the Parameters field to configure the application to run in the batch (non-UI) mode and automatically run the load process.

The screenshot displays the PROCMAN configuration window with three sections: Task, Flag, and Node.

- Task (47):**
 - Application: IDMS
 - Family: (empty)
 - Taskset: 0
 - Appmgr ID: CUSTLOAD
 - Test Sim Time: 10
 - Stall Chk: 0
 - Start Tmout: (empty)
 - Stop Tmout: (empty)
 - Retry Delay: 0
 - Parameters: /BATCH /CONFIG %CUSTLOADER_CONFIG%
 - Down Alarm: (unchecked)
 - Passive: (checked)
 - Task Must Stop: (unchecked)
 - Test Mode: (unchecked)
 - Retry Alarm: (unchecked)
 - Restart Logic... (button)
 - Hang Alarm: (unchecked)
 - Startup: (unchecked)
 - Timeout Alarm: (unchecked)
 - Log: (checked)
 - Confirm Stop: (unchecked)
 - Quota... (button)
- Flag (60):**
 - Check Env: (checked)
 - Init State: (unchecked)
 - Reset: (unchecked)
 - Set Alarm: (unchecked)
 - Reset Alarm: (unchecked)
 - Log: (checked)
- Node (74):**
 - Name: ST_CUSTLOAD
 - Max. Counter: 0
 - Log: (checked)
 - Start: (checked)
 - Exit: (unchecked)
 - WaitExit: (unchecked)
 - Junction: (unchecked)
 - Parameters: (empty)