



GE VERNOVA

ADMS

16.25.1

Enterprise OMS User Guide

Copyright

Copyright 2026, GE Vernova and/or its affiliates ("GE Vernova"). All Rights Reserved.

GE and the GE Monogram are trademarks of General Electric Company used under trademark license.

This document is the confidential and proprietary information of GE Vernova and may not be reproduced, transmitted, stored, or copied in whole or in part, or used to furnish information to others, without the prior written permission of GE Vernova.

Change History

Date	Change Description
Jun 7, 2023	ADMS 3.16: • Updated Order List Menu. • Updated Damage Assessment Tab. • Rebranded title page to ADMS as EOMS is part of ADMS. • Editorial and formatting updates.
Aug 1, 2023	ADMS 3.16.0.2: • Updated Order Worksheet.
Oct 20, 2023	ADMS 16.1.0: • The product version numbering has changed. The prefix '3' is no longer included in the version numbering for ADMS.
Dec 6, 2023	ADMS 16.3.0: • Added Customers Tab Menu. • Updated Restoration Tab Menu.
Mar 27, 2024	ADMS 16.6.0: • Updated Meter Analysis Tab.
Mar 29, 2024	ADMS 16.7.0: • Updated document format and styling.
Jul 31, 2024	ADMS 16.11.0: • Updated Default Order Types table.
Sep 30, 2024	ADMS 16.12.0: • Updated section Restoration Tab.
Oct 14, 2024	ADMS 16.13.0: • Updated table Default Task Types.

Contents

1. Introduction	6
2. User Interface	8
2.1. Orders Tab	8
2.1.1. Order List Menu	12
2.1.2. Orders Tab Panes	16
2.1.2.1. Affected Customers	17
2.1.2.2. Customers That Called	19
2.2. Data Correction Tab	20
2.2.1. Data Correction Menu	22
2.3. Order Worksheet	22
2.3.1. Main Panel	23
2.3.2. Side Panel	33
2.3.2.1. General Tab	36
2.3.2.2. Facility Tab	38
2.3.2.3. Customers Tab	40
2.3.2.4. Meter Analysis Tab	42
2.3.2.5. Damage Assessment Tab	44
2.3.2.6. Related Tab	46
2.3.2.7. Custom Fields Tab	51
2.3.2.8. Restoration Steps Tab	52
2.3.2.9. Switching Steps Tab	54
2.3.2.10. Chronology Tab	56
2.4. Data Correction	59
2.4.1. Order Tab	60
2.4.2. Incident Tab	61
2.4.3. Customers Tab	64
2.4.3.1. Customers Tab Menu	65
2.4.4. Switching Tab	65
2.4.4.1. Switching Tab Menu	66
2.4.5. Restoration Tab	67
2.4.5.1. Restoration Tab Menu	69
2.4.6. Chronology Tab	71
2.5. Damages Tab	72
2.5.1. Damages Menu	73
2.6. Create Maintenance Order	73
2.7. Edit Task	75
3. Managing Orders	78
3.1. Order Life Cycle	80
3.2. Order Types	82
3.2.1. Restoration Order	86

3.2.2. Investigation Order	87
3.2.3. Maintenance Order	89
3.2.4. Manual Switching Order	89
3.2.5. Planned Switching Order	90
3.2.6. Load Shed Order	91
3.2.7. Momentary Order	92
3.3. Creating an Order	92
3.3.1. Creating a Restoration Order	92
3.3.2. Creating a Maintenance Order	94
3.3.3. Creating a Follow-Up or Related Order	95
3.4. Assigning a Crew to an Order	97
3.4.1. Requesting Automatic Crew Assignment by WFM	101
3.4.2. Release the Crew from Work	103
3.5. Adding a Task to an Order	103
3.6. Updating Order Properties	108
3.7. Updating Task Properties	109
3.8. Completing a Task	110
3.9. Updating Order Status	113
3.9.1. Order Status Transition Constraints	114
3.10. Completing and Closing an Order	114
3.11. Suspending an Order	116
3.12. Multi-Select Quick Close of Restoration and Investigation Orders	116
3.12.1. Field Configuration Template and Custom Field Setup	116
3.12.1.1. Field Configuration Template:	116
3.12.1.2. Custom Field Update	118
3.12.2. Pre-Requisites for Configuring Quick Close settings	119
3.12.3. Quick Close Validation	120
3.12.3.1. For restoration orders:	120
3.12.3.2. For investigation orders:	121
3.12.4. Quick Close Order Selection Limit	126
4. Advanced Operations with Orders	127
4.1. Merging Orders	127
4.1.1. Merging Downstream Outages	129
4.2. Moving Orders Upstream and Downstream	130
4.2.1. Moving Orders Upstream	131
4.2.2. Moving Orders Downstream	132
4.2.3. Rolling an Order Upstream	134
4.3. Confirming an Outage	134
4.4. Manually Changing Crew Status	138
4.4.1. Crew Status Change Constraints	139
4.5. Taking Ownership of an Order	140
4.6. Assigning an Organization to an Order	142

4.7. Performing Data Correction	144
4.8. Adding and Removing Organization Membership	145

1. Introduction

GE's Enterprise OMS module supports a streamlined workflow for maintenance and repair work in the electrical network. The Enterprise OMS module is part of the GE's control room distribution platform, Advanced Distribution Management System (ADMS).

Enterprise OMS helps utilities to decentralize restoration activities and support restoration specialists across the company during times of heavy use, such as severe weather, and enables support for a variety of applications working together. The work is managed using orders, which can include multiple tasks with different objectives to accurately identify and record the required activities.

Orders can be assigned to organizations to allow dispatchers to easily offload work to other organizations that are helping with the restoration process. This provides coordinated support for multiple organizations and more efficient workload leveling.

- An unlimited number of geographically-based and service-based organizations can be defined.
- The initial organization assigned to an order is defined based on the incident type.
- Orders can be transferred individually or as a group to specific organizations.
- The order list can be filtered based on organizations of interest.

Orders can also be assigned ownership so that a dispatcher can explicitly take ownership of an order and other stakeholders in the organization know that the dispatcher is working on the order. This enhances coordination of work across organization and locations as coordination becomes more critical due to the decentralization of the restoration process and the number of remote workers. The order ownership function allows a user to own an order (tag an order to indicate that it is the one on which they are working) without imposing any undue restrictions on anyone else.

The Enterprise OMS system also supports defining custom fields so that these fields can be used on Enterprise OMS displays to enter and show required utility-specific data.

Restoration Order 2290000005-1

Affected Customers (Current / Initial)

10 / 10

Current ETR

11:30 08/17

Duration (min)

1

CMI

15

Calls (priority / all)

0 / 0

Status

Status

In Progress

Created

10:15 08/17

Completed

Closed

Priority

None

ETR - 0

11:30 08/17

Send ETR notifications

☒

ITR

11:30 08/17

Crew ETA

Earliest Arriving Crew(s)

Responsibilities

Owner & Organization

Transfer

(Dispatch (Highlands))

Service Center

3UONSSC

Crew(s)

Assign

Request

Dodge (1101) (LEAD)

Arrived

Instructions & Customer Notes

Case Note

Trouble Located Working to Restore Power.

Instructions

Dispatcher Comments

Crew Comments

Tasks (2)

Check Prediction

Distribution Transformer

Dodge (1101)

Confirmed Open

Repair

Distribution Transformer

Dodge (1101)

New

Resolution

Incident 2290000005

8198 West St, Roarke

6-7611-8243-0-0 | F8863 RAVEN (Roarke)

General

Facility

Customers

Damage Assessment

More

Details

Incident type

Confirmed

Planned outage ID

Work order ID

Working Status

Crew is OnSite for this incident.

Callback

Automatic

Follow up required

☐

Fault Location

Location source

None specified

Cause

System Affected

None

Cause

No Reason Assigned

Sub Cause

Figure 1. Enterprise OMS - Updating an Order

1. Introduction
Proprietary - See Copyright Page

7

ADMS 16.25.1 Enterprise OMS User Guide

2. User Interface

The Enterprise OMS user interface is integrated into the OMS Display Plugin, which is part of GE's Advanced Distribution Management System (ADMS) solution.

2.1. Orders Tab

The Orders tab lists orders. To access the tab, click Orders on the OMS Display Plugin control panel.

Order	List Priority	C L	C B	C C	C P	A N	Type	Status	Crew Status	Crews	Feeder
1440000029-1	1						Restoration	New	Unassigned		F9861
1440000025-1	2		!				Manual Switch...	In Progress	Dispatched	Walker (1...	F5465
1440000021-1	3		!				Manual Switch...	In Progress	Unassigned		F8864
1440000022-1	4						Manual Switch...	In Progress	Assigned	Sheridan ...	F8864
1480000033-1	5						Manual Switch...	In Progress	Unassigned		F5037
1440000024-1	6						Restoration	New	Unassigned		F5462
1440000026-1	7						Planned Switc...	In Progress	Unassigned		F5465
1480000034-1	8		!				Manual Switch...	In Progress	Unassigned	Sheridan ...	F7861

Figure 2. Orders Tab

The following information is shown in the Order List display:

- **Select:** Check to select one or more orders.
- **Order:** Order name.
- **List Priority:** The sorting index by the Incident Priority Index value, in descending order.
- **CL (Customers that Called):** This icon appears when the incident has customers that called. Click to see the customers that called for the incident. The Customers that Called pane will appear in the lower half of the Orders tab. For more information about the Customers that Called pane, refer to the *OMS User Guide*.
- **CB (Callback Customers):** This icon appears when the incident has customers that indicated failure via callback. Click to see the customers who indicated failure via callback. The Customers Indicating Failure via From Call Back pane will appear in the lower half of the Orders tab. For more information about the Customers Indicating Failure via From Call Back pane, refer to the *OMS User Guide*.
- **CC (Critical Customers):** This icon appears when the incident affected critical customers. Click to see the critical customers for the selected incident. The Critical Customers Affected pane will appear in the lower half of the Orders tab. For more information about the Critical Customers Affected pane, refer to the *OMS User Guide*.

- **CP (Priority Customer Calls):** This icon appears when priority calls are received from customers that are associated with this incident. Click to see the list of priority calls for the selected incident. The Prioritized Customers that Called for Incident pane will appear in the lower half of the Orders tab. For more information about the Prioritized Customers that Called for Incident pane, refer to the *OMS User Guide*.
- **AN (Area Note Assigned):** This icon appears when an area note is assigned to the incident's area.
- **Type:** Order type (for example, Restoration, Investigation, or Maintenance).
- **Status:** Order status (New, In Progress, Suspended, Cancelled, Field Complete, or Closed).
- **Crew Status:** The status of the assigned crews.
- **Crews:** The list of the assigned crews.
- **Feeder:** Shows the name of the associated feeder.
- **System Affected:** Indicates the system type of the device of record, such as distribution lines.
- **Device Type:** Type of the device affected by the order (for example, fuse).
- **Device:** Name or ID of the device affected by the order.
- **Third Party:** Indicates whether the device of record belongs to a third-party company.
- **Phase:** Affected phases.
- **# Customers:** Number of customers that are currently de-energized because of the order.
- **ITR/ETR:** Shows the (initial) estimated time for restoration. This value is set according to the ETR/ITR matrix when an incident is originated, and then updated after an ETR is calculated for an incident (for example, when certain incident properties are updated). ITR is never changed.
- **Station:** Shows the name of the station that the device affected by the order belongs to.
- **City:** Name of the city that the device affected by the order belongs to.
- **Service Center:** Shows the name of the service center that the device affected by the order belongs to.
- **Owner:** The user that has taken ownership for the order.
- **Organization:** Shows the organization that the order is assigned to.
- **Has Dependent:** Specifies whether the order blocks another order.
- **Has Prerequisite:** Specifies whether the order is blocked by another order.
- **County:** Shows the name of the county to which the device affected by the order belongs.
- **Incident Type:** Type of the incident.
- **Incident:** The unique incident ID.
- **Incident Status:** The current status of the incident, such as New or Pending Clear.
- **Incident Working Status:** The working status of the incident, such as Unassigned.
- **Priority:** The incident priority type (for example, None, High, or Extreme).
- **Ranking:** Contains a value calculated from the settings in the Incident Ranking tab of the OMS

Server Configuration Editor to help sort incidents by priority. You can manually edit the incident ranking, as appropriate.

- **Open Device Type:** Open device type.
- **Device ID:** Device name or ID.
- **Power Status:** Outage incident type.
- **# Calls:** Number of customer calls.
- **# PONs:** Number of active AMI outage reports.
- **# Critical Customers:** Number of critical customers affected by the incident.
- **First Called Customer:** The address and name of the first customer who called. For incidents without customer calls, this is the address and name of the first customer in the list of affected customers.
- **Call Type:** Shows the type of trouble (for example, Lights Out, Area Outage, Blinking Lights).
- **Critical Customer #1:** Number of critical customers of type 1 affected.
- **Critical Customer #2:** Number of critical customers of type 2 affected.
- **Critical Customer #3:** Number of critical customers of type 3 affected.
- **Critical Customer #4:** Number of critical customers of type 4 affected.
- **Critical Customer #5:** Number of critical customers of type 5 affected.
- **ITR:** Shows the initial estimation for the restoration date and time. This value is set according to the ETR/ITR matrix when an incident is originated. ITR is never changed. This column is hidden by default.
- **ETR:** Shows the date and time for the calculated estimated time of restoration. This column is hidden by default.

The ETR is recalculated for incident-related events such as merging incidents or changing incident properties.

- **ETR Source:** Shows the name of the user or system that initiated the last ETR update.
- **ETR Sequence Number:** Shows the sequential number of ETR changes. The sequential number starts with 0 and increments by 1 each time an incident ETR changes (for example, when dispatching a crew or creating an area note).
- **Area Note ETR:** Area note ETR.
- **Suppress Notification:** Indicates whether automatic notifications are disabled for the incident's area.
- **Suppress Notification Reason Icon:** Shows an icon for the reason to disable automatic notifications.
- **Suppress Notification Reason:** Indicates the reason for disabling automatic notifications.
- **System Mode:** The system mode from the area note (Major Storm, Storm, or Normal).
- **Storm Name:** The name of the storm that is associated with the incident's area note.

- **Repair Time:** Estimated time to fix the problem.
- **Evaluate Crews:** Name of the crew dispatched to the incident as an evaluator.
- **Line Crew Needed:** Indicates if the "Line Crew Needed" flag is set for this incident.
- **Tree Crew Needed:** Indicates if the "Tree Crew Needed" flag is set for this incident.
- **Go to Geographic:** Click to open the geographic network view in a separate viewport and locate the incident.
- **Go to SCADA:** This icon appears when an incident is reported by the SCADA notification. A notification is sent for momentary incidents or when a protective SCADA device is out for more than two minutes. Clicking on this image opens the substation SCADA display.
- **HZ (Has Hazardous Customer):** Icon indicating that hazardous customers are affected by the incident. Click to see the hazardous customers that are affected by the selected incident. The Hazardous Customers Related to Incident tab will appear in the lower half of the Incidents tab.
- **LO (Locked Status):** This icon appears when the incident is locked by a user. Hover over the lock icon to see which user has the incident locked.
- **PS (Is Predicted Stable):** This icon appears when a single customer or predicted incident is in the predicted stable state.
- **DA (Damage Assessment Locations):** Click to view the damage assessment status for the selected incident. The Damage Assessment Locations tab will appear in the lower half of the Incidents tab.
- **CW (Crews):** This icon appears when a crew has been dispatched to the incident. Click to see the dispatched crew status for the selected incident. The Assigned Crews Status tab will appear in the lower half of the Incidents tab.
- **Create Switching Order:** Creates or opens an existing switching order with close switching steps for all incident restoration steps.
- **Start Time:** Incident start time.
- **Creation Time:** Date and time when the order was created.
- **Acknowledged Time:** Date and time when the order acknowledged (by an operator manually or by the system automatically).
- **Field Completion Time:** Date and time when the order was completed in the field.
- **Closure Time:** Date and time when the order was closed.
- **Cancellation Time:** Date and time when the order was cancelled.
- **Dispatcher Comments:** An internal comment about the incident. Clicking the icon shows a prompt with the comment message.
- **Crew Comments:** A crew comment about the incident. Clicking the icon shows a prompt with the comment.
- **Remarks:** A remark about the incident.
- **Assessed Poles Down:** Count of poles from damage assessment provided by Workforce Damage Assessment or entered on the Incident Update screen by an operator.

- **Assessed Conductor Span:** Count of spans of wire down from damage assessment provided by Workforce Damage Assessment or entered on the Incident Update screen by an operator.
- **Assessed Transformers:** Count of damaged transformers from damage assessment provided by Workforce Damage Assessment or entered on the Incident Update screen by an operator.
- **Assessed Services:** Count of services down from damage assessment provided by Workforce Damage Assessment or entered on the Incident Update screen by an operator.
- **Wire Down:** Sum of customer calls that have indicated a Wire or Pole value in the Condition 1 or Condition 2 field of the Description section on the Customer Call display. This field population is defined by the Call Aggregation 1 field as configured in the OMS Server Configuration Editor.
- **Poles Down:** Sum of customer calls that have indicated a Wire or Pole value in the Condition 1 or Condition 2 field of the Description section on the Customer Call display. This field population is defined by the Call Aggregation 2 field as configured in the OMS Server Configuration Editor.
- **Services:** Sum of customer calls that have indicated the "Pole/House" value in the Description field of the Description section on the Customer Call display. This field population is defined by the Call Aggregation 3 field as configured in the OMS Server Configuration Editor.
- **High:** Sum of customer calls that have "High" priority in the Description section on the Customer Call display. This field population is defined by the Call Aggregation 4 field as configured in the OMS Server Configuration Editor.
- **Extreme:** Sum of customer calls that have "Extreme" priority in the Description section on the Customer Call display. This field population is defined by the Call Aggregation 5 field as configured in the OMS Server Configuration Editor.
- **Incident Priority Index:** Priority index for the associated incident. For more details about calculating the priority index, refer to the OMS Server Configuration Editor. This column is hidden by default.
- **Upstream Reclosing Disabled:** Specifies whether the order has an upstream device with the Reclosing Disabled status. This field shows the correct output only when a crew is assigned to the order and has the Dispatched, Enroute, Arrived, or Released status. This field does not apply to Investigation orders or Maintenance orders.

2.1.1. Order List Menu

Right-click anywhere on an order row to open the context menu.

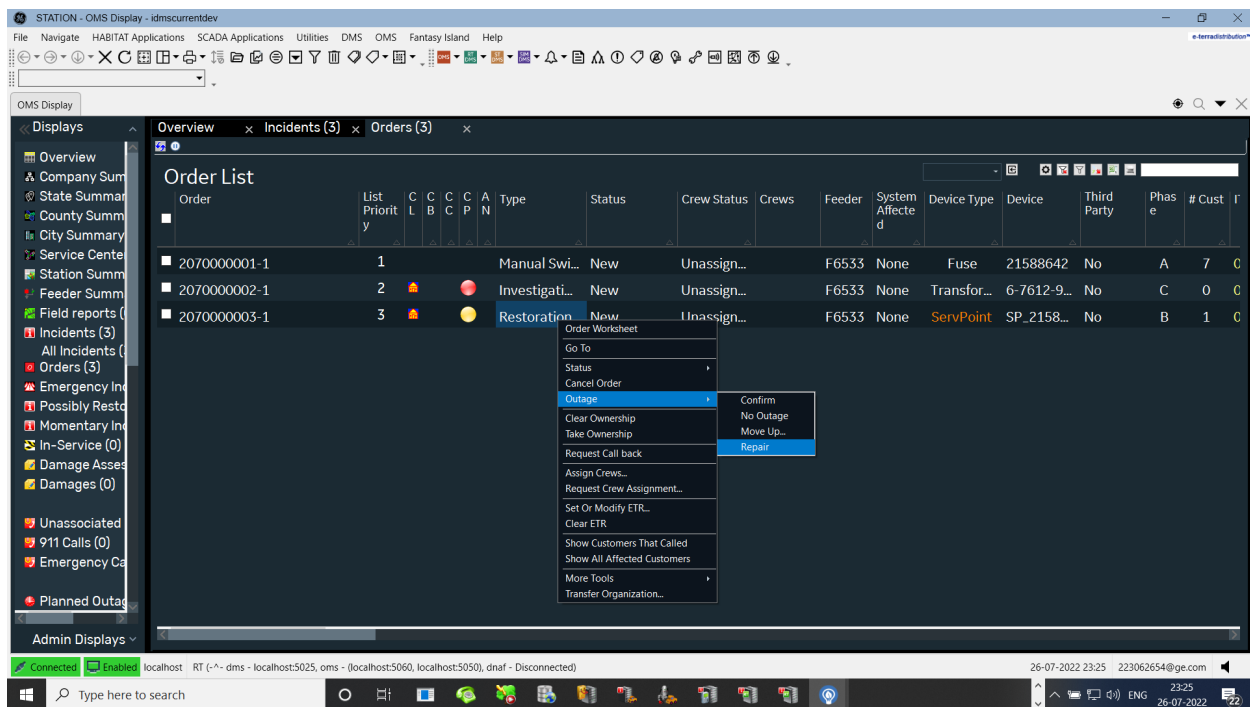


Figure 3. Order List Context Menu

The context menu has the following commands:

- **Order Worksheet:** Opens the Order Worksheet display in a separate tab, which allows you to make work-order-related changes and track the progress of the order.

For more information, see [Order Worksheet](#).

- **Go to:** Locates the associated incident in the geographic network view.
- **Go to SCADA:** Opens the SCADA Online diagram for the associated substation. Applies to orders for station internal devices.
- **Status:** Shows the following options to manage the order and change the lead crew status:
 - Assign
 - Dispatch
 - En Route
 - Arrive
 - Suspend
 - Field Complete
 - In Progress
 - Close
- **Cancel Order:** Cancels the selected order.
- **Outage:** For restoration orders, shows the following options to update the associated outage incident. These options are also available when completing a Check Prediction or Repair task.

- Confirm
- No Outage
- Move Up
- Move Down
- Repair
- **Investigation:** For investigation orders, shows the following options to update the associated non-outage incident. These options are also available when completing an investigate or Fix Problem task.
 - Problem Confirmed
 - Problem Resolved
 - No Problem
 - Problem Not Resolved
- **Take Ownership:** Associates the order with the current operator.
- **Clear Ownership:** Clears the ownership for the order.
- **Request Callback:** Requests callback for the customer. This option is only available for restoration orders associated with single customer incidents.
- **Create Follow-Up Restoration Order:** Creates a follow-up restoration order for the order. This option is only available for restoration orders associated with confirmed or isolated incidents.
- **Create Follow-Up Investigation Order:** Creates a follow-up investigation order for the order. This option is only available for investigation orders associated with non-outage incidents.
- **Create Related Maintenance Order:** Creates a related maintenance order for the order. This option is hidden for orders associated with single customer and predicted incidents.
- **Assign Crews:** Opens the Crew Selection dialog, where you can assign a new crew to the order.
- **Request Crew Assignment:** Opens the Request from the Workforce Management dialog, where you can request automatic crew assignment to the order by the Workforce Management System.
- **Set or Modify ETR:** Opens the Set or Modify ETR dialog box to specify or update an ETR for the incident that is associated with the order.

- **Clear ETR:** Opens the Clear ETRs dialog box to confirm resetting ETR to the initial value for the incident that is associated with the order.
- **Show Customers That Called:** Opens the called customer list for the associated incident in the lower panel.
- **Show All Affected Customers:** Opens the list of customers affected by the associated incident in the lower panel.
- **Show Critical Customers:** Opens the list of critical customers affected by the associated incident in the lower panel.
- **More Tools:** Contains additional options for managing the order and the incident that is associated with the order.
 - **View Damage:** Opens the list of damage assessment locations for the associated incident in the lower panel.
 - **Reset Predicted Stable:** Resets the predicted stable state for the associated incident. This command appears only when the associated incident is in the Predicted Stable state.
 - **Incident's Custom Fields:** Opens the Incident's Custom Fields pop-up display, which allows you to enter, view, and update custom incident properties.
 - **Acknowledge:** Click to manually acknowledge the order and the incident that is associated with the selected order.


Note

An order is automatically acknowledged by updating the order or incident (for example, when dispatching a crew).

- **Export to PDF:** Creates a PDF document of the associated incident's properties and its location on the map.
- **Convert Order:** Converts an investigation order into a restoration order. Appears only for

investigation orders.

- **Transfer Organization:** Opens the Transfer Organization display, which allows you to transfer an order from one organization type and name to another.

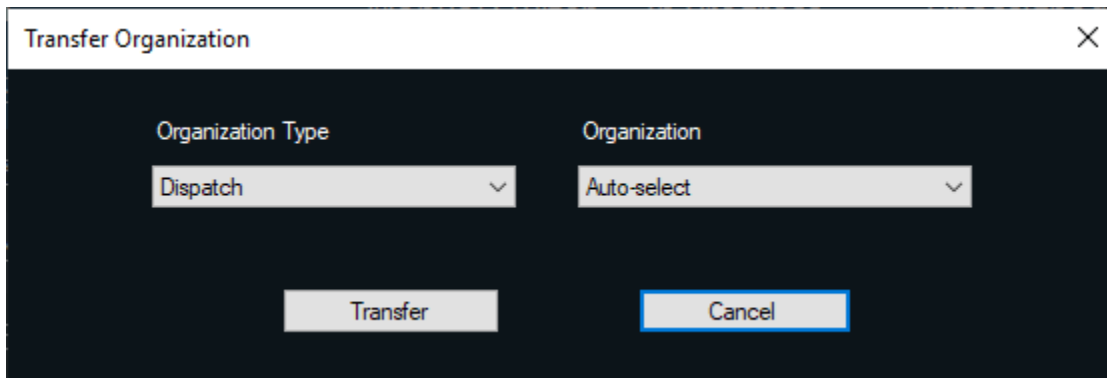A screenshot of the 'Transfer Organization' dialog box. The dialog has a title bar with the text 'Transfer Organization' and a close button (X) on the right. The main area has a dark background. It contains two dropdown menus: 'Organization Type' with 'Dispatch' selected, and 'Organization' with 'Auto-select' selected. Below these are two buttons: 'Transfer' and 'Cancel'.

When several orders are selected on the Order List tab, right-click anywhere on the tab to show a context menu with the following options:

- **Status:** Shows the following options to manage status for the orders:
 - Field Complete
 - Close
- **Take Ownership:** Associates the orders with the current operator.
- **Clear Ownership:** Clears the ownership for the orders.
- **Request Callbacks:** Requests callbacks for the customers. This option is only available for restoration orders associated with single customer incidents.
- **Set or Modify ETR:** Opens the Set or Modify ETR dialog box to specify or update an ETR for the incident that is associated with the order.
- **Clear ETR:** Opens the Clear ETRs dialog box to confirm resetting ETRs to the initial values for the incidents that are associated with the orders.
- **Merge Orders:** Opens the Merge Orders display, which allows you to merge orders and their associated incidents.
- **Transfer Organization:** Opens the Transfer Organization display, which allows you to transfer orders from one organization type and name to another.
- **Export to PDF:** Creates PDF documents of incident properties for the incidents associated with the selected orders.

2.1.2. Orders Tab Panes

This section describes the panes that appear in the Orders tab below the parent pane.

To show or hide the child or parent panel, click the panel header.

2.1.2.1. Affected Customers

The Affected Customers List pane shows detailed information about affected customers (both energized and de-energized). To show this pane, right-click an order on the Order List display and select Show All Affected Customers from the context menu.

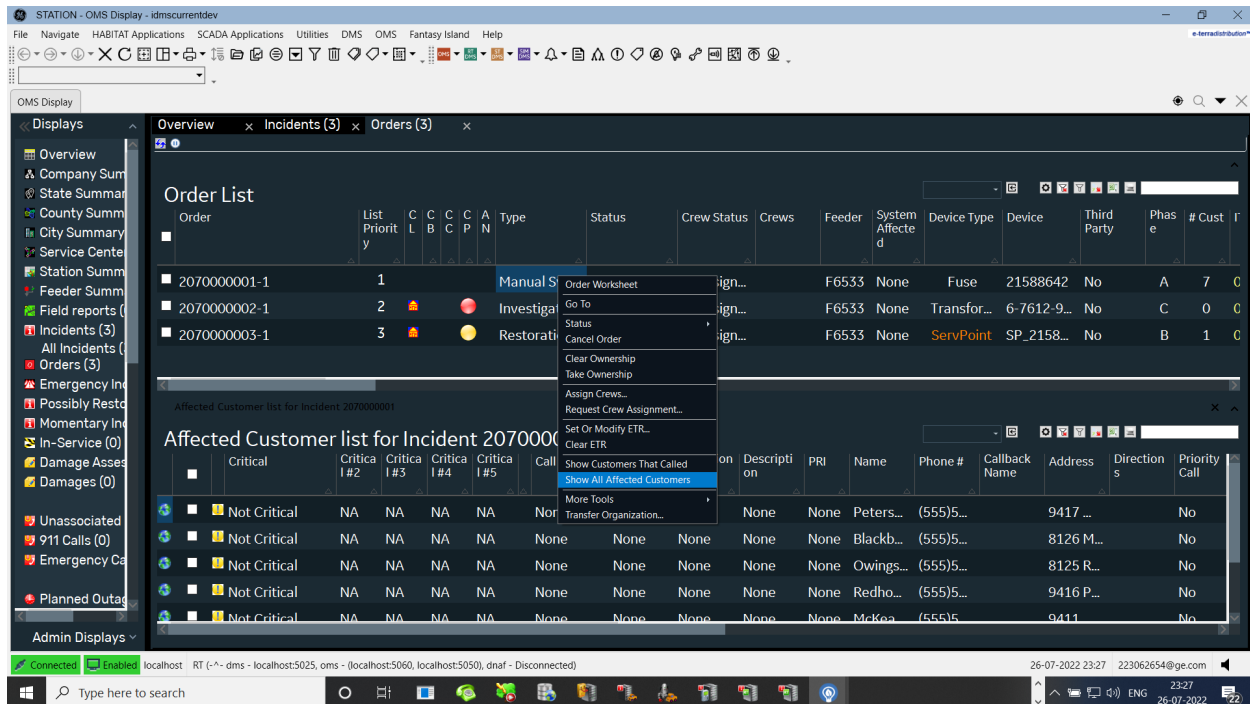


Figure 4. Affected Customer List

The following information is shown on the Affected Customers pane:

- **Navigate to Geographic:** Opens the geographic network view in a separate viewport and locates the customer.
- **Select:** Use this check box to select one or more customers.
- **Customer Type** : Icon indicating the critical type of customer, such as Key Customer, Priority Customer, or Elderly Customer.
- **Critical:** Description of the critical type 1 customer (for example, Priority Customer).
- **Critical #2:** Code of the critical type 2 customer (for example, 4941 for Water Supply).
- **Critical #3:** Code of the critical type 3 customer (for example, 8052 for Intermediate Care Facilities).
- **Critical #4:** Code of the critical type 4 customer (for example, 0000 for Not Critical).
- **Critical #5:** Code of the critical type 5 customer (for example, 0000 for Not Critical).
- **Hazardous Customer:** Icon indicating a hazardous customer. The tooltip describes a hazardous condition on the customer's property (for example, vicious dog), as appropriate.
- **Call Type:** Shows the type of trouble (for example, Lights Out, Area Outage, Blinking Lights).

- **Condition 1:** Describes the first trouble call condition (for example, wires down, wires burning, and so on).
- **Condition 2:** Describes the second trouble call condition (for example, pole on fire, pole leaning, and so on).
- **Description:** Shows the trouble call description, if any (for example, pole/house, loud noise, and so on).
- **PRI** Shows the call priority type (Low, Medium, Extreme, and so on).
- **Name:** Customer's name.
- **Phone#:** Customer's phone number.
- **Callback Name:** Contact name for callback.
- **Address:** Customer's address.
- **Directions:** Driving directions.
- **Priority Call:** If Yes, indicates a high priority call, as configured on the "High Priority Calls" tab in the OMS Server Configuration Editor.
- **Call?:** If Yes, indicates that the customer called.
- **Call Time:** Call time for the customer. Empty if the customer has not called.
- **Agent:** Agent who received the call (for example, Meter Event).
- **Call Source:** Name of the system that received the trouble call (for example, ADMS or Call Entry).
- **Source Type:** Type of call source (for example, call, text, or meter).
- **Comment:** Comment from the customer's call.
- **From Callback:** If set to Yes, indicates that the incident was created based on a customer callback.
- **AMI Off:** If Yes, AMI reported the customer's outage.
- **AMI On:** If Yes, AMI reported the customer has power supply.
- **AMR Time:** The time that AMI last reported for the customer.
- **Conf Out:** Indicates if the customer outage is confirmed (Yes/No).
- **Ping Status:** Shows the AMI ping status of the customer (for example, Successful).
- **Call ID:** Unique call ID, which is account number + call time, or journal time if the account number is not available.
- **Calls Count:** The number of calls received from the customer.

Table 1. Description of Default Customer Types

Bitmap	Description
	Not a critical customer
	Priority customer

Bitmap	Description
	Life support customer
	Handicapped customer
	Elderly customer
	CENS customer, key account customer, key CENS customer

Note

Default customer type bitmaps and descriptions can be configured and modified using the Coded Translation Editor tool. For more information, refer to the *Coded Translation Editor User Guide*.

Right-click anywhere on a customer row to open the context menu.




Figure 5. Affected Customers Context Menu

The context menu has the following commands:

- **Split Incident for this Customer:** Splits this customer call to a separate incident. The affected customer count for the current incident is decreased by one.
- **Split Incident for these Customers:** Splits these customer calls to a separate incident. The called customer count for the current incident is decreased by the number of customers that were selected. This option is available only when several customers are selected on the Affected Customers tab.
- **Request Callback:** Requests callback for the customer. This option is only available for customers associated with single customer or predicted incidents.

2.1.2.2. Customers That Called

The Customers that Called pane shows details about customers that have called about an incident. To open this pane, right-click an order on the Order List display and select Show Customers that Called from the context menu.

Customers that called for Incident 3170000011

Customers that called for Incident 3170000011

	P R I N T	H A Z A R D	T Y P E	Critical Type	Call Type	Condition 1	Condition 2	Description	Comment	Call Time	C N T	P O N	P R N	AMI Time	Ping Status	Name	P
				Not Critical	None	None	None	None		05:...	1					Briscoe D...	(£
				Not Critical	Lights Out	None	None	None		05:...	1					Brown Je...	(£

Figure 6. Customers that Called for Incident

For descriptions of the display fields and context menu options, refer to the [Affected Customers](#).

The following unique fields are available on the Customers that Called pane:

- **Comment Informative:** Indicates if the comment from a customer's call is informative. You can toggle the Informative flag using the context menu.

2.2. Data Correction Tab

The Data Correction tab lists closed and cancelled orders. To access the tab, click Data Correction on the OMS Display Plugin control panel.

Order	Type	Service Center	Station	Feeder	Device	Device Type	Et
2770000...	Restoration	3LIONSSC	RAVEN	F8863	2965-12	Fuse	1t
2770000...	Manual Switch...	3LIONSSC	RAVEN	F8862	6-7512-8...	Transformer	1t
2770000...	Manual Switch...	3LIONSSC	RAVEN	F8863	6-7611-3...	Transformer	1t
2770000...	Manual Switch...	3LIONSSC	RAVEN	F8862	10648-1	Fuse	1t
2770000...	Manual Switch...	3LIONSSC	RAVEN	F8864	6-7512-6...	Transformer	1t
2780000...	Manual Switch...	3LIONSSC	RAVEN	F8864	6-7512-6...	Transformer	1t

Figure 7. Orders Tab

The following information is shown in the Orders display:

- **Incident Type:** Icon showing the incident type. Hover the cursor over the icon to see the type description, such as Single Customer, Predicted, or Confirmed.
- **Non-Outage Type:** Icon showing the non-outage incident type according to the Call Action Matrix. Hover the cursor over the icon to see the type, such as Street Light, Momentary, or None.
- **Critical Customer:** Icon indicating that critical customers are affected by the incident. Click this

icon to open the list of affected critical customers (both energized and de-energized). The details for the critical customers appear in the History Correction panel below the parent tab.

- **Priority:** Icon indicating the highest call priority type of the incident.
- **Incident Can Be Cancelled:** Icon indicating whether the incident can be cancelled. Click this button to cancel the incident.
- **View Affected Customers:** Opens the list of affected customers (both energized and de-energized). The details for the affected customers appear in the History Correction panel below the parent tab.
- **View Restoration Steps:** Click this button to open the Restoration Steps tabular in the panel.
- **View Chronology:** Click this button to open the Chronology Log tab in the panel.
- **Select:** Set the check boxes for one or more orders.
- **Order:** Order name.
- **Type:** Order type.
- **Service Center:** Shows the service center name that the order belongs to.
- **Station:** Shows the station name that the device affected by the order belongs to.
- **Feeder:** Shows the name of the associated feeder.
- **Navigate to Device:** Click to open the geographic network view in a separate viewport and locate the incident.
- **Device:** Name of the device affected by the order.
- **Device Type:** Type of the device affected by the order (for example, line switch).
- **End Time:** Time when the incident was closed or cancelled.
- **# Customers:** Number of affected customers (both energized and de-energized).
- **# Calls:** Number of customer calls.
- **# PONs:** Number of active Advanced Metering Infrastructure (AMI) outage reports.
- **Cause:** Cause of the incident.
- **Sub-Cause:** Sub-cause of the incident.
- **Priority:** The highest call priority type of the incident.
- **Cleared:** If true, indicates that the incident was cleared.
- **Cancelled** If true, indicates that the incident was cancelled.
- **From Callback:** If set to Yes, indicates that the incident was created based on a customer callback.
- **Working Status:** Order status of the incident.
- **Start Time:** Incident start time.
- **Incident Name:** Incident name.
- **Power Status:** Outage incident type.

- **Incident Type:** Type of the incident.
- **Dispatcher Comments:** Free-form dispatcher comments.
- **Crew Comments:** Free-form crew comments.
- **Instructions:** Free-form instructions.


2.2.1. Data Correction Menu

The Data Correction context menu contains the following command:

- **Update Data Correction:** Opens the Data Correction pop-up display to modify incident and order parameters for the selected order.
- **Merge Orders:** Opens the Merge Orders display where you can merge selected orders. For more information, see [Merging Orders](#).

This command is available when several orders are selected on the Data Correction tab.

- **Update Custom Fields:** Opens the **Incident's Custom Fields** dialog box, which allows you to update custom incident properties.

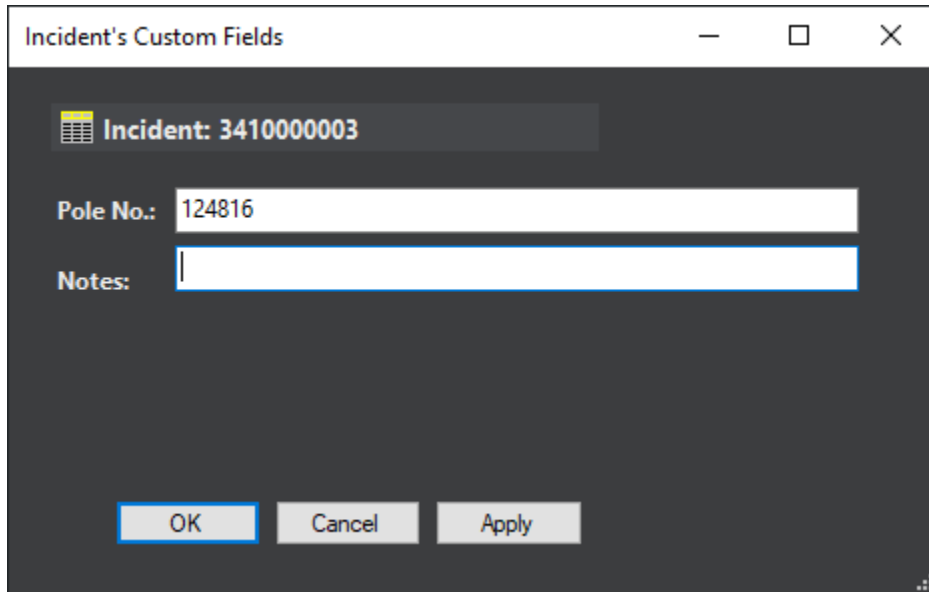

2.3. Order Worksheet

You can use the Order Worksheet display to manage the order and update order details. This display can be accessed from the Order List display context menu or from the network view, using the incident context menu.

Order Worksheet: 1070000009-1

Restoration Order 1070000009-1

Affected Customers (Current / Initial)	Current ETR	Duration (min)	CMI	Calls (priority / all)
1 / 1	21:30 04/17	10	9	0 / 1

Status

Status: **New**

Created: 19:18 04/17

Completed: ITR 21:30 04/17

Closed: Crew ETA

Priority: None

Earliest Arriving Crew(s)

Instructions & Customer Notes

Case Note: Outage Recorded

Instructions: Test Comment

Tasks (1)

Check Prediction Service Point

Select Crew

Responsibilities

Owner & Organization: Transfer

(Dispatch (Highlands))

Service Center: 3LIONSSC

Crew(s): Assign Request

Incident 1070000008

No Location Description

SP_17824971 | F8864 RAVEN (Roarke)

Details

Incident type: Single Customer

Planned outage ID: ---

Work order ID: ---

Working Status: Incident is unassigned

Callback: Automatic

Follow up required: ☐

Fault Location

Location source: None specified

Figure 8. Order Worksheet Display

Note

It is occasionally possible for orders to show as active after they have been left in the system without a reference to an incident. Such orders are referred to as being "orphaned". This is an unexpected situation and the worksheet will not open for such orders. When an attempt is made to do so, an alert pop-up appears with the following message:

The worksheet for order <order_name> cannot be opened because its incident has been removed. It isn't expected for this order to still be in your list so it will also be removed. Click the Acknowledge button to remove the Orphaned Order.

2.3.1. Main Panel

The main panel of the Order Worksheet display shows order and incident properties and allows operators to make updates to advance the order through the order lifecycle. The following figures show the main panel of the Order Worksheet display for different types of orders.

Figure 9. Order Worksheet - Main Panel for a Restoration Order

Figure 10. Order Worksheet - Main Panel for an Investigation Order

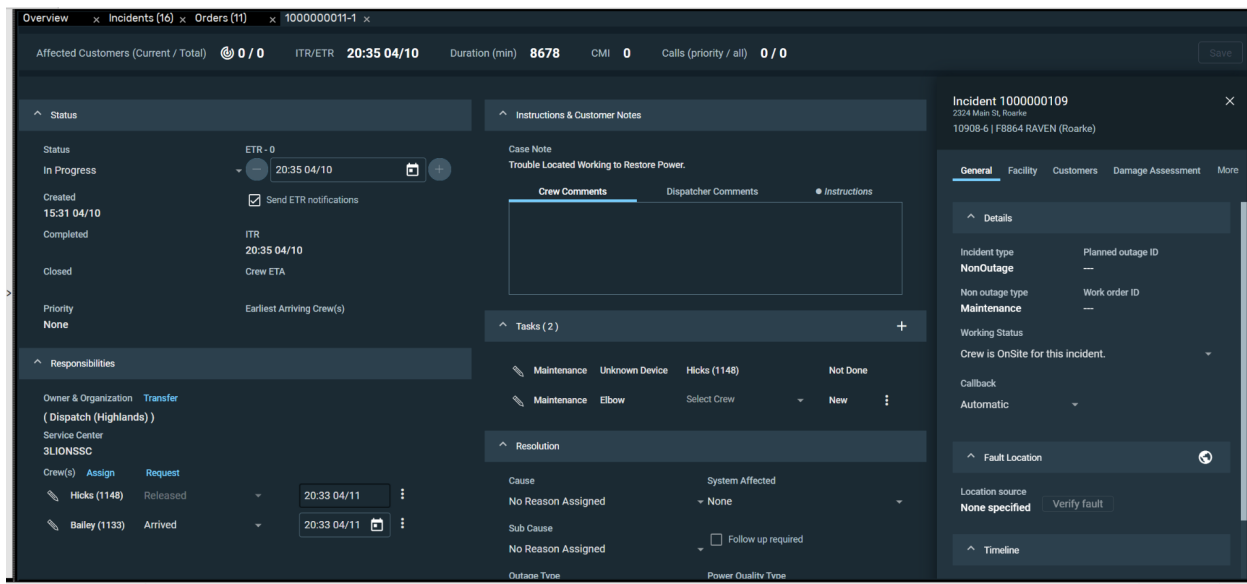



Figure 11. Order Worksheet - Main Panel for a Maintenance Order

The following fields are shown on the main panel of the Order Worksheet display:

- **Order Summary:**

Restoration Order 1660000005-1				
Affected Customers (Current / Initial)	Current ETR	Duration (min)	CMI	Calls (priority / all)
10 / 10	09:00 AM 06/15	7	75	0 / 2

- **Type:** Order type (for example, Restoration for outage incidents and Investigation or Maintenance for non-outage incidents).
- **Name:** Order name. By default, order name is composed of the incident name and the order sequential number. The sequential number increases when a related or follow-up order is created. The format is <Incident_Name>-<Order_Sequential_Number>.
- **Ping Status:** Hover over the Ping Status icon to show a tooltip with the customer meter ping status.

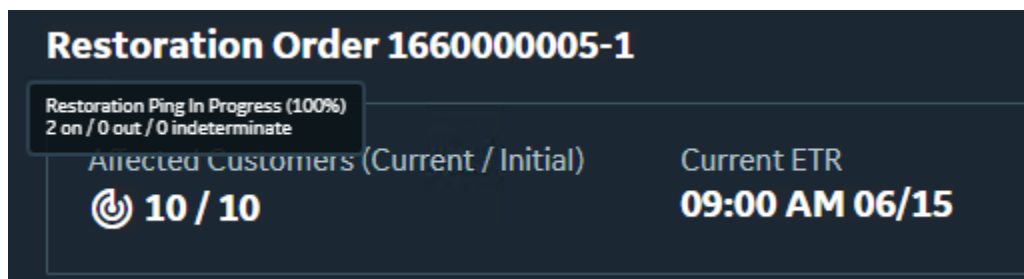

- **Upstream RC Off:** The Upstream RC Off (upstream reclosing disabled) indicator appears for orders that have an upstream reclosing device, for which reclosing has been disabled. This indicator only appears when a crew is dispatched to the order. This indicator does not

appear for Restoration orders (those orders associated with single customer incidents and manually confirmed incidents resulted from splitting a customer), Investigation orders, and Maintenance orders.

Manual Switching Order 1480000034-1					
Upstream RC Off	Affected Customers (Current / Initial) 2 / 2	Current ETR 09:30 AM 05/28	Duration (min) 10	CMI 21	Calls (priority / all) 0 / 0

- **Currently Affected Customers:** Number of customers that are currently de-energized because of the associated incident.
- **Initially Affected Customers:** Total number of customers that were initially de-energized because of the associated incident.
- **ITR/ETR:** Shows the (initial) estimated time for restoration. This value is set according to the ETR/ITR matrix when an incident is originated, and then updated after an ETR is calculated for an incident (for example, when certain incident properties are updated). ITR is never changed.
- **Duration:** Time, in minutes, from the incident start time until the current time or until the incident end time (for completed incidents).
- **CMI:** Counter of Customer Minutes Interrupted (CMI) for the associated incident.
- **Priority Calls:** The number of customer calls with high priority.
- **All Calls:** The total number of customer calls.
- **Status:**

^
Status

Status

In Progress

Created

04:33 AM 05/13

Completed

Closed

Priority

None

ETR - 0

—

06:00 AM 05/13

+

☒ Send ETR notifications

ITR

06:00 AM 05/13

Crew ETA

12:00 AM 05/14

Earliest Arriving Crew(s)


Shearer [5264] - AUTO

- **Status:** Order status (New, In Progress, Suspended, Cancelled, Field Complete, or Closed).

When you update the order status, the incident's working status is updated accordingly. For example, when you set the order status to "Field Completed", the incident working status changes to "Incident is Waiting for Clearance by WMS". When you close an order, the associated incident is cleared.


- **Created:** Date and time when the order was created.
- **Completed:** Date and time when the order was field completed.
- **Closed:** Date and time when the order was closed.
- **Suspended:** Date and time when the order was suspended. Appears only for suspended orders.
- **Suspended Reason:** The reason for order suspension (for example, Waiting for Vegetation Management). Appears only for suspended orders.
- **ETR:** Shows the date and time for the calculated estimated time of restoration.
 - **ETR Sequence Number:** The number next to the ETR label shows the sequential number of ETR changes. The sequential number starts with 0 and increments by 1 each time an incident ETR changes (for example, when dispatching a crew or creating an area note).
- **Send ETR Notifications:** Indicates whether automatic ETR notifications are sent to the affected customers.
 - **Suppress Notification Reason:** Indicates the reason for disabling automatic ETR notifications to the customers.
- **ITR:** Shows the initial estimation for the restoration date and time. This value is set according to the ETR/ITR matrix when an incident is originated. ITR is never changed.
- **Crew ETA:** The earliest crew's estimated time of arrival (ETA).
- **Earliest Arriving Crew(s):** The name and ID of the crew with the earliest ETA.
- **Priority:** Order priority (for example, None or High). Order priority is calculated based on the associated incident's ranking:
 - **None:** Orders for incidents with the 0 rankings.
 - **Low:** Orders for incidents with the 1-4 rankings.
 - **Medium:** Orders for incidents with the 5-8 rankings.
 - **High:** Orders for incidents with the 9-12 rankings.
 - **Extreme:** Orders for incidents with the 12 and higher rankings.

- **Responsibilities:**

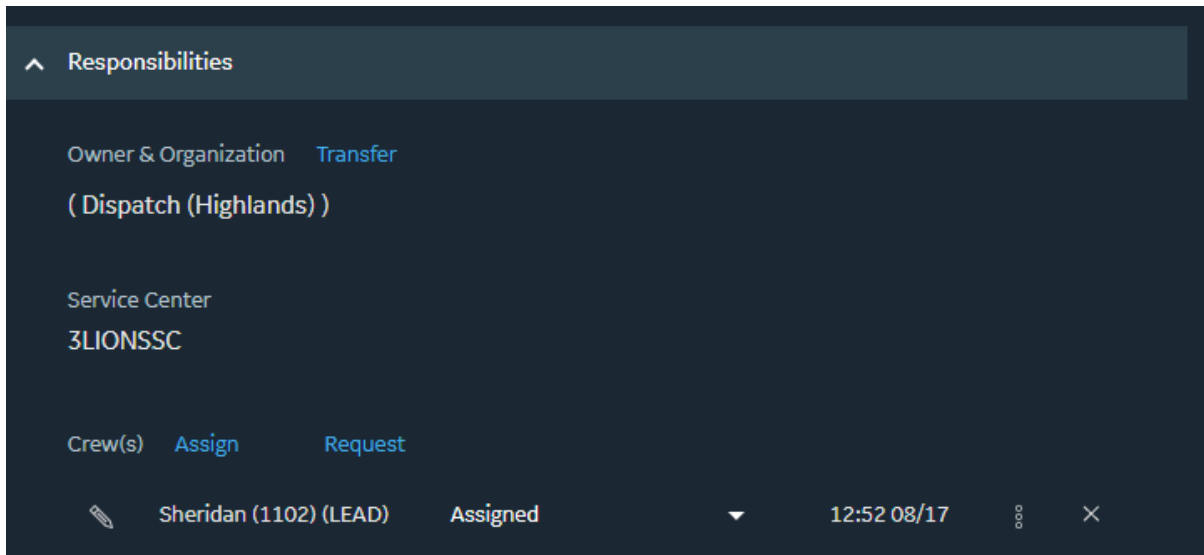

The 'Responsibilities' dialog box has a title bar with an upward arrow and the text 'Responsibilities'. Below the title bar, there are three sections. The first section is 'Owner & Organization' with a 'Transfer' link and the text '(Dispatch (Highlands))'. The second section is 'Service Center' with the text '3LIONSSC'. The third section is 'Crew(s)' with 'Assign' and 'Request' links. At the bottom, there is a row of controls: a pencil icon, the text 'Sheridan (1102) (LEAD)', the status 'Assigned', a dropdown arrow, the time '12:52 08/17', a list icon, and a close 'X' icon.

- **Owner and Organization:** Shows the user that has taken ownership for the order and the organization that the order is assigned to. Click Transfer to take ownership or assign the order to another organization.

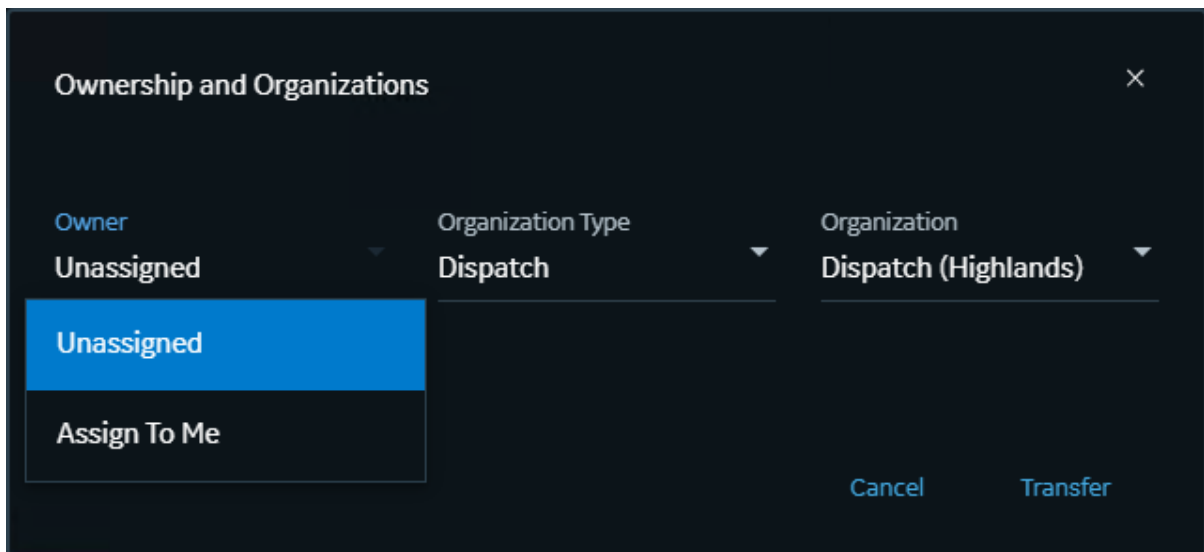

The 'Ownership and Organizations' dialog box has a title bar with the text 'Ownership and Organizations' and a close 'X' icon. Below the title bar, there are three dropdown menus: 'Owner' with 'Unassigned' selected, 'Organization Type' with 'Dispatch' selected, and 'Organization' with 'Dispatch (Highlands)' selected. Below the 'Owner' dropdown, there is a list with 'Unassigned' (highlighted in blue) and 'Assign To Me'. At the bottom right, there are 'Cancel' and 'Transfer' buttons.

- **Service Center:** Service center name.
- **Assign:** Click to assign a crew to the order.
- **Request:** Click to request an automatic crew assignment from the Workforce Management System.
- **Crew List:**
 - **Crew Details:** Click the pencil icon  to show the Crew Details dialog where you can update the crew status and the status update time.

Crew Details

×

<

Sheridan (1102)

FI1513

Work Status: Crew is en-route

Availability: Unknown

Shift: Unknown

Communications: Unknown

Assigned

12:53 08/17

Dispatched

12:53 08/17


EnRoute

13:03 08/17

Arrived

Released

- **Crew Name:** The assigned crew name. The LEAD suffix appears for the lead crew.
- **Crew Status:** The assigned crew status (Assigned, Dispatched, Enroute, Arrived, or Released).
- **Crew Status Last Update Time:** The time that the crew entered its current status. Click the calendar icon  to update the date and time.
- **Options:** Click the three dot icon  to show crew options.
 - **Make Lead:** Makes the crew the lead crew for the order. This option is disabled for lead or already released crews.
- **Unassign Crew:** Click the cross icon  to unassign the crew from the order.
- **Instructions and Customer Notes:**

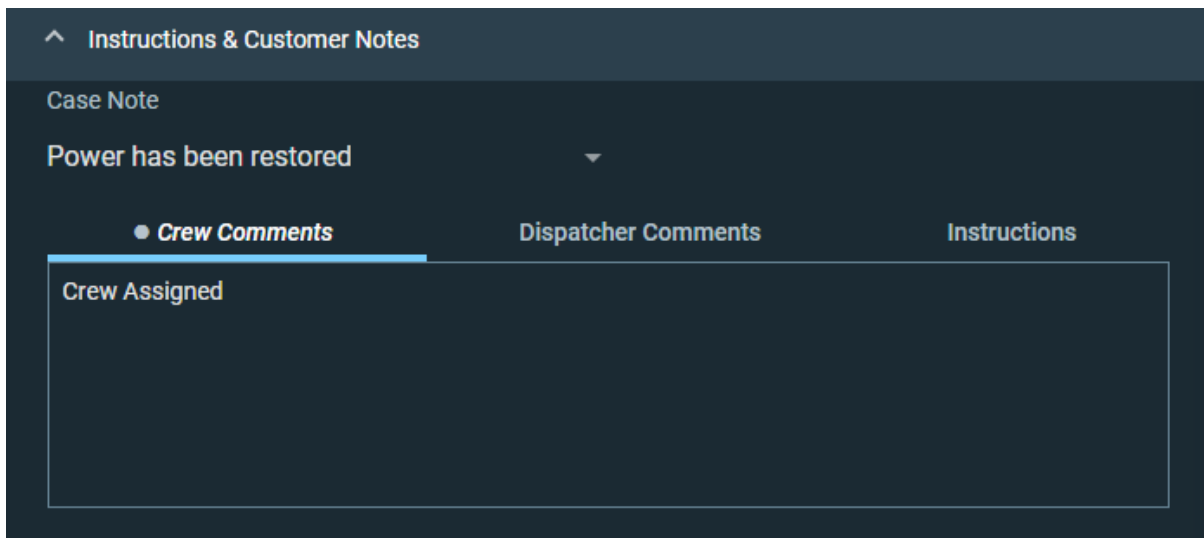

- **Case Note:** Case notes are used to keep customers informed about the progress of restoration efforts.

A case note is automatically populated with the default case note and then automatically updated based on the incident's cause and crew status. Case notes can also be selected from the list.

i Note


Manually set case notes do not update automatically.

In the Order Worksheet, the tabs displayed under Instruction & Customer Notes are determined by the CaseNotes dropdown selection. The available tabs include Crew Comments, Dispatcher Comments, and Instructions, shown in the specified order.

The Crew Comments tab opens by default. An indicator shows whether a tab contains any content without opening the tab.

- **Instructions:** Shows instructions about the order.
- **Dispatcher Comments:** Shows dispatcher comments about the order.
- **Crew Comments:** Shows crew comments about the order.

• Tasks:

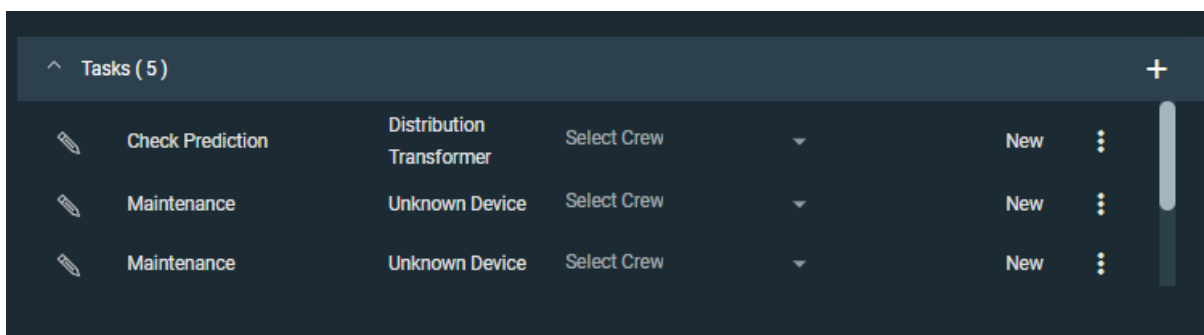

- **Add Task:** Click the plus ("+") symbol at the right of the Tasks section header to show the Create Task dialog.

- **Edit Task (Pencil Button):** Opens the Edit Task dialog, where you can update task details. For more details about the Edit Task dialog, see [Edit Task](#).
- **Type:** Task type.
- **Facility:** The type of the associated device. Hover over this field to show the device name. This field is set to "Unknown Device" when a task is not associated with a specific device.
- **Crew:** The name of the associated crew. The lead crew that is assigned to the associated order is automatically assigned to the task. You can also manually select the crew among the crews that are assigned to the order.
- **Status:** Task status (New, In Progress, Complete, or Canceled).

You can cancel only those tasks that were manually created by a user. Automatically created tasks for automatically created orders (for example, the Repair task for a Restoration order) cannot be cancelled.

- **Resolution:** Contains fields for entering resolution information. This section opens by default.

The screenshot shows a dark-themed form titled "Resolution". It contains the following fields and controls:

- Cause**: A text input field with a dropdown arrow.
- System Affected**: A text input field with a dropdown arrow.
- Sub Cause**: A text input field with a dropdown arrow.
- Follow up required**: A checkbox.
- Outage Type**: A text input field with a dropdown arrow.
- Power Quality Type**: A text input field with a dropdown arrow.
- Work Queues**: A text input field with a dropdown arrow.
- Weather**: A text input field with a dropdown arrow.
- Action Taken**: A text input field with a dropdown arrow.
- Failure Mode**: A text input field with a dropdown arrow.
- Material**: A text input field with a dropdown arrow.
- Manufacturer**: A text input field with a dropdown arrow.

- **Cause:** Cause for the incident.
- **Sub-Cause:** Sub-cause for the incident.
- **Outage Type:** Select the type of outage from the list.
- **Work Queues:** Select the work queue for the outage from the list.

Work queues group outages according to the type of work needed for power restoration, especially during storms with widespread outages. For example, the work queue of several outages may be set to "TRE" to indicate that a tree crew needs to be assigned to the outages as tree crews become available. Crews may even self-assign to outages based on work queues.

- **Action Taken:** Select the action taken by the crew from the list.
- **Material:** Material that is affected by the incident.
- **System Affected:** Indicates the system type of the device of record, such as distribution lines.
- **Power Quality Type:** Select the power quality type from the list.
- **Weather:** Select the weather from the list.
- **Failure Mode:** Select the failure mode from the list.
- **Manufacturer:** Select the manufacturer from the list.

2.3.2. Side Panel

The Order Worksheet side panel includes tabs with the order and the details of the related incident.

To show or hide the side panel, click the Show  or Hide button  in the upper-right corner of the Order Worksheet display.

Discard changesSave

Incident 1070000008

No Location Description

SP_17824971 | F8864 RAVEN (Roarke)

GeneralFacilityCustomersDamage AssessmentMore

Details

Incident type

Single Customer

Planned outage ID

Work order ID

Working Status

Incident is unassigned

Callback

Automatic

☒ Follow up required

Fault Location

Location source

None specified

Cause

Figure 12. Order Worksheet - Side Panel

The following information appears on the side panel header:

- **Incident Name:** The name of the incident that is associated with the order.
- **Location Description:** Location description that is associated with the order or the device of record.
- **Device Name:** Name of the device of record.
- **Station:** Station that is associated with the device of record or order location.
- **Feeder:** Feeder that is associated with the device of record or order location.
- **Service Center:** Service center that is associated with the device of record or order location.

The following buttons appear above the side panel header:

- **Discard Changes:** Discards any unsaved changes to the order.
- **Save:** Saves changes to the order.

2.3.2.1. General Tab

The screenshot shows the 'General' tab selected in a dark-themed interface. The tab bar at the top includes 'General', 'Facility', 'Customers', 'Damage Assessment', and 'More'. Below the tab bar, there are three expandable sections: 'Details', 'Fault Location', and 'Timeline'. The 'Details' section is expanded, showing fields for 'Incident type' (Predicted), 'Planned outage ID' (—), 'Work order ID' (—), 'Working Status' (Incident is waiting for clearance by Dispatcher), and 'Callback' (Automatic). The 'Fault Location' section is collapsed, showing 'Location source' (None specified) and a 'Verify fault' button. The 'Timeline' section is also collapsed, showing 'Start time' (14:22 04/10) and 'First call'.

General	
^ Details	
Incident type	Planned outage ID
Predicted	—
	Work order ID
	—
Working Status	
Incident is waiting for clearance by Dispatcher	
Callback	
Automatic	
^ Fault Location	
Location source	
None specified	Verify fault
^ Timeline	
Start time	
14:22 04/10	
First call	

The following fields are shown on the General tab:

- **Details:**
 - **Incident Type:** Type of the incident.

- **Non-Outage Type:** Type of the non-outage incident. Applies to non-outage incidents.
- **Planned Outage ID:** ID of the associated planned outage.
- **Work Order ID:** The work order ID of the incident.

For planned incidents, the work order ID is inherited from the planned outage, if provided. For unplanned incidents, this field is initially empty.

- **Incident Working Status:** The working status of the incident.
- **Call Back:** The type of callback to customers (No, Manual, or Automatic).
- **Follow-Up Work Required:** Select this option if follow-up work is required.

- **Fault Location:**

- **Location Source:** Fault location source.

When the Fault Isolation and Service Restoration application places a fault, the fault location is set automatically. Alternatively, you can manually set the fault location by dragging an object (for example, a switch or fault symbol) from the geographic view to the Update Incident display.

- **Timeline:**

- **Start Time:** Incident start time. The start time is automatically set to the first call time, to the first AMI Power Out message time, or to the time when the device of record was opened.
- **First Call Time:** Timestamp of the first customer call.
- **End Time:** End time of the incident. The end time is automatically set to the time when the End Time for the last restoration step was set on the Restoration tab of the Update Incident display, when the SCADA device closed, when the WFM power restoration message was received, or when the AMI Power On message was received.

2.3.2.2. Facility Tab

The screenshot shows a software interface with a dark theme. At the top, there are four tabs: 'General', 'Facility' (which is selected and underlined), 'Customers', and 'Damage Assessment'. To the right of these tabs is a 'More' button with a downward arrow. Below the tabs, the 'Facility' section is expanded, showing three sub-sections: 'Device details', 'Operational state', and 'Location Details'. Each sub-section has a header with an upward arrow icon. The 'Device details' section contains three fields: 'Device Name' with the value '6-7608-2730-0-4', 'Description' with the value 'Distribution Transformer', and 'Phase' with the value 'B'. The 'Operational state' section contains two fields: 'Device position' with the value 'Open' and 'Voltage (kV) LG' with the value '7.62'. The 'Location Details' section contains two fields: 'Feeder' with the value 'F5868' and 'Substation' with the value 'ROYAL TROON'. A circular icon with a right-pointing arrow is located to the right of the 'Location Details' header.

General	Facility	Customers	Damage Assessment	More ▾
Device details				
Device Name 6-7608-2730-0-4				
Description Distribution Transformer				
Phase B				
Operational state				
Device position Open				
Voltage (kV) LG 7.62				
Location Details 				
Feeder F5868				
Substation ROYAL TROON				

The following fields are shown on the Facility tab:

- **Device Details:** Information about the device of record. Typically, the initially affected device is the device of record.
 - **Device Name:** Name of the device of record. This field is set to "Unknown Device" when there is no device of record (for example, for orders resulted from location calls).

- **Description:** The type of the device of record.
- **Phase:** Enumeration of failed phases (for example, ABC for three phases: A, B, C).
- **Operational State:**
 - **Device Position:** The current device status.
 - **Voltage:** The line-to-line voltage of the device in kV.
- **Location Details:**
 - **Feeder:** Feeder associated with device of record.
 - **Substation:** Substation associated with the device of record.
 - **Service Center:** The service center of the device associated with the incident. If no device is associated with the incident, this field shows the service center tied to customer who sent the first call.
 - **City:** The city of the device associated with the incident.

2.3.2.3. Customers Tab

General Facility **Customers** Damage Assessment More ▾

Calls 3 **High Priority** 2 **Critical** 0 **Informative** 1

Search

Pence Lilian T
9376 POPLAR CT
🚩 **Lights Out** 17:44 12/07 "No Comment"
405063NH ☐ Informative
555-585-8881 **PING IN PROGRESS**

Roger Wendy H
8114 MILL HWY
🚩 **None** 17:45 12/07 "Test comment"
352250HZ ☒ Informative
555-556-9225


Marshall Robyn F
8114 SAND W
🚩 **Lights Out** "No Comment"

The following fields are shown on the Customers tab:


- **Calls:** The total number of customer calls. Click this field to filter the affected customer list by customers that called.
- **High Priority:** The number of customer calls with high priority. Click this field to filter the affected customer list by customers that issued a priority call.
- **Critical:** The number of critical customers affected. Click this field to filter the affected customer

list by critical customers.

- **Informative:** The total number of calls with informative comments. Click this field to filter the affected customer list by customers that left an informative comment.
- **Search:** Filters the affected custom list by the entered text.
- **Customer Card:** Shows details for customers.
 - Customer name
 - Customer address
 - Outage trouble call conditions provided by the customer
 - Comment
 - Informative flag, which is by default set to true for calls with comments. Click to toggle the Informative flag for this call. The Informative field appears only for customers that have called.
 - Call time
 - Meter number (click the Locate icon at the left to navigate to the customer)
 - Callback number
 - Ping Status
 - Customer Options: Click to show options.
 - **Ping Meter:** Pings the customer's meter
 - **Request Callback:** Requests callback for the customer. This option is only available for customers associated with single customer or predicted incidents.

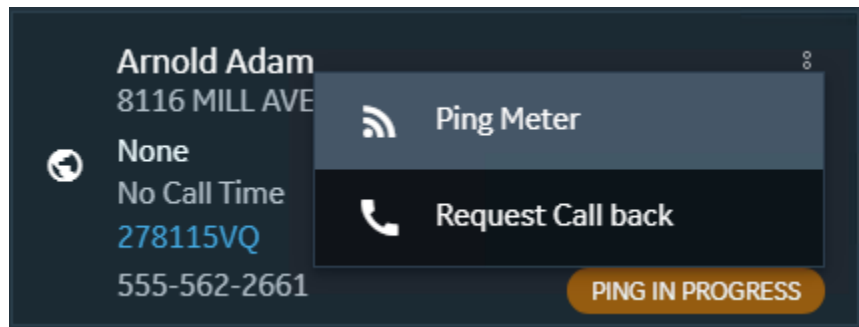

2.3.2.4. Meter Analysis Tab

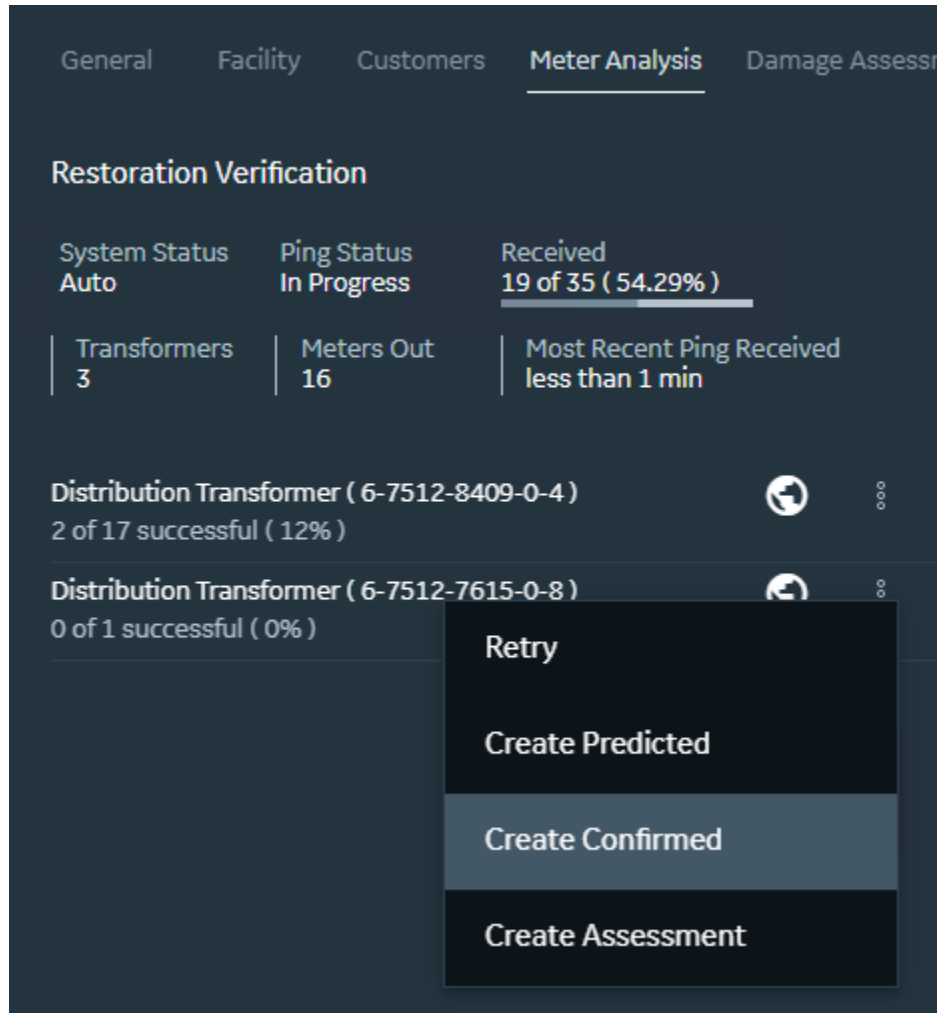

The Meter Analysis tab provides information about automated meter pingging that is carried out after an outage is restored. It shows the transformers affected by the outage that have meters that have not received a positive result. As positive results are received, transformers are removed from the list so that eventually the list contains transformers that may have nested outages affecting them. The side panel provides options to re-ping meters beneath a transformer or create new outages and orders to investigate them.

Note


Automated meter pingging is performed only when customers are energized following the OMS_MOMENTARY_OUTAGE_DURATION parameter in the NetServerOmsConfig_localhost.txt configuration file.

The following fields are shown on the Meter Analysis tab:

- **Restoration Verification:** Shows restoration summary for affected distribution transformers and customer meters.

- **System Status:** The ping setting for the order's area (Auto or Disabled Pinging).

When meter pinging in the order's area is disabled using an area setting (for example, due to a storm), the Meter Analysis tab does not provide data for meters and transformers.

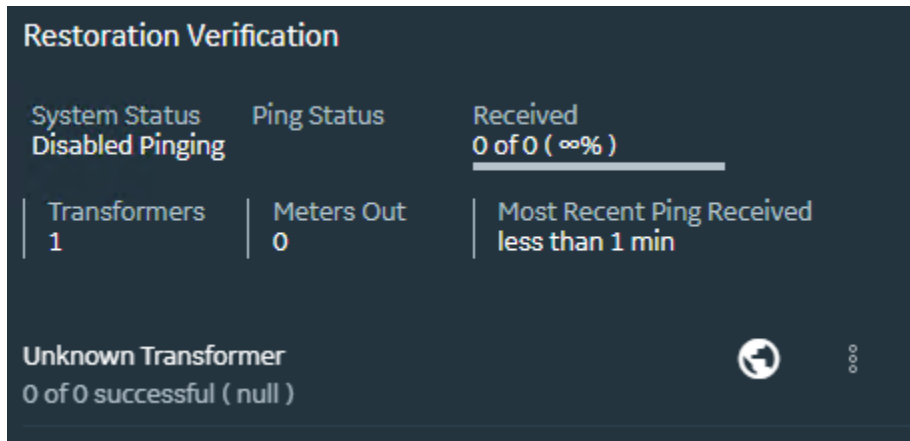

- **Ping Status:** The meter ping summary.
 - **Received:** Shows the number of meters with the AMI In response, the total number of meters, and the percentage of AMI In responses.
 - **Most Recent Ping Received:** Shows when the most recent ping result was received.
- **Transformers:** The number of affected transformers.
- **Meters Out:** The number of meters with the AMI Out response.
- **Distribution Transformers:** Shows ping summary for distribution transformers that are associated with currently deenergized meters.
 - **Name:** The name of the distribution transformer.
 - **Received:** Shows the number of meters with the AMI In response, the total number of meters, and the percentage of AMI In responses.
 - **Locate:** Navigates to the distribution transformer on the network view.
 - **Options:**
 - **Retry:** Sends a ping request to all meters except those with the AMI In response.
 - **Create Predicted:** Creates a predicted incident for the transformer.
 - **Create Confirmed:** Creates a confirmed incident for the transformer.
 - **Create Assessment:** Opens the Create Task dialog to create a maintenance task for the transformer.

2.3.2.5. Damage Assessment Tab

General Facility Customers **Damage Assessment** More ▾

< Location 1 > Add Component

Poles (Class 1, Wood)

— 1 + Repair

— 1 + Replace

Wires (Size 3/0, Aluminium)

— 3 + Replace

The Damage Assessment tab allows entering details needed to inform the material management team of the exact number and type of assets needed for repair. The damage asset summary is shown on the Damages tab (see [Damages Tab](#)).


The following fields are shown on the Damage Assessment tab.

- **Damage Assessment Location:** Selects one of the damage assessment locations that are associated with the related incident.


Note

When there is no damage assessment location associated with an incident, a default damage assessment location is created and assigned to the incident once the user adds a component.

- **Add Component:** Shows a picklist to select the required asset type and repair operation type.

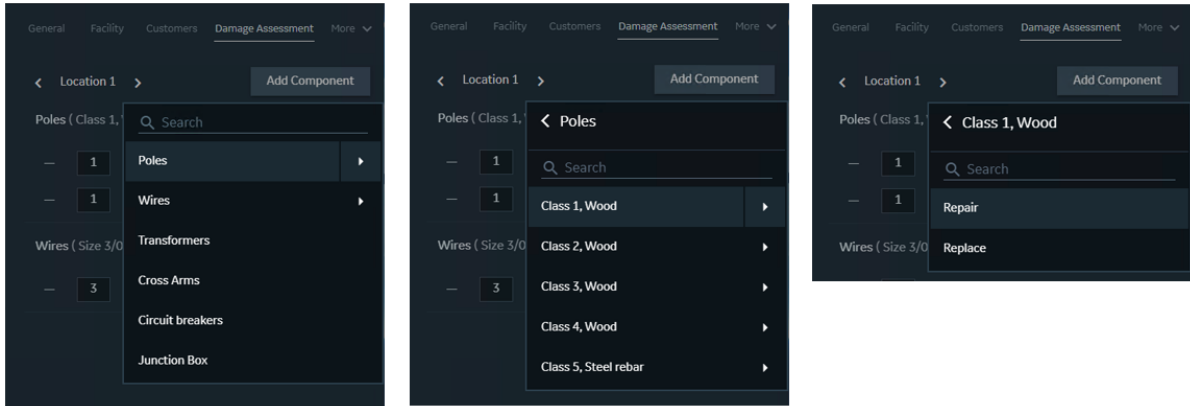

- **Asset Summary:** This section shows the asset type, quantity, and operation for the added assets. You can adjust the asset quantity and the required operation on the asset.
 - The Options button  at the right of the asset type opens a menu to remove the asset from the list or add another action type for the asset.

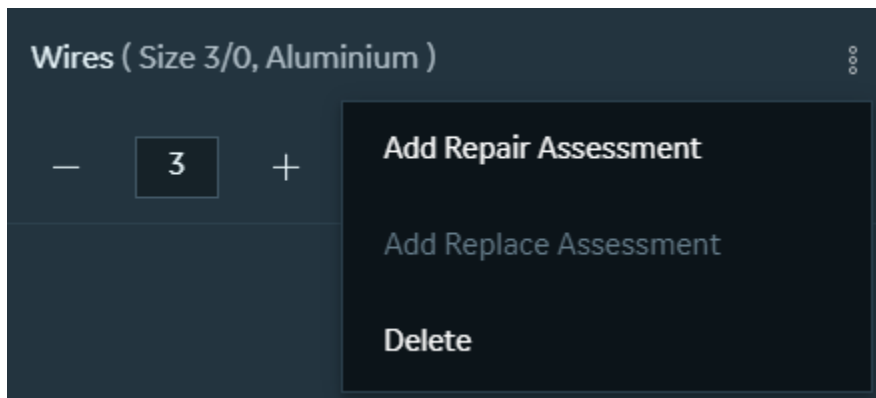

2.3.2.6. Related Tab

GeneralFacilityCustomersRelatedMore

Dependencies

3420000001-1
Restoration

Blocked

Suspended
Dispatch (Highlands)

3420000001-3
Maintenance

Blocking

In Progress
C-M (North)

Related

3420000001-1
Restoration

Suspended
Dispatch (Highlands)

3420000001-3
Maintenance

In Progress
C-M (North)

SWO_3420000001-2_1
Switching order

Standard
Executing


The following fields are shown on the Related tab:

- **Dependencies:** Shows the list of related orders that are blocked until the current order is completed or are blocking the completion of the current order.
 - **Name:** The name of the related order. Clicking this field opens the Order Worksheet display for the related order.
 - **Type:** The related order type.
 - **Status:** The related order status.
 - **Organization:** The related order organization.
 - **Owner:** The name of the user who owns the order.
- **Related:** Shows the list of all related orders (created using Create Follow-up or Create Related functions on the Order List context menu), along with Switch Order Requests that have been created from the current order.

Orders are shown with the same attributes as described above. Switch Order Requests are shown with the following fields:

- **Name:** The name of the related switching order/request. Clicking this field opens the related switching order in the Switching Order application.
- **Type:** The type is "Switching order".
- **Switch Order Type:** The type of switching order.
- **Status:** The status of the related switching order.

New Switch Order Requests can be made by clicking on the "+" icon on the right of the Related header.

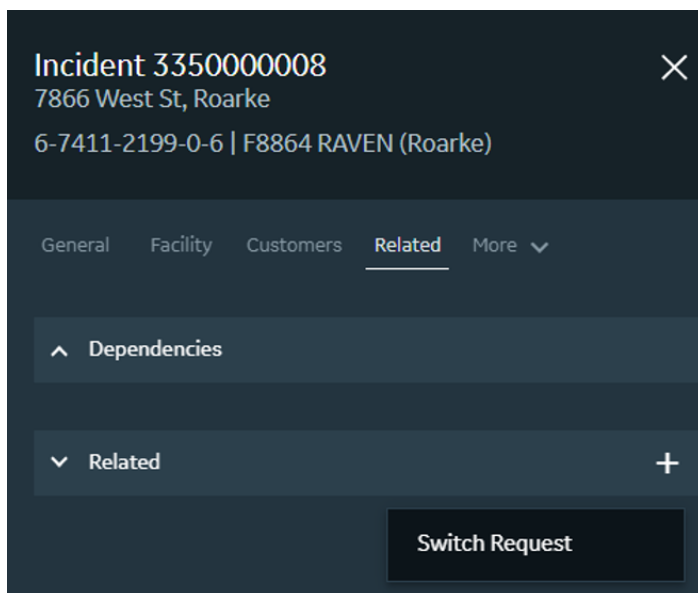

When you select the drop-down item to create a new Switch Order Request, the Switch Request dialog appears.

Switch Request [X]

Device of record
10762-26

Description*
Switching required to isolate between elbows 10762-20 and 10762-19.

Select crews available for the switching order
☒ Persons (1114) (LEAD) Arrived

☒ Suspend current order
 Suspended reason
 Waiting for Switching

☒ Transfer current order to another organization
 Organization type
 System Operations
 Organization
 SysOps (Highlands)

Cancel Create and edit request Create request

The following fields appear in the Switch Request dialog:

- **Device of record:** Shows the device of record for the incident associated with current order.
- **Description:** Allows entry of a textual description of the switching that is required. The description is mandatory.
- **Suspend current order:** If checked, allows the current order to be put into a suspended status while the required switching is performed.
 - **Suspended reason:** Allows a reason for the suspension of the current order to be recorded (only visible if the previous checkbox is selected).
- **Transfer current order to another organization:** If checked, allows the current order to be transferred to another organization.
 - **Organization type:** Allows an organization type to be selected prior to picking the specific organization to which the current order should be transferred (only visible if the previous


checkbox is checked).

- **Organization:** Allows the selection of the specific organization to which the current order should be transferred (only visible if the previous checkbox is checked). This field is populated automatically for geographic organizations.
- **Select crews available for the switching order:** Allows the selection of crews associated with the current order and who are available to carry out switching if necessary (only visible if there are crews that have arrived on site for the current order).
- **Create request:** Creates the switch order request and closes the dialog.
- **Create and edit request:** Creates the switch order request, closes the dialog, and opens the newly created request in the Switching Order application.

Upon selecting one of the Create options, a notification will be sent to DMS users who are currently logged in and have AOR coverage for the related device.

As the status of the requested switching order is updated, it is shown on the Related sub-tab.

2.3.2.7. Custom Fields Tab

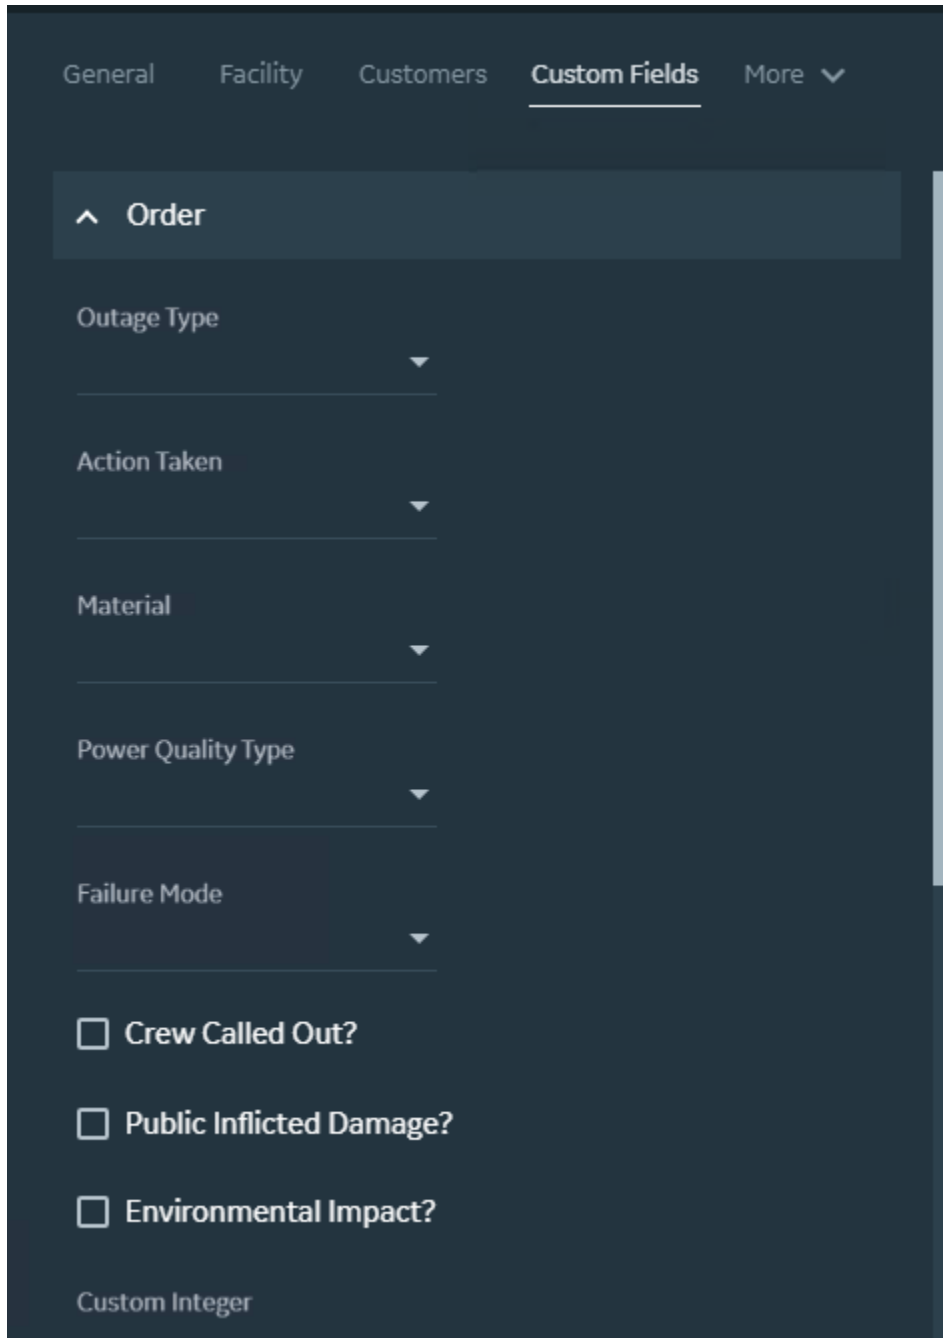

General Facility Customers **Custom Fields** More ▾

^ Order

Outage Type ▾

Action Taken ▾

Material ▾

Power Quality Type ▾

Failure Mode ▾

☐ Crew Called Out?

☐ Public Inflicted Damage?

☐ Environmental Impact?

Custom Integer

The Custom Fields tab shows order and incident custom fields as configured in the OMS Client Configuration Editor. By default, the following fields are shown on this tab:

- **Order Custom Fields:**
 - **Outage Type:** Type of the associated work (for example, Tree Trimming).
 - **Action Taken:** Select from the list the action taken by the crew.
 -

Material: Material or equipment that is affected by the incident.

- **Power Quality Type:** Power quality type (for example, Momentary Outages).
 - **Failure Mode:** Failure mode (for example, Tree Falls).
 - **Crew Call Out:** Select this option if the crew was called out.
 - **Public Inflicted Damage:** Select this option if the incident is inflicted by public.
 - **Environment Impact:** Select this option if the incident impacts the environment.
 - **Custom Integer:** Field to enter a custom integer value.
 - **Custom Text:** Field to enter a custom text value.
 - **Custom Time:** Field to enter a custom date and time.
- **Incident Custom Fields:**
 - **Pole Number:** The number of the pole that is associated with the incident.

2.3.2.8. Restoration Steps Tab

General Facility Customers **Restoration Steps** More ▾

Advanced

1	Customers	Critical (Momentary/All)
	4	0 / 0
	Deenergizing	Energizing
	Distribution Transformer	
	6-7608-2730-0-4	
	WSTC	
	ROYAL TROON	
	03:38 AM 11/17	

The following fields are shown on the Restoration Steps tab:

- **Advanced:** Opens the Restoration tab of the Incident Update display for the associated incident.

Order Worksheet '293000011-1': Advanced Settings - Currently locking the incident

Switching Restoration

Incident 293000013

Restoration

Failed Equipment [Add Failed Equipment From Map](#)

[Add](#)
[Update](#)
[Delete](#)

RestorationDetails

Step Number	Station Name	Device Name	Device Id	Serv Center	Phase	Time Off	Time On	# Cust	# Crit Cust	Mom Cnt	Closed Device Id
1	RAVEN	6-7512-...	17512093	3LIONS...	A	14:...		8	0	0	

[Refresh](#)

[Ok](#)
[Cancel](#)
[Apply](#)

- **Restoration Step Details:**

- **Step Number:** Restoration step number.
- **Affected Customers:** The number of customers affected by the step.
- **Critical Customers (Momentary):** Shows "1" for a momentary incident.
- **Critical Customers (All):** The total number of critical customers affected by the step.
- **De-Energizing/Energizing:** Details for energizing and de-energizing steps:
 - **Device Type:** Type of the device.
 - **Device Name:** The name of the device.
 - **Service Center:** Service center the device belongs to.
 - **Station Name:** The name of the associated station.
 - **Time:** Date and time when the customers were de-energized and energized.

2.3.2.9. Switching Steps Tab

GeneralFacilityCustomersSwitching StepsMore

Advanced

1

34384422

A B C

Switch

34384422 | F6462 SPYGLASS | STHA

Fuse

Open

Affected

1

Restored

0

ADMS (Operator)

04:06 AM 11/04

2

34384422

A B C

Switch

34384422 | F6462 SPYGLASS | STHA

Fuse

Close

Affected

0

Restored


1

DMSALL (Operator)

11:43 PM 11/04

The following fields are shown on the Switching Steps tab:

- **Advanced:** Opens the Switching tab of the Incident Update display for the associated incident.

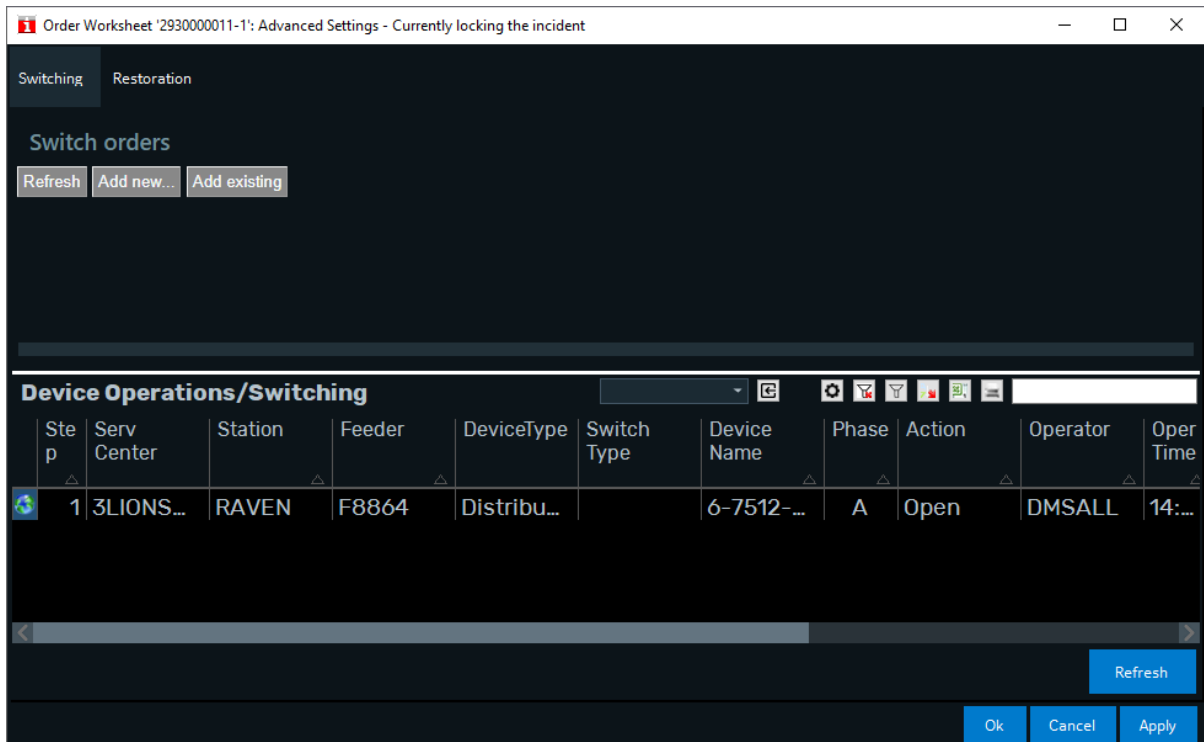

- **Switching Step Details:**

- **Step Number:** Switching step number.
- **Device Name:** The name of the device that was operated.
- **Device Phases:** Devices phases.
- **Device Type:** Type of the device.
- **Feeder:** The name of the nominal feeder of the device that was operated.
- **Station:** The name of the nominal substation of the device that was operated.
- **Service Center:** The name of the nominal service center the device of record belongs to.
- **Device Subtype:** The subtype of the device.
- **Action:** The action that was taken for this step.
- **Affected Customers:** The number of customers that were de-energized by this step.
- **Restored Customers:** The number of customers that were restored by this step.
- **User Name:** Name of the user who recorded this step.
- **Execution Time:** Date and time when the step was executed.

2.3.2.10. Chronology Tab

The screenshot shows the 'Chronology' tab selected in a navigation bar. The navigation bar includes 'General', 'Facility', 'Customers', 'Chronology', and 'More'. Below the navigation bar, there is a search bar with a magnifying glass icon and the text 'Search'. To the right of the search bar, there are three filters: 'Incident', 'Order', and 'Follow-up', each with a checked checkbox. Above the filter checkboxes is a button labeled 'Add log entry'. The main content area displays three log entries, each in a dark blue box. The first entry is 'INCU - 11:01 08/10' by 'ADMS', with the description 'Changed TOTALCUSTOMERSAFFECTED from "0" to "6"'. The second entry is 'TSK - 11:01 08/10' by 'ADMS', with the description 'Repair task created for Distribution Transformer - 6-7412-7420-0-9 on order 2220000159-1.'. The third entry is 'INCU - 11:01 08/10' by 'ADMS', with the description 'Changed LinkedOrderIds from " --- " to "h6dhd4f13 1300 4020 0h05"'. A vertical scrollbar is visible on the right side of the log entries.

The following fields are shown on the Chronology tab:

- **Add log entry button:** Use this button to add a new user comment as a Chronology Log entry.

- **Search:** Use this field to filter chronology messages by the entered value.
- **Filters:**
 - **Incident:** Toggles showing chronology messages for the incident that is associated with the order.
 - **Order:** Toggles showing chronology messages for the order.
 - **Follow-up:** Toggles showing chronology messages for the follow-up orders.
- **Chronology Message:** Each message contains the message type, date and time, username, and message details.

Chronology log messages are classified by type:

- **ORD:** System order actions, such as order creation, status change, or update.
- **ORDC:** Crew assignment, unassignment, or status changes.
- **TSK:** Creating or updating order tasks.
- **TSKC:** Assigning order tasks.
- **INCL:** System incident actions, such as incident creation, splitting, merging, clearance, and changes to the last open device.
- **INCU:** Incident update actions. Operator actions from the Update Incident window, and automatic changes such as incident and crew status changes and changes to the Case Note and ETR.
- **CREW:** Crew status changes and actions, such as dispatching and de-assigning crews.
- **EVAL:** Evaluator crew status changes and actions, such as dispatching evaluators.
- **REST:** Actions that are related to switching and restoration steps.
- **PLNO:** Planned outage creation and deletion actions.
- **SWO:** Actions that were performed from the Switching Order or Daily Log interface if the Auto-Complete non-SCADA Steps from RT Mode option is selected in the Switching Order Configuration Editor.

For more information, refer to the *Switching Order Configuration Editor User Guide*.

- **DMGA:** Actions that are related to creating and updating damage assessment location reports.

The available users are:

- **Current User/ADMS:** The currently logged in user is used for operator and system actions, however in some cases the ADMS name is used instead.
- **Work Force Management:** Used for actions that were performed via the Workforce Management System, such as the status change of a crew with MDT.


In the log messages, field names are dependent on the entry that is changed automatically by the system or by operator from the Order Worksheet (or Update Incident) display. For example, an entry with the CURRENTCUSTOMER field name will appear in the log when the number of currently affected customers is updated for the associated incident.

To add a log entry:

1. Click the "Add log entry" button.


The following dialog is displayed.

2. Select the time and date related to the comment from the Time and Date field.
3. Type the comment in the text box.

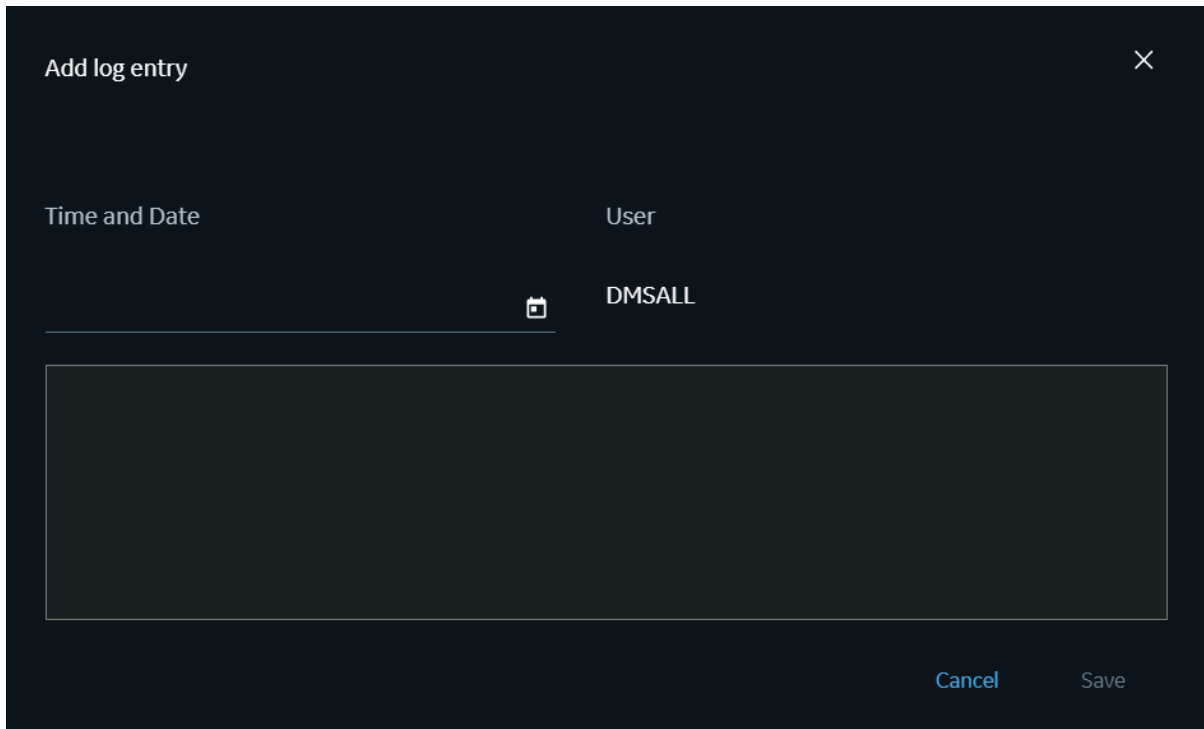The image shows a dark-themed dialog box titled "Add log entry" with a close button (X) in the top right corner. Inside the dialog, there are two main sections. The first section is labeled "Time and Date" and contains a date picker icon (a calendar) and a text field. The second section is labeled "User" and contains the text "DMSALL". Below these sections is a large, empty text box for entering a comment. At the bottom right of the dialog, there are two buttons: "Cancel" and "Save".

4. Click Save.

The comment will become another entry in the Chronology Log.

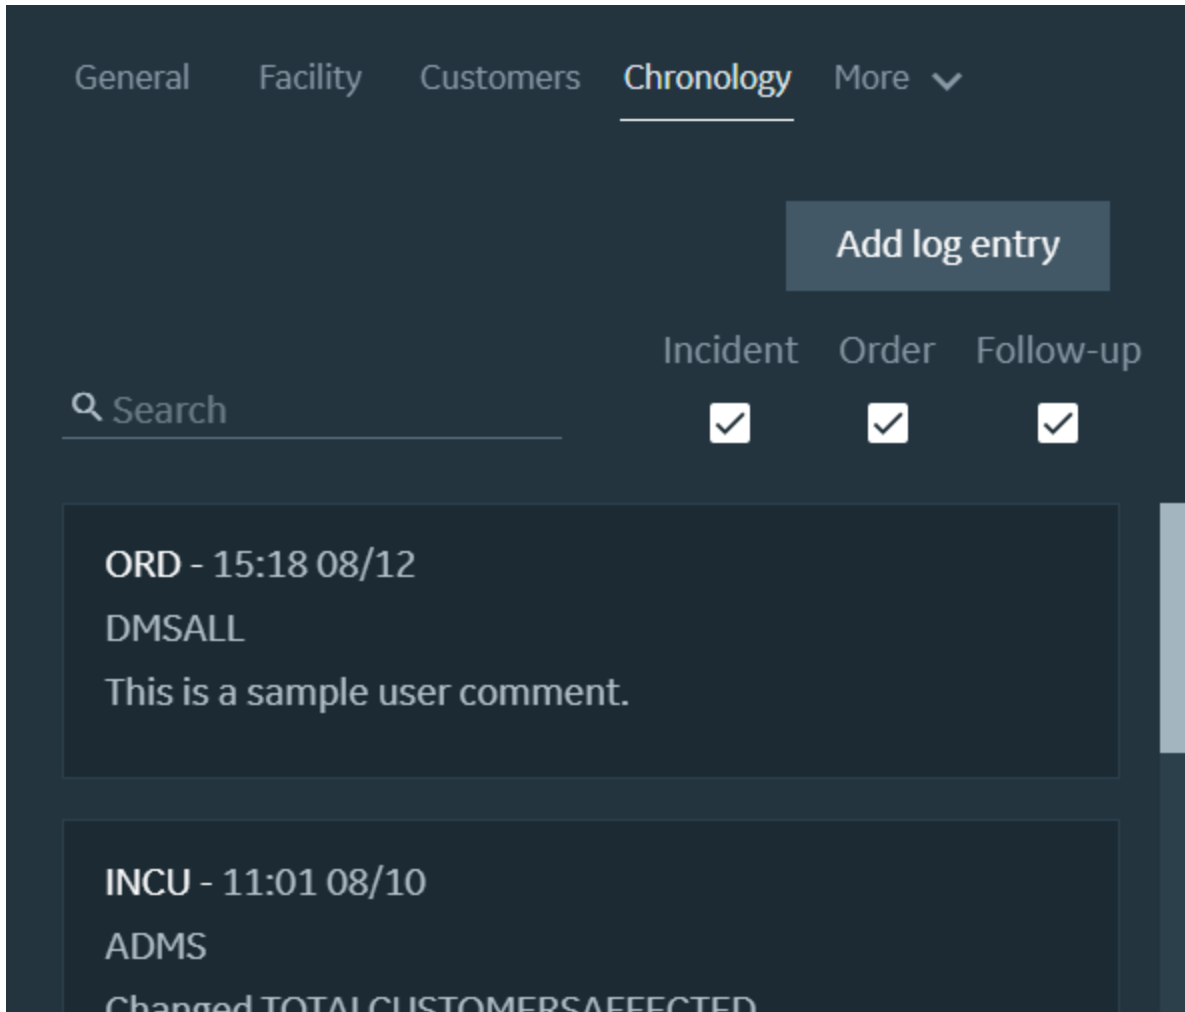

2.4. Data Correction

You can use the Data Correction display to edit properties of closed and cancelled orders. This display can be accessed from the Data Correction tab context menu.

2.4.1. Order Tab

Instructions

Crew Times

Crew	Assigned	Dispatched	En Route	Arrived	Released
Dodge (1101)	08/17/2022 12:06 PM	08/17/2022 12:08 PM	08/17/2022 12:08 PM	08/17/2022 12:08 PM	08/17/2022

Custom Fields

Custom Type 1	Custom Type 2	Custom Type 3	Custom Type 4	Custom Type 5	Custom Type 6
Outage WO - Immediate	Replaced Xfmr	Transformer	None	None	None
Custom Type 3	Custom Type 4	Custom Type 5	Custom Type 6	Custom Type 7	Custom Type 8
None	None	None	None	None	None
Custom Checkbox 1	Custom Checkbox 2	Custom Checkbox 3	Custom Checkbox 4	Custom Checkbox 5	Custom Checkbox 6
☐	☐	☐	☐	☐	☐
Custom Integer	Custom Integer	Custom Integer	Custom Integer	Custom Integer	Custom Integer
Custom Time	Custom Time	Custom Time	Custom Time	Custom Time	Custom Time
mm/dd/yyyy	mm/dd/yyyy	mm/dd/yyyy	mm/dd/yyyy	mm/dd/yyyy	mm/dd/yyyy

Calendar: August 2022

Buttons: Cancel Incident, Ok, Cancel, Apply

Figure 13. Data Correction Display - Order Tab

The following fields are shown on the Order tab of the Data Correction display:

- **Instructions:** Free-form instructions for the order.
- **Crew Times:** Crew activity for the order.
 - **Crew:** The name of the crew.
 - **Assigned:** Date and time when the crew was assigned.
 - **Dispatched:** Date and time when the crew was communicated details of the order.
 - **En Route:** Date and time when the crew started en route to the order.
 - **Arrived:** Date and time when the crew arrived at the order location.
 - **Released:** Date and time when the crew was released from the order after completion.
- **Custom Fields:** Order and incident custom fields. For more details, see [Custom Fields Tab](#).
- **Buttons:**
 - **Cancel Incident:** Cancels the associated incident. Appears for orders that are associated with cleared incidents.
 - **Undo Cancel:** Undoes cancelling the associated incident. Appears for orders that are associated with canceled incidents.
 - **OK:** Click to validate and apply the changes and close the Data Correction display. A chronology record is created.

- **Cancel:** Click to discard your changes to the Data Correction values.
- **Apply:** Click to apply the changes without closing the Data Correction display.

These buttons are common for all tabs of the Update Incident window.

2.4.2. Incident Tab

The screenshot shows the 'Incident' tab of the 'Data Correction: 325000002-1' window. The interface is divided into several sections: 'Summary' on the left, 'Damage Assessment' in the middle, and 'Cause' on the right. The 'Summary' section includes fields for Duration (1), Calls (1), Priority Calls (0), CMI (1), Start Time (11/21/2021 09:19 AM), First Call Time (Sunday, November 21, 2021 9:19 AM), and End Time (11/21/2021 09:21 AM). Below these is a 'Device' section with fields for Name (SP_17512827), ID (SP_17512827), Type (Service Point), City (Roarke), Service Center (3LIONSSC), Substation (RAVEN), Feeder (F8864), and Phase (B). The 'Damage Assessment' section includes fields for Pole(s) Down, Conductor Span, Transform(s) Down, Services, Cross Arms, Tree Trim Spans, Department, Reason, Approved By, Fault Location (None specified), Distribution Location Number (0), Fault Longitude (0), and Fault Latitude (0). The 'Cause' section includes dropdowns for Cause (No Reason Assigned), Sub Cause (No Reason Assigned), System Contributing (None), and Contributing Cause (No Reason Assigned), along with an Approved Date field (mm/dd/yyyy). There are also checkboxes for Follow Up Work Required, Inaccessible, Midpoint Switching, Wasted Trip, and Public Inflicted Damage. A KVA Served field (0) and a KVA Interrupted field (0) are also present. At the bottom, there is a 'Comments' section with a Remarks dropdown (None) and a Dispatcher Comments text area. Navigation buttons (Cancel Incident, Ok, Cancel, Apply) are located at the bottom right.

Figure 14. Data Correction Display - Incident Tab

The following inputs and parameters are shown on the Properties tab of the Data Correction display:

- **Summary:**
 - **Duration:** The number of minutes until the incident was cleared or cancelled.
 - **Calls:** Number of customer calls.
 - **Priority Calls:** Number of high priority calls.
 - **CMI:** Counter of Customer Minutes Interrupted.
 - **Start Time:** Incident start time. The start time is automatically set to the first call time, to the first AMI Power Out message time, or to the time when the device of record was open.
 - **First Call Time:** Timestamp of the first customer call.
 - **End Time:** End time of the incident.

The end time is automatically set to the time when the End Time for the last restoration step

was set on the Restoration tab, when the SCADA device closed, when the WFM power restoration message was received, or when the AMI Power On message was received.

For incidents with restoration steps, the End Time field is not editable. For incidents without restoration steps, you can manually set the end time.

- **Event of Interest:** A flag to mark an event of interest (for example, an outage related to an important customer). This option is used to filter events of interest in Archive.
- **Device:** Information about the device of record. Typically, the initially affected device is the device of record. When you select an incident on the network view, a magenta square appears around the initially affected device. You can manually specify the device of record on the Switching tab. You can navigate to the device by clicking the Device field.
 - **Name:** Name of the device of record.
 - **ID:** ID of the device of record.
 - **Device Type:** The type of the device of record.
 - **Service Center:** The service center of the device associated with the incident. If no device is associated with the incident, this field shows the service center tied to the first call.
 - **Substation:** Station associated with outage.
 - **Feeder:** Feeder associated with outage.
 - **Phase:** Enumeration of failed phases (for example, ABC for three phases: A, B, C).
- **Damage Assessment:** This section is populated automatically from the Workforce Management System, or manually by the operator.
 - **Poles Down:** Count of damaged poles.
 - **Conductor Span:** Count of spans of wire required.
 - **Transformers Down:** Count of damaged transformers.
 - **Services:** Count of services down.
 - **Cross Arms:** Count of cross arms down.
 - **Tree Trim Spans:** The number of tree trim spans required.
 - **Department:** The department of the user who performs the correction.
 - **Reason:** Reason for the correction.
 - **Approved By:** The name of the user who approved the correction.
 - **Distribution Location Number:** The distribution location number.
 - **Fault Longitude/Latitude:** The coordinates of the fault.
- **Comments:**
 - **Remarks:** Remarks about the incident.
 - **Dispatcher Comments:** Dispatcher comments about the incident.
- **Cause:**

- **Cause:** Cause for the incident.
- **Sub-Cause:** Sub-cause for the incident.
- **System Contributing:** Indicates the contributing system type. This option is hidden by default.
- **Contributing Cause:** Indicates the contributing cause. This option is hidden by default.
- **Approved Date:** Date and time when the correction was approved.
- **Follow-Up Work Required:** Select this option if follow-up work is required. A record is created in the database. This option is automatically set when a follow-up work order is created for an incident. This option is automatically cleared when all follow-up work orders that are associated with the incident are removed.

All cleared and cancelled incidents that have this option selected are shown on the Follow-Up Required tab.

- **Inaccessible:** Select this option to indicate restricted field access to the outage area.
- **Wasted Trip:** Select this option if the incident is not company responsibility.
- **Midpoint Switching:** Select this option if midpoint switching is needed.
- **Public Inflicted Damage:** Select this option if the incident is inflicted by public.
- **KVA Served:** Total apparent power served, in kVA.
- **KVA Interrupted:** Total apparent power interrupted, in kVA.
- **Switching Orders:** Names of the associated switching orders.

Note

The Incident tab is implemented as an HTML page. You can customize its layout and fields as needed.

• **Buttons**

- **Clear Incident:** Click this button to start the validation process. If no errors are found, the Clear Incident dialog box appears. If any errors are found, the clearing process opens a validation log with messages prompting you for actions.
- **Cancel Incident:** Opens the Cancel Incident dialog box to cancel the incident.
- **Acquire Lock:** Locks the incident for all other users and enables editing.
- **OK:** Click to validate and apply the changes and close the Update Incident display. A chronology record is created.
- **Cancel:** Click to discard your changes to the Update Incident values.
- **Apply:** Click to apply the changes without closing the Update Incident display.

These buttons are common for all tabs of the Update Incident window.

Note

The Service Center, Feeder, Device ID, Device Type, and Phase fields are pre-populated with the information from the device related to the original incident.

2.4.3. Customers Tab

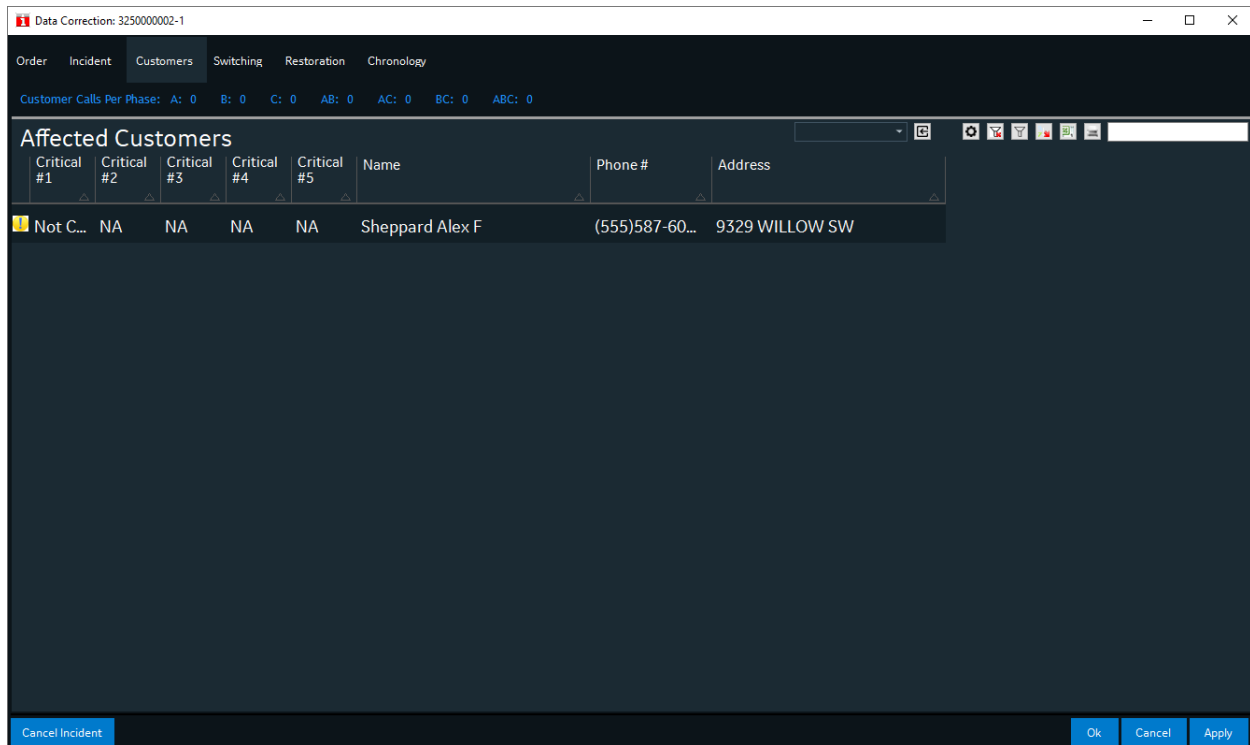


Figure 15. Data Correction Display - Customers Tab

The following customer call phasing information is available on this tab:

- **Customer Calls per Phase A/B/C/AB/BC/AC/ABC:** The number of customer calls per phase.

The following information is shown on the Affected Customers grid:

- **Critical #1:** Description of the critical type 1 customer (for example, Not Critical).
- **Critical #2:** Description of the critical type 2 customer (for example, Water Supply).
- **Critical #3:** Description of the critical type 3 customer (for example, Intermediate Care Facilities).
- **Critical #4:** Description of the critical type 4 customer (for example, Life Support).
- **Critical #5:** Description of the critical type 5 customer (for example, N/A).
- **Name:** Full name of the customer.
- **Phone #:** Phone number of the customer.
- **Address:** Address of the customer.

2.4.3.1. Customers Tab Menu

Right-click a customer in the Customers Details section to open the context menu.




Figure 16. Customer Tab Context Menu

The Customers Tab context menu contains the following option:

- **Remove Customer:** Removes the customer from the incident.

i

Note

To remove multiple customers from an incident, select the desired customers, right-click and then select Remove Customers.

2.4.4. Switching Tab

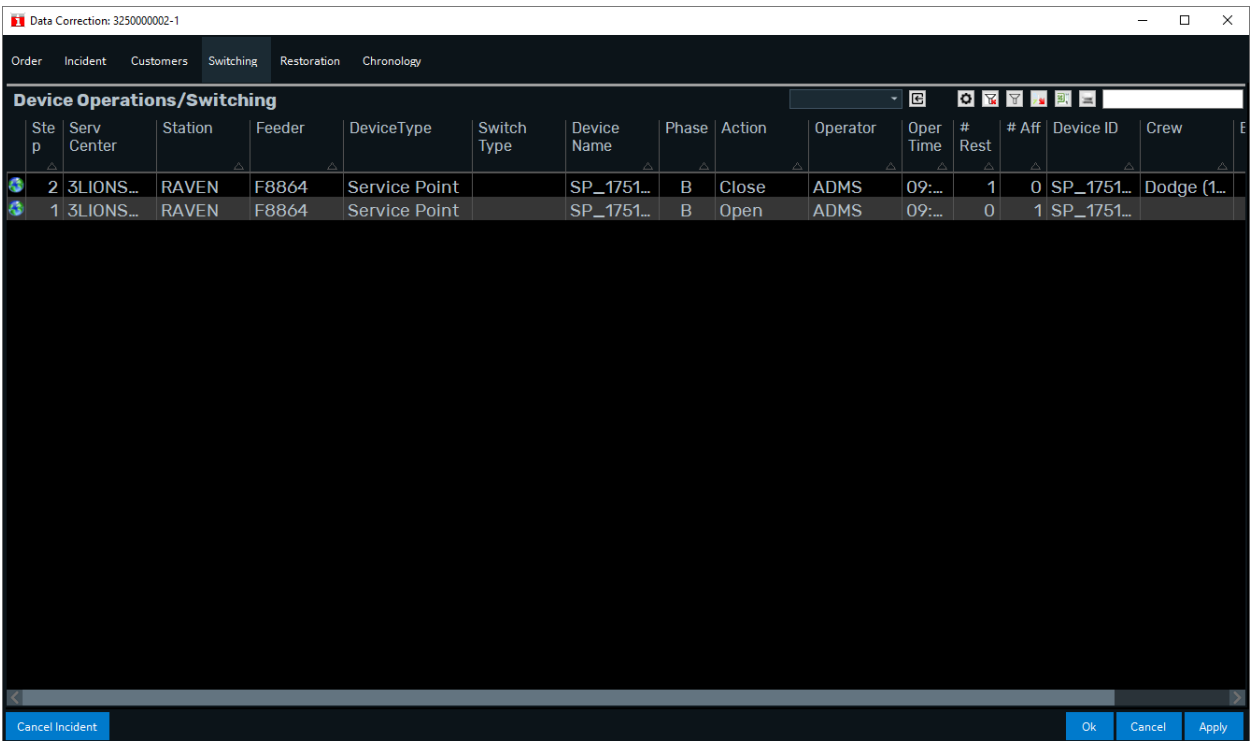


Figure 17. Data Correction Display - Order Tab

The following information is shown in the Device Operations/Switching grid:

- **Go to Geographic:** Opens the geographic network view in a separate viewport and locates the operated device.
- **Step:** Step count.
-

Service Center: The name of the service center the device of record dynamically belongs to.

- **Station:** The name of the energizing substation of the device of record.
- **Feeder:** The name of the energizing feeder of the device of record.
- **Device Type:** Type of the device.
- **Switch Type:** Type of the switch.
- **Device Name:** The name of the device.
- **Phase:** Enumeration of equipment phases (ABC for three phases: A, B, C).
- **Action:** Shows the action that was taken for this step.
- **Operator:** The name of the operator who performed the action.
- **Operation Time:** Date and time when the action was performed.
- **# Restored:** Number of customers restored by this step.
- **# Affected:** Number of customers affected by this step.
- **Device ID:** The unique identification number of the device.
- **Crew:** Name of the crew that performed the step.
- **Event ID:** The unique identifier of the associated DNAF plan (applies to incidents that were created or modified after the FISR or FSD plan execution).

Note

The Device Operations/Switching section grid lists all switching steps that are associated with the Fault Isolation and Service Restoration (FISR) or Faulted Section Determination (FSD) plan whose execution originated or modified the incident.

2.4.4.1. Switching Tab Menu

Right-click a switching step to open the context menu. The context menu contains the following options:

- **Go to Device:** Navigates to the device on the network view.
- **Set as Device of Record:** When an incident includes several devices, use this option to change the primary device of the incident. Changing the device of record also updates the device parameters on the Properties tab of the Update Incident window.

2.4.5. Restoration Tab

Data Correction: 3250000002-1

Order Incident Customers Switching **Restoration** Chronology

Outage Type: **Transformer** Power Quality Type: **None**

Action Taken: **Replaced Xfmr** Non-Outage Type: **Outage**

Material: **Transformer** Weather: **Calm**

Clear Time: **11/21/2021 9:23:59 AM** Failure Mode: **None**

Operator: **DMSALL** Manufacturer: **GE**

Work Order Id: Work Queues: **UG**

Failed Equipment **Add Failed Equipment From Map**

Restoration Steps

Modified	Step Number	Station Name	Device Name	Device Id	De-energized Time	Closed Device Id	Closed Device Name	Energized Time	Number of Customers	Momentary Count
No	1	RAVEN	SP_1751...	SP_1751...	11/21/2021 9:19:59 ...	SP_1751...	SP_1751...	11/21/2021 9:21:18 ...	1	1

Cancel Incident Ok Cancel Apply

Figure 18. Data Correction Display - Restoration Tab

Use the Restoration tab to manage restoration details.

- The Restoration Properties section contains properties to define incident type, restoration action taken, and incident completion codes.
- The Restoration Details section lists estimated or implemented switching steps to restore the outage. In addition, it provides de-energization and energization details. This section also includes restoration steps for area settings with the Exclude CMI flag set to True.

The following information is shown in the Restoration Properties section:

- **Outage Type:** Select the type of outage from the list.
When the Outage Type is Customer Trouble or Transmission, the Exclude CMI flag is set for the incident to exclude this outage from distribution statistics (reliability index calculations).
- **Action Taken:** Select the action taken by the crew from the list.
- **Material:** Material that is affected by the incident.
- **Clear Time:** Date and time when the incident was cleared.
- **Operator:** The name of the user who cleared the incident.
- **Work Order ID:** The work order ID, as generated by a third-party planning system.
- **Incident Completion Codes:** Incident resolution fields, including Power Quality Type, Non-Outage Type, Weather, Failure Mode, Manufacturer, and Work Queues.

Power Quality Type:	None	▼
Non-Outage Type:	Outage	▼
Weather:	Calm	▼
Failure Mode:	None	▼
Manufacturer:	None	▼
Work Queues:	None	▼

The resolution field items are configured in the Coded Translation Editor. For more information, refer to the *Coded Translation Editor User Guide*.

- **Failed Equipment:** Details for devices affected by the incident.

Failed Equipment
Add Failed Equipment From Map

11-12-2020 6:36 AM - DISTRIBUTION TRANSFORMER(17465897) - 7660 WEST ST RAVEN
11-12-2020 6:37 AM - MANUAL ENTRY

11-12-2020 6:36 AM - DISTRIBUTION TRANSFORMER(17465897) - 7660 WEST ST RAVEN
Add
Update
Delete

- **Add from the Network View:** Click to add details for devices that are marked with mark type 3 on the network view to the failed equipment text box.
- **Add:** Click to add free-form text to the failed equipment text box.
- **Update:** Click to update the selected entry in the failed equipment text box.
- **Remove:** Click to remove the selected entry from the failed equipment text box.



Tip

Use the Mark as Failed Equipment device right-click menu option or Shift+click combination to mark devices with mark type 3 on the network view.

The following information is shown in the Restoration Steps grid:

- **Modified:** Indicates whether the step was modified.
- **Step Number:** Operations/switching step number.
- **Station Name:** The name of the associated station.
- **Device Name:** The name of the device.
- **Device ID:** Identification number of the device.
- **Service Center:** Service center the device belongs to.
- **Phase:** Enumeration of equipment phases (ABC for three phases: A, B, C).
- **De-energized Time:** Outage duration, in minutes.

- **Energized Time:** Time period since the device was restored, in minutes. By default, it is sorted in descending order.
- **# Customers:** When the energized time appears in the field, Number of Customers indicates the customers restored by the step.
- **# Critical Customers:** Number of critical customers affected by the step.
- **Momentary Count:** Count of momentary outages.

The momentary count is set anytime the incident duration (time between the de-energization and energization events) is less than the configured momentary incident duration. For an incident that includes multiple momentary outages that have the same device of record, the momentary counts are merged before the incident is cleared by the system.

- **Exclude from CMI:** Specifies whether the restoration step is excluded from order reliability index calculations (for example, CMI and SAIDI).
- **Customer Count By Feeder:** Specifies the total number of customers affected grouped by feeder. The count will sum to the total number of customers impacted under a restoration step.

2.4.5.1. Restoration Tab Menu

Right-click a restoration step in the Restoration Details section to open the context menu.

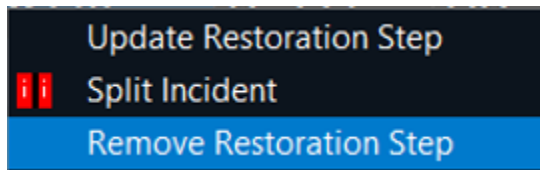


Figure 19. Restoration Tab Context Menu

The Restoration Tab context menu contains the following options:

- **Split Incident:** Splits this device to a separate incident.

Note

If the **Enable Device Of Record On Split Incident** option is checked in the OMS Client configuration editor, selecting Split Incident will display the Device of Record pop-up.

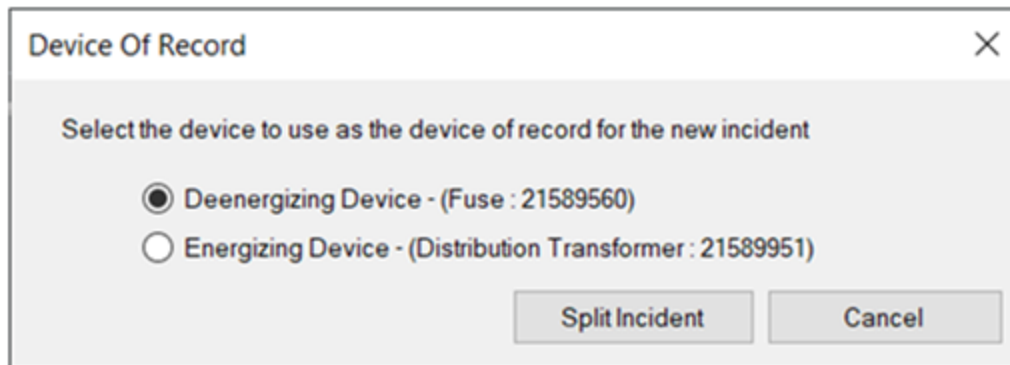


Figure 20. Device of Record for Split Incident

Note

When an incident is split, the switching steps that are associated with the selected restoration step are moved to the new incident.

- **Remove Restoration Step:** Removes the selected restoration step that gets splits and uses the device of record to a separate cancelled incident.

Note

The switching steps that are associated with the selected restoration step are copied to the new incident.
CMI for the cancelled incident is zero and restoration step have its "exclude from CMI" flag set.


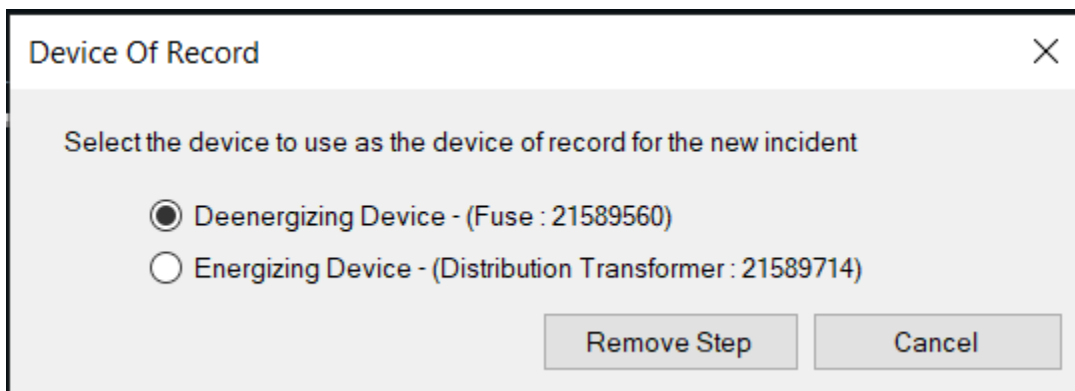


Figure 21. Device of Record for Remove Step

- **Update Restoration Step:** Opens the Update Restoration Step window, where you can modify the restoration step's start and end time and exclude the restoration step from the Archive statistics.

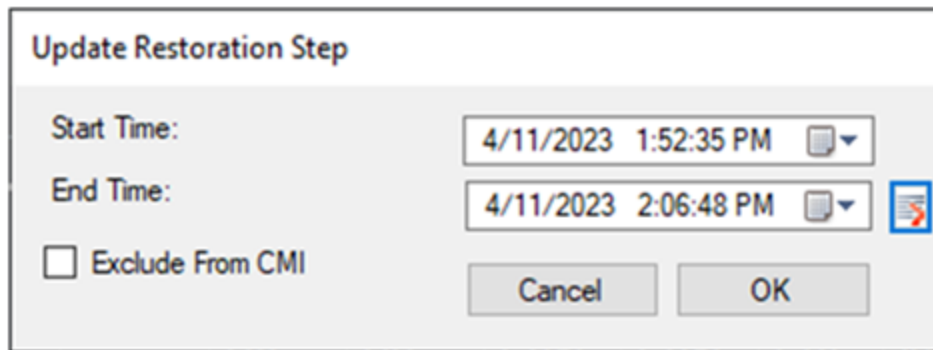

Update Restoration Step

Start Time: 4/11/2023 1:52:35 PM

End Time: 4/11/2023 2:06:48 PM

☐ Exclude From CMI


Cancel OK

- **Cancel Restoration Step (Exclude CMI):** Specifies whether the restoration step is excluded from order reliability index calculations (for example, CMI and SAIDI).
- **Start Time:** Updates the De-Energized Time value.
- **End Time:** Updates the Energized Time. If this time is after the End Time on the Properties tab, the End Time is updated accordingly.
- **Clear End Time Button:** Clicking the button next to the end time removes the end time of this restoration step.

Note

The updated time stamp for the selected restoration step also updates the associated switching step operation time.

2.4.6. Chronology Tab

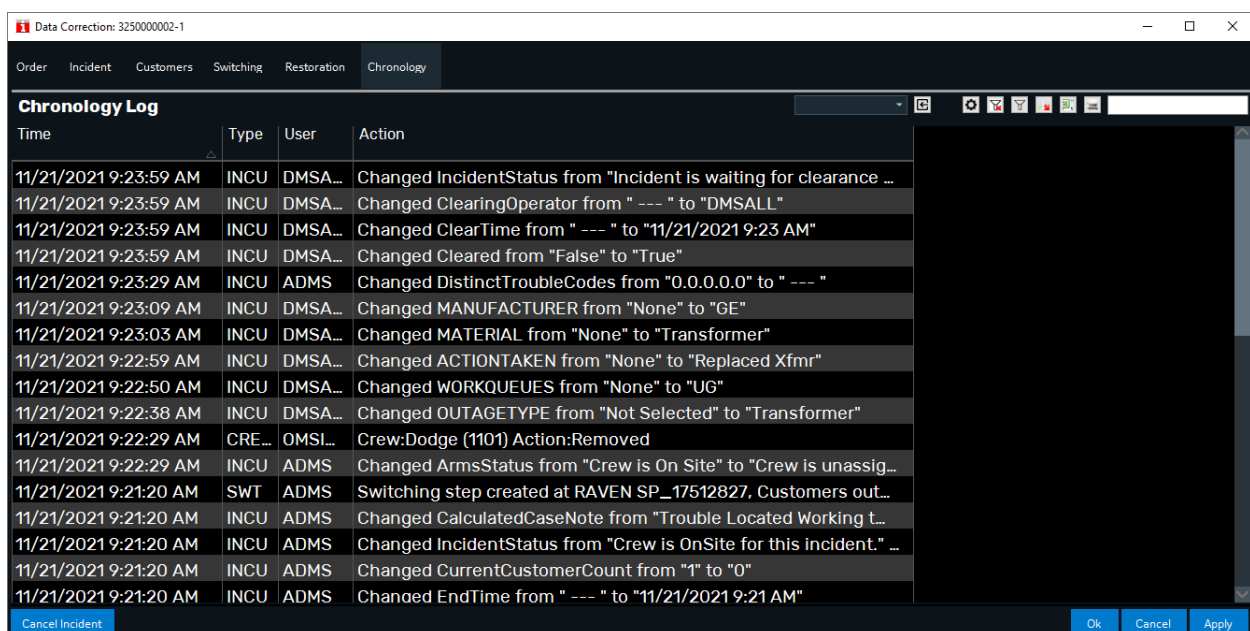

Data Correction: 325000002-1

Order Incident Customers Switching Restoration Chronology

Chronology Log

Time	Type	User	Action
11/21/2021 9:23:59 AM	INCU	DMSA...	Changed IncidentStatus from "Incident is waiting for clearance ...
11/21/2021 9:23:59 AM	INCU	DMSA...	Changed ClearingOperator from " --- " to "DMSALL"
11/21/2021 9:23:59 AM	INCU	DMSA...	Changed ClearTime from " --- " to "11/21/2021 9:23 AM"
11/21/2021 9:23:59 AM	INCU	DMSA...	Changed Cleared from "False" to "True"
11/21/2021 9:23:29 AM	INCU	ADMS	Changed DistinctTroubleCodes from "0.0.0.0.0" to " --- "
11/21/2021 9:23:09 AM	INCU	DMSA...	Changed MANUFACTURER from "None" to "GE"
11/21/2021 9:23:03 AM	INCU	DMSA...	Changed MATERIAL from "None" to "Transformer"
11/21/2021 9:22:59 AM	INCU	DMSA...	Changed ACTIONTAKEN from "None" to "Replaced Xfmr"
11/21/2021 9:22:50 AM	INCU	DMSA...	Changed WORKQUEUES from "None" to "UG"
11/21/2021 9:22:38 AM	INCU	DMSA...	Changed OUTAGETYPE from "Not Selected" to "Transformer"
11/21/2021 9:22:29 AM	CRE...	OMSL...	Crew:Dodge (1101) Action:Removed
11/21/2021 9:22:29 AM	INCU	ADMS	Changed ArmsStatus from "Crew is On Site" to "Crew is unassig...
11/21/2021 9:21:20 AM	SWT	ADMS	Switching step created at RAVEN SP_17512827, Customers out...
11/21/2021 9:21:20 AM	INCU	ADMS	Changed CalculatedCaseNote from "Trouble Located Working t...
11/21/2021 9:21:20 AM	INCU	ADMS	Changed IncidentStatus from "Crew is OnSite for this incident." ...
11/21/2021 9:21:20 AM	INCU	ADMS	Changed CurrentCustomerCount from "1" to "0"
11/21/2021 9:21:20 AM	INCU	ADMS	Changed EndTime from " --- " to "11/21/2021 9:21 AM"

Cancel Incident Ok Cancel Apply

Figure 22. Data Correction Display - Chronology Tab

The following information is shown in the Device Operations/Switching grid:

- **Time:** Date and time of the chronology entry.
- **Type:** Chronology entry type, which can be one of the following:
 - **INCL:** System incident actions, such as incident creation, splitting, merging, clearance, and changes to the last open device.
 - **INCUI:** Incident update actions. Operator actions from the Update Incident window, and automatic changes such as incident and crew status changes and changes to the Case Note and ETR.
 - **CREW:** Crew status changes and actions, such as dispatching and de-assigning crews.
 - **EVAL:** Evaluator crew status changes and actions, such as dispatching evaluators.
 - **REST:** Actions that are related to switching and restoration steps.
 - **PLNO:** Planned outage creation and deletion actions.
 - **SWO:** Actions that were performed from the Switching Order or Daily Log interface if the Auto-Complete non-SCADA Steps from RT Mode option is selected in the Switching Order Configuration Editor (refer to the *Switching Order Configuration Editor User Guide*).
 - **DMGA:** Actions that are related to creating and updating damage assessment location reports.
- **User:** The name of the user who initiated the associated action. The available users are:
 - **Current User/ADMS:** Currently logged in user is used for operator and system actions, however in some cases the ADMS name is used instead.
 - **Work Force Management:** Used for actions that were performed via the Workforce Management System, such as status change of a crew with MDT.
- **Action:** Shows the incident field name and value that changed.

2.5. Damages Tab

The Damages tab provides damaged asset details for the associated damage assessment locations as entered on the Damage Assessment tab on the Order Worksheet side panel. To access the tab, click **Damages** on the OMS Control Panel.

Damage Id	Damage Assessment Location Id	Asset Type	Asset SubType	Quantity	Description	Incident Id
4e444474-8a80-4cba-...	355fbc0-bd39-4dc6-a53c-5...	Poles	Class 1, ...	1	Replace	f2dfcdb0-70e1-4dd4-
4d8794b4-062c-4711-...	355fbc0-bd39-4dc6-a53c-5...	Poles	Class 1, ...	1	Repair	f2dfcdb0-70e1-4dd4-
bd5df273-c881-4b51-...	355fbc0-bd39-4dc6-a53c-5...	Wires	Size 3/0, ...	1	Replace	f2dfcdb0-70e1-4dd4-

Figure 23. Damages Tab

The following information is shown on the Damages tab:

- **Damage ID:** Damage ID.
- **Damage Assessment Location ID:** ID of the associated damage assessment location.
- **Asset Type:** Damaged asset type.
- **Asset SubType:** Damaged asset subtype.
- **Quantity:** The number of damaged assets.
- **Description:** Description of the damage.
- **Incident ID:** ID of the associated incident.
- **Incident Name:** Name of the associated incident.
- **Order ID:** ID of the associated order.

2.5.1. Damages Menu

Right-click a damage row to open the context menu.

- **Delete Damage:** Deletes the damage.

2.6. Create Maintenance Order

Use the Create Maintenance Order dialog to create a maintenance order.

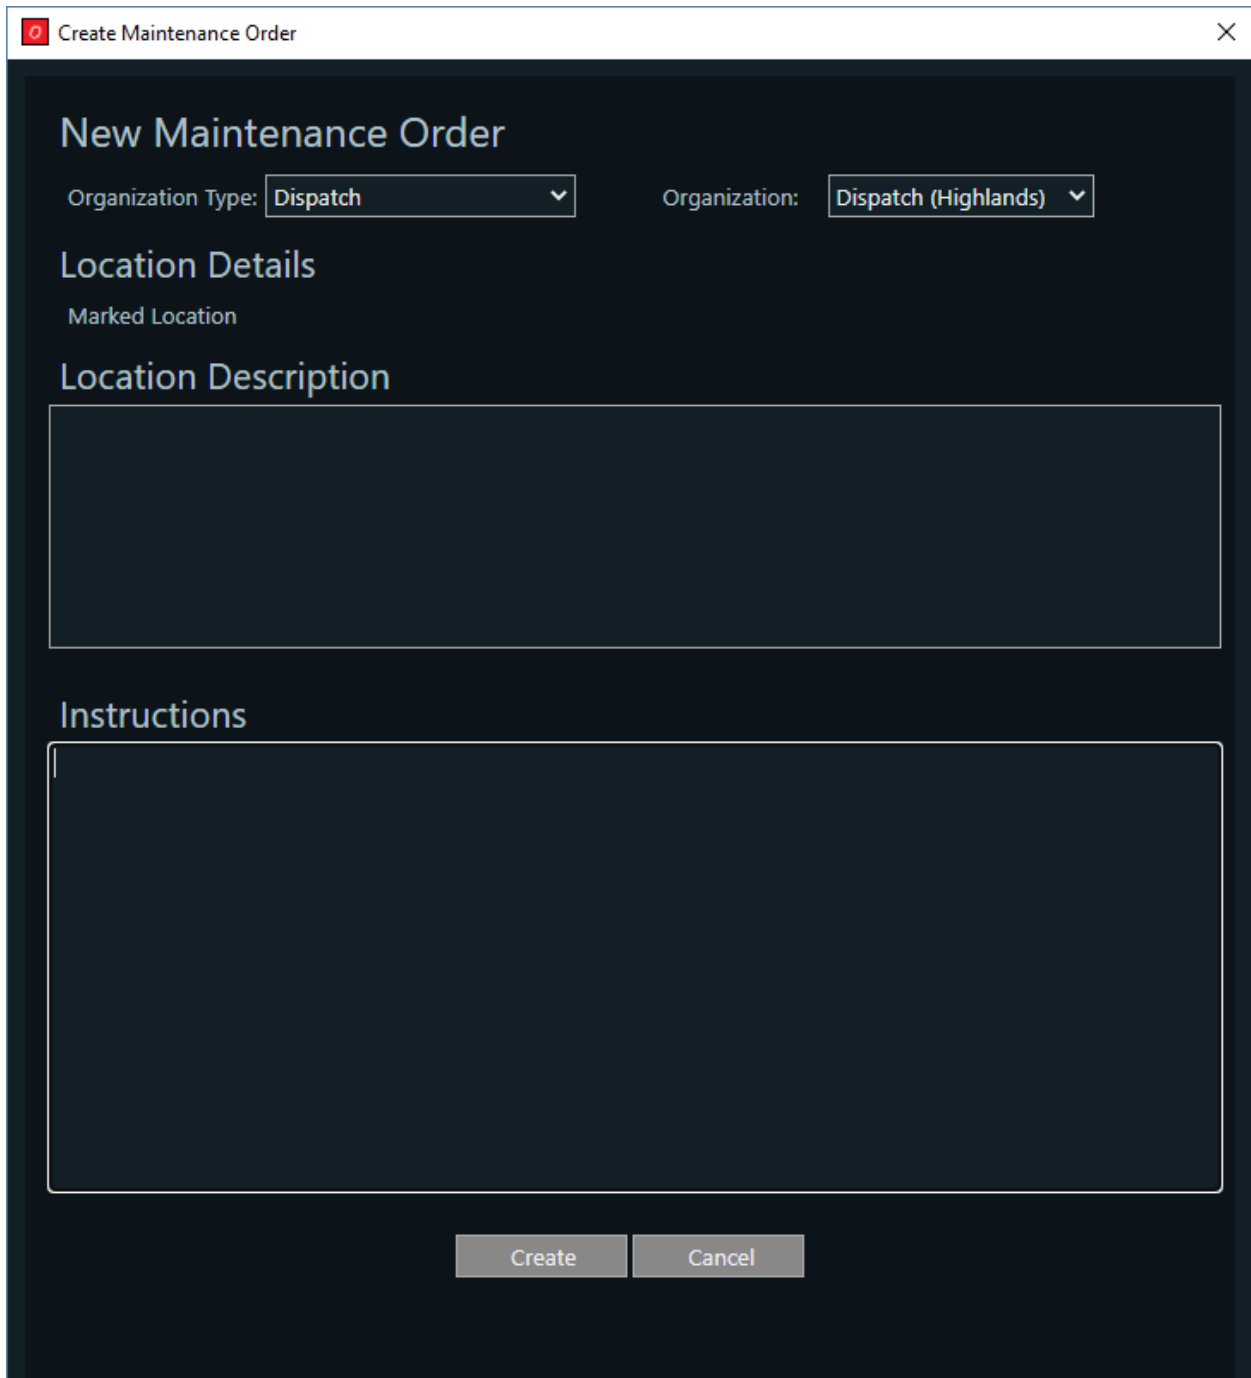
The image shows a 'Create Maintenance Order' dialog box with a dark blue background. At the top, the title 'New Maintenance Order' is displayed. Below the title, there are two dropdown menus: 'Organization Type' set to 'Dispatch' and 'Organization' set to 'Dispatch (Highlands)'. Under these, the 'Location Details' section includes a 'Marked Location' label. The 'Location Description' section is a large, empty text area. Below that, the 'Instructions' section is another large, empty text area. At the bottom, there are two buttons: 'Create' and 'Cancel'.

Figure 24. Create Maintenance Order Dialog

The Create Maintenance Order dialog includes the following fields and controls:

- **Organization Type:** The type of organization to assign the order to.
- **Organization:** The name of the organization to assign the order to. The name is populated automatically when the organizations have geographic boundaries defined. You can manually edit the organization type and name.
-

Device Details: Appears only for maintenance orders for network equipment.

- **Device:** The name or ID of the associated device.
- **Station Name:** The name of the associated station.
- **Structure Details:** Appears only for maintenance orders for structures (for example, poles). Structure information is populated based on the structure model data.
 - **Name:** The name of the structure.
 - **Type:** The type of the structure.
 - **Location Description:** The structure's location information.
- **Location Details:** Appears only for maintenance orders for location (X,Y).
 - **Marked Location:** The X and Y coordinates of the order location are automatically set to the X and Y coordinates of the cursor position on the network view.
 - **Location Description:** The free-form comment about the order location.
- **Instructions:** Instructions about work that needs to be done as part of the order.

2.7. Edit Task

Use the Edit Task dialog to update task details.

Figure 25. Edit Task Dialog

The Edit Task dialog includes the following fields and controls:

- **Type:** Task type.
- **Status:** Task status.
- **Facility:** The type, name, feeder, and station of the associated device. The shown phases are the phases that are affected by the task; the phases may include part of the phases controlled by the device.
- **Crew Assignment:** Shows the name of the associated crew. The lead crew that is assigned to the associated order is automatically assigned to the task. You can also manually select the crew for the task from the list of crews that are assigned to the order. For tasks that were completed without a crew assigned, the "No Crew Recorded" value is shown in the Crew assignment field.
- **Location Description:** Textual description about the task location. Appears for maintenance orders for an (X,Y) location on the map and for orders that are created when converting an unassociated call into an incident.

- **Comments:** Dispatcher and crew comments about the task.
- **Result:** The result of the completion of the task.
- **Select Phases:** Buttons to select phases that are affected by the completion of the task. The phases are shown for all tasks types except for those associated with gang-operated devices.

**Tip**

You can complete a task with phases that are different from those specified at the creation time.

- **Completion Time:** Date and time of the task completion.
- **Close:** Closes the dialog box and discards the completion information.
- **Done:** Completed the task with the specified completion information.

3. Managing Orders

Orders support detailed management of work on the electrical network. Orders can include multiple tasks with different objectives to accurately identify and report the required work. For example, you can use orders to manage work that is performed between the origination and clearance of an incident.

In the current Enterprise OMS release, orders are closely associated with incidents. In future releases, it is planned to maintain orders as separate entities.

The system automatically creates different orders types for different types of incidents. Different types of orders, in their turn, include different sets of tasks. You can also manually create orders and tasks.

Create Maintenance Order 20451015

New Maintenance Order

Organization Type: Organization:

Device Details

Device Id	20451015	Station Name	BETHPAGE
-----------	----------	--------------	----------

Instructions

Create Cancel

Figure 26. Creating a Maintenance Order for a Device

The Orders List display shows all currently active orders.

Order	List Priority	C L	C B	C C	C P	A N	Type	Status	Crew Status	Crews	Feeder	System Affected
2290000004-1	1						Restoration	New	EnRoute	Sheridan ...	F8862	None
2290000002-1	2						Investigation	In Progress	Arrived	Webster ...	F8864	None
2290000003-1	3						Maintenance	In Progress	Arrived	Beaudett...	F8864	None

Figure 27. Order List

From the Orders tab, you can open the Order Worksheet display to update an order.

Restoration Order 2290000004-1

Affected Customers (Current / Initial) 17 / 17 | Current ETR 14:00 08/17 | Duration (min) 141 | CMI 2399 | Calls (priority / all) 0 / 0

Status

Status: New | ETR - 0: 14:00 08/17 | Send ETR notifications: ☒ | Created: 12:46 08/17 | Completed: ITR 14:00 08/17 | Closed: Crew ETA | Priority: None | Earliest Arriving Crew(s)

Instructions & Customer Notes

Case Note: Trouble Located - Crew Dispatched.

Instructions | Dispatcher Comments | Crew Comments

Tasks (1)

Repair Distribution Transformer | Sheridan (1102) | New

Responsibilities

Owner & Organization: Transfer (Dispatch (Highlands)) | Service Center: 3UONSSC | Crew(s): Assign Request | Sheridan (1102) (LEAD) | EnRoute | 13:03 08/17

Incident 2290000004

8926 West St, Roarke | 6-7512-8316-0-3 | F8862 RAVEN (Roarke)

Details

Incident type: Confirmed | Planned outage ID: --- | Work order ID: --- | Working Status: Crew is Enroute for this incident. | Callback: Automatic | Follow up required: ☐ | Fault Location: Location source: None specified | Cause: System Affected: None | Cause: No Reason Assigned | Sub Cause: ---

Figure 28. Updating an Order

From the Tasks section of the Order Worksheet display, you can open the Edit Task display to update a task.

Repair Task [Close]

Status: **In Progress** [v]

Crew Assignment: **Sheridan (1102)** [v]

Facility: **Distribution Transformer [A]**

Facility ID: **6-7512-8316-0-3**

Feeder and Substation: **F8862 RAVEN**

Comments: **Dispatcher** [Crew]

Edit Completion

Select Phases: **A**

Result: [v]

Completion Time: [Calendar Icon]

Close Done

Figure 29. Updating a Task

3.1. Order Life Cycle

Order life cycle is driven by the status of the associated incident, tasks, and devices.

The incident status is linked with the order status. When you update the order status, the incident's working status is updated accordingly. For example, when you set the order status to "Field Complete", the incident working status changes to "Incident Completed by WMS".

For example, suppose that a predicted incident is created in the system. A restoration order with the check prediction task is automatically created for the incident. No work has been done on the

order yet, the order remains in the New status. After a crew has been assigned to the order and confirms that the outage prediction is valid, you can complete the task with the result Complete – Confirmed Open. The system automatically sets the order to In Progress and creates a Repair task for the order. When the crew restores the outage, you can complete the task with the result Complete – Repaired. This closes the device on the network view and changes the associated incident status to Pending Clear (if all customers have been restored). Now you can change the order state to Field Completed and then to Closed. This clears the order and also clears the associated incident.

Figure below shows the order lifecycle.

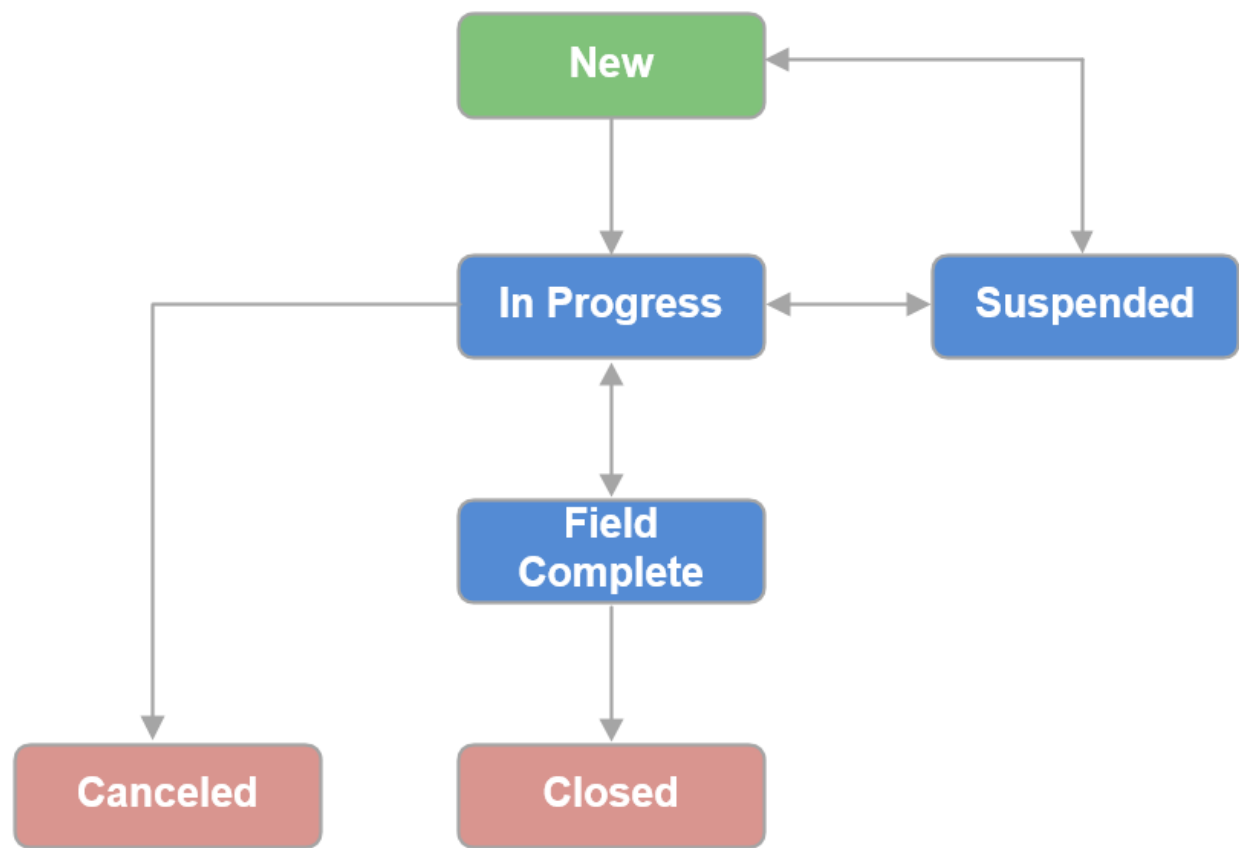


Figure 30. Order Life Cycle

The incident crew assignment status is linked with the order crew assignment status, as described in table below.

Table 2. Mapping between Incident Crew Status and Order Crew Status

Incident Crew Status	Order Crew Status	Description
Unassigned	Unassigned	No crew involved with the order (and the associated incident).
Assigned	Assigned	A crew has been lined up to work on the order, but this has not yet been communicated to the crew.
Dispatched	Dispatched	Order details have been communicated to the crew.

Incident Crew Status	Order Crew Status	Description
EnRoute	EnRoute	A crew is en route to the order.
OnSite	Arrived	A crew has arrived on site to the order.
Released	Released	All crews have been released from the order to work on other assignments.

Orders that are automatically created for incidents receive the organization assignment based on criteria predefined in the OMS server configuration. The order's organization assignment can be changed independently, without an effect on the organization assignment of other orders that are associated with the same incident.

When an incident that is associated with an order is merged with another incident, the incident's orders are merged accordingly. When an incident is split, a new order is created for the new split incident.

When creating a historical incident, a historical order (order in the Closed state) is created accordingly. (Historical orders can be reviewed or updated only using the Archive database.) When merging or splitting historical incidents, the historical orders are merged or split accordingly. Historical orders that are created as a result of splitting have a complete Repair task.

3.2. Order Types

Table below describes order types and lists task types that are supported for orders in the Enterprise OMS system. Certain task types (default "Workflow" task types) are created and managed automatically based on the order workflow. The other task types can be optionally added for an order.

Note

Only one restoration order can be associated with an incident.

Note

Each order can include multiple tasks of the same type.

Table 3. Default Order Types

Order Type	Description	Default "Workflow" Task Types	Other Available Task Types
Restoration	This type of order is associated with unplanned outage incidents (confirmed and predicted).	For orders associated with predicted incidents: • Check Prediction • Repair (when confirmation happens) For orders associated with confirmed found open incidents: • Open • Repair For orders associated with isolated incidents originated from unassociated calls: • Repair (without a device)	For all types of restoration orders: • Open • Close • Maintenance • Assessment • Make Safe
Investigation	This type of order is associated with non-outage incidents.	For all types of investigation orders: • Investigation • Fix Problem	For all types of investigation orders: • Maintenance • Make Safe • Assessment
Maintenance	This type of order is associated with network objects. A non-outage incident is created when you create a maintenance order for a network object.	For all types of maintenance orders: • Maintenance	For all types of maintenance orders: • Maintenance • Assessment
Manual Switching	This type of order is created when an operator performs a manual switching that results in an outage. Such switching may be associated with a planned outage. When the switching is associated with a planned outage, the planned outage type is set to "Emergent Planned Outage".	For all types of manual switching orders: • Open • Close These tasks are created automatically in the Completed state to reflect switching that is executed outside the context of the order.	N/A

Order Type	Description	Default "Workflow" Task Types	Other Available Task Types
Planned Switching	This type of order is created for a planned switching that results in an outage. The planned outage type is set to "Regular Planned Outage".	The order is created without a task. • Open • Close These tasks are created automatically in the Completed state to reflect switching that is executed outside the context of the order. Note that a task is not created at the end of the planned outage duration, as this is not a switching operation. The device must be explicitly operated for the task to be created.	N/A
Load Shed	This type of order is associated with an incident that is a result of a load shed operation.	Load shed orders are processed similar to planned switching orders. The order is created without a task. • Open • Close These tasks are created automatically in the Completed state to reflect switching that is executed outside the context of the order.	N/A
Momentary	This type of order is associated with a momentary outage.	The order is created without a task. You can manually create a task to perform the required operation on the order.	• Open • Close • Maintenance • Investigation • Make Safe • Assessment

Table below describes task types in the Enterprise OMS system.

All tasks have the following possible statuses: New, In Progress, Complete, and Cancelled. When a task is completed, the task must have a result specified.

i Note

Certain task results cause system changes (for example, device status changes). For example, when you complete a Check Prediction task with the Confirmed Open result, the associated device is opened, the incident type changes to Confirmed, and a Repair task is created.

Table 4. Default Task Types

Task Type	Objective	Task Results
Open	The objective of this task is to open the associated device. This task is automatically created for restoration and manual switching orders that are associated with confirmed incidents originated from device open events not commanded by the operator. This task can also be manually created for restoration orders.	• Opened • Failed to Open
Close	The objective of this task is to close the associated device. This task is automatically created for manual switching orders. This task can also be manually created for restoration orders.	• Closed • Failed to Close
Check Prediction	The objective of this task is to check whether the device that is predicted for the outage is open. This task is automatically created for restoration orders that are associated with predicted incidents.	• Confirmed Open (device is updated to indicate that it is open, incident becomes Confirmed, Repair task is created) • Confirmed Closed No Power (incident moves up) • Confirmed Closed With Power (incident moves down) • No Outage (incident becomes pending clear with the restoration step flagged to be excluded from CMI calculations, order becomes in progress allowing field completion to be carried out and any closeout information to be recorded) • Repaired (device is updated to indicate that it was open and is now closed again, incident status becomes Pending Clear if all customers are restored)
Repair	The objective of this task is to repair and close the associated device. This task is automatically created for restoration orders that are associated with confirmed incidents that were created through the confirmation of a predicted outage, when a device was found open, or when the device was reported to have opened automatically by SCADA.	• Repaired (device becomes closed, incident becomes Pending Clear if all customers are restored) • Failed to Repair (a follow-up repair task is created)
Make Safe	The objective of this task is to make the incident location safe before further work is performed. This task can be manually added for restoration orders that are associated with confirmed incidents, for restoration orders with a completed Check Prediction task, or for investigation orders with a completed Investigate task.	• Done • Not Done

Task Type	Objective	Task Results
Investigate	The objective of this task is to investigate the associated non-outage incident. This task is automatically created for investigation orders.	- Found Problem (Fix Problem task is created) - Found and Fixed Problem - Failed to Find Problem
Fix Problem	The objective of this task is to fix the associated non-outage incident. This task is automatically created when an investigation task is completed with the result of Found Problem.	- Fixed Problem - Failed To Fix Problem
Maintenance	The objective of this task is to maintain the associated network or structure object. This task is automatically created for maintenance orders. This task can also be manually added for restoration, investigation, and maintenance orders.	- Done - Not Done
Assessment	The objective of this task is to assess condition around the incident. This task can be manually added for all types of orders.	- No Damage of Consequence - Minor Damage - Major Damage - Not Done

3.2.1. Restoration Order

Restoration orders support activities that are associated with working on unplanned outages originated for predicted out or found open devices.

Restoration Order 2290000006-1

Affected Customers (Current / Initial): 17 / 17 | Current ETR: 17:00 08/17 | Duration (min): 0 | CMI: 9 | Calls (priority / all): 0 / 0

Status

Status: In Progress | ETR: 17:00 08/17 | Send ETR notifications: ☒ | Created: 15:46 08/17 | Completed: ITR: 17:00 08/17 | Closed: Crew ETA | Priority: None | Earliest Arriving Crew(s)

Responsibilities

Owner & Organization: Transfer (Dispatch (Highlands)) | Service Center: 3LIONSSC | Crew(s): Assign Request | Dodge (1101) (LEAD) Arrived 15:46 08/17

Instructions & Customer Notes

Case Note: Trouble Located Working to Restore Power.

Instructions | Dispatcher Comments | Crew Comments

Tasks (2)

Task	Assigned To	Status
Check Prediction	Dodge (1101)	Confirmed Open
Repair	Dodge (1101)	New

Resolution

Confirmed Open

Incident 2290000006

Pole# 17511312; 8818 West St, Roarke
6-7512-8409-0-4 | F8862 RAVEN (Roarke)

General | Facility | Customers | Damage Assessment | More

Details

Incident type: Confirmed | Planned outage ID: --- | Work order ID: ---

Working Status: Crew is OnSite for this incident.

Callback: Automatic | Follow up required: ☐

Fault Location

Location source: None specified

Cause

System Affected: None | Cause: No Reason Assigned | Sub Cause: ---

Figure 31. Restoration Order

The restoration order life cycle is as follows:

- **Origination:**

- Automatically created for a single customer incident, which originates for the following events:
 - Customer outage call or an AMI Out signal.
 - Customer outage call from a customer after restoration.
 - Customer still reports a power outage after restoration during the callback process.
- Automatically created for a predicted incident, which originates for the following event:
 - A number of customer outage calls or AMI Out signals downstream of a protective device.
- Automatically created for a confirmed incident, which originates for the following events:
 - Recording a device that was found open using the Create Confirmed Outage option.
 - Confirming a predicted incident.
 - SCADA reporting that a protective device has tripped.
- Automatically created for a manually confirmed incident, which originates for the following event:
 - Operator actions: splitting incidents.
- Automatically created for an isolated incident, which originates after manually converting an unassociated call into an incident.
- Manually created by creating a follow-up restoration order for an order.

- **Completing an order:**

Assign a crew > Complete tasks (this closes the device of record) > Change status to Field Complete.

- **Closing an order:**

Change status to Closed.

3.2.2. Investigation Order

Investigation orders support activities that are associated with investigating and fixing cases that are not associated with customer outages (for example, a streetlight failure).

Investigation Order 2290000002-1

Affected Customers (Current / Initial): 0 / 0 | Current ETR: 13:30 08/17 | Duration (min): 229 | CMI: 0 | Calls (priority / all): 0 / 1

Status
 Status: In Progress
 Created: 12:12 08/17
 Completed: ITR: 13:30 08/17
 Closed: Crew ETA
 Priority: None
 Earliest Arriving Crew(s)

Instructions & Customer Notes
 Case Note: Trouble Located Working to Restore Power.
 Instructions: [Empty box]
 Dispatcher Comments: [Empty box]
 Crew Comments: [Empty box]

Tasks (2)
 Investigate: Distribution Transformer, Webster (1104), Found Problem
 Fix Problem: Distribution Transformer, Webster (1104), New

Responsibilities
 Owner & Organization: Transfer (Dispatch (Highlands))
 Service Center: 3UONSSC
 Crew(s): Assign, Request
 Webster (1104) (LEAD) Arrived 12:12 08/17

Incident 2290000002
 7964 West St, Roarke
 6-7512-6911-0-1 | F8864 RAVEN (Roarke)

Details
 Incident type: NonOutage
 Planned outage ID: ---
 Non outage type: IS Trouble
 Work order ID: ---
 Working Status: Crew is OnSite for this incident.
 Callback: Automatic
 Follow up required: []

Fault Location
 Location source: None specified

Cause
 System Affected: None
 Cause: No Reason Assigned
 Sub Cause: [Empty box]

Figure 32. Investigation Order

The investigation order life cycle is as follows:

- **Origination:**

- Automatically created for a non-outage incident, which originates for the following events:
 - Customer call of a non-outage type.
 - Unassociated call of a non-outage type.
 - 911 call of a non-outage type.
 - Manually converting an unassociated or 911 call into an incident.
 - Creating a quick order for a device or structure.
 - Non-outage isolated incidents are created when a part of the network is de-energized without de-energizing customers (configurable).
 - Manually created by creating a follow-up investigation order for an order.

- **Completing an order:**

Assign a crew > Complete tasks (this sets the completed time) > Change status to Field Complete.

- **Closing an order:**

Change status to Closed.

3.2.3. Maintenance Order

Maintenance orders support activities that are associated with inspecting and maintaining network objects, such as structures, capacitors, distribution transformers, and switching devices.

The screenshot displays the 'Maintenance Order 1530000040-1' interface. At the top, a summary bar shows key metrics: Affected Customers (0/0), Current ETR (05:30 AM 06/02), Duration (91 min), CMI (0), and Calls (0/0). Below this, the interface is divided into several sections. The 'Status' section shows the order is 'New' with a 'Send ETR notifications' checkbox. The 'Instructions & Customer Notes' section includes a 'Case Note' field and an 'Instructions' field. The 'Tasks' section shows one task, 'Maintenance', with a 'Select Crew' button. The 'Responsibilities' section lists 'Owner & Organization' (Dispatch (Highlands)), 'Service Center' (WSTC), and 'Crew(s)' with 'Assign' and 'Request' buttons. On the right, a panel for 'Incident 1530000010' provides details: Incident type (NonOutage), Planned outage ID, Non outage type, Work order ID, Incident is unassigned, Callback, Follow up required, Fault Location, Location source, Cause, and System Affected.

Figure 33. Maintenance Order Tasks

The maintenance order life cycle is as follows:

- **Origination:**
 - Manually created by creating a maintenance order for a device or location.
 - Manually created by creating a related maintenance order for an order.
- **Completing an order:**

Assign a crew > Complete tasks (this sets the completed time) > Change status to Field Complete.
- **Closing an order:**

Change status to Closed.

3.2.4. Manual Switching Order

Manual switching orders record activities that are associated with working on outages originated when an operator manually opened a device. A planned outage may or may not be involved. If there is a planned outage, the planned switching type is set to Emergent Planned Outage.

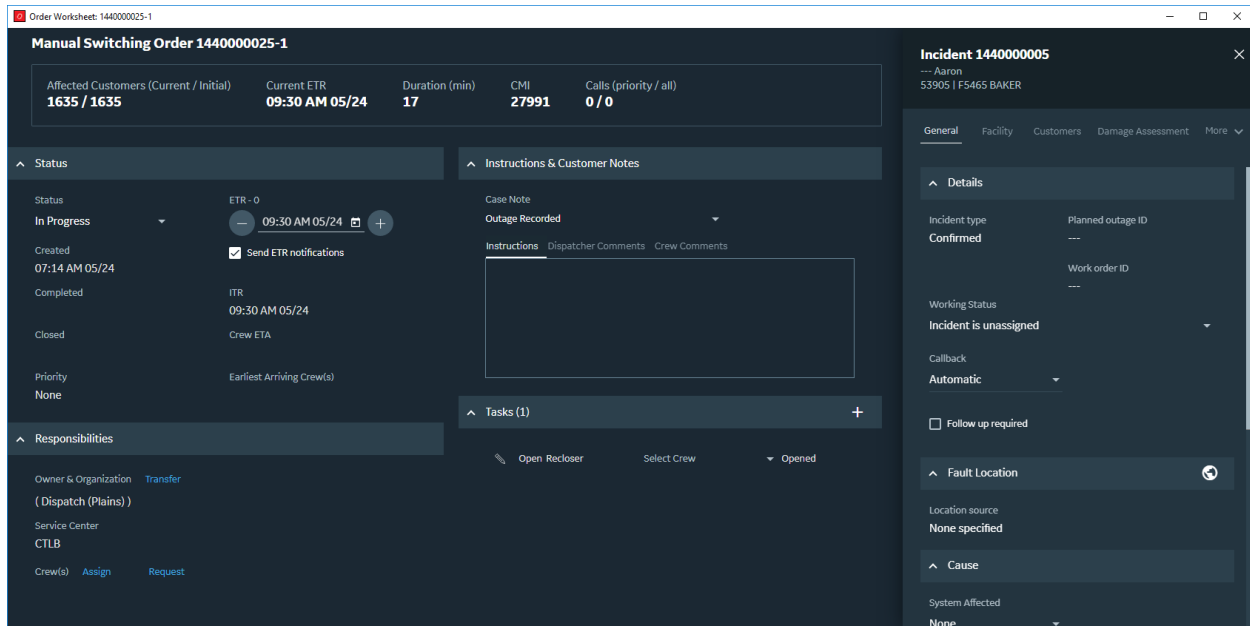


Figure 34. Manual Switching Order

The manual switching order life cycle is as follows:

- **Origination:**

Automatically created for a confirmed incident, which originates from manual operation of a device (SCADA or non-SCADA) by an operator.

- **Completing and closing an order:**

An order is automatically field completed and closed when all customers are restored through the subsequent switching.

3.2.5. Planned Switching Order

Planned switching orders record activities that are associated with working on planned incidents. A planned outage is involved, the planned switching type is set to Regular Planned Outage.

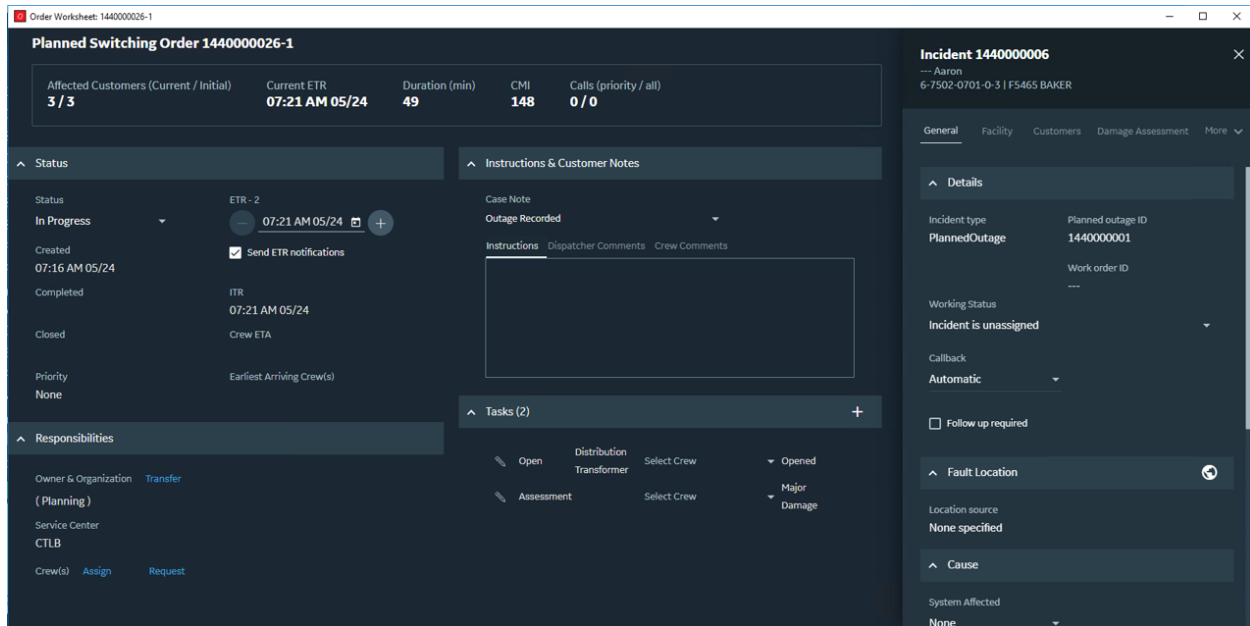


Figure 35. Planned Switching Order

The planned switching order life cycle is as follows:

- **Origination:**

Automatically created for a planned incident, which originates after creating a planned outage by the operator.

- **Completing and closing an order:**

An order is field completed and closed automatically when all customers are restored through the subsequent switching as part of the Planned Switching orders record activities that are associated with working on planned incidents. A planned outage will be involved, and it will have a planned switching type of Regular Planned Outage.

3.2.6. Load Shed Order

Load shed orders record activities that are associated with incidents that are a result of load shed operations.

The load shed order life cycle is as follows:

- **Origination:**

Automatically created for a confirmed incident of a load shed subtype, which originates after opening a device by the rotating load shed function.

- **Completing and closing an order:**

Order is automatically field completed and closed when all customers are restored through the subsequent switching.

3.2.7. Momentary Order

Momentary orders record activities that are associated with momentary outages.

The load shed order life cycle is as follows:

- **Origination:**

Automatically created for a momentary incident after the tripped protective SCADA device (for example, breaker or recloser) is reclosed within the configurable momentary outage time period.

- **Completing an order:**

Create tasks > Assign a crew > Complete tasks (this sets the completed time) > Change status to Field Complete.

- **Closing an order:**

Change status to Closed.

3.3. Creating an Order

The system automatically creates one of the following orders for new incidents:

- For unplanned outage incidents, which originate when a device is predicted out or found open, the system creates restoration orders.
- For outage incidents that originate from unassociated calls, the system creates restoration orders.
- For non-outage incidents, the system creates investigation orders.
- For planned and unplanned outage incidents which originate from manual operation of a device (SCADA or non-SCADA) by an operator, the system creates manual switching orders.
- For planned outage incidents, the system creates planned switching orders.


You can manually create a restoration order for a protective device (for example, fuse or distribution transformer) from the network view. You can manually create a maintenance order for a network object (for example, switching device, customer, distribution transformer, or structure) from the network view. You can also create follow-up or related orders from the Order List display.

3.3.1. Creating a Restoration Order


To create a restoration order for a protective device:

1. Right-click a protective device on the network view.
2. Select the **Create Predicted Outage** option to create a restoration order for a predicted incident in the predicted stable state. Or, select the **Create Confirmed Outage** option to create

a restoration order for a confirmed incident with the Found Open flag set.

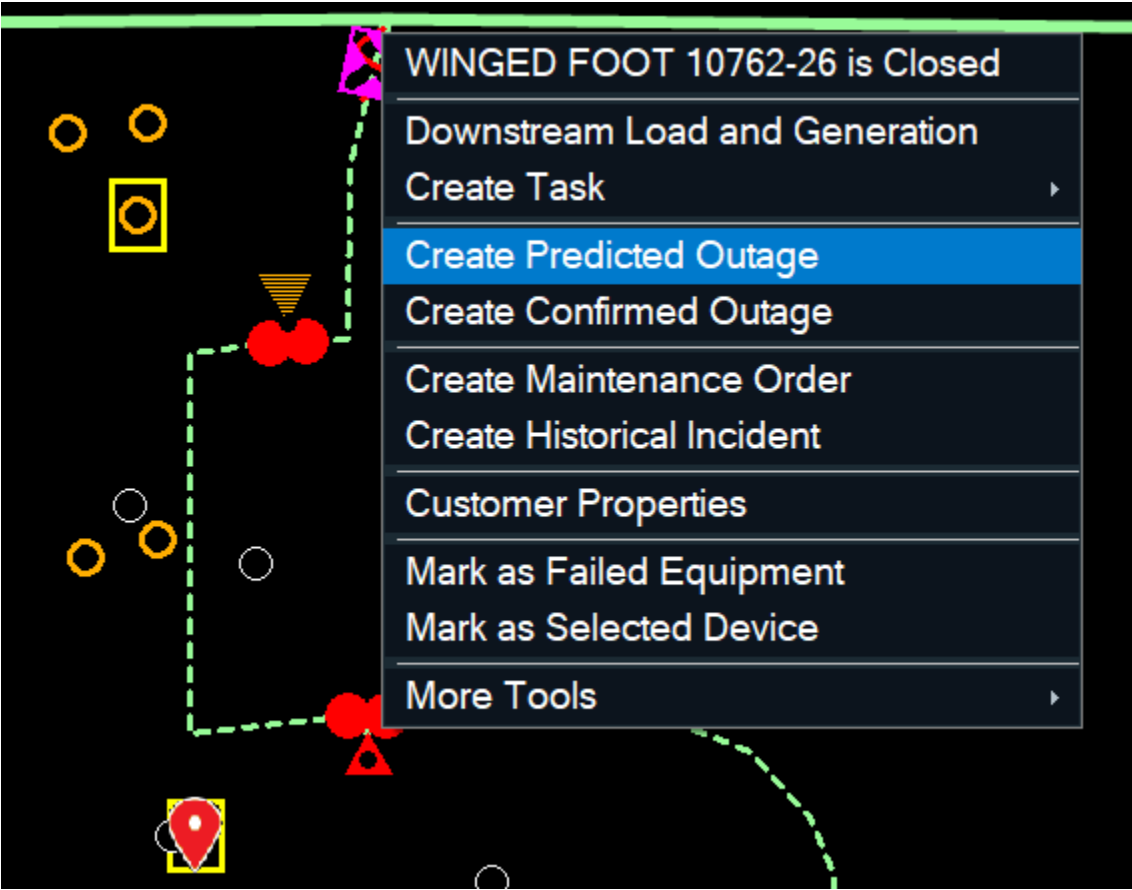

3. If there are restoration orders for predicted or single customer incidents downstream of the selected protective device, you can select orders to be merged into the new order. Incidents that are associated with unmerged orders are set to predicted stable.

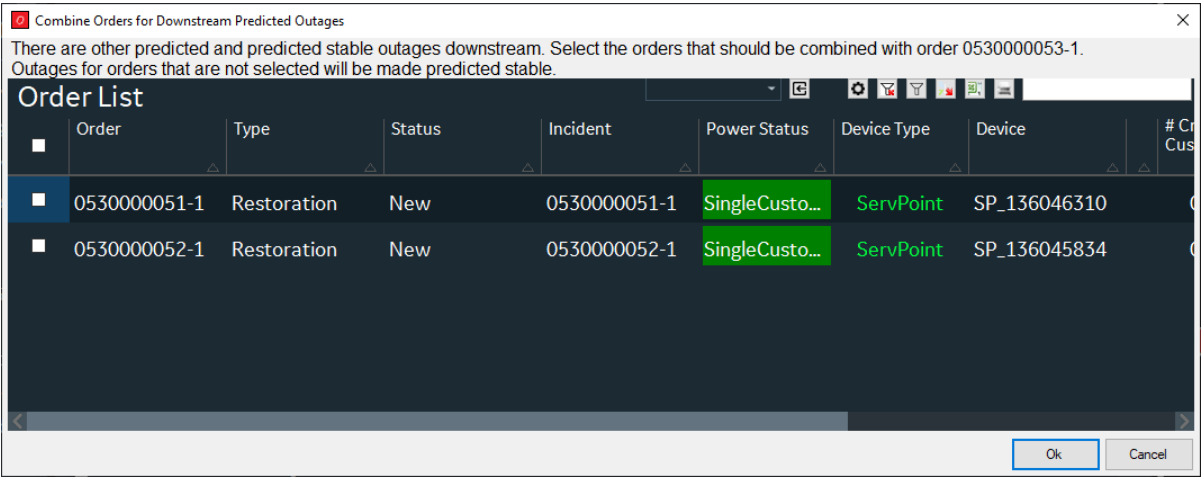


A restoration order is created for a predicted or confirmed outage.

3.3.2. Creating a Maintenance Order


To create a maintenance order for a network object:

1. Right-click an object on the network view.
2. Select the Create Maintenance Order option.

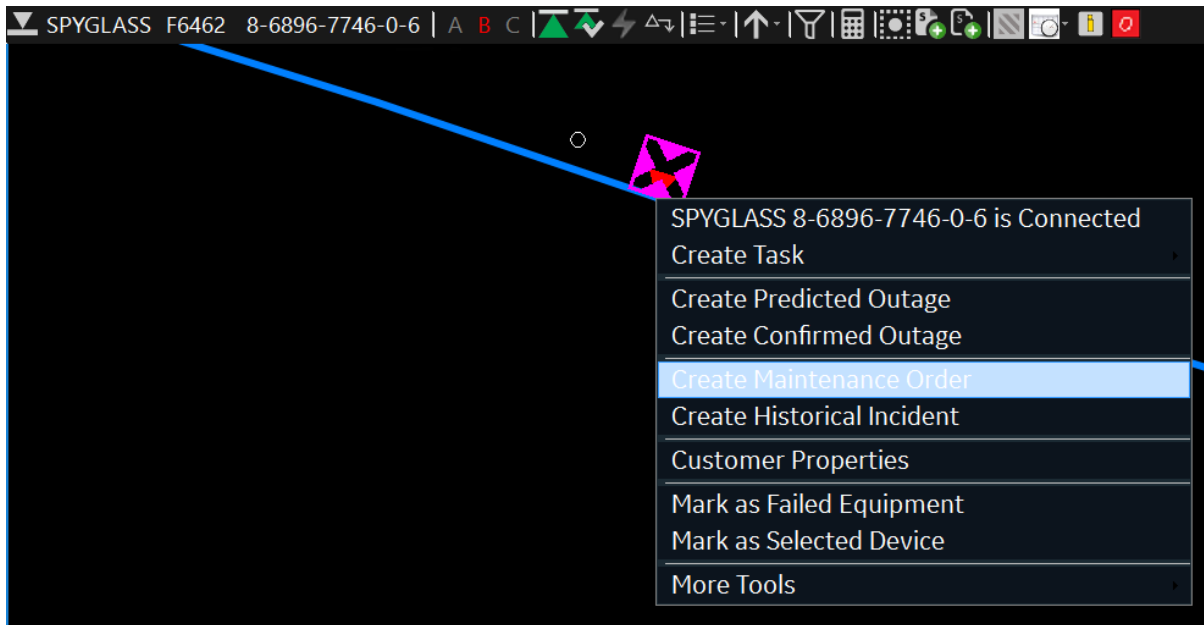

3. Enter maintenance order details.
4. Change the organization type and name, as appropriate. By default, the organization type is set according to the criteria specified in the OMS server configuration. The organization name is suggested based on the organization type and the geographic location.
5. Click OK.

A new non-outage maintenance incident with an associated maintenance order is created.

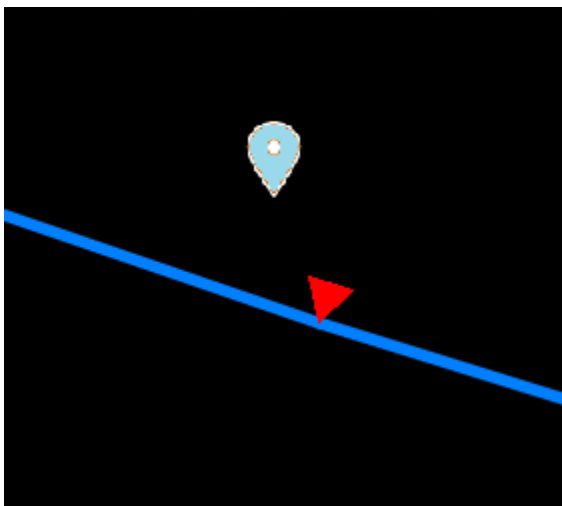

To create a maintenance order for a network location:

- 1. Right-click an empty space on the network view.
- 2. Select the Create Maintenance Order option.
- 3. Enter maintenance order details.
- 4. Change the organization type and name, as appropriate.
- 5. Click OK.

A new non-outage maintenance incident with an associated maintenance order is created.

3.3.3. Creating a Follow-Up or Related Order

Note

You cannot create a related maintenance order for a Manual Switching, Planned Switching, or Load Shed order.

To create a follow-up or related order for an order:

- 1. Right-click an order (the originating order) in the Order List display.
- 2. Select the Create Follow-Up Restoration Order, Create Follow-Up Investigation Order, or Create Related Maintenance Order option.

Note

A new follow-up order inherits the workflow of the originating order, that is, the follow-up order has the same order type and task types. A new related order (currently, maintenance order) uses a separate workflow.

Order List

Local Priority		Order	C L	C B	C C	C P	A N	Type	Status	Crew
5	■	1380000013-1						Restoration	In Progress	Unas
6	■	1380000012-1						Maintenan		Unas
1	■	1380000011-1						Manual Sw		Unas
4	■	1380000010-1						Manual Sw		Unas
2	■	1380000009-1						Manual Sw		Unas
3	■	1380000008-1						Manual Sw		Unas

Order Worksheet

Go To

Status

Cancel Order

Outage

Take Ownership

Create Follow-Up Restoration Order...

Create Related Maintenance Order...

3. Enter order details.
4. Change the organization type and name, as appropriate.
5. Select the Relationship option to specify that the originating order is dependent on completion of the maintenance order. (Only available for related maintenance orders.)
6. Change the device of record, as appropriate. (Only available for related maintenance orders for devices.)

To change the device of record, mark a device with mark type 2 on the network view using the Mark as Selected Device option from the device right-click menu, and then click the Select Device from Map button on the Create Order for Order display.

Create Maintenance Order related to 1230000010-1

New Related Maintenance Order

Relationship ☒

Organization Type Dispatch

Prerequisite of 1230000010-1

Organization Dispatch (Highlands)

Device Details

Device 11309-7 Select Device From Map

Station RAVEN

Instructions

New maintenance order that is a prerequisite for another order

Create Cancel

7. Click Create.

A new order is created below the parent order. The order ID is set to <Parent_Order_Name>-

<Parent_Order_Sequential_Number+N>.

Note

An incident can only have one active restoration order. When creating a follow-up restoration order for a restoration order, the system prompts you to indicate whether to field complete the existing order.

■	3100000007-1	Investigation	Field Complete	None	3100000014
■	3100000007-2	Investigation	New	None	3100000014
■	3100000007-3	Maintenance	New	None	3100000019
■	3100000007-4	Maintenance	New	None	3100000020

Figure 36. Multiple Related Orders

3.4. Assigning a Crew to an Order

To assign a crew to an order:

1. From the Order List display, right-click an order and select Assign Crew.

Order List

Order	List Priority	C L	C B	C C	C P	A N	Type	Status	Crew Status
■ 3250000001-1	1						Manual Switch...	In Progress	Assigned
■ 3250000003-1	3						Restoration	New	Unassigned
■ 3250000004-1	2						Restor		Unassigned
■ 3250000005-1	4						Investig		Unassigned
■ 3250000006-1	5						Mainte		Unassigned

Order Worksheet

Go To

Status

Cancel Order

Outage

Clear Ownership


Take Ownership

Assign Crews...

Request Crew Assignment...


Or:

Click Assign in the Responsibilities section of the Order Worksheet display.

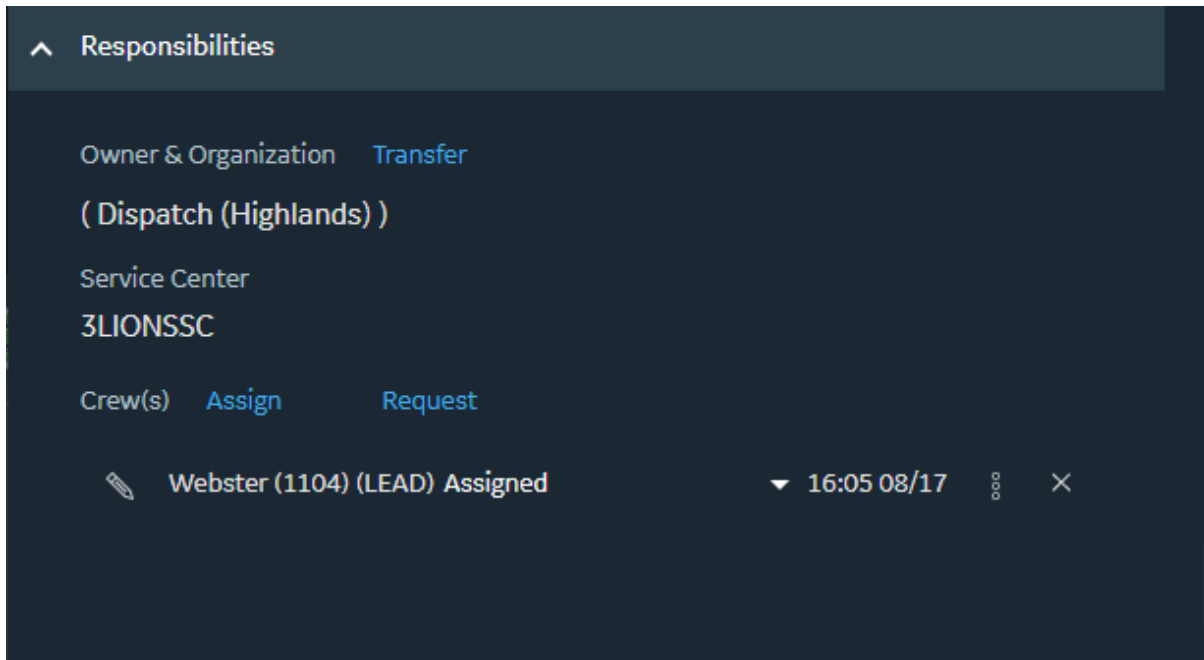


Or:

Navigate to the order in the network view and then click Assign Crews from the order right-click menu.

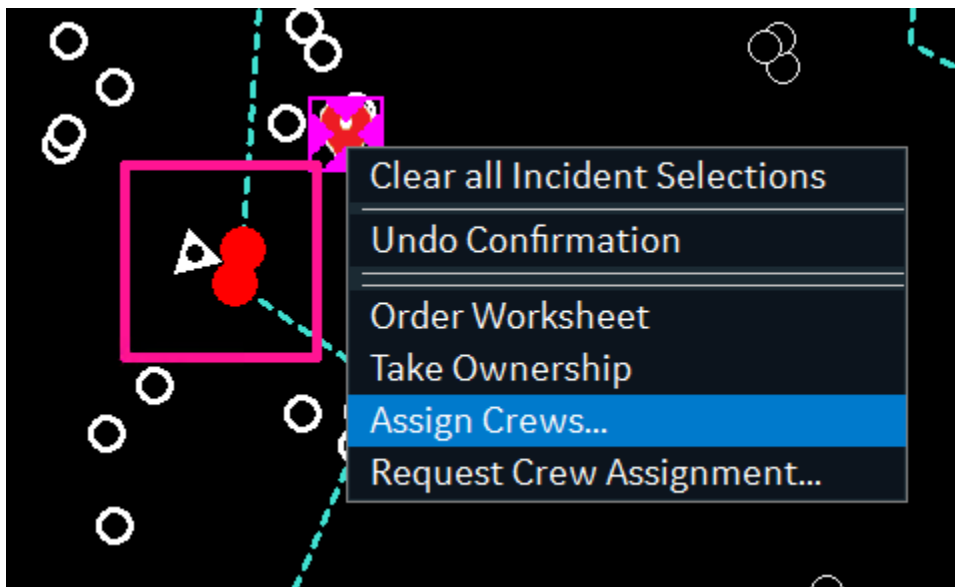


The Crew Selection dialog appears. This display includes a short list of crews filtered by the relevance to the order.

2. On the Crew Selection dialog, choose whether to filter the list of crews by crews that belong to the order area or by crew type.

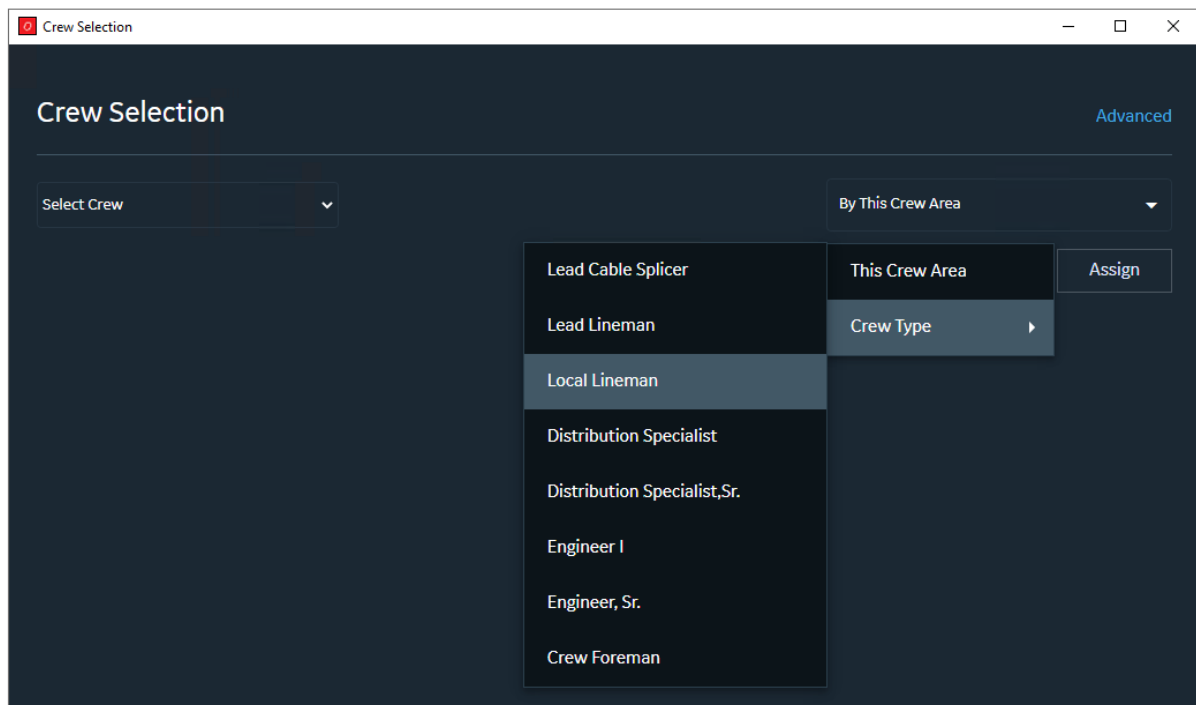

The crew section list also shows the first five relevant crews in the crew area, regardless of the selected filter.

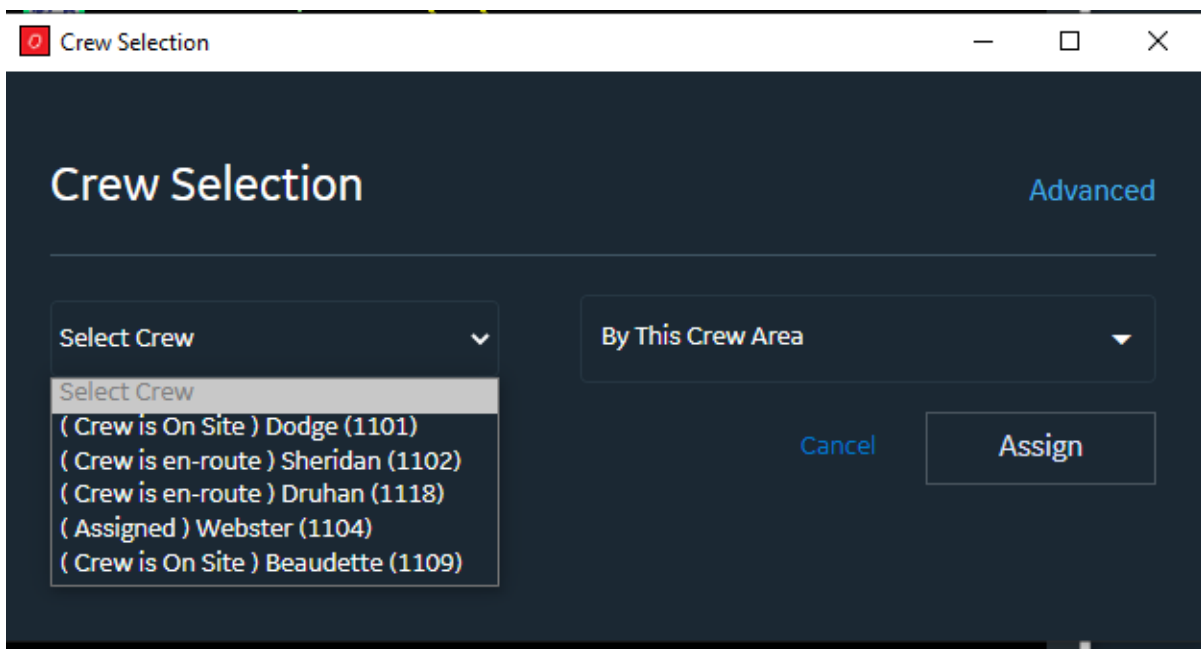

Or:

To show the Advanced Crew Selection dialog box with the entire list of crews and the advanced filtering capabilities, click Advanced. (Click the Filter button to show the advanced filtering panel, where you can define the filtering criteria and save the configuration for use with other orders.)

The available advanced filter criteria are:

- Crew Type
- Crew Work Status
- Crew Area
- Default Crew Area
- Crew Division
- Crew Availability
- Crew Shift
- Crew Communications
- Crew Size
- Work Load
- Is Evaluator
- Is Available
- Foreign Crew
- MDT Flag
- Idle

☐	Crew Name	Crew...	Work Status	Availability	Shift	Communic...	Type	Foreign ...
☐	Carino (1207)	FI1500	Signed On	Unknown	Unknown		Local Lineman	No
☐	Thompson (1184)	FI1501	Signed On	Unknown	Unknown		Local Lineman	No
☐	Dodge (1101)	FI1502	Crew is Availa...	Unknown	Unknown		Local Lineman	No
☐	Patterson (1168)	FI1503	Signed On	Unknown	Unknown		Local Lineman	No
☐	Yost (1165)	FI1504	Signed On	Unknown	Unknown		Local Lineman	No
☐	Bailey (1133)	FI1505	Signed On	Unknown	Unknown		Local Lineman	No
☐	Hadfield (1158)	FI1506	Signed On	Unknown	Unknown		Local Lineman	No
☐	Hackett (1131)	FI1507	Signed On	Unknown	Unknown		Local Lineman	No
☐	Dodge (1196)	FI1508	Signed On	Unknown	Unknown		Local Lineman	No
☐	Montstream (1155)	FI1509	Signed On	Unknown	Unknown		Local Lineman	No
☐	Karlak (1128)	FI1510	Signed On	Unknown	Unknown		Local Lineman	No
☐	Brewer (1125)	FI1511	Signed On	Unknown	Unknown		Local Lineman	No
☐	Nelson (1129)	FI1512	Signed On	Unknown	Unknown		Local Lineman	No

From the Advanced Crew Selection dialog box, you can also click Create New Crew to manually create a crew. For more information about crew fields, refer to the *OMS User Guide*.

Crew Update Dialog - Crew Name: Test Crew

Name	Value
Active	True
Automatic Dispatch Id	ADC001
Company Name	ADC
Contractor	False
CreatedBy	DMSALL
Crew Area*	<None>
Crew Division*	<None>
Crew Status	Signed On
Crew Type	<None>
Default Crew Area*	<None>
Default Location X	0
Default Location Y	0
Department	
Evaluator	False
Foreign	False
Home Area	
Id*	ADC001
Is Adhoc	True
MDT	False
Name*	Test Crew
Phone Number	
Primary Employee Id*	FI2018
Primary Employee Name*	A Ben Druhan
Radio Number	1407
Temp Area	

Primary Employee: A Ben Druhan Make This Employee Primary Create Temp Crew

Current crew employees

ID	NAME	TEMPCREWNAME	RADIONUMBER	CREWAREA	DEFAULTCREWAREA	EMPLOYEE
FI1950	A Paul Morgan		4264	Central Crews	Central Crews	Lead Linema

Filter: Split Crew

Available employees

ID	NAME	CREWNAME	TEMPCREWNAME	RADIONUMBER	CREWAREA
FI1918	A Rusty Cornell			4048	South Crews
FI2718	Aaron Craig Cowley				Coast Pinehur
FI2141	Aaron P Dorrell	Robinson [5255] - AUTO		4156	West Crews
FI1607	Aaron P Drost	Drost (1135)		1135	Neptune Distr
FI1857	Aaron Tad Murphy	Crawford [5251] - AUTO		4085	West Crews
FI1841	Aaron X Cappucci	Thompson [5274] - AUTO		4104	Northeast Cre
FI1529	Adam D Johnson	Johnson (1132)		1132	Muirfield Distr
FI2043	Adam N Simons	Simons [4452] - AUTO		1452	Central Crew
FI1842	Adam V Briscoe	Ratzlaff (4245)		4105	Northeast Cre
FI2667	Al H Cappucci				North Division

Employees Vehicles OK Cancel Apply

3. Select the crew that you want to assign to the order. On the Advanced Crew Selection dialog box, you can also select multiple crews.
4. Click Assign.

The status of the selected crew is changed to Assigned. The Responsibilities section on the Order Worksheet display lists the selected crew.

3.4.1. Requesting Automatic Crew Assignment by WFM

To request automatic crew assignment by the Workforce Management System:

1. From the Order List display, right-click an order and select Assign Crew.

Order List

Order	List Priority	C L	C B	C C	C P	A N	Type	Status	Crew Status
3250000001-1	1						Manual Switch...	In Progress	Assigned
3250000003-1	3						Restoration	Now	Unassigned
3250000004-1	2						Restoration		assigned
3250000005-1	4						Investigation		assigned
3250000006-1	5						Maintenance		assigned

Order Worksheet

Go To

Status

Cancel Order

Outage

Clear Ownership

Take Ownership

Assign Crews...

Request Crew Assignment...

Or:

From the Advanced Crew Selection dialog, click Use Workforce Management.

Or:


Click Request in the Responsibilities section of the Order Worksheet display.

Or:

Navigate to the order in the network view and then click Request Crew Assignment from the order right-click menu.

The Request from Workforce Management dialog appears.

2. Select a crew type and click Request.

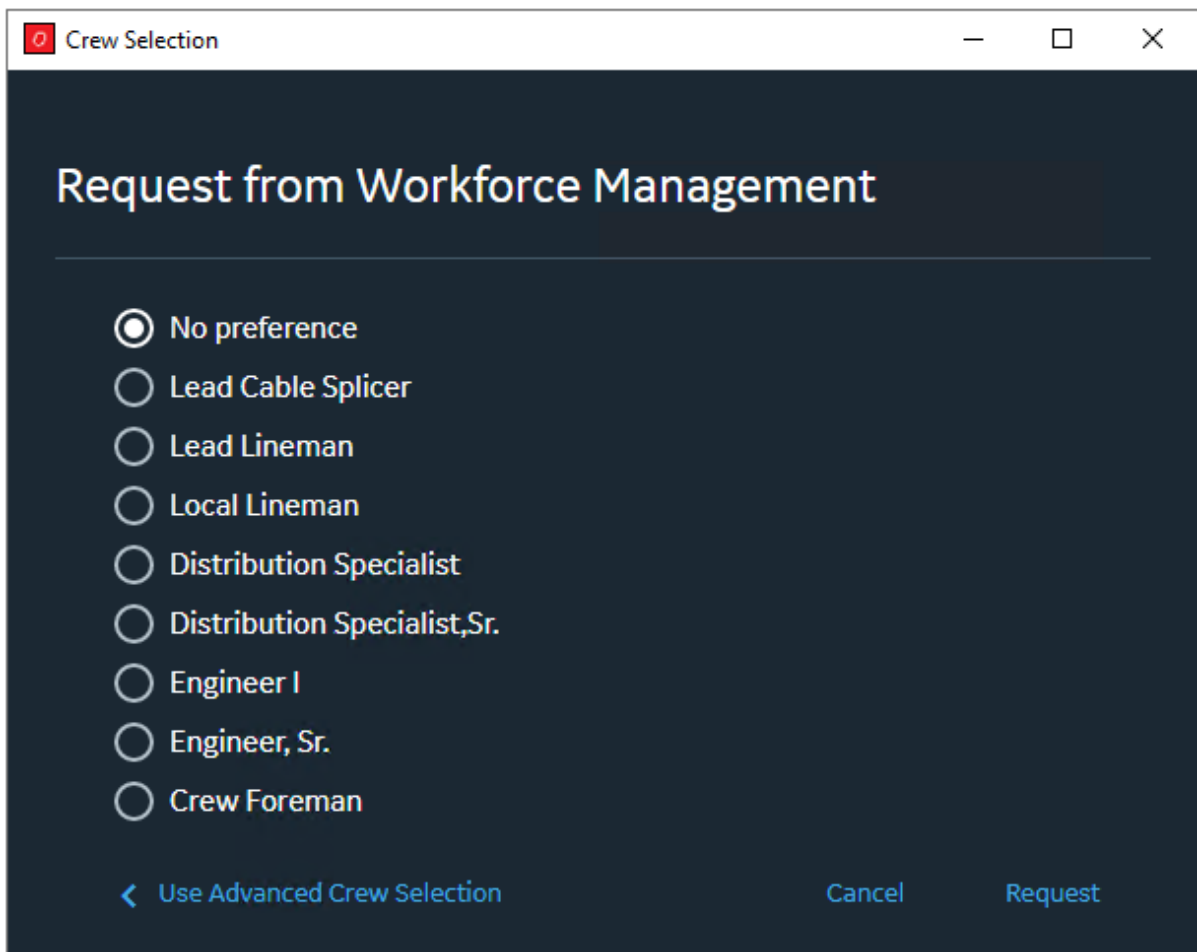The image shows a software dialog box titled "Crew Selection" with a red icon. The main heading inside is "Request from Workforce Management". Below the heading is a list of radio button options for crew types: "No preference" (selected), "Lead Cable Splicer", "Lead Lineman", "Local Lineman", "Distribution Specialist", "Distribution Specialist, Sr.", "Engineer I", "Engineer, Sr.", and "Crew Foreman". At the bottom, there are three buttons: "Use Advanced Crew Selection" (with a left arrow), "Cancel", and "Request".

Crew Selection

Request from Workforce Management

- ☒ No preference
- ☐ Lead Cable Splicer
- ☐ Lead Lineman
- ☐ Local Lineman
- ☐ Distribution Specialist
- ☐ Distribution Specialist, Sr.
- ☐ Engineer I
- ☐ Engineer, Sr.
- ☐ Crew Foreman

[← Use Advanced Crew Selection](#) [Cancel](#) [Request](#)

A crew will be automatically assigned by the Workforce Management System based on the crew location, availability, or other preferences.

3.4.2. Release the Crew from Work

Order List												
	C C	P R I	S M	A N	Order	List Pri	Type	Incident Type	Status	Service Center	Crews	Crew Status
■												
■					1200000377-1	87	Ma...	Outage	In Prog...	3LIO...	Hallett (1...	Assigned
■					1200000376-1	89	Ma...	Outage	In Prog...	3LIO...	Hallett (1...	Assigned

When auto -release is turned on and a crew's status changes to one of the configurable auto-release trigger values (default Unavailable or Sign Off), the crew is automatically unassigned or released from all orders to which it is assigned.

Order List												
	C C	P R	S M	A N	Order	List Pri	Type	Incident Type	Status	Service Center	Crews	Crew Status
■												
■					1200000377-1	87	Ma...	Outage	In Prog...	3LIO...		
■					1200000376-1	89	Ma...	Outage	In Prog...	3LIO...		

3.5. Adding a Task to an Order

The system automatically creates the following tasks for orders:

- For a restoration order, the system creates Check Prediction, Repair, and possibly Open.
- For an investigation order, the system creates an Investigate and Fix Problem task.
- For a maintenance order, the system creates a Maintenance task.
- If a fault occurs that causes FISR to execute and produce a predicted Fault Location, the resulting restoration order will contain a Verify Fault Location task. The configuration parameter, fault-locations.create-task, can be set to false to turn off this feature.

i Note

Even when the "Fault Location Create Task" feature is turned off, the user can still manually create a Verify Fault Location task. When a predicted Fault Location is created and the incident contains the predicted location, in the Order Worksheet, in the Incident panel, the VerifyFault button will be enabled to manually create the task.

^
Fault Location

Location source
None specified


VerifyFault

Click this button to create a new Verify Fault Location task. However, this button will only be enabled when a predicted fault location is generated, and the order does not already have a new or completed Verify Fault Location task.

You can manually create tasks for network objects (switching devices and distribution transformers) from the network view. You can also create tasks from the Tasks section of the Order Worksheet display.

To create a task from the network view:

- 1. Right-click an object in the network view.
- 2. Select the Create Task option.

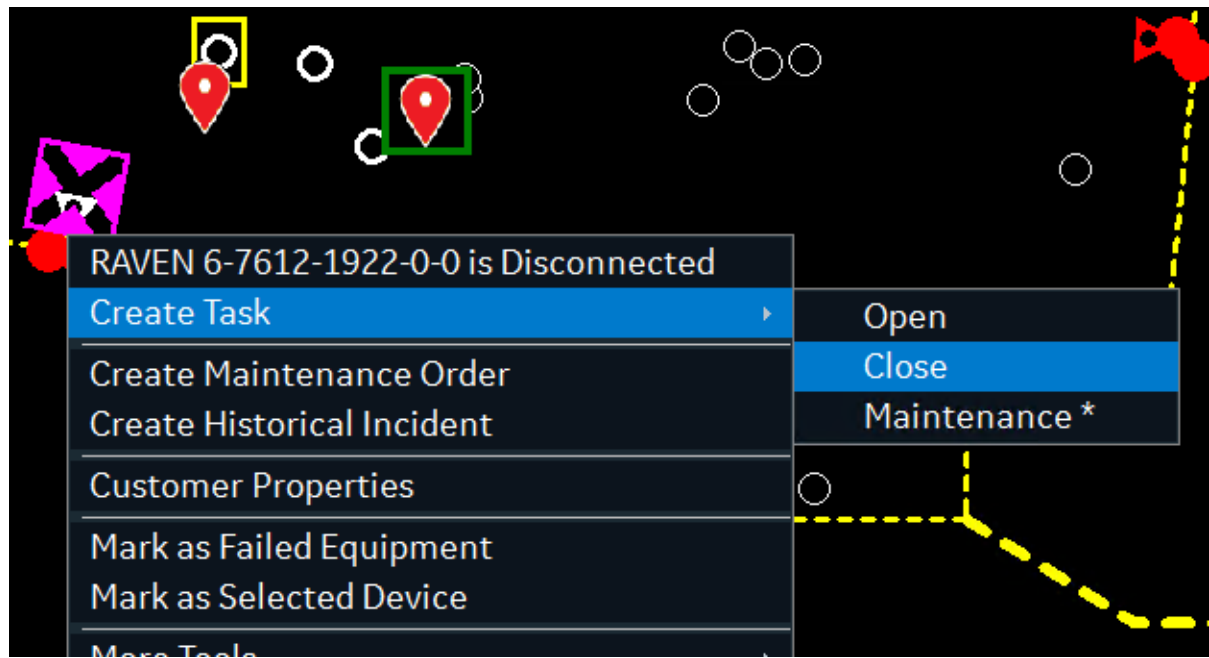

- 3. Select the task type.
- 4. For Open and Close tasks, select the required phases.
- 5. Select an order from the Order List grid.

For Open or Close tasks, the Order List grid only includes restoration orders with a confirmed

outage associated with the same feeder as the selected device.

For Maintenance tasks, the Order List grid includes all types of orders.

Task Details

Order Name

1390000016-1

Task Type

OPEN

Phases

☒ A

 to be opened

☒ B

 to be opened

☒ C

 to be opened

☒ Add Task to return to normal state

Device Info

ID

22239714

Name

51731

Type

Switch

Completion Time

mm/dd/yyyy

...

...

Order List

Order	Type	Status	Organization	Owner	Created	Incident
☒ 1390000016-1	Restoration	In Progress	DSP_HIGH		05:53 5/19/2021	1390000012
☐ 1390000017-1	Restoration	In Progress	DSP_HIGH		05:53 5/19/2021	1390000013
☐ 1390000019-1	Restoration	In Progress	DSP_HIGH		05:55 5/19/2021	1390000015

Create and Execute

Create

Cancel

6. Optionally, for the Open or Close tasks, select the "Add Task to Return to Normal State" option to also create another task with the opposite objective. This option is only available for a task that leaves the device in an abnormal state (for example, creating an Open task for a normally closed device).
7. Click Create to add the task to the selected order.

Tasks (4)

Check

Transformer

Prediction Bank

Select Crew

Confirmed

Open

Repair

Transformer

Bank

Select Crew

New

Open

Switch

Select Crew

New

Close

Switch

Select Crew

New

8. Alternatively, click Create and Execute to add the task to the selected order and complete the task with the default result (this also updates the device state, as appropriate). If the completion time is not set, the task is completed with the current time.



Note

The Create and Execute option is disabled when creating a new Open task for a device that is already open. Use the Create option to create a new pending Open task to be used when the device of record is closed.

To create a task from the Order Worksheet display:

1. Open the Order Worksheet display for an order.
2. Click the Add Task ("+") button in Tasks section header.



3. Select the task type.
4. Add the associated device by doing one of the following:
 - Mark a device with mark type 2 on the network view using the Mark as Selected Device option from the device right-click menu, and then click the Select Device from Map button on the Create Task dialog.
 - Drag-and-drop a device from the network view into the Facility field.
5. Select the phases that are associated with the task implementation.
6. Select the crew.
7. Set the result and completion time (if creating a task for an operation that has already been completed). The completion time is only applied when the result is specified and the Create and Execute option is selected. The completion time is ignored if not result is specified.

Create Task

Task Type

Assessment

Facility

Select Device From Map

Device: 6-7512-8912-0-7

Type: Distribution Transformer

Station: RAVEN

Crew

Webster (1104)

Completion Time

16:08 08/17

Select Phase

A B C

Comments

Dispatcher

Crew

Result

Minor Damage

Cancel

Create and Execute

Create

8. Click Create.

Or:

Click Create and Execute to add the task to the selected order and complete the task with the selected result (the associated device status changes accordingly, as appropriate). If the completion time is not set, the task is completed with the current time.

The task is added to the selected order.

3.6. Updating Order Properties

You can update order properties on the Order Worksheet display.

To update order properties:

1. Right-click the order on the Order List display, and then click Order Worksheet.

Or:

Select Order Worksheet from the order right-click menu from the network view.

The Order Worksheet display appears.

The screenshot shows the 'Order Worksheet: 2290000008-1' interface. At the top, it displays 'Maintenance Order 2290000008-1' with summary statistics: Affected Customers (Current / Initial) 0 / 0, Current ETR 18:00 08/17, Duration (min) 1, CMI 0, and Calls (priority / all) 0 / 0. The main area is divided into several sections: 'Status' (In Progress), 'Instructions & Customer Notes' (Case Note: Trouble Located Working to Restore Power.), 'Tasks (2)' (listing Assessment, Distribution Transformer, and Maintenance tasks), 'Responsibilities' (Owner & Organization: Transfer), and a right-hand panel with 'Incident 2290000011' details (Pole# 22464610, 7622 West St, Roarke, 6-7512-7122-0-5 | F8864 RAVEN (Roarke)). The right panel also includes tabs for General, Facility, Customers, Damage Assessment, and More, with a 'Details' section showing Incident type (NonOutage), Planned outage ID, Non outage type (Maintenance), Work order ID, Working Status, Crew is OnSite for this incident, Callback (Automatic), Follow up required, Fault Location (Location source: None specified), Cause (System Affected: None, Cause: No Reason Assigned), and Sub Cause.

2. Enter the order information, as described in [Order Worksheet](#)

The updates are applied automatically as you perform your changes.

3.7. Updating Task Properties

To update task properties from the Edit Task dialog:

1. Open the Order Worksheet display.
2. Click the Edit Task (pencil) button at the left of a task in the Tasks section.
3. The Edit Task dialog appears.

Repair Task

Status

Complete

Crew Assignment

Webster (1104)

Comments

Dispatcher

Crew

Facility

Distribution Transformer [B]

Facility ID

6-7512-8912-0-7

Feeder and Substation

F8862 RAVEN

Completion

Phases

B

Result

Repaired

Completion Time

16:54 08/17

Close

Done

- Update the task information, as described in [Edit Task](#).

The updates are applied automatically as you make your changes.

- Click Done to complete the task with the specified completion information.
- Alternatively, click Close to close the dialog box and discard the completion information.

3.8. Completing a Task

You can complete a task from the Order Worksheet display, Order List display, or network view.


To update task status from the Order Worksheet display:

- Open the Order Worksheet display.
- Click the Task Status (ellipsis) button at the right of a task in the Tasks section.


3. Select the task result to complete the task or select Cancelled to cancel the task.

Note

Some tasks have negative results available (for example, Not Done, as shown in the figure below). These results allow a task to be completed if a crew spent any time carrying out the task, even if the desired result was not obtained. Cancellation can be used to indicate that a task was anticipated to be needed but ended up not being necessary.

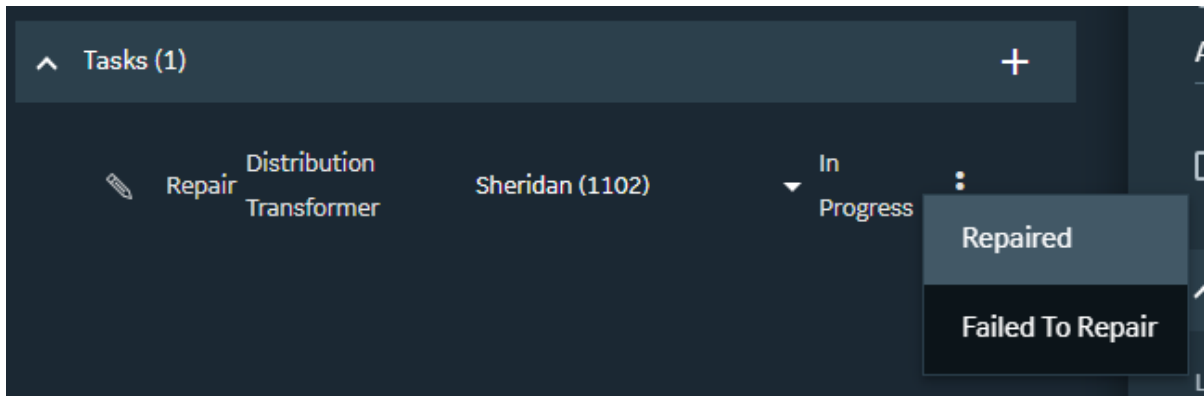

The associated task status is updated to completed or cancelled. For completed tasks, the task result is shown instead of the task status in the task list.

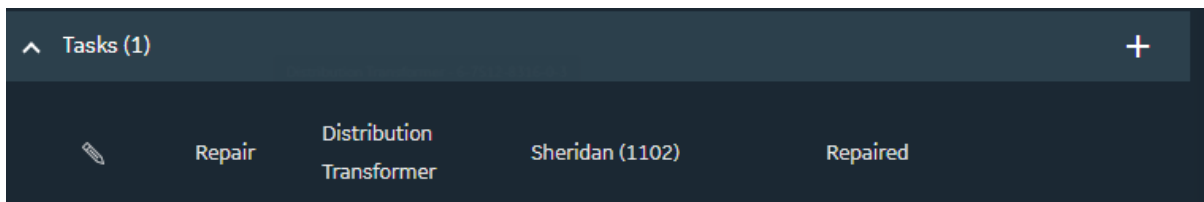


To update task status from the network view:

1. Navigate to an order on the network view
2. Right-click the order, and then select an action to update the task status (for example, Confirm, Move Up, Move Down, No Outage, or Repair for restoration orders and Problem Resolved or Problem Not Resolved for investigation orders).

Note

The Move Up option corresponds to the Confirm Closed No Power result and the Move Down option corresponds to the Confirm Closed With Power result.

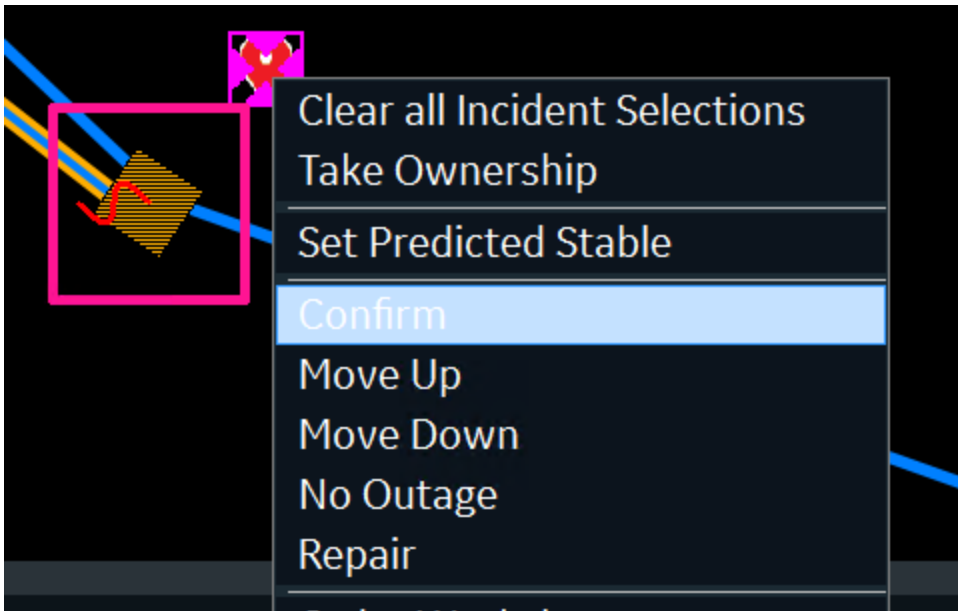

The associated order task status is updated accordingly. For example, when clicking Confirm for a predicted incident, the Check Prediction task status changes to Complete and the result is set to Confirmed Open. The device state changes to Open.

To update task status from the Order List display:

1. Open the Order List display.
2. Right-click the order, point to the order type, and then select the required task status from the order type submenu. For example, point to Investigation and select Problem Confirmed.

Order List									
	Order	List Priority	C L	C B	C C	C P	A N	Type	Status
■	1740000009-1	6	🏠					Restoration	New
■	1660000004-1	7						Maintenance	New
■	1660000006-1	8	🏠						Unassigned
■	1660000004-2	9							Unassigned
■	1740000010-1	10	🏠						Arrived
■	1740000011-1	11							
■	1740000008-2	12							Unassigned

Order Worksheet
Go To
Status
Cancel Order
Investigation
Take Ownership
Create Follow-Up Investigation Order...

Problem Confirmed
Problem Resolved
No Problem
Unassigned

i Note

When you complete a Check Prediction task with the Confirmed - Open result for part of the initially affected phases, the block prediction status is set for the not affected phases and a new

incident and order are created based on downstream outage indications (customer calls and AMI Out events).

3.9. Updating Order Status

You can update the order status from the Order List display or the Order Worksheet display.

To change the order status from the Order List display:

1. Open the Order List display.
2. Right-click an order record, point to the Status option, and then select the required status from the status submenu.

Note

The status submenu includes only valid statuses that the order can be transition to, according to the workflow.

+ image::image114.png[]

To change the order status from the Order Worksheet display:

1. Open the Order Worksheet display.
2. Click the Status field, and then select the required status from the list.

Order Worksheet: 1740000009-1

Restoration Order 1740000009-1

Affected Customers (Current / Initial)	Current ETR	Duration (min)	CMI	Calls (
0 / 1	05:00 AM 06/23	196	196	0 / 1

^ Status

Status

Field Complete

Field Complete

Closed

06:06 AM 06/23

Closed

Priority

None

ETR - 0

—

05:00 AM 06/23

+

☒ Send ETR notifications

ITR

05:00 AM 06/23

Crew ETA

Earliest Arriving Crew(s)

^ Instructions & Customer

Case Note

Power has been restored

Instructions

Dispatcher C

^ Tasks (2)

3.9.1. Order Status Transition Constraints

Based on the task completion, the following status transitions will be disallowed from the Order Worksheet Display and the Order List Display:

- It is not possible to transition an order from In Progress to New if tasks have been completed on the order.
- It is not possible to transition an order from any status to Cancelled if tasks have been completed on the order.

Note

It is possible to transition an order from In Progress to Closed if all tasks on the order have been completed or cancelled.

3.10. Completing and Closing an Order

To complete and close an order:

1. Ensure that the order objective is achieved, and all tasks are completed.
2. Ensure that all relevant fields on the Order Worksheet display are entered.

3. Ensure that the device of record is closed and that there are no affected customers.
4. Open the Order Worksheet display.
5. Update the Status field value to Field Completed.
6. Update the Status field value to Closed.

The order is closed and the associated incident are cleared.


To complete and close multiple orders:

1. Ensure that the order objective is achieved, and all tasks are completed.
2. Ensure that all relevant fields on the Order Worksheet display are entered.
3. Ensure that the device of record is closed and there are no affected customers.
4. From the Order List display, select orders and select the Status > Field Complete option from the context menu.

The orders in the In Progress state are transitioned to Field Complete.

5. From the Order List display, select orders and select the Status > Close option from the context menu.

The orders in the In Progress or Field Complete states are transitioned to Closed. If any warnings or errors occur, the following dialog (an example) will appear and allow any orders with warnings only to be closed. Those with errors for the order will not be allowed to close until errors are resolved.

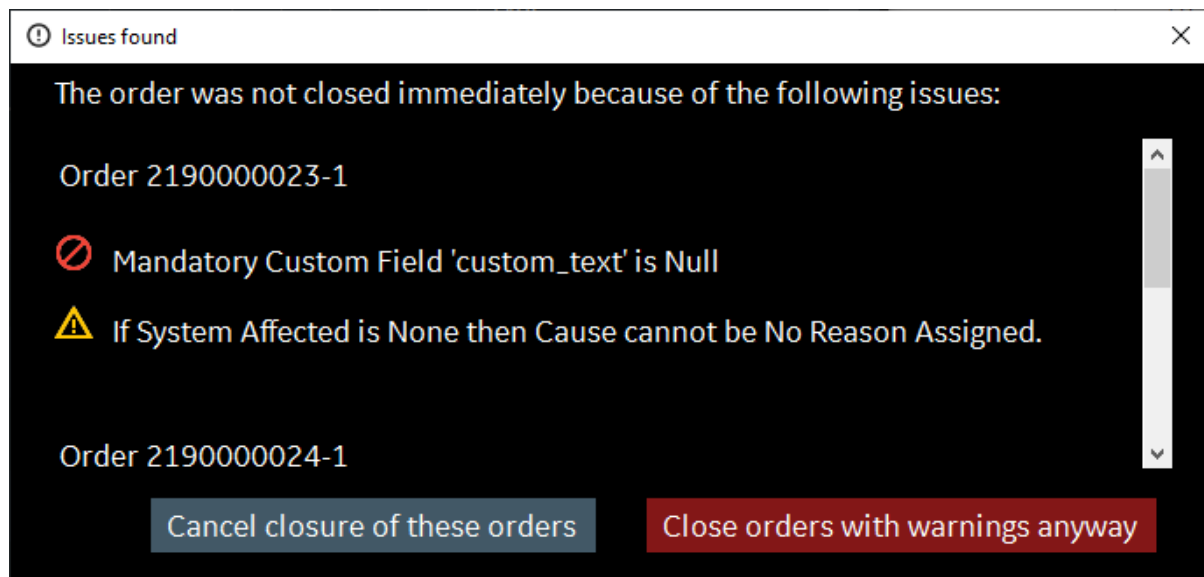

i Note

When the selection includes orders that can be transitioned and orders that cannot be transitioned, according to the order workflow, only the orders that are suitable for the transition are transitioned. The other orders are not transitioned.

Note

It is possible to transition an order from In Progress directly to Closed if all tasks on the order have been completed or cancelled, or if there are no tasks on the order.

3.11. Suspending an Order

To suspend an order:

1. Open the Order Worksheet display.
2. Update the Status field value to Suspended.

The order status changes to Suspended. The time of suspension is recorded.

3. Select the suspension reason from the Suspended Reason drop-down list.
4. Create another order, as appropriate.

3.12. Multi-Select Quick Close of Restoration and Investigation Orders

The multi-select quick close capability allows operators or dispatchers to close single or multiple **restoration** and **investigation** orders in bulk with a single action.

3.12.1. Field Configuration Template and Custom Field Setup

This section describes the configuration steps for setting up the field configuration template and custom fields.

3.12.1.1. Field Configuration Template:

The QuickCloseFieldConfiguration.csv file contains the following details.

ConfigTyp	Field	Value	LookupField	Lookup
1	Incident_Cause	11		
1	Incident_Subcause	273		
2	Order_Custom_InterruptionType		Incident_OutageDeviceType	QuickCloseInterruptionType

Note

Invalid or missing fields in the configuration template result in an error message.

The field values must match the values defined in the CSV configuration.

- Cause: **11 (Storm)**
- Sub Cause: **273 (Substation - Non-Debris)**

For example, if the CSV configuration sets *Incident_Cause* to value 11 (Storm), entering an incorrect value causes a validation error.

Two configuration types are supported for updating Incident or Order fields, including custom order fields.

- Type 1: Simple / Direct type configuration
- Type 2: Derived value configuration

Type 1: Simple / Direct Type configuration

Direct field updates are defined using key-value pairs.

ConfigType: A value of 1 in the *ConfigType* column indicates a simple Field Name and Field Value pair.

Field:

Fields must have a valid prefix:

- *Incident_* incident fields
- *Order_* order fields
- *Order_custom_* simple custom order fields

The valid format for **direct fields** is:

- *Incident_* <FieldName> or *Order_* <FieldName>, where <FieldName> must match an existing incident or order property. Any mismatch can cause validation errors or processing failures.

To configure a simple **custom field**:

- Set the *ConfigType* to 1.
- Use the *Order_custom_* <FieldName> format, where <FieldName> is the name of the custom field.

Value: Specifies the value to assign to the field. If the field uses a coded translation, the value must be the coded translation key. Invalid values result in validation errors or order processing failures.

Type 2: Derived Type Configuration

Derived values are calculated based on other column values, and require coded translations lookups.

Device Type Mapping and Values:

The *QuickCloseInterruptionType* values are depends on the *OutageDeviceType*. Ensure device types

are correctly mapped to determine the appropriate interruption type.

ConfigType: A value of 2 in the *ConfigType* column indicates a derived configuration.

Value: No entry is required. The value is resolved using the *LookupField* and *Lookup* columns.

LookupField: Specifies the coded translation key used to retrieve the derived value.

Lookup: Specifies the coded translation that maps the *LookupField* value to the resolved output. Missing or invalid coded translations result in validation errors or processing failures.

Note

The coded translation must map the device type to the corresponding interruption type.

For example:

If the device type is 10, the *Lookup* value is resolved using key 10 and the corresponding text value is fetched and set to 1.

- *OutageDeviceType* — *LookupField*
- *QuickCloseInterruptionType* — *Lookup*
- *InterruptionType* — *Reference*

3.12.1.2. Custom Field Update

To update the *InterruptionType* custom field on an order, prefix the field name with *Order_Custom_*. The **Value** field contains the coded translation for *InterruptionType*.

The custom fields value is updated based on the device type and the corresponding key in the *QuickCloseInterruptionType* coded translation.

Example Mappings:

OutageDeviceType 10 (Service Point): InterruptionType value 1.

Data Correction: 3400000005-1

Chronology Log			
Time	Type	Action	
06-12-2025 14:2...	INCL	Incident Created. Device ID:SP_17512567 Device Type:ServicePoint Phase Out:B Predict...	
06-12-2025 14:2...	INCL	Call 555004790 associated with incident 3400000005	
06-12-2025 14:2...	INCL	Call 555004790 from Reischl Jeanine 8126 MILL PL Phone: (555)555-6230 Received: 12/...	
06-12-2025 14:2...	INCU	Changed DistinctTroubleCodes from " --- " to "11.0.0.0"	
06-12-2025 15:4...	ORD	Status changed from New to In Progress for order 3400000005-1.	
06-12-2025 15:4...	INCU	Changed INCIDENTSTATUS from "Incident is unassigned" to "Incident is waiting for cleara..."	
06-12-2025 15:4...	INCU	Changed ENDTIME from " --- " to "12/06/2025 3:45 PM"	
06-12-2025 15:4...	INCU	Changed ACKNOWLEDGEDTIME from " --- " to "12/06/2025 3:45 PM"	
06-12-2025 15:4...	TSK	Status of task Investigate for Service Point - --- on order 3400000005-1 changed from N...	
06-12-2025 15:4...	INCU	Changed REASONGROUP from "No Reason Assigned" to "Storm"	
06-12-2025 15:4...	INCU	Changed REASON from "No Reason Assigned" to "Storm - Substation - Non-Debris"	
06-12-2025 15:4...	INCU	Changed CASENOTE from "No Case Note Assigned" to "Power has been restored"	
06-12-2025 15:4...	ORD	InterruptionType for order 3400000005-1 changed from " --- " to "1".	
06-12-2025 15:4...	INCU	Changed ENDTIME from "12/06/2025 3:45 PM" to "12/06/2025 3:45 PM"	
06-12-2025 15:4...	ORD	Status changed from In Progress to Field Complete for order 3400000005-1	

OutageDeviceType 8 (Transformer): InterruptionType value 3.

Data Correction: 340000010-1

Time	Type	Action
06-12-2025 15:5...	TSK	Repair task created for Distribution Transformer - 6-7512-5646-0-5 on order 340000001...
06-12-2025 15:5...	INCU	Changed TOTALCUSTOMERSAFFECTED from "0" to "9"
06-12-2025 15:5...	ORD	Status changed from New to In Progress for order 3400000010-1.
06-12-2025 15:5...	TSK	Status of task Repair for Distribution Transformer - 6-7512-5646-0-5 on order 34000000...
06-12-2025 15:5...	SWT	Switching step created at RAVEN 6-7512-5646-0-5, Customers out: 0, Customers restore...
06-12-2025 15:5...	TSK	Status of task Repair for Distribution Transformer - 6-7512-5646-0-5 on order 34000000...
06-12-2025 15:5...	INCU	Changed CurrentCustomer from "9" to "0"
06-12-2025 15:5...	INCU	Changed ServiceIndex from "13.5" to "0"
06-12-2025 15:5...	INCU	Changed SafetyIndex from "9" to "0"
06-12-2025 15:5...	INCU	Changed INCIDENTSTATUS from "Incident is unassigned" to "Incident is waiting for cleara...
06-12-2025 15:5...	INCU	Changed ENDTIME from " --- " to "12/06/2025 3:53 PM"
06-12-2025 15:5...	INCU	Changed CalculatedCaseNote from "Outage Recorded" to "Power has been restored"
06-12-2025 15:5...	INCU	Changed IsDeviceOfRecordOpen from "True" to "False"
06-12-2025 15:5...	INCU	Changed REASONGROUP from "No Reason Assigned" to "Storm"
06-12-2025 15:5...	INCU	Changed ACKNOWLEDGEDTIME from " --- " to "12/06/2025 3:53 PM"
06-12-2025 15:5...	INCU	Changed REASON from "No Reason Assigned" to "Storm - Substation - Non-Debris"
06-12-2025 15:5...	ORD	InterruptionType for order 3400000010-1 changed from " --- " to "3".
06-12-2025 15:5...	ORD	Status changed from In Progress to Field Complete for order 3400000010-1.
06-12-2025 15:5...	INCU	Changed Cleared from "False" to "True"

OutageDeviceType 2 (Fuse): InterruptionType value 4.

Data Correction: 3400000031-1

Time	Type	Action
06-12-2025 18:1...	ORD	Status changed from New to In Progress for order 3400000031-1.
06-12-2025 18:1...	TSK	Status of task Check Prediction for Fuse - 22057432-1 on order 3400000031-1 changed from New to In Progress.
06-12-2025 18:1...	INCU	Changed INCIDENTTYPE from "Predicted" to "Confirmed"
06-12-2025 18:1...	INCU	Changed IsDeviceOfRecordOpen from "False" to "True"
06-12-2025 18:1...	SWT	Switching step created at RAVEN 22057432-1, Customers out: 0, Customers restored: 1, Operation Time: 12/06/2025 6:19 PM
06-12-2025 18:1...	TSK	Status of task Check Prediction for Fuse - 22057432-1 on order 3400000031-1 changed from In Progress to Complete.
06-12-2025 18:1...	INCU	Changed CurrentCustomer from "1" to "0"
06-12-2025 18:1...	INCU	Changed ServiceIndex from "1.5" to "0"
06-12-2025 18:1...	INCU	Changed SafetyIndex from "1" to "0"
06-12-2025 18:1...	INCU	Changed INCIDENTSTATUS from "Incident is unassigned" to "Incident is waiting for clearance by Dispatcher"
06-12-2025 18:1...	INCU	Changed ENDTIME from " --- " to "12/06/2025 6:19 PM"
06-12-2025 18:1...	INCU	Changed CalculatedCaseNote from "Outage Recorded" to "Power has been restored"
06-12-2025 18:1...	INCU	Changed IsDeviceOfRecordOpen from "True" to "False"
06-12-2025 18:1...	INCU	Changed REASONGROUP from "No Reason Assigned" to "Storm"
06-12-2025 18:1...	INCU	Changed ACKNOWLEDGEDTIME from " --- " to "12/06/2025 6:19 PM"
06-12-2025 18:1...	INCU	Changed REASON from "No Reason Assigned" to "Storm - Substation - Non-Debris"
06-12-2025 18:1...	ORD	InterruptionType for order 3400000031-1 changed from " --- " to "4".
06-12-2025 18:1...	ORD	Status changed from In Progress to Field Complete for order 3400000031-1.
06-12-2025 18:1...	INCU	Changed Cleared from "False" to "True"

3.12.2. Pre-Requisites for Configuring Quick Close settings

To enable Quick Close configuration settings, perform the following prerequisites.

Configure key-value pairs:

To configure key-value pairs for Incident and Order fields, ensure the QuickCloseFieldConfiguration.csv file with mandatory fields is placed in the following directory:

C:\Eterra\Distribution\FantasyIsland\config\server

Note

Ensure the file name is specified as **QuickCloseFieldConfiguration** (case-insensitive). Any spelling error results in an error message.

Coded translation items for config-based update:

QuickCloseInterruptionType: This coded translation must exist. It validates whether a device supports quick close; if the OutageDeviceType ID is not present, quick close is skipped for that device.

InterruptionType: This coded translation is optional. If the Text field of a QuickCloseInterruptionType entry contains a key, the corresponding InterruptionType coded translation must also exist.

For more information about coded translation items, see *Coded Translation Editor User Guide*.

To enable Quick Close, configure the parameter `OMS_BULKCLOSE_ENABLE = true` in the following configuration file:

```
`C:\Eterra\Distribution\FantasyIsland\config\server\NetServerOmsConfig_localhost.txt`
```

3.12.3. Quick Close Validation

Quick Close validates whether an order can be closed by checking for any uncanceled switching tasks at initiation.

3.12.3.1. For restoration orders:


- Prediction check and repair tasks are completed with a **Repaired** status.
- All incomplete tasks are cancelled, except switching or workflow tasks.

Un-cancelled Open / Close Task:

- Any open or close tasks in an uncanceled state block order processing.

Cancelled Switching Task:

- Orders that contain both **New** and **Cancelled** switching tasks block order processing.
- Orders are closed if they contain only **Cancelled** switching tasks (open/close) and no new or completed switching tasks.
- Orders containing multiple tasks other than switching tasks (open/close) are closed.

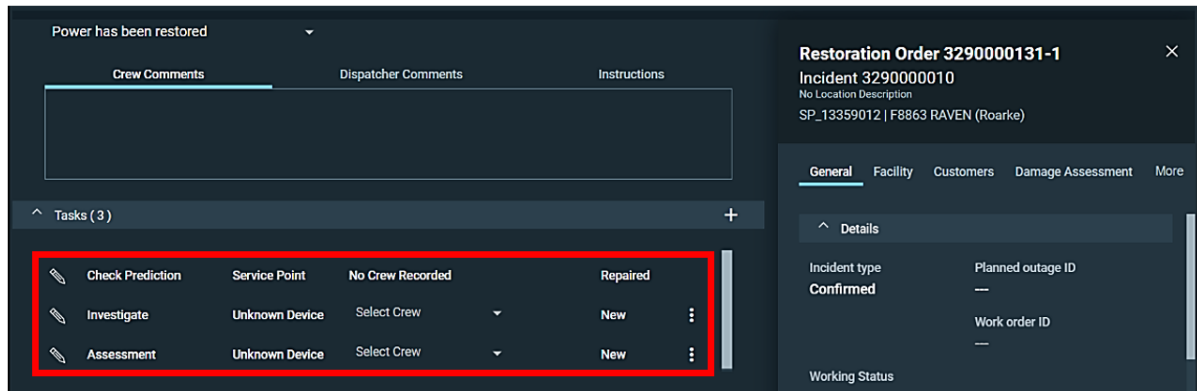


3.12.3.2. For investigation orders:

Quick close cancels any incomplete tasks that are not switching or workflow tasks, based on order types.

- Investigate tasks are completed with a **Found And Fixed Problem** status.
- Fix problem tasks are completed with a **Fixed Problems** status.
- Other non-switching tasks are **Cancelled**.


Orders containing multiple non-switching tasks can be closed.

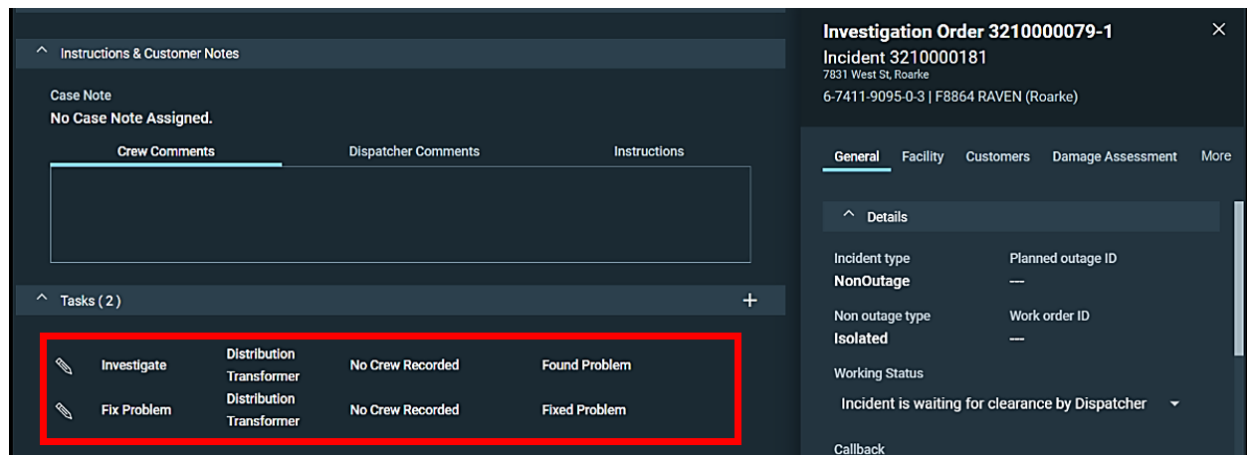

The following section describes the how to close the restoration and investigation orders for single and multiple orders.


To close a single restoration and investigation order:

1. Select the order in the **Order** tab.
2. Right-click and select **Quick Close** from the context menu.

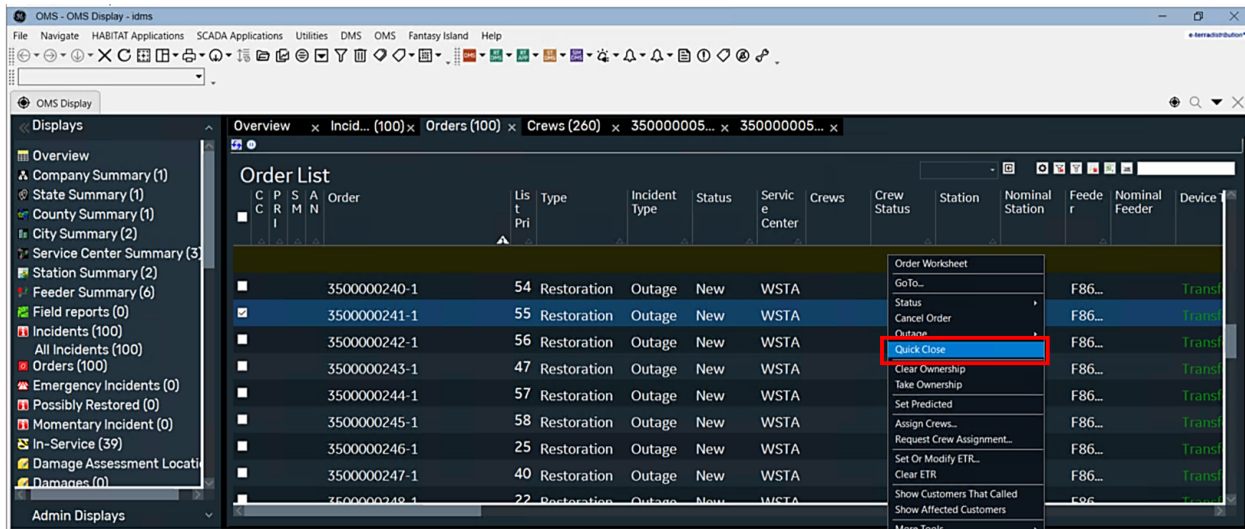


To close multiple restoration and investigation orders:

1. Select the orders in the **Order** tab.
2. Right-click and select **Quick Close** from the context menu.

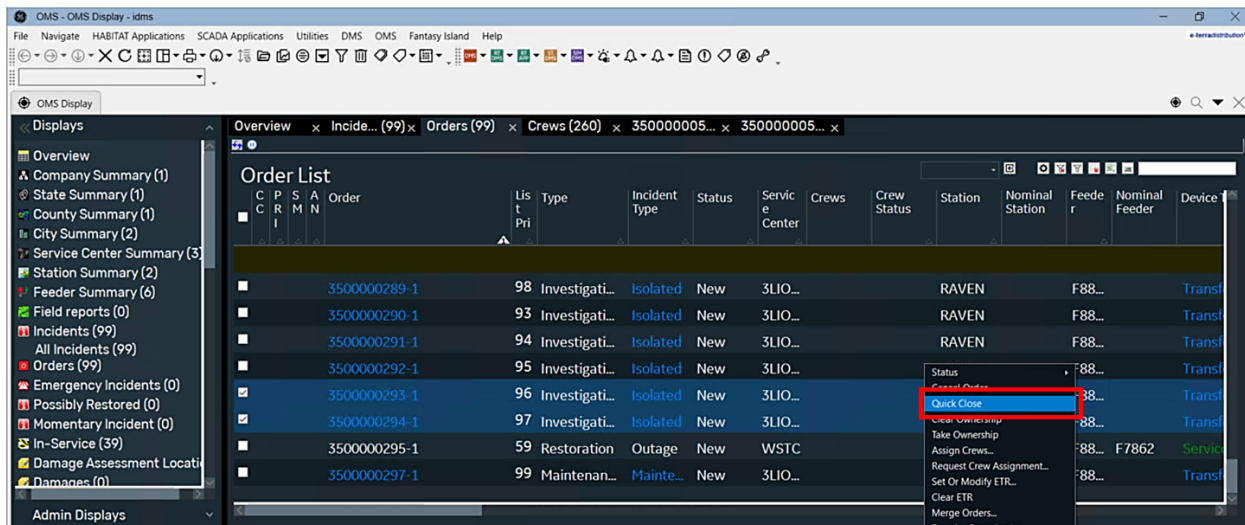

Orders with switching tasks:

Restoration orders that do not meet the switching task validation criteria are blocked from processing, and a pop-up message is displayed.

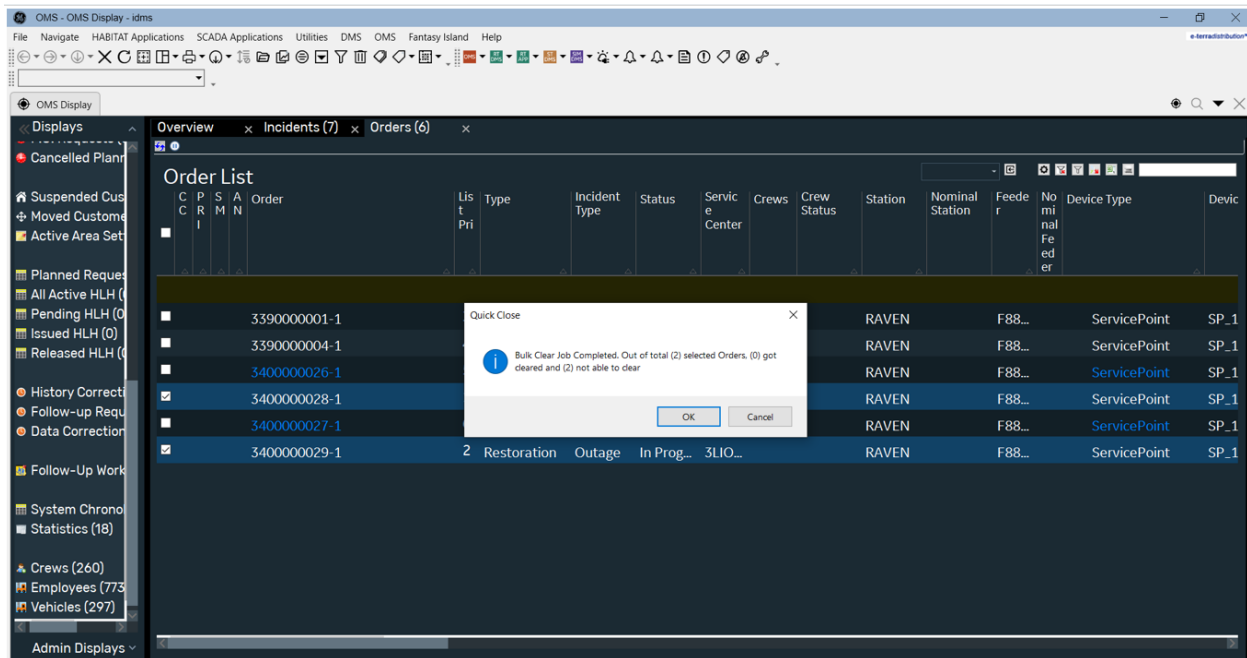


For more information about quick close validation, see [Quick Close Validation](#).

Locked orders:

Note


The **Order List** highlights locked orders in red.

- Locked orders are skipped during Quick Close.
- A message indicates that locked orders cannot be processed.

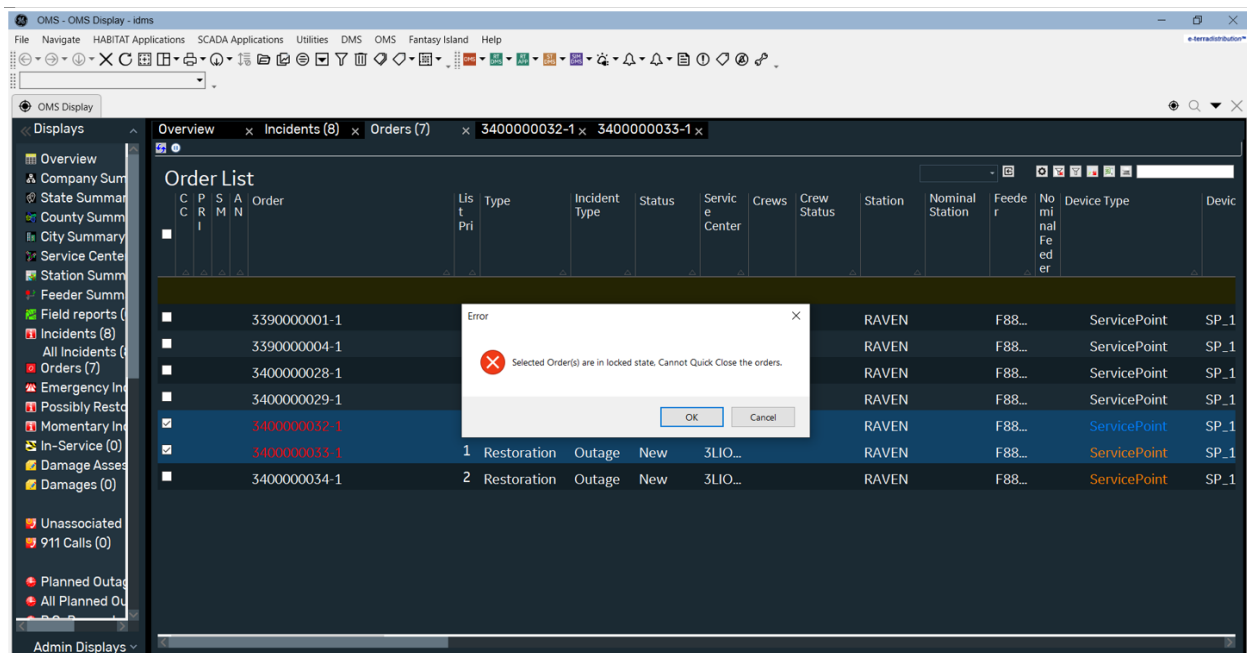


When a selection contains both locked and unlocked orders:


- Locked orders are excluded from the request.
- A notification indicates that locked orders will not be processed.
- Click **Cancel**. Orders must not be processed for Quick Close.

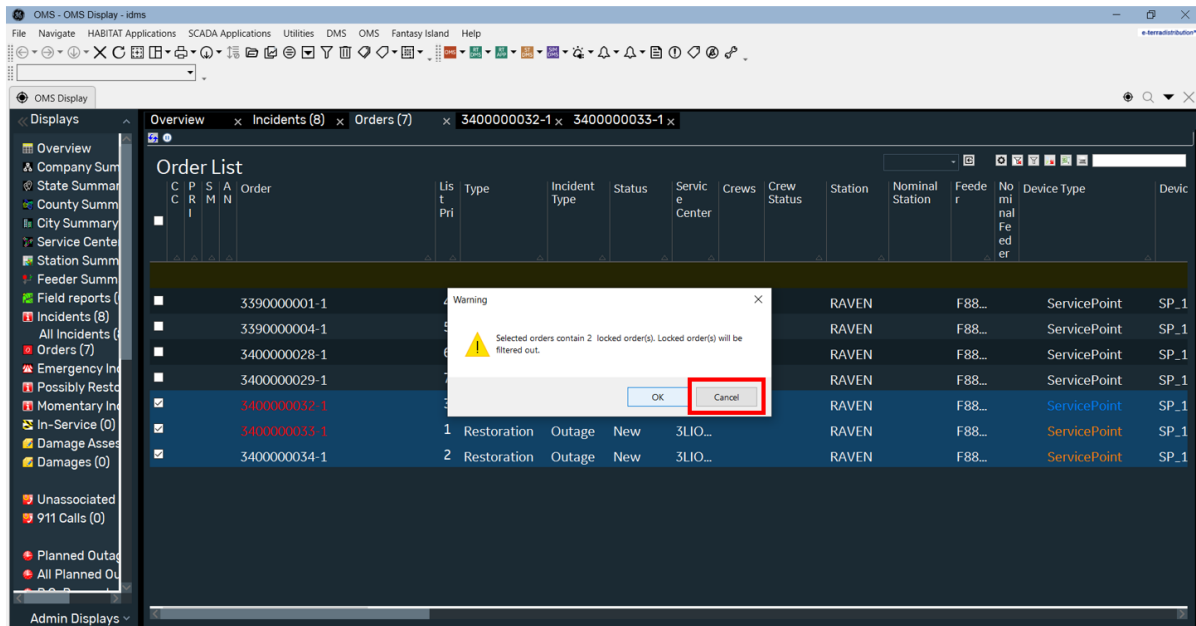

- Click **OK** to process only the unlocked orders and display the popup message.

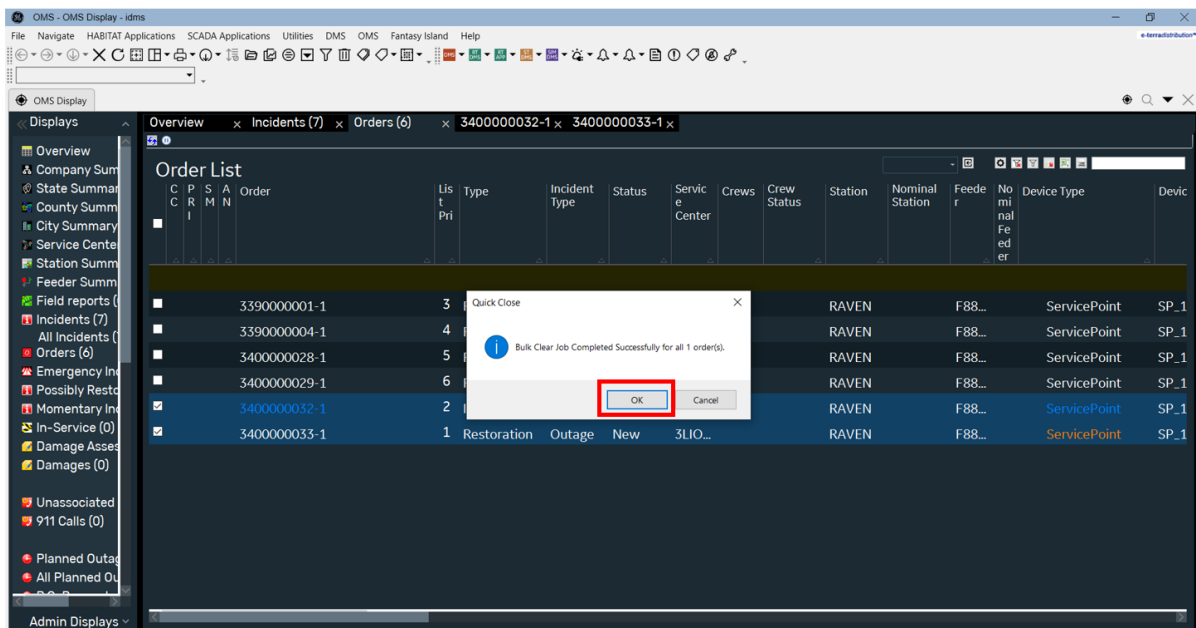

- Closed order details are recorded in the Data Correction tab.

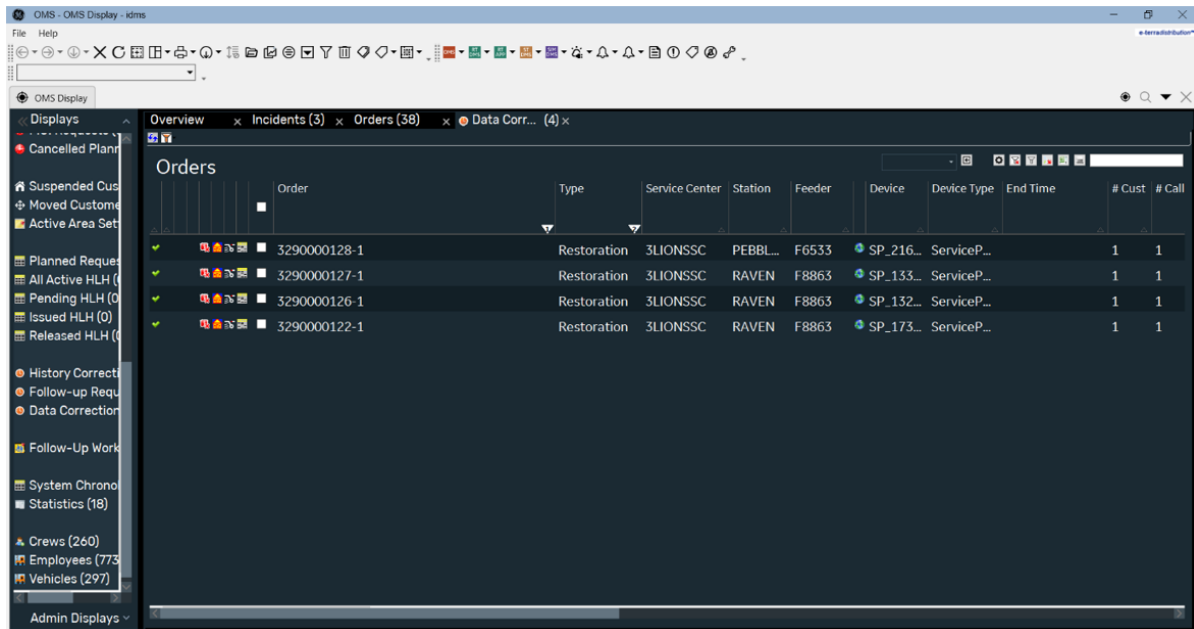

Note

Quick Close does not support SCADA devices (Recloser, Breaker, and Elbow).

To view updated cause and sub cause details for closed orders:

1. Right-click the **Order** in the **Data Correction** tab.
2. Select **Update Data Correction** from context menu.

Note

Quick Close retains manually populated values for the **Cause** and **Sub Cause** fields in Order worksheet.

3. View the task status in the **Chronology Log**.

Data Correction: 3290000126-1

Order Incident Customers Switching Restoration Chronology

Chronology Log

Time	Type	Action
25-11-2025 12:42...	TSK	Check Prediction task created for Service Point - --- on order 3290000126-1.
25-11-2025 12:42...	INCU	Changed TOTALCUSTOMERSAFFECTED from "0" to "1"
25-11-2025 12:54...	INCU	Changed INCIDENTTYPE from "Single Customer" to "Confirmed"
25-11-2025 12:54...	INCU	Changed ACKNOWLEDGEDTIME from " --- " to "11/25/2025 12:54 PM"
25-11-2025 12:54...	ORD	Status changed from New to In Progress for order 3290000126-1.
25-11-2025 12:54...	TSK	Status of task Check Prediction for Service Point - --- on order 3290000126-1 changed fr...
25-11-2025 12:54...	INCU	Changed EndTime from " --- " to "11/25/2025 12:54 PM"
25-11-2025 12:54...	INCU	Changed CurrentCustomer from "1" to "0"
25-11-2025 12:54...	INCU	Changed CalculatedCaseNote from "Outage Recorded" to "Power has been restored"
25-11-2025 12:54...	SWT	Switching step created at RAVEN SP_13297970, Customers out: 0, Customers restored: 1...
25-11-2025 12:54...	INCU	Changed INCIDENTSTATUS from "Incident is unassigned" to "Incident is waiting for cleara...
25-11-2025 12:55...	TSK	Status of task Check Prediction for Service Point - --- on order 3290000126-1 changed fr...
25-11-2025 12:55...	TSK	Close task created for Distribution Transformer - 6-7612-0622-0-9 on order 3290000126...
25-11-2025 12:56...	INCU	Changed PingInProgress from "False" to "True"
25-11-2025 12:56...	TSK	Status of task Close for Distribution Transformer - 6-7612-0622-0-9 on order 329000012...
25-11-2025 12:56...	INCU	Changed PingInProgress from "True" to "False"
25-11-2025 12:57...	INCU	Changed REASONGROUP from "No Reason Assigned" to "Storm"
25-11-2025 12:57...	INCU	Changed REASON from "No Reason Assigned" to "Storm - Substation - Non-Debris"
25-11-2025 12:57...	ORD	InterruptionType for order 3290000126-1 changed from " --- " to "1".
25-11-2025 12:57...	ORD	Status changed from In Progress to Field Complete for order 3290000126-1.
25-11-2025 12:57...	INCU	Changed Cleared from "False" to "True"
25-11-2025 12:57...	INCU	Changed ClearTime from " --- " to "11/25/2025 12:57 PM"
25-11-2025 12:57...	INCU	Changed ClearingOperator from " --- " to "OMSINTERFACESERVER"
25-11-2025 12:57...	INCU	Changed IncidentStatus from "Incident is waiting for clearance by Dispatcher" to "Inciden...
25-11-2025 12:57...	ORD	Status changed from Field Complete to Closed for order 3290000126-1.
25-11-2025 12:57...	INCU	Changed LinkedOrderids from "e2ee6303-5837-4629-b211-9a9ed4c80edf" to " --- "

Cancel Incident

OK Cancel Apply

3.12.4. Quick Close Order Selection Limit

A maximum of 100 orders can be selected for Quick Close. Selecting more than 100 orders displays the error message: **Max 100 order(s) can be selected for quick close.**

OMS - OMS Display - Idms

File Help

OMS Display

Displays

Overview

Company Summary

State Summary (2)

County Summary

City Summary (5)

Service Center Summary

Station Summary

Feeder Summary

Field reports (0)

Incidents (104)

All Incidents (104)

Orders (208)

Emergency Incidents

Possibly Restored

Momentary Incidents

In-Service (0)

Damage Assessment

Damages (0)

Unassociated Calls

911 Calls (0)

Admin Displays

Overview x Orde... (208) x All I... (104) x

Order List

C	P	S	A	Order	List Pri	Type	Incident Type	Status	Service Center	Crews	Crew Status	Station
✓				3290000298-1			Outa...	New	WS...			ROYA
✓				3290000299-1			Outa...	New	WS...			ROYA
✓				3290000300-1			Outa...	New	WS...			ROYA
✓				3290000301-1			Outa...	New	WS...			ROYA
✓				3290000303-1	101	Restoration	Outa...	New	WS...			ROYA
✓				3290000304-1	102	Restoration	Outa...	New	WS...			ROYA
✓				3290000305-1	103	Restoration	Outa...	New	WS...			ROYA
✓				3290000306-1	45	Restoration	Outa...	New	WS...			ROYA
✓				3290000307-1	104	Restoration	Outa...	New	WS...			ROYA

Error

Max 100 order(s) can be selected for quick close.

OK Cancel

4. Advanced Operations with Orders

This chapter describes advanced operations with orders.

4.1. Merging Orders

The following rules apply when merging orders:

- You can merge all types of orders except Manual Switching, Planned Switching, and Load Shed orders.
- Restoration orders related to single customer and predicted incidents can only be merged into a restoration order with a confirmed outage.
- When merging with a restoration order, other order types can only be merged into the restoration order.
- Restoration/Manual switching orders can be merged to Planned Switching orders.
- If the parameter `ALLOW_NON_OUTAGE_MERGE_WITH_PREDICTED` in the Net Sever OMS Configuration is enabled (= 1), orders associated with the non-outage incidents can be merged into those that are associated with the predicted or predicted stable incidents. If disabled (=0), it is not possible to merge the other orders into those that are related to the predicted incidents. The list of orders to be merged can contain orders associated with the predicted incidents, but they can't be selected as the order into which the other orders should be merged.
- If the parameter `CHANGE_PREDICTED_INCIDENT_TO_PREDICTED_STABLE_AT_MERGING` in the Net Server OMS Configuration is enabled (= 1), a predicted outage whose order has other orders merged into it will be made predicted stable. If disabled (= 0), the outage will remain predicted. This parameter will only have an effect if `ALLOW_NON_OUTAGE_MERGE_WITH_PREDICTED = 1`.
- Merged orders with crews that are Dispatched, EnRoute, Arrived, or Released or higher are moved over to the target order.
- Completed tasks are moved over to the target order.
- Incomplete tasks from the merged orders are:
 - deleted if no crew is assigned to the merged order.

Or:

 - deleted if the merged order's crew status is Assigned.


Or:
- cancelled and moved to the target order if the merged order's crew status is Dispatched, EnRoute, or Arrived.
- Tasks and task comments of merged orders are transferred to the target order.
- Merged orders are cancelled. Incidents that are associated with the merged orders are

removed.

- Orders that are associated with the same incident cannot be merged.
- Switching steps, restoration steps, and CMI of the merged orders are combined in the target order.

To merge orders:

1. Open the Order List display.
2. Select orders to be merged.
3. Select the Merge Orders option from the right-click menu.

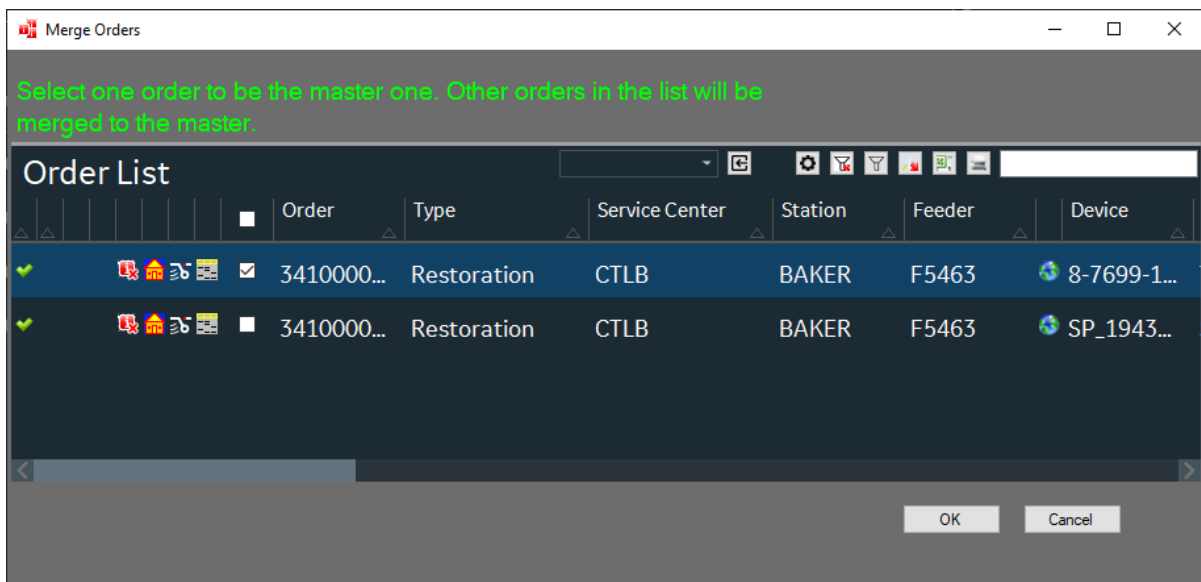


4. Select the order to be the master (target).
5. Click OK.

The other orders are merged into the target order.

To merge historical orders:

1. Open the Data Correction display.
2. Select orders to be merged.
3. Select the Merge Orders option from the right-click menu.

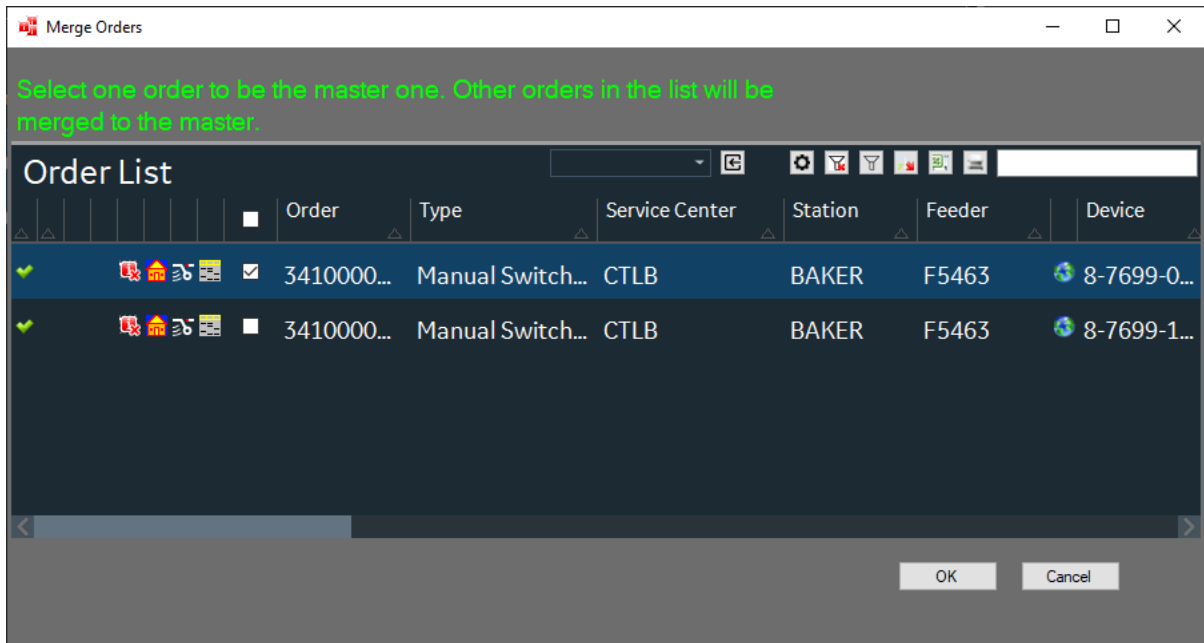

4. Select the order to be the master (target).
5. Click OK.


The other orders are merged into the target order.

4.1.1. Merging Downstream Outages


You can merge downstream restorations orders that are associated with predicted or single customer incidents with a restoration order on the next upstream protective device.

To merge downstream outages:

1. On the geographic view, navigate to a restoration order that has restoration orders downstream.
2. Right-click the order, and then click Merge Downstream Outages.

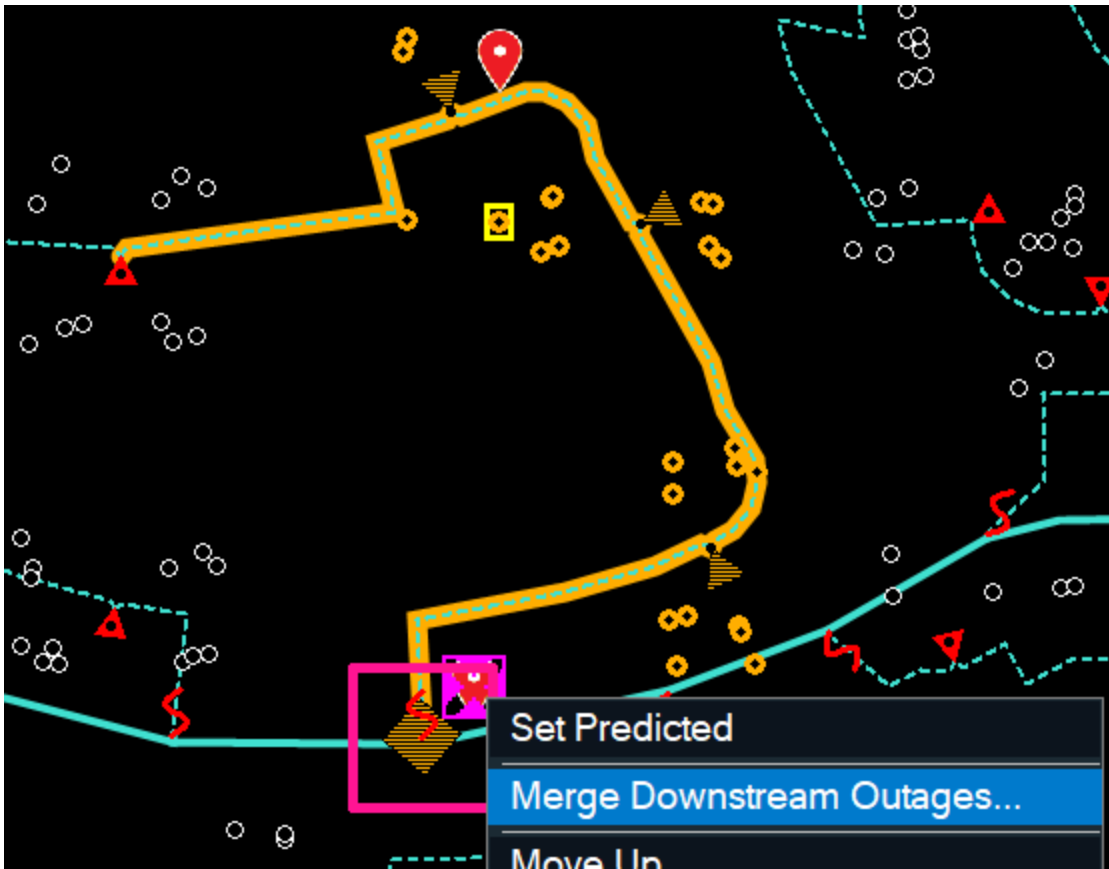

3. Select downstream restoration orders for predicted or single customer incidents to be merged into the order.

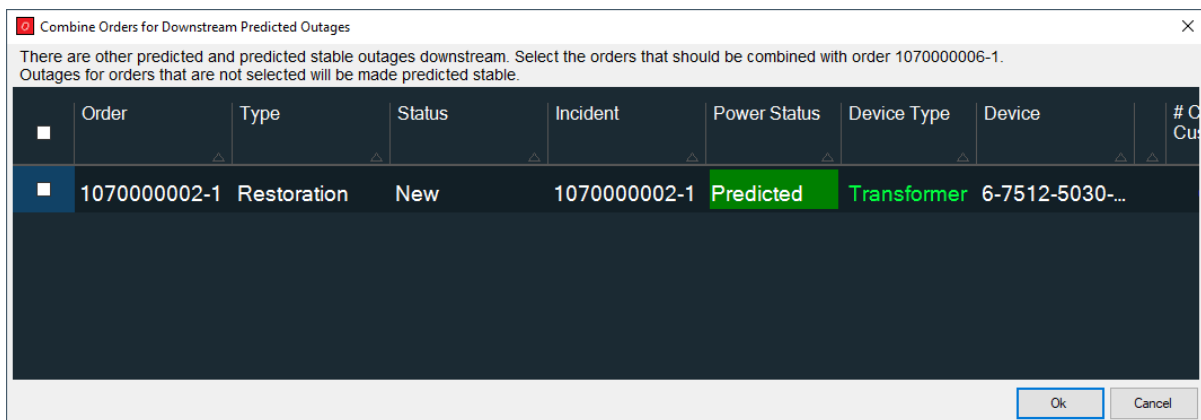

The downstream orders and incidents are merged into the upstream order. The device is predicted out and the prediction halo is shown downstream of the device.

4.2. Moving Orders Upstream and Downstream

Note


When an order is moved upstream or downstream, the system assigns the default organization for the new device type. The original organization is not retained.

4.2.1. Moving Orders Upstream


You can move a prediction to the next upstream protective device and optionally combine downstream orders that are associated with predicted or single customer incidents.

To move an order upstream from the network view:


1. On the geographic view, navigate to an order that is associated with a predicted or single customer incident.
2. Right-click the order, and then click Move Up.

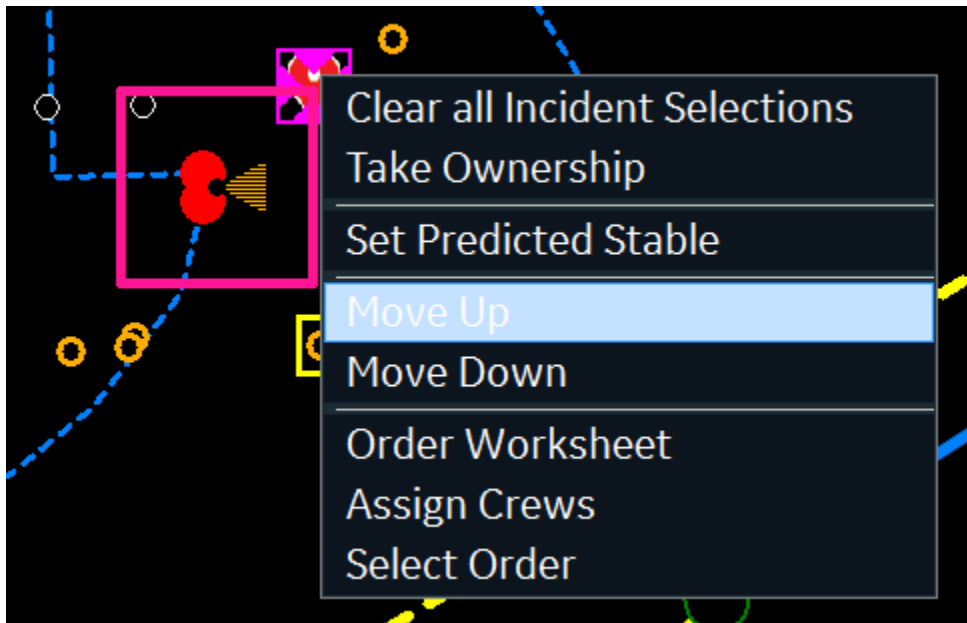

3. If there are other restoration orders for predicted or single customer incidents downstream of the next upstream protective devices, select orders to be merged into the new order. Incidents that are associated with unmerged orders will become predicted stable.

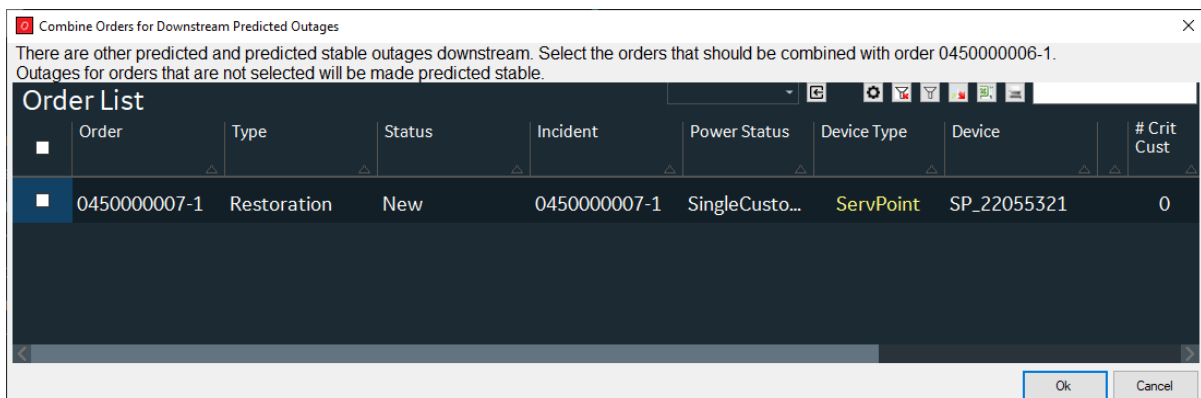

The incident and the order are moved to the next upstream protective device. The device is predicted out and the prediction halo is shown downstream of the device.

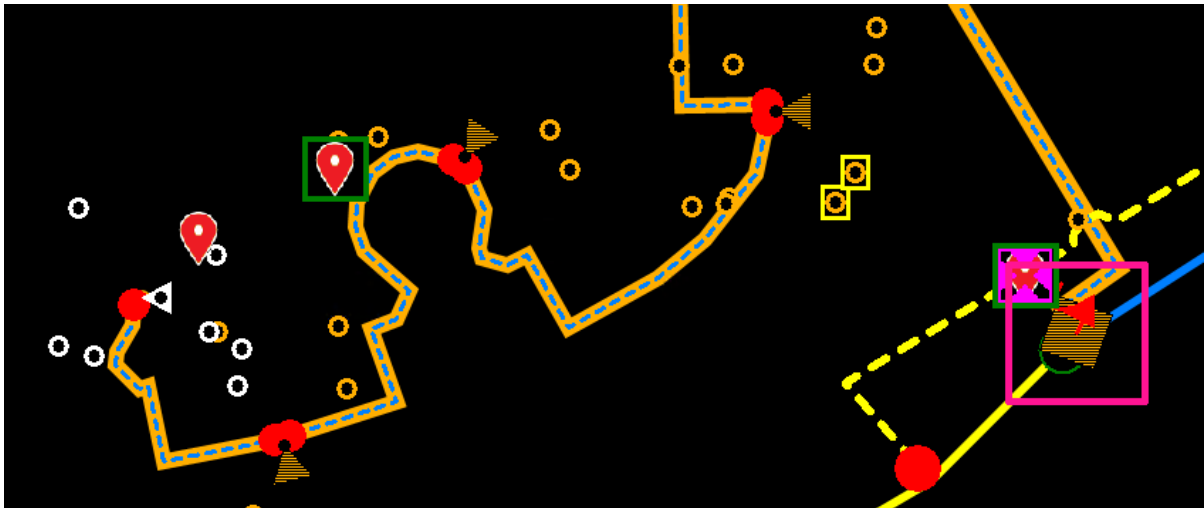

The order's Check Prediction task for the original device is completed with the Confirmed Closed No Power result. A new Check Prediction task is created for the new predicted device.

Tasks (2)				
	Check Prediction	Distribution Transformer	Dodge (1101)	Confirmed Closed No Power
	Check Prediction	Fuse	Dodge (1101)	New

To move an order upstream from the Order List display:


- Right-click the order on the Order List display, point to the Outage option, and then click Move Up.

4.2.2. Moving Orders Downstream


If you need to remove a prediction on a protective device and re-calculate prediction for downstream customer calls and AMI Out events, you can move an order (incident) downstream.

To move an order downstream:

1. On the geographic view, select an order that is associated with a predicted incident on a protective device.
2. From the order context menu, click Move Down.

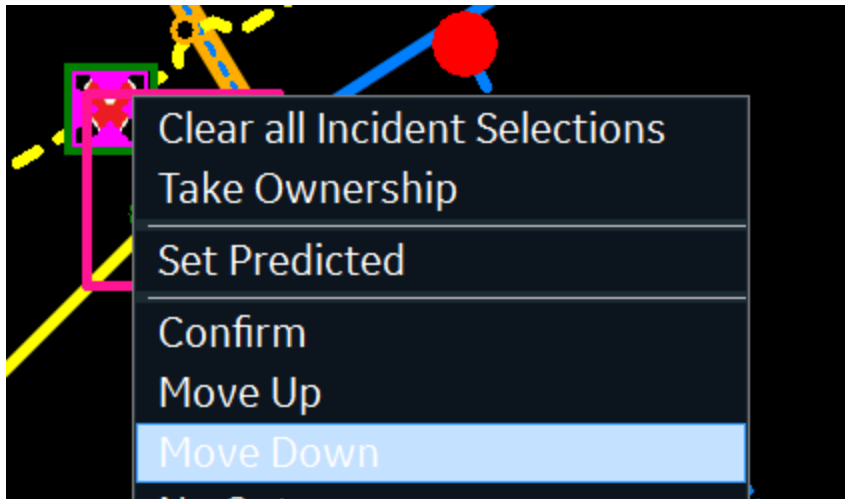

Outage prediction for this device is now disabled. Predicted and single customer incidents are created downstream based on previously received outage notifications.

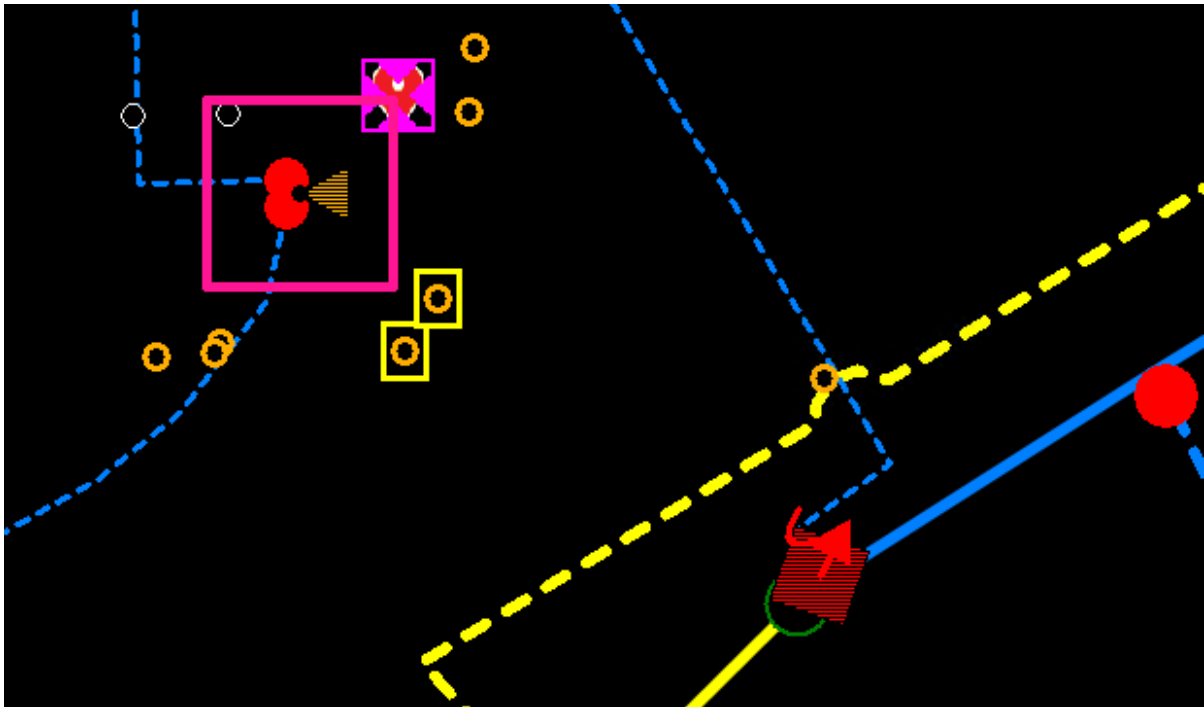

The original order is closed. The order's Check Prediction task is completed with the Confirmed Closed with Power result.

For the newly created incidents, you can again move orders downstream or upstream, as appropriate.

To move an order downstream from the Order List display:

- Right-click the order on the Order List display, point to the Outage option, and then click Move Down.

4.2.3. Rolling an Order Upstream

When more customer calls appear and the outage prediction rolls up, a Restoration order with a Check Prediction task is automatically rolled up to the next upstream device.

When an order is rolled up to the upstream device, the following occurs:


- One of the original downstream orders is moved upstream and the Check Prediction task is updated to refer to the upstream device.
- Tasks from merged orders, if any, are not retained.
- Dispatched crews merge up to the new order.
- Completed orders downstream of the device of record are not rolled up.

4.3. Confirming an Outage


You can confirm an outage for a protective device or for a restoration order.

To confirm an outage for a protective device from the network view:


1. On the geographic view, navigate to a protective device (fuse, distribution transformer, or recloser).
2. Right-click the device, and then click **Confirm Outage**.

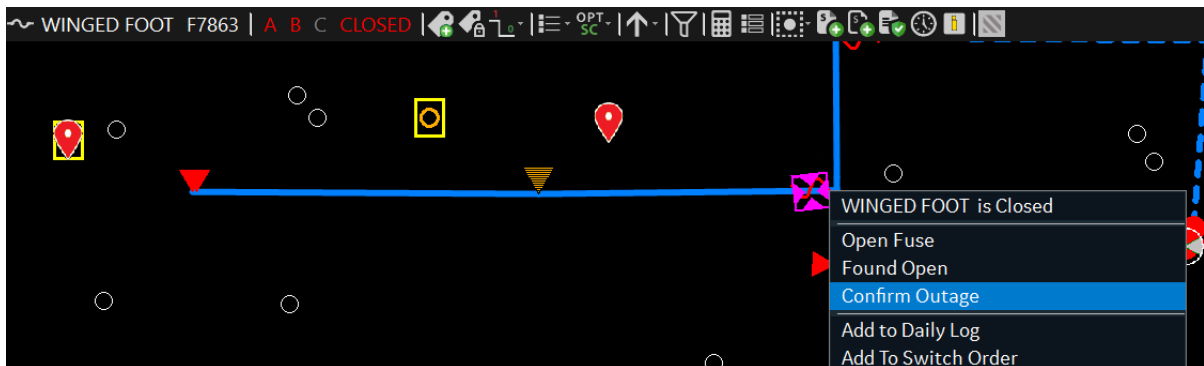

3. If there are restoration orders for predicted or single customer incidents downstream of the device, select incidents to be merged into the incident that will be created for the device. Incidents that are not selected for merge remain predicted stable.

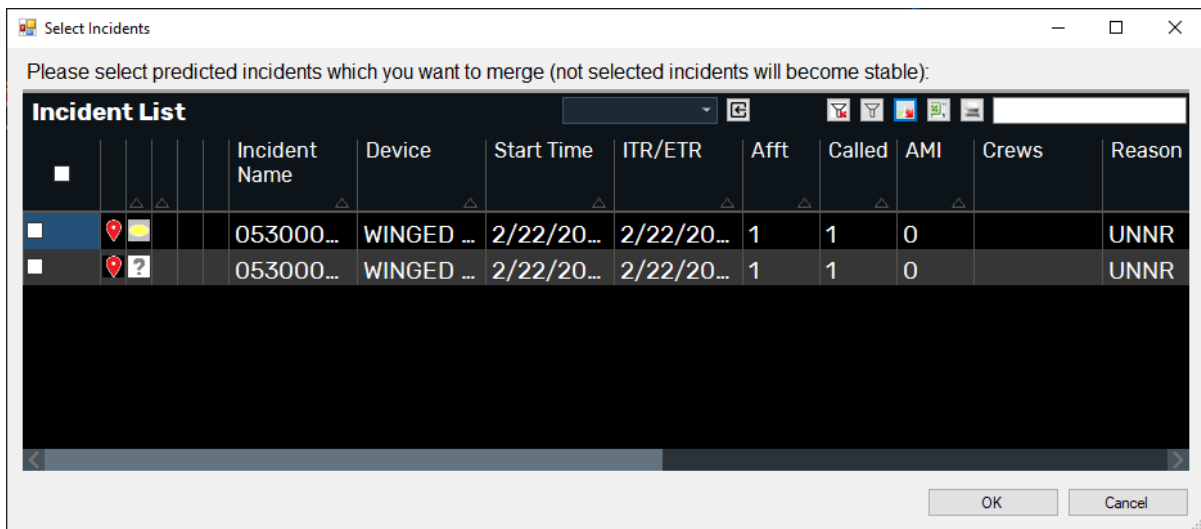


The outage is confirmed. The device is opened, and the downstream section is shown deenergized. A manual switching order is created for the device.

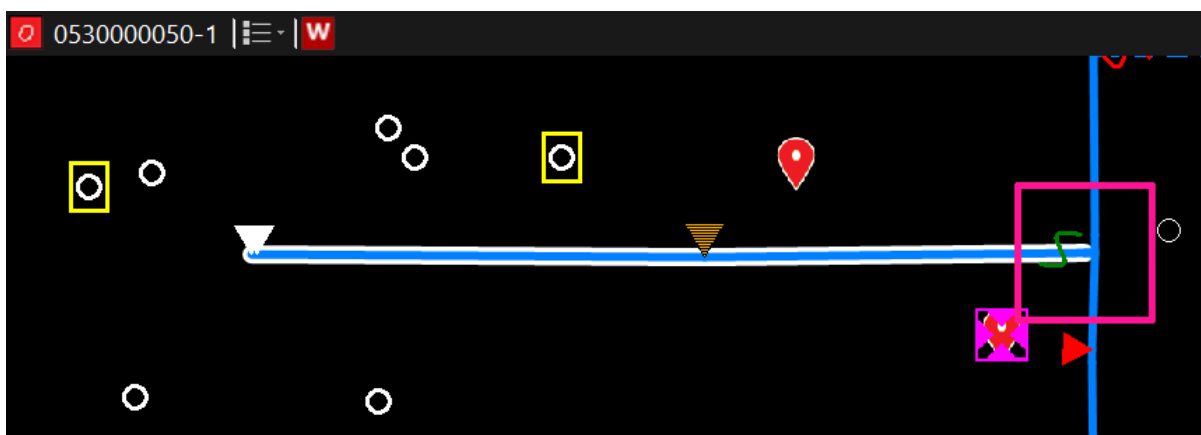


To confirm an outage for a restoration order from the network view:


1. On the geographic view, navigate to a restoration order that is associated with a predicted or single customer incident.
2. Right-click the order, and then click **Confirm Outage**.

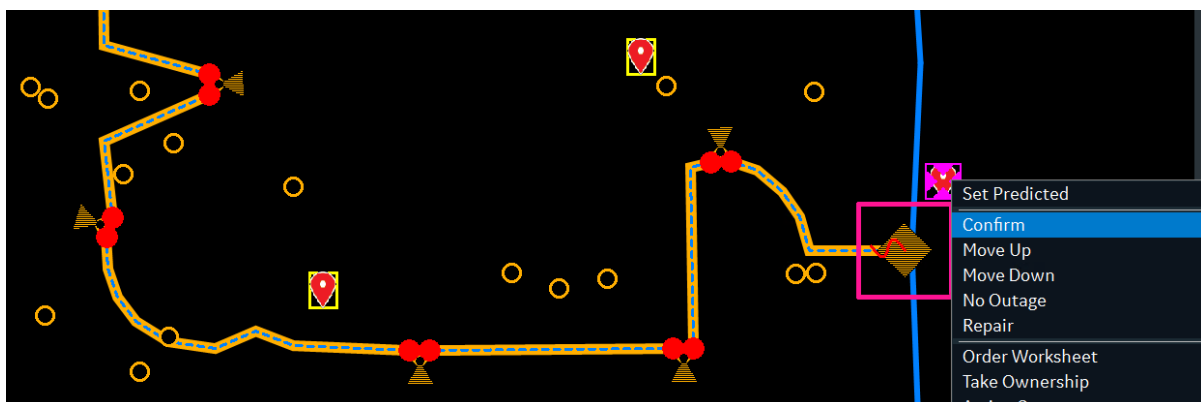

3. If there are other restoration orders for predicted or single customer incidents downstream of the protective device that is associated with the selected order, select orders to be merged into the new order. Incidents that are associated with unmerged orders remain predicted stable.

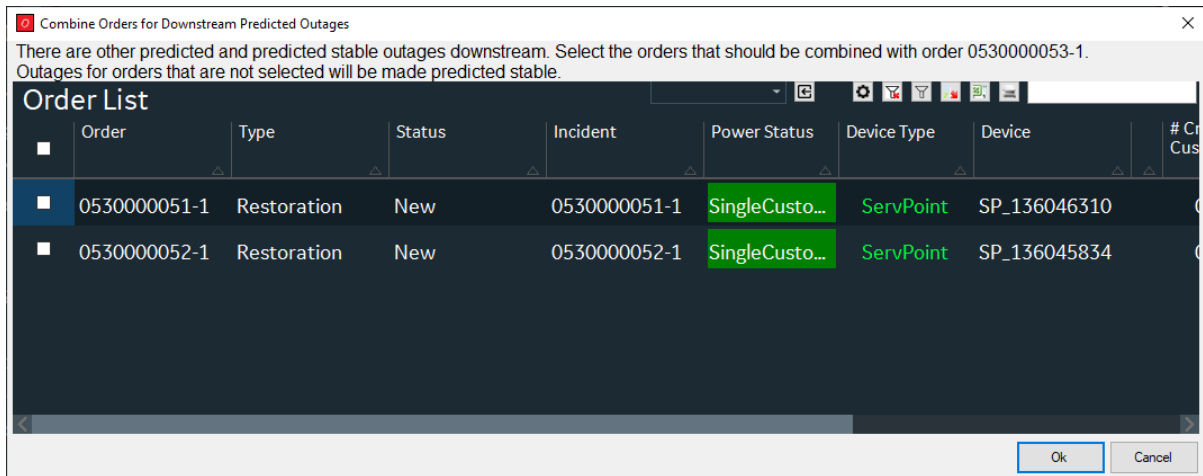

The outage is confirmed. The associated predicted incident is converted into a confirmed incident. The device is opened, and the downstream section is shown deenergized.

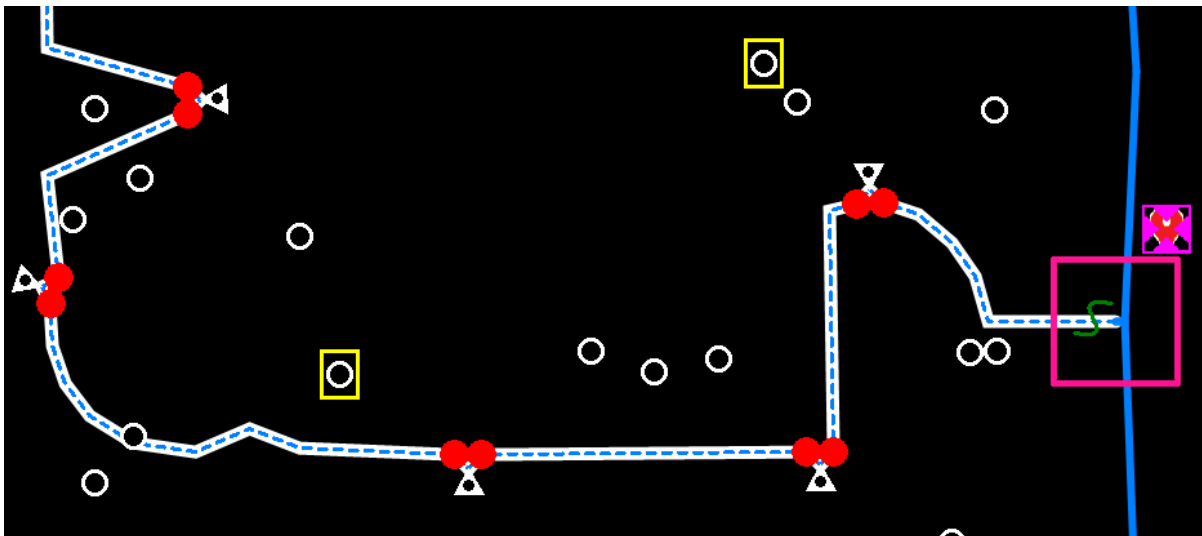


The order's Check Prediction task for the original device is completed with the Confirmed Open. A new Check Prediction task is created for the original device. The Check Prediction tasks for the merged orders are cancelled.


Tasks (7)					+	
	Open	Service Point	No Crew Recorded	Opened		
	Open	Service Point	No Crew Recorded	Opened		
	Check Prediction	Service Point	No Crew Recorded	Cancelled		
	Check Prediction	Service Point	No Crew Recorded	Cancelled		
	Open	Fuse	No Crew Recorded	Opened		
	Check Prediction	Fuse	No Crew Recorded	Confirmed Open		
	Repair	Fuse	Select Crew	▼ New		

To confirm an outage for a restoration order from the Order Worksheet:

1. Complete the Check Prediction task with the **Confirmed Open** or **Confirmed Closed No Power** result.

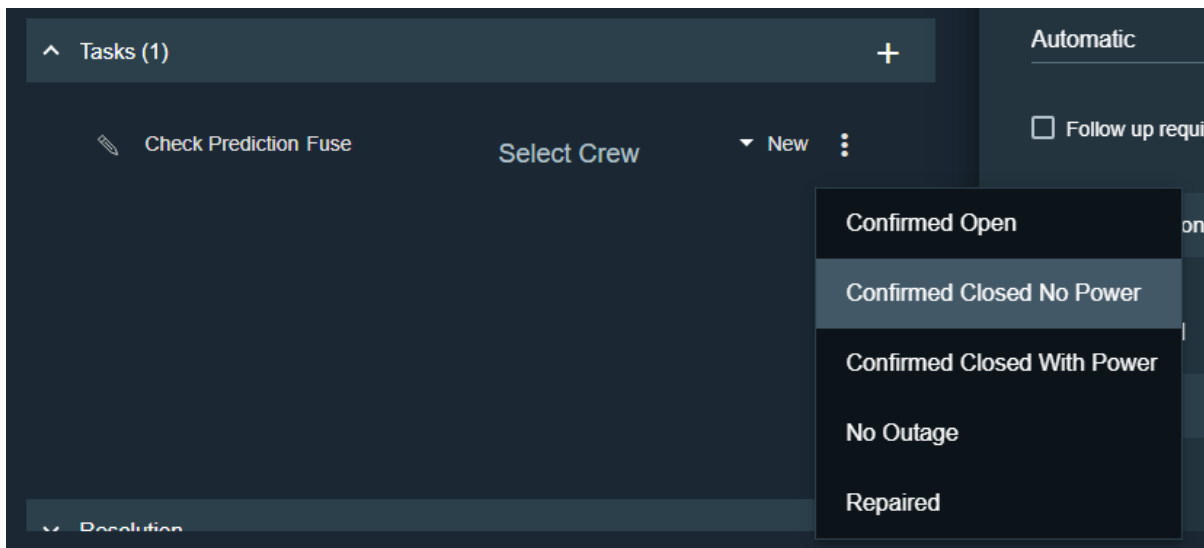

2. If there are other restoration orders for predicted or single customer incidents downstream of the protective device that is associated with the selected order, select orders to be merged into the new order. Incidents that are associated with unmerged orders remain predicted stable.

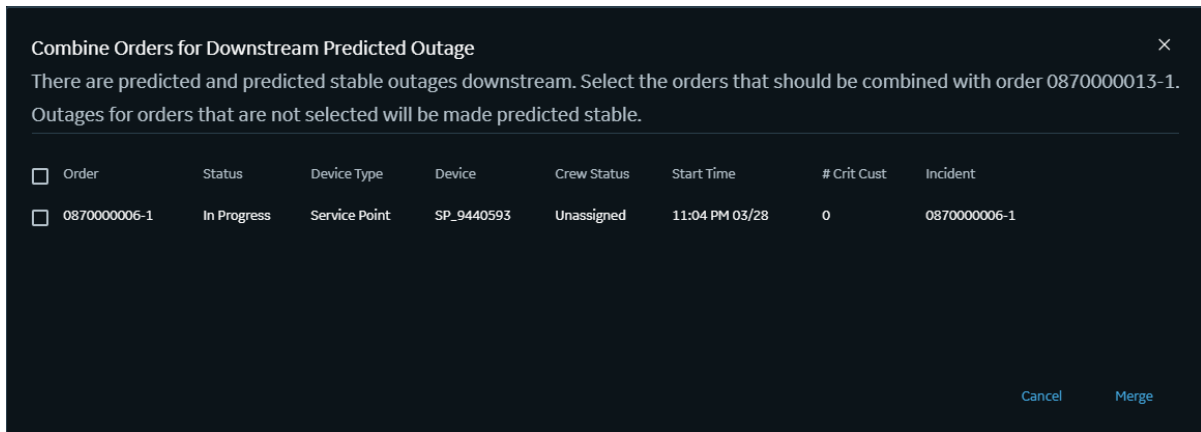


To confirm an outage for a restoration order from the Order List display:

- Right-click the order on the Order List display, point to the Outage option, and then click Confirm.

4.4. Manually Changing Crew Status

To change the crew status from the Order Worksheet display:


1. Open the Order Worksheet display.
2. Click the Crew Status field in the Responsibilities section, and then select the required crew status from the list.

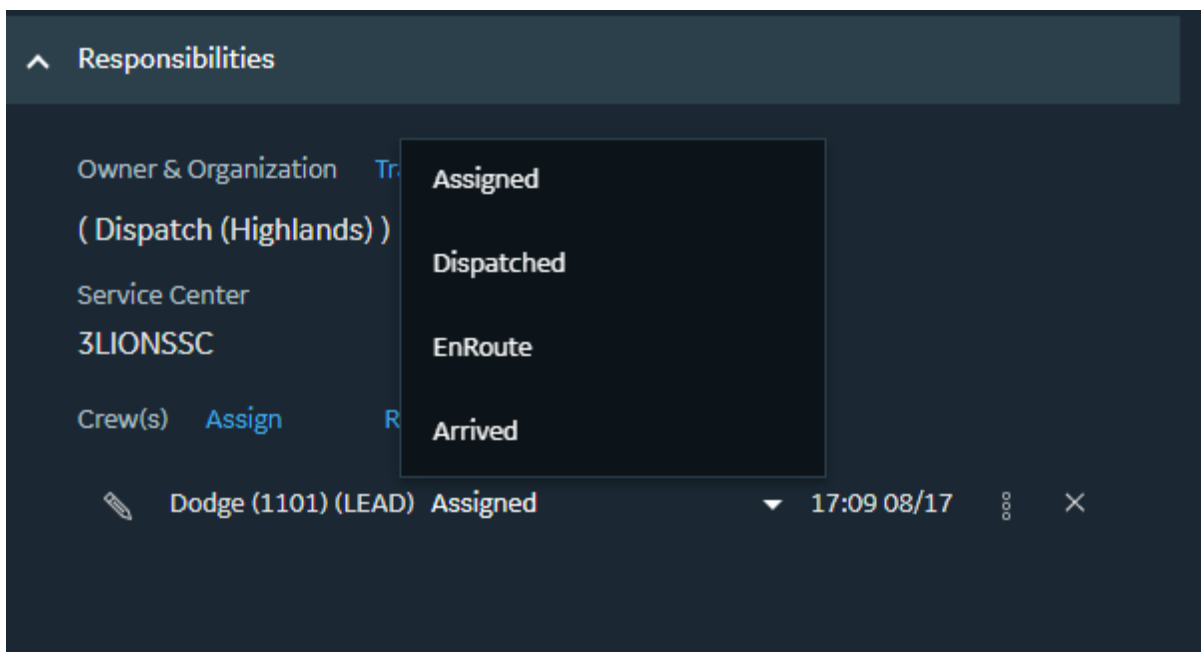

To change the crew status from the network view:

1. Navigate to an order on the network view.

2. From the order's right-click menu, point to **Update Lead Crew Status** and then click the required crew status from the list.

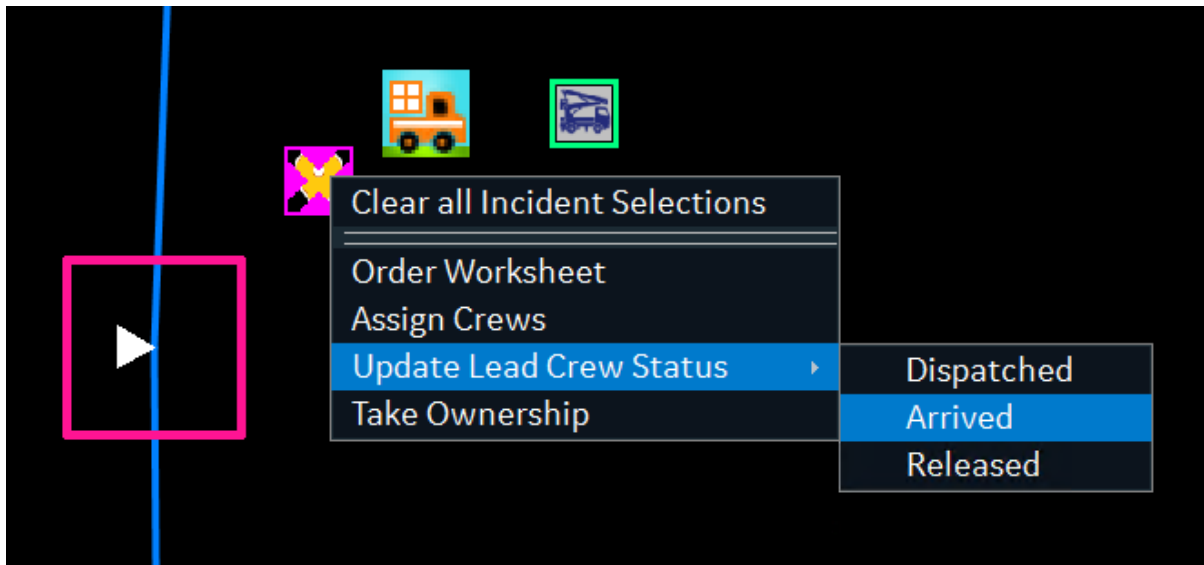

4.4.1. Crew Status Change Constraints

If the selected crew has at least one completed task, it is not allowed to change its status from Arrived to Enroute. If you try to perform this change of status under the circumstances previously mentioned, the operation will fail, and a dialog will appear indicating the failure reason.

Trying to perform a disallowed crew status change from the network view:

An error dialog will appear with specific information of the error.

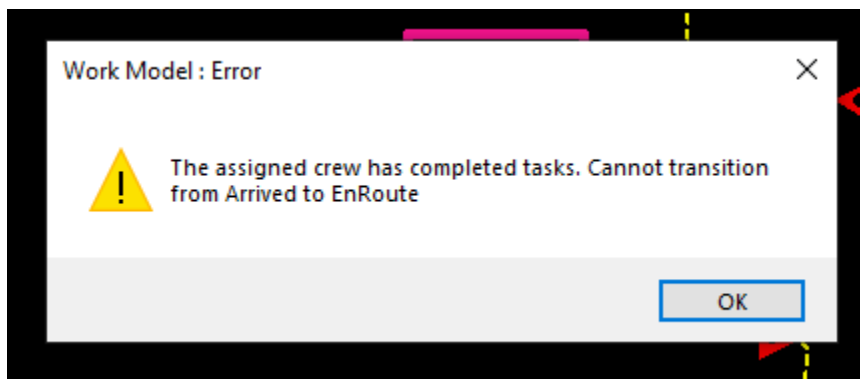


Figure 37. Disallowed Crew Status Change from the Network View

Trying to perform a disallowed crew status change from the Order Worksheet display:

An error dialog will appear with specific information of the error.

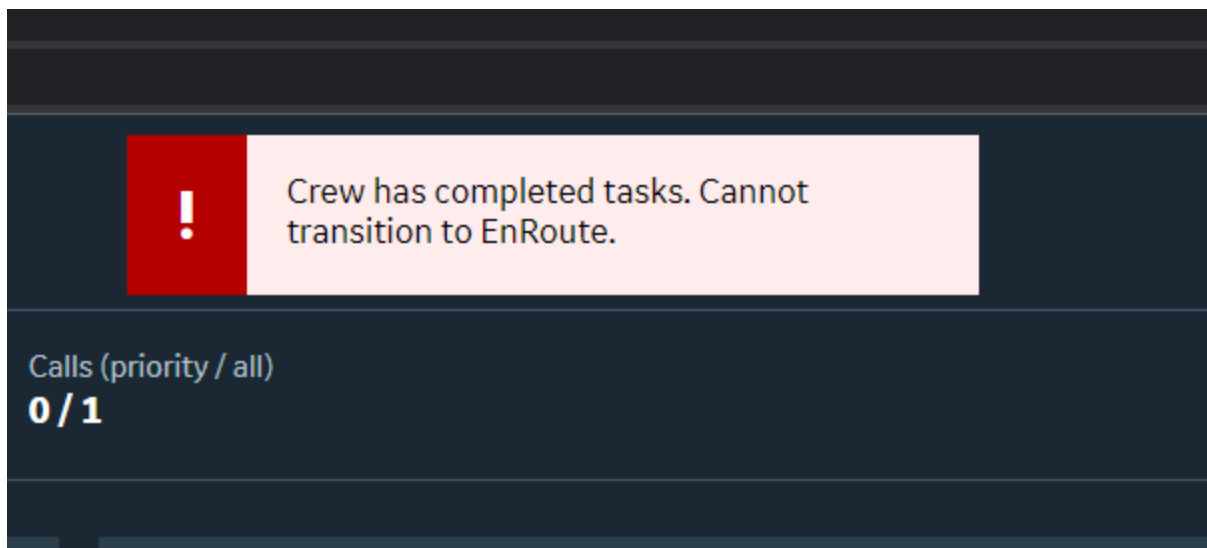


Figure 38. Disallowed Crew Status Change from the Order Worksheet Display


4.5. Taking Ownership of an Order

You can explicitly take ownership of an order so that other dispatchers and stakeholders in the organization know that you are working on the order. When taking ownership, the order's Owner field is set to the name of the operator (user) who owns the order.

You can also clear ownership for an order. When clearing ownership, the order's Owner field is set to null (blank).


To take ownership for one or more orders from the Order List display:

- From the Order List display, select orders and click **Take Ownership** from the context menu.

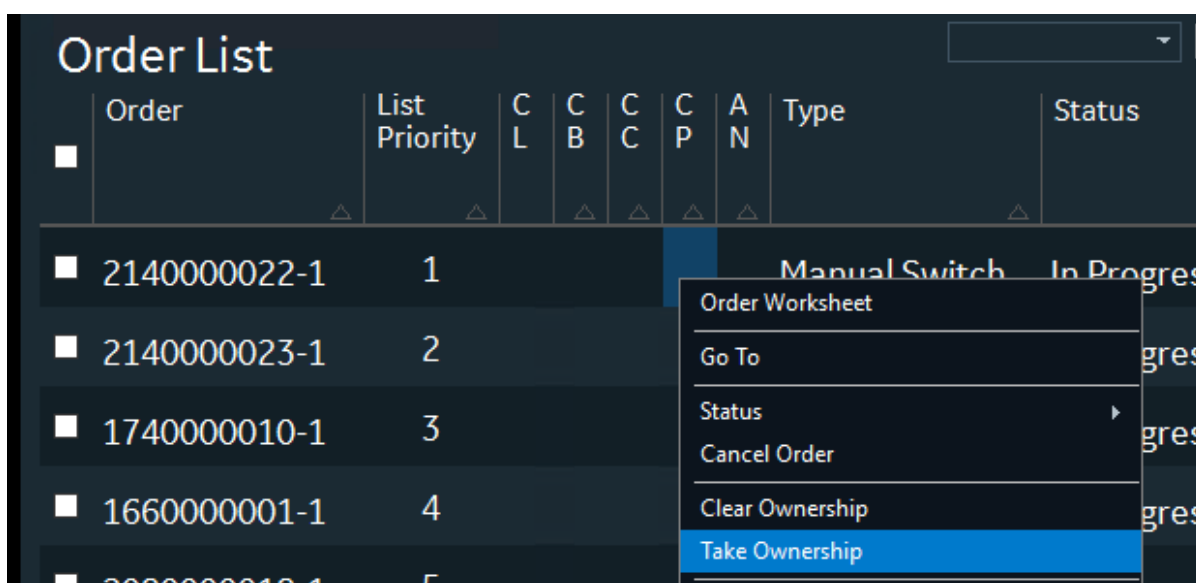


To take ownership for an order from the Order Worksheet display:

1. From the Order Worksheet display, click **Transfer** in the Responsibilities section.

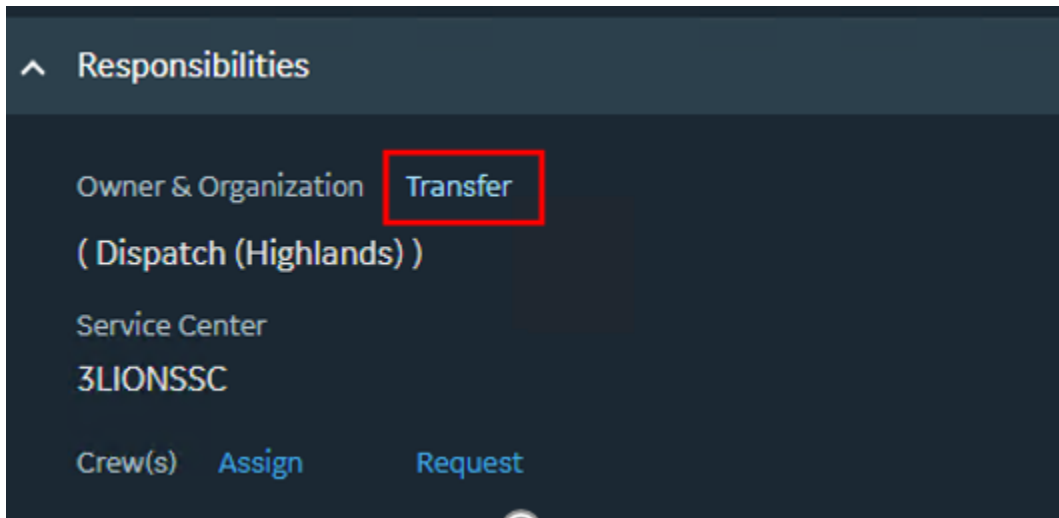


The Ownership and Organizations dialog appears.

2. From the Owner list, select **Assign to Me** and then click **Transfer**.

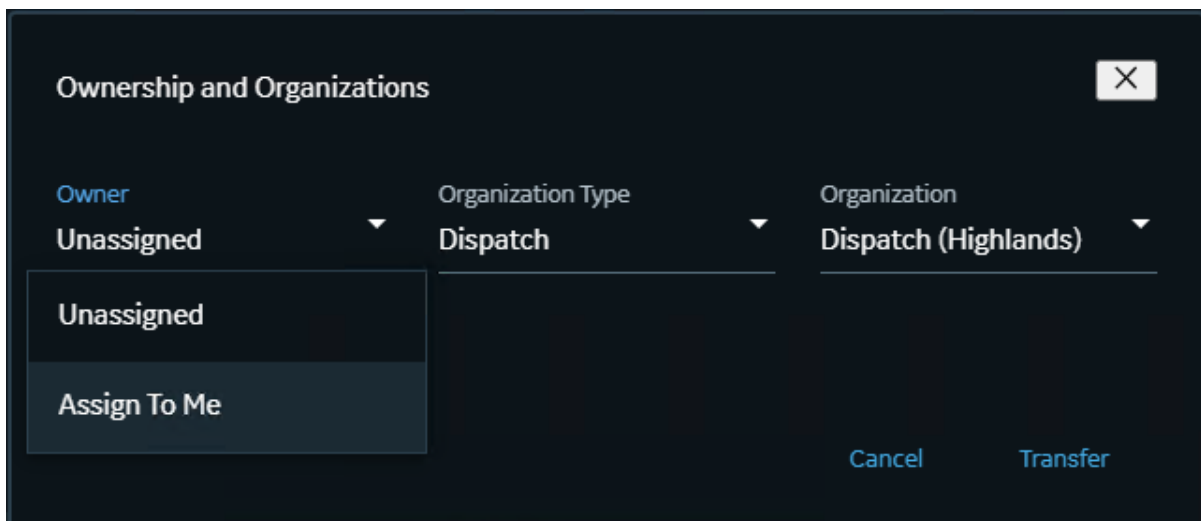

To take ownership for an order from the network view:

- From the network view, right-click an order and select **Take Ownership** from the context menu.

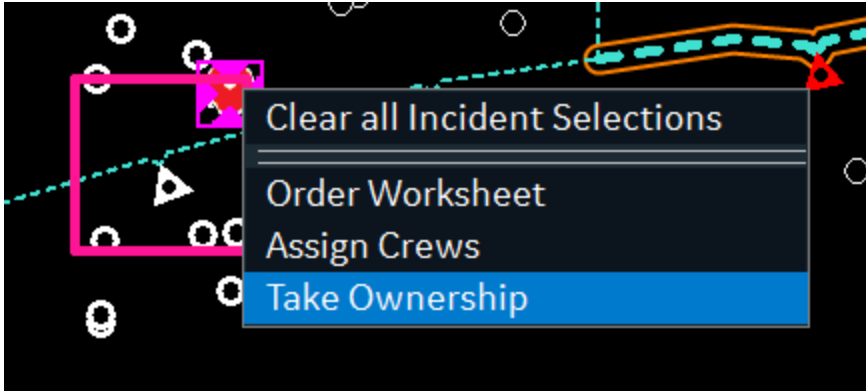

To clear ownership for one or more orders from the Order List display:


- From the Order List display, select orders and select **Clear Ownership** from the context menu.

4.6. Assigning an Organization to an Order

By default, an order is assigned to a relevant organization based on rules defined in the OMS Server Configuration Editor. However, you can manually reassign an order to the organization that is responsible for carrying out the associated work, as appropriate.

To transfer an order to an organization from the Order Worksheet display:

1. From the Order Worksheet display, click Transfer in the Responsibilities section.

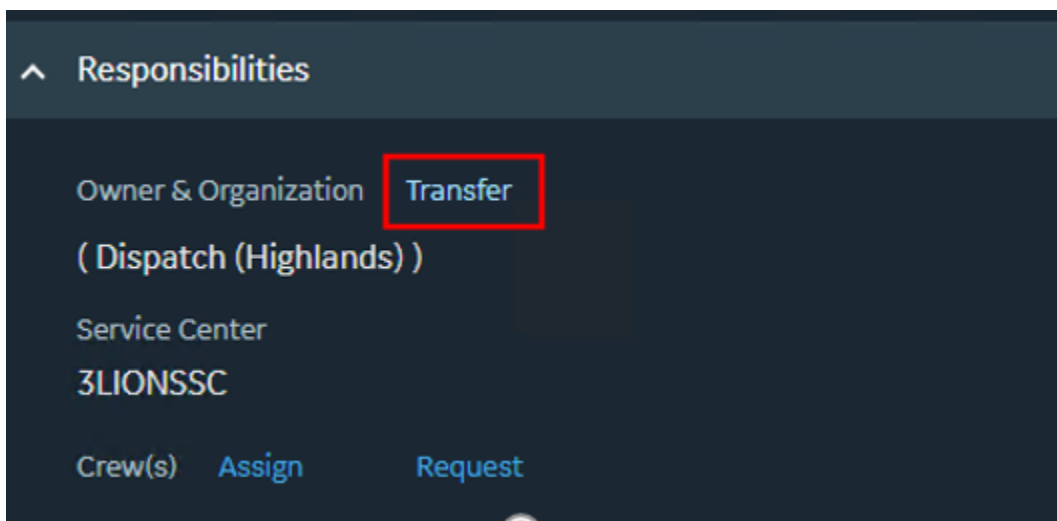


The Ownership and Organizations dialog appears.

2. Select the organization type.
3. Optionally, select the organization name.

Note

If the selected organization type is defined to include organizations that have geographic boundaries, the system determines the organization name automatically based on the geographic location of the order.

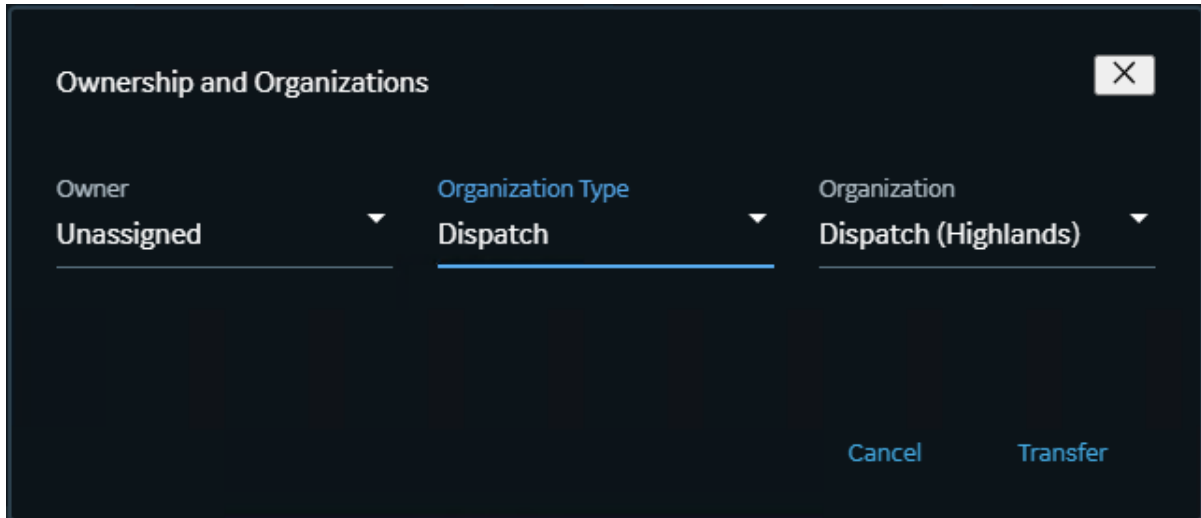


The dialog box titled "Ownership and Organizations" has a close button (X) in the top right corner. It contains three dropdown menus: "Owner" with the value "Unassigned", "Organization Type" with the value "Dispatch", and "Organization" with the value "Dispatch (Highlands)". At the bottom right, there are two buttons: "Cancel" and "Transfer".

4. Click Transfer.

The order's Organization field is set to the organization that the order is assigned to.

To transfer an order to an organization from the Order List display:


1. From the Order List display, select one or more orders and select the Transfer Organization option from the context menu.

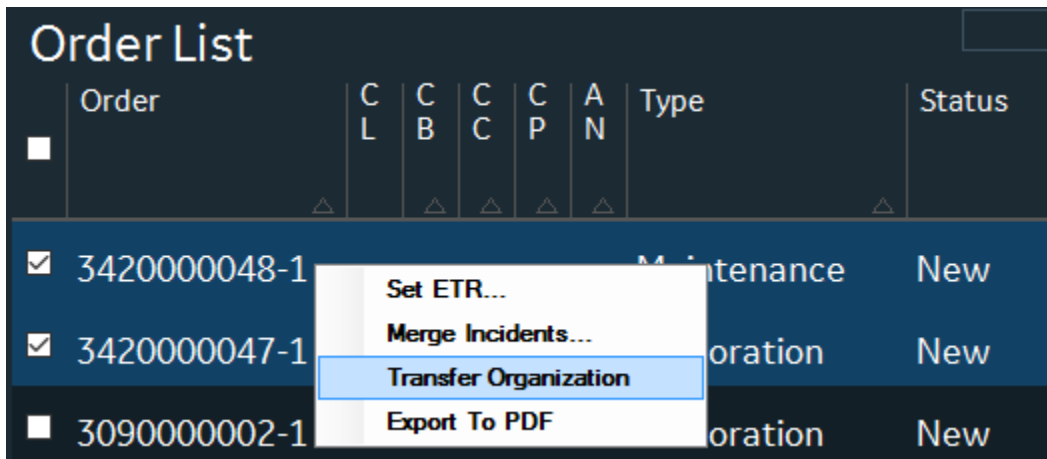

The Transfer Organization dialog appears.

2. Select an organization type.
3. Optionally, select the organization name.

By default, the organization name is set to Auto-Select, which means that the system automatically selects an organization for each order using the geographic location of the order.

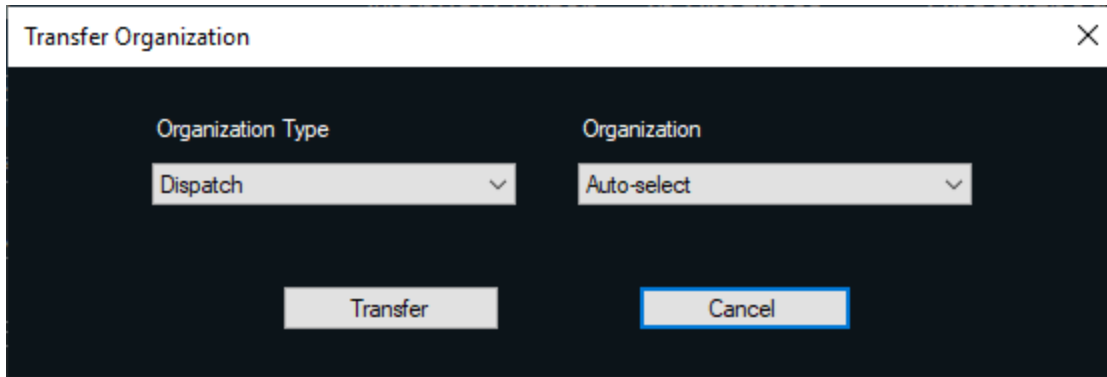


4. Click Transfer.

4.7. Performing Data Correction

You can edit the properties of closed and cancelled orders to make the necessary corrections for the orders in the past. The data corrections help make historical events accurate, and also update the data in the database.

To modify details of a closed or cancelled order.

1. Open the Data Correction tab.
2. Right-click the order to modify, and then click Update Data Correction.

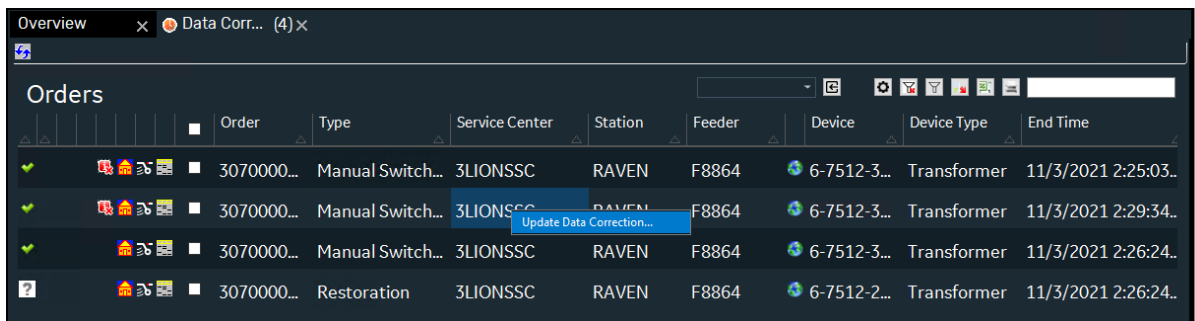

The Data Correction window appears.

Crew	Assigned	Dispatched	En Route	Arrived	Released
R1502	11/03/2021 04:29 PM	11/03/2021 04:30 PM	11/03/2021 04:30 PM	11/03/2021 04:30 PM	11/03/2021 04:31 PM

- Update the order and incident details, as necessary. For more information and fields on the Data Correction display, see [Data Correction](#).

Note

You can cancel the incident or undo the cancel by clicking the Cancel Incident / Undo Cancel button on the Data Correction window.

- On the Incident tab, set the Approved Date field to the date and time when the changes were approved.
- Click OK.

The details for the order and incident are updated.

4.8. Adding and Removing Organization Membership

If the ADMS modeling has been configured to support organizations, a user can add and drop active organizations so that the organizations may have the ability to see and modify certain orders. For details on organizations configuration and modeling, refer to the *Enterprise OMS Software Installation and Maintenance Guide*.

To add or remove organization memberships:

- From the client OMS toolbar menu, select Organizations Membership.
- Click the Add or Drop buttons to add or remove organization memberships.

Organization Management

User: DMSALL

ANNO(I)	Add	Add(R)	Drop
AREANOTE(I)	Add	Add(R)	Drop
AUDPERM(I)	Add	Add(R)	Drop
AUDTEMP(I)	Add	Add(R)	Drop
CASENOTE(I)	Add	Add(R)	Drop
COMMIS(I)	Add	Add(R)	Drop
CONFOPER(I)	Add	Add(R)	Drop
DEFPAREA(I)	Add	Add(R)	Drop
DETACH(I)	Add	Add(R)	Drop
DISPATCH(I)	Add	Add(R)	Drop