



GE VERNOVA

ADMS

16.25.1

Internal Notifications User Guide

Copyright

Copyright 2026, GE Vernova and/or its affiliates ("GE Vernova"). All Rights Reserved.

GE and the GE Monogram are trademarks of General Electric Company used under trademark license.

This document is the confidential and proprietary information of GE Vernova and may not be reproduced, transmitted, stored, or copied in whole or in part, or used to furnish information to others, without the prior written permission of GE Vernova.

Change History

Date	Change Description
Jan 26, 2023	ADMS 3.16: • Editorial and formatting updates.
Oct 20, 2023	ADMS 16.1.0: • The product version numbering has changed. The prefix '3' is no longer included in the version numbering for ADMS.
Apr 23, 2024	ADMS 16.7.0: • Updated New Subscription • Updated document format and styling.

Contents

1. Introduction	4
2. User Interface Overview	5
2.1. My Subscriptions Tab	5
2.1.1. Active Subscriptions	5
2.1.2. Inactive Subscriptions	6
2.1.3. New Subscription	7
2.1.4. Edit Subscription	11
2.2. Discover Tab	12
2.3. Administrator Tab	13
2.3.1. All Subscriptions	13
2.3.2. Administrator	14
3. Using the Internal Notifications Application	16
3.1. Getting Started	16
3.1.1. Logging In	16
3.1.2. Logging Out	17
3.2. Viewing User Subscriptions	17
3.3. Subscribing to an Existing Subscription	17
3.4. Creating a Subscription	18
3.5. Editing a Subscription	20
3.6. Enabling a Subscription	20
3.7. Disabling a Subscription	21
3.8. Removing a Subscription	21

1. Introduction

The Internal Notifications application informs internal staff about certain OMS events via email or SMS using a subscription model. Internal stakeholders can register to receive different types of notifications from the system.

The supported notification types include:

- **Affected Customers:** Notifications about specific customers involved in an outage.
- **Customer Count:** Notifications for outages where the number of affected customers exceeds a specified threshold.
- **Device Operations:** Notifications for outages that involve specific device types, such as breakers or reclosers.

The Internal Notifications application runs in a Kubernetes cluster. For information about setting up the Internal Notifications solution, refer to the *Internal Notifications Installation Guide*.

Clients connect to the Internal Notifications application using a web browser (Google Chrome or Mozilla Firefox is recommended) with an enabled JavaScript engine.

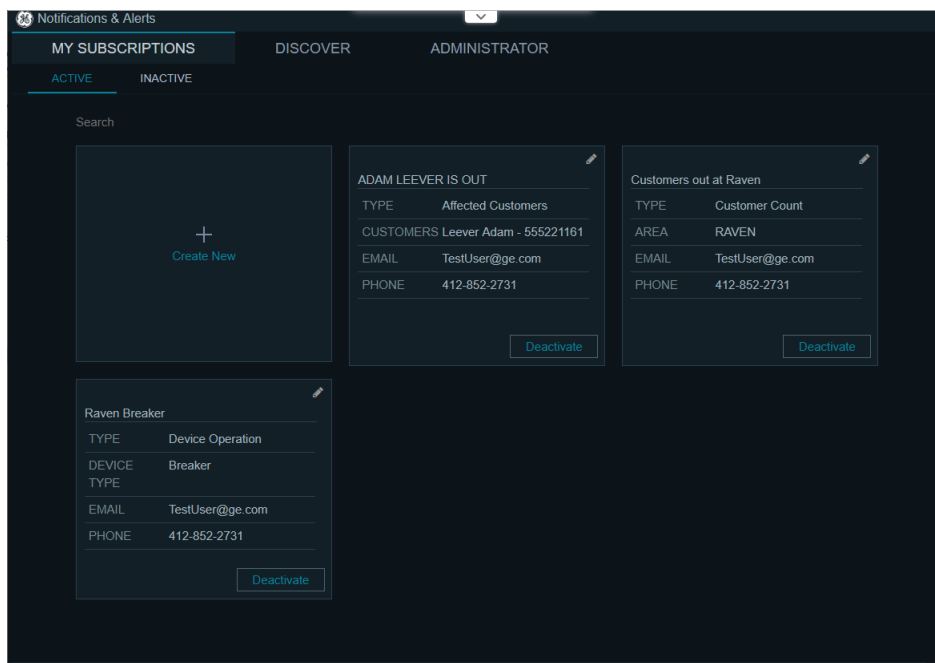


Figure 1. Internal Notifications

2. User Interface Overview

The Internal Notifications application includes three tabs:

- **My Subscriptions:** Shows your current subscriptions (active and inactive) and allows you to create new subscriptions.
- **Discover:** Shows all subscriptions for other users in the system and allows you to subscribe to subscriptions.
- **Administrator:** Allows an administrator to remove subscriptions for users and disable notifications for specific areas. This tab only appears for users with administrator privileges.

2.1. My Subscriptions Tab

Use the My Subscriptions tab to view, edit, activate, deactivate, and remove your current subscriptions and create new subscriptions. Subscriptions appear in the order of their creation or activation.

The My Subscriptions tab includes two pages, Active Subscriptions and Inactive Subscriptions.

2.1.1. Active Subscriptions

The Active Subscriptions page shows your active subscriptions. On this page, you can create, edit, and deactivate subscriptions.


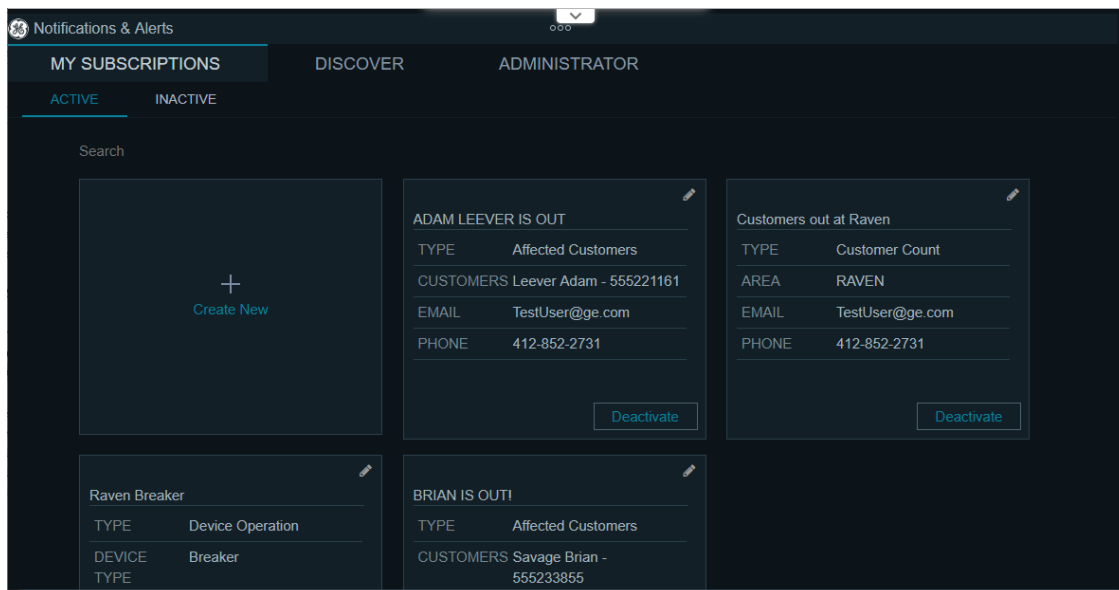


Figure 2. My Subscriptions Tab - Active Subscriptions

The Active Subscriptions page includes the following fields and controls:

- **Search:** Filters subscriptions by the text you enter.

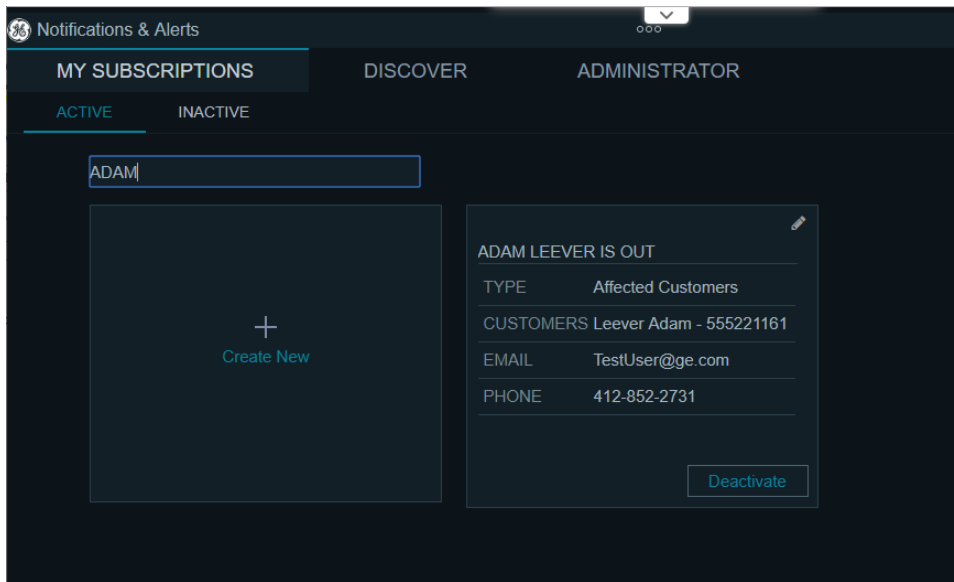

- **Create New:** Opens the New Subscription page, where you can create a new subscription.
- **Edit:** Opens the Edit Subscription page, where you can edit a subscription.
- **Deactivate:** Deactivates a subscription. Inactive subscriptions appear on the Inactive page.

2.1.2. Inactive Subscriptions

The Inactive Subscriptions page shows your inactive subscriptions. On this page, you can unsubscribe and activate subscriptions.

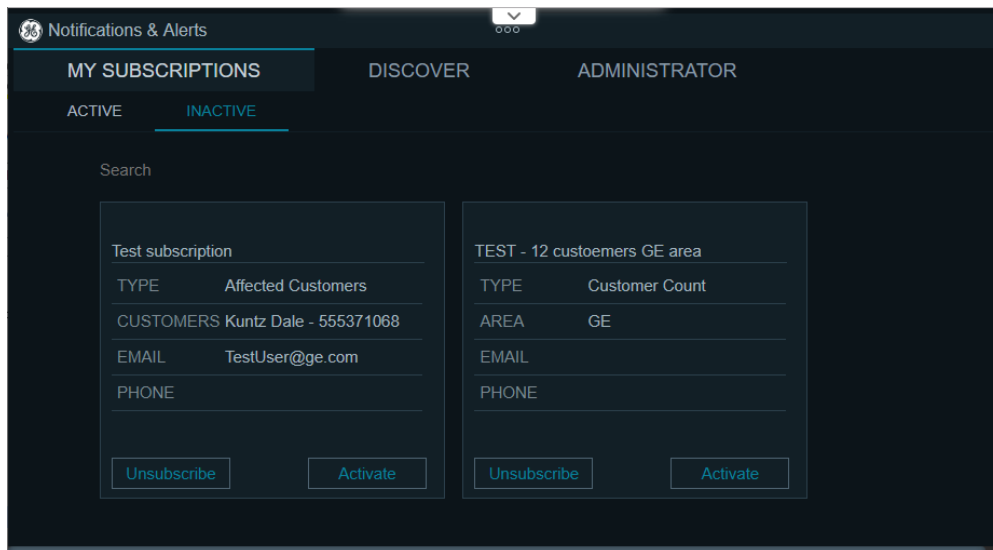


Figure 3. My Subscriptions Tab - Inactive Subscriptions

The Inactive Subscriptions page includes the following fields and controls:

- **Search:** Filters subscriptions by the text you enter.
- **Unsubscribe:** Removes a subscription from your subscriptions.
- **Activate:** Activates a subscription. Active subscriptions appear on the Active page.

2.1.3. New Subscription

Use the New Subscription page to create a new subscription.

The screenshot shows the 'New Subscription' form in the 'MY SUBSCRIPTIONS' tab. The form is divided into several sections: 'Details' with a 'NAME' field (error: 'NAME is required'), a 'TYPE' dropdown menu (selected: 'Customer Count'), 'Notification Criteria' with checkboxes for 'Notify on Incident Working Status change' and 'Notify on ETR change', 'AREA' with a dropdown (selected: 'none', error: 'AREA - none'), 'Find areas' with a search bar (input: '0', error: 'CUSTOMER COUNT is invalid'), 'Method' with a dropdown (selected: 'EMAIL', error: 'EMAIL is required'), and 'PHONE NUMBER' (error: 'PHONE NUMBER is required'). The form has 'Cancel' and 'Create' buttons at the bottom right.

Figure 4. My Subscriptions Tab - New Subscription

The New Subscription page includes the following common fields and controls:

- **Name:** Subscription name.

Note

The name entered will be included in the subject line of the notification email/text.

- **Type:** Subscription type. The following types are supported:
 - **Affected Customers:** Notifications about specific customers involved in an outage.
 - **Customer Count:** Notifications for outages where the number of affected customers exceeds a specified threshold.
 - **Device Operations:** Notifications for outages that involve specific device types, such as breakers or reclosers.
 - **Outage Time Thres or Unass:** Notifications for outages that exceed a specified amount of

time or exceed a specified number of outages in an area.

- **Notify on Incident Working Status Change:** Specifies whether a notification triggers when the associated incident's state changes.
- **Notify on ETR Change:** Specifies whether a notification triggers when the associated incident's ETR changes.
- **Area:** Specifies an area that is associated with the specified event.
- **Area Filter:** Allows you to select an area that is associated with the specified event.
- **Email:** Subscriber email.
- **Phone Number:** Subscriber phone number.
- **Cancel:** Discards changes and shows the Active page.
- **Create:** Creates a new subscription and shows the Active page.
- **Back:** Discards changes and shows the Active page.

In addition, the following unique fields and controls appear for the Affected Customers type:

- **Search Customer:**
 - **Business:** Specifies whether this is a residential or a commercial/industrial customer.
 - **First Name:** The customer's first name. Appears for residential customers.
 - **Last Name:** The customer's last name. Appears for residential customers.
 - **Customer Name:** The customer's name. Appears for business customers.
 - **Account Number:** The customer's account number.
 - **Search:** Click to search customers by the specified criteria.
 - **Clear:** Click to clear the customer search and selected fields.
- **Select Customer:**
 - **Search List:** Shows customers that satisfy the specified search criteria. To select a customer for the notification event, click the green plus button next to the customer.
 - **Selected Customers:** Shows customers that were selected for the notification event. To remove a customer, click the red cross button next to the customer.

Details

NAME Affected Customers Aarons TYPE Affected Customers

Notification Criteria

☒ Notify on Incident Working Status change
☒ Notify on ETR change

Search Customer ☐ Business

First Name Aaron Account #

Last Name

Search Clear

SELECT

Customer Name	Account Number	
Benton Aaron	555021168	
Hadfield Aaron	555238682	
Essley Aaron	555363323	+
Knight Aaron	555270081	+
Savage Aaron	555348028	+
Grier Aaron	555168234	+
O'Hare Aaron	555267916	+

CUSTOMERS

Customer Name	Account Number	
Benton Aaron	555021168	x
Hadfield Aaron	555238682	x

In addition, the following unique fields and controls appear for the Customer Count type:

- **Customer Count:** Specifies the number of affected customers in the selected area to trigger the notification.

Details

NAME Customer Count Oregon - 1000 TYPE Customer Count

Notification Criteria

☐ Notify on Incident Working Status change
☐ Notify on ETR change

AREA - Oregon

oreg

CUSTOMER COUNT 1000

General Electric

Oregon

In addition, the following unique fields and controls appear for the Device Operation type:

- **Device Type:** Specifies the device type (Breaker, Recloser, or Sectionalizer). Operations of the specified device types in the selected area will trigger the notification.

The screenshot shows a configuration window for notifications. At the top, there are two tabs: 'NAME' and 'TYPE'. The 'NAME' tab is active, showing 'Breaker operation in Raven'. The 'TYPE' tab is set to 'Device Operation'. Below these, there are three checkboxes under 'Notification Criteria': 'Notify on Incident Working Status change', 'Notify on ETR change', and 'List Devices Manually' (which is checked). A 'DEVICE TYPE' dropdown menu is set to 'Breaker'. Below that, the 'AREA - RAVEN' is selected. A tree view on the right shows a hierarchy: 'General Electric' > 'Washington' > 'Gordon' > 'Roarke' > '3LIONSSC' > 'RAVEN'.

- **List Devices Manually:** Select this option to specify the device of interest. Operations of the specified devices will trigger the notification.
 - **Outage Devices List:** Shows the devices selected for the notification.

Note

To select a device for the notification, expand the Area tree to the device level and select the device.

The screenshot shows the same configuration window as before, but with the 'List Devices Manually' option checked. The 'AREA - F9962' is selected. The tree view on the right shows a hierarchy: 'General Electric' > 'Washington' > 'Oregon' > 'Setzer' > 'Aaron' > 'CTLA' > 'CTLB' > 'BAKER' > 'CANTERBURY' > 'F9962'. The 'F9962' device is selected. On the right side, there is a table titled 'OUTAGE DEVICES LIST' with the following data:

Substation	Feeder	Device
CANTERBURY	F9962	9962F
CANTERBURY	F9962	R51653

In addition, the following unique fields and controls appear for the Outage Time Thres or Unass type:

- **Time Threshold:** Specifies the amount of time that an incident has been open, in hours, above which a notification will be sent.

By default, this notification is for all active incidents. For example, specifying 5 will result in a notification being sent for all active incidents that has been open for more than 5 hours.

To configure this notification for any Unassigned incident NOT in the Complete, Cancelled or

PendingClear status, add 1000 to the desired value. For example, specifying 1005 will result in a notification being sent for any Unassigned incident with a status other than Complete, PendingClear or Cancel that has been open for more than 5 hours.

- **Unassigned Count:** Specifies the number of Unassigned incidents above which a notification will be sent.

For example, if you specify 50, a notification will be sent when the number of incidents in the specified area reaches 51 or more.

The screenshot shows the 'Notifications & Alerts' configuration page. The top navigation bar includes 'MY SUBSCRIPTIONS', 'DISCOVER', and 'ADMINISTRATOR'. Under 'MY SUBSCRIPTIONS', there are 'ACTIVE' and 'INACTIVE' tabs. The main content area is divided into two columns. The left column contains a 'NAME' field with a red error message 'NAME is required', a 'Notification Criteria' section with two checkboxes ('Notify on Incident Working Status change' and 'Notify on ETR change'), and an 'AREA' dropdown menu currently set to 'F5468'. Below the area dropdown is a tree view of areas: 'General Electric' (expanded) with sub-items 'Washington' (expanded) containing 'Tidus' and 'Gordon', and 'Oregon' (expanded) containing 'Setzer' and 'Locke' (expanded) containing 'McDowell' and 'Widgeon'. The right column contains a 'TYPE' dropdown menu set to 'Outage Time Thres or Unass', a 'TIME THRESHOLD (Hours)' input field set to '5', and an 'UNASSIGNED COUNT' input field set to '50'.

2.1.4. Edit Subscription

Use the Edit Subscription page to edit a subscription. For information about subscription fields, see [New Subscription](#).

Notifications & Alerts

MY SUBSCRIPTIONS DISCOVER ADMINISTRATOR

ACTIVE INACTIVE

← Back
Edit
Subscription

Details

NAME
ADAM LEEVER IS OUT

TYPE
Affected Customers

Notification Criteria

☐ Notify on Incident Working Status change
☐ Notify on ETR change

Search Customer ☐ Business

First Name
Last Name

Account #

Search Clear

SELECT

Customer Name	Account Number
Leever Adam	555221161

Method

EMAIL
TestUser@ge.com

PHONE NUMBER
412-852-2731

Cancel

Figure 5. My Subscriptions Tab - Edit Subscription

2.2. Discover Tab

Use the Discover tab to view subscriptions for all other users in the system and subscribe to those subscriptions.

The Discover tab includes the following pages:

- **All:** Shows subscriptions of all types.
- **Affected Customers:** Shows subscriptions of the Affected Customers type.
- **Customers Count:** Shows subscriptions of the Customers Count type.
- **Device Operation:** Shows subscriptions of the Device Operation type.

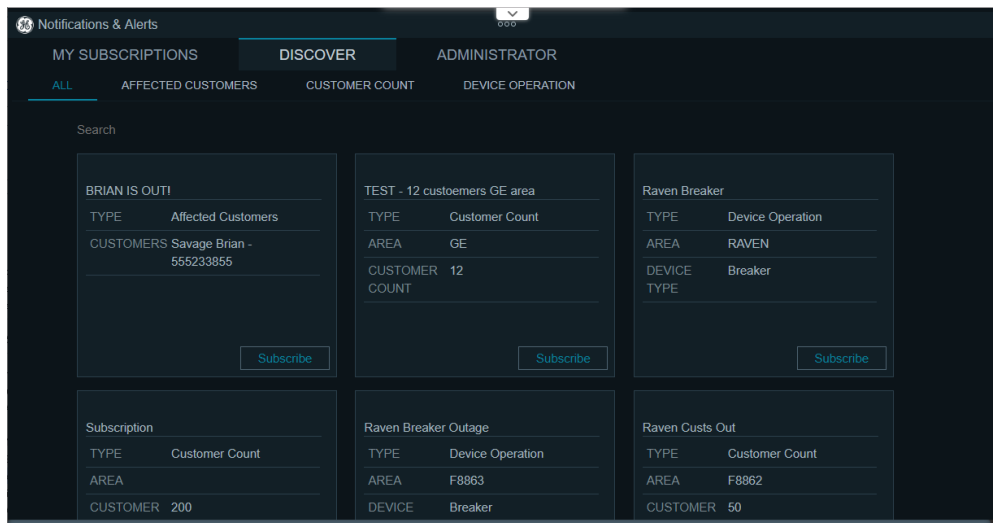


Figure 6. Discover Tab - All Subscriptions

The Discover tab includes the following fields and controls:

- **Search:** Filters subscriptions by the text you enter.
- **Subscribe:** Adds a subscription to your active subscriptions.

2.3. Administrator Tab

Note

The Administrator tab only appears for users with administrator privileges.

Use the Administrator tab to remove subscriptions for users and disable notifications for specific areas.

The Administrator tab includes the following pages:

- **All Subscriptions:** Shows subscriptions of all types for all users.
- **Configuration:** Allows you to disable notifications for specific areas.

2.3.1. All Subscriptions

The All Subscriptions page shows subscriptions of all types for all users.

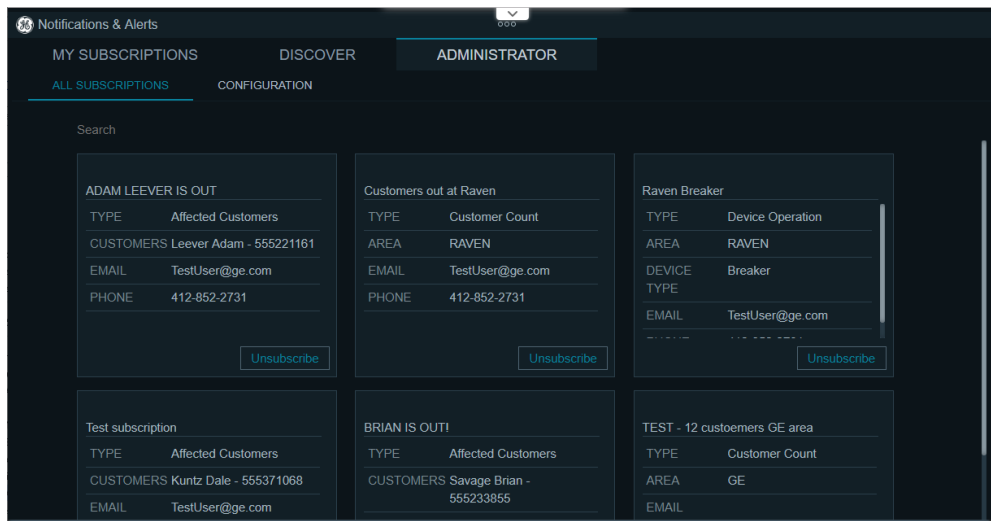


Figure 7. Administrator Tab - All Subscriptions

The All Subscriptions page includes the following fields and controls:

- **Search:** Filters subscriptions by the text you enter.
- **Unsubscribe:** Removes a subscription from user subscriptions.

2.3.2. Administrator

Use the Administrator page to disable notifications for specific areas.

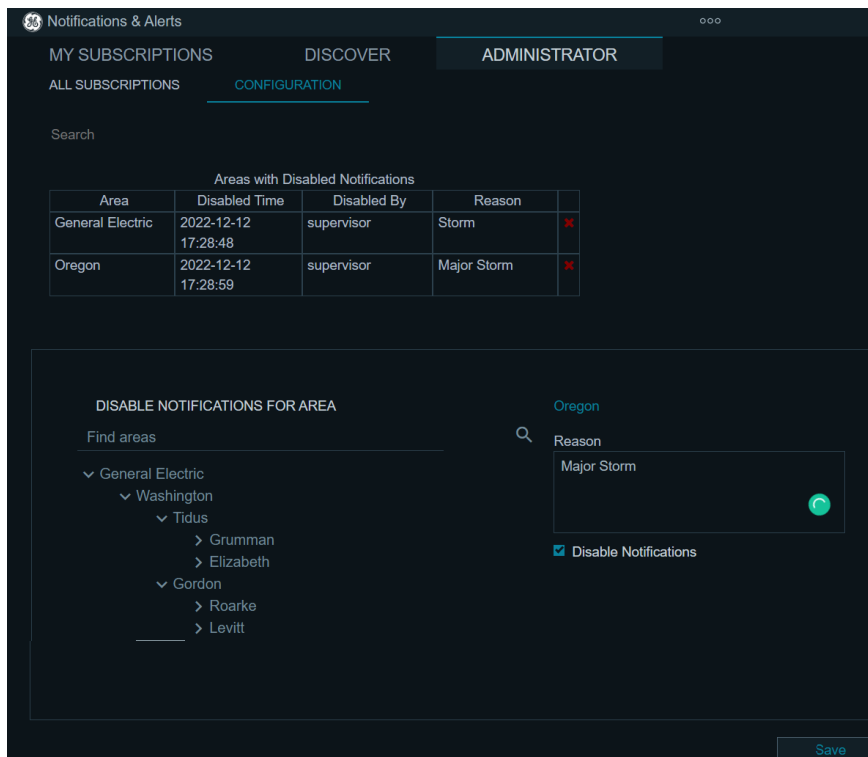


Figure 8. Administrator Tab - Administrator

The Administrator page includes the following fields and controls:

- **Search:** Filters the list of areas with disabled notifications by the text you enter.
- **Areas with Disabled Notifications:** Shows a list of areas with disabled notifications. To remove an area from the list, click the red cross button for the area.
- **Disable Notifications for Area:** Allows you to disable notifications for the specified area.
 - **Area:** Shows the selected area.
 - **Area Filter:** Allows you to select an area.
 - **Reason:** Notification suppression reason.
 - **Disable Notifications:** Specifies whether to disable notifications for the selected area.
 - **Save:** Applies changes.

3. Using the Internal Notifications Application

This chapter provides guidance on using the ADMS Internal Notifications application.

3.1. Getting Started

Internal Notifications can be accessed using Microsoft Internet Explorer, Google Chrome, and Mozilla Firefox.


3.1.1. Logging In

To open Internal Notifications:


1. Open a web browser.
2. Navigate to the Internal Notifications URL, such as <https://ingress.local/oms-in/home>.

The login page opens.

3. Enter your username, select a domain, and click Next.

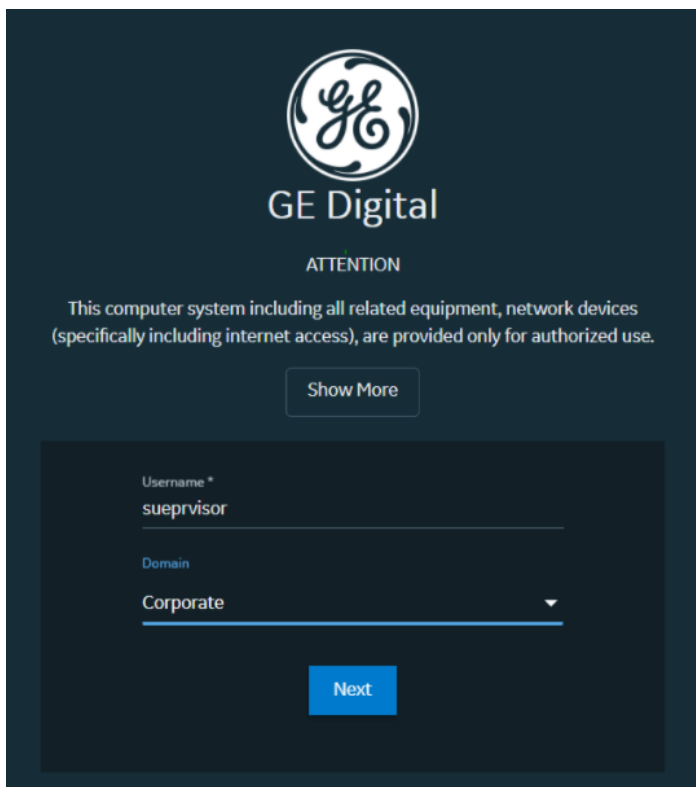The screenshot shows the GE Digital login interface. At the top is the GE logo and the text "GE Digital". Below this is a section titled "ATTENTION" with a warning message: "This computer system including all related equipment, network devices (specifically including internet access), are provided only for authorized use." A "Show More" button is located below the warning. The main login area contains a "Username *" field with the text "sueprvisor" entered, a "Domain" dropdown menu with "Corporate" selected, and a blue "Next" button at the bottom.

4. Enter your password and click Login.

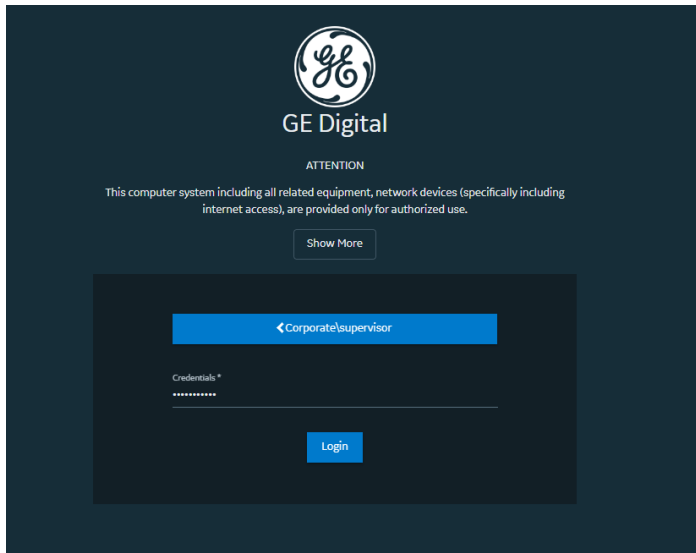

If the authorization details are valid, the My Subscription tab of the Internal Notifications application appears.

3.1.2. Logging Out

To log out, click the Settings button  on the Internal Notifications header. Then, in the Settings menu, click Logout.

3.2. Viewing User Subscriptions

You can view your subscriptions and subscriptions of other users:


- To view your active and inactive subscription, navigate to the My Subscriptions tab. For more information, see [My Subscriptions Tab](#).
- To view subscriptions of other users, navigate to the Discover tab. For more information, see [Discover Tab](#).

3.3. Subscribing to an Existing Subscription

To add a subscription from the list of existing subscriptions:

1. Navigate to the Discover tab.
2. Click the Subscribe button for a subscription.

The subscription is added. A notification message appears.

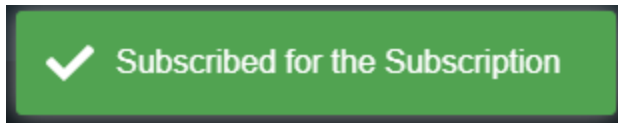

The subscription appears on the Active Subscriptions page of the My Subscriptions tab.

3.4. Creating a Subscription

To create a subscription:


1. Click the Create New field on the Active Subscriptions page of the My Subscriptions tab.

The New Subscription page appears.

2. Enter subscription details. For more information about subscription fields, see [New Subscription](#).

3. Click Create.

The subscription is created. A notification message appears.

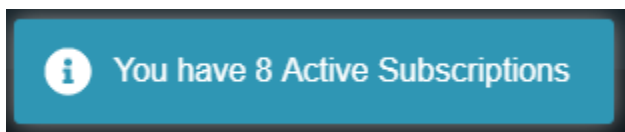

The subscription appears on the Active Subscriptions page.

The examples below show how to create subscriptions for the Affected Customers, Customers Count, and Device Operation types.

Notifications & Alerts

MY SUBSCRIPTIONS DISCOVER ADMINISTRATOR

ACTIVE INACTIVE

← Back
New
Subscription

Details

NAME: Affected Customers Aarons TYPE: Affected Customers

Notification Criteria

☒ Notify on Incident Working Status change
☒ Notify on ETR change

Search Customer ☐ Business

First Name: Aaron Account #:
Last Name:
Search Clear

SELECT

Customer Name	Account Number	
Benton Aaron	555021168	-
Hadfield Aaron	555238682	-
Essley Aaron	555363323	+
Knight Aaron	555270081	+
Savage Aaron	555348028	+
Grier Aaron	555168234	+
O'Hare Aaron	555267916	+

CUSTOMERS

Customer Name	Account Number	
Benton Aaron	555021168	-
Hadfield Aaron	555238682	-

Method

EMAIL: TestUser@ge.com PHONE NUMBER:
PHONE NUMBER:

Figure 9. Creating an Affected Customers Subscription

MY SUBSCRIPTIONS DISCOVER

ACTIVE INACTIVE

NAME: Customer Count Oregon 100 TYPE: Customer Count

Notification Criteria

☐ Notify on Incident Working Status change
☐ Notify on ETR change

AREA: Oregon CUSTOMER COUNT: 100
one

General Electric
Oregon

Method

EMAIL: test@ge.com PHONE NUMBER:
PHONE NUMBER:

Cancel Create

Figure 10. Creating a Customer Count Subscription

Figure 11. Creating a Device Operation Subscription

3.5. Editing a Subscription

To edit a subscription:

1. Navigate to the Active Subscriptions page of the My Subscriptions tab.
2. Click the Edit button  for a subscription.

The Edit Subscription page appears.

3. Edit the subscription's details. For more information about subscription fields, see [New Subscription](#).
4. Click Save.

The subscription is updated. A notification message appears.



3.6. Enabling a Subscription

To enable a subscription:

1. Navigate to the Inactive Subscriptions page of the My Subscriptions tab.
2. Click the Activate button for a subscription.

The subscription becomes enabled. A notification message appears.




The subscription appears on the Active Subscriptions page of the My Subscriptions tab.

3.7. Disabling a Subscription

To disable a subscription:

1. Navigate to the Active Subscriptions page of the My Subscriptions tab.
2. Click the Deactivate button for a subscription.

A confirmation prompt appears.

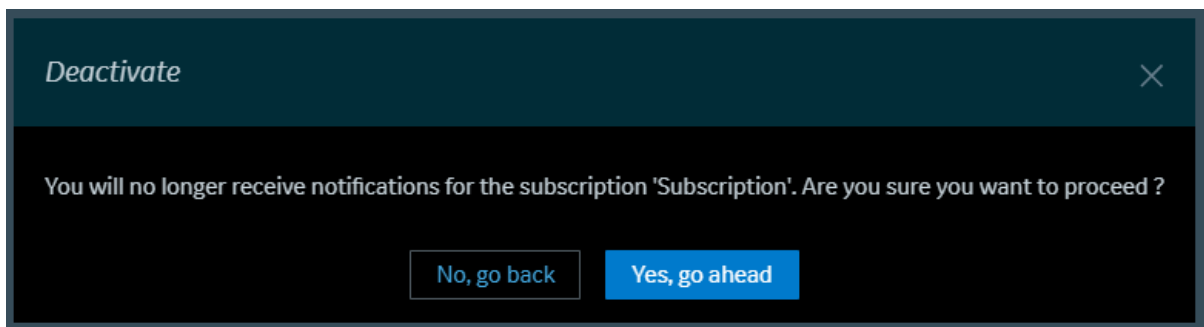

3. Confirm disabling a subscription.

The subscription becomes disabled. A notification appears.




The subscription appears on the Inactive Subscriptions page of the My Subscriptions tab.

3.8. Removing a Subscription

To remove a subscription:

1. Navigate to the Inactive Subscriptions page of the My Subscriptions tab.
2. Click the Unsubscribe button for a subscription.

A confirmation prompt appears.

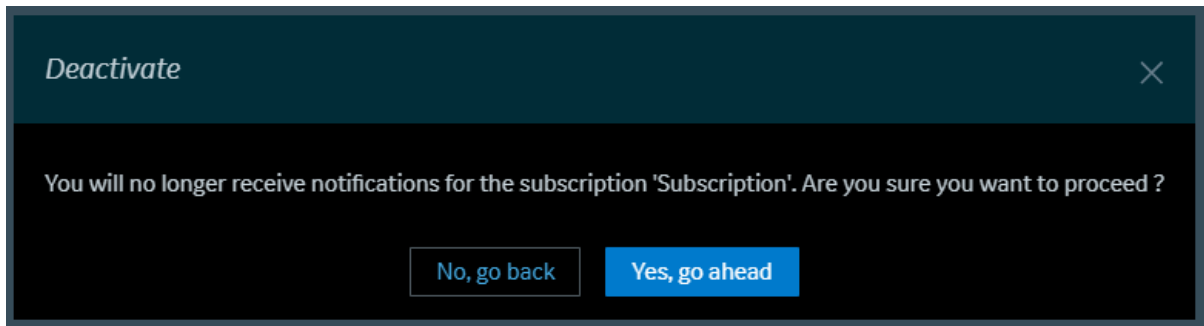

3. Confirm disabling a subscription.

The subscription is removed from your subscriptions. A notification appears.

