



GE VERNOVA

ADMS

16.25.1

Net Dynamics Configuration Editor User Guide

Copyright

Copyright 2026, GE Vernova and/or its affiliates ("GE Vernova"). All Rights Reserved.

GE and the GE Monogram are trademarks of General Electric Company used under trademark license.

This document is the confidential and proprietary information of GE Vernova and may not be reproduced, transmitted, stored, or copied in whole or in part, or used to furnish information to others, without the prior written permission of GE Vernova.

Change History

Date	Change Description
Jan 26, 2023	ADMS 3.16: • Editorial and formatting updates.
Oct 20, 2023	ADMS 16.1.0: • The product version numbering has changed. The prefix '3' is no longer included in the version numbering for ADMS.
Feb 28, 2024	ADMS 16.5.0: • Updated Grid Tabular Settings.
Apr 1, 2024	ADMS 16.7.0: • Updated document format and styling.

Contents


1. Introduction	4
2. General Usage	6
2.1. Starting the Net Dynamics Configuration Editor	6
2.2. Toolbar and Menu	7
3. Displays Overview	8
3.1. General Tab	8
3.2. Dynamics Tabs	8
3.3. Annotations List View	9
3.4. Background Names Editor View	10
3.5. Viewer Config Name Editor View	11
3.6. Web Map Provider Editor View	12
4. Configuration	13
4.1. Modifying Dynamics Parameters	13
4.1.1. General Settings	13
4.1.2. Grid Tabular Settings	17
4.1.3. Study Case Setup Related Settings	21
4.1.4. Outage Management System (OMS) Settings	22
4.1.5. Grid Tabular Filter Panel	25
4.2. Defining the Annotations Configuration	26
4.3. Managing the Background Configuration	27
4.4. Adding and Editing Configurations	29
4.4.1. Adding a Viewer Configuration Name	29
4.4.2. Updating the Bitmap Folder Location for the Viewer Configuration Editor Shortcut	30
4.5. Defining a Web Map Provider Instance	31
4.6. Setting Path to Switching Order Configuration File	33
4.7. Setting the Structure Server Connection	33

1. Introduction

The Net Dynamics Configuration Editor (NetDynamicsConfig.exe) provides a graphic method to safely edit the NetConf.xml file. This file is used by the ADMS client to set a range of parameters needed at startup, to manage dynamics for study case setup, and to display grid tabulars, background shapes, web maps, annotations, etc.

Currently, separate netconf.xml files are used to configure multiple client instances. Similar to real-time, study, and simulator modes, different background colors are used to distinguish OMS-specific clients.


- **netconf.xml:** Configures standard clients for complete system functionality. These clients can operate the Distribution Management System (DMS), Outage Management System (OMS), and Distribution Network Analysis Functions (DNAF).

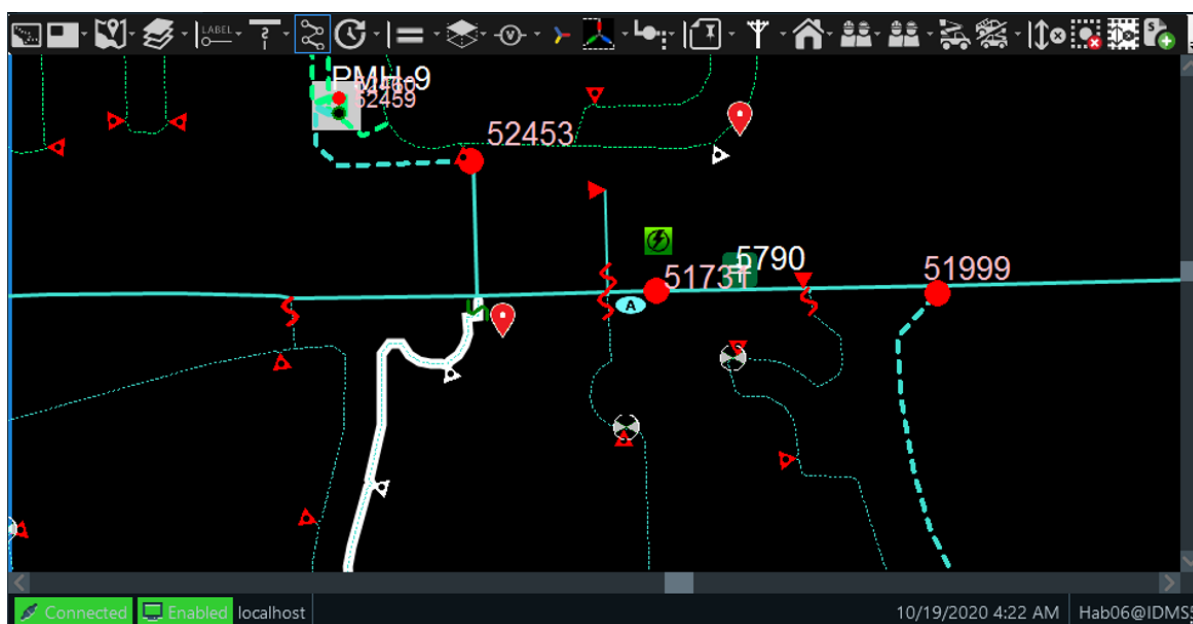

- **netconf_oms.xml:** Configures OMS-specific clients. These clients only connect to DMS Server (NetSrv) and OMS Server (Net Server). For OMS clients, DMS data and operations are read-only and DNAF data and operations are not available.

Note

OMS clients can create annotations on the network view displays.

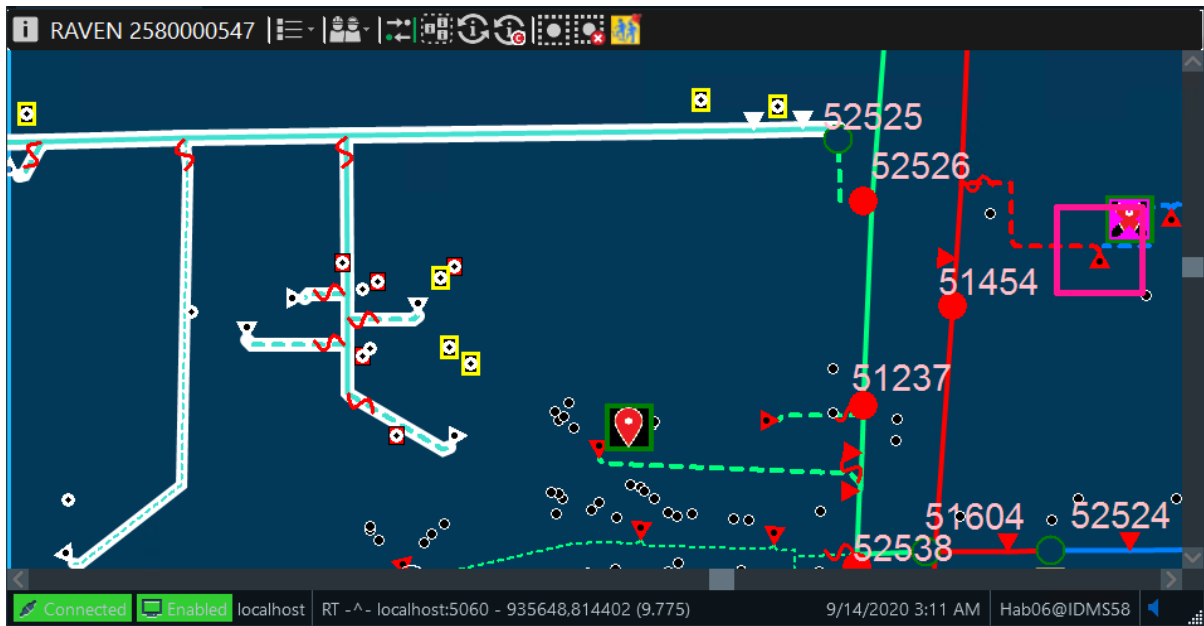

2. General Usage

This chapter describes general usage of the Net Dynamics Configuration Editor.

2.1. Starting the Net Dynamics Configuration Editor

The Net Dynamics Configuration Editor can be launched from the ADMS Tools kit, from the shortcut All Programs > Eterra > Distribution > Tools > Configuration Tools > Net Dynamics Configuration Editor.

By default, the tool is loaded with the netconf_localhost.xml configuration file, located in the %IDMS_ROOT%\config\client\ directory.

The network configuration shows four tabs named General, RT (real-time), ST (study), and SIM (distribution operator training simulator).

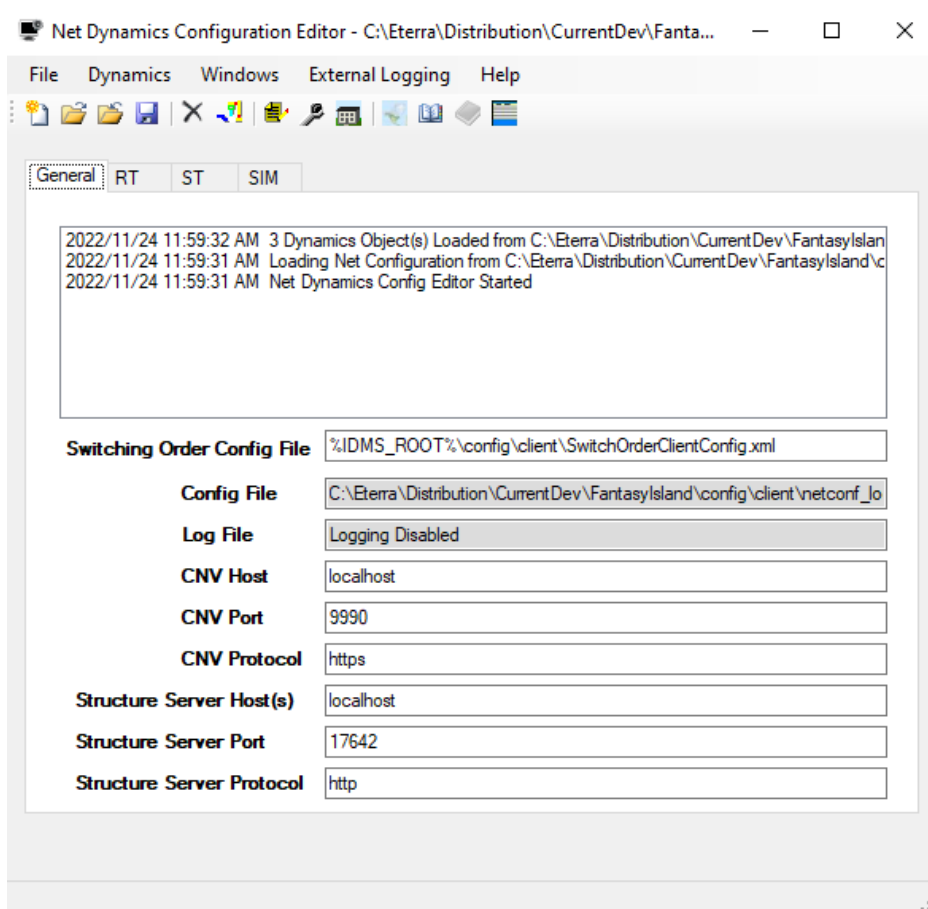


Figure 1. Net Dynamics Configuration Editor

The title bar and the Config File field specify which configuration file is currently being modified by this editor.

2.2. Toolbar and Menu

In the Net Dynamics Configuration Editor, the menu and toolbar include the following options:



- **Load New Configuration:** Creates a new configuration file.
- **Open:** Opens an existing configuration file.
- **Close:** Closes the currently open configuration file.
- **Save:** Saves the current configuration file.
- **Save As:** Saves the current configuration file with a different name.

Note

When re-saving a `netconf.xml` file with a newer version of the Net Dynamics Configuration Editor tool, new parameters may appear in the file. This does not alter the existing configuration.

- **Delete:** Deletes the currently selected dynamics tab.

The RT, ST, and SIM tabs in the screenshot below represent different dynamics. One of these tabs must be selected prior to using the Delete button.

- **Add Dynamics:** Adds a new dynamic entry to the existing list. Creates another tab.
- **Annotations:** Opens a dialog box for configuring the annotation types for the selected dynamics.
- **Viewer Configuration Name Editor:** Adds, modifies, or removes the ViewerConfig entries. Used to map dynamics to one or more `viewerconfig.xml` files.
- **Background Editor:** Adds, modifies, or removes the background entries. Used to map dynamics to landbase background files.
- **Web Map Provider Editor:** Defines a new Web Map Provider object.
- **Enable Logging:** Enables external logging.
- **Disable Logging:** Disables external logging.
- **Reset Grid Tabular Settings to Default Settings:** This option must be used when converting client configuration files from **e-terrardistribution** 3.4 and earlier.

Grid tabular display configurations were redesigned in **e-terrardistribution** 3.5. This option correctly applies new grid tabular configurations to older configuration files.

3. Displays Overview

This chapter provides an overview of the Net Dynamics Configuration Editor displays.

3.1. General Tab

The General tab has a messages window that provides feedback about successful actions and suggestions for correcting improper actions. It also allows you to enter the Switch Order Client Configuration file name and path.

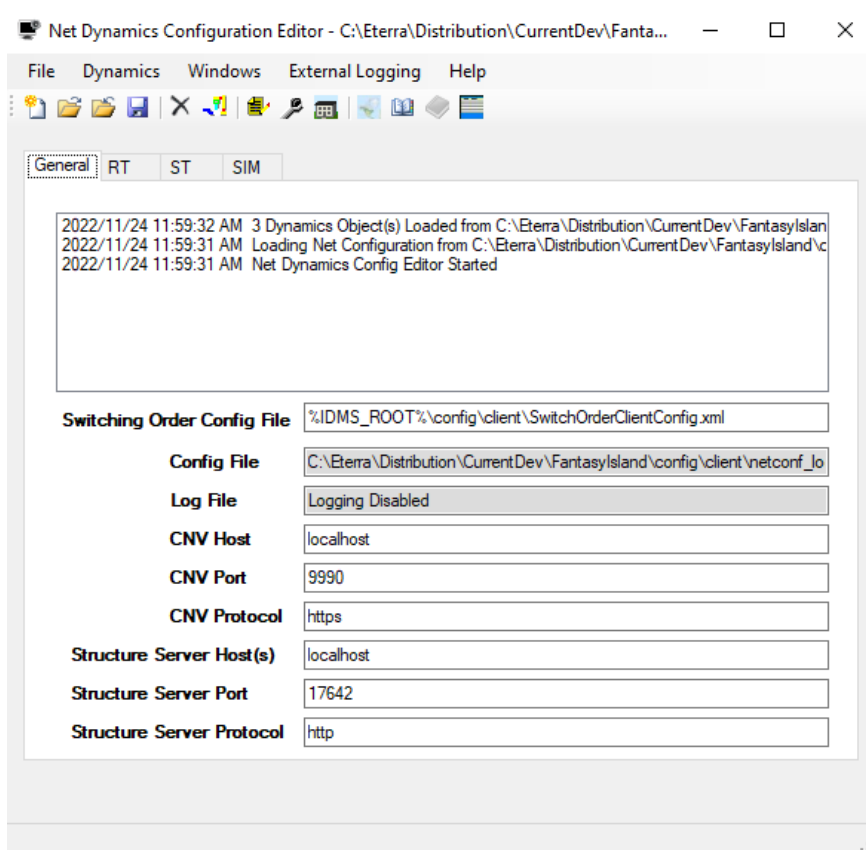


Figure 2. General Tab

The Common Network Viewer (CNV) host, port, and protocol values are not supported in production.

The Structure Server host, port, and protocol values specify the host, port, and protocol respectively. These values are used to route requests to the Structure Server endpoints.

3.2. Dynamics Tabs

The RT, ST, and SIM tabs are used to edit a list of parameters that are related to the folder path of

configuration files, ADMS server host names, and so on for specific dynamics.

There is one tab per dynamic, each with the same fields to be filled in. Depending on the parameter, the tool presents text entry wells, check boxes, list boxes, or color fields to foster the configuration.

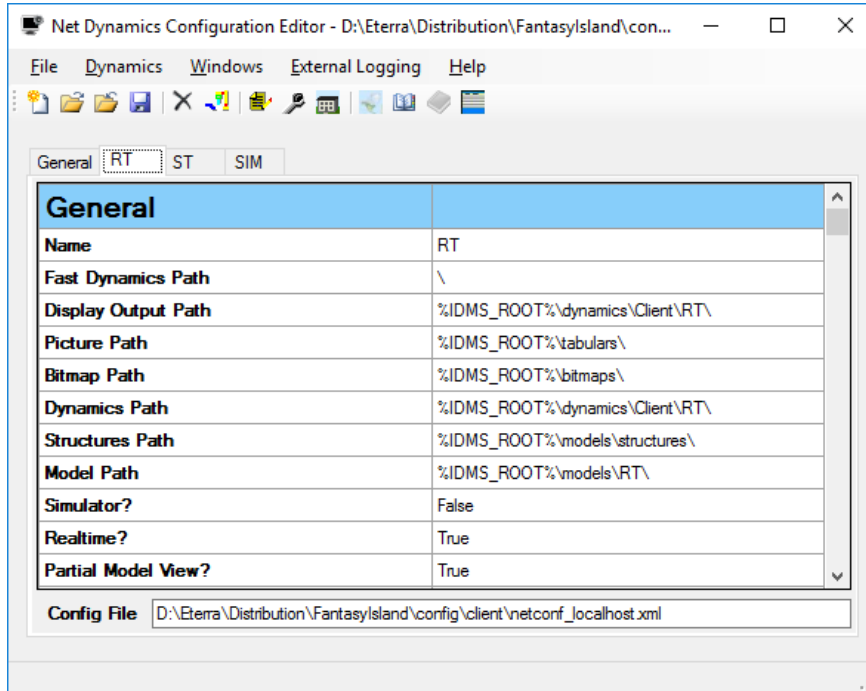


Figure 3. RT Tab

For field descriptions, see [Modifying Dynamics Parameters](#).

3.3. Annotations List View

The Annotations List view is specific to each dynamic entry. This is denoted in the title bar.

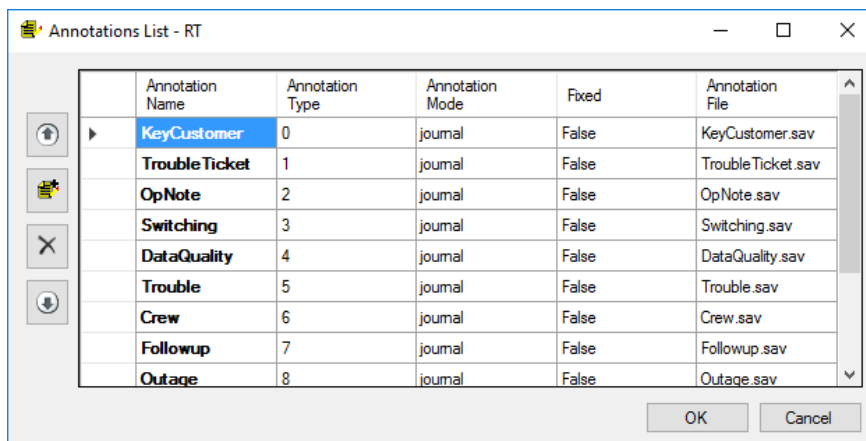


Figure 4. Annotations List View

The Annotation List view contains the columns:

- **Annotation Name:** The human-friendly name for the annotation type.
- **Annotation Type:** This is a number to allow the software to quickly relate human-named annotation types to a number.
- **Annotation Mode:** Currently, only the "journal" mode is allowed. This parameter cannot be edited.
- **Fixed:** True or False. Setting this flag to True makes the annotation type non-movable, non-deletable, and non-editable for operators. This is intended to be used for placing operating text on the geographic display or for marking key customers.
- **Annotation File:** The name of the file in which the dynamic annotation information is stored (the extension of the file is ".sav").

3.4. Background Names Editor View

The Background Names Editor view is used to select a background file that is used by the ADMS client.

A background file contains various background maps (roads, boundaries, building footprints, etc.), and it is created by the Geographic Background Compiler. For details, refer to the *Geographic Background Compiler User Guide*.

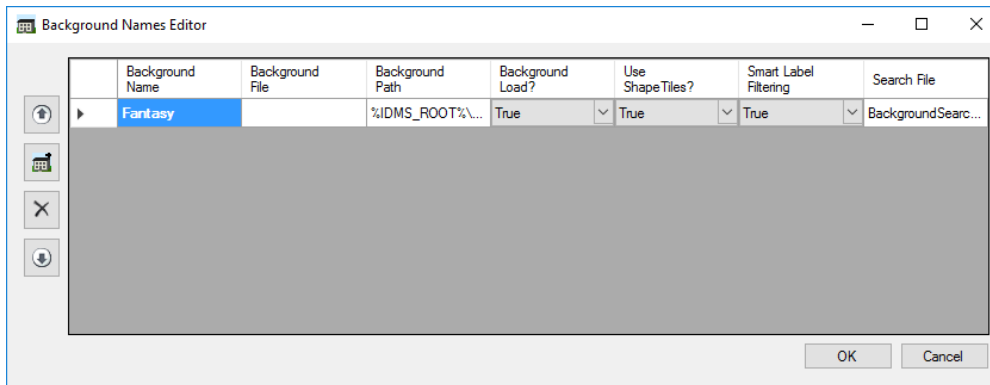


Figure 5. Background Names Editor View

The Background Names Editor contains the columns:

- **Background Name:** This is the name of the background configuration.
- **Background File:** This is the background file name (with the extension .bkgd) used for this specific background configuration.

This field should be empty when the configuration uses "*.geo" shape tiles.

- **Background Path:** This is the path where the background files or shape tiles are located. This can be an absolute path or a relative path, but it must end with a backslash.
- **Background Load?:** Enables or disables the loading of the geographic background.

- **Use Shape Tiles?:** Set to True when shape tiles are used for the background. Set to False to use a background file.
- **Smart Label Filtering:** Set to True to enable decluttering of the geographic view by hiding certain types of labels. Set to False to show all labels.
- **Search File:** Path to the background search file to enable the Landbase Search tab of the Tabbed Find pop-up. This file is compiled using the Geographic Background Compiler tool. This can be an absolute or a relative path.

3.5. Viewer Config Name Editor View

The Viewer Config Name Editor view is used to select a viewer configuration file that is used by the ADMS client.

A viewer configuration file contains various user interface parameters (colors of feeders, function keys, font sizes, toolbar buttons, etc.). This file is created by the Viewer Configuration Editor (for more details, refer to the *Viewer Configuration Editor User Guide*).

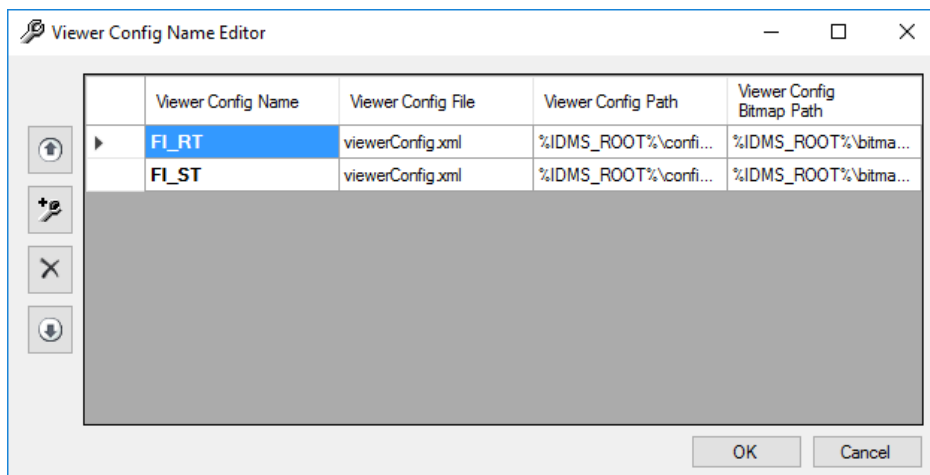


Figure 6. Viewer Config Name Editor View

The View Configuration Name Editor contains the following columns:

- **Viewer Config Name:** The name of the viewer configuration.
- **Viewer Config File:** The viewer configuration file name (with the extension .xml).
- **Viewer Config Path:** The path where the viewer configuration file is located. This can be an absolute path or a relative path, but it must end with a backslash.
- **Viewer Config Bitmap Path:** The path where the bitmap folder is located. This can be an absolute path or a relative path but it must end with a backslash.

3.6. Web Map Provider Editor View

The Web Map Provider Editor view is used to define Web Map Provider parameters and map tile locations for use by the ADMS client.

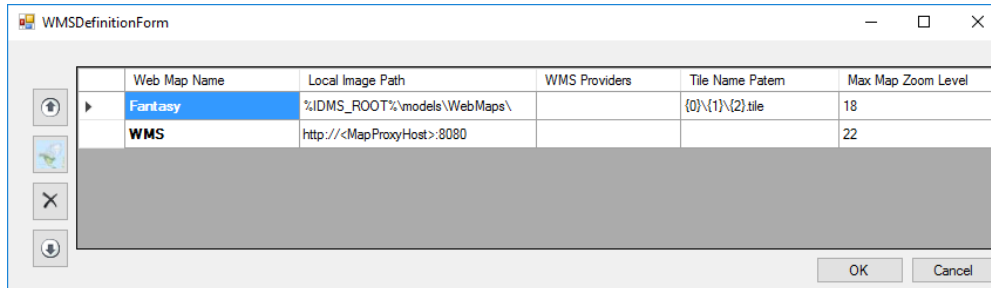


Figure 7. Viewer Config Name Editor View

The WMS Definition Form contains the following columns:

- **Web Map Name:** Web map provider name.
- **Local Image Path:**
 - For using pre-downloaded map tiles: Path to a folder with map tiles.
 - **For using a map web service:** URL of the map web service.
- **WMS Providers:** This field is for future use.
- **Tile Name Pattern:** Three components uniquely specify a tile: map zoom level, column, and row. Entering {0}\{1}\{2}.tile in this field indicates that map tiles are stored with a hierarchy. This improves performance when large numbers of map tiles are stored in a folder. This field is required when using pre-downloaded map tiles only.
- **Max Map Zoom Level:** Maximum map zoom level, from 1 to 23, where 23 indicates best resolution. Depending on which map provider is used, this parameter can change.

4. Configuration

4.1. Modifying Dynamics Parameters

The Dynamics view allows you to specify dynamics parameters for different configurations (study mode, real-time mode, etc.).

The dynamics parameter associated with a specific configuration is shown on its own tab. For example, in the screenshot above, dynamics parameters have been set up for three different configurations/modes: RT (real-time mode), ST (study mode), and SIM (simulator mode). Viewing and modifying the dynamics parameters for a specific configuration is done by selecting the corresponding tab in the Dynamics view.

The following dynamics parameters must be configured for each of the modes:

- Real-time (RT) dynamics:
 - Real-time?: True
 - Simulator?: False
- Study (ST) Dynamics:
 - Real-time?: False
 - Simulator?: False
- Simulator (SIM) Dynamics:
 - Real-time?: False
 - Simulator?: True

Note

All the path fields can be defined using absolute or relative paths. The product sample files use relative paths, so that the same configuration files can be used even if the installer chooses a non-default location.

To modify the parameters:

1. Select the Dynamics tab you need to modify.
2. Modify or enter the fields on the selected Dynamics view. The parameters are described in [General Settings](#).

4.1.1. General Settings

On the selected Dynamics view, enter or modify the following parameters:


- **Name:** The Dynamics tab header name (for example, RT, ST, SIM, or RO for read-only mode).

Enter this name and save the configuration file for changes to take effect.

A good practice is to keep the name short but descriptive because it is used in every URL call-up. For example, to call up the real-time (RT) detailed geographic display for the RAVEN substation, the URL is as follows:

NETVIEW://RT/view/detail/RAVEN

The dynamics name appears in the header bar and in the status field of the display.

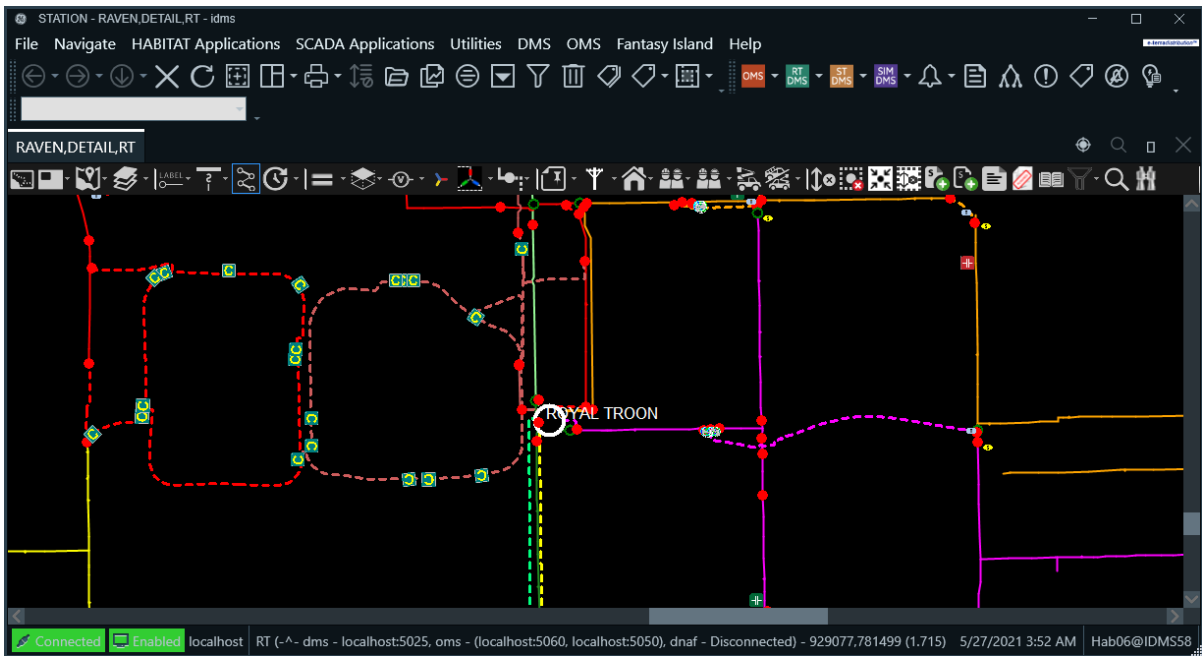

- **Fast Dynamics Path:** Enter the full path for the folder location for the client, to store the fast dynamics files it receives from the server.
- **Display Output Path:** Enter the full path to the folder for tabular results output.

The default path may look like the following: %IDMS_ROOT%\dynamics\Client\RT\

For OMS-specific clients: %IDMS_ROOT%\dynamics\Client\RT\OMS\

- **Picture Path:** Enter the full path to the folder containing the files used for toolbars and grid tabular displays. This can be an absolute path or a relative path, but it must end with a backslash.
- **Bitmap Path:** Enter the full path to the folder containing the bitmap files. This can be an absolute path or a relative path, but it must end with a backslash.
- **Dynamics Path:** Specifies the folder where the client dynamics files should be stored after receiving them from the server. This can be an absolute path or a relative path, but it must end with a backslash.

The default path may look like the following: %IDMS_ROOT%\dynamics\Client\RT\

For OMS-specific clients: %IDMS_ROOT%\dynamics\Client\RT\OMS\

- **Structures Path:** Sets the path to the structure model files. This can be an absolute path or a relative path, but it must end with a backslash.
- **Model Path:** Sets the path to the substation model files. This can be an absolute path or a relative path, but it must end with a backslash.
- **Simulator?:** For a SIM client configuration, this field must be set to True. Set to False for ST and RT modes.
- **Real-time?:** Enable this option (set to True) for a real-time client configuration. In real-time mode, the use of Scada energization information is enabled.

Set to False to set to study mode where pseudo-energy sources are programmatically inserted into the model.

For a SIM client configuration, set the "Real-time?" flag to False.

- **Partial Model View?:** Set to True to enable the partial model view feature.

For distribution systems with more than 15 substations, the performance impacts to the client are such that it is better to only look at portions of the network at one time. By default, the Partial Model View (PMV) loads the requested station and two levels of electrical adjacency. This way, only a handful of stations are loaded into memory, which greatly improves UI performance. Default value is True (enabled).

- **Customer-Only Mode?:** Set to True to enable selected OMS features, such as customer information and meters, for use in a DMS setting.
- **Online?:** Set to True to allow connections to server(s). Set to False to run as an isolated client. For OMS clients, set this option to True.
- **Managed Connection Use Credential File?:** Set to True to use a credential file for defining the private key and user SIDs for managed connections.
- **Managed Connection Check Message Sequence?:** Set to True to check message sequence numbers for managed connections.
- **Managed Connection Check Message Security?:** Set to True to check message security for managed connections.
- **Managed Connection Use TLS?:** Set to True to use the TLS security protocol for managed connections.
- **Managed Connection Use Streams?:** Set to True to use streams for managed connections.
- **Configure Client to clear trace based on Persist flag when topology changes:** Setting this to True and **Configure Client to Auto-Clear Trace when Topology Changes** to False results in traces being auto-cleared only when PERSISTTRACE was not used in the trace command. This allows for selective specification of persistent traces. This functionality may be combined with the Viewer Configuration option to draw trace halos first, resulting in traces being displayed with conductor and other halos.
- **Configure Client to Auto-Clear Trace when Topology Changes:** Set to True to automatically clear all traces on the client when the network topology changes (for example, when a switch is opened).

- **Enable Client to Support New Query Format:** Set to True to support the new query format.
- **Connect TCP After Station Map Ready:** When enabled, the client connects to the server after the network view is loaded; otherwise, the connection starts one minute after startup. When disabled, the client connects to the server immediately after startup.

Optionally, for clients that do not load the network view at startup (for example, those working with the OMS Display Plug-in or the Switching Order application), disable the startup connection delay by setting this option to False.

- **Send New AnnTt Hello Only:** This option is enabled by default.
- **Notify Action Failure:** This option is disabled by default.
- **Allow to Load Fatal Model:** When disabled, both the server and client reject models from getting loaded into memory if the station mod file has fatal errors and is loaded in system. This option is disabled by default.
- **Jumper U Shape:** When enabled, jumpers use a curved line shape. When disabled, jumpers use a polyline shape. This option is enabled by default.
- **Disable Fire Dyn Changed Events in Any Case:** Set to True to disable firing any dynamics change events. This option is disabled by default.
- **Fire All Dyn Changed Events:** Set to True to fire all dynamics change events. This option is enabled by default.
- **Force CBO Requests to be Sent to DMS Server:** If not selected, the client sends CBO requests that require DNAF data to the DNAF server; if the DNAF server is not available, the client then sends CBO requests to the DMS server. If selected, the client sends all Check Before Operate (CBO) requests to the DMS server regardless of the DNAF server availability.
- **Temp. Ground Change Event Enable:** This is for internal use only. This option must be disabled by default.
- **Dynamic Query State:** This is for internal use only. This option must be disabled by default.
- **Subscribe to GIS Notifications:** If enabled, the client receives notifications about switch status changes to the Pending/Permanent state from the server.
- **Transmission Adjacent Enable:** If enabled, transmission lines are taken into account in the adjacency algorithm.
- **Distribution Adjacent Enable:** If enabled, distribution lines are taken into account in the electrical adjacency algorithm.
- **Trigger Ntp on Fault Ind Fast Dynamics:** This option is enabled by default.
- **Resync on Connect:** If enabled, the client cleans its dynamics and downloads a completely fresh copy from the server.

Note

Checking this box significantly impacts performance. It is recommended that you leave this disabled.

- **State of Charge Query Enable:** If enabled, fast dynamics querying is enabled, so the client downloads the energy resource state of charge data from the server.
- **Value Placement Query Enable:** If enabled, enables querying for calculated power flow value placements and measurement values from Scada.
- **Potential Fault Locations Query Enable:** If enabled, fast dynamics querying is enabled, so the client downloads the fault location dynamic results.
- **Measurement Quality Query Enable:** If enabled, fast dynamics querying is enabled, so the client downloads the measurement quality information. This option is enabled by default.
- **DNAF Input Query Enable:** If enabled, the clients are able to modify values in the DNAF manual entry pop-ups. This option is enabled by default.
- **Measurement Query Enable:** This option is enabled by default.
- **Trouble Ticket Query Enable:** This option is disabled by default.
- **Power Flow Query Enable:** If enabled, enables power flow violation data, as calculated on the server, to be passed to the client and presented as halos on the geographic display. This is enabled by default.

The server must also have the corresponding parameter FAST_DYNAMIC_ENABLED set in its configuration file.

- **Use Dynamics:** This parameter is for internal use only. Always set it to enabled (True).
- **Send Old Format Switch Change Event:** This option is disabled by default.
- **Is Admin or DB Builder:** If this option is enabled, users with Administrator credentials can modify fixed annotations.
- **Is Admin or DB Builder:** If this option is enabled, users with Administrator credentials can modify fixed annotations.
- **Show Orders Instead Of Incidents:** Set to True to show order symbols instead of incident symbols on the network view.
- **Pop-Up Background Color:** Defines the background color used behind pop-ups and grid tabular displays. Allows pop-ups to be configured to match the background color of a read-only or study mode background.

The default colors are gray for RT mode, yellow for ST mode, and dark purple for SIM mode.

- **Background Color:** Defines the main background color used behind the electrical lines and components drawn by the software. You can change the color by clicking on the color square.

Black is the default and most optimal choice for real-time mode. The default color is gray for ST mode, purple for SIM mode, and dark purple for OMS mode.

- **Mode:** Mode (none, client, server, or standalone).

4.1.2. Grid Tabular Settings



Note

The settings listed in this section define the default style for all grid tabular displays. To change the style of individual grid tabular displays, use the Grid Tabular Builder. For more details, refer to the *Grid Tabular Builder User Guide*.

- **Grid Tabular Enable Dynamic Filters:** Defines whether enhanced filtering controls are shown on grid tabular displays.
- **Grid Tabular CSV Export use ASCII Encoding:** Defines the encoding format used when exporting grid tabular data to a CSV file.
- **Grid Tabular Autosize Column Header Height:** Defines whether the grid tabular header row height is automatically resized to allocate header cell contents when changing the width of a column.
- **Grid Tabular Minimum Row Height:** Defines the minimum row height for grid tabular displays (in pixels).
- **Grid Tabular Background Color:** Defines the background color used behind the grid tabular displays. You can change the color by clicking on the color square.
- **Grid Tabular True/False Value:** Defines the replacement values for the True and False flags (for example, Yes and No).
- **Grid Tabular Header Grid Line Style:** Defines the grid tabular header border style. The following options are available:
 - Custom: For future use.
 - Single: A single line border
 - Raised: A three-dimensional raised border
 - Sunken: A three-dimensional sunken border
 - None: No borders
 - SingleVertical: A vertical single-line border
 - RaisedVertical: A vertical three-dimensional raised border
 - SunkenVertical: A vertical three-dimensional sunken border
 - SingleHorizontal: A horizontal single-line border
 - RaisedHorizontal: A horizontal three-dimensional raised border
 - SunkenHorizontal: A horizontal three-dimensional sunken border
- **Grid Tabular Grid Line Style:** Defines the grid tabular border style.
- **Grid Tabular Grid Lines Color:** Defines the color for grid lines.
- **Grid Tabular Totals Row Font Size:** Defines the font size for the Totals row.
- **Grid Tabular Totals Row Font Type:** Defines the font type for the Totals row.
- **Grid Tabular Totals Row Font Style:** Defines the font style for the Totals row.
- **Grid Tabular Totals Row Text Color:** Defines the text color for the Totals row.
- **Grid Tabular Totals Row Cells Color:** Defines the cell color for the Totals row.

- **Grid Tabular Rows Font Size:** Defines the font size for the grid tabular rows.
- **Grid Tabular Rows Font Type:** Defines the font type for the grid tabular rows.
- **Grid Tabular Rows Font Style:** Defines the font style for the grid tabular rows.
- **Grid Tabular Rows Text Color:** Defines the text color for the grid tabular rows.
- **Grid Tabular Rows Selected Color:** Defines the color of the selected cell.
- **Grid Tabular Context Menu Customize UI:** Specifies whether the configured grid tabular context menu style is used.
- **Grid Tabular Context Menu Show Icon Strip:** Specifies whether context menu option bitmaps are shown in the context menu.
- **Grid Tabular Context Menu Text Size:** Defines the font size for the grid tabular context menu options.
- **Grid Tabular Context Menu Selected Color:** Defines the color for the selected option in the grid tabular context menu.
- **Grid Tabular Context Menu Arrow Color:** For future use.
- **Grid Tabular Context Menu Text Color:** Defines the text color for the grid tabular context menu options.
- **Grid Tabular Context Menu Border Color:** Defines the border color for the grid tabular context menu.
- **Grid Tabular Context Menu Background Color:** Defines the background color for the grid tabular context menu.
- **Grid Tabular Editable Text Color:** Defines the color of editable text.
- **Grid Tabular Editable Cell Color:** Defines the background color of an editable cell.
- **Grid Tabular Even Rows Color:** Defines the color for even rows. If this parameter is not defined in the configuration file, the grid tabular display (.xml) settings are used by default.
- **Grid Tabular Odd Rows Color:** Defines the color for odd rows.
- **Grid Tabular Header Font Size:** Defines the font size for the grid tabular Header.
- **Grid Tabular Header Font Type:** Defines the font type for the grid tabular Header.
- **Grid Tabular Header Font Style:** Defines the font style for the grid tabular Header.
- **Grid Tabular Header Text Color:** Defines the text color for the grid tabular Header.
- **Grid Tabular Alternate Header Cells Color:** Defines the color for odd header column cells.
- **Grid Tabular Header Cells Color:** Defines the color for even header column cells.
- **Grid Tabular Title Font Size:** Defines the font size for the grid tabular title.
- **Grid Tabular Title Font Type:** Defines the font type for the grid tabular title.
- **Grid Tabular Title Font Style:** Defines the font style for the grid tabular title.
- **Grid Tabular Title Text Color:** Defines the grid tabular title text color.
- **Grid Tabular Title Color End:** Sets the end color for the grid tabular title background gradient.

The title gradient is painted left-to-right using the specified colors. If this parameter is not defined in the configuration file, the background is blue by default.

- **Grid Tabular Title Color Start:** Sets the start color for the grid tabular title background gradient. The title gradient is painted left-to-right using the specified colors. If this parameter is not defined in the configuration file, the background is blue by default.
- **Filter Panel XAML File Location:** Path to the XAML file that defines the grid tabular enhanced filtering panel.

Station	Area	Locate	De-energized Customers	Abnormal Topology Conditions	High Voltage Violation	Highest Load or Bus Voltage (%)	Low Voltage Violation	Lowest Load Bus Voltage (%)
ROYAL TROON	WST		5186	1	No	105.06	No	96.92
BLIONS	WST		425	1	No	101.93	No	97.15
WINGED FOOT	WST		20	1	No	103.39	Yes	47.36
RAVEN	WST		1	1	No	102.64	No	94.64
COHO	WST		0	0	No	106.58	Yes	90.71
PEBBLE BEACH	WST		0	0	No	103.55	Yes	87.90
VENUS	WST		0	0	No	103.51	No	97.03
CURLEW	STH		0	0	No	103.85	No	98.21
DURBAN	STH		0	0	No	103.99	No	95.74
EQSI	STH		0	0	No	99.02	No	96.36
MARS	STH		0	0	No	104.53	No	96.75
OAKMONT	STH		0	0	No	103.76	No	95.78
PINE VALLEY	STH		0	0	No	103.46	No	98.04
PINEHURST	STH		0	0	Yes	116.46	Yes	94.64
PLUTO	STH		0	0	No	102.86	No	96.74

Figure 8. Grid Tabular Style Settings

4.1.3. Study Case Setup Related Settings

- **Savecase Model File Limit:** Specified as an integer, this limits the number of model files allowed to be included in a single savecase.
- **Disable Measurements Control Restrictions:** By default, operator control actions (such as changing tap position or changing the Remote/Local, Auto/Manual, or Block/Unblock status for capacitors, regulators, and power transformers) are restricted if the associated SCADA measurements are attached to devices.
 - If this option is enabled, the device controlling in Study mode is not restricted based on SCADA measurements. The associated device toolbar and context menu options are enabled in Study mode.
 - If this option is enabled, the device controlling in Study mode is restricted based on SCADA measurements.
- **Study Server Model Path:** To allow for the automated features of the CopyFromRealTime and savecase capabilities, the client needs to know about the study server's model path. Set the same as the folder defined in the study server's configuration file.

- **Study Server Dynamic Schedule Path:** Set to the folder with the study server dynamic schedules.
- **Study Server Dynamics Path:** To allow for the automated features of the CopyFromRealTime and savecase capabilities, the client needs to know about the study server's dynamics path. Set the same as the folder defined in the study server's configuration file.
- **Savecase Path:** Set to the folder where savecase information should be stored.
- **Copy From Real-Time Temp Path:** Set to the folder where temporary data should be stored.
- **Study Case Setup Station Adjacency:** Specified as an integer, this number defines the level of adjacency when the stations are copied from the real-time server. To enable the retrieval of all station model files, set this parameter to a number greater than the total number of model files. For example, if there are 52 stations, set this value to 60. This will retrieve all of the model files in the folder regardless of geographical or electrical adjacency and account for future model additions.

4.1.4. Outage Management System (OMS) Settings

- **Configure Client to Send Compressed OMS Message:** If set to True, the client sends compressed messages to the OMS Server.
- **Configure client to Send OMS Message by Binary or Xml Serialization:** If set to True, the client sends serialized messages to the OMS Server.
- **OMS Coded Translation Config File:** Sets the path to the coded translation configuration file.
- **OMS Client Config Name:** Sets the full path to the OMS client configuration file.
- **OMS Customer File Name:** Sets the full path to the OMS customer file.
- **Use PreComputeTimes for Oms Queries:** This option is disabled by default.
- **OMS Timer Period:** Enter the time in seconds for the client to send a periodic query to the server (for example, every five seconds).
- **OMS Online?:** If set to True, only the client starts sending a query to the server.
- **OMS Port:** The TCP/IP port of the OMS server(s). Set this to the same value as the listening port on the desired OMS server.

The server connection status is shown in the in the status field of the display.

- **OMS Server IPs (Server A, Server B):** Set to the host name(s) that the client is connecting to for this set of dynamics data. Separate multiple hosts with commas. When connecting to a server running on the same machine (for example, the default local study server), set this field to "localhost".
- **OMS Customer Cache Path:** Path to the location where the mapping of customer data to the station model files is cached. These are transient files that allow for faster call-up of the client.
- **Register this Client Application Type:** The client application type.
 - For standard clients, set the type to VC (view client).

- For important clients, set the type to VIPC.
- For OMS-specific clients, set the type to OVC (OMS view client).
- For important OMS-specific clients, set the type to VIPOC.

The system can be configured to issue an alarm when an important client is connected to or disconnected from the enabled server. To enable this option, add "VIPC" to the MONITOR_CONNECTION_STATUS_OF_CLIENTS parameter in the main server configuration file.

- **Required Server Build:** The default value is 608.
- **Max Asterix Count Connected:** The default value is 5.
- **Max Asterix Count Disconnected:** The default value is 5.
- **Client Side Dynamic Saving Frequency:** Time interval, in seconds, for the client to write a dynamics file. The minimum value is 2, and the maximum value is 600 (10 minutes).
- **FD Poll Period:** Specifies the fast dynamics polling period. This is used to delay sending ISD measurements to clients.
- **One Time Max Mod Update:** The default value is 0.
- **Mod File Change Check Period:** The default value is 5.
- **Safety RUSER Command (%X %Y %ID Proxies):** Enter the RUSER command to move the safety document on the Geographic Network view.
- **Delay to Automatically Force Hello Messages:** Time, in seconds, to delay automatically sending hello messages to the server. Use this option to avoid sending too many hello messages to the server, especially during a storm period.
- **Hello Messages Period:** Time interval, in seconds, for the client to send hello messages to the server. Hello messages are sent until a hello acknowledgement is received, or until the maximum number of attempts (by default, 3) is reached.
- **Index:** The default value is 0.
- **ETR Matrix File:** ETR matrix file.
- **Perm Stations:** Permission stations.
- **Console:** Console.
- **User:** User
- **Guid:** Globally unique identifier.
- **Time Out:** The default value is 10.
- **Debug Break Alloc:** The default value is 0.
- **Cache Size Limit:** Enter the maximum size for cached data in megabytes.
- **Viewer Config Name:** Use this combo box to select from the list of defined viewer configurations. Click the Viewer Config Name Editor button on the toolbar to switch to the viewer configuration mode and define viewer configurations for use with this combo box. For more information, see [Adding and Editing Configurations](#).
-

WebMap Name: Use this combo box to select from the list of defined WebMap provider instances. Click the WebMap Provider Editor button on the toolbar to define WebMap configurations for use with this combo box. For more information, see [Defining a Web Map Provider Instance](#).

- **Background Name:** Use this combo box to select from the list of defined background configurations. Click the Backgrounds Editor button on the toolbar to switch to the background view and define background configurations for use with this combo box. For more information, see [Managing the Background Configuration](#).
- **Message Version:** The default value is 2.
- **DNAF Port:** The TCP/IP port of the DNAF server(s). Set this to the same value as the listening port on the desired DNAF server.

The server connection status is shown in the in the status field of the display.

- **DNAF Server IPs (Server A, Server B):** Set to the host name(s) that the client is connecting to for this set of dynamics data. Separate multiple hosts with commas. When connecting to a server running on the same machine, set this field to "localhost".
- **Managed Connection Time to Live:** Time to live for managed connections in seconds.
- **Managed Connection Credential File:** Path to the credential file for defining the private key and user SIDs for managed connections.
- **Managed Connection Port:** The TCP/IP port for the OMS Interface Server. Set this to the same value as the listening port on the OMS Interface Server.
- **Managed Connection IPs (Server A, Server B):** Set to the host name that the client is connecting to for this set of dynamics data. When connecting to a server running on the same machine, set this field to "localhost".
- **Port:** The TCP/IP port of the DMS (Main) server(s). Set this to the same value as the listening port on the desired server. The server connection status is shown in the in the status field of the display.
- **Server IPs (Server A, Server B):** Set to the host(s) name(s) that the client is connecting to for this particular set of dynamics data. Separate multiple hosts with commas. When connecting to a server running on the same machine (for example, the default local study server), set this field to "localhost".
- **Model Extension:** Defines the Microsoft Windows file extension to associate with model files. The default is .mod.
- **Downstream Multi Phase Fault Bmp:** Name of the downstream multiphase fault bitmap in the Bitmaps folder.
- **Upstream Multi Phase Fault Bmp:** Name of the upstream multiphase fault bitmap in the Bitmaps folder.
- **Side 1 Single Phase Fault Bmp:** Name of the side 1 single phase fault bitmap in the Bitmaps folder.
- **Side 2 Single Phase Fault Bmp:** Name of the side 2 single phase fault bitmap in the Bitmaps

folder.

4.1.5. Grid Tabular Filter Panel

Note

The settings listed in this section define the default style for the grid tabular enhanced filtering panel. To enable enhanced filtering, set the Grid Tabular Enable Dynamic Filters option to True in the Grid Tabular Related Settings section.

- **Filter Panel Regular Font Size:** Defines the font size for regular text.
- **Filter Panel Regular Font Style:** Defines the font style for regular text.
- **Filter Panel Regular Font Type:** Defines the font type for regular text.
- **Filter Panel Big Font Size:** Defines the font size for big text.
- **Filter Panel Big Font Style:** Defines the font style for big text.
- **Filter Panel Big Font Type:** Defines the font type for big text.
- **Filter Panel Small Font Size:** Defines the font size for small text.
- **Filter Panel Small Font Style:** Defines the font style for small text.
- **Filter Panel Small Font Type:** Defines the font type for small text.
- **Filter Panel Background Main Color:** Defines the main background color for the filtering panel. You can change the color by clicking on the color square.
- **Filter Panel Background Secondary Color:** Defines the secondary background color for the filtering panel.
- **Filter Panel Regular Forecolor:** Defines the font color for header rows on the filtering panel.
- **Filter Panel Accent Color:** Defines the accent font color for the filtering panel.
- **Filter Panel Disabled Color:** Defines the font color for disabled controls on the filtering panel.
- **Filter Panel Error Color:** Defines the font color for erroneous values on the filtering panel.
- **Filter Panel Hint Color:** Defines the font color for hints on the filtering panel.

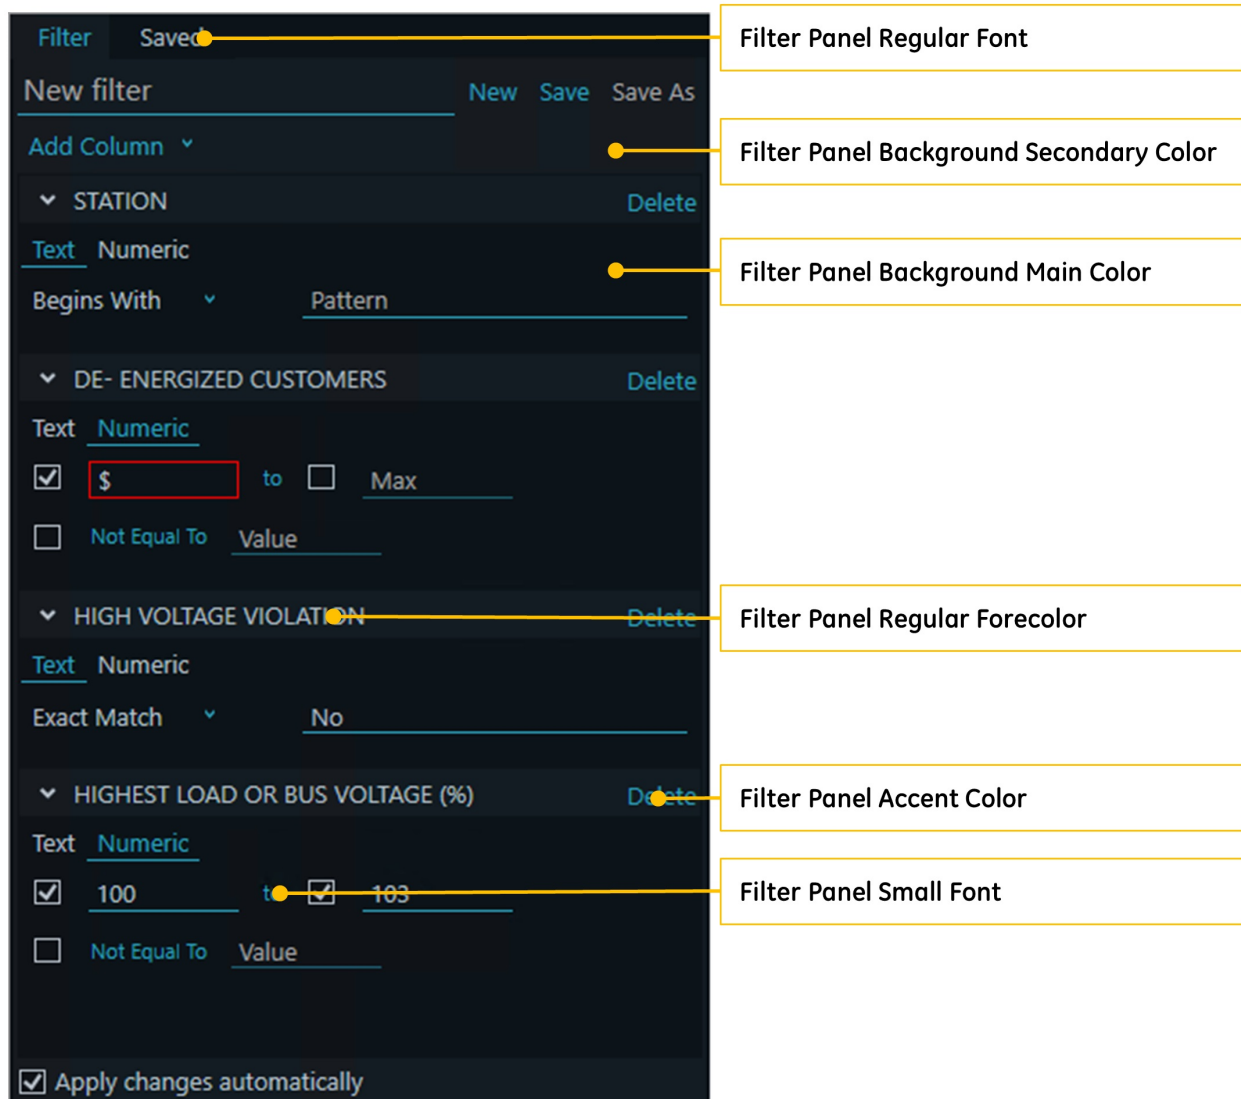



Figure 9. Grid Tabular Style Settings

4.2. Defining the Annotations Configuration

To define a new annotation type:

1. Select the RT tab, and click the Annotation button .

The Annotations List – RT pop-up is displayed.

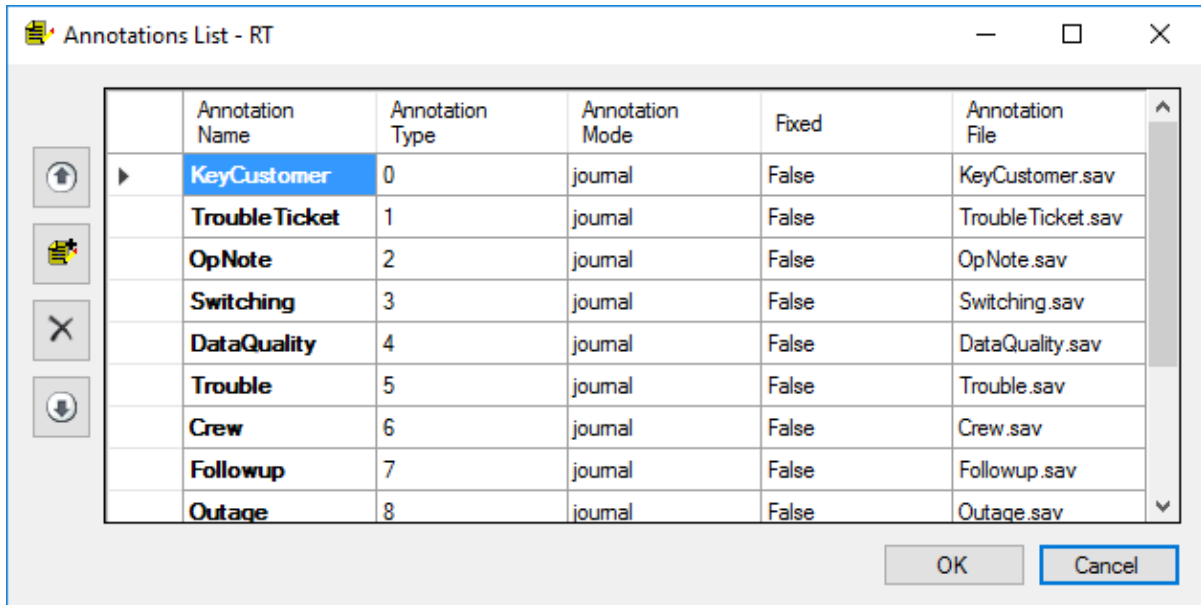

2. Click the Add Annotation Dynamics Entry button  to the left of the Annotation grid section.

A new blank entry appears at the end of the Annotations list.

3. Enter the following fields:

- **Annotation Name:** New annotation name
- **Annotation Type:** Sequential numeric value
- Annotation Mode: Journal
- **Fixed:** True or False

Fixed annotations can only be moved by users who have specific permissions.

- **Annotation File:** <new annotation name>.sav

The annotation dynamics will be recorded to this file.

4. Click OK.

5. To save the changes, select File > Save.

The new annotation type can be added on the network view after restarting the client.

4.3. Managing the Background Configuration

To view the list of defined background names:

1. Open the needed dynamics tab (RT, ST, or SIM).
2. Scroll down to display the Background Name parameter.
3. To view the list of defined parameters, click the drop-down list.

General		RT	ST	SIM
WebMap Name	Fantasy			
Background Name	Fantasy			
Message Version	Fantasy			
DnafPort	5026			
DNAF Server IP's (ServerA, ServerB)	localhost			
Managed Connection Time to Live	300			
Managed Connection Credential File				
Managed Connection Port	5050			

To define a background path:

1. Click Background Editor .

The Background Names Editor pop-up appears.

Background Names Editor							
	Background Name	Background File	Background Path	Background Load?	Use Shape Tiles?	Smart Label Filtering	Search File
	Fantasy		%IDMS_ROOT%...	True	True	True	BackgroundSear...

OK Cancel

2. Click the Add Background Name button.
3. Enter data in the following fields:
 - **Name:** Name of the background configuration.
 - **Background File:** This is the background file name (with the extension .bkgd) used for this specific background configuration.
When the configuration uses "*.geo" shape tiles, leave this field blank.
 - **Background Path:** Path to the folder containing background shape tiles. This can be an absolute path or a relative path, but it must end with a backslash.
 - **Background Load?:** Set to True to load the background data.
 - **Use Shape Tiles?:** Set to True when shape tiles are used for the background. Set to False to use a background file.
 - **Smart Label Filtering:** Set to True to enable decluttering of the geographic view by hiding certain types of labels. Set to False to show all labels.

- **Search File:** Path to the background search file to enable the Landbase Search tab of the Tabbed Find pop-up. This file is compiled using the Geographic Background Compiler tool. This can be an absolute or a relative path.
4. Click OK.
 5. To save your changes, select File > Save.

4.4. Adding and Editing Configurations

4.4.1. Adding a Viewer Configuration Name


To add a new Viewer Config Name:

1. Click the Viewer Configuration Editor icon  on the toolbar.

The Viewer Config Name Editor pop-up appears.


2. Click Add Viewer Config Name [image22].

A new blank record appears.

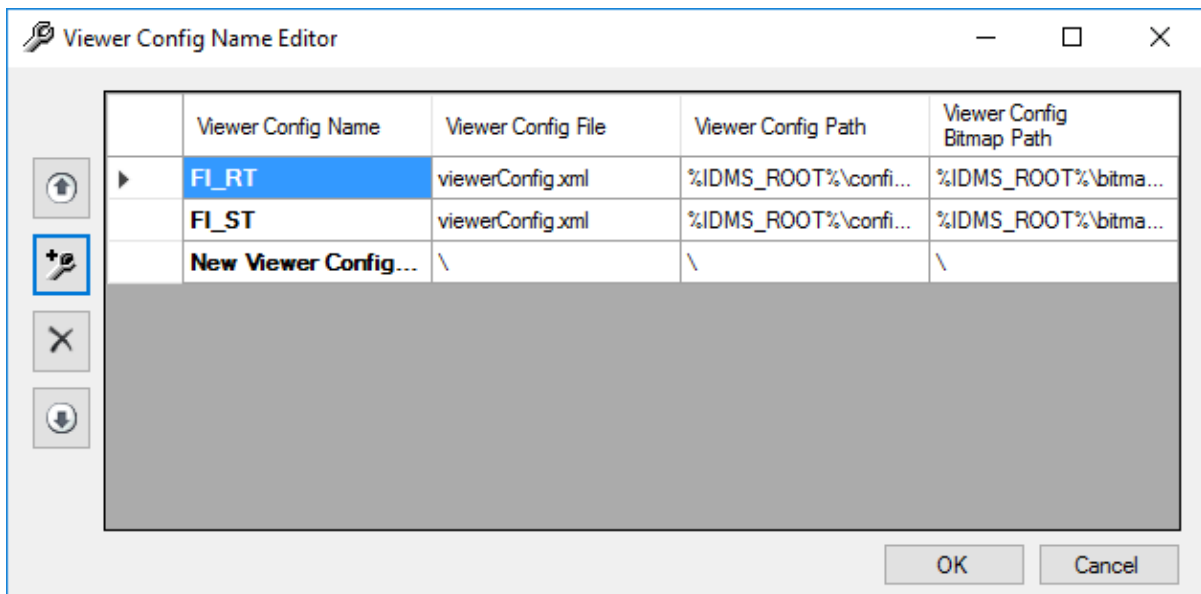

3. Enter data in the following fields:
 - **Viewer Config Name:** The name of the new viewer configuration.
 - **Viewer Config File:** The viewer configuration file name (with the extension .xml).
 - **Viewer Config Path:** The path where the viewer configuration file is located. This can be an absolute path or a relative path but it must end with a backslash.
 - **Viewer Config Bitmap Path:** The path where the bitmap folder is located. This can be an absolute path or a relative path but it must end with a backslash

4. Click OK.
5. To save your changes, select File > Save.
6. Open the desired dynamics tab (RT/ST/SIM) and scroll down to the "Viewer Config Name" parameter.
7. Click the Viewer Config Name drop-down list and select the new name of the Viewer Configuration.

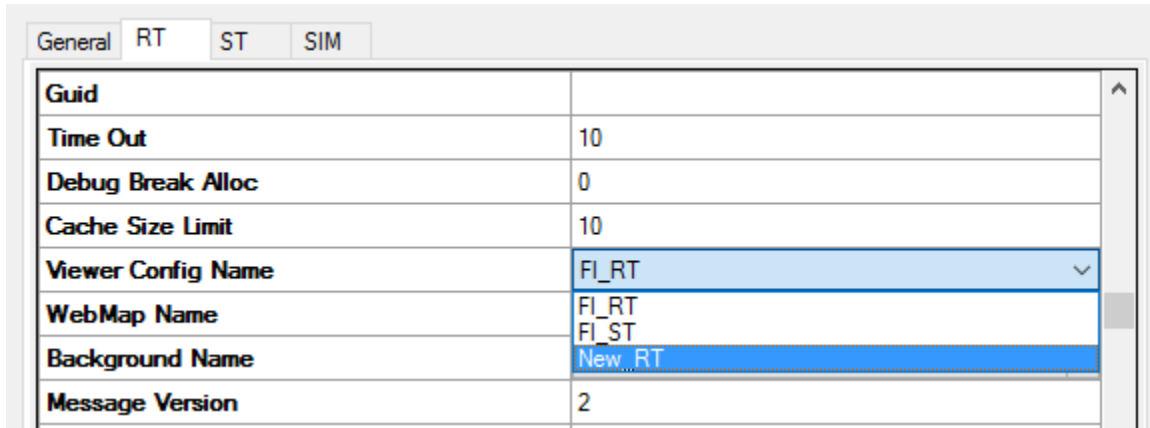

General RT ST SIM	
Guid	
Time Out	10
Debug Break Alloc	0
Cache Size Limit	10
Viewer Config Name	FI_RT ▼
WebMap Name	FI_RT
	FI_ST
Background Name	New.. RT
Message Version	2

8. When you exit the tool, the Save Changes prompt appears. To save your changes, click OK.


4.4.2. Updating the Bitmap Folder Location for the Viewer Configuration Editor Shortcut

When running the Viewer Configuration Editor from the shortcut, the tool uses the specified bitmap folder, if provided.

To change the default bitmap folder location:

1. Click the Viewer Configuration Editor icon  on the toolbar.

The Viewer Config Name Editor pop-up appears.

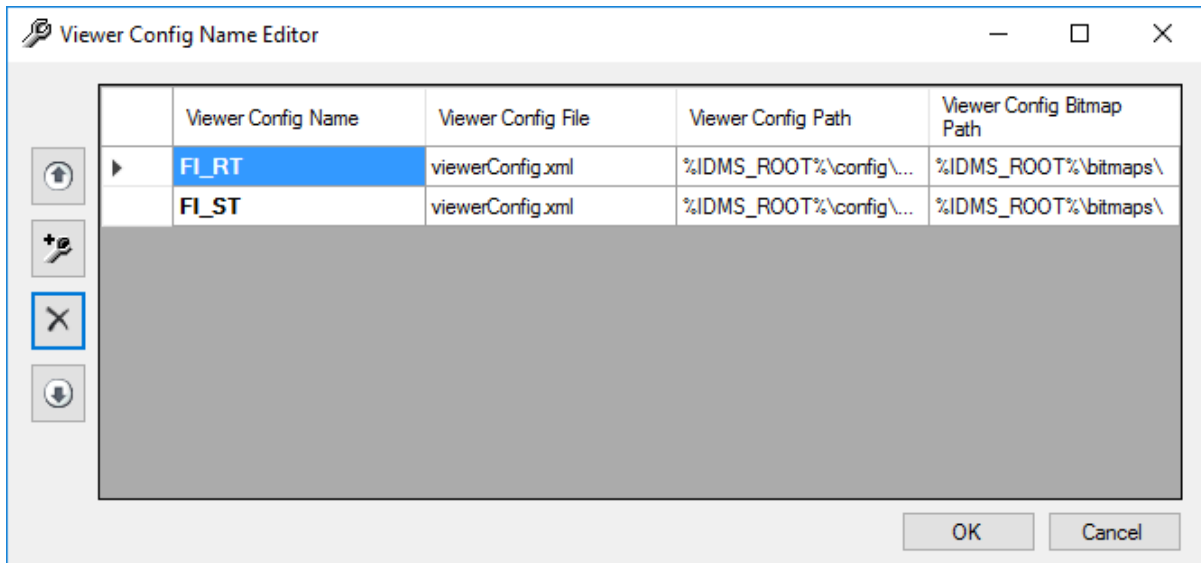

2. Enter a new path or modify the existing path in the Viewer Config Bitmap Path field.
3. Click OK.
4. To save the changes, select File > Save.
5. Locate the Viewer Configuration Editor shortcut.
6. Right-click the shortcut, and select the Properties option from the right-click menu.

The Viewer Configuration Editor Properties pop-up appears.

7. Select the Shortcut tab.
8. In the Target field, locate the /BPATH "<bitmap path>" (by default: /BPATH "%IDMS_ROOT%\bitmaps"), where *bitmap path* is the full path to the folder, and enter the new path exactly as defined in the Net Dynamics Configuration Editor.
9. Click the Apply button, and then click OK.


The Viewer Configuration Editor looks for a bitmaps folder using the new path.

4.5. Defining a Web Map Provider Instance

To define a new instance of a Web Map Provider:

1. Click the Web Map Providers button [image26] on the toolbar.


The Web Map Provider Editor pop-up appears.

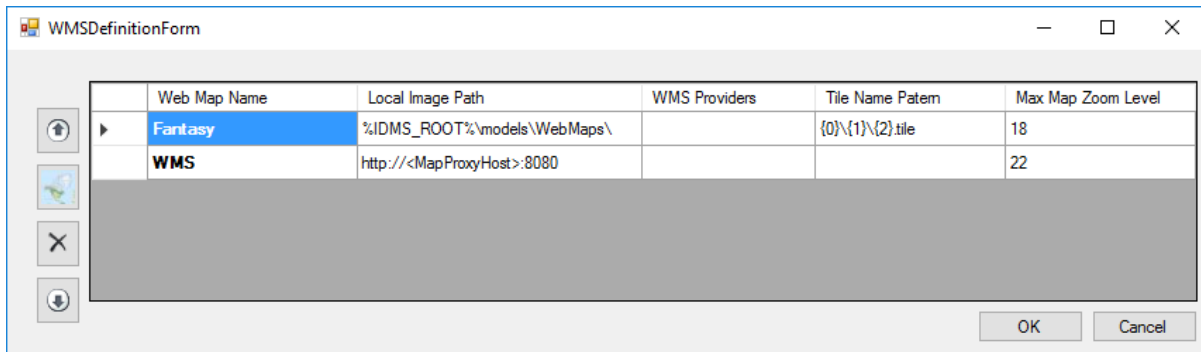


- Click the Web Map Providers button .

A new blank record appears.

- Enter the web map fields. For more details, see [Web Map Provider Editor View](#).

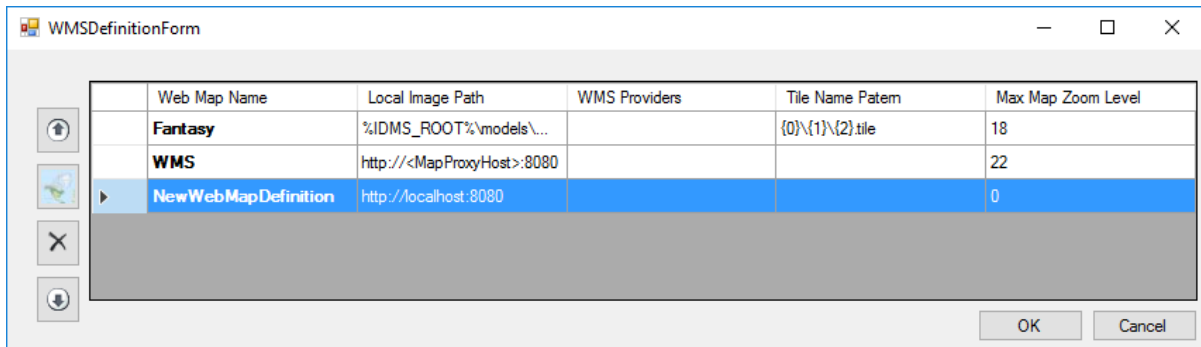

- Click OK. The Web Map Name menu is updated with the new web map definition for each dynamics instance.

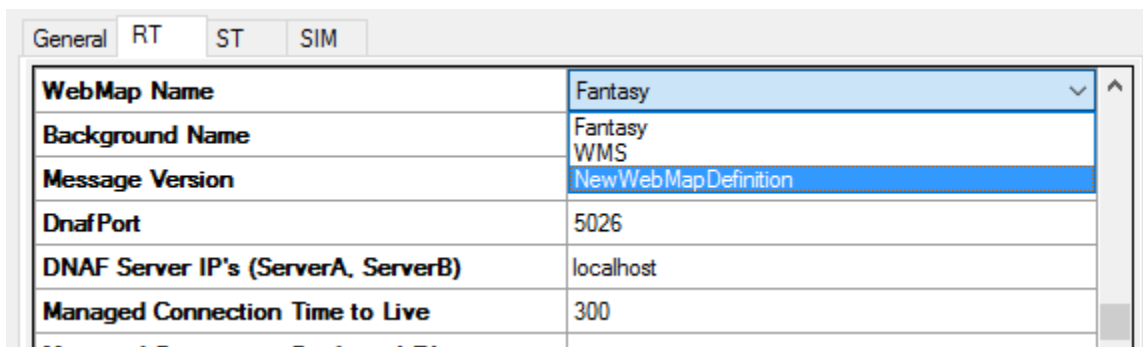

Once a new web map provider definition is created, you need to specify the coordinate converter DLL and class name and configure a toolbar to show/hide layers using the Viewer Configuration Editor. For more information, refer to the "Configuring Web Maps" chapter in the *ADMS Installation Guide*.


4.6. Setting Path to Switching Order Configuration File

You can enter the Switch Order client configuration file name and set the full path to the file's location via the Switch Order Config File field on the General tab.

The path may look like the example below:

`%IDMS_ROOT%\config\client\SwitchOrderClientConfig.xml`

Click Save to save your changes.

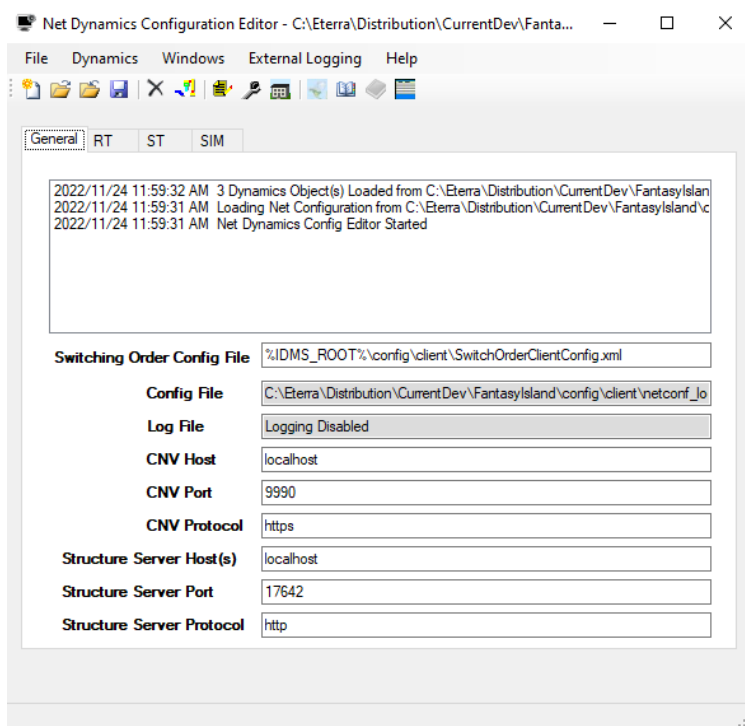


4.7. Setting the Structure Server Connection

You can enter the Structure Server host name(s), port, and protocol on the General tab:

- **Host:** The host name(s) defines the Structure Server(s) to which the client can connect for Structure Information. Separate multiple hosts with commas. When connecting to a Structure Server running on the same machine, set this field to "localhost".
- **Port:** The port defines the TCP/IP port of the Structure Server.
- **Protocol:** The protocol can either be HTTP for unsecure connections or HTTPS for secure connections.

The port and protocol used by the Structure Server is defined in the Structure Server Configuration file.

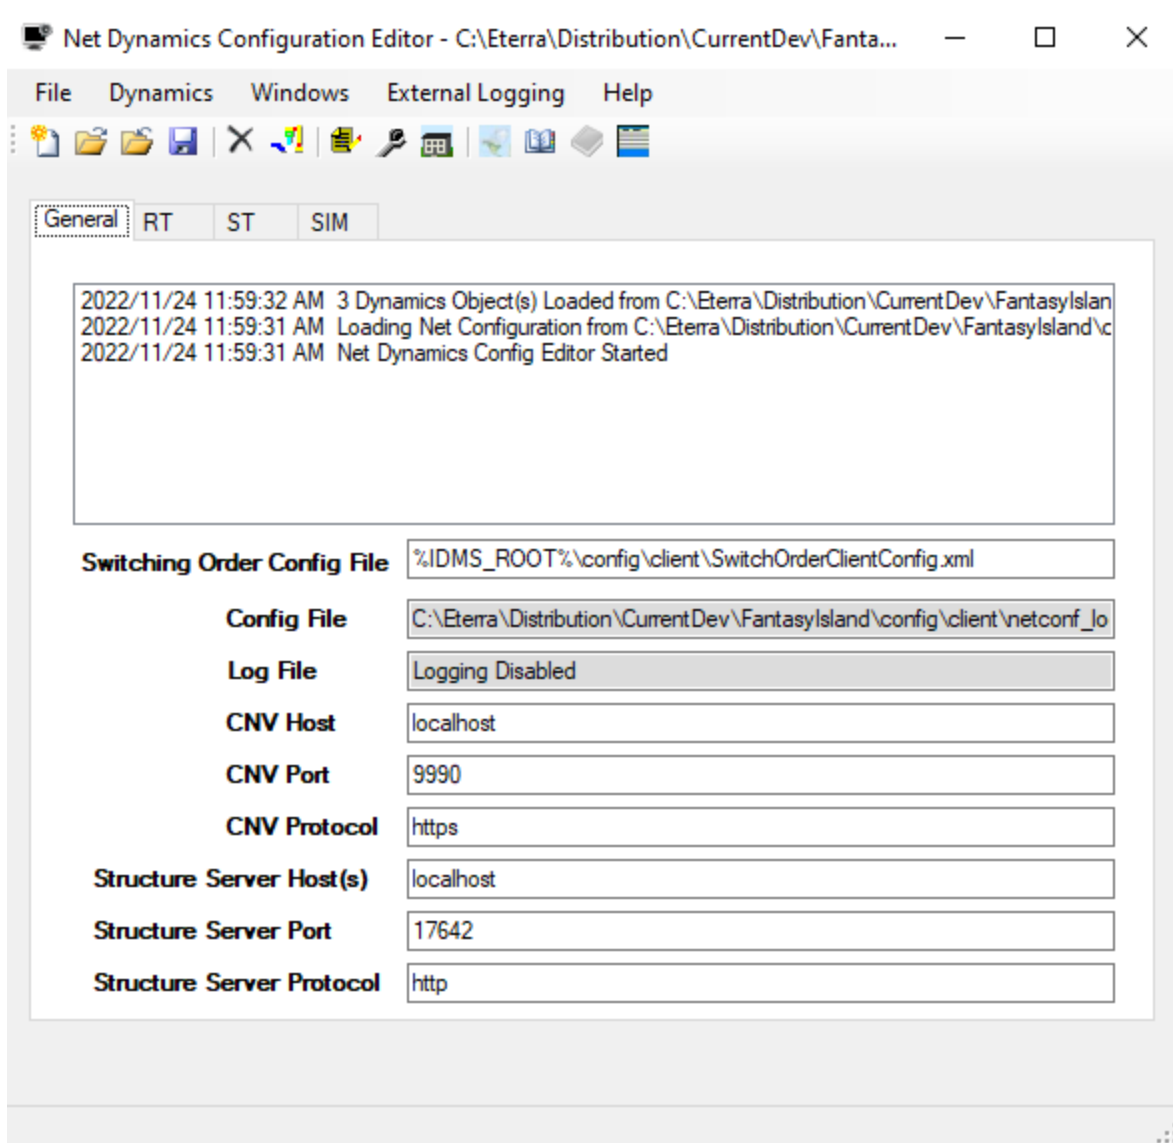

For more information, refer to the "Structure Server Configuration File" section in the *ADMS Installation Guide*.