



GE VERNOVA

ADMS

16.25.1

Switching Order Server Configuration Editor User Guide

Copyright

Copyright 2026, GE Vernova and/or its affiliates ("GE Vernova"). All Rights Reserved.

GE and the GE Monogram are trademarks of General Electric Company used under trademark license.

This document is the confidential and proprietary information of GE Vernova and may not be reproduced, transmitted, stored, or copied in whole or in part, or used to furnish information to others, without the prior written permission of GE Vernova.

Change History

Date	Change Description
Jan 26, 2023	ADMS 3.16: • Editorial and formatting updates.
Oct 20, 2023	ADMS 16.1.0: • The product version numbering has changed. The prefix '3' is no longer included in the version numbering for ADMS.
Apr 16, 2024	ADMS 16.7.0: • Updated document format and styling.
Jul 15, 2024	ADMS 16.10.0: • Updated General Parameters.

Contents

1. Introduction	4
2. General Operations	5
2.1. Manually Editing SwitchOrderServerConfig.xml	5
3. Switch Order Types Tab	6
3.1. Switching Order Work Types	6
3.2. Document Type and Work Type	7
3.3. Switch Order Name Pattern	8
3.3.1. Editing the Switching Order Name	8
3.4. Planned/Unplanned Switching	10
3.5. Approval Conflict Warning	11
3.6. Reject Behavior	12
3.7. Ability to Edit a Switching Order Document	13
3.8. Switching Order Custom Elements	13
4. Validation Rules Tab	16
5. Switching Order Server Configuration File	18
5.1. Employee and Crew Data Sources	24
6. Configuring Switching Order Email Notifications	27
7. Configuring the Employee Info Display	31
7.1. Configuring the Switching Order Application	31
7.2. Configuring Grid Tabular Displays	32
7.3. Configuring the Switching Order Server	34
7.4. Updating the Employee Data File	34
8. Configuring Mobile Dispatching	35
8.1. Configuring DMS Interface Server	35
8.2. Creating the Employee File	36
8.3. Configuring Switch Order Server	37
8.4. Configuring the Mobile Adapter Application	37
8.5. Configuring Crew Server	39
8.6. Configuring the Switching Order Client	39
8.7. Configuring the Mobility Server (ME Side)	40

1. Introduction

Switching operations are the formal processes of performing switching changes on the network for the purposes of maintenance, network reconfiguration, restoration of unplanned outages, and augmentation of the distribution network. For more information about switching operations, refer to the *Switching Operations User Guide*.

This document describes the Switching Order Server Configuration Editor, which is used to modify the *Switching Order application workflow*.

For more information about configuring the Switching Order application appearance, refer to the *Switching Order Client Configuration Editor User Guide*.

2. General Operations

The switching operations workflow is configurable by using the Switching Order Server Configuration Editor. This tool is used to modify the `SwitchOrderServerConfig.xml` configuration file that is used by the Switching Order server. (The Switching Order server also uses the `SwitchOrderServerConfig.txt` file.)

When the Switching Order Server Configuration Editor is opened, the `SwitchOrderServerConfig.xml` configuration file can be loaded using the File menu.

After changes have been made to the configuration file, the file should be saved and then distributed to each server host by using the File Updater.

2.1. Manually Editing `SwitchOrderServerConfig.xml`

Certain `SwitchOrderServerConfig.xml` configurations are not available in the Switching Order Server Configuration Editor. To update these configurations, you must manually edit the `SwitchOrderServerConfig.xml` file.

For example, to define the supervisor area or responsibility (AOR):

1. Open the `SwitchOrderServerConfig.xml` configuration file in a text editor.
2. Set the supervisor AOR using the `SUPERVISOR_AREA_ID` parameter. For example:

```
<SUPERVISOR_AREA_ID>SUPERVIS</SUPERVISOR_AREA_ID>
```

This specifies that users with the "SUPERVIS" AOR are considered supervisors.

3. Save the file.

3. Switch Order Types Tab

The Switch Order Types tab allows you to configure name formats and workflow options for different switching order document types.

Switching Order Server Configuration Editor - D:\Eterra\Distribution\FantasyIsland\config\server\SwitchOrderServerConfig.xml

File Help

Switch Order Types Switch Order Validation Rules

Switching Order Work Types

	Unplanned	Clearance/Isolation	Hold	Hot Line/Live Line
► DailyLog	☐	☐	☐	☐
Standard	☒	☐	☐	☐
Template	☐	☐	☐	☐
HotLineHold	☐	☐	☐	☐
PlannedRequest	☐	☒	☒	☒

Document Type: Standard Work Type: Unplanned

Switching Order Name Pattern
Preview: %SONUMBER% Edit
☐ Use Switching Order name pattern

Planned/Unplanned Switching
1 Number of reviewers
1 Number of approvers
☐ Planned Switching

Approval Conflict Warning
☐ Skip checking for SWO conflicts

Reject Behavior
State to apply when Switching Order is Rejected:
VALIDATED

Ability to Edit Switch Order Document
Modification of SWO is available for:
Everyone can modify validated Switching Order

Switching Order Custom Elements

type	Parameter Name	Initial Value	Field ID
------	----------------	---------------	----------

Add New Group Add Text Field Add Checkbox Add Listbox
Copy Paste Delete

Figure 1. Configuration - Switch Order Types Tab

3.1. Switching Order Work Types

Switching Order Work Types				
	Unplanned	Clearance/Isolation	Hold	Hot Line/Live Line
► DailyLog	☐	☐	☐	☐
Standard	☒	☐	☐	☐
Template	☐	☐	☐	☐
HotLineHold	☐	☐	☐	☐
PlannedRequest	☐	☒	☒	☒


Use the Switching Order Work Types grid to define which work types are available for switching order document types. For example, you may configure that the clearance, hold, and hot line work types are supported for planned request documents.

Work types are defined by the `SwitchOrderWorkType` coded translation item.


3.2. Document Type and Work Type

Document Type: PlannedRequest Work Type: Clearance

Use the Document Type and Work Type dropdown menus to select a combination of switching order document type and work type to configure the workflow for. For example, you may configure different name pattern, reject behavior, and number of reviewers for planned request documents of the Clearance/Isolation and Hold work types.

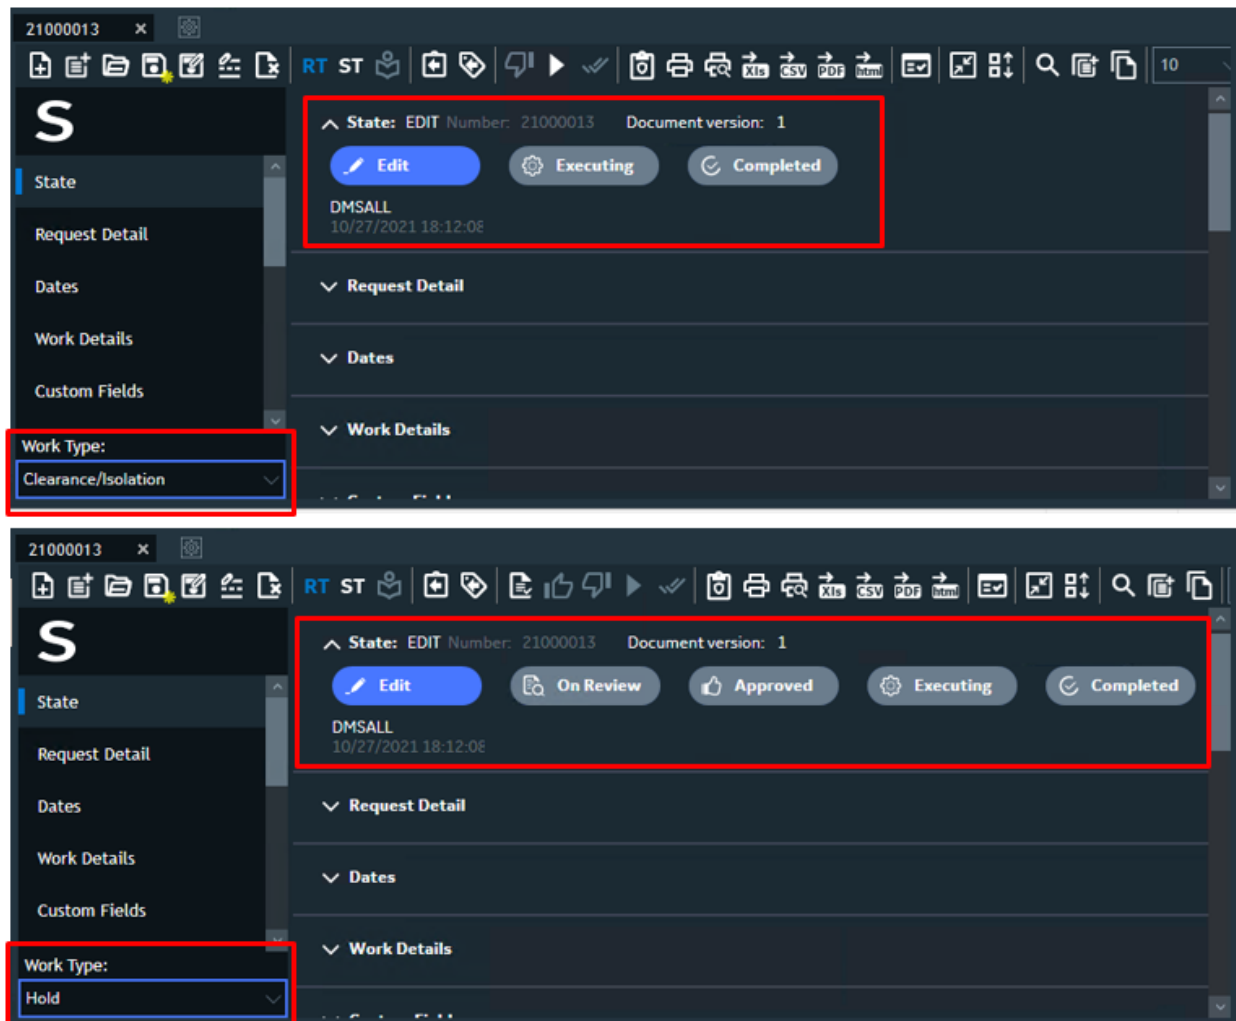

3.3. Switch Order Name Pattern

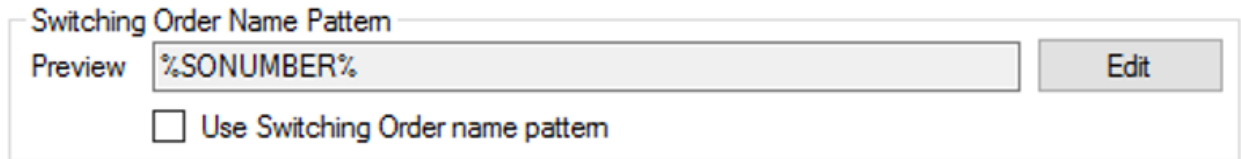A screenshot of a software dialog box titled "Switching Order Name Pattern". It features a "Preview" label followed by a text field containing the pattern "%SONUMBER%". To the right of the text field is an "Edit" button. Below the text field is a checkbox labeled "Use Switching Order name pattern".

Switching Order Name Pattern

Preview %SONUMBER%

☐ Use Switching Order name pattern

Edit

Use the fields in this group to configure the name patterns for the selected combination of a switching order document type and work type.

- **Preview:** Shows the selected name pattern.
- **Use Switch Order Name Pattern:** When selected, uses the name pattern configured in the Switch Order Name Pattern group.
- **Edit:** Opens the Edit Switch Order Name dialog box.

The document name pattern will be applied when the document is saved.

Note

The system automatically generates a name in the specified format only when the user does not enter the name manually.

3.3.1. Editing the Switching Order Name

The Edit Switching Order Name dialog box is used to configure a name pattern for switching orders or daily logs. To access this dialog box, click the Edit button in the Switching Order Name Pattern group.

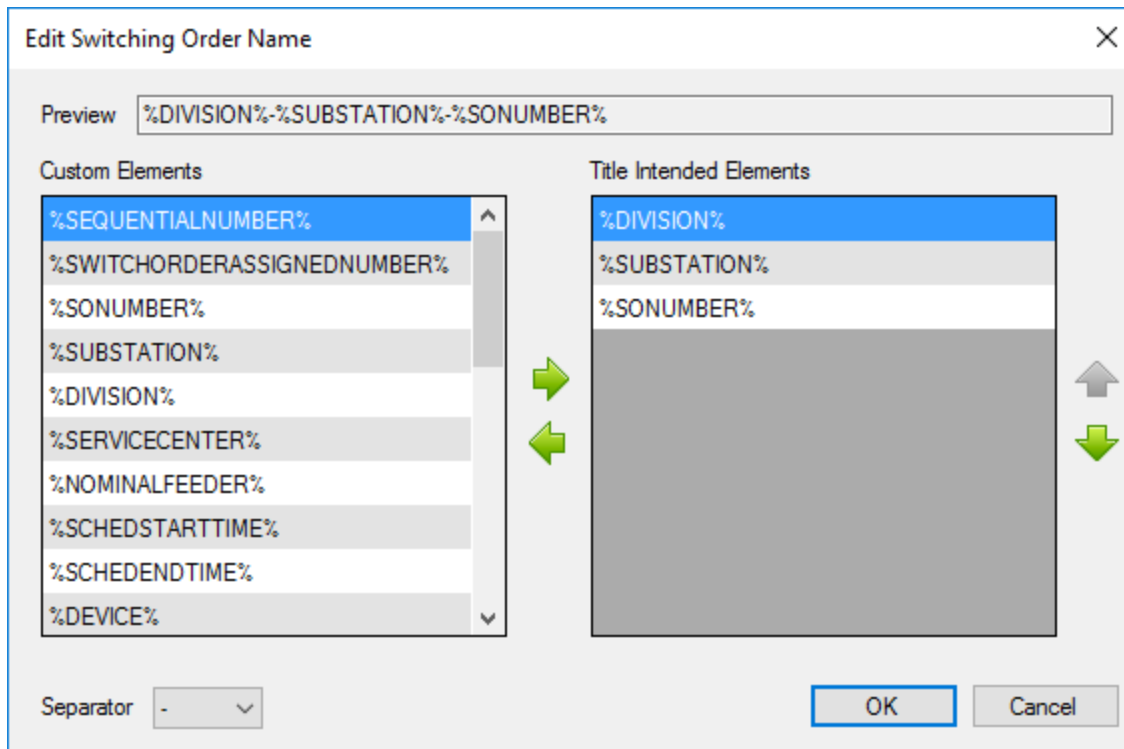


Figure 2. Edit Switching Order Name Pop-up

- **Preview:** Displays a preview of the name pattern.
- **Custom Elements:** Contains a list of all available elements to use in the name pattern.
- **Title Intended Elements:** Contains elements selected in the Custom Elements pane for use in the name pattern.
- **Separator:** Contains a list of all available separators to use between selected custom elements (i.e., dash, underscore, space).
- **Left/Right Arrow:** Moves selected elements to and from the Custom Elements and Title Intended Elements panes.
- **Up/Down Arrow:** Reorders selected elements in the Title Intended Elements pane.
- **OK:** Applies changes and closes the dialog box.
- **Cancel:** Discards changes and closes the dialog box.

To change a name pattern:

1. Select an element in the Custom Elements pane and click the right arrow button to move the element to the Title Intended Elements pane.
Repeat to select another element as needed.
2. Select a separator from the Separator drop-down list.
3. To reorder elements in the Title Intended Elements pane, select an element and click the up or down arrow buttons as needed.

4. To remove an element from the Title Intended Elements panel, click the left arrow button.
5. Review the pattern in the Preview field and click OK to apply the changes.

3.4. Planned/Unplanned Switching

Use the fields in this group to configure the number of required approvers and reviewers for the selected combination of a switching order document type and work type.

Planned/Unplanned Switching

Number of reviewers

Number of approvers


☒ Planned Switching

Number of reviewers: Sets how many users need to validate switching orders (0, 1, or 2).

- When this value is set to a non-zero value, the Switching Order form shows the required number of reviewers under the Validated state. The Approve button is not enabled until all users review the document.
- When this value is set to 0, the validation stage is excluded from the switching order workflow: the validation fields and controls on the Switching Order form are hidden and the Validated status is skipped.

Number of approvers: Sets how many users need to approve switching orders (0, 1, 2, or 3).

- When this value is set to a non-zero value, the Switching Order form shows the required number of approvals under the Approved state. The Execute button is not enabled until all users approve the document.
- When this value is set to 0, the approval stage is excluded from the switching order workflow: the approval fields and controls on the Switching Order form are hidden and the Approved status is skipped.

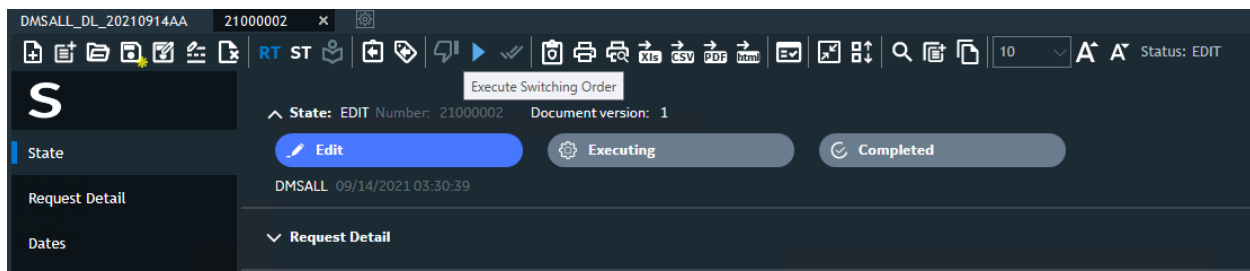

Planned Switching: Configures the default state of the “Is Planned Switching?” option for new switching orders and templates. Depending on this property, a switching order is considered planned or unplanned.

State: VALIDATED Number: 20000005 Document version: 3

Buttons: Edit, On Review, **Approved**, Executing, Completed

Request Detail

Name	20000005	Substation	BETHPAGE
Assigned Number		Feeder	F4131
City	Elizabeth	Device	4131F
Service Center	NEAC	Subtype	None
Is Planned Switching	☒	Last Modified by User	DMSALL

3.5. Approval Conflict Warning

Approval Conflict Warning

☐ Skip checking for SWO conflicts

Skip checking for SWO conflicts: If selected, disables the switching order conflict validation for the selected combination of a switching order document type and work type.

If conflict validation is enabled, when approving a switching order, the application checks if there are approved or executing switching orders for the same substation and scheduled date (as specified in the Switching Order Properties section). If such switching orders already exist, the validation warning appears listing the conflicting documents.

Approval Details

Approval Details

System has detected 2 issues. They are not critical, so you may proceed.

#	Error Type	Text
1		You are attempting to approve your own Switching Order.
2		Other Switching Orders are already approved for RAVEN.

Related conflicting switching orders
Station: RAVEN

#	Name	Number	Scheduled Start	Scheduled End	Reference
1	20000004	20000004	9/7/2020 12:38:47 AM	9/7/2020 12:38:47 AM	

Close
Proceed

3.6. Reject Behavior

Use the fields in this group to configure the reject behavior for the selected combination of a switching order document type and work type.

Reject Behavior

State to apply when Switching Order is Rejected:

VALIDATED

Reject Behavior: Specifies the state of a switching order after it is rejected by the operator. The states can be Edit or Validated.

3.7. Ability to Edit a Switching Order Document

Use the fields in this group to configure the ability to edit a document for the selected combination of a switching order document type and work type.

Ability to Edit Switch Order Document

Modification of SWO is available for: Everyone can modify validated Switching Order 

Ability to Edit a Switching Order Document: Sets permissions for editing switching order documents. The following options are available:

- Everyone can modify a validated switching order
- Allow edit of a validated switching order only for a person who validated this document
- Allow edit of an approved switching order only for a person who approved this document
- Nobody can modify a validated switching order
- Nobody can modify an approved switching order

Note

The restrictions prevent modifying switching order properties and switching steps. The other operations such as issuing and completing switching steps, updating comments, and changing the switching order state to Executing and Completed are allowed.

3.8. Switching Order Custom Elements

Use the Switching Order Custom Elements section to configure the name and parameters of custom sections to be added to the switching order documents of the selected combination of a switching order document type and work type. These sections can show additional switching order properties using editable text, check boxes, and date and time fields.

Switching Order Custom Elements

☐	type		Parameter Name	Initial Value
☐	NewGroup	▼	Switching Order Additional Prop...	
☐	TextField	▼	Option 1	<some text>
☐	CheckField	▼	Option 2	☐
☐	ListBox	▼	Option 3	Value1;Value2;Value3
☐	DateTimeField	▼	Date and Time	
☐	Empty	▼		

- **Type:** Type of the switch order custom element.
 - **NewGroup:** Adds a custom section.
 - **TextField:** Adds an editable text field.
 - **CheckField:** Adds a selectable check box.
 - **DateTimeField:** Adds an editable date and time field.
 - **ListBox:** Adds a drop-down list box.
 - **Empty:** Adds an empty row that can be used as a separator.
- **Parameter Name:** Name of a new custom element as it appears in the Additional Switch Order Properties pane (see the following image).
- **Initial Value:** Sets the default value of the check box (selected/cleared), the text field (default text), or the drop-down list box (list items are separated by semicolon).
- **Add New Group:** Adds a new custom section on the Switching Order form.
- **Add Text Field:** Adds a new custom text box.
- **Add Checkbox:** Adds a new custom Boolean element.
- **Add Listbox:** Adds a new custom drop-down list box.

- **Delete:** Deletes the selected row.

To reorder new custom elements on the Switching Order form, select an element and click the up or down arrow buttons as needed.

The screenshot shows a dark-themed web interface for a 'Switching Order' form. On the left is a sidebar with a large 'S' logo and a list of tabs: 'State', 'Request Detail', 'Dates', 'Work Details' (which is selected and highlighted with a blue bar), and 'Equipment'. The main content area is titled 'Work Details' and contains several input fields: 'Work Request' with the value 'DMSALL_AUTO_20200512AA', 'Search key words', and a large 'Description' text area. Below these fields, a section titled 'Switching Order Additional Properties' is expanded, indicated by an upward-pointing arrow. This section contains three options: 'Option 1' with a text input field containing '<some text>', 'Option 2' with an unchecked checkbox, and 'Option 3' with a dropdown menu. A red rectangular box highlights the 'Switching Order Additional Properties' section and its contents.

Figure 3. Additional Switch Order Properties Section on the Switch Order Form

4. Validation Rules Tab

The Validation Rules tab is used to configure the validation rules and messages that are applied to switching orders.

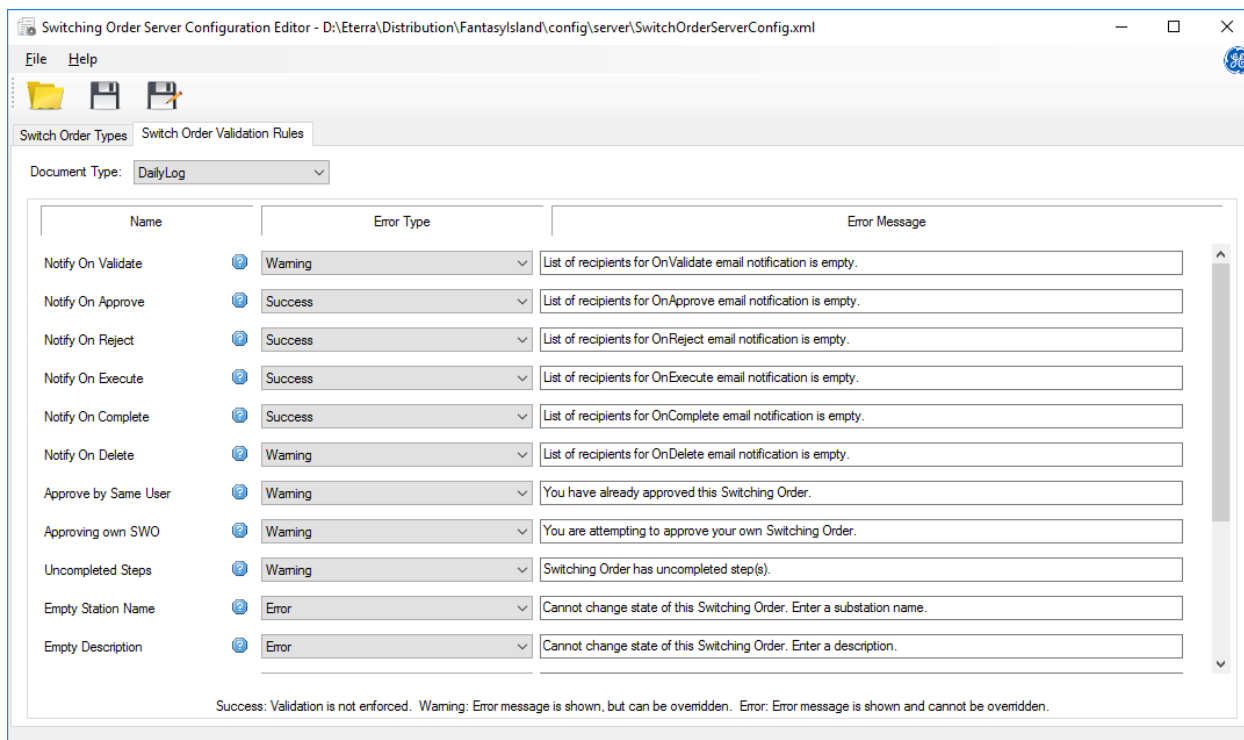


Figure 4. Configuration - Switch Order Validation Rules Tab

Use the Document Type dropdown menu to select the document type (switching order, daily log, template, hot line hold, or planned request) to configure validation rules for.

The Validation Rules grid includes the following fields:

- **Name:** Represents the validation scenario for which you can configure the error type and error message.

Hover over the name property to view the scenario description.

- **Error Type:** Error type to be applied to the validation scenario.
 - **Success:** Validation completes successfully. Error message is not shown.
 - **Warning:** Validation completes with a warning. Error message is shown, but can be skipped.
 - **Error:** Validation completes with an error. Error message is shown and cannot be skipped.
- **Error message:** Custom message to be displayed when the validation scenario occurs.

The switching order validation scenarios are as follows:


- **Notify on Validate:** Check that the recipients list for the switching order validation notifications

is not empty.

- **Notify on Approve:** Check that the recipients list for the switching order approval notifications is not empty.
- **Notify on Reject:** Check that the recipients list for the switching order rejection notifications is not empty.
- **Notify on Execute:** Check that the recipients list for the switching order execution notifications is not empty.
- **Notify on Complete:** Check that the recipients list for the switching order completion notifications is not empty.
- **Notify on Delete:** Check that the recipients list for the switching order deletion notifications is not empty.
- **Approve by Same User:** Check that the approving user has not approved the switching order before.
- **Approving Own SWO:** Check that the approving user is not a creator of the switching order.
- **Uncompleted Steps:** Check that all switching order steps are completed when completing a switching order.
- **Empty Station Name:** Check that the Station field on the Properties section is not empty when completing a switching order.
- **Empty Description:** Check that the Description field on the Properties section is not empty when completing a switching order.
- **Empty City:** Check that the City field on the Properties section is not empty when completing a switching order.
- **Empty Service Center:** Check that the Service Center field on the Properties section is not empty when completing a switching order.
- **Notify on Incorrect Email:** Check that valid emails are entered in the Email Notifications section.
- **Missing Document Attribute Value:** Check that fields required for switching order name generation are not empty.
- **Invalid Characters in Field Name:** Check that the switching order name field does not include special characters. The list of forbidden characters is: "/", "\", "?", "%", "*", ":", "|", "'", "<", ">", "\t", ".", ",", and "&".
- **HLH Uncompleted Steps on Phase 1:** For the execution phase 1, checks that all Apply Tag switching steps are completed or canceled. Applies to Hot Line Hold documents only.

5. Switching Order Server Configuration File

This section describes the Switching Order Server configuration file, which defines server-side configurations. The default location of the SwitchOrderServerConfig.txt file is %IDMS_ROOT%\config\server.

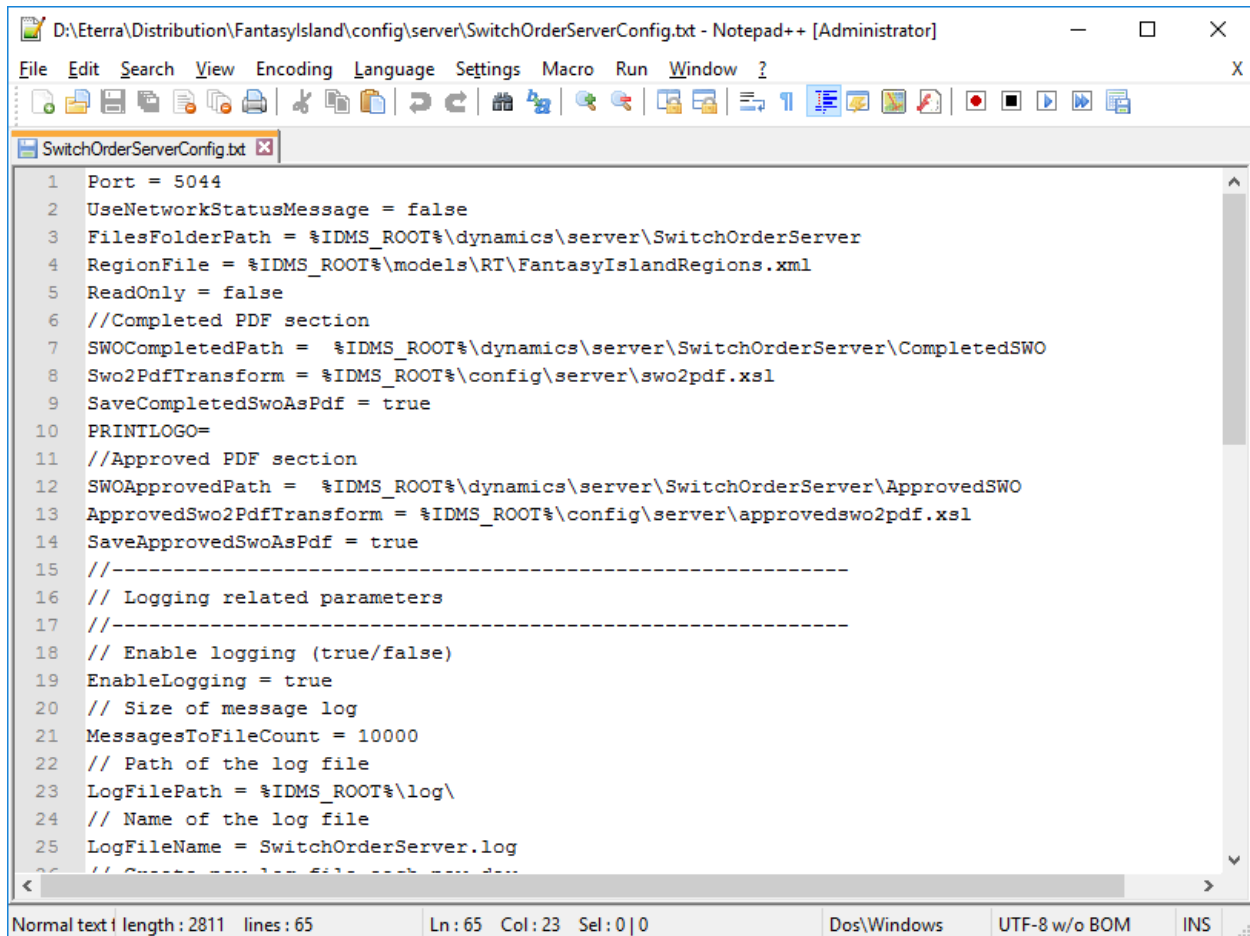

```
1 Port = 5044
2 UseNetworkStatusMessage = false
3 FilesFolderPath = %IDMS_ROOT%\dynamics\server\SwitchOrderServer
4 RegionFile = %IDMS_ROOT%\models\RT\FantasyIslandRegions.xml
5 ReadOnly = false
6 //Completed PDF section
7 SWOCompletedPath = %IDMS_ROOT%\dynamics\server\SwitchOrderServer\CompletedSWO
8 Swo2PdfTransform = %IDMS_ROOT%\config\server\swo2pdf.xml
9 SaveCompletedSwoAsPdf = true
10 PRINTLOGO=
11 //Approved PDF section
12 SWOApprovedPath = %IDMS_ROOT%\dynamics\server\SwitchOrderServer\ApprovedSWO
13 ApprovedSwo2PdfTransform = %IDMS_ROOT%\config\server\approvedswo2pdf.xml
14 SaveApprovedSwoAsPdf = true
15 //-----
16 // Logging related parameters
17 //-----
18 // Enable logging (true/false)
19 EnableLogging = true
20 // Size of message log
21 MessagesToFileCount = 10000
22 // Path of the log file
23 LogFilePath = %IDMS_ROOT%\log\
24 // Name of the log file
25 LogFileName = SwitchOrderServer.log
26 // Create new log file each run
```

Figure 5. Switching Order Server Configuration File

General Parameters

- **Port:** The TCP/IP port of the Switching Order Server.
- **UseNetworkStatusMessage:** This option prevents connections from being maintained between the Switching Order Server and client when network outage issues occur at the client side. If True, the Switching Order Server terminates its connection with the client 10 seconds after its connection with the client is lost. If False, an old connection between the server and client is maintained even after network connectivity is lost, and a new connection is established when the network is restored.

Note

To enable this option, the connection status check must be enabled both in the server and

client configuration files. (The Use Network Status Check option must be enabled in the Switching Order Client Configuration Editor.)

- **CompressMessage:** If set to True, Switching Order Server messages are compressed before sending. This decreases message size and improves performance. This CompressedMessage parameter must be set with the same value as the CompressMessage, OMS_SEND_COMPRESSED_MESSAGE, and OMS_COMPRESSED_MESSAGE_FOR_MANAGED_CONNECTION parameters in other server and client configuration files.
- **EnableTcpiTls:** If set to True, the TLS protocol is enabled for the TCP/IP connection.
- **CertSubjectName:** The TLS certificate subject name's CN value.
- **FilesFolderPath:** Path to the location where the switching order files and folders are stored.
- **RegionFile:** Path to the region schema file that is used to populate the City and Service Center fields in the Switching Order Properties section. For a custom management areas hierarchy, use a file that is exported by the Customer List Compiler.
- **ReadOnly:** If set to True, the Switching Order Server is in read-only mode.
- **AllowEditRejectSWO:** If set to True, users in the corporate zone can modify the rejected document. By default, it is set to False.
- **AllowDeleteExecutingSWO:** If set to True, users can delete switching orders in the Executing state.

Saving Switching Orders in PDF

- **PDFV2Export:** Specifies if the PDF export functionality uses the Apache Formatting Objects Processor (FOP) tool. Set this to true when localizing switching orders into languages that use right-to-left input (for example, Hebrew).
- **RtlModeEnabled:** Specifies if the right-to-left export mode is used.
- **ApacheFopPath:** Path to the Apache FOP executable.
- **ApacheFopConfig:** Path to the Apache FOP configuration file.

Note

The PDFV2Export, ApacheFopPath, and ApacheFopConfig parameter values in SwitchOrderClientConfig.xml and SwitchOrderServerConfig.txt must be the same.

Saving Completed Switching Orders in PDF

- **SWOCompletedPath:** Path to the location where completed switching orders are saved in PDF format.
- **Swo2PdfTransform:** Path to the PDF conversion template file for completed switching orders.
- **SaveCompletedSwoAsPdf:** If True, completed switching orders are automatically saved as PDF files in the folder specified by the SWOCompletedPath property.

- **PRINTLOGO:** Path to the bitmap image that will be displayed as a print logo in a completed switching order in PDF format.

Saving Approved Switching Order Documents in PDF

- **SWOApprovedPath:** Path to the location where approved switching order documents are saved in PDF format.
- **ApprovedSwo2PdfTransform:** Path to the PDF conversion template file for approved switching order documents.
- **SaveApprovedSwoAsPdf:** If True, approved switching order documents are automatically saved as PDF files to the folder specified by the SWOCompletedPath property.
- **PlannedRequest2PdfTransform:** Path to the PDF conversion template file for planned requests.

Saving New Versions of Switching Order Documents in PDF

- **VersionedPDFs:** Path to the location where new versions of switching order documents are saved in PDF format.
- **ExportVersionedPdfs:** If True, each new saved version of a switching order document is automatically saved as a PDF file to the folder specified by the VersionedPDFs property.

Logging Parameters

- **EnableLogging:** If True, records the switching order log to the folder specified by the LogFilePath property.
- **MessagesToFileCount:** Defines the number of messages to be stored in the log file.
- **LogFilePath:** Path to the location where the switching orders log files are saved.
- **LogFileName:** Defines the name of the switching order log file (i.e., SwitchOrderServer.log).
- **LogDaily:** If True, a new log file is created on a daily basis.

Search Index Update Interval

- **SearchIndexUpdateInterval:** Time period in seconds to update the switching order index file.

Employee Info Pop-Up Parameters

- **LoadCrewModel:** If true, the Employee Name and ID are read from the crew model file and are used on the Employees Info display.
- **CrewModelFile:** Path to the crew model file.

Note

By default, the Employee Info display primarily uses data from the crew model and secondarily uses data from the employee data file. (For example, the employee name from the crew model is used when the employee name value is different in the crew model and employee data file.) This is defined in the SWOEmployee_GridDisplay.xml grid tabular

display file.

- **LoadEmployeePlugin:** If true, the Switching Order Server loads the Employee Plug-In and the Employee Plug-In data file (employee data file).
- **EmployeePlugin:** Defines the name of the Employee Plug-in .dll file located in the d:\Eterra\Distribution\Server\bin\ folder. This can also be defined by an absolute path.
- **EmployeePluginDataFile:** Sets the path to the tab-delimited employee data file, which is used to populate the Employee Info and Employee Qualifications displays.

Note

Generally, the OMS crew model file contains only the employee ID and name values. In this case, the employee data file should contain the full set of employee data to populate both the Employees and Qualifications displays. You may not use the crew model file if the employee data file contains the full set of employee data.

Note

The Employee Info display will be blank if the *LoadCrewModel* and *LoadEmployeePlugin* parameters are set to false, or if the file paths are defined incorrectly.

Work Request Check for the Unique ID

- **CheckUniqueWorkRequestID:** If true, the system does not allow the user to create switching orders with similar work request IDs.
- **AutoGenerateWorkRequestID:** If true, the system automatically generates a Work Request ID so that the operator does not manually enter this field.

Mobile Enterprise Parameters

- **MobilePlugin:** Defines the name of the Mobile plug-in DLL file located in the D:\Eterra\Distribution\Server\bin\ folder. This can also be defined by an absolute path.
- **EmployeeStatusFile:** Sets the path and name of the XML file where the server records the employee logon details.
- **DispatchStatusFile:** Sets the path and name of the XML file where the server records the employee dispatching details.
- **MobileEmployeeList:** Sets the path to the tab-delimited Mobile Employee List text file. This file is used as an address book for employees equipped with the Mobile application.
- **CrewList:** Sets the path to the crew model file. This file is used as an address book for crews equipped with the Mobile application.
- **DoTakebackWhenSwoCompleted:** If set to True, the system sends the JobTakeback message instead of the JobComplete message when a switching order document is completed in ADMS.
- **ExpectMobileUpdateAck:** If set to True, the system expects a positive acknowledgement for delivering switch order updates to the Mobile Enterprise system and an alarm is issued if the

updates fail to deliver. Note that an alarm is always issued when a dispatch or takeback operation fails to deliver, regardless of the configuration.

- **MobilityGatewaySpecific:** If set to True, logged off crews can be assigned, unassigned, or dispatched to a switching order in the Mobile Enterprise system. All crews with the Mobile Data Terminal (MDT) from the crew model are also loaded and available for dispatching in the Mobile Enterprise system. If set to False, only logged on crews can be assigned, unassigned, or dispatched to a switching order in the Mobile Enterprise system.
- **MobileSWONotificationState:** Switch Order document state to notify new mobile SWO to field. Allowed values are VALIDATED or APPROVED. When the number of approvers is set to 0, then APPROVED should not be used for this setting, otherwise notifications will not be sent.

Switching Order Web Server Parameters

- **SWO_NAME_AUTO:** Specifies the base name used for auto-generating switching order names when a mobile client passes an empty name in a message to create a new switching order from the field.

For more details about Switching Order web service, refer to the *ADMS Software Installation and Maintenance Guide* and the *Distribution Management Interface Server Programmer Guide*.

Work Force Management (WFM) Parameters

- **SharedWFMFolder:** Path to the folder where PDF switching orders are saved when sending switching orders to WFM. This folder must be accessible to WMF.

Email Notifications Parameters

- **EnableNotificationSystem:** This flag enables or disables the Switching Order Server email notification system.
- **ContactsFile:** Sets the path to the tab-delimited Contact List text file. This file is used as an address book for recipients of switching order email notifications.
- **EncryptionMode:** The encryption mode that is used to encrypt the contacts file. Can be None, DPAPI, or RSA.
- **RSAContainerName:** The name of the RSA container that is used for decrypting the contacts file (for example, ADMS RSA Key Container). Required only if EncryptionMode is set to RSA.

Site Overview Display Parameters

- **OMS_SERVER_HOST:** OMS Server (NetServer) host. This parameter is required only for the Site Overview display. (The Switch Order server must connect to the OMS Server managed connection port for the OMS server to forward data to the DMS server for Site Overview display queries.)
- **OMS_SERVER_PORT:** OMS Server (NetServer) managed connection port. This parameter is required only for the Site Overview display. (The Switch Order server must connect to the OMS server managed connection port for the OMS Server to forward data to the DMS server for Site Overview display queries.)

OMS Server Parameters

- **OMS_SERVER_USE_STREAMS:** If set to true, the OMS Server uses the stream interface. This setting must be set to the same value in all configuration files.
- **OMS_SERVER_USE_TLS:** If set to true, the OMS Server uses the TLS security protocol. This setting must be set to the same value in all configuration files.
- **OMS_SERVER_CHECK_MESSAGE_SECURITY:** If set to true, the OMS Server checks for security token authenticity/expiration. This setting must be set to the same value in all configuration files.
- **OMS_SERVER_CHECK_MESSAGE_SEQUENCE:** If set to true, the OMS Server checks message sequence numbers. This setting must be set to the same value in all configuration files.
- **OMS_SERVER_USE_CREDENTIAL_FILE:** If set to true, the OMS Server uses a credential file for defining the private key and user SIDs. This setting must be set to the same value in all configuration files.
- **OMS_SERVER_CREDENTIAL_INFO_FILE:** Path to the credential file. (This setting must be set to the same value in all configuration files.)
- **OMS_SERVER_TIME_TO_LIVE:** Time to live, in seconds, for OMS Server connections.
- **OMS_SERVER_COMPRESS_MESSAGE:** If set to True, Net Server messages are sent compressed. This decreases message size and improves performance. This parameter must be set with the same value with the CompressMessage, OMS_SEND_COMPRESSED_MESSAGE, and OMS_COMPRESSED_MESSAGE_FOR_MANAGED_CONNECTION parameters in other server and client configuration files.
- **OMS_INTERFACE_BASE_URL:** Base URL for the OMS Interface Server REST endpoints. Used to propagate planned request date and time changes to the associated switching order or planned outage.

File Retirement Parameters

- **FilesRetirementPath:** Path to the folder to which the switching order files (for example, completed switching orders, completed daily logs, and PDF files) will be retired.

Note

The retirement folder must be outside of the root folder that the Net Data Replicator monitors for switching order files to replicate.

- **SwitchOrderRetirementInterval:** Time period (in minutes) at which the server checks for files to retire.
- **RetireBasedOnLastWriteTime:** If RetireBasedOnLastWriteTime is set to True, files are retired based on the last written time.
- **SwitchOrderRetirementAge:** The number of days before completed switching orders are retired (the default value is 45 days).
- **DailyLogRetirementAge:** The number of days before completed daily logs are retired (the

default value is 45 days).

- **MaxSwitchOrderFilesToRetirePerCycle:** The maximum number of files that can be retired per cycle. For companies with a large number of files accumulated over the years, this setting is useful to decrease replication load.

Other Parameters

- **DetailedServerConfig:** Full path to the SwitchOrderServerConfig.xml configuration file.

5.1. Employee and Crew Data Sources

The Switching Order server can consume crew and employee data from several sources simultaneously. These sources are:

- Switch Order server main code
 - Loads the crew model file (FantasyIslandCrewModel.Crew).
 - Supports the following data collections:

```
CREW, EMPLOYEE, EMPLOYEEYPES, VEHICLES, VEHICLEYPES, CREWAREAS, and CREWDIVISIONS.
```

- Employee Plug-in
 - Loads the contacts data file (SWOContactList.txt).
 - Loads the employee qualification data file (SWOEmployeeInfoPlugin).
 - Supports the following data collections:

```
SWOEMPLOYEE, EMPLOYEE, CONTACTS, EMPLOYEECONTACTS, and QUALIFICATIONS.
```

- Mobile Plug-in
 - Loads the mobile employee data file (MobilePluginEmployees.txt).
 - Supports the following data collections:


```
MOBILEEMPLOYEE, EMPLOYEE, MOBILEDEVICES, ISMOBILE, LOGON, ONLINE, and DEVICEID.
```

The EMPLOYEE data collection is supported by each data source. In the Switching Order server, the EMPLOYEE collection contains merged data from all available sources based on the Employee ID field. Each data source adds new employee entries and properties. For example, the Mobile Plug-in adds the following new properties: ISMOBILE, LOGON, ONLINE, and DEVICEID.

The clients query the crew and employee data from the server to populate the following information in the Switching Order application:

- Adding employees in the Issued To field in the Switching Steps section.


The Employee Info grid tabular display queries the EMPLOYEE collection and shows all available employee data (both mobile and non-mobile).

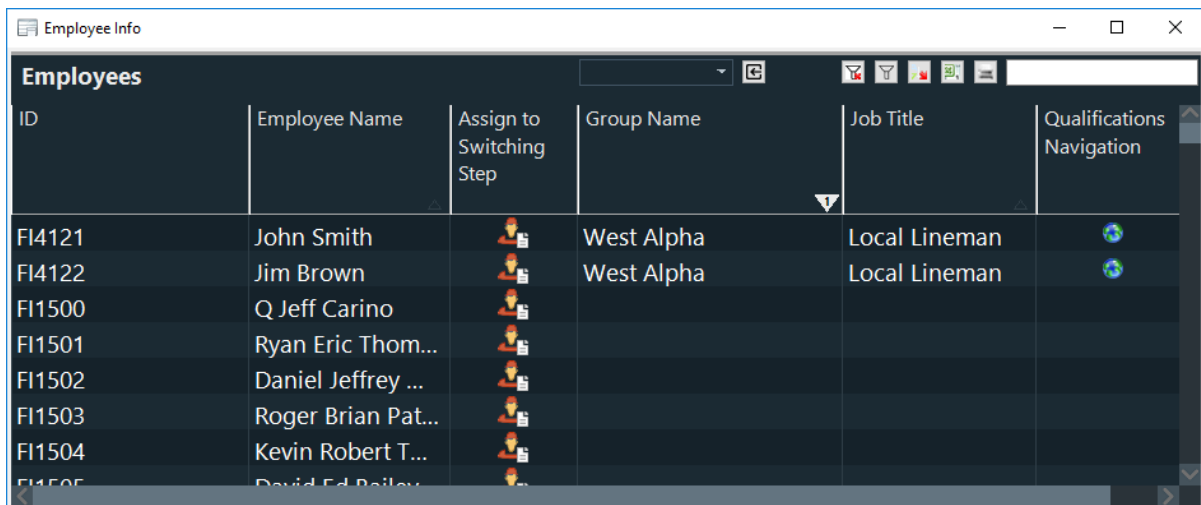

ID	Employee Name	Assign to Switching Step	Group Name	Job Title	Qualifications Navigation
FI4121	John Smith		West Alpha	Local Lineman	
FI4122	Jim Brown		West Alpha	Local Lineman	
FI1500	Q Jeff Carino				
FI1501	Ryan Eric Thom...				
FI1502	Daniel Jeffrey ...				
FI1503	Roger Brian Pat...				
FI1504	Kevin Robert T...				
FI1505	David Ed Bailey				

- Adding employees in the recipient fields in the Email Notifications section.

The Contacts display queries the CONTACTS collection and shows data only from the contacts data file.

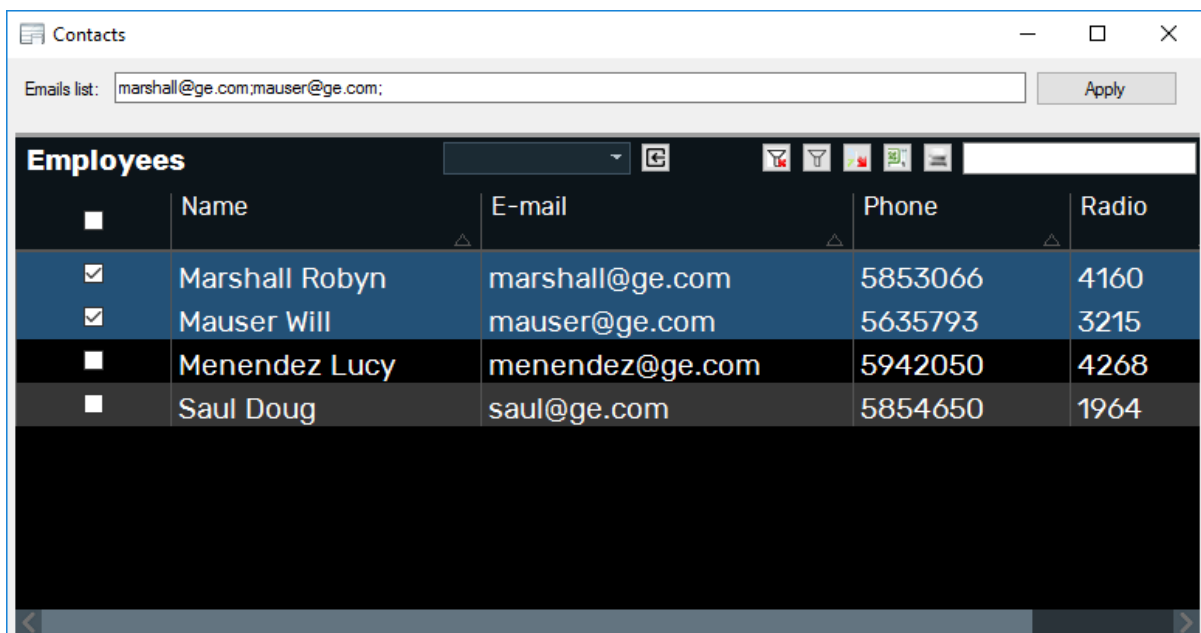

Emails list:

	Name	E-mail	Phone	Radio
☒	Marshall Robyn	marshall@ge.com	5853066	4160
☒	Mauser Will	mauser@ge.com	5635793	3215
☐	Menendez Lucy	menendez@ge.com	5942050	4268
☐	Saul Doug	saul@ge.com	5854650	1964

- Adding employees to the Dispatching section.

The Mobile Employees List display queries the EMPLOYEE collection and shows all available employee data (both mobile and non-mobile).

Mobile Employees List					
Employees					
ID	Employee Name	Device Id	Online	Add to SWO	
FI20...	A Ben Dr...				
FI19...	A Paul M...				
FI19...	A Rusty C...				
FI27...	Aaron Cr...				
FI21...	Aaron P ...				

Note

You can modify grid tabular display settings to query a specific collection or show only specific data. For example, add the "LOGON=TRUE" condition to the WHERE field of the SWOMobileEmployee_GridDisplay.xml display to see only employees which are currently logged on to the Mobile system.


6. Configuring Switching Order Email Notifications

The Switching Order notification service enables sending email notifications about certain events to specified users. The notification service functionality is based on the interface services: the DMS Interface Server and the Notification Publisher application. For more details about interfaces, refer to the *ADMS Software Development Kit (SDK) Programmer Guide*.

Notifications can be sent for a Switching Order status change, deletion, or step completion. The PDF version of the Switching Order is attached to the notification email.

To enable Switching Order email notifications:


1. Configure the Notification Publisher application to send emails based on the received Switching Order events. Ensure that NotificationPublisherConfig.xml contains notification settings as shown in the figure below.

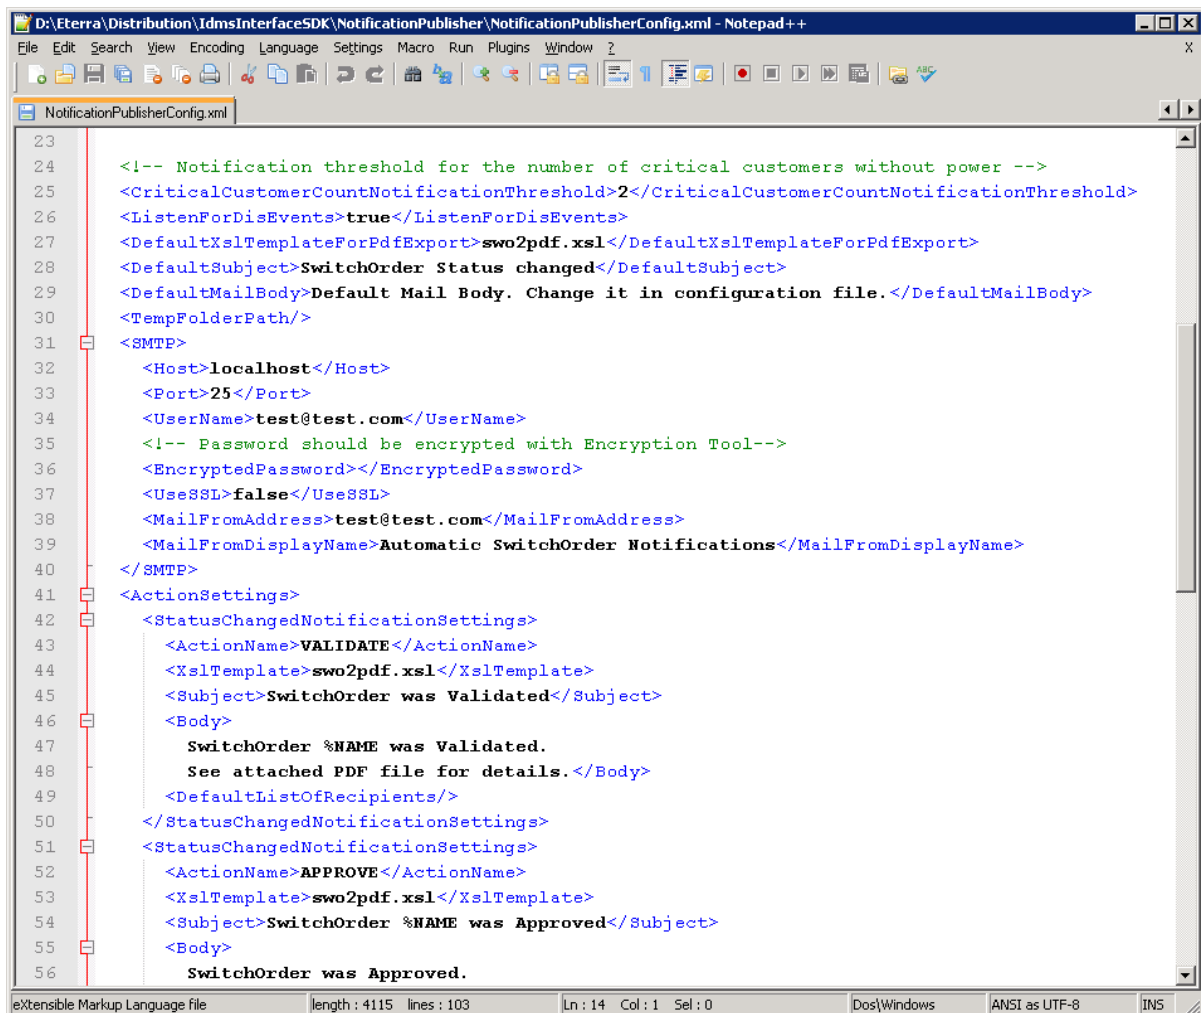

```
23
24 <!-- Notification threshold for the number of critical customers without power -->
25 <CriticalCustomerCountNotificationThreshold>2</CriticalCustomerCountNotificationThreshold>
26 <ListenForDisEvents>true</ListenForDisEvents>
27 <DefaultXslTemplateForPdfExport>sw02pdf.xsl</DefaultXslTemplateForPdfExport>
28 <DefaultSubject>SwitchOrder Status changed</DefaultSubject>
29 <DefaultMailBody>Default Mail Body. Change it in configuration file.</DefaultMailBody>
30 <TempFolderPath/>
31 <SMTP>
32 <Host>localhost</Host>
33 <Port>25</Port>
34 <UserName>test@test.com</UserName>
35 <!-- Password should be encrypted with Encryption Tool-->
36 <EncryptedPassword></EncryptedPassword>
37 <UseSSL>false</UseSSL>
38 <MailFromAddress>test@test.com</MailFromAddress>
39 <MailFromDisplayName>Automatic SwitchOrder Notifications</MailFromDisplayName>
40 </SMTP>
41 <ActionSettings>
42 <StatusChangedNotificationSettings>
43 <ActionName>VALIDATE</ActionName>
44 <XslTemplate>sw02pdf.xsl</XslTemplate>
45 <Subject>SwitchOrder was Validated</Subject>
46 <Body>
47 SwitchOrder %NAME was Validated.
48 See attached PDF file for details.</Body>
49 <DefaultListOfRecipients/>
50 </StatusChangedNotificationSettings>
51 <StatusChangedNotificationSettings>
52 <ActionName>APPROVE</ActionName>
53 <XslTemplate>sw02pdf.xsl</XslTemplate>
54 <Subject>SwitchOrder %NAME was Approved</Subject>
55 <Body>
56 SwitchOrder was Approved.
```

2. In NotificationPublisher.exe.config, configure the WCF web service that listens for DIS events:

```
<service name="NotificationPublisher.WebListener">
  ...
  <baseAddresses>
    <add baseAddress="http://localhost:8025/DISEvents/" />
  </baseAddresses>
```

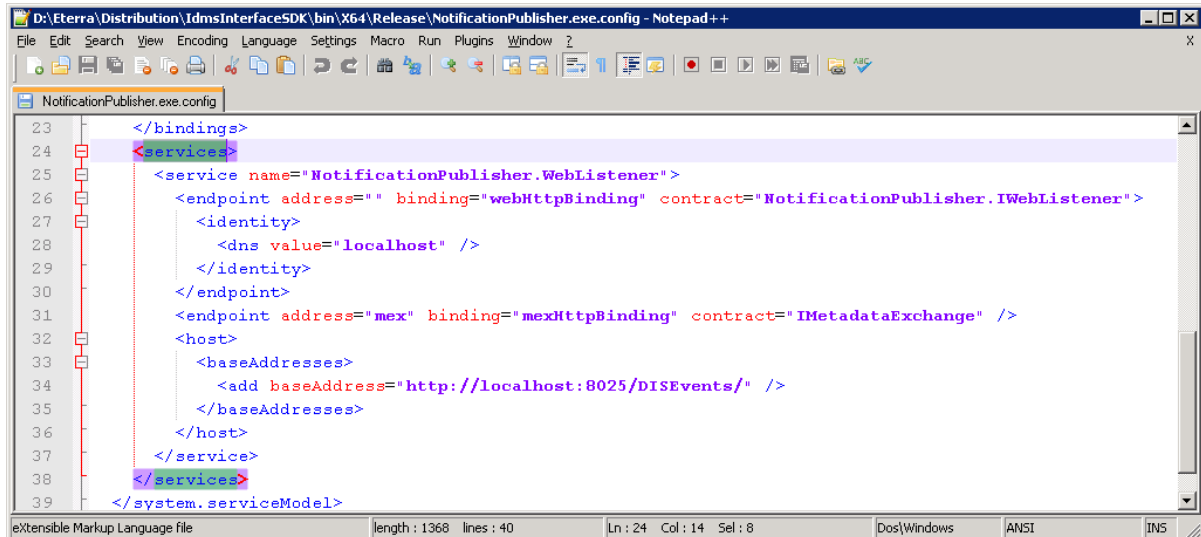


3. In NotificationPublisher.exe.config, configure the notification message size to enable notifications for large switching orders using the maxReceivedMessageSize property.

```
<bindings>
  <webHttpBinding>
    <binding maxReceivedMessageSize="10000000" /><!--10MB limit per request-->
  </webHttpBinding>
</bindings>
```

4. Ensure that the Target field of the Notification Publisher shortcut includes the NotificationPublisherConfig.xml configuration file:

```
D:\Eterra\Distribution\IdmsInterfaceSDK\bin\x64\Release\NotificationPublisher.exe /config
"d:\Eterra\Distribution\IdmsInterfaceSDK\NotificationPublisher\NotificationPublisherConfig.xml"
```

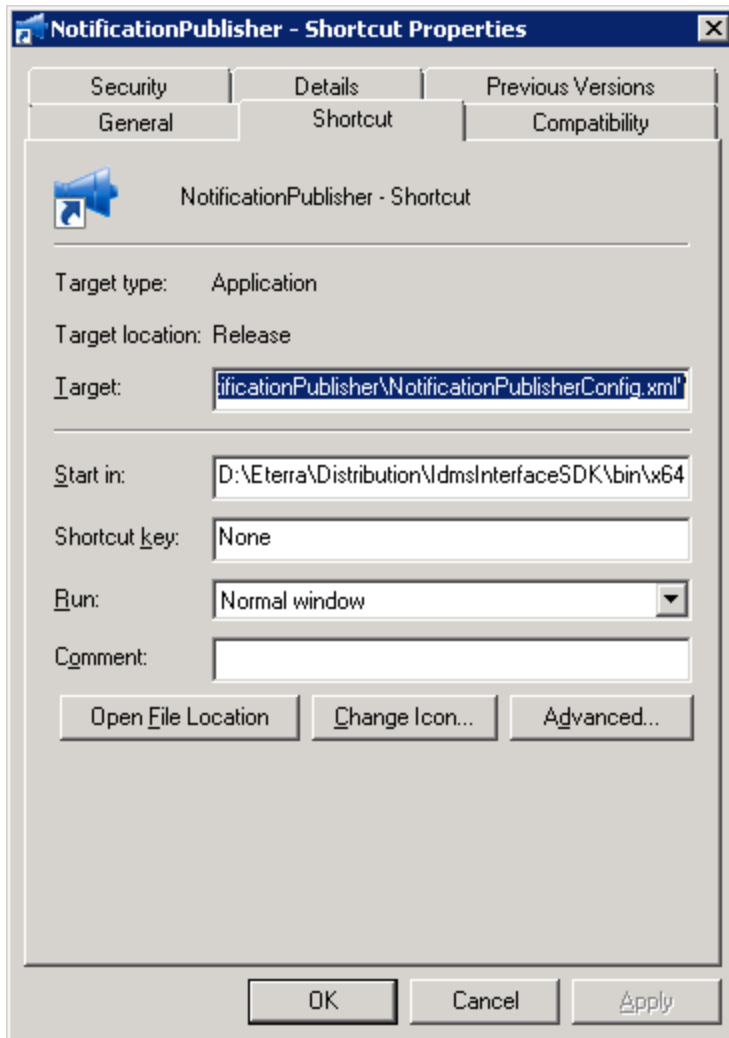

5. Start the Notification Publisher with the shortcut.
6. Configure the DMS Interface Server to enable Switching Order notifications.

```
<TrustedClientList>
  <TrustedClient>
    <Name>NotificationPublisher</Name>
    <Key>
      AQAAANCMnd8BFdERjHoAwE/Cl+sBAAAAtoSWIAB5dEeFKzXubEsq5wQAAAAACAAAAAAQZgAAAAEAAACAAA
      C21Se3ip5lJka33891oBXQck/0B/zqLOco8CePg00ZkwAAAAAogAAAAIAACAAAADr+iGMskmNTKGsOicr
      I8yS8LFzmBJ3nwUVla3J8VHc8BAAAAADshj3PExm7O5jTCOKtTZ8QAAAAOeIg7NvQwqk2QfJeKXlpYd2NM
      IVc30kftW/wEmfNciPm80dfKeflnNNKo+TLvzNahCGUO9BEMia4Elle104Nzo=</Key>
    <NotificationBaseURL>http://localhost:8025/DISEvents/</NotificationBaseURL>
    <NotificationTypes>SWO-STATUS-EXT</NotificationTypes>
  </TrustedClient>
</TrustedClientList>
```

7. Start the DMS Interface Server.
8. Configure the SwitchOrderServerConfig.txt to enable notifications.

```
EnableNotificationSystem = true
ContactsFile = %IDMS_ROOT%\config\server\SWOContactList.txt
```

9. In the Switching Order Client Configuration Editor, on the Switch Order Related tab, select the Enable Email Notifications option.

Email Notifications

☒ Enable Email Notifications ☐ Use Full Names

☒ Collapsed Email Notifications section

After the notification service is configured, the Switching Order email notifications will be sent to the recipients specified on the Email Notification section in the Switching Order application.


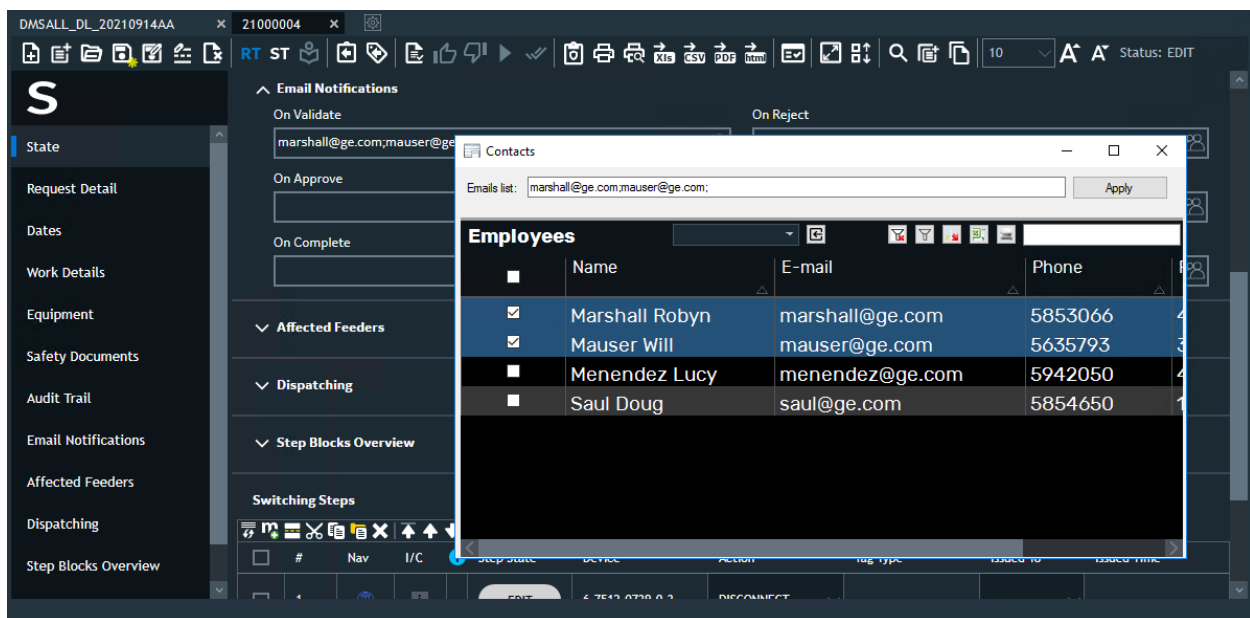


Figure 6. Specifying the Recipients for the Email Notifications

7. Configuring the Employee Info Display

When issuing a switching step, the Employee Info display allows an operator to choose from a detailed list of employees or crews using the sorting and filtering capabilities of the grid tabular displays.

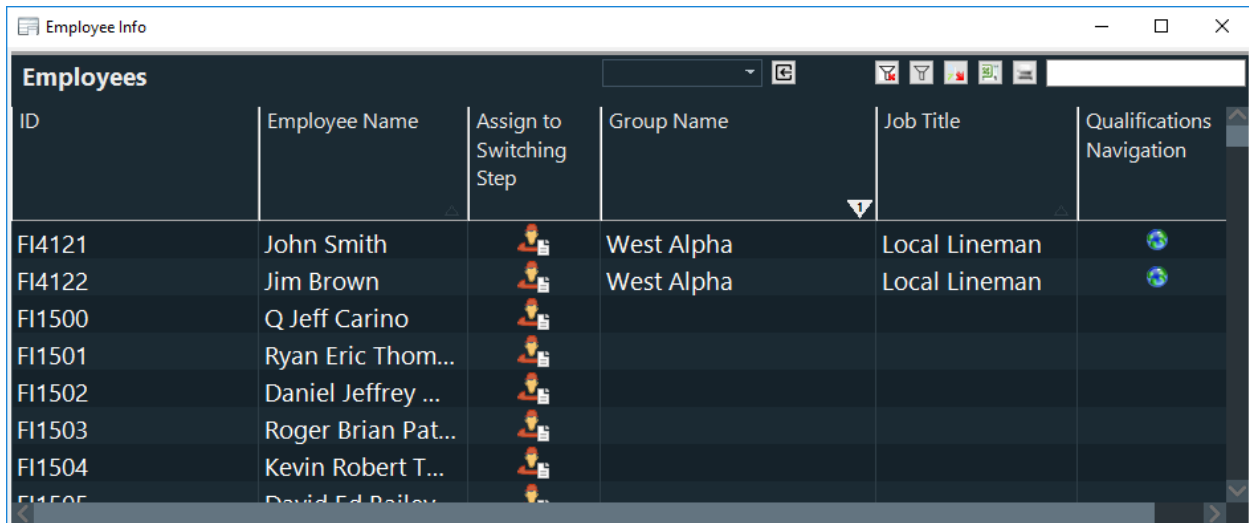

ID	Employee Name	Assign to Switching Step	Group Name	Job Title	Qualifications Navigation
FI4121	John Smith		West Alpha	Local Lineman	
FI4122	Jim Brown		West Alpha	Local Lineman	
FI1500	Q Jeff Carino				
FI1501	Ryan Eric Thom...				
FI1502	Daniel Jeffrey ...				
FI1503	Roger Brian Pat...				
FI1504	Kevin Robert T...				
FI1505	David Ed Bailey				

Figure 7. Employee Info Display


7.1. Configuring the Switching Order Application

To enable the Employee Info display in the Switching Order application:

1. Open the Switch Order Related tab of the Switching Order Client Configuration Editor.
2. On the Employee Information Pop-Up pane, set the options as follows:
 - **Use Employee Pop-Up:** Select this option to display the “Employee Info Popup” button on the Switching Steps toolbar of the Switching Order application.
 - **Employee Pop-Up URL:** Set the Employee Info display call up URL to be used by the Employee Info Popup button and specify the Employees Info display title.
 - **Use OMS for Issued To Validation:** Select this option to validate crew names in the Issued To fields against crew names that are defined in the OMS crew model. This option is designed for utilities that use crew information from the crew model and assign crews (not employees) to switching steps.

If selected, the Switching Order Client Configuration Editor prompts you to change the Employee Popup URL to one that calls the Crew List display, which lists crews from the OMS crew model and allows an operator to assign a crew for a switching step.


URL: NETVIEW://SO.RT/POPUP/TABULAR/SWOCrewsFromOms?Title=Crew List

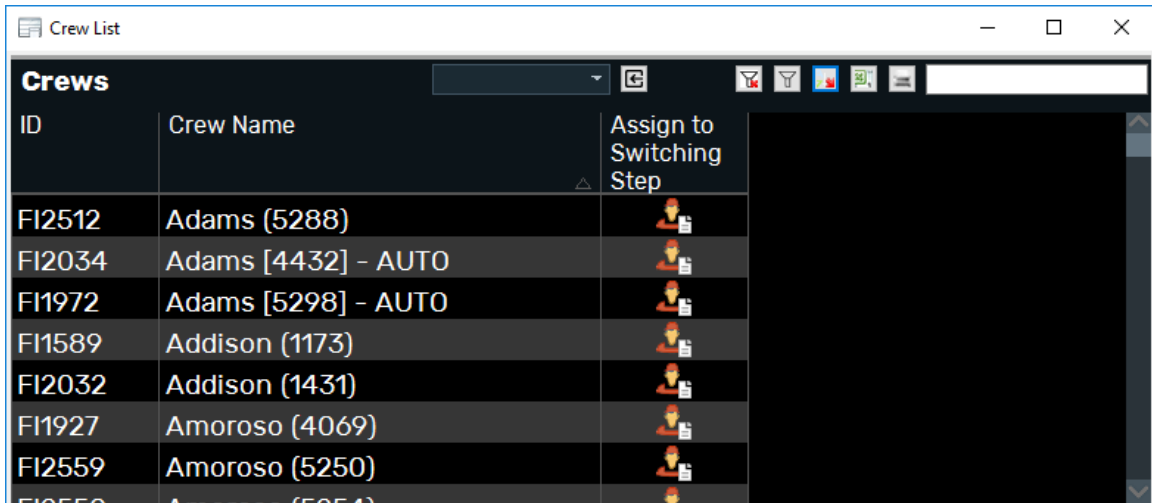

ID	Crew Name	Assign to Switching Step
FI2512	Adams (5288)	
FI2034	Adams [4432] - AUTO	
FI1972	Adams [5298] - AUTO	
FI1589	Addison (1173)	
FI2032	Addison (1431)	
FI1927	Amoroso (4069)	
FI2559	Amoroso (5250)	

- If cleared, the tool prompts you to change the Employee Popup URL to one that calls the Employee Info display, which contains detailed employee data, and allows an operator to assign an employee to a switching step. This display is populated from the OMS crew model and Employee Plug-In files, as configured by the Employee Info Pop-Up parameters in the Switching Order Server configuration file (see [Switching Order Server Configuration File](#)).

URL: NETVIEW://SO.RT/POPUP/TABULAR/SWOEmployee?Title=Employee Info

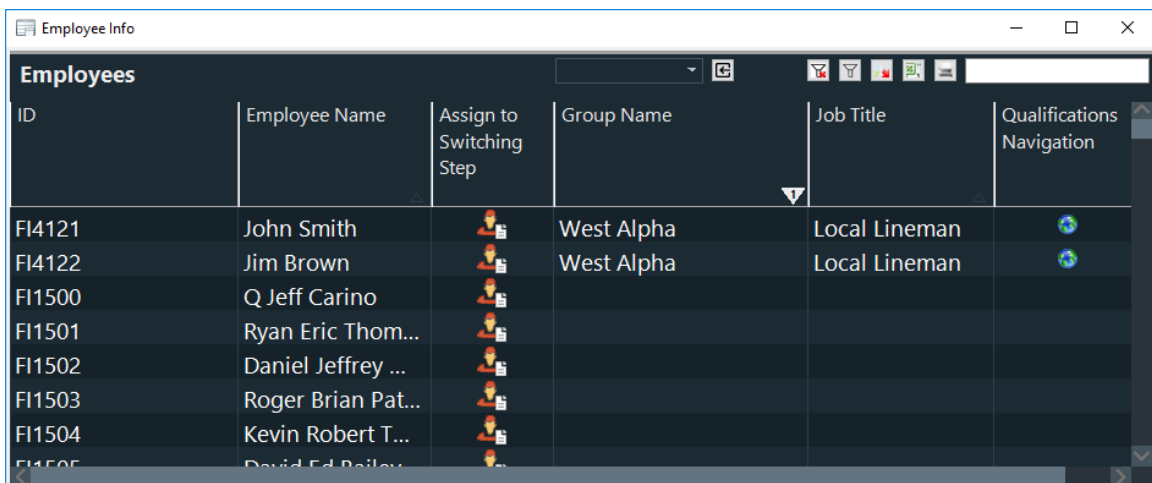

ID	Employee Name	Assign to Switching Step	Group Name	Job Title	Qualifications Navigation
FI4121	John Smith		West Alpha	Local Lineman	
FI4122	Jim Brown		West Alpha	Local Lineman	
FI1500	Q Jeff Carino				
FI1501	Ryan Eric Thom...				
FI1502	Daniel Jeffrey ...				
FI1503	Roger Brian Pat...				
FI1504	Kevin Robert T...				
FI1505	David Ed Bailey				

Employee Information Popup

☒ Use Employee Popup ☐ Use OMS for IssuedTo validation

Employee Popup URL

7.2. Configuring Grid Tabular Displays

Edit the following grid tabular display files that define information that appears on the Employee Info display:

- **SWOCrewsFromOms_GridDisplay.xml (Crews):** Shows crew data from the crew model. Used when the Use OMS for Issued To Validation option is selected in the Switching Order Client Configuration Editor.
- **SWOEmployee_GridDisplay.xml (Employees):** Shows employee data from the employee data file and crew data from the crew model. Used when the Use OMS for Issued To Validation option is not selected in the Switching Order Client Configuration Editor.
- **SWOQualifications_GridDisplay.xml (Qualifications):** Shows employee qualification details. This display can be accessed from the Employees display.

The following crew and employee data collections are supported by the Switching Order:

- Data collections from the crew model: CREW, EMPLOYEE, EMPLOYEEYPES, VEHICLES, VEHICLETYPES, CREWAREAS, CREWDIVISIONS
- Data collections from the employee data file: EMPLOYEE (the existing crew model's EMPLOYEE collection is extended with additional fields), SWOEMPLOYEE, and QUALIFICATIONS

SWOEMPLOYEE

This collection Provides data for employees that are specified in employee data file. This collection is merged with the content of the EMPLOYEE collection based on employee ID and can be queried directly from the EMPLOYEE collection.

Note

This collection is supported only if LoadEmployeePlugin=true in the SwitchOrderServerConfig.txt file.

The following fields from the SWOEMPLOYEE collection can be used for the Employees table:

- **ID:** Employee Id.
- **SWOEmployeeName:** Employee name specified in the employee data file.
- **WorkGroup:** Name of the working group the employee belongs to.
- **JobTitle:** Employee's job title.
- **QualificationsCount:** Number of qualifications specified for this employee.

QUALIFICATIONS

The following fields from the QUALIFICATIONS collection can be used for the Qualifications table:

- **EmployeeId:** Employee ID.
- **SWOEmployeeName:** Employee name specified in employee data file.
- **Description:** Qualification description.
- **RequalifiedDate:** Date and time when the qualification was attained/unattained.
- **ExpirationDate:** Date and time of the qualification expiration.
- **Status:** Status of the qualification (Attained/Unattained).

7.3. Configuring the Switching Order Server

Configure the following parameters of the SwitchOrderServerConfig.txt file:

- **LoadCrewModel:** If true, the Employee Name and ID are read from the crew model file and are used on the Employees Info display.
- **CrewModelFile:** Path to the crew model file.

Note

By default, the Employee Info display primarily uses data from the crew model and secondarily uses data from the employee data file. (For example, the employee name from the crew model is used when the employee name value is different in the crew model and employee data file.) This is defined in the SWOEmployee_GridDisplay.xml grid tabular display file.

- **LoadEmployeePlugin:** If true, the Switching Order Server loads the Employee Plug-In and the Employee Plug-In data file (employee data file).
- **EmployeePlugin:** Defines the name of the Employee Plug-in .dll file located in the d:\Eterra\Distribution\Server\bin\ folder. This can also be defined by an absolute path.
- **EmployeePluginDataFile:** Sets the path to the tab-delimited employee data file, which is used to populate the Employee Info and Employee Qualifications displays.

Note

Generally, the OMS crew model file contains only the employee ID and name values. In this case, the employee data file should contain the full set of employee data to populate both the Employees and Qualifications displays. You may not use the crew model file if the employee data file contains the full set of employee data.

Note

The Employee Info display will be blank if the *LoadCrewModel* and *LoadEmployeePlugin* parameters are set to false, or if the file paths are defined incorrectly.

7.4. Updating the Employee Data File

Update the SWOEmployeeInfoPlugin.txt employee data file in the %IDMS_ROOT%\config\server folder.

Tip

The SWOEmployeeInfoPlugin.txt file format is the tab-delimited file, therefore the file can be edited using a table editor.

8. Configuring Mobile Dispatching

Note

This feature requires integration with GE's Mobile Enterprise solution.

The Switching Order application can integrate with GE's Mobile Enterprise solution to assist field crews when working with switching orders. Integration with Mobile Enterprise is achieved via DMS Interface Server web services and the Mobility Gateway or Mobile Adapter (legacy approach).

When integrating using the Mobility Gateway, select the option to install the Mobility Gateway when installing the ADMS Interfaces software. The application and its configuration file are installed in the `Interfaces\bin` and `Config\interfaces` folders.

When integrating using the Mobile Adapter, select the option to install the Mobile Adapter when installing the ADMS Client software. The application and its configuration file are installed in the `Client\bin` folder.

Note

To enable the Mobile Dispatching feature, the DMS Interface Server and Mobility Gateway (Mobile Adapter) must be running.

8.1. Configuring DMS Interface Server

To configure the `DmsInterfaceServerConfig.xml` file (by default, stored in `%IDMS_ROOT%\config\client`):

1. Enable the Mobile web services:

```
<EnableMobileWebServices>true</EnableMobileWebServices>
```

2. Specify the URL of the Mobile web service started by the Mobility Gateway or Mobile Adapter.

- When using the Mobility Gateway:

```
<MobileUrl>\http://localhost:8443/api/adms/MobileSwo/</MobileUrl>
```

- When using the Mobile Adapter:

```
<MobileUrl>\http://localhost:8887/DIS/</MobileUrl>
```

3. Specify the Notification Base URL. For example:

```
\http://<mobility_server>:9180/event/</NotificationBaseUrl>
```

4. When using the Mobile Adapter, add the following configuration entry:

```
<MessageSourceEnv>DMS_ETERRA_Live</MessageSourceEnv>
```

5. When using the Mobile Adapter, enable XML messaging:

```
<Deprecated_EnableXMLForMobileAdapter>true</Deprecated_EnableXMLForMobileAdapter>
```

8.2. Creating the Employee File

Note

Use this section only if using the Mobile Adapter integration.

1. Create the `MobilePluginEmployees.txt` file, which lists employees that are equipped with the Mobile application, in the `%IDMS_ROOT%\config\server\` folder.

Use the following file format:

```
ID NAME
FI1571   Ethan G
FI2576   Mary I
FI1502   Daniel Jeffrey
FI2625   Ryan A
```

Note

The "ID" value must match the "External User Id" value in the Mobile Enterprise user list.

The specified employees will be available for adding to the dispatch list.

ID	Employee Name	Device Id	Online	Add to SWO
FI1814	Daniel I Barb...			
FI1502	Daniel Jeffrey	DEVICE_3	Yes	
FI1899	Daniel K My...			
FI1512	Daniel Mark ...			
FI1886	Daniel P Lew...			
FI2743	Daniel T Hall...			
FI2623	Daniel X Can...			
FI2103	Daniel X Davis			
FI2787	Daniela G Dr			

8.3. Configuring Switch Order Server

To configure the SwitchOrderServerConfig.txt configuration file (by default, stored in %IDMS_ROOT%\config\server):

1. Specify the name of the Mobile Enterprise plugin:

```
MobilePlugin = MobilePlugin.dll
```

2. Specify paths to the files used by the Mobile Enterprise.

```
EmployeeStatusFile = %IDMS_ROOT%\dynamics\server\SwitchOrderServer\LogonStatus.xml  
DispatchStatusFile = %IDMS_ROOT%\dynamics\server\SwitchOrderServer\DispatchStatus.xml
```

3. If using the Mobile Adapter integration, set the parameter as follows:

```
MobileEmployeeList = %IDMS_ROOT%\config\server\MobilePluginEmployees.txt
```

4. If using the Mobility Gateway integration, set the parameters as follows:

```
CrewList = %IDMS_ROOT%\models\crew\FantasyIslandCrewModel.Crew  
MobilityGatewaySpecific = true  
ExpectMobileUpdateAck = true
```

Note

These configuration entries are commented out in the default configuration file.

8.4. Configuring the Mobile Adapter Application

Note

Use this section only if using the Mobile Adapter integration.

Configuring MobileAdapterConfig.exe.xml

The MobileAdapterConfig.exe.xml file contains three different service definitions: 1 for a client and 2 for services.

To configure the MobileAdapterConfig.exe.xml configuration file (by default, stored in Client\bin):

1. Specify the client entries as follows:

```
<client>  
<endpoint address="<MobileURL> " binding="basicHttpBinding"  
bindingConfiguration="BasicHttpBinding_IDispatchService"  
contract="MobileDispatchService.IDispatchService"
```

```
name="BasicHttpBinding_IDispatchService" />
</client>
```

Where, <MobileURL> is the URL of Mobility server SOAP service. Set this URL to the address of Mobility server. For example:

- For Windows deployment: https://<mobility_server>:9180/yambay/servlet/EnmacTcsServlet
- For Kubernetes deployment:
https://<Kubernetes_cluster_node>/mobile/yambay/servlet/EnmacTcsServlet

2. Configure the SOAP service:

```
<services>
  <service ...
    name="MobileAdapter.ExternalMobileSoapService.MobileSoapService">
      .....
    <host>
      <baseAddresses>
        <add baseAddress="<SOAP service listener URL>" />
      </baseAddresses>
    </host>
  </service>
```

Where, <SOAP service listener URL> is the address at which Mobile Adapter starts the SOAP service to listen for messages from the Mobility server.

The default value is http://localhost:8887/Mobile/. Typically, you can use this value. The Mobility server should be configured to send messages to this address.

3. Configure the web service.

```
<service ... name="MobileAdapter.DisWebService.DisMobileService">
  <host>
    <baseAddresses>
      <add baseAddress="http://localhost:8887/DIS/" />
    </baseAddresses>
  </host>
</service>
```

Typically, you can use the default values. DMS Interface Server should be configured to send messages to this address using the MobileUrl parameter.

Configuring MobileAdapterConfig.xml

To configure the MobileAdapterConfig.xml configuration file (by default, stored in %IDMS_ROOT%\config\client):

1. Set NmsGroupName, NmsEnvironment, and MessageSourceEnv parameters according to the Mobility server configuration. For example:

```
<MobileAdapterConfig>
```

```
<NmsGroupName>DMS_ETERRA</NmsGroupName>
<NmsEnvironment>Live</NmsEnvironment>
<MessageSourceEnv>DMS_ETERRA_Live</MessageSourceEnv>
<ShowDebugLog>>false</ShowDebugLog>
<DisConnectionTimeoutInMs>2000</DisConnectionTimeoutInMs>
</MobileAdapterConfig>
```

2. Create a shortcut for starting the MobileAdapter application and add the MobileAdapterConfig.xml to the shortcut's Target field. For example:

```
MobileAdapter.exe %IDMS_ROOT%\config\client\MobileAdapterConfig.xml
```

8.5. Configuring Crew Server

To configure the CrewServerConfig.xml configuration file (by default, stored in %IDMS_ROOT%\config\server):

1. Enable the Crew Server web service:

```
<EnableCrewWebServices>true</EnableCrewWebServices>
```

2. Update URI parameters, as appropriate. For example:

```
<UriScheme>https</UriScheme>
<UriHost><Kubernetes_cluster_node></UriHost>
<UriPort>443</UriPort>
<UriPath>mobile/gws</UriPath>
```

3. Update the CrewServerWmsWebClient plugin BaseUri. For example:

```
<BaseUri>https://<Kubernetes_cluster_node>/mobile/gws/api/ext/wms/v2</BaseUri>
```

4. Update the messaging polling interval:

```
<MessageGetPollingInterval>1000</MessageGetPollingInterval>
```

8.6. Configuring the Switching Order Client

On the Switching Order Related tab of the Switching Order Client Configuration Editor, enable the Document Dispatching section.

Mobile Options

☒ Enable document dispatching

The Dispatching section will appear on the switching order form.

Switching Order Dispatching				
	Id	Name	Dispatch Status	Actions
	F11571	Ethan G	Taken Back	 Dispatching  SOS
	F11502	Daniel Jeffrey	Dispatched	 Take Back  SOS

When integrating using the Mobility Gateway, also do the following:

1. In the Employee Information Popup section, select the "Use OMS for IssuedTo Validation" option.
2. Set the "Employee Popup URL" value to
NETVIEW://SO.RT/POPUP/TABULAR/SWOCrewsFromOms?Title=Crew List.

Employee Information Popup

☒ Use Employee Popup
☒ Use OMS for IssuedTo validation

Employee Popup URL

8.7. Configuring the Mobility Server (ME Side)

Important

It is assumed that you already have the Mobile Enterprise server configured and running. For more information, refer to the *Mobile ADMS - Mobility Services - Installation and Maintenance Guide* and *Mobile ADMS System Overview*.

To configure the Mobile Enterprise side, modify the Mobile deploy base manifest file on the Kubernetes server. The "eterra:" section describes the values required to configure the AOV service.

1. Set the eTerra Adapter Ports values to match the values of the Mobile web service in %IDMS_ROOT%\config\client\DmsInterfaceServerConfig.xml. For more information, see [Configuring DMS Interface Server](#).

```
MobileAdaptor=http://<ADMS Mobile Host>:<ADMS Mobile Port>/Mobile

EterraAdaptor=http://<ADMS DMS Interface Server Web Service Host>:<ADMS DMS

incidentApi=http://<ADMS OMS Interface Server Web Service Host>:<ADMS OMS Interface Server Web
Service Port>
```

2. For integration with the Common Network Viewer (CNV), set the Tile and Notification Service ports and values to match the values in the Apache configuration file (httpd.conf).

```
notification-url=ws://<ADMS Notifications Service Host>:<ADMS Notifications Service
Port>/notifications
tileServiceUrl=http://<ADMS Tile Service Host>:<ADMS Tile Service Port>/api
```


For example:

```
eterra:
# CONFIG REQUIRED:
# URL for the ETD incident API, e.g. http://host:8802
incidentApi: http://adms-server.com:8802

# CONFIG REQUIRED:
# URL for the ETD mobile adaptor API, e.g. http://host:8887/Mobile
MobileAdaptor: http://adms-server.com:8887/Mobile

# CONFIG REQUIRED:
# URL for the ETD work request API, e.g. http://host:8801/dms
EterraAdaptor: http://adms-server.com:8801/dms

# CONFIG REQUIRED:
# URL for the ETD Tile Service API, e.g. http://host:9991/api
tileServiceUrl: http://adms-server.com:9991/api

# CONFIG REQUIRED:
# URL for the ETD Tile Update Notification Service WEBSOCKET,
# e.g. ws://host:9992/notifications
#
# !!!!! DO NOT USE http !!!!! URL must begin ws://
#
notificationUrl: ws://adms-server.com:9992/notifications
```