Instruction manual

The five-halberd Y moving head beam



Please read the manual carefully before installing and using this luminaire and keep it for future reference.

Thank you for choosing our Products,For your personal safety and better use of this product,Please read the manual carefully before using,Follow the procedure,To avoid misuse of personal safety damage and lamp damage.

Packing list:

After unpacking,Please check the product is qualified,Count all accessories.NO, please contact the distributor!

number	Name	Color	Unit	Quantity
1	Lamps and lanterns	Black	Station	1
2	Power Cord	Black	Ordinance	1
3	Handle	Black	PCS	1
4	Hexagon screws	Black	PCS	2
5	Instructions	Black and white	PCS	1

Appearance and LED Function

Switch settings by pressing a button:

*Click "MENU" Key switch function.

*Click "UP/DOWN" Switch function or set address code.

*After switching functions, Click "ENTER" Key save function.





Technical parameters

number	Category	Parameter
1	Power supply	AC95V-245V/50Hz-60Hz
2	Lamp beads	5 PCS 5050 30W CREE LED, 5PCS 100mW green laser,60 PCS 5050 0.2W LED
3	CONTROL MODE	DMX512, 19 or 43 channels for international use
4	Mode of operation	DMX512, master/slave, self-walking, voice control
5	Dimming mode	0~100% ultra-smooth dimming
6	Strobe	20 times per second
7	Heat dissipation	Aluminum products cooling, forced cooling fan



DMX Channel function: This product have 23 or43 channels, Specific controls are as follows:

channels	Function	DMX Value	Description
1	X1 Motor	0-255	0-450 degree rotation
2	Y1-Motor	0-255	0-180 ° Spin
3	X2 Motor	0-255	0-450 degree rotation
4	Y2-Motor	0-255	0-180 ° Spin
5	X3 Motor	0-255	0-450 degree rotation
6	Y3-Motor	0-255	0-180 ° Spin
7	X4 Motor	0-255	0-450 degree rotation
8	Y4-Motor	0-255	0-180 ° Spin
9	X5 Motor	0-255	0-450 degree rotation
10	Y5-Motor	0-255	0-180 ° Spin
11	XY Motor Speed	0-255	From fast to slow
12	Dimmer	0-255	Linear dimming from dark to light
13	STROB	0-10	None
		11-255	From slow to fast
14	Red1	0-255	Red is dimmed from dark to bright
15	Green1	0-255	Green is dimmed from dark to bright
16	Blue1	0-255	Blue is dimmed from dark to bright
17	White1	0-255	White is dimmed from dark to bright
18	Red2	0-255	Red is dimmed from dark to bright
19	Green2	0-255	Green is dimmed from dark to bright
20	Blue2	0-255	Blue is dimmed from dark to bright
21	White2	0-255	White is dimmed from dark to bright
22	Red3	0-255	Red is dimmed from dark to bright
23	Green3	0-255	Green is dimmed from dark to bright
24	Blue3	0-255	Blue is dimmed from dark to bright
25	White3	0-255	White is dimmed from dark to bright
26	Red4	0-255	Red is dimmed from dark to bright
27	Green4	0-255	Green is dimmed from dark to bright
28	Blue4	0-255	Blue is dimmed from dark to bright
29	White4	0-255	White is dimmed from dark to bright
30	Red5	0-255	Red is dimmed from dark to bright
31	Green5	0-255	Green is dimmed from dark to bright
32	Blue5	0-255	Blue is dimmed from dark to bright
33	White5	0-255	White is dimmed from dark to bright

34	Green Laser1	0-255	The laser dims light from dark to light
35	Green Laser2	0-255	The laser dims light from dark to light
36	Green Laser3	0-255	The laser dims light from dark to light
37	Green Laser4	0-255	The laser dims light from dark to light
38	Green Laser5	0-255	The laser dims light from dark to light
39	Combined effects	0-9	nothing
		10-255	change effect every 10 seconds
40	Combined effects speed	0-255	Slow to fast
41	Light Belt	0-9	nothing,
		10-255	change effect every 10 seconds
42	Light Belt Speed	0-255	Slow to fast
43	Macro function	0-50	Channel 1 to Channel 42. It’ s active
		51-149	autorun
		150-250	voice
		251-255	3 second reset

channels	Function	DMX Value	Description
1	X1 Motor	0-255	0-450 degree rotation
2	Y1-Motor	0-255	0-180 ° Spin
3	X2 Motor	0-255	0-450 degree rotation
4	Y2-Motor	0-255	0-180 ° Spin
5	X3 Motor	0-255	0-450 degree rotation
6	Y3-Motor	0-255	0-180 ° Spin
7	X4 Motor	0-255	0-450 degree rotation
8	Y4-Motor	0-255	0-180 ° Spin
9	X5 Motor	0-255	0-450 degree rotation
10	Y5-Motor	0-255	0-180 ° Spin
11	XY Motor Speed	0-255	From fast to slow
12	Dimmer	0-255	Linear dimming from dark to light
13	STROB	0-10	None
		11-255	From slow to fast
14	Red	0-255	Red is dimmed from dark to bright
15	Green	0-255	Green is dimmed from dark to bright
16	Blue	0-255	Blue is dimmed from dark to bright
17	White	0-255	White is dimmed from dark to bright
18	Green Laser	0-255	The laser dims light from dark to light
19	Combined effects	0-9	nothing,
		10-255	change effect every 10 seconds
20	Combined effects speed	0-255	Slow to fast
21	Light Belt	0-9	nothing
		10-255	change effect every 10 seconds

22	Light Belt Speed	0-255	Slow to fast
23	Macro function	0-50	Channel 1 to Channel 22. It’ s active
		51-149	autorun
		150-250	voice
		251-255	3 second reset

Menu: This product uses the display mode Operation Mode and DMX Mode Operation Mode:

addr	A001-A512	Set 512 address
Chnd	23	Show number of channels
	43	Show number of channels
Shou(running mode)	d512	DMX512 mode
	aut1-au8	auto run1-8
	sou1-sou2	Voice1-2
Sens	0-100	Voice sensitivity setting
LED	oFF	Display is always on
	on	how Hibernate
Disp	OFF	Show Forward
	ON	Show Reverse
rst	Yes/no	Manual reset
sped	1-9	Auto run speed

1.Safety Information

1.1 This product is for adults only. Please keep it out of reach of children.

1.2 Please check whether the voltage meets the rated power and pay attention to the total circuit load before installation.

1.3 Please use this product indoors. Avoid humid, hot, or dusty environments. If there is water or other liquid in the product, cut off the power and contact the supplier.

1.4 Check the power cord and insulation sleeve. Avoid sharp the objects.

1.5 Turn off the power before not using the lamps or cleaning them.

1.6 The light doesn't include spare part for repair. Do not open or change the product.


1.7 If the product is in use and smoke is found, unplug it immediately. Contact the dealer.

1.8 Do not stare at the luminous body for a long time to avoid eye injury.

2. Installation and Operation Instructions

2.1 After the user opens the box, please check whether the model, specification and appearance of the lamps and lanterns are in accordance with, and check whether the lamps and lanterns fittings are complete, without mechanical damage, deformation, paint peeling, lampshade rupture, tilt of the light box and other phenomena.


2.2 The product power supply: AC95-245V 50/60HZ, to prevent electric shock, be sure to connect the protective ground. Lamps and lanterns should be fixed firmly and reliably, each lamps and lanterns fixed with no less than 2 screws or bolts. If the product is larger than 3KG, it should be fixed with pre-buried hooks or bolts. If steel tube is used as the bracket of the lamps, the inner diameter of the steel tube is generally not less than 10mm, and the wall thickness is not less than 15mm.

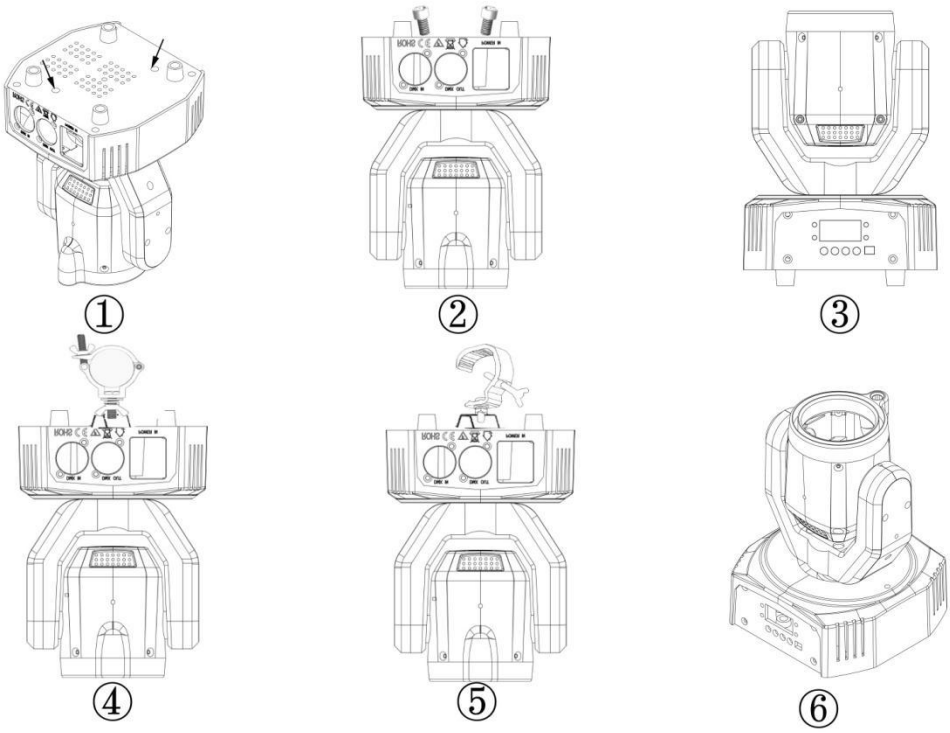

Installation Instructions:

1， Take out the Allen screws from the accessory package, attach the handle (bow frame) as shown in Fig. ① → ②, and fix it as shown in Fig. ③.

2、Light hooks are connected to handles and fixed as shown in Fig. ④ or Fig. ⑤. Note: The light hook must be purchased separately.

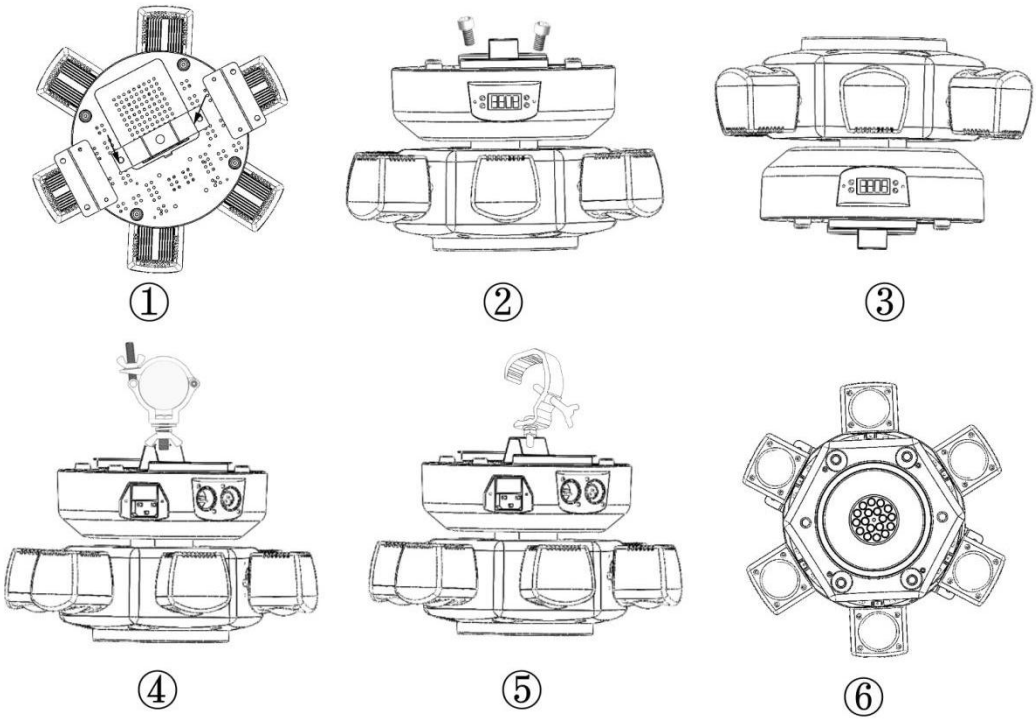


Switch settings function through buttons:

*Press “MENU” button to switch the function.

*Press “UP/DOWN” button to switch the function or set the address code.

*After switching the function, press “ENTER” button to save the function.

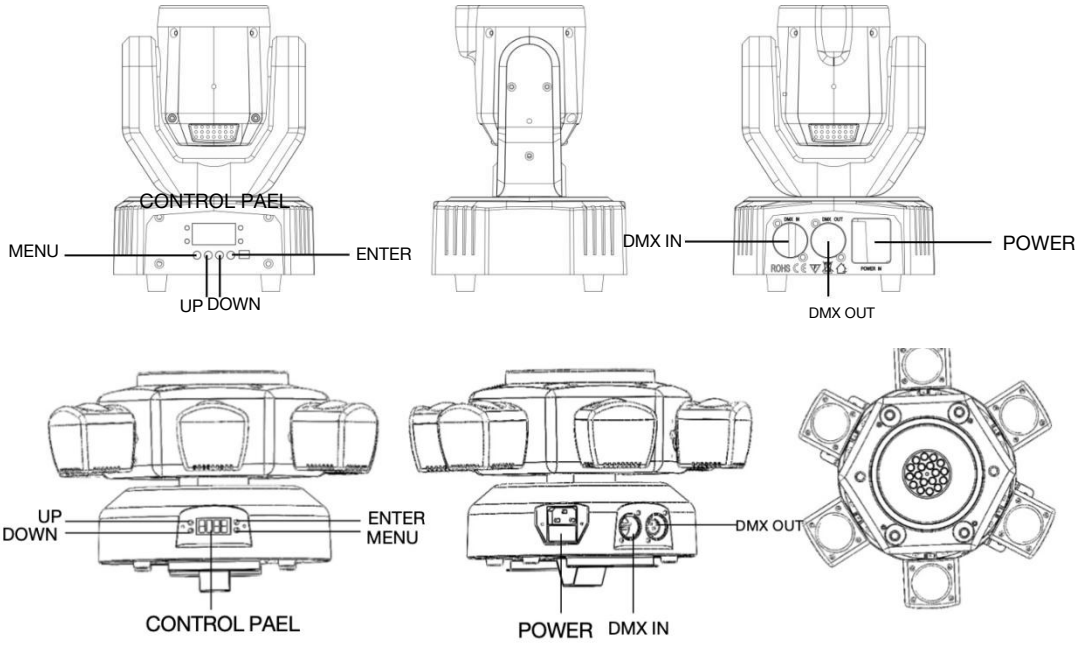

Function and switch mode operation instructions

***Set the 512 address code**

Press "MENU" to enter, select the "" interface, press "ENTER" to enter the address code "A001-A512" interface, you can select the address code by pressing "UP/DOWN"

***Set the speed of the automatic operation mode**


Press "MENU" to enter, the interface displays "Sped" press "ENTER" to enter the level "1-9" automatic operation mode speed from slow to fast, you can adjust the level by pressing "UP/DOWN"

***Set the control mode**

PressMENU" to enter, the interface displays "Shou" press "ENTER" to enter the mode selection "d512 (DMX512 mode) aut1-aut8 (automatic operation mode 1-8) / son1-son2 (sound control mode 1-2)" you can switch the mode by pressing “UP/DOWN"


***Set the sound control mode - sound trigger level**

Press "MENU" to enter, the interface displays "Sens" press "ENTER" enter the sound trigger level "1-100" trigger sound decibel level from low to high, you can adjust the level by pressing "UP/DOWN"

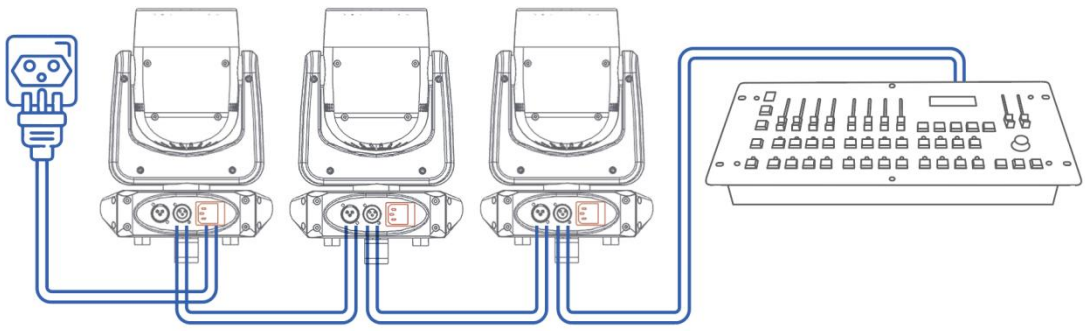



Method for Installing Expansion Bolts in Ceilings.

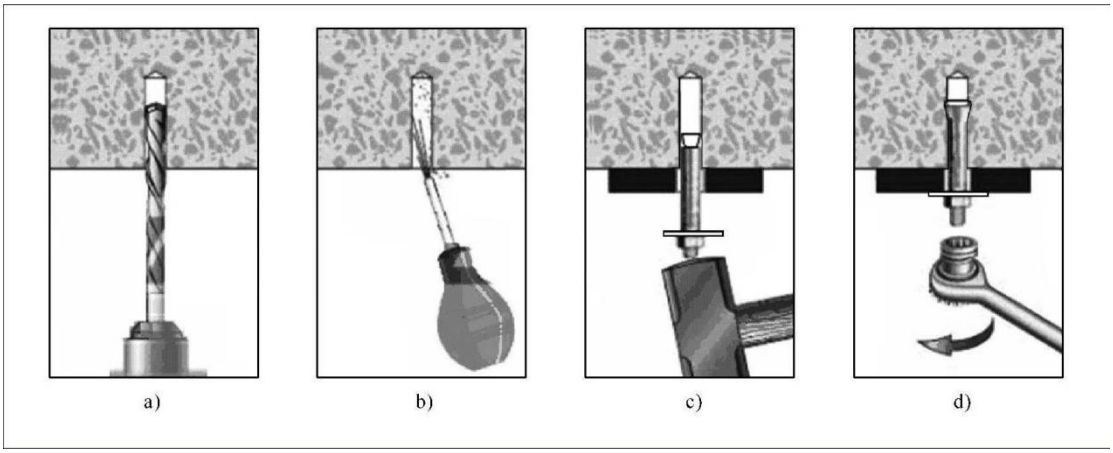

Determine the specifications based on the weight of the stage light (typically choose expansion bolts with a load capacity ⩾5 kg) and the wall material (use metal expansion bolts for concrete walls, and plastic expansion sleeves for brick walls). The mounting holes of the light must match the diameter of the expansion bolt screws.

A. **Drilling**

Select a drill bit of the same specification as the expansion sleeve diameter. Mark the position on the wall and drill a hole, with the depth slightly longer (3-5 mm) than the length of the expansion bolt.

B. **Installation**

Slide the expansion sleeve onto the expansion bolt and insert them together into the drilled hole, ensuring the expansion sleeve fully enters the wall.

C. Mounting the Light

Attach the bow-shaped bracket to the light, then align the mounting holes of the stage light with the screws of the expansion bolts. Use a screwdriver or wrench to tighten the screws of the expansion bolts. The screws will expand the sleeve, securing it firmly inside the wall. Ensure the light is stable and does not wobble, indicating the installation is complete.

Kind reminder: The lamp hooks, signal cables, console, and expansion screws mentioned earlier need to be purchased separately. These accessories are not included in the basic configuration. If needed, please contact the relevant person in charge to confirm the models and purchase details.