


OmniStep 2.0
How to launch with
KAT Industry 3.1.9

Step A.01 [PC] SteamVR

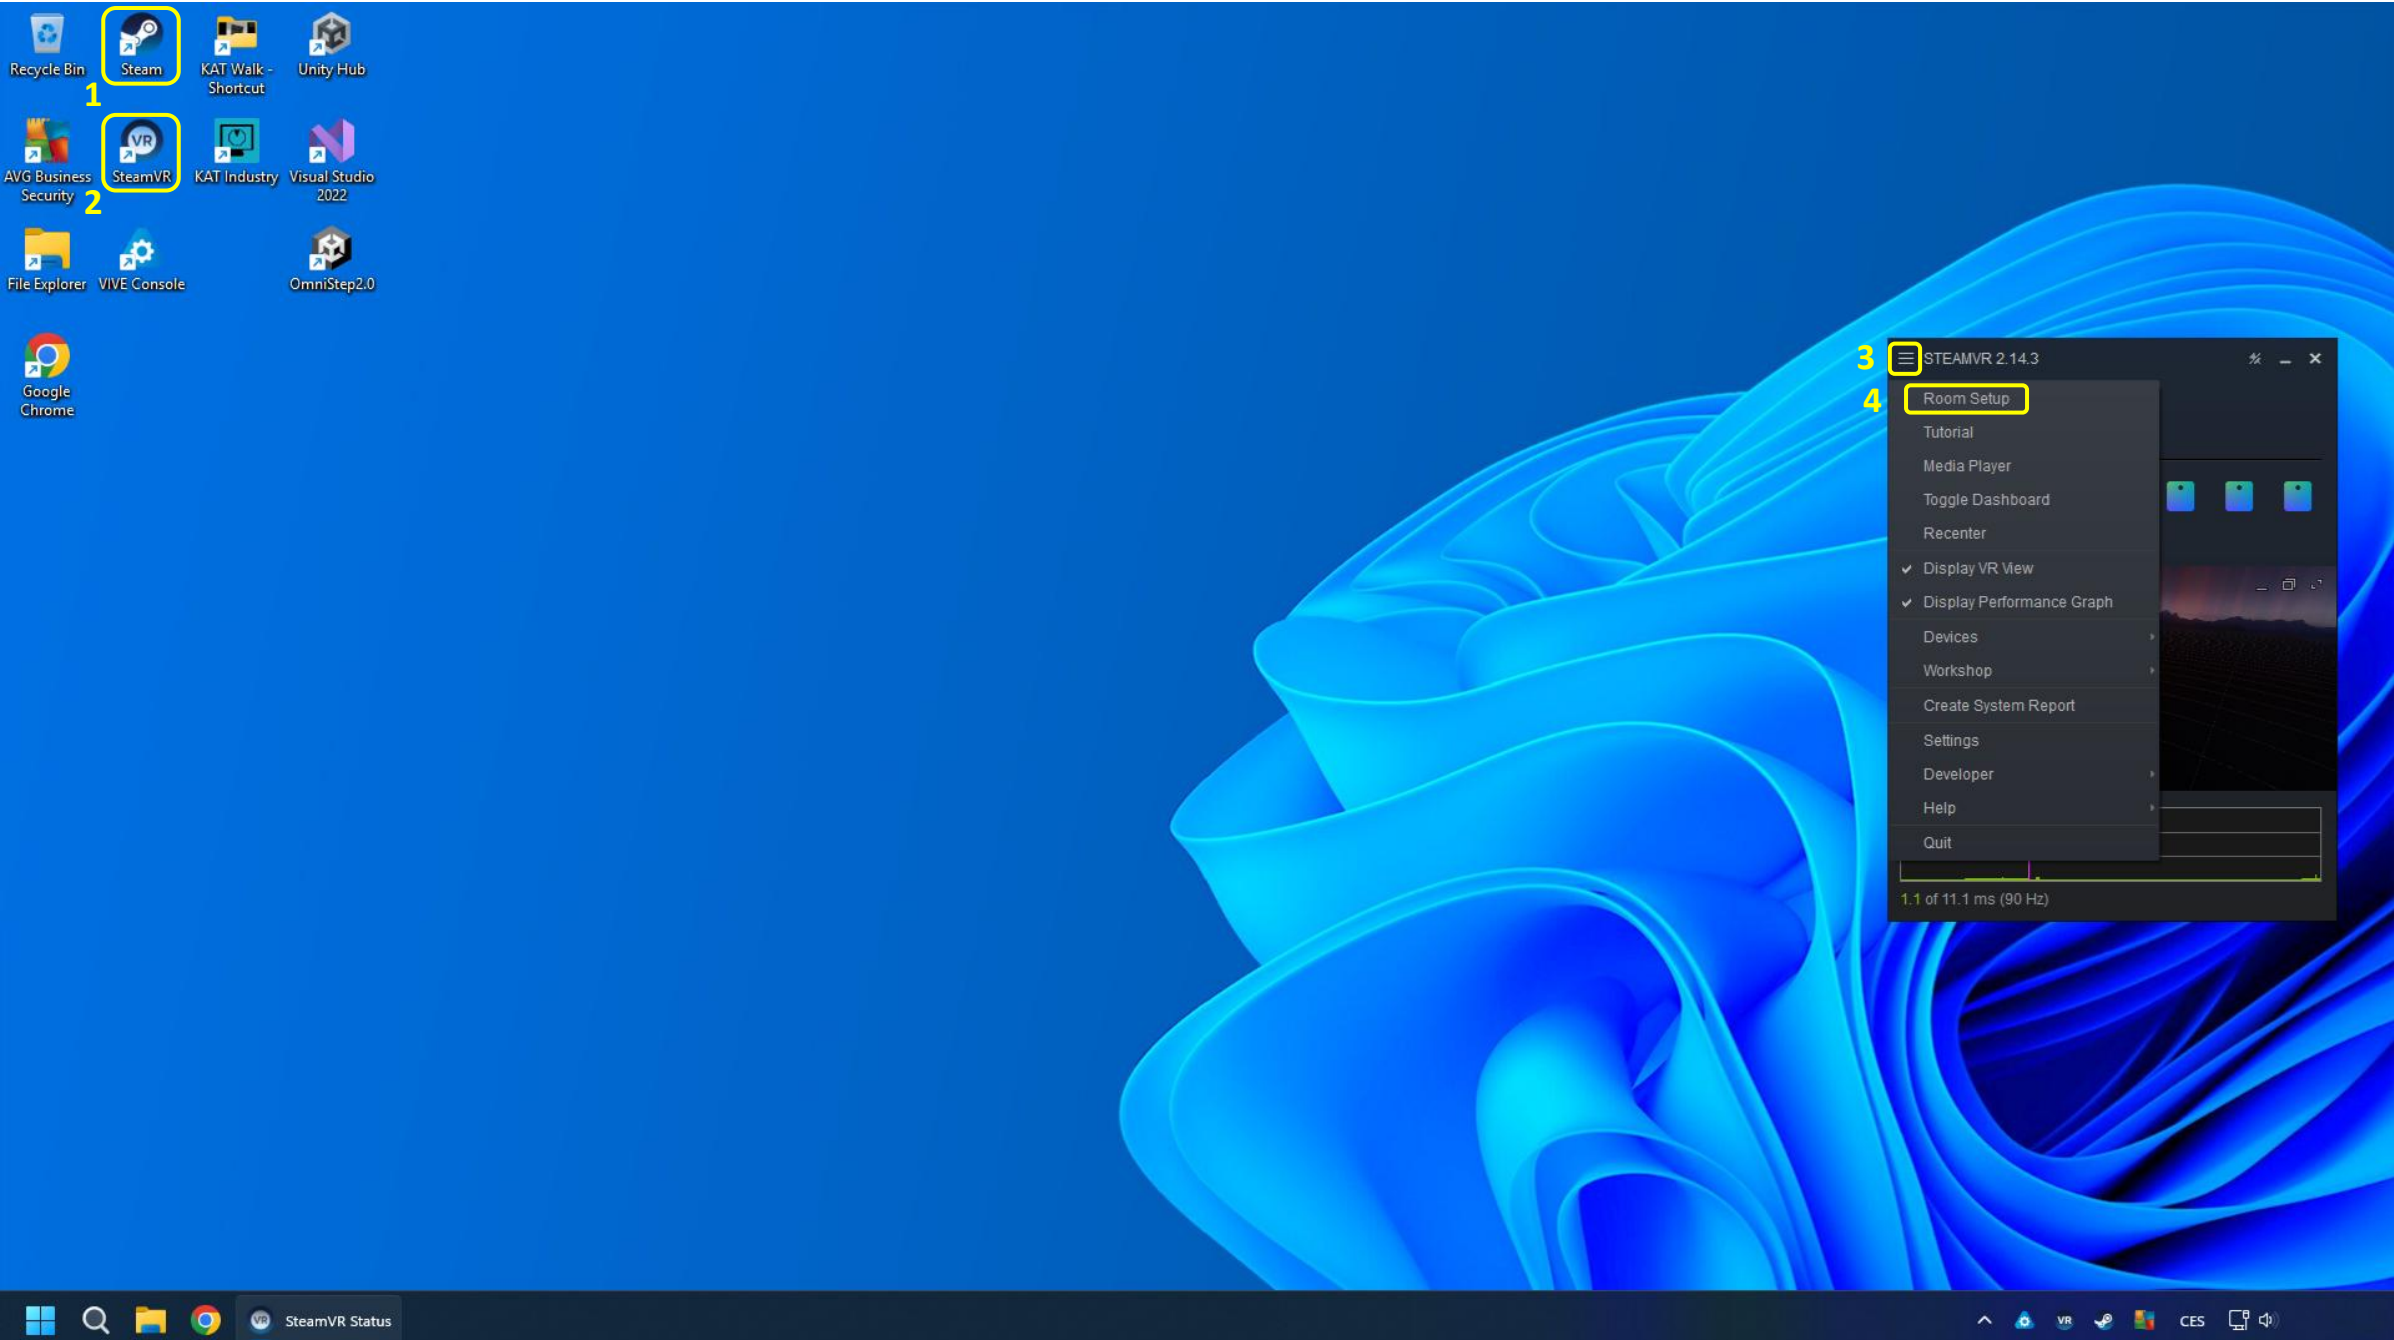

Step A.02 [PC] SteamVR



Welcome to Room Setup!

Set up for Room-Scale

Play Room-Scale, Standing, and Seated VR experiences. Choose this if you have at least 2 meters by 1.5 meters, or around 6.5 by 5 feet.



ROOM-SCALE

Set up for Standing Only

Play Standing and Seated VR experiences. Choose this if you have limited space to walk around.



STANDING ONLY



Step A.03 [PC] SteamVR



A 3D rendered scene of a room. On the left is a bed with a grey blanket. In the center is a desk with a computer monitor displaying a VR interface, a lamp, and some items. A black stick figure is standing in the middle of the room, holding a VR headset. The room has a desk, a lamp, and some items on it.

Locate the floor.

Place the Headset on a stable surface and click the Calibrate Floor button. Then measure the vertical distance between the surface and the floor and enter it below.

If you place your Headset on the floor, enter 0. If you place it on your head, enter your height.


cm in.

CALIBRATE FLOOR


BACK

NEXT


Place the headset on the "platform" of the VR treadmill.

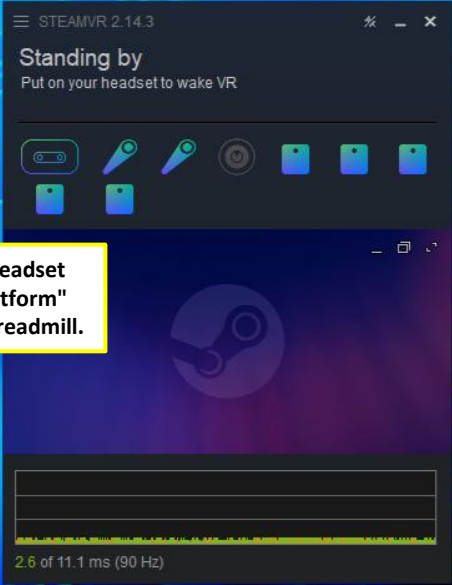


Step A.04 [PC] SteamVR

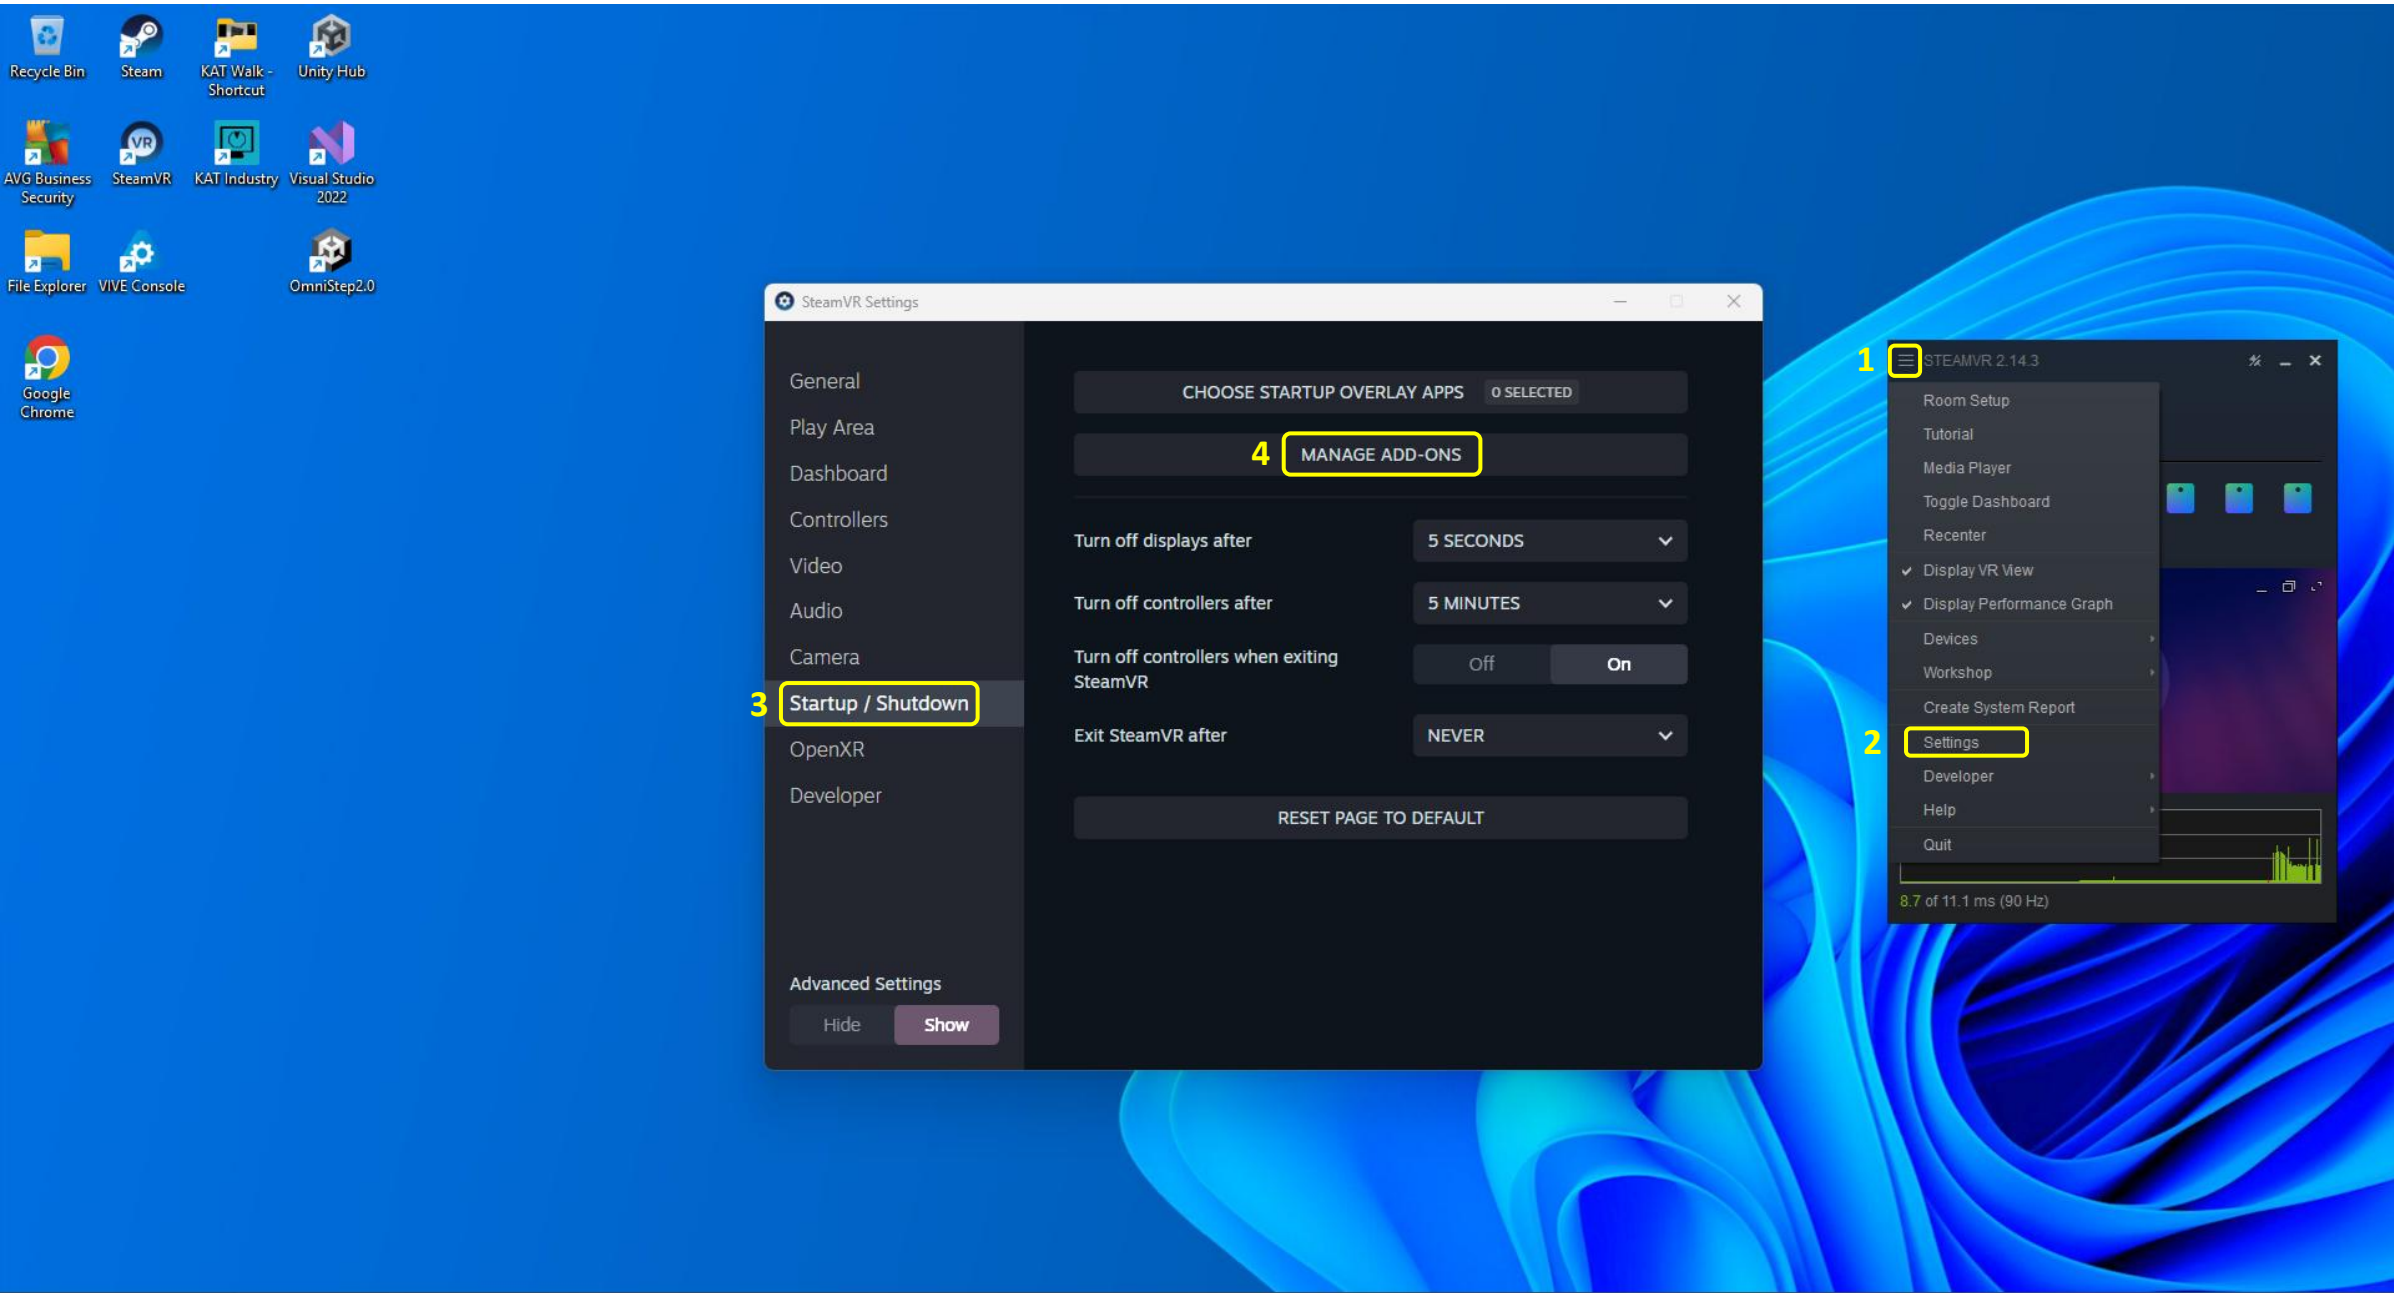

Step A.05 [PC] SteamVR

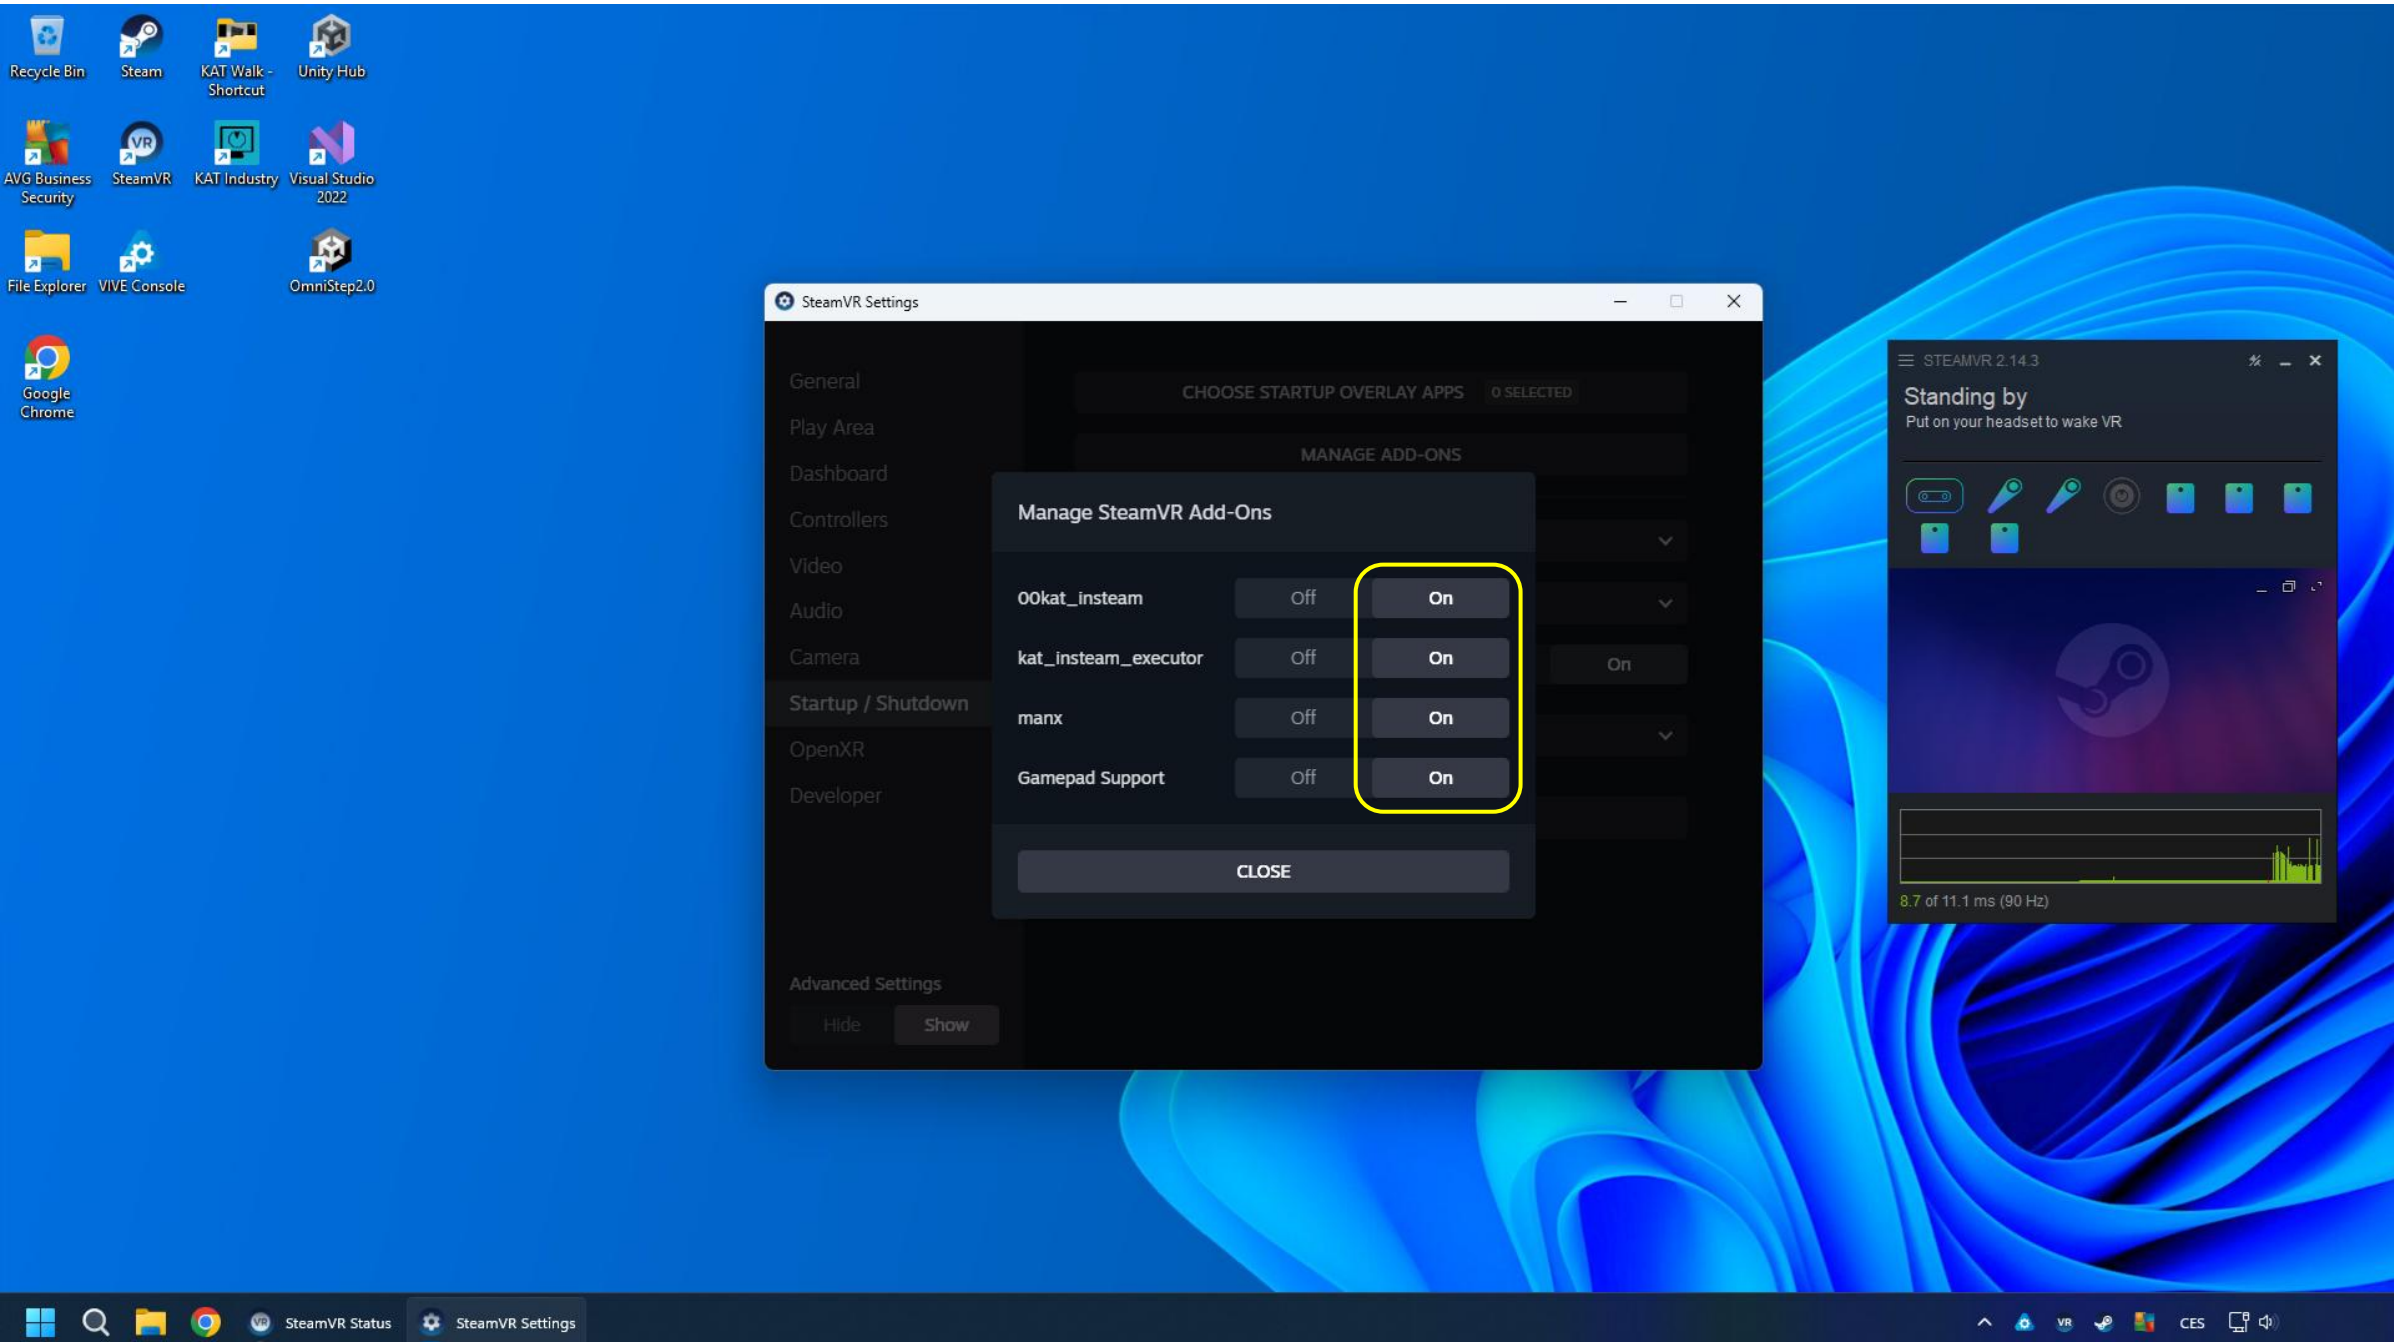

Step B.01 [PC] KAT Industry 3.1.9

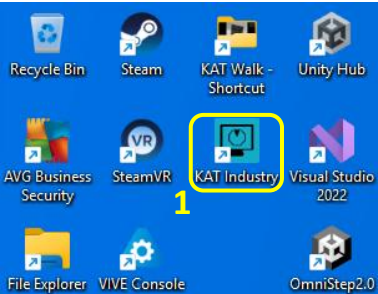

Sensor Initialization

Every time after powering on the device, initialize the inner sensor by rotating the upper structure once.

3

Tutorial

Config

?

⚙

—

×

Config

Connection Status

Walk mini S

Device

Steam VR

Connected

Initialized

Connected

Sensors And Accessories Manager

Real-Time Data

HMD Angle

Body Angle

Walking Speed

Movement Detected

Moving Forward

329°

329°

0,00

False

True

Calibration

Parameter Setting

Profile: DEFAULT

Default

Restore Default Settings

Save to Profile

Save as...

Import Profile

Preference

Game Config

Sitting

Haptics

Walking Speed

Walking Accuracy

Fluency

Left Handed Mode

Original Trackpad/Joystick For Walk

Both Trigger Calibration

Default

Default

0


ON

Controller Secondary


ON




Step B.02 [PC] KAT Industry 3.1.9

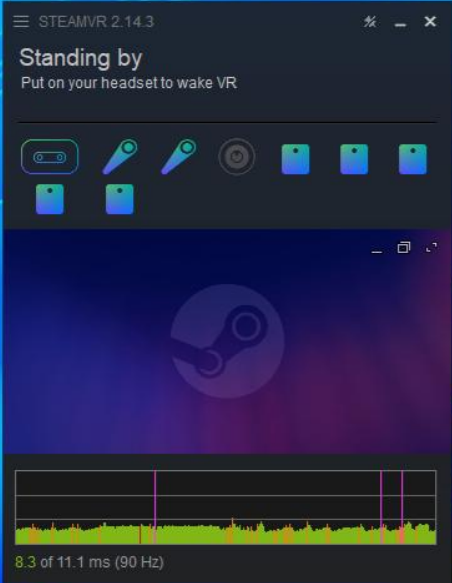


Step B.03 [PC] KAT Industry 3.1.9



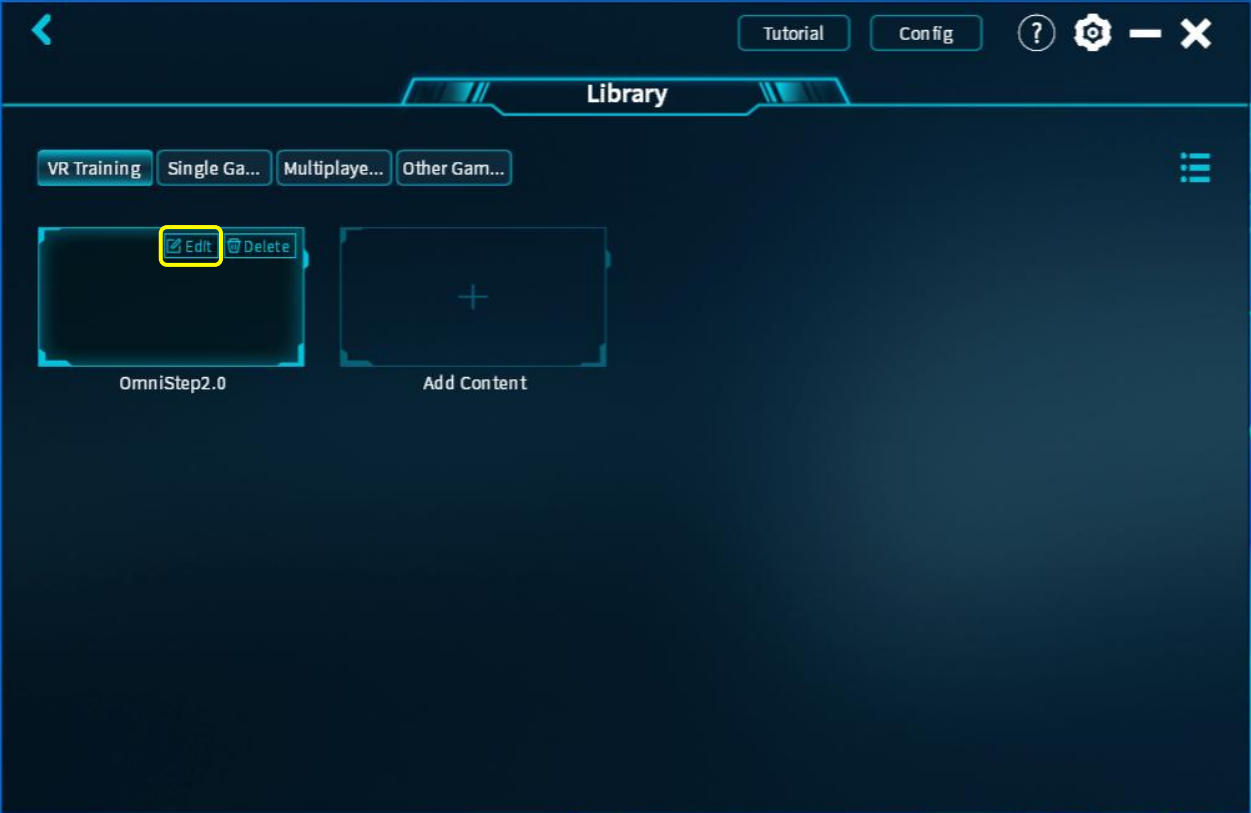


Step B.04 [PC] KAT Industry 3.1.9

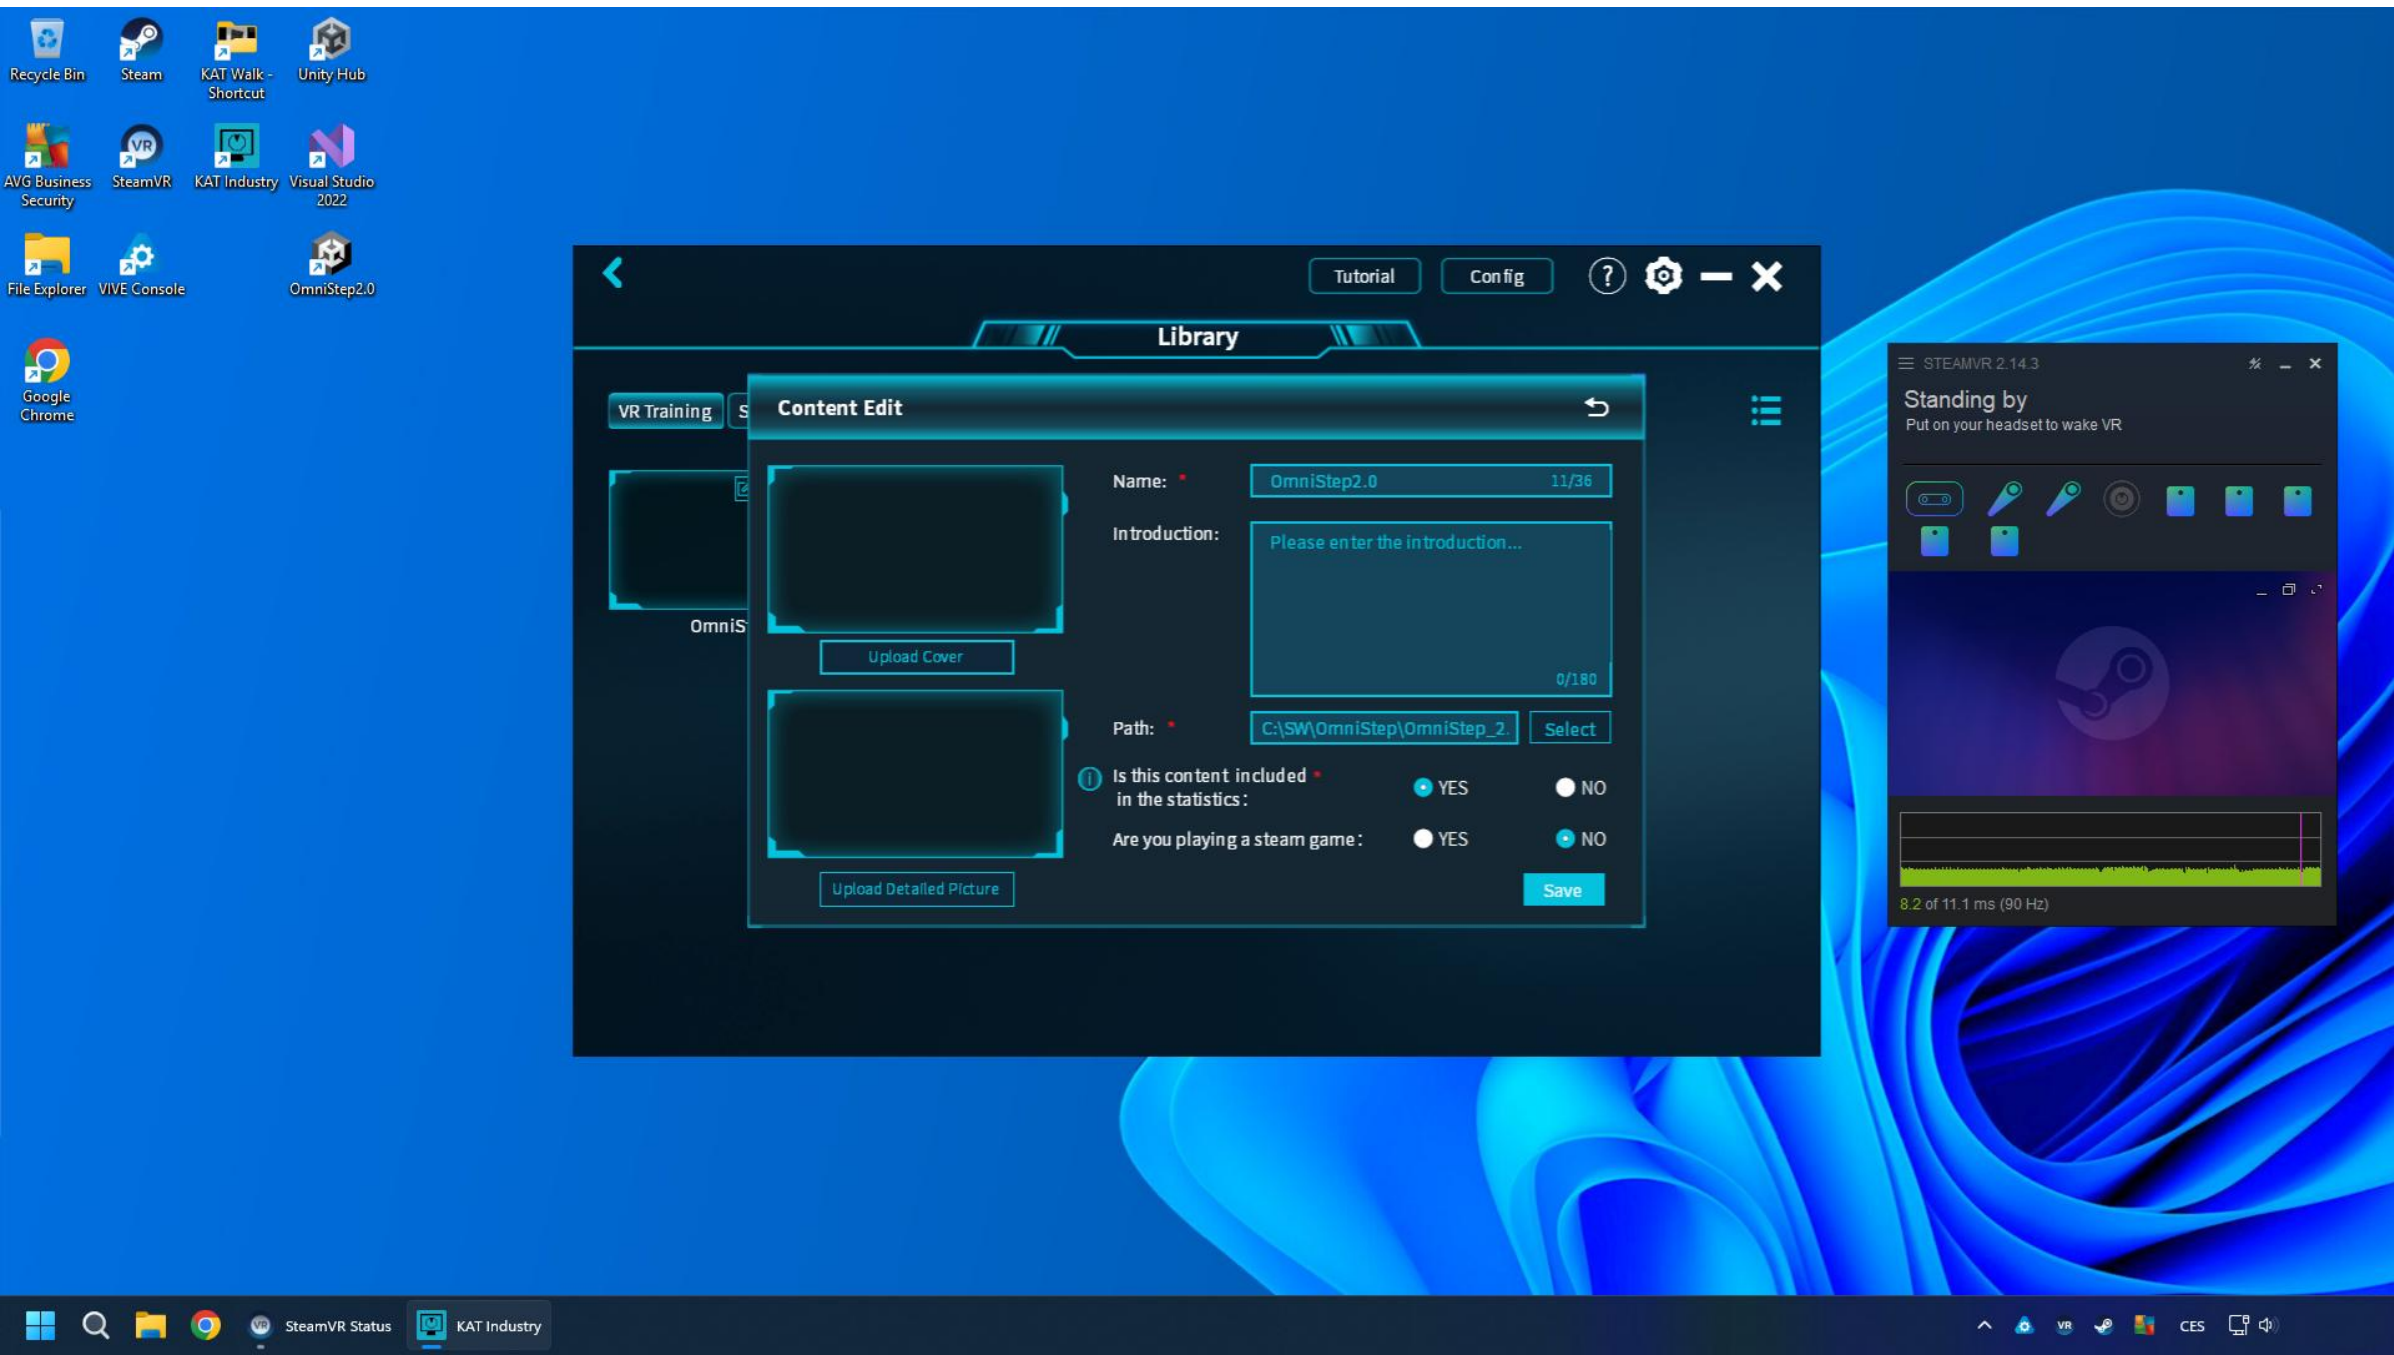

Step B.05 [PC] KAT Industry 3.1.9

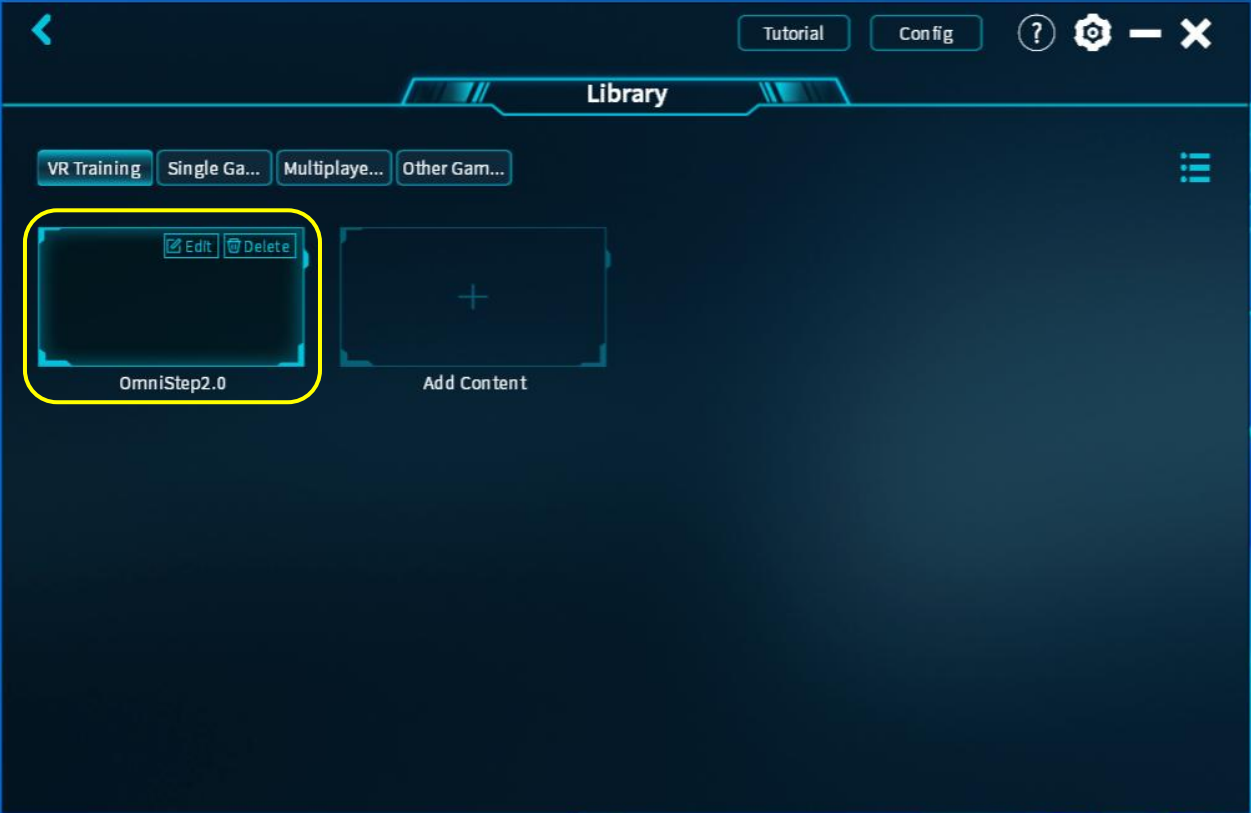

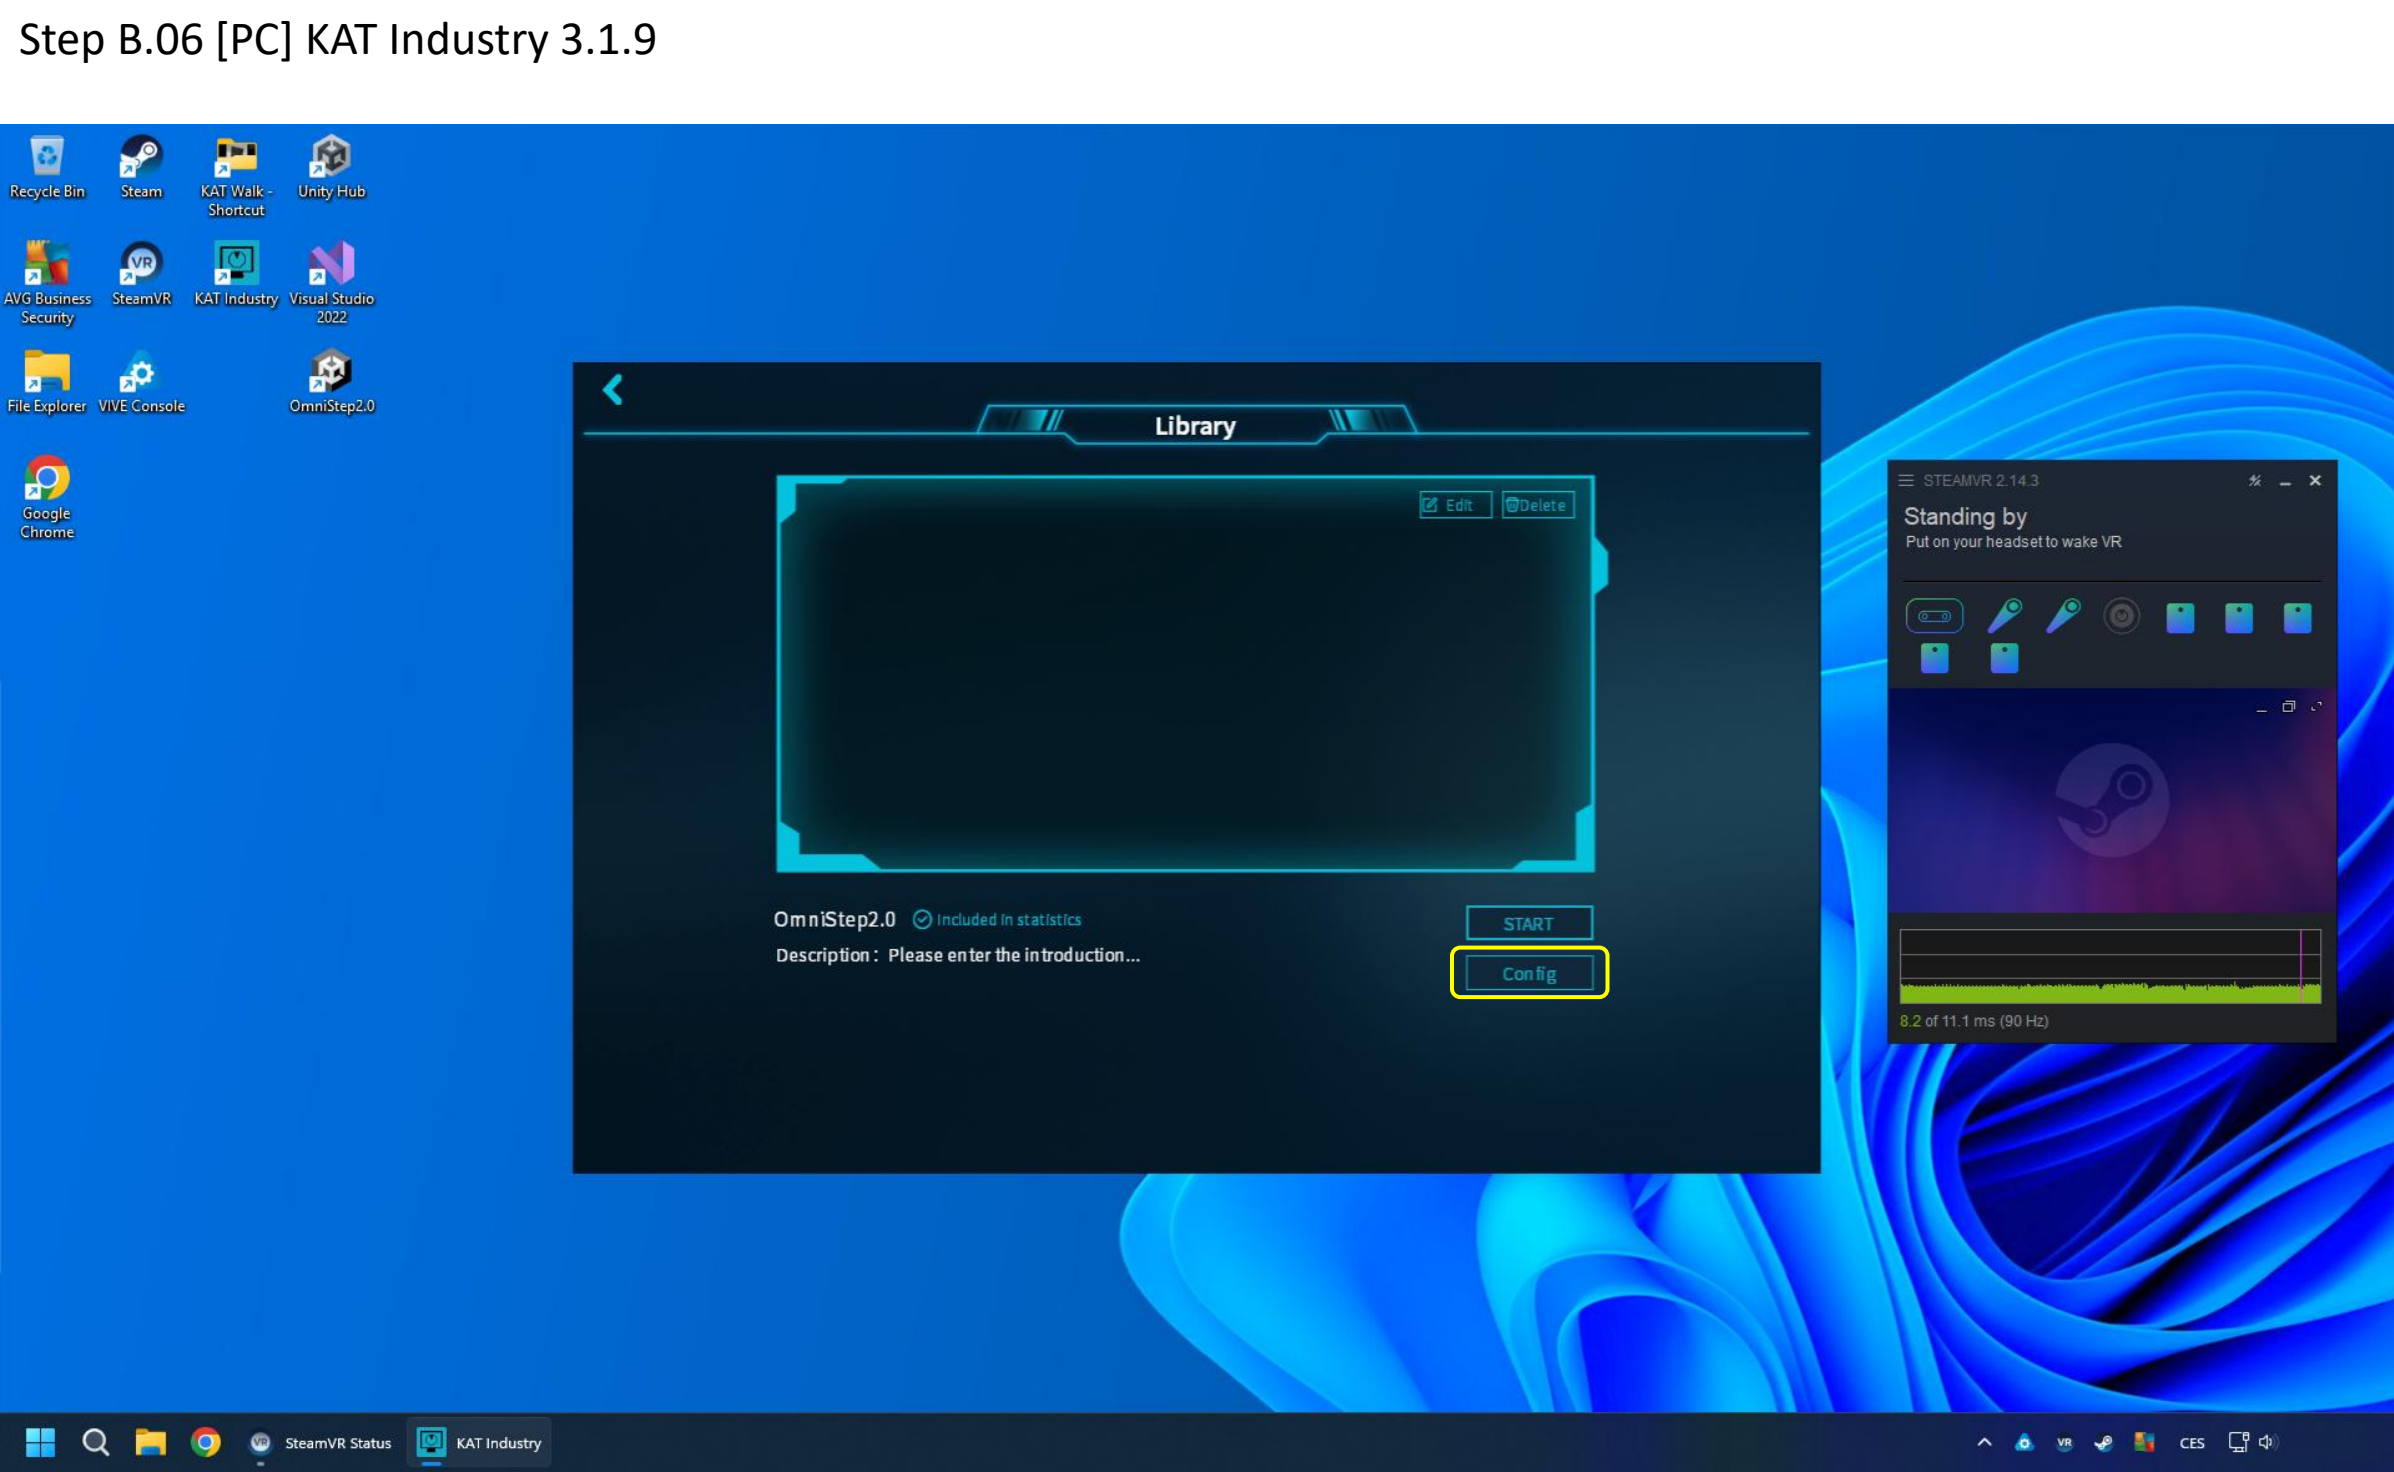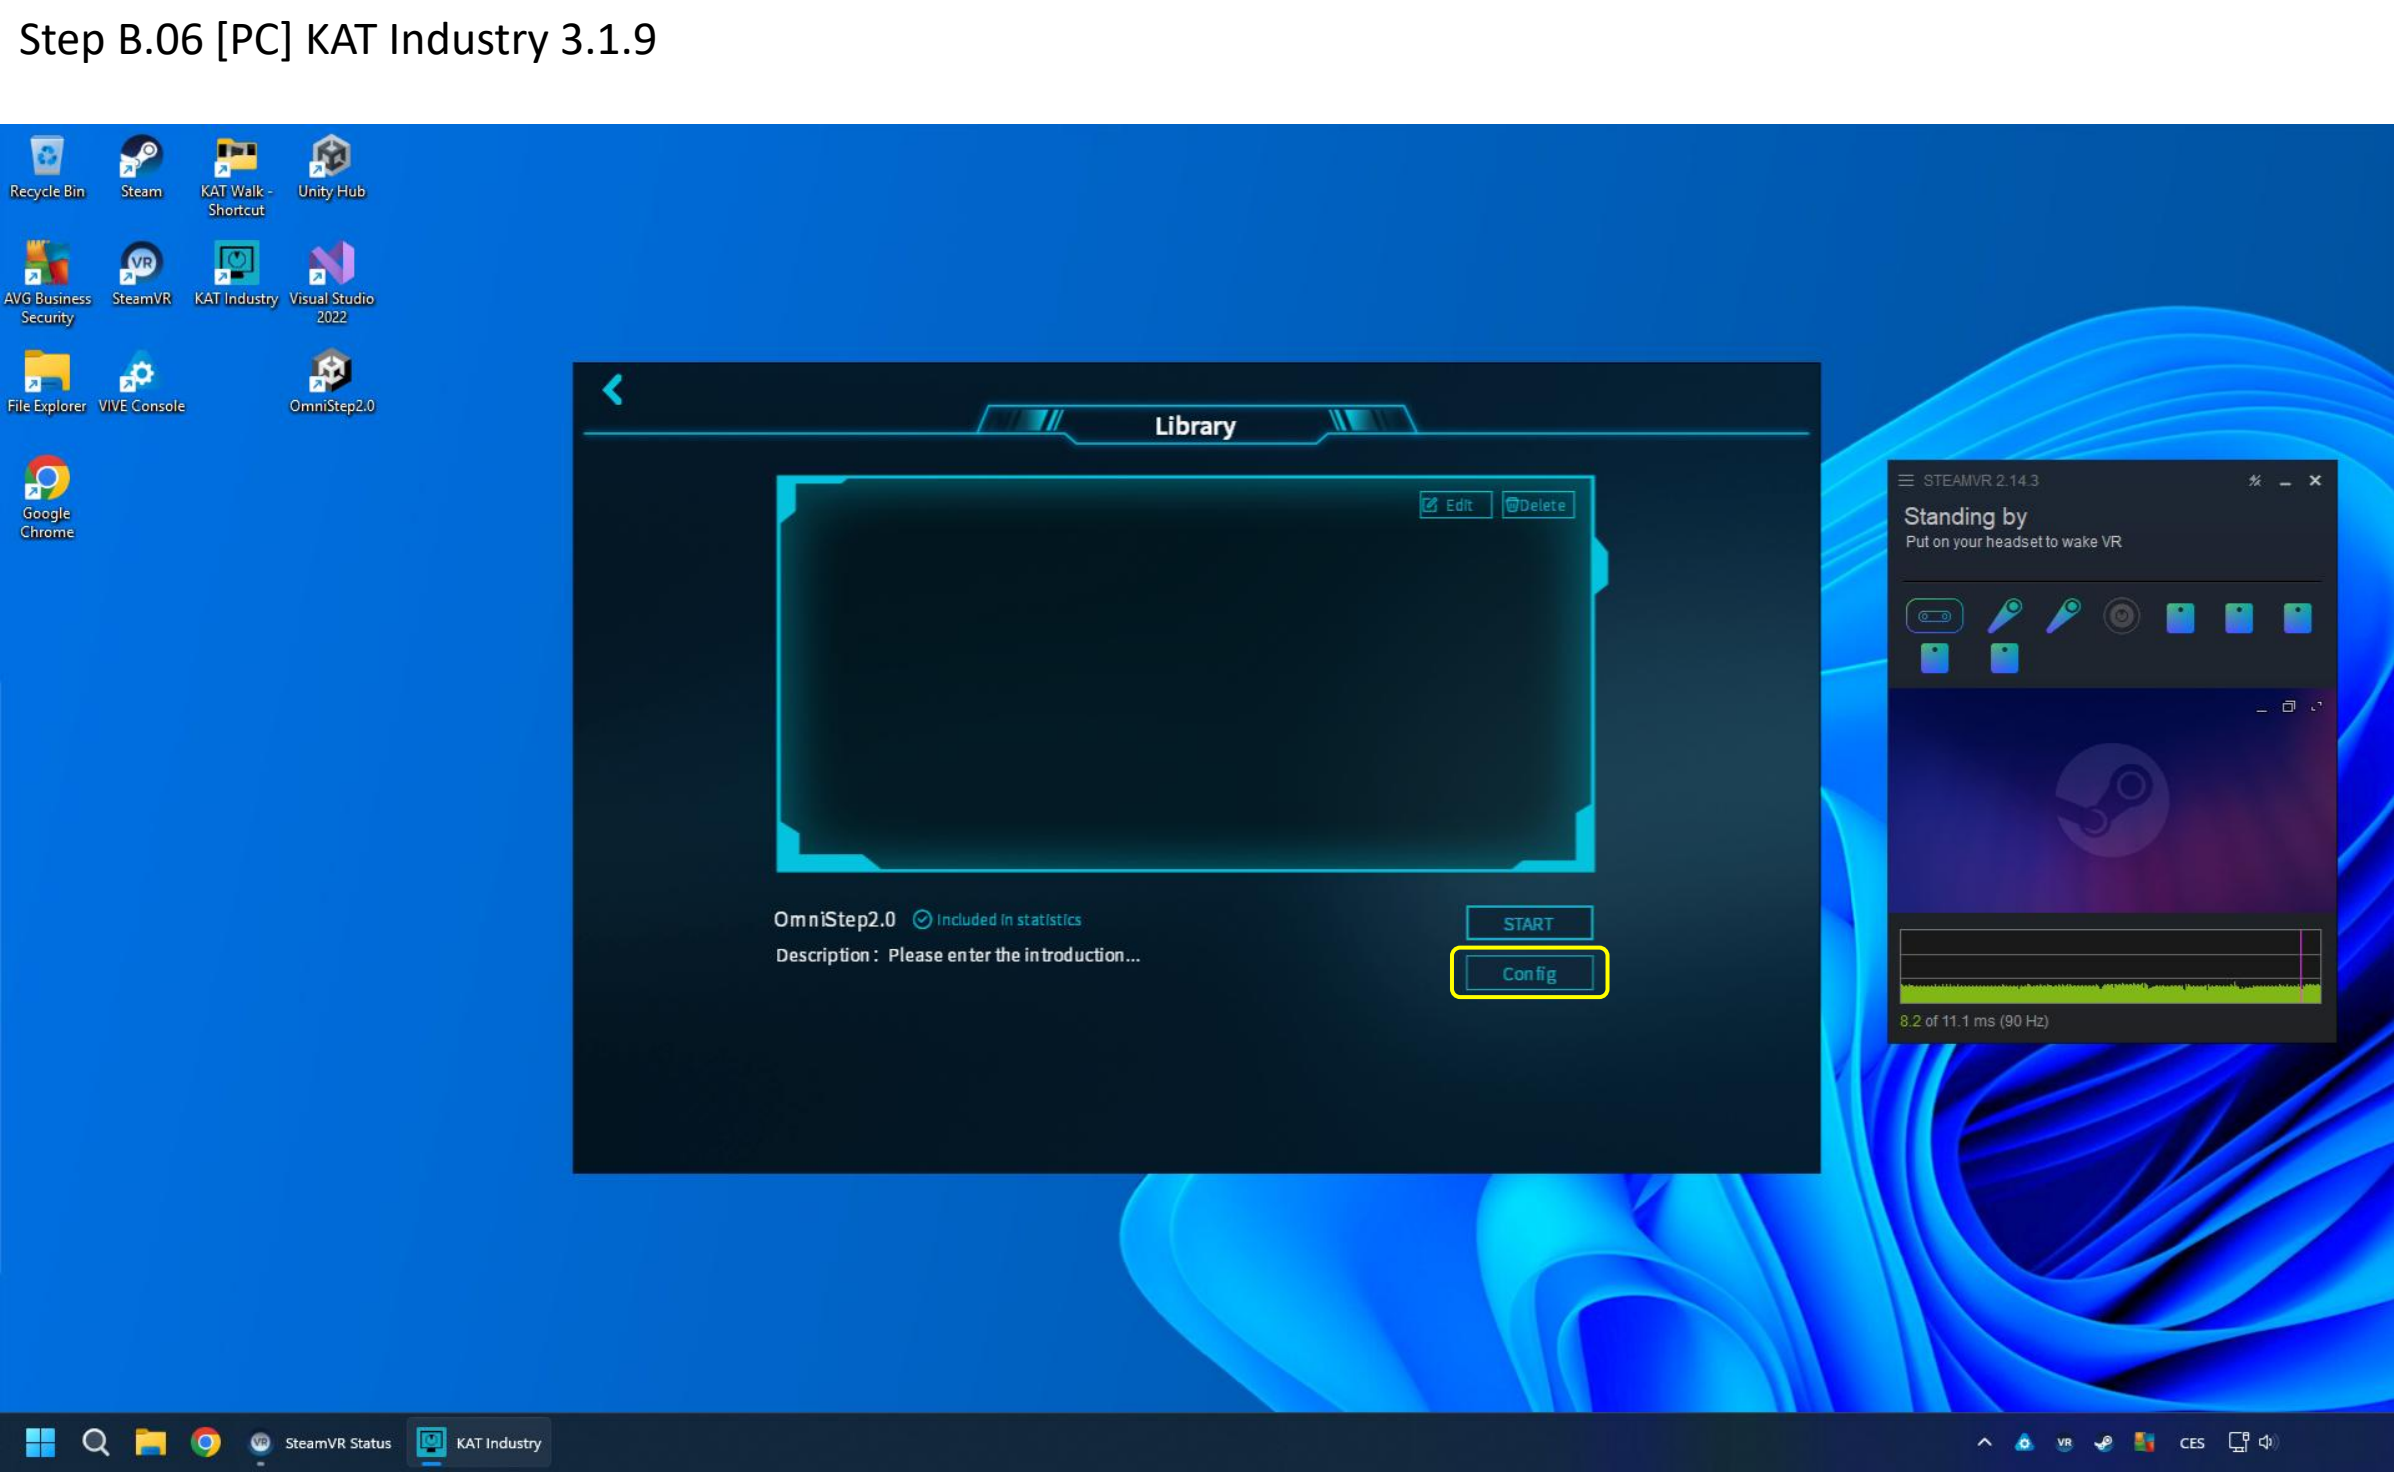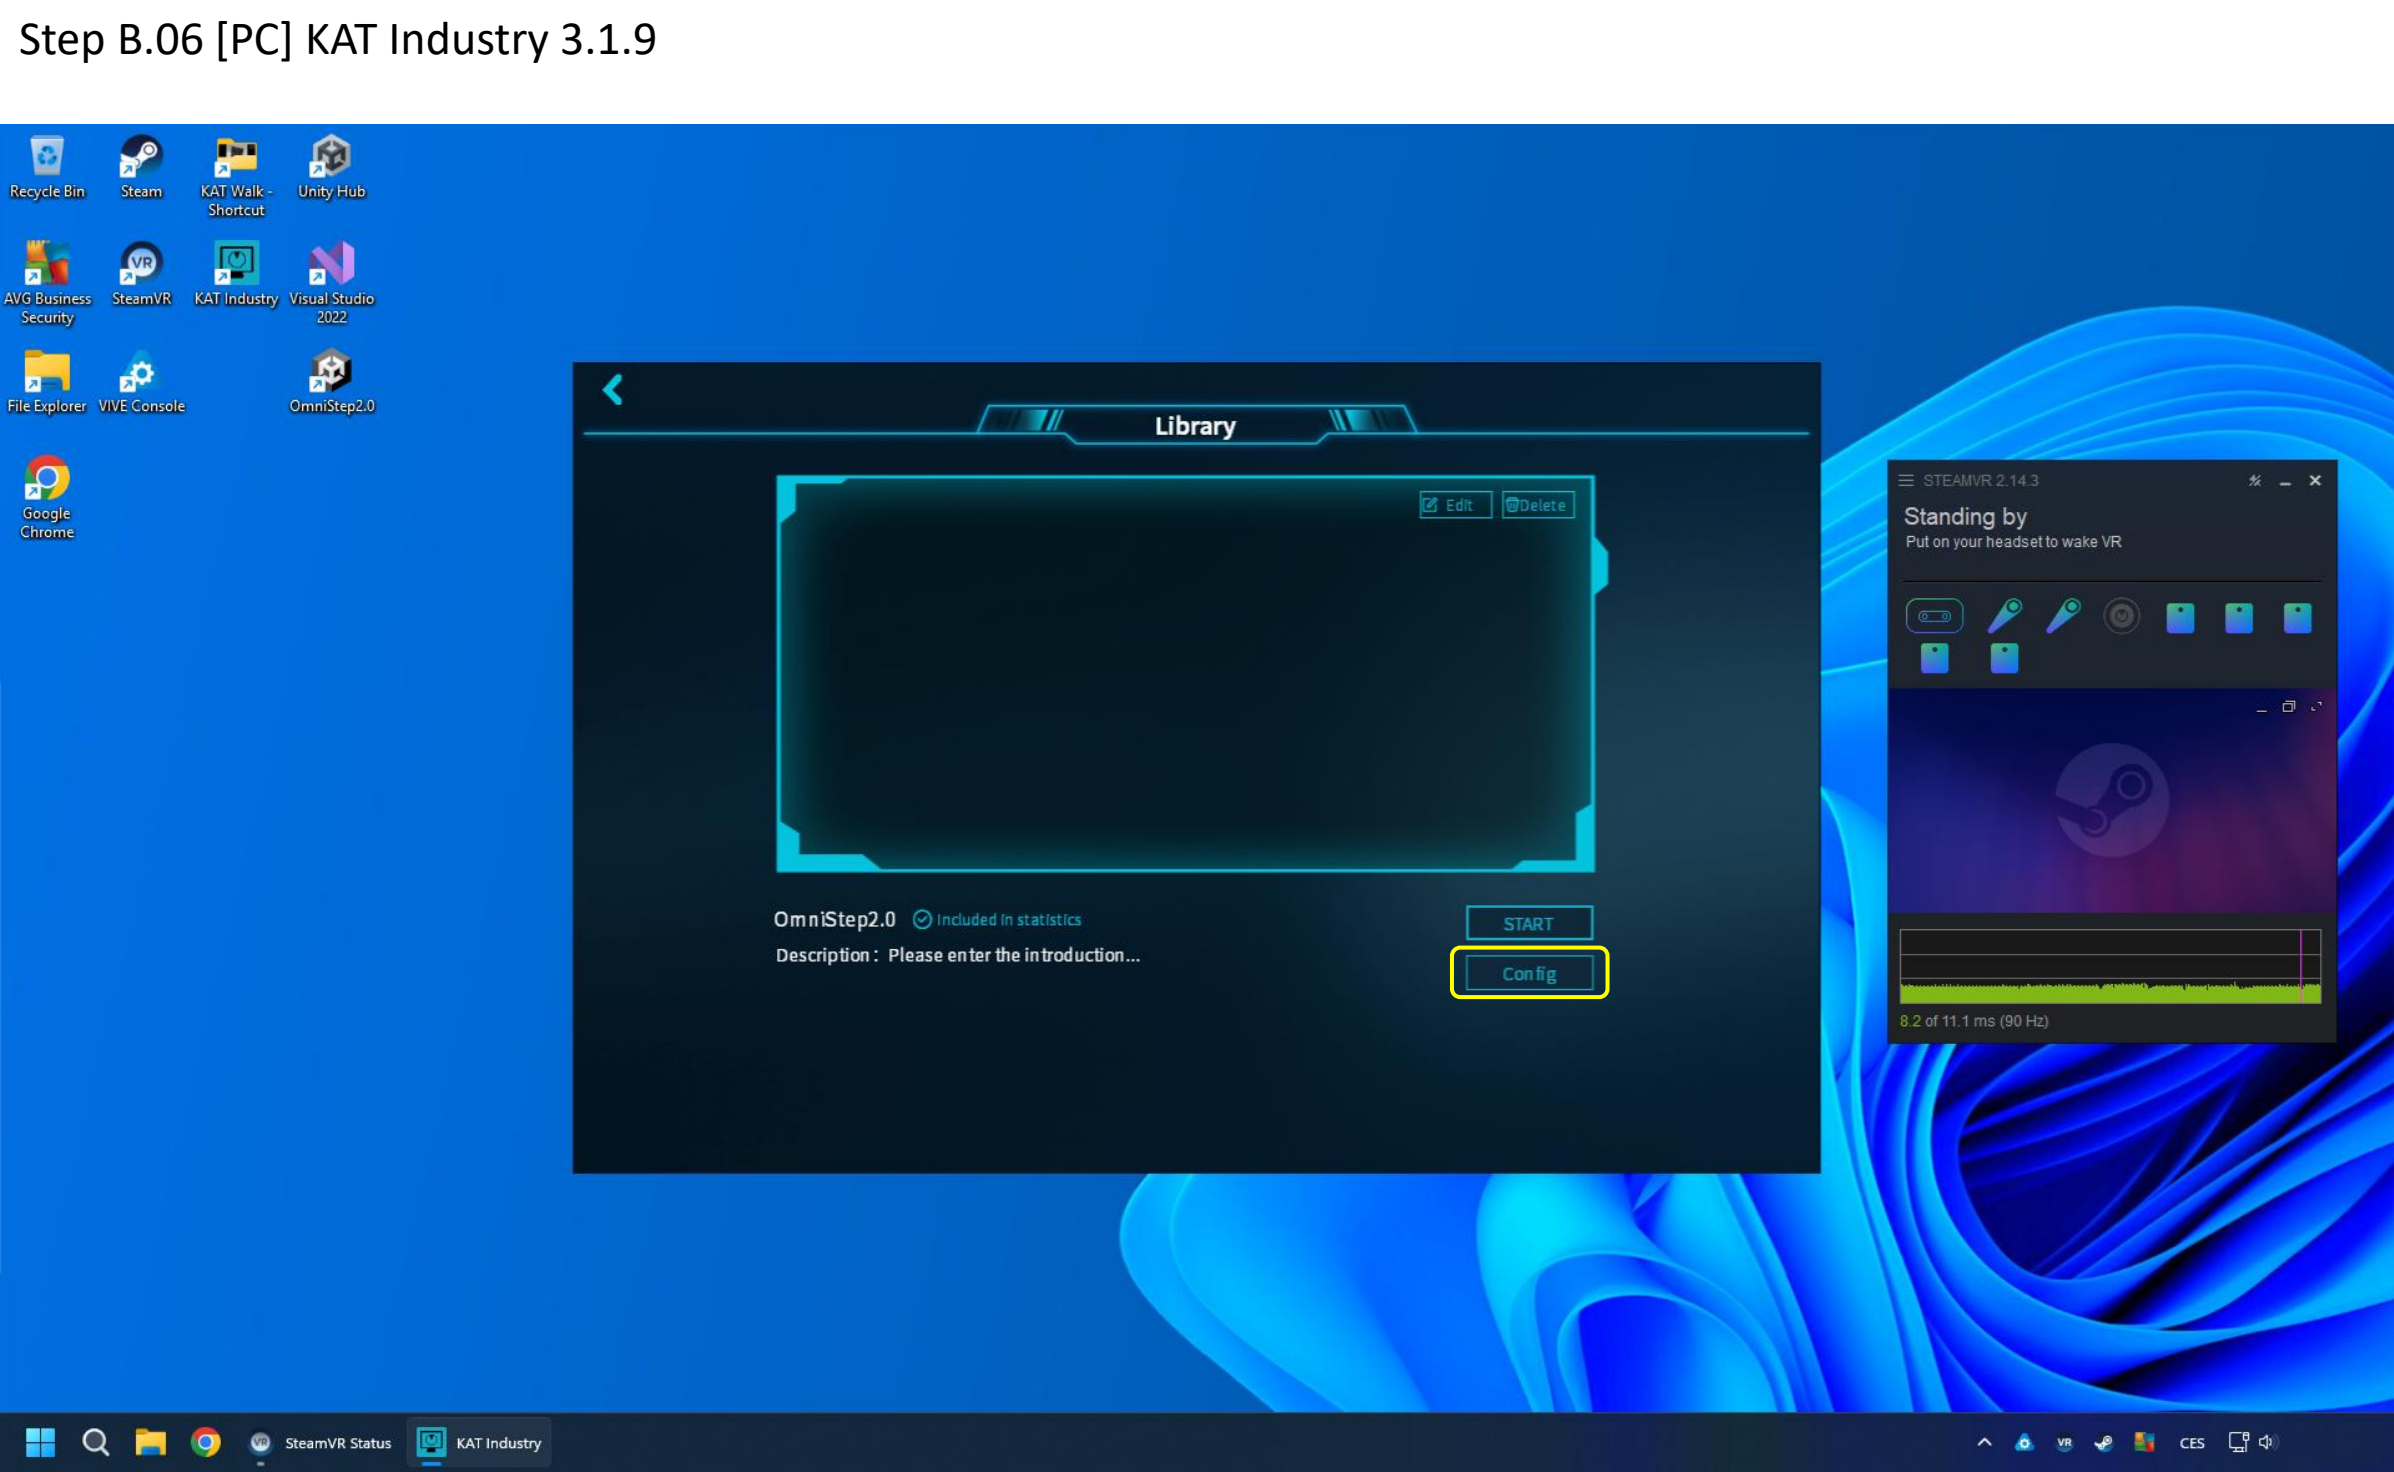



[OmniStep2.0] Controller

Connection Status

Walk mini S

Connected

Device

Initialized

Steam VR

Connected

Real-Time Data

HMD Angle	329°
Body Angle	329°
Walking Speed	0,00
Movement Detected	False
Moving Forward	True

Calibration

Parameter Setting

Walking Speed

Default

—

5

+

MINMAX

Walking Trigger Accuracy

Default

—

5

+

FluencyHigh Filtering


Both Trigger Calibration

ONOFF


Other Functions




Step B.08 [PC] KAT Industry 3.1.9

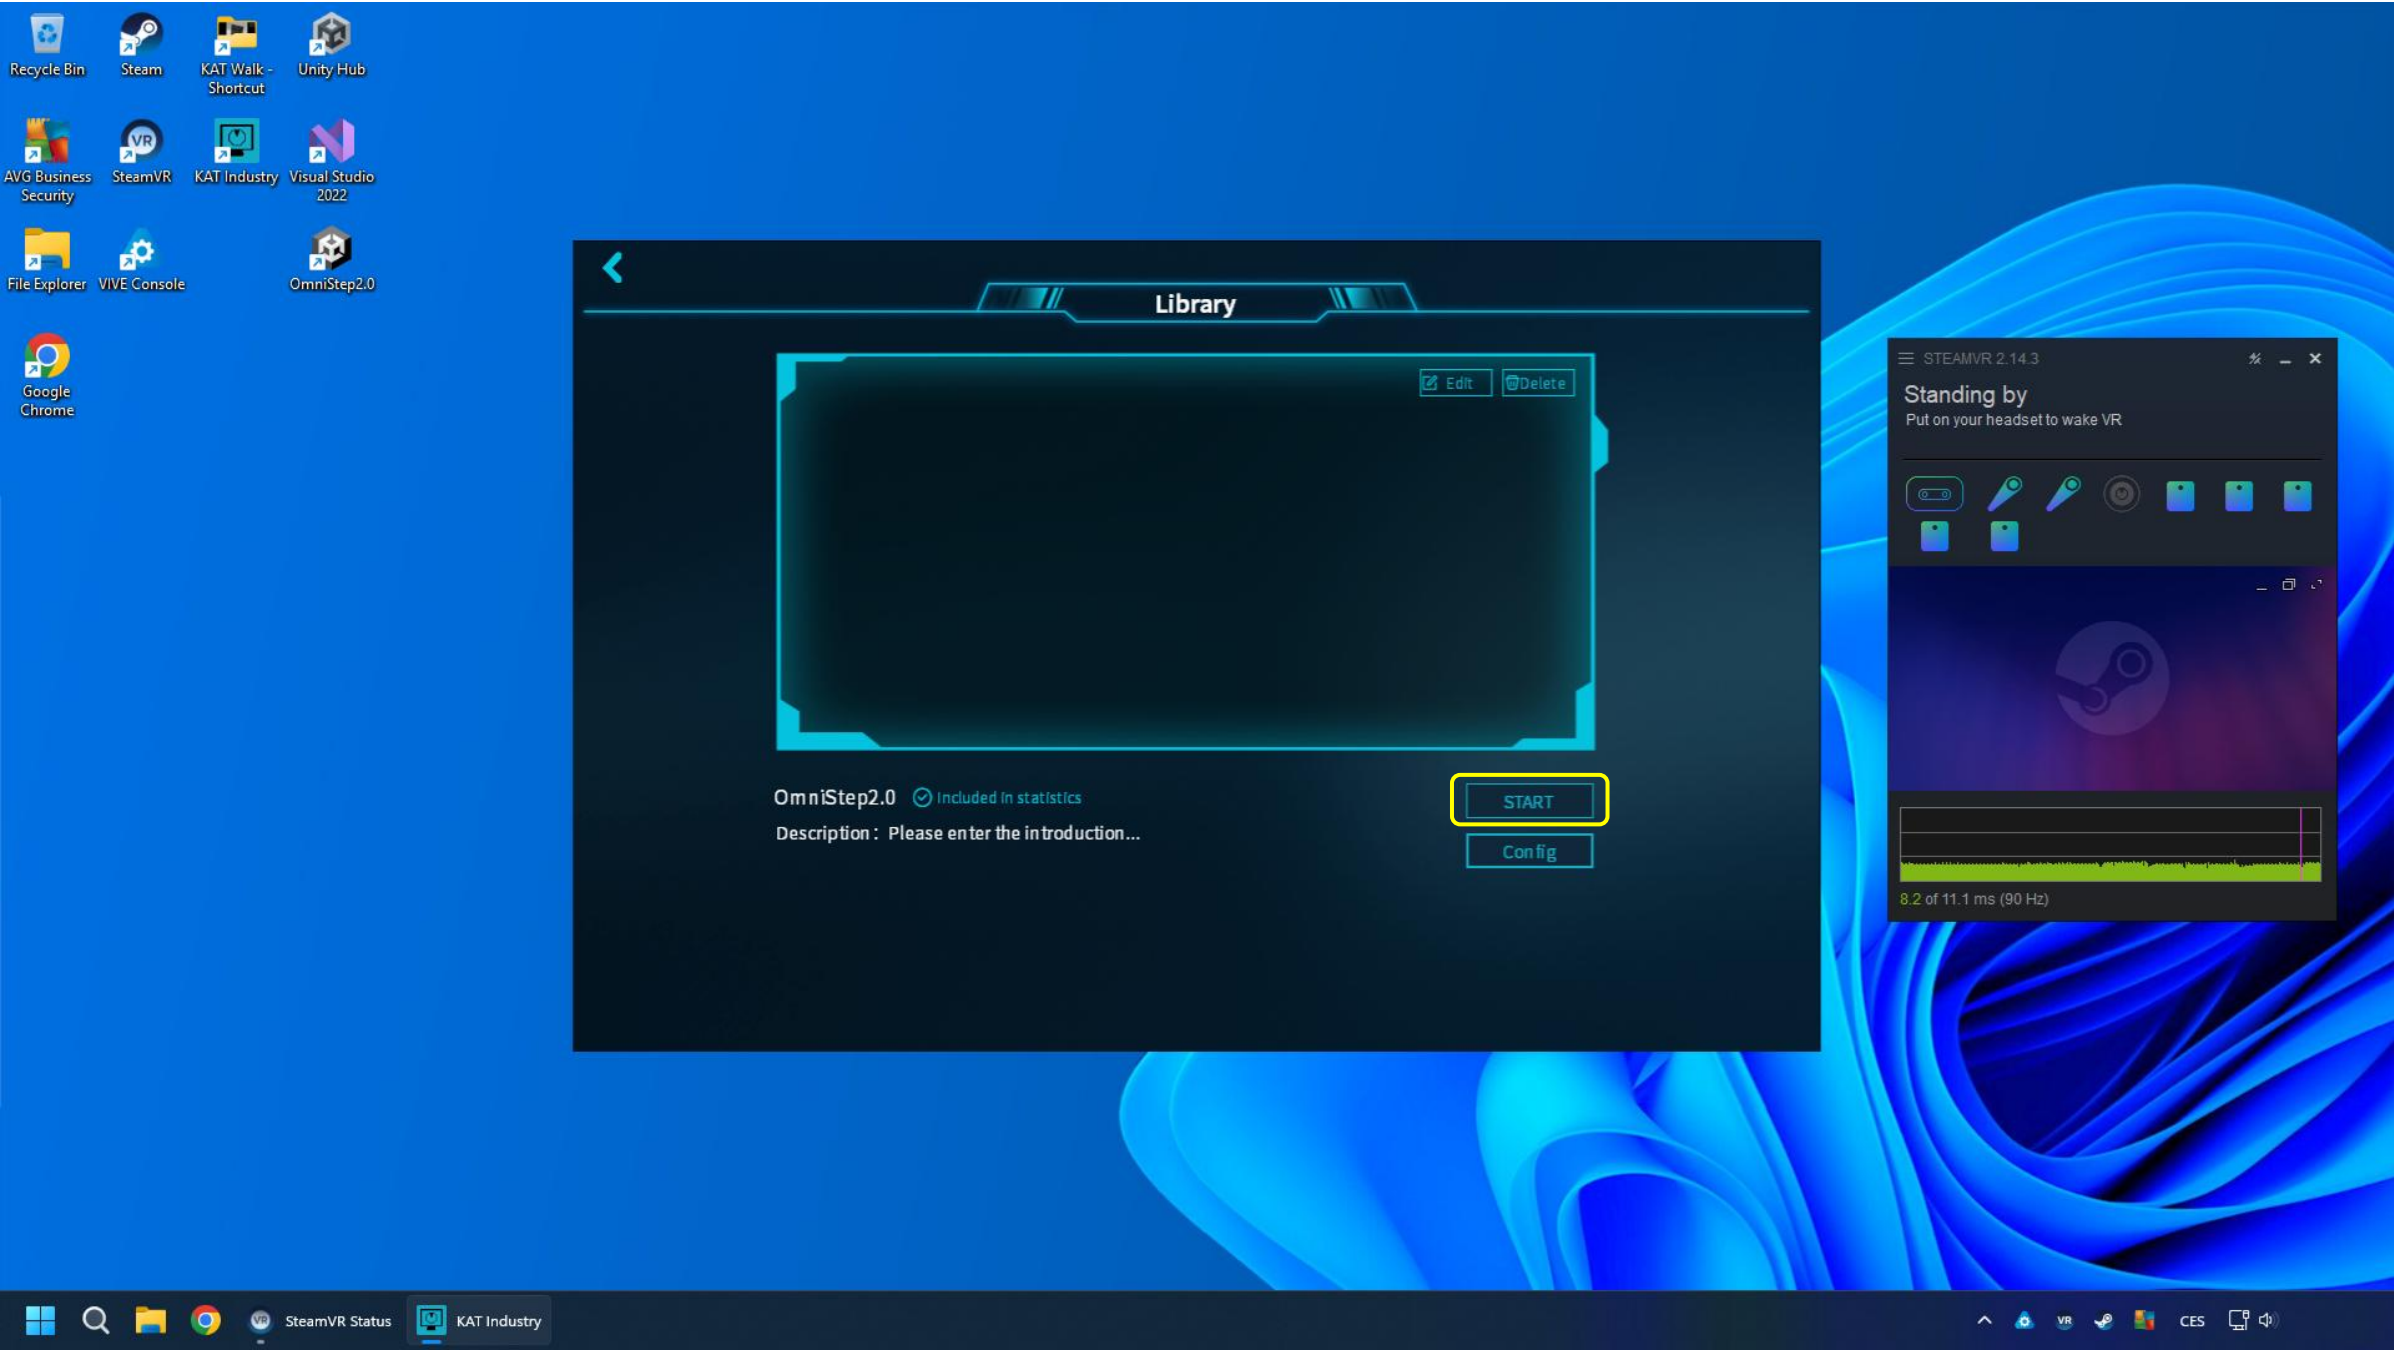

Step C.01 [PC] OmniStep 2.0 admin menu on PC monitor

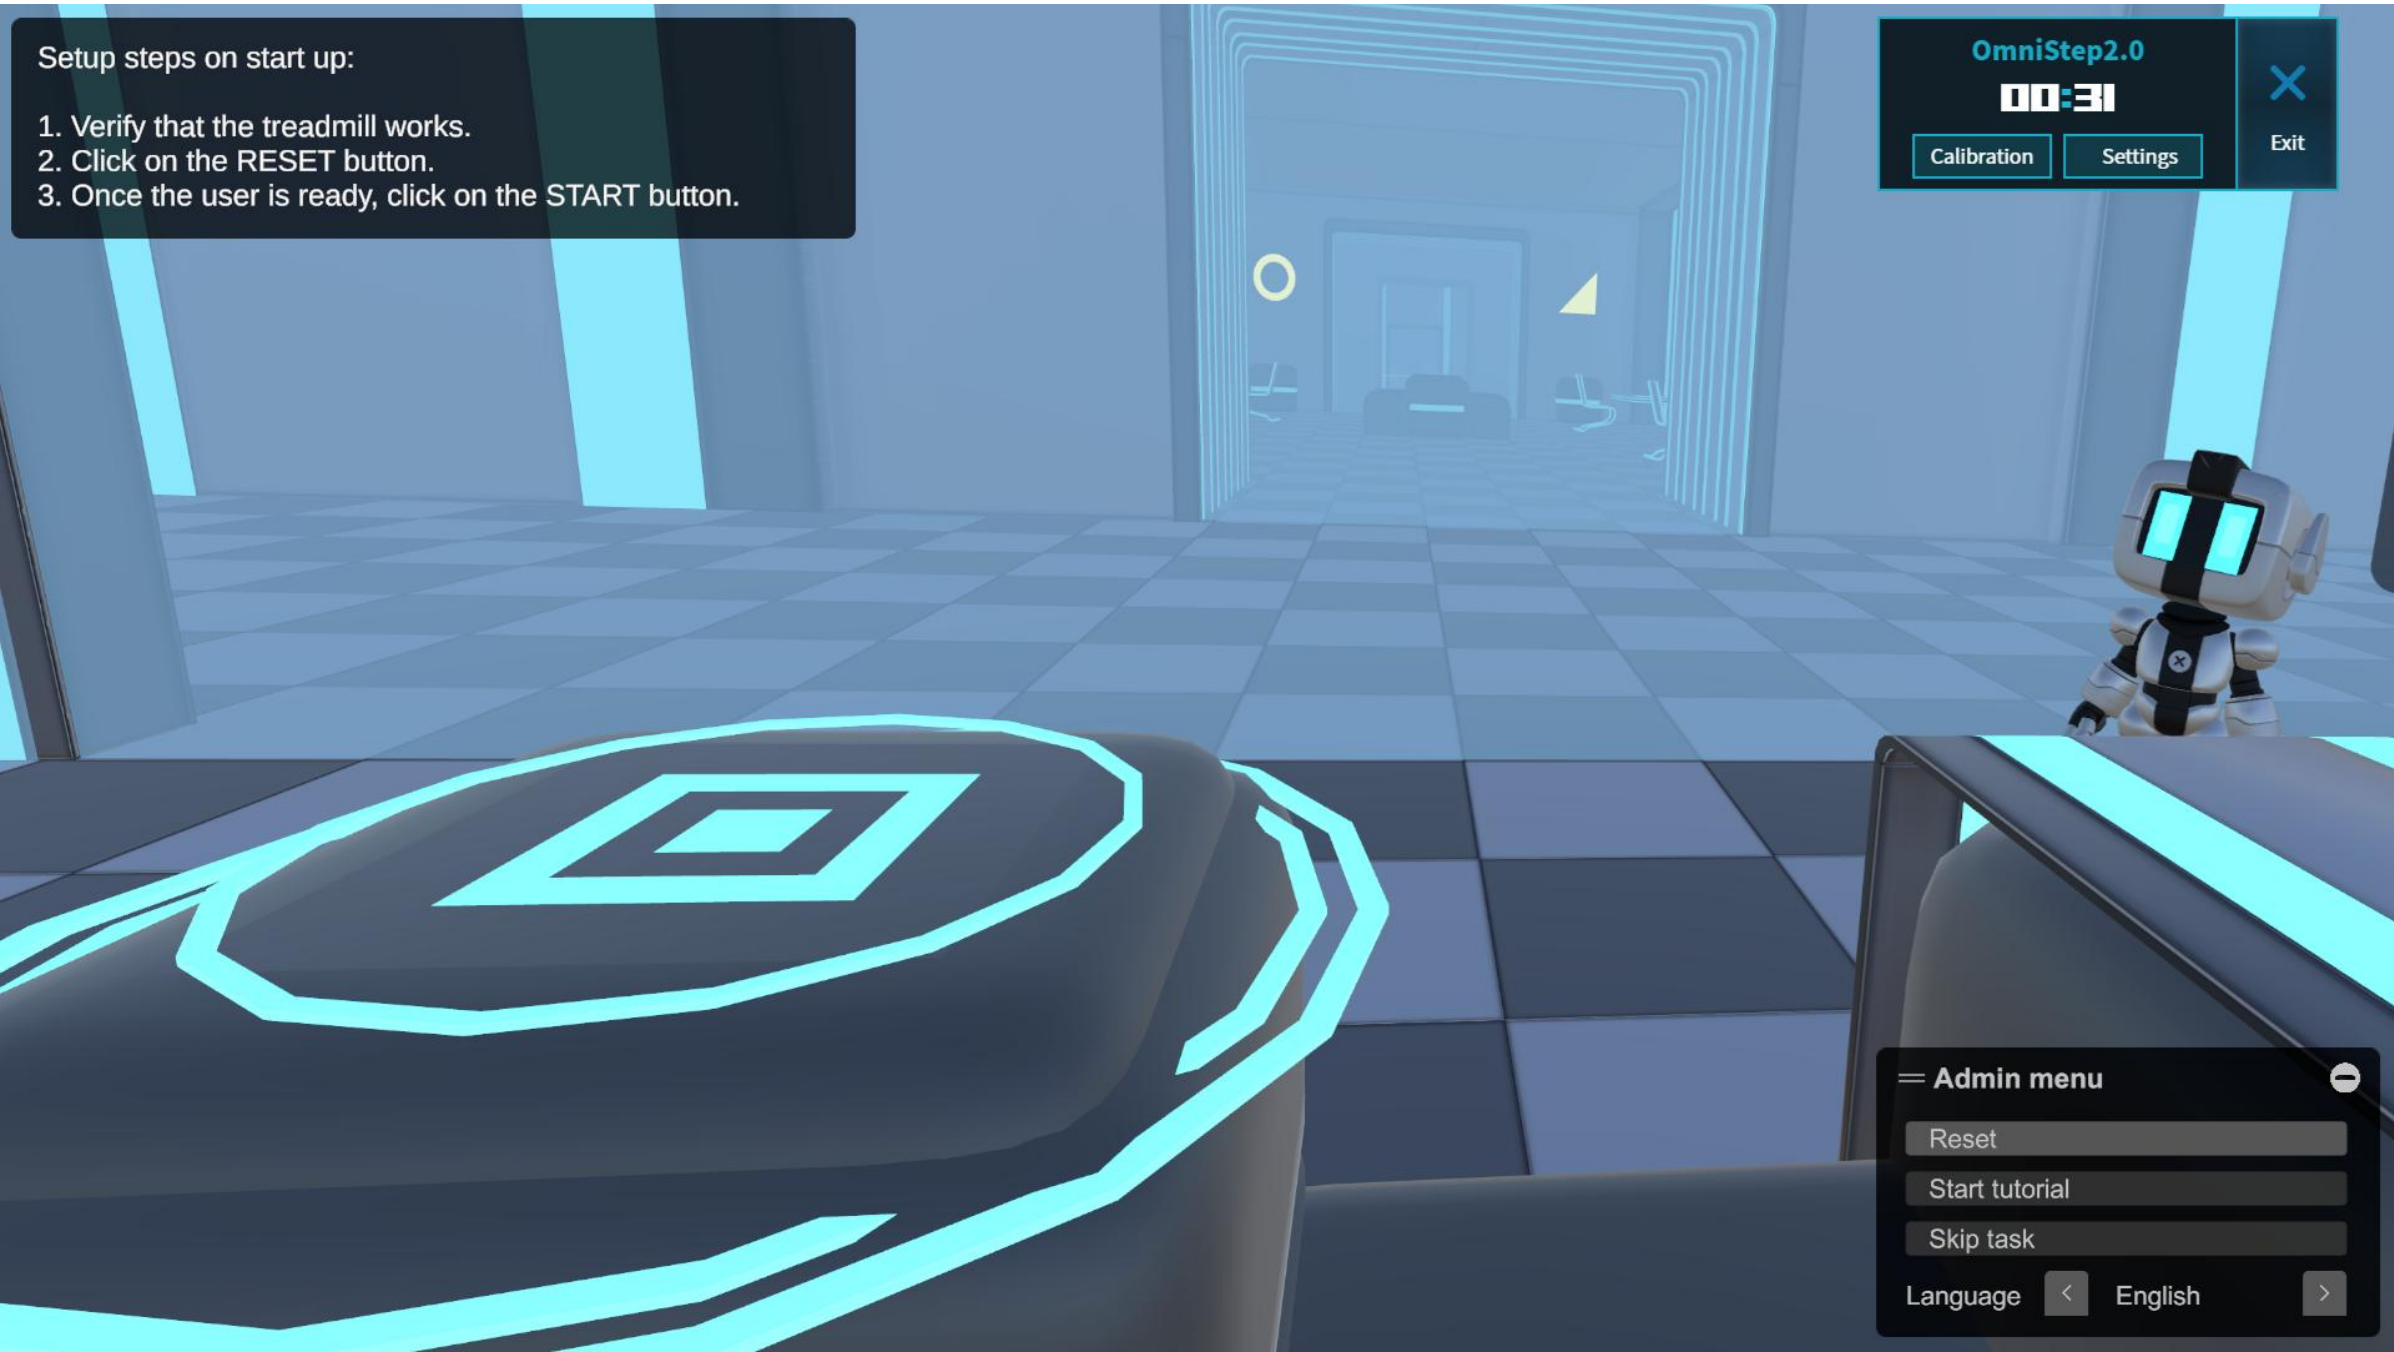

Step C.02 [HMD] OmniStep 2.0 admin menu in VR headset (after pressing 'Menu button' above Trackpad)

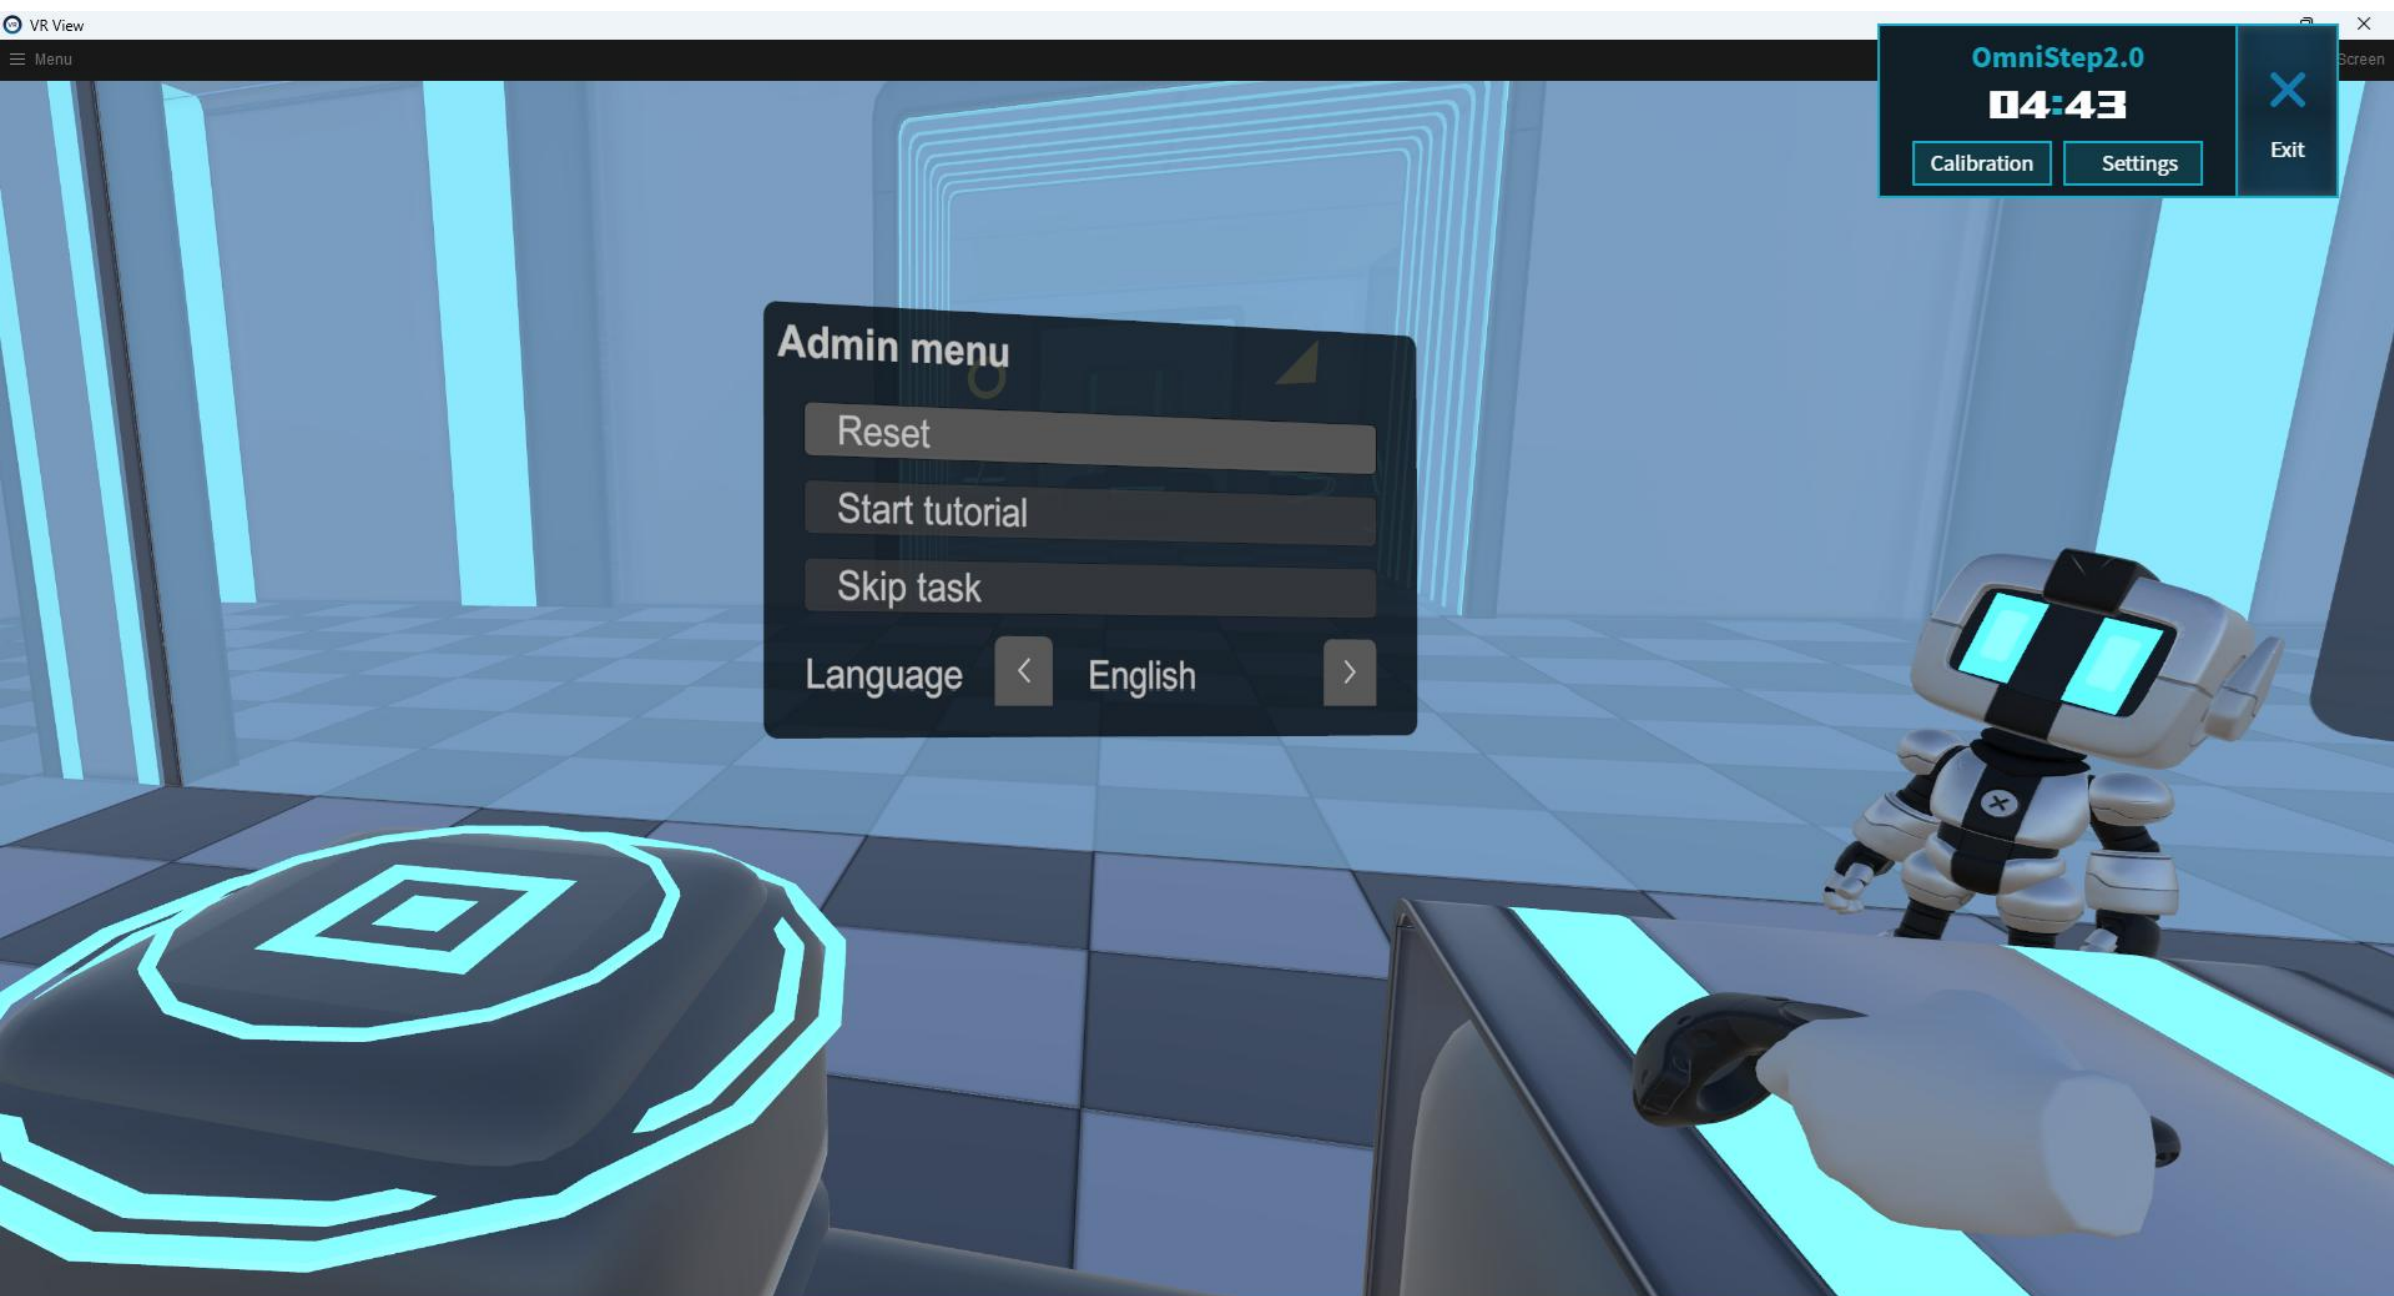

Step C.03 [HMD] KAT Industry 3.1.9 **calibration menu** (after pressing 'System button' below Trackpad)

