BerxelTools Introductions

Revision History

Version	Date	Revision Content	Author
2.0.163	2025/7/2	Initial version	Allen

Contents

1. Introduction 4

1.1. BerxelTools Description 4

1.2. System Compatibility 4

2. BerxelTools Functional Usage Instructions 4

2.1. Open Device 5

2.2. Open/Close Data Stream 5

2.3. Depth Function Settings 6

2.4. Color Function Settings 7

2.5. Registration Function Settings 8

2.6. Save Image Function Settings 9

2.7. 3D Point Cloud Display 10

1. Introduction

1.1. BerxelTools Description

BerxelTools is a tool developed by Berxel to showcase the performance of it is self-developed 3D camera. It includes functions such as turning the device on/off, turning the data stream on/off, displaying 3D point clouds, saving images, and setting camera parameters.

1.2. System Compatibility

- Windows 7/Win10(x86/x64)
- USB 2.0，current 2A
- RAM 4G or above
- Processor frequency 2.2GHz or above

2. BerxelTools Functional Usage Instructions

The BerxelTools.exe file is located in the Berxel SDK installation package, specifically in the \ Berxel \ Berxel SDK\ Samples \ bin subdirectory. A shortcut will also be created on the desktop

. Double-click BerxelTools to run it, and the following interface will appear：

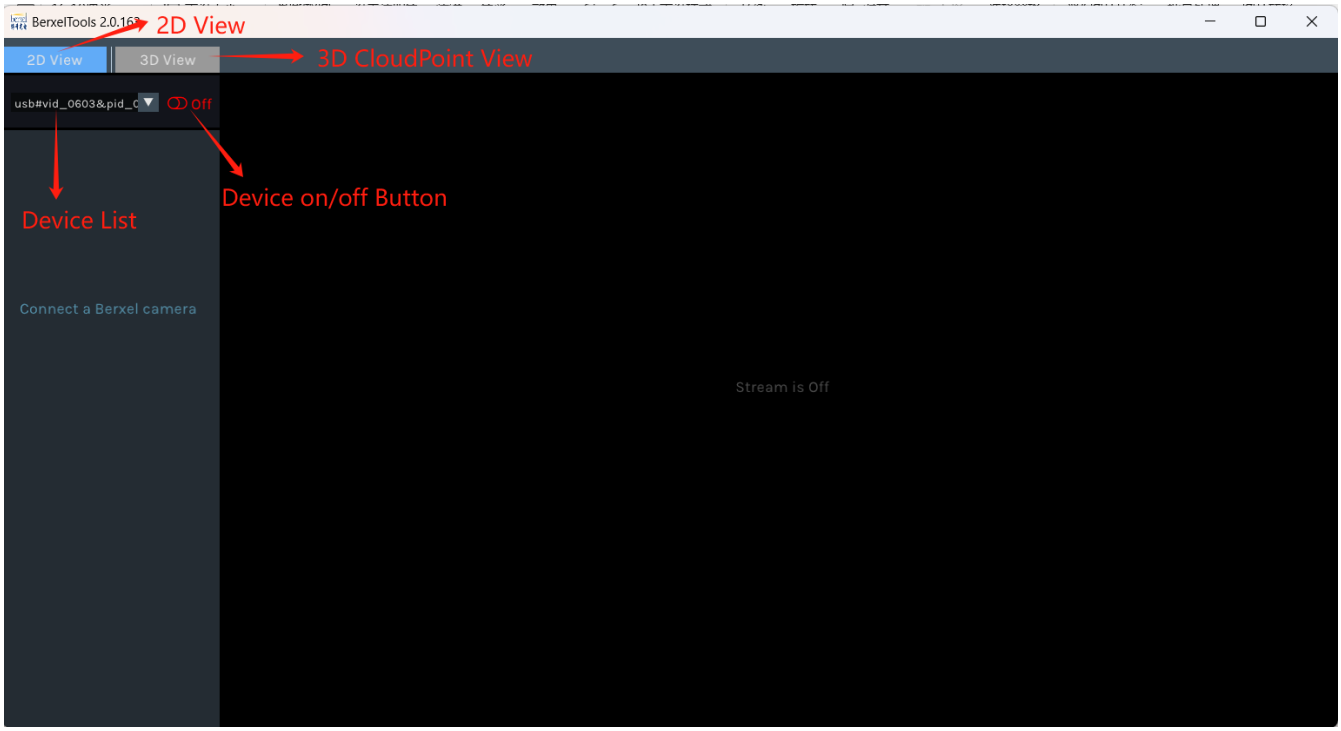

2.1. Open Device

After clicking the device switch button, the device will successfully open and display shows below

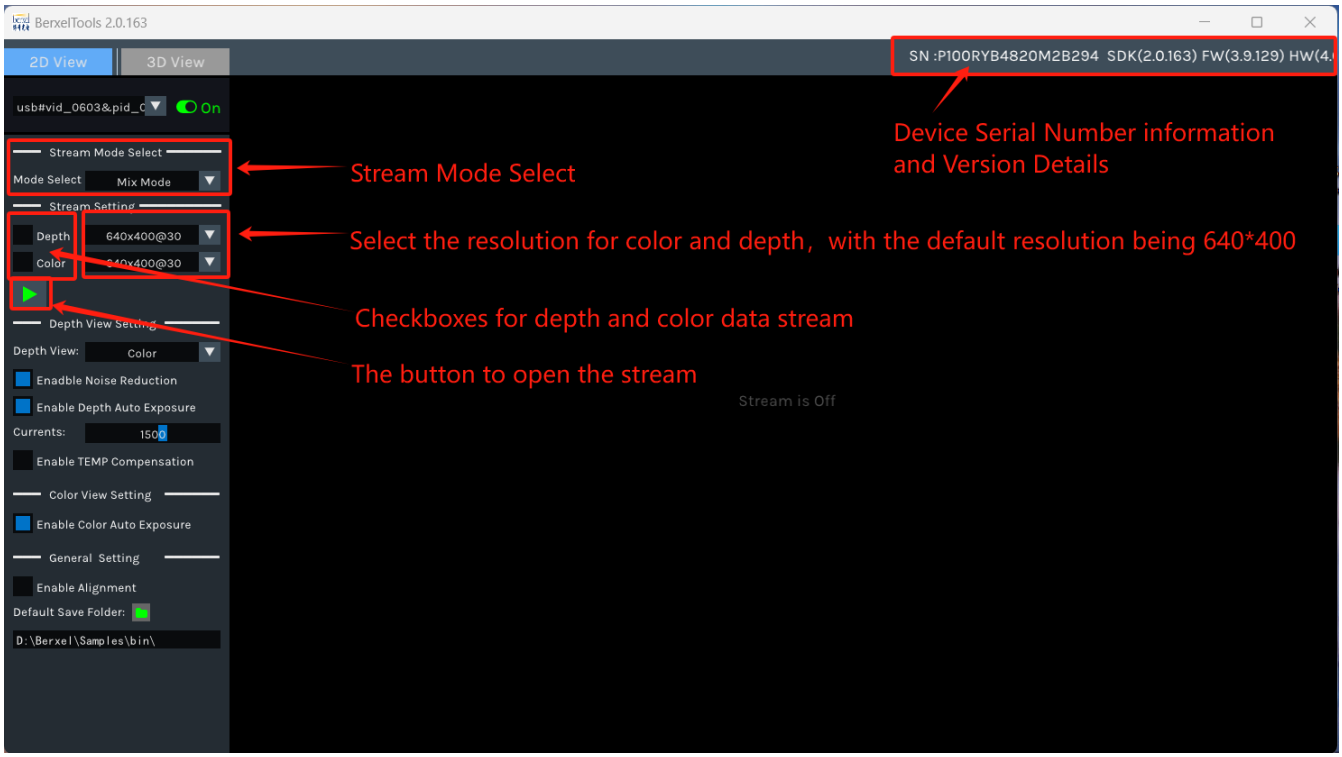

2.2. Open/Close Data Stream

After clicking the data stream switch button, the data stream will successfully open and display as follows

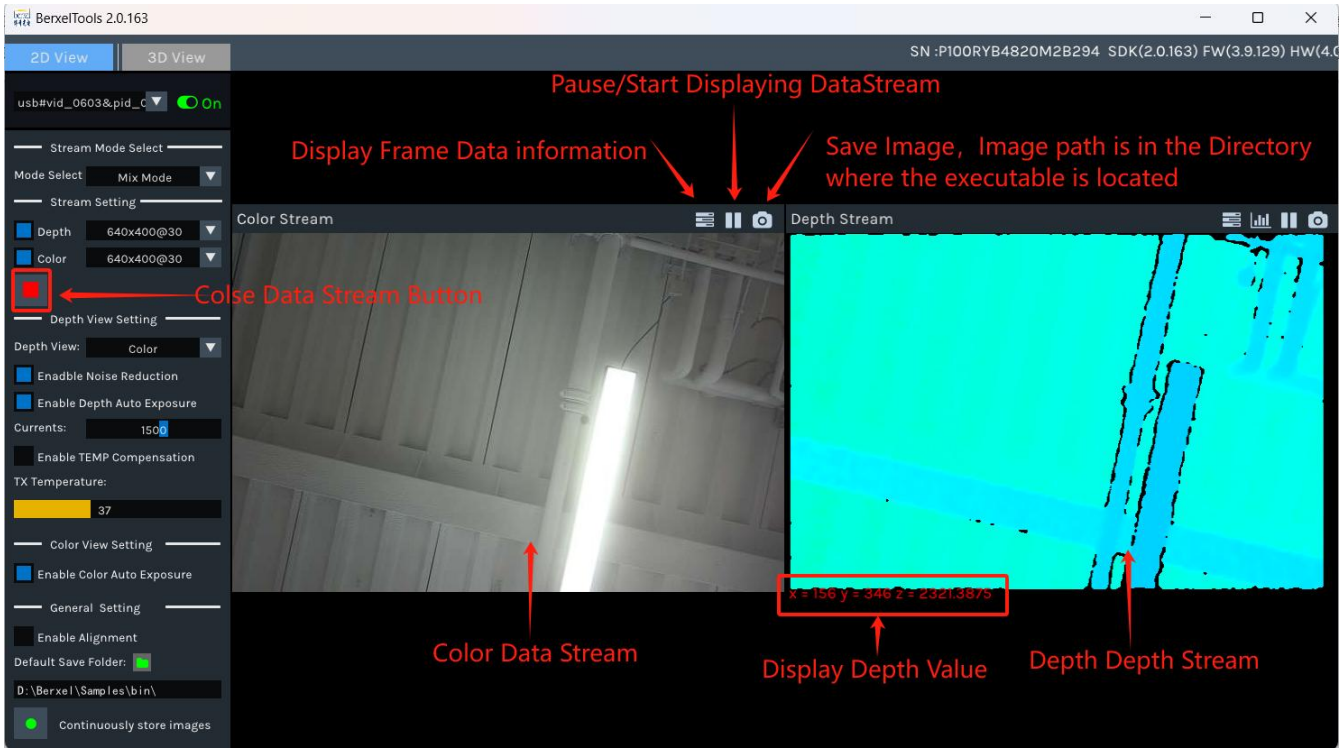

2.3. Depth Function Settings

The depth function settings mainly include.

1. Depth map display methods (color display, grayscale display, histogram display).

2. Noise reduction function switch, which is enabled by default.

3. Automatic exposure function switch, which is enabled by default. When the automatic exposure function is turned off, you can set the gain and exposure time.

4. Setting the depth exposure time.

5. Setting the gain.

6. Setting the current.

7. Temperature compensation function switch, which is disabled by default and only supported by some devices.

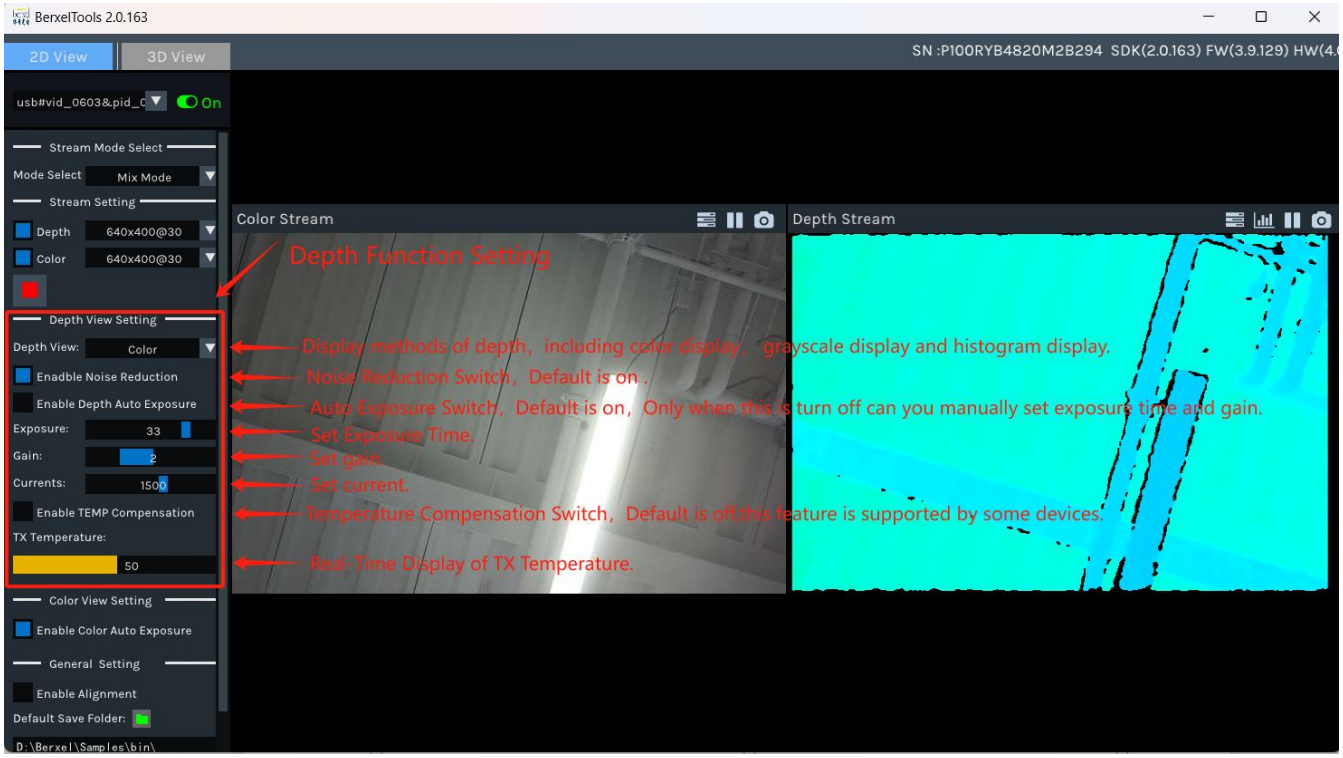

2.4. Color Function Settings

The color function mainly includes

1. Color automatic exposure function, which is enabled by default. Only when this function is turned off can you set the color exposure time and gain.

2. Setting the color exposure time.

3. Setting the color gain.

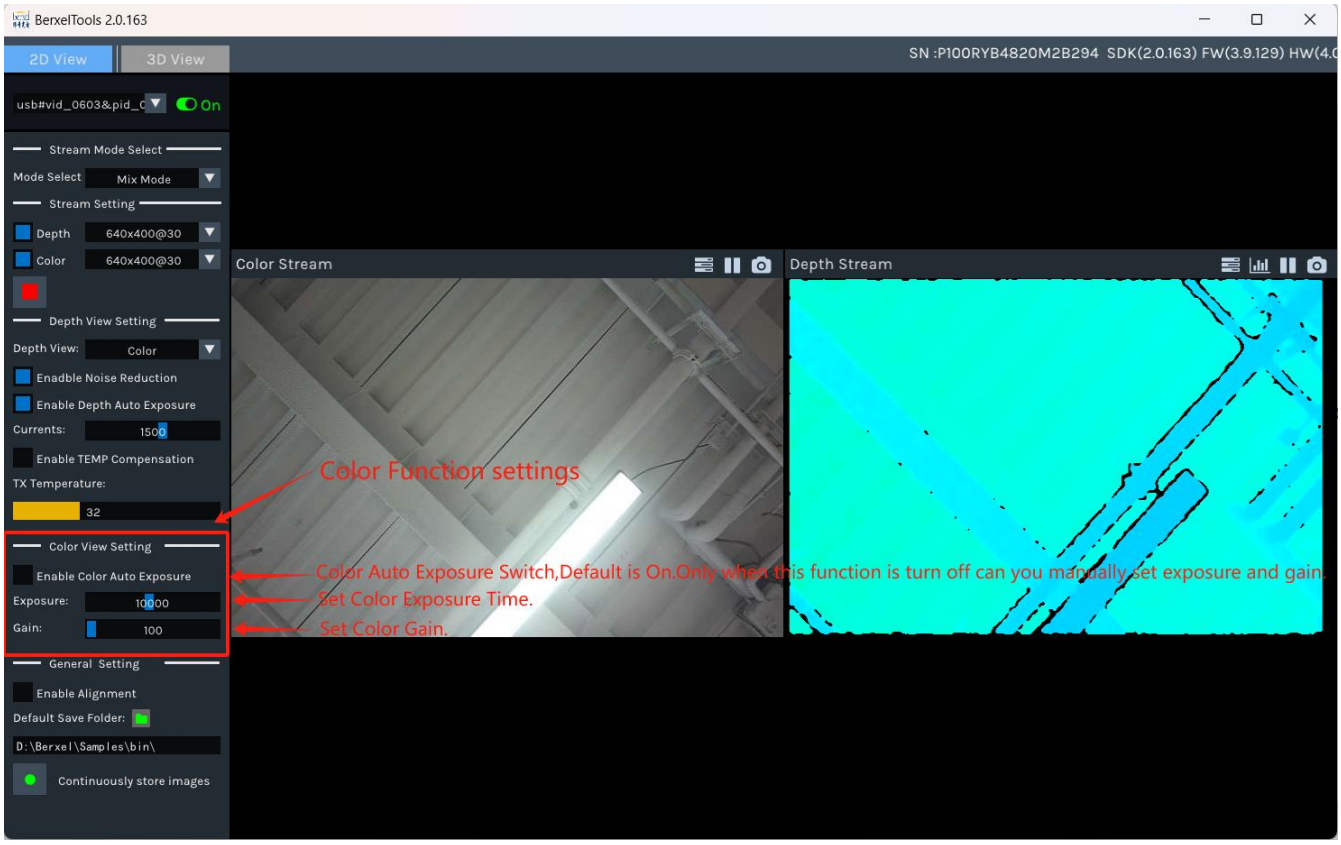

2.5. Registration Function Settings

The registration function is located in GeneralSetting. You can enable the registration function by clicking the Enable Alignment checkbox.

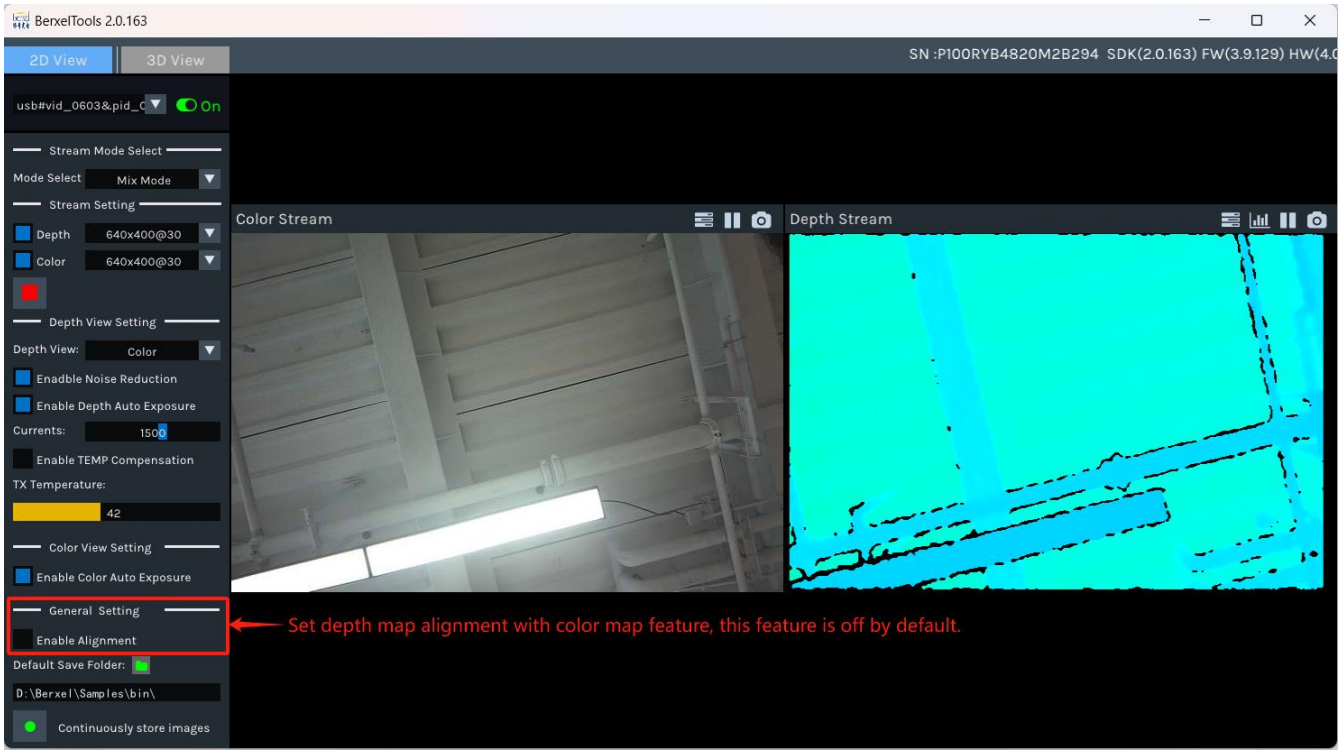

2.6. Save Image Function Settings

1. The save image function includes both continuous and single image saving functions.

2. The default storage path is the installation directory of BerxelTools.exe (C:\Program Files (x86)\Berxel\BerxelSDK\Samples\bin).

3. You can manually select the save image path by clicking the Default Save Folder button in GeneralSetting.

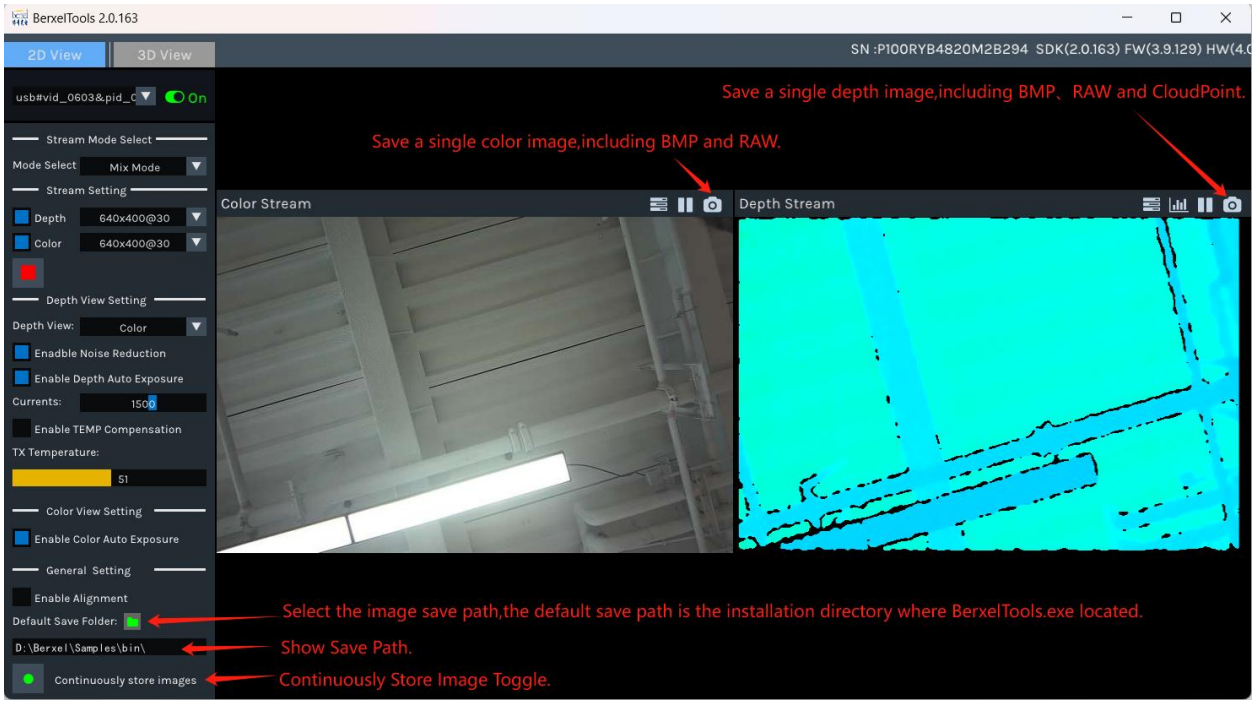

2.7. 3D Point Cloud Display
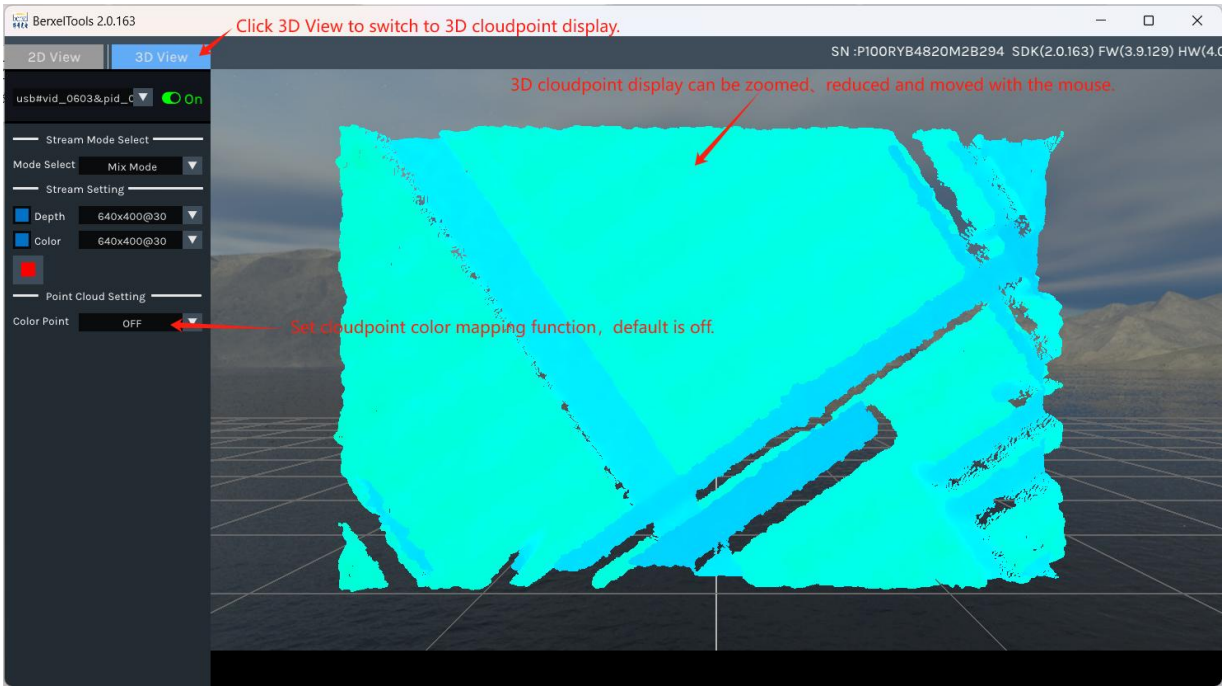
You can switch between 2D image display and 3D point cloud display by clicking the 2D View and 3D View buttons on the interface.