
VYANET
OPERATING GROUP, INC.


# Quick Setup Guide

## Video Doorbell

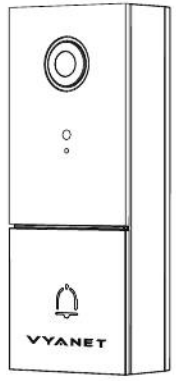



V1.0


# Physical Description

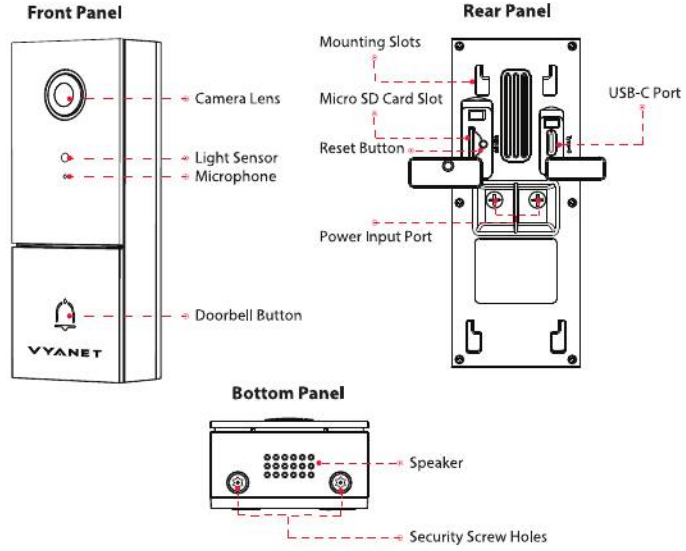




# What's in the Box


1x Video Doorbell with 32GB Micro SD Card


1x Mounting Bracket


1x Power Kit


1x Silicone Plug


1x 5° Vertical Angle Bracket


1x Thick Mounting Bracket


2x Wire Extenders



1x Quick Setup Guide


2x Wire Nuts


1x Drill Hole Position Template


1x 15° Horizontal Angle Bracket


1x USB-C Cable


1x Dual-Purpose Screwdriver


1x Expansion Screws



# Add Device: Connection via the Vyanet App (Recommended)

It is strongly recommended that you complete the "add devices" process on the Vyanet App before the doorbell hardware is installed.

## Before You Get Started

Scan the QR code below to download and install the Vyanet App, and learn how to add the doorbell to the app.

VYANET Mobile App

GET IT ON Google Play

Available on the App Store

To ensure a smoother video experience on your smart phone, it is recommended that your smart phone meet the following specifications:


- iOS: version 11 or higher.
- Android: 5.0 or higher, using a device with a Graphics Processing Unit (GPU).

**Note:** Vyanet recommends frequently checking for updates in the mobile device store to ensure your application stays current with feature and security updates.




## ■ Wi-Fi connection

1. Plug the smaller end of the USB cable into the USB-C port on the back of the Video Doorbell, and the larger end into a USB wall charger such as your smartphone charger (**DC5V 1.0A** power output recommended for faster charging). Please wait for a few seconds until you hear "**Ready for Wi-Fi configuration**".

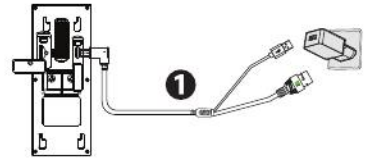


**DO NOT connect the video doorbell using AC and USB-C power simultaneously. Doing so will result in damage to the video doorbell.**

2. When powered, if a voice prompt is not heard, press the reset button for 10 seconds and then release the button.
3. Make sure that your smart phone is connected to your Wi-Fi router.

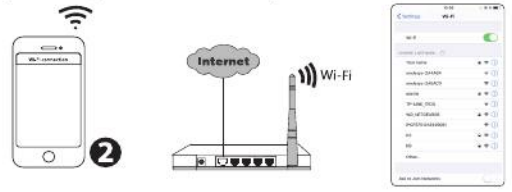





**Note:** The video doorbell supports Dual-Band 2.4 GHz and 5 GHz Wi-Fi networks. To provide the best Wi-Fi connection, please choose the channel with the stronger signal strength.

4. Open the Vyanet App and sign up for a Vyanet Account. If an account already exists, please sign in with those credentials.

5. After logging into the Vyanet App, select "**Tap to add a camera**" or "**+**" icon on the upper right corner, then select "**Scan the QR code**" and scan the QR code label at the bottom of the video doorbell.

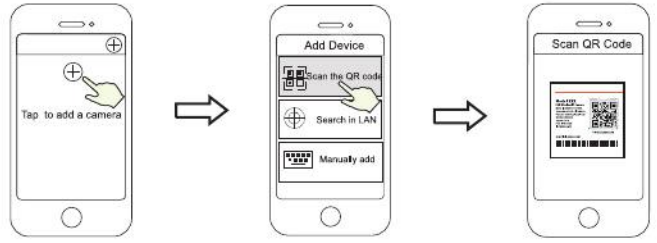



Tap + icon

Select "**Scan the QR code**"

Scan the QR code, located at the bottom of the video doorbell

6. In "**Add Device**", if you hear "**Welcome to Vyanet**", select the checkbox and tap "**Next**", continue to confirm that the device is in the blue flashing state and tap "**Next**". In "**Wi-Fi connection**", enter your Wi-Fi's password and tap "**Confirm**" (see illustrations on next page).

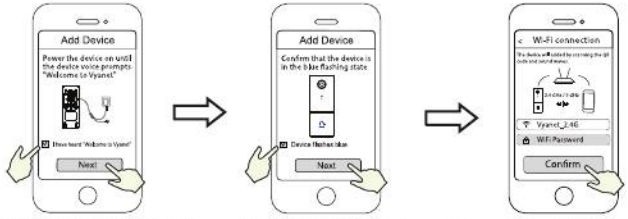



Listen for "**Welcome to Vyanet**", then tap "**Next**"

Confirm camera LED flashes blue, then tap "**Next**"

Enter preferred Wi-Fi credentials, then tap "**Confirm**"

7. Scan the QR code on the video doorbell with the smartphone camera. If successful, a voice prompt will say, "**Wi-Fi connecting**". Select the checkbox and then tap "**Next**".

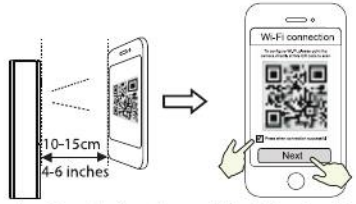



Place the QR code directly in front of the camera

Select the checkbox, then tap "**Next**"



**Note:** Scan the video doorbell QR code using the smartphone camera at a range of 4 to 6 inches (10 to 15cm). If no voice prompt is heard, move the smartphone camera in and out slowly until a voice prompt is heard.

8. Keep scanning until the voice prompt "**Wi-Fi Connection Succeeded**" is heard. After this voice prompt is heard, set the video doorbell name and then tap "**Save**" to continue.

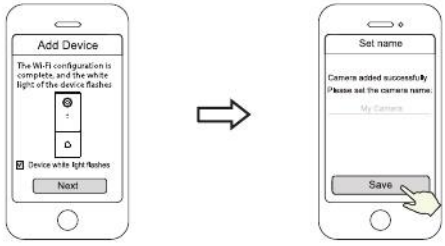



Verify white light flashes, then tap "**Next**"

Set video doorbell name, then tap "**Save**"


**Note:** If adding the video doorbell through this process fails, please reset the video doorbell using the reset button and attempt the process again.



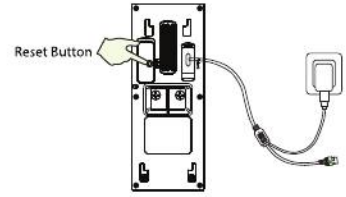


9. Connecting to your chime, **Select Chime Type** > **Next** > select your chime type "**Mechanical Chime**" or "**Digital Chime**" or "**None**".

**Note:** Please choose "**None**" from the list if you don't have chime or unsure the type of your chime.

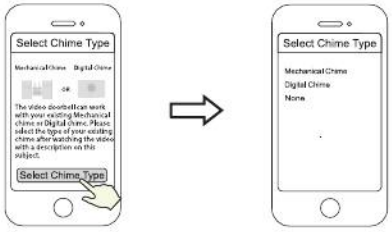


Tap "**Select Chime Type**"


Select the correct chime, and tap "**OK**"



**Note:** Please confirm the chime type in your home. If an incorrect chime type is selected, then the transformer and chime may not work or possibly become damaged. Normally, a mechanical chime creates a ringing sound made by striking metal against a bell, while a digital chime creates a ringing sound made by playing a ringing tone through a speaker.

If you are unsure of the correct chime type, watch the chime video and use this as a reference against what is seen on your existing doorbell.

10. From the main screen, tap on the doorbell camera to open the camera. Upon first opening, a username and password will need to be entered before first use. Enter the preferred settings and then select "**Submit**".

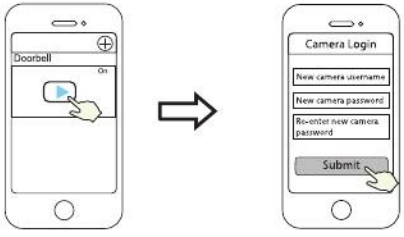


Tap video doorbell camera

Enter your preferred username and password, then press "**Submit**"

11. Once a username and password have been completed, the physical video doorbell installation can begin.

# Video Doorbell Installation

1. Verify the video doorbell installation process has been fully completed in the Vyanet App. If the video doorbell is verified as completed, the hardware installation process is ready to begin.
2. If you use AC power to power the video doorbell, you must ensure that the video doorbell transformer's AC voltage in your home is between **8-24 Volts**, with a minimum power requirement of **8 Volt-amps**.
3. If you use DC power to power the video doorbell, you must ensure that the video doorbell DC power adapter used is between **12-30 Volts**, with a minimum wattage of **6 Watts**.
4. If you use USB-C to power the video doorbell, you must ensure that the video doorbell USB-C power adapter used is **5 Volts** and **1 Amp**, with a minimum wattage of **6 Watts**.

**Step 1**


**Test Current Doorbell:** Ring the existing doorbell to make sure the doorbell is working properly. Once confirmed the doorbell is working, locate the chime location.

**Step 2**

**Turn Off Circuit Breaker:** At the electrical panel, find the circuit that powers the doorbell and turn off this circuit at the electrical panel.



**Note:** Doorbells are usually found at the main entry. When looking for the circuit breaker, look for a circuit breaker marked similarly to "**Entry Way**". The doorbell circuit breaker may also be connected to area wiring close to the doorbell, sharing the circuit with a shared wall or room. To test if the circuit breaker is correct, turn off one circuit breaker at a time until the doorbell no longer works. If the doorbell no longer works, this will indicate the correct circuit breaker has been found. If additional assistance is needed, please call with a certified electrician.

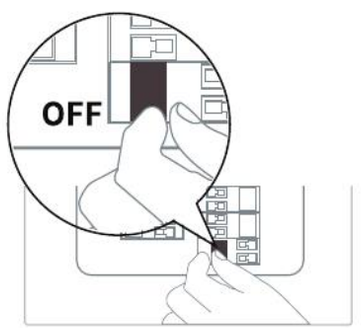


If you are uncomfortable with this installation, please consult a certified electrician to complete the installation process.



**Step 3**


**Detect Chime Type:** There are two types of chimes: Mechanical or Digital. If you would like to continue using either chime, the included Power Kit will need to be installed in parallel for the chime to function properly. The Power Kit prevents abnormal chime ringing due to power changes between using the doorbell button and the video doorbell.

To install the Power Kit, the Dual-Purpose Screwdriver is required.







After removing the cover of the mechanical chime or digital chime, use the wire connection terminal with the Power Kit as pictured. After wiring is completed, replace the cover.

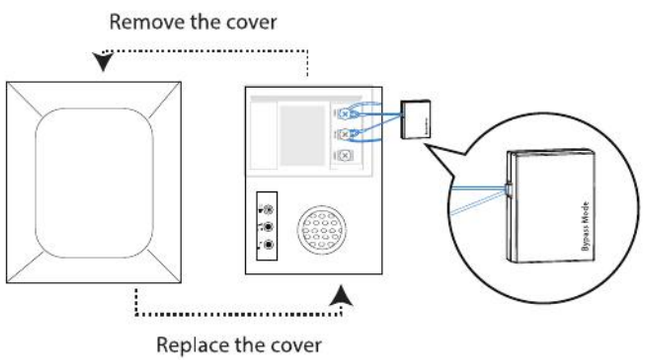




**Using Bypass Mode:** If you do not want to use the existing chime, you can convert to bypass mode by moving the wires connected to the Power Kit to the other side of the Power Kit module and then wiring into the doorbell chime as shown on Page 13. By making this change, the chimes will no longer ring when the video doorbell button is pushed.

**Note:** If you choose to use the Power Kit in bypass mode, be sure to set the chime type to "**None**" in the app during installation to avoid damaging the transformer.

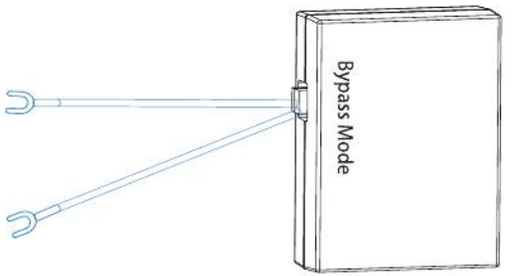




**Step 4**

**Remove Doorbell:** Remove the existing doorbell button at the main entry. Pull the two wires carefully out of the wall behind the doorbell when removing. Pull the wires slowly with low tension to prevent any wire strain or damage. Once removed, straighten the wires as much as possible.







**Step 5**

**Install Mount Template:** To begin, check to determine if the previously used holes can be reused. If these holes cannot be used, attach the drill hole position template to mark the screw hole locations in the area where the existing doorbell button was located. Place the drill hole position template at least 59 inches (1.5 meters) above the ground and secure to the wall. Once hole locations are selected, drill two holes using a 5/64 inch (2mm) drill bit into the two identified hole locations on the drill hole position template.

**Warning:** When drilling new holes, ensure no wiring is behind the drill locations. If wires are behind the hole locations, these wires must be moved before any drilling begins.

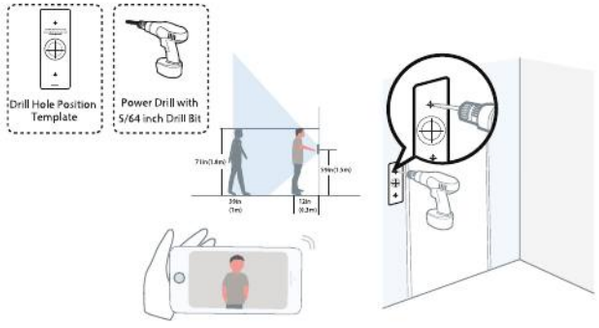





**Step 6**

**Anchor Installation:** Use the provided wall anchors if installing in materials such as stucco, brick, or concrete. When installing the anchors, use a 3/16 inch (4.75 mm) drill bit.


**Note:** If installing into wood, such as a wooden doorframe, there is no need to use the wall anchors.

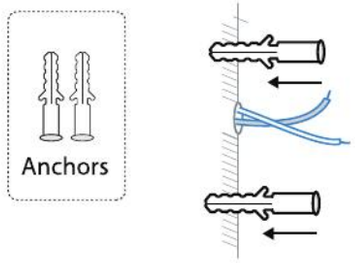




**Step 7**


**(Optional) Angled Mounting Brackets:** Angled mounting brackets can be used to position the video doorbell on the wall for an optimal viewing position. The video doorbell kit contains a 5° vertical bracket and a 15° horizontal bracket.

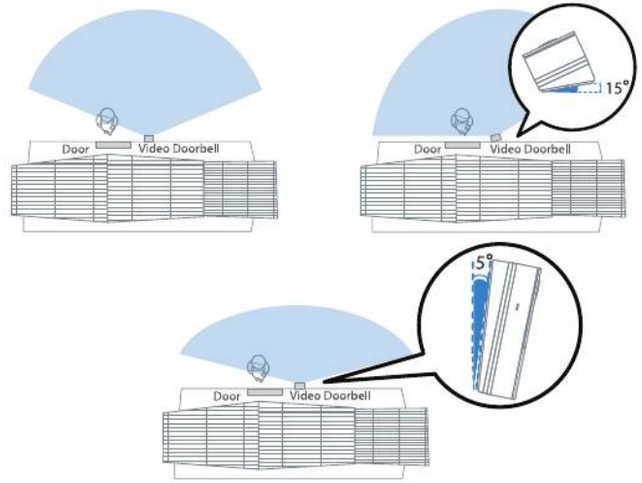





**Step 8**


**Installing Mounting Brackets:** Position the two existing doorbell wires through the center hole on the mounting bracket(s) before placing them onto the wall. If angled brackets (5° vertical / 15° horizontal) or the thick bracket are needed, add these in addition to the default mounting bracket for installation at this time. Once in position, insert the provided screws through the screw holes of the mounting bracket(s) and fasten the screws tightly.

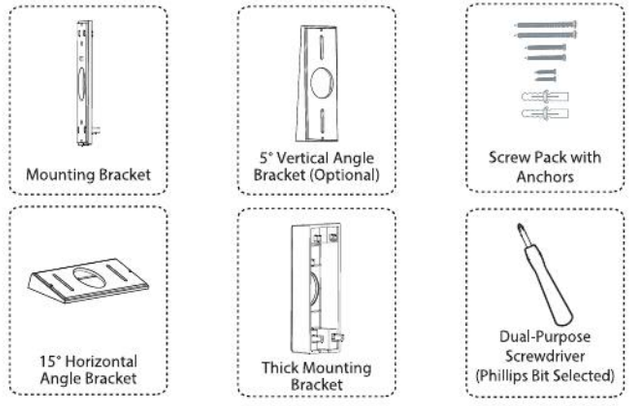



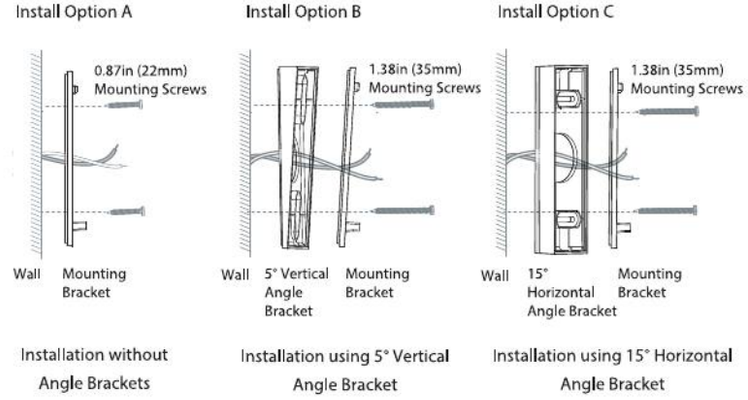




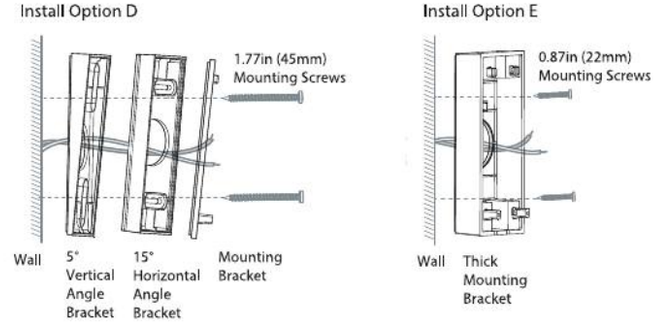

**Step 9**


**Wiring the Doorbell:** Connect the wires to the two terminals on the back of the video doorbell and then tighten the terminal screws. Since the connection is AC, there is no polarity to the terminals, so either wire can be used on any terminal.


**Note:** To prevent a short-circuit, make sure the wires are not touching each other after being connected. If the wires are too short, use the extension wires and wire nuts from the kit to extend the wires. If there is not enough room for the provided wiring nuts when wire extensions are used, electrical tape can be used as an alternative.

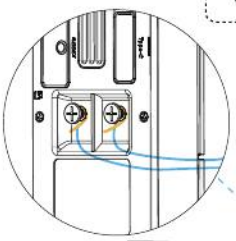

**DO NOT connect the video doorbell using AC and USB-C power simultaneously. Doing so will result in damage to the video doorbell.**



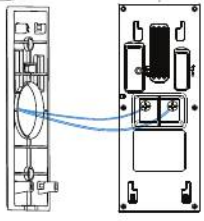

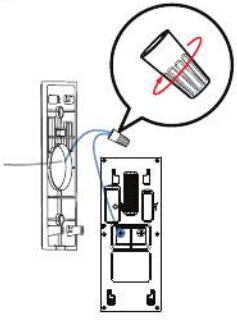


**Step 10**

**Mount to Bracket:** Hook the doorbell on top of the mounting bracket and then snap the doorbell bottom to the mounting bracket. A "**click**" typically is heard when successfully attached.



**Step 11**


**Power Circuit Breaker:** Turn "**ON**" the circuit breaker previously flipped off in Step 2, returning power to the circuit.

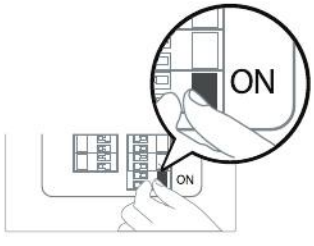





**Step 12**

**Test Video Doorbell:** Once power is restored to the video doorbell and the startup sequence has been completed, the video doorbell is ready to be tested. Press the button on the front of the video doorbell. If an Accept/Reject set of icons with a live video feed appears on the Vyanet App, the installation has been successful. If issues remain, please check all electrical connections to the video doorbell.

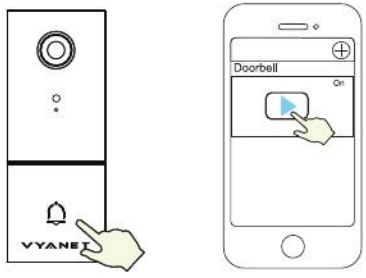





**Note:** If electrical connection repairs do not correct video doorbell issues, the video doorbell should be factory reset by holding the reset button for 10 seconds.

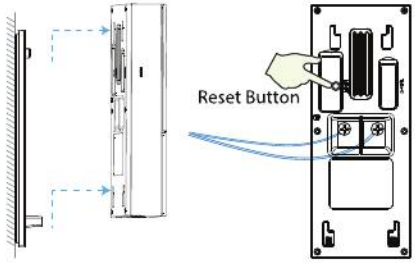


**Step 13**

**Add Tamper Protection:** Once the video doorbell is verified as fully working, anti-theft screws should be added to the doorbell, securing to the mounting bracket. To do this, the Torx bit should be selected from the dual-purpose screwdriver.

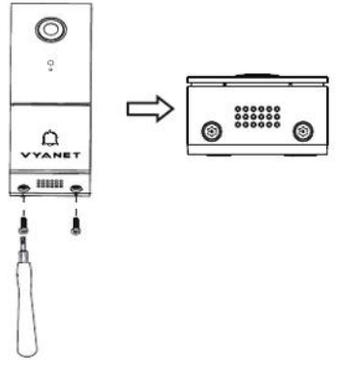


# Other Ways to Access Your Doorbell

## Vyanet VMS

Vyanet VMS is software for use on a Windows or a MacOS computer. This software does not require the need for additional plug-ins to operate. Vyanet VMS for Windows can be downloaded at **https://www.vyanet.com/software**. For Vyanet VMS for MacOS, the Apple App Store can be used to download and install.



**Note:** Vyanet VMS will be updated at regular intervals. Please check on occasion when using to ensure this application remains current.

**Add the Video Doorbell**

1. Open Vyanet VMS and enter Vyanet Cloud credentials or create a local administrator account within Vyanet VMS.
2. Tap the "+" icon on the Vyanet VMS and follow the setup wizard to add your video doorbell.





# Important Information

## Video Doorbell Username & Password

The video doorbell username & password are used to access and manage your video doorbell. Having a strong password can significantly improve the security of your video doorbell.

**Note:** If you have forgotten the username or password, the video doorbell should be reset to factory defaults using the Reset Button.



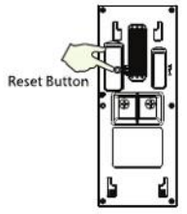


Press the Reset Button on the back of the camera and hold for 10 seconds to factory reset. A "**Reset Succeeded**" voice prompt will be heard when successful.

## Replacement of Storage Media

Included with every new video doorbell is a 32GB Micro SD card that is pre-formatted and ready for use. If this Micro SD card ever needs to be replaced, the new Micro SD card will need to be properly formatted. The video doorbell supports Micro SD card formats using FAT32 or exFAT and a minimum storage capacity of 16GB.

## Upgrading Firmware

Firmware upgrades occur with the video doorbell to keep security and features current. To ensure your video doorbell has a current firmware version it is preferred to use the Vyanet App to upgrade. To upgrade, open the Vyanet App, select **Settings**, and then select **Firmware Upgrade**. Within this screen, a firmware upgrade prompt will appear if a firmware upgrade is needed. If no firmware upgrade is needed, "**Your firmware is up to date**" will be displayed.



**Note:** To keep the firmware current, the option of Smart Update is also enabled by default and is recommended to remain enabled. This allows you to receive pushed firmware upgrades from Vyanet as firmware upgrades are approved.

## Safety Tips



Do not use in high temperature locations

Do not use in low temperature locations

Do not expose to open flame

Keep all contents away from children

Do not puncture or crush battery

Do not dismantle battery pack

Do not use unapproved USB-C cables

Only use the supplied screw packs



# Product Specifications

| | |
|---|---|
| WLAN frequency range | 2412MHz - 2472MHz and 5725MHz - 5850MHz |
| Maximum transmission power | < 16dBm |
| Wireless Standard | IEEE802.11b/g/n (2.4 GHz)<br>IEEE802.11a/n/ac (5 GHz) |
| Power Supply | DC 5V 1.0A 5W or AC 8~24V |



VYANET

Vyanet Operating Group, Inc.
410 SW Columbia St, Ste 120
Bend, OR 97702
(844) 4-VYANET

socworks@vyanet.com
(844) 4-VYANET

VYANET D1 Install

For a more detailed install guide, please refer to the Vyanet D1 Install Guide which can be accessed using this QR Code.

**www.vyanet.com**