
VYANET

Quick Setup Guide

Network Video Recorder

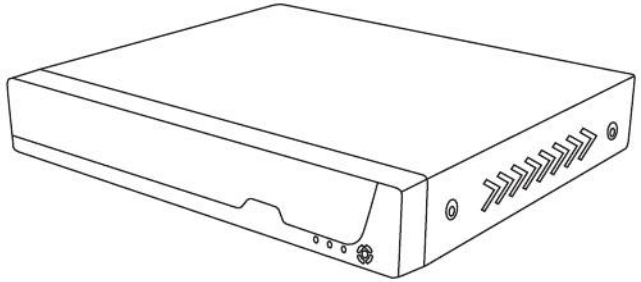

V1.0

1 Getting Started

Package Contents

NVR	Ethernet Cable
DC Power Adapter	USB Mouse
Quick Setup Guide	Screw Pack
Warning Card	Data Wire and Power Wire for the Hard Disk Drive (HDD)

Security Warning

- When setting up Vyanet cameras and NVRs, Vyanet advises a password that meets password security best practices. To do this, Vyanet suggests an 8-character password that contains numbers, lower-case letters, upper-case letters, and symbols.
- You should check for updates on your Vyanet cameras and NVR on a regular basis to ensure you have the most updated firmware installed. Having the most up-to-date firmware installed ensures your devices offer you the best protection possible by Vyanet.


2 Hard Disk Drive Installation

⚠ WARNING


Optional Steps: All Vyanet NVR's come preinstalled with a Hard Drive (HDD). HDD installation is only needed if you have a failur want to increase recording capacity of the NVR

- Before installing a hard disk drive (HDD), please make sure the p is disconnected from the NVR.
- It is recommended to use an HDD rated at speeds of 7,200 RPM greater.


1. Remove the cover from the NVR by removing the screws on the rear and bottom of the NVR.

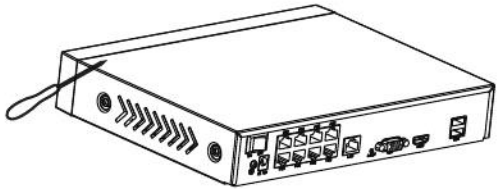

2. Connect one end of the data and power cables to the appropriate header on the NVR motherboard. Once connected, the other end will attach to the HDD.

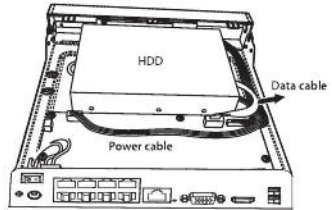


3. Mount the HDD to the bottom of the NVR by fastening 4 screws to the corresponding holes of the HDD to the holes on the bottom of the NVR.

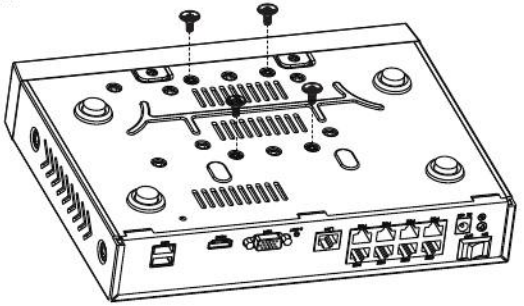


4. Re-install the cover of the NVR and fasten screws.




3 NVR Rear Panel

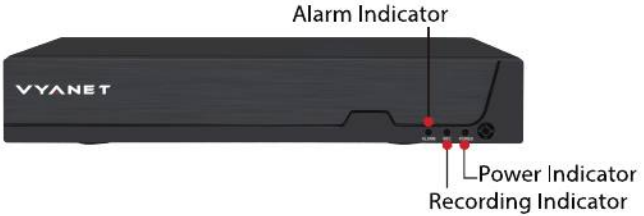

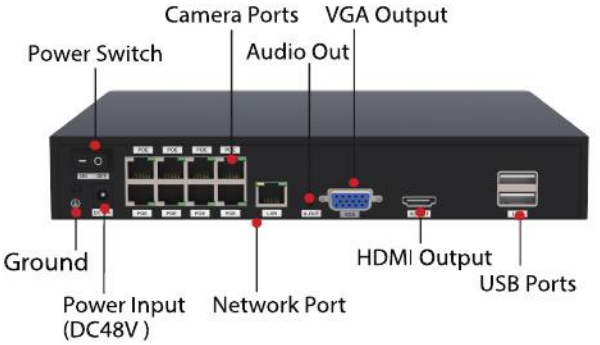

4 Device Connection

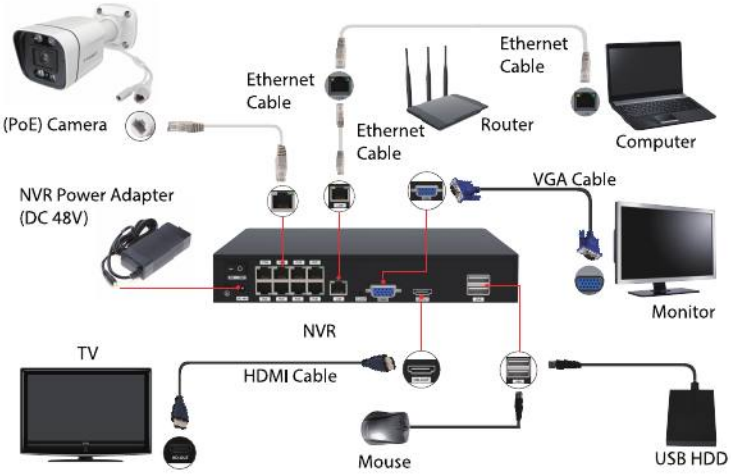

Procedure

1. If you want to use the Vyanet VMS or App, the NVR needs to be connected to a router. If you only connect to the NVR with a display, you do not need to connect the NVR to a network.
2. Connect your display to one of the video outputs (VGA or HD-OUT interface).
3. Connect an external storage device to the USB interface of the NVR as a backup.
4. Connect a mouse to the USB interface.
5. Some devices need to connect to your network using an ethernet cable, including the NVR, IP Camera, and computer.
6. Connect the power adapter to the power input port.
7. The NVR will attempt to connect to a DHCP server to receive an IP Address for 30 seconds. If a DHCP server is not found on the network, the NVR will enable DHCP as a service so IP Addresses are created for devices, such as IP Cameras, when connected to the NVR. If the NVR is connected to network and has received an IP Address, all applications will need to be restarted for the NVR to be shown on the Vyanet VMS and App.

   Note: If you need to change the startup time or remove the DHCP service on the NVR, this can be altered during the startup process for the NVR.

5 Initial Setup

1. Turn on the NVR using the switch located on the rear of the device. After the NVR successfully starts, the Power LED and HDD LED indicators will turn green. The startup page will then be displayed on the display.

2. On the first input screen during setup, a username and password will need to be created. Please use the Vyanet suggested security standards password creation with an 8-character password that contains numbers, lower-case letters, upper-case letters, and symbols.



3. After username and password are created, a login screen will be displayed. Please enter your username and password to proceed.



4. You will now be presented with the Setup Wizard to proceed forward with installation.

6 Setup Wizard

The Setup Wizard can walk you through some important settings on the NVR.

1. Setting the Time:



2. **Formatting the HDD:** The HDD can be formatted if a new HDD is inserted or replaced. This screen will allow you to format the drive for use. For new Vyanet NVR's, a formatted HDD is shipped with all NVR's, so if the HDD is displayed on the screen, you can press **Skip** to proceed.

   Note: When HDD is full, Overwrite is the preferred option. This is selected to ensure new recordings are always available to the NVR as the HDD fills over time.



3. Setting up P2P: For a P2P connection, using a UID, please scan the QR code. If you want to skip the Setup Wizard on the next startup, select **Not Show Again** and it will not be shown again on startup. Once done, select "Finish" to complete the Setup Wizard.



Note: If you did not press **Not Show Again** and the Setup Wizard is still displayed, you can also disable it on the Main Menu by right-clicking on the screen and selecting Main Menu→ Configuration. Once this option is selected, the below will be displayed, which allows you to disable the Setup Wizard.



7 IP Camera Installation

You can add an IP Camera that is connected to the internet on the NVR.

1. Right-click on main interface, select **Channel Config**.


2. Select **your IP Camera** or **Auto-add Vyanet camera(s)**

3. Click **Add**.

4. Enter the username and password of each camera. If your camera is being installed with factory defaulted settings, you do not need to enter a username or password.

5. Click **OK**.

Note: If the camera being added is installed with factory default settings, the username and password will be set to match the NVR.

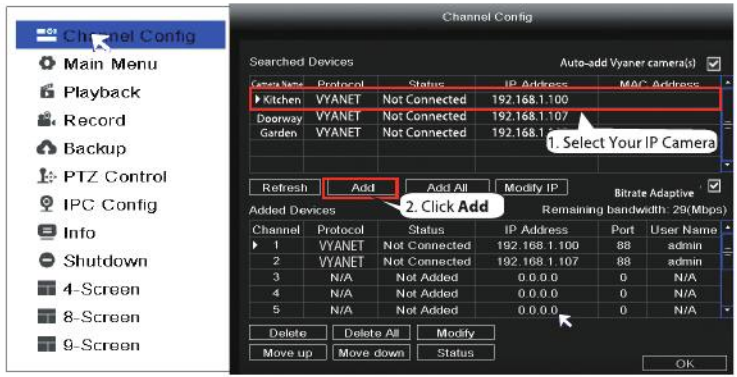

Select a protocol depending on which IP Camera you have.

- Vyanet protocol: The High Definition (HD) IP Cameras for Vyanet.
- ONVIF protocol: IP Cameras which support ONVIF protocol.


8 Recording

After IP Cameras are successfully added to the NVR, you must enable a recording schedule. The following recording options are available for use to ensure recording meets your needs.

8.1 Scheduled Record

To begin, right-click on the screen and select Main Menu -> Record. Select the channels you want to edit the schedule for and make the required changes. Once completed, press **Save** to keep the changes made.


Note: The default recording schedule is 24-hour recording for every day of the week.

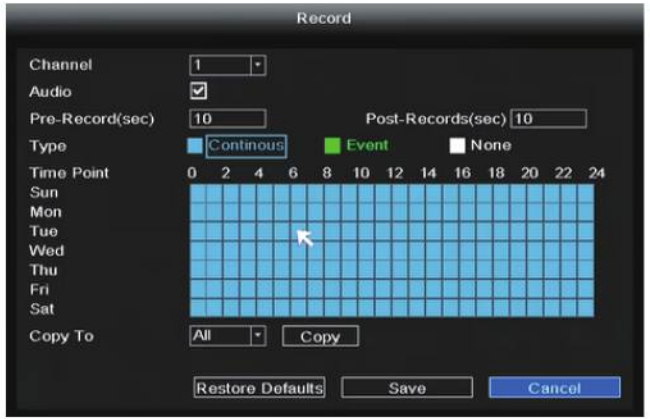

Note: When viewing the IP Cameras in Live View mode, an icon is at the bottom right of the screen for each channel, indicating that a recording is active.

8.2 Event Record

If recording by event is preferred, select **Event** in the Type. This can be selected using the left mouse button, which will turn the schedule area green once pressed, indicating recording will only be by event during this time period. If other channels need to match this event schedule, **Copy** can be selected from the bottom of the screen and the settings applied to that channel.

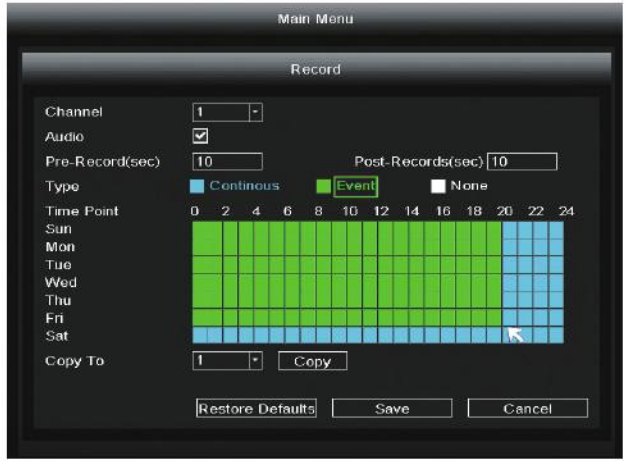

Note: The default alarm type is **Motion Detect**

When in Live View mode, an icon is at the bottom right of the screen for each channel, indicating that a recording is active.

To ensure recording by event is triggered, an event alarm needs to be added from the Main Menu by right-clicking on the screen and selecting Main Menu → Event → Motion Detect. Channels will now need to be selected along with Delays, Schedule, PTZ Activation, or by Send Email Buzzer. Once options are completed, press **Save**.



9 Playback

With Playback, you can view the recording information. This includes the Manual Recordings, Alarm Recordings, and Scheduled Recordings.

To view these recordings, please right-click on the main screen and select Main Menu →Playback. From here, select the channels and dates to review. Once selected, press **Timeline** to view the recordings.



Note: The maximum number of channels available to view is 8. This is also the channel limit of this NVR.

10 Remote Access

You can also access the NVR or IP Camera directly through Vyanet VMS and Vyanet App.

10.1 NVR Access on Computers

Vyanet VMS is software for use on a Windows or a MacOS computer. This software does not require the need for additional plug-ins to operate. Vyanet VMS for Windows can be downloaded at **https://www.vyanet.com/software**. For Vyanet VMS on MacOS, the Apple App Store can be used to download and install.

Note: The Vyanet VMS will continue to be updated regularly. Please check for updates to ensure your version remains current.

Add the NVR

1. Open Vyanet VMS and create a Local Administrator account.
2. Press the + button within Vyanet VMS and follow the setup wizard to add your NVR.
3. To preview the NVR once added, select the NVR from the device list and then select the channel within the NVR to view the preferred IP Camera.



10.2 NVR Access on Mobile Devices

1. To manage the NVR by mobile device, a Vyanet App needs to be installed on your mobile device. To install the Vyanet App, go to the App Store for Apple devices or the Google Play Store on Android devices. The Vyanet App on both platforms can be found by using the search term "**Vyanet**". The Vyanet App can also be found by scanning the below QR code.

VYANET

GET IT ON Google Play

Available on the App Store

VYANET Mobile App

2. Open the Vyanet App and create an account.
3. To add a NVR, press the "+"button within the Vyanet App and scan the QR code found on the NVR. The QR code is found on the bottom of the NVR.
4. Once added, the NVR can be opened within the Vyanet App, and then the IP Camera can be selected to view.






11 Upgrade

NVR Firmware Upgrade via NVR:

1. Go to **https://www.vyanet.com/software** and enter the N85 NVR product page.

Note: If no firmware is located on this page, a firmware update is not available at this time by Vyanet.

2. Download the firmware to a USB drive and insert the USB drive into one of the USB ports at the rear of the NVR.
3. From the NVR screen, right-click on the screen and select **Main Menu** →**Update**. If the USB drive is not seen, select refresh and the USB drive should then be displayed.
4. Navigate to the firmware file and select **Update** to upgrade your NVR.

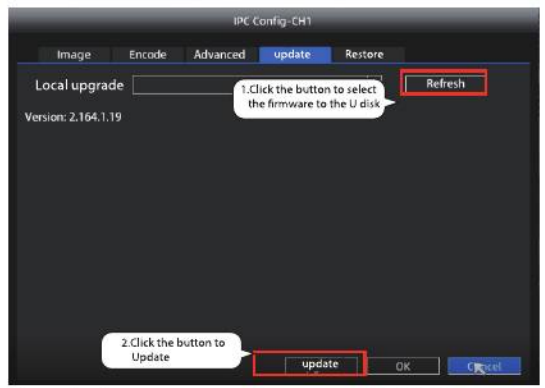

Note: During the firmware upgrade process the NVR must remain powered on, with no mouse interactions. After a successful firmware upgrade, the NVR will reboot.

NVR Firmware Upgrade via Vyanet VMS:

Open and Login Vyanet VMS, select **Setup** > **System** > **System Upgrade**.



Firmware upgrade step:


① Click the "**Download the latest firmware**" button to download the latest firmware to your computer.

② Click "**Browse**" button , choose file firmware version you want to upgrade on the web page.

③ Click "**Upgrade**" button and wait till it's finished.

NVR Firmware Upgrade via Vyanet App:

1. The NVR Firmware can also be upgraded using the Vyanet App on your mobile device.
2. To upgrade through the Vyanet App, first open the App and login.
3. Next, open the NVR from the list of devices.
4. Enter **Settings** and select **NVR Firmware** to upgrade.

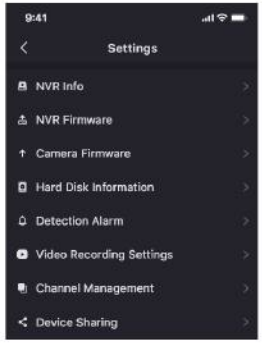

Note: During the firmware upgrade process the NVR must remain powered on, without interactions. After a successful firmware upgrade, the NVR will reboot.

12 Product Performance

Power Supply: DC 48V 2.0A 96W

13 Technical Support

If you have any problems with any Vyanet device, please contact our internal technical support team, SOCWorks. You can reach SOCWorks during normal business hours (8:00AM to 5:00PM Pacific Time) at (844) 4-VYANET or **socworks@vyanet.com**.

VYANET

Vyanet Operating Group, Inc.
410 SW Columbia St, Ste 120
Bend, OR 97702
(844) 4-VYANET



socworks@vyanet.com
(844) 4-VYANET

VYANET N85 NVR Install

For a more detailed install guide, please refer to the VYANET N85 NVR Install Guide which can be accessed using this QR Code.

www.vyanet.com