
VYANET

Quick Setup Guide

Indoor IP Security Camera

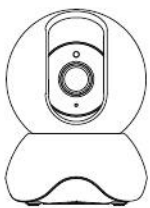


V1.1

Setting Up Your Vyanet Security Camera

1. Getting Started


Package Contents

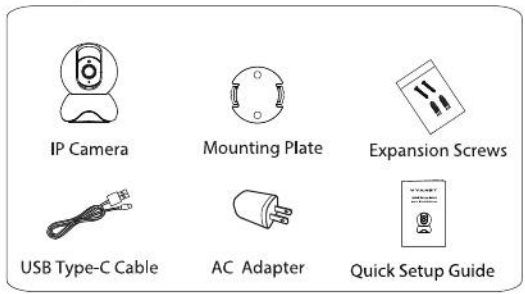


Security Tips

- Please change the camera's password regularly, using a combination of numbers, letters and special characters.
- We recommend that you regularly update your camera with the latest available software and firmware to ensure the best experience with your camera.

2. Camera Introduction

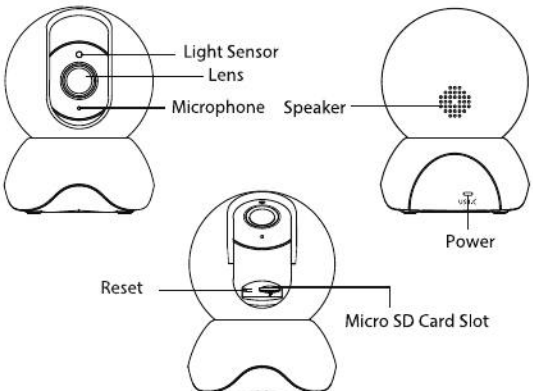

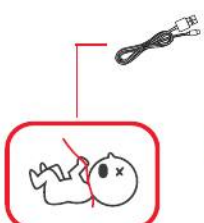

The cords on this product are a potential strangulation hazard. For child safety, please keep these cords out of the reach of children.

3. Setting Up Your Camera: Connection via the Vyanet App (Recommended)

Before You Get Started

Scan the QR code below to download and install the Vyanet APP.

VYANET

GET IT ON Google Play

Available on the App Store

VYANET Mobile App


To ensure a smoother video experience on your smart phone, it is recommended that your smart phone meet the following specifications:

- iOS: version 11 or higher.
- Android: 5.0 or higher, using a device with a Graphics Processing Unit (GPU).

Note: For the best experience, please update the APP to the latest version!


■ Wi-Fi connection

1. Plug the power adapter into the camera, and please wait for a few seconds until hearing "**Ready for Wi-Fi configuration**".

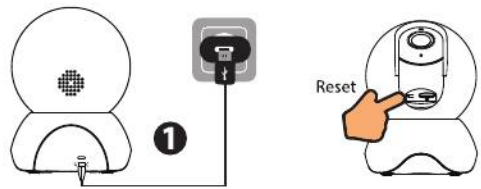

Tips: If you didn't hear the voice prompt, press and hold reset for about 3~5 seconds to reset the camera.

2. Make sure that your smart phone is connected to your Wi-Fi router.

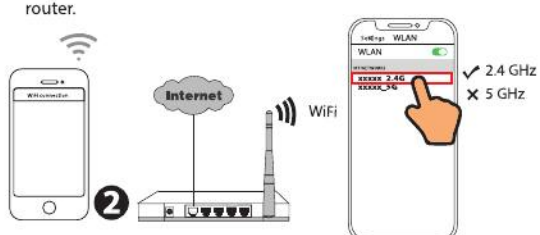


Tips: You need to connect to the 2.4GHz network if your Wi-Fi router is dual-band—most newer routers have both 2.4GHz and 5GHz channels. For example, choose SSID: XXXXX_2.4G.


3. Open the Vyanet APP and please sign up for a Vyanet account, or sign in if you have one already.





4. Follow the steps below:

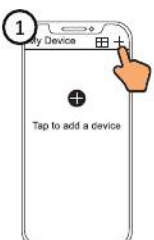

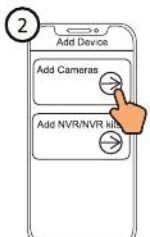













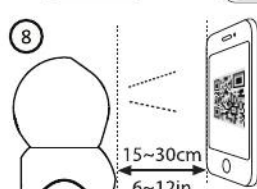

Tips: Please place the QR code on the phone screen about 6 to 12in (15 to 30cm) away, and if you encounter difficulties you can try to move the screen slowly around 6 - 12in (15 – 30cm).

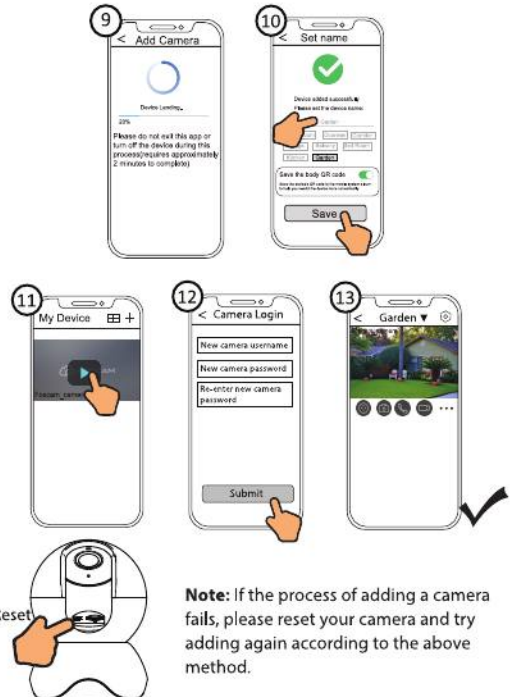

Note: If the process of adding a camera fails, please reset your camera and try adding again according to the above method.


4. Hardware Installation

- Place the camera directly onto a flat surface.



- Install the mounting plate on a wall or ceiling with the supplied fixing screws.

  Note: Align points a and b to insert the camera base to the mounting plate. Rotate so that points a and b are aligned, which attaches the camera securely to the base.

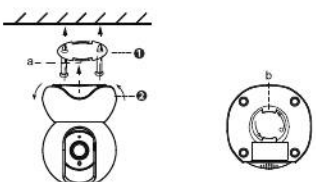

5. PC and Mac Software (Optional)

■ Vyanet VMS

Vyanet VMS software can be installed to allow Vyanet cameras to be connected and viewed on a Windows PC or Mac. This software does not require additional plug-ins and will support up to 36 simultaneous Vyanet camera connections. To manage multiple cameras using a PC or Mac, we suggest you install Vyanet VMS. You can download the "Vyanet VMS " Windows version or the "Vyanet VMS" Mac version at this location: **https://www.vyanet.com/software/**

Note: For the best experience, please update Vyanet VMS to the latest version!

Add the IP Camera

1. Run Vyanet VMS, then create a local administrator account and login.
2. Tap the "+" icon on the Vyanet VMS and follow the setup wizard to add your camera.



6. Important Notice

■ Camera Username & Password

The camera username & password are used to access and manage your camera. Having a strong password can significantly improve the security of your camera.

If you have forgotten either of them, please press the "Reset" button.



Press the "Reset" button and hold it for more than 3~5 seconds.

Once reset, please return to step 3.

■ Storage Media

Your camera supports NVR (Network Video Recorder) and Micro SD card (supports FAT32 and exFAT format) storage formats.

To format your Micro SD card to FAT32, a format tool is available in the Vyanet App under the SD Card setting for each camera.



NVR



Micro SD card
(FAT32 & exFAT)

■ Safety Tips



Prohibit use at high temperature



Prohibit use at low temperature



Keep away from fire



Keep away from children



Not a children's toy



Use the correct power supply



Keep dry



Caution Electricity



Use the supplied screw pack

7. Product Performance

WLAN frequency range: 2412MHz - 2472MHz
Maximum transmission power: < 19dBm
Wireless Standard: IEEE802.11b/g/n
Power Supply: DC 5V 1.0A 5W or DC 5V 1.5A 7.5W

8. Troubleshooting

- **IP cameras is not powering on**

If you find your camera is not powering on, please check the following:

1. Please check whether the outlet is working properly or not. Try to plug the camera into a different outlet and see whether it will work.
2. Please check whether the DC adapter is working or not. If you have another 5V/1A or 5V/1.5A power adapter which is working, please try with another power adapter and see whether it will work.
3. If it still won't work, please contact Vyanet support.

- **How to re-configure the Wi-Fi connection for Vyanet cameras after router changed?**

1. Reset your camera using Step 3.
2. Open the Vyanet app and scan your camera's QR code.
3. Verify to make sure that your smartphone is connected to the same Wi-Fi network as the camera.

VYANET

Vyanet Operating Group, Inc.
410 SW Columbia St, Ste 120
Bend, OR 97702
(844) 4-VYANET



socworks@vyanet.com
(844) 4-VYANET

VYANET R5 Install

For a more detailed install guide, please refer to the VYANET R5 Install Guide which can be accessed using this QR Code.

www.vyanet.com