正面

VYANET

Quick Setup Guide

Wi-Fi Solar Security Camera



V1.0

Content

1 Safety Instructions 3
2 Package Contents 4
3 Camera Overview 5
4 Charge the Camera 6
5 Setting Up Your Camera 7
6 Connecting Camera to Wi-Fi 8
7 LED Flashing Status Codes 13
8 Installing the Camera 14
9 Mounting the Camera 15
10 Mounting the Solar Panel 16
11 Connecting your Camera to a Computer 18
12 Important Information 19
13 Product Specifications 22
14 Troubleshooting 22

1 Safety Instructions

This camera is not designed for 24/7 full-capacity operation or continuous live streaming. It is intended for motion-event recording and occasional remote live viewing.

- The battery is built-in and non-removable. Do not disassemble, open, or service the battery pack. Charge the battery only within the device using a high-quality DC 5V/2A adapter or Vyanet solar panel. Do not use solar panels from other brands.
- Charge the battery at temperatures between 32 °F ~ 113 °F (0 °C ~ 45 °C). Operate the camera at temperatures between -4 °F ~140 °F (-20°C ~ 60°C).
- Keep the USB-C charging port dry, clean, and free of debris. Cover the port with the silicone plug when not in use.
- Do not charge, use, or store the battery near ignition sources, such as fire or heaters, as it may explode if damaged or exposed to fire. Do not use the battery if it emits an odor, overheats, discolors, deforms, or appears abnormal. If the battery is in use or charging, remove it from the device or charger immediately and discontinue use.
- Do not use the camera if it has been submerged in water.
- Dispose of the battery in compliance with local waste and recycling laws.
- Low-quality adapters may be incompatible or cause extended charging times.
- Do not use the device in areas where wireless devices are prohibited.
- Do not use the product if the casing is damaged, as this poses a risk of electric shock.

5 Setting Up Your Camera: Connection via the Vyanet App (Recommended)

■ Before You Get Started

Scan the QR code below to download and install the Vyanet APP.

VYANET

GET IT ON Google Play

Available on the App Store

VYANET Mobile App

To ensure a smoother video experience on your smart phone, it is recommended that your smart phone meet the following specifications:

- iOS: version 12.1 or higher.
- Android: 6.0 or higher, using a device with a Graphics Processing Unit (GPU).


Note: Vyanet recommends frequently checking for updates in the app store to ensure your application stays current with feature and security updates.

6 Connecting Camera to Wi-Fi

■ Wi-Fi connection

Note: Please make sure the camera is fully charged (100%) and powered on before starting the installation on the Vyanet App.

1. Remove the silicone cover on the back of the camera and press the power button for 4-5 seconds to power on.

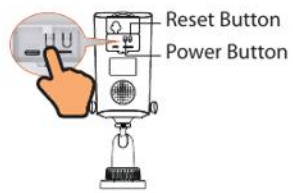


Warning: Keep the USB-C charging port dry, clean, and free of debris. Cover the port with the silicone plug when not in use.

2. Open the Vyanet App and sign up for a Vyanet Account. If an account already exists, please sign in with your credentials.




Tips: Store your username and password safely, as you will need it in the future for installing any additional Vyanet cameras or network video recorders.

3. Make sure that your smart phone is connected to your Wi-Fi router.

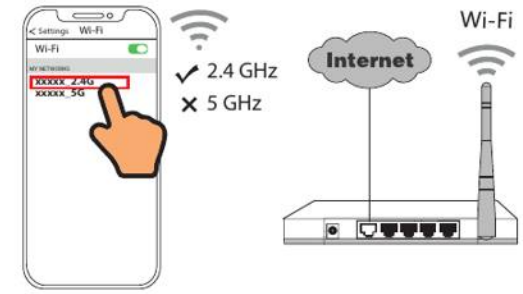

Tips: You need to connect to the 2.4GHz network if your router is dual-band capable. Most newer routers have both 2.4GHz and 5GHz bands. For example, choose SSID: XXXXX_2.4G.

4. Follow the steps below:

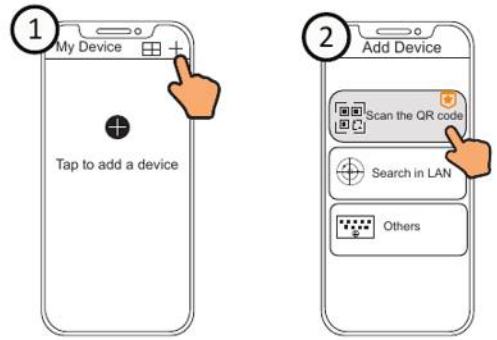

2 Package Contents




IP Camera



Solar Panel



USB-C Cable



Screw Kit
(For Camera)




Mounting Template



Quick Setup
Guide



Solar Panel Bracket




Screw Kit
(For Solar Panel)



Camera Bracket

3 Camera Overview

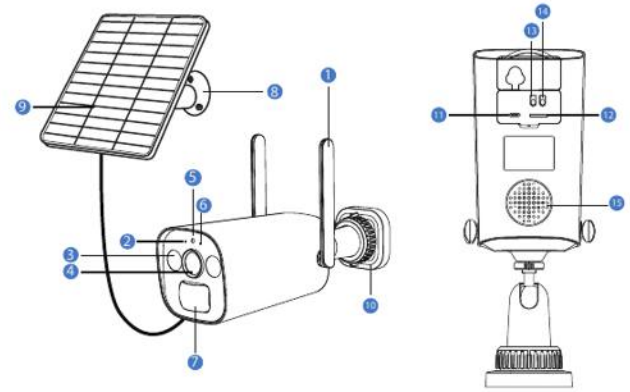


1. Antenna
2. LED Status Light
3. Spotlight & Infrared LED
4. Lens
5. Light Sensor
6. Microphone
7. Passive Infrared (PIR) Sensor
8. Solar Panel Bracket
9. Solar Panel
10. Camera Panel Bracket
11. USB-C Power Port
12. Micro SD Card Slot
13. Power ON/OFF
14. Reset Button
15. Speaker

4 Charge the Camera


Please fully charge the battery prior to installation to ensure optimal performance.


Option A:
Charge with a Power Adaptor.

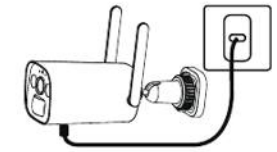



- Connect the camera to a DC 5V/2A power adapter (not included in the package).
- Keep the camera connected until the indicator light shows that the battery is fully charged.
- Do not use low-quality or incompatible adapters, as they may extend the charging time or cause unstable operation.
- For best results, use a standard, certified power adapter that meets the DC 5V/2A specification.


Option B:
Charge for 4 hours using the included Solar Panel.

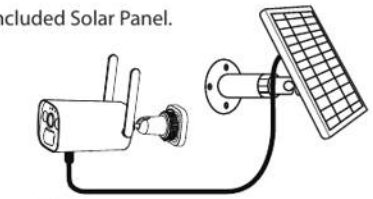

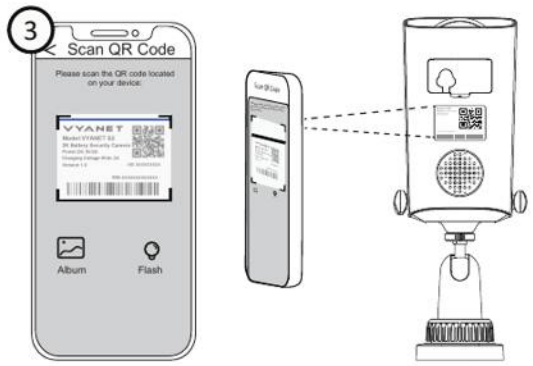

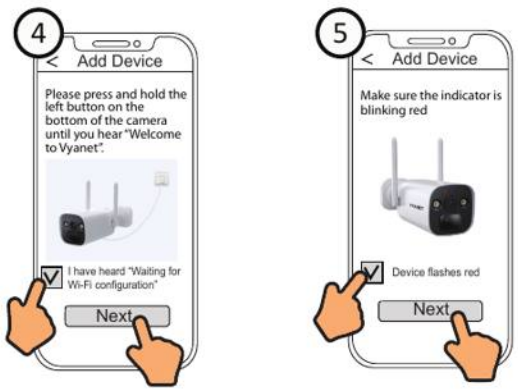


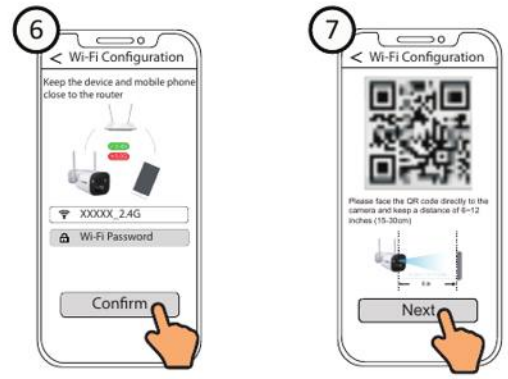

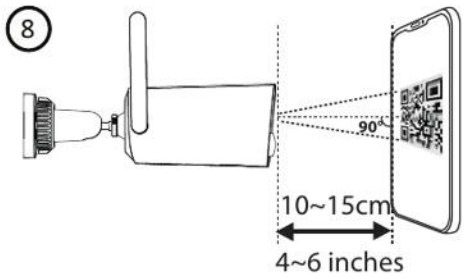


Note: Please keep the camera lens and the QR code at the same height. The camera should remain focused on the QR code for 5-10 seconds with minimal movement. Once successful, you will get a voice prompt "**Wi-Fi Connecting**" and if successful, a second prompt "**Wi-Fi Connection Succeeded**".



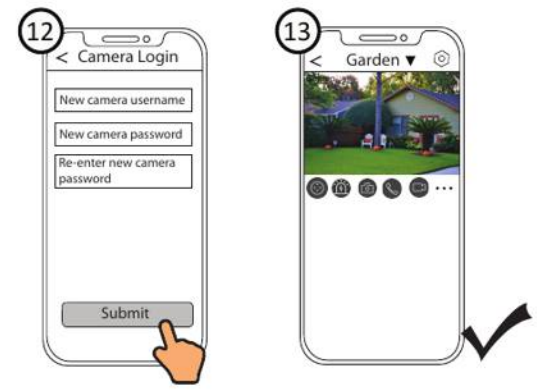

背面

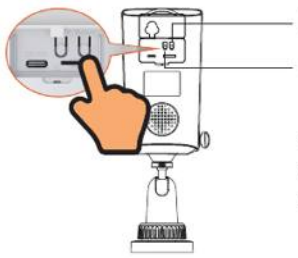

Note: If adding the camera fails, please push the reset button, and restart the process.

7 LED Flashing Status Codes


LED Indicator	Status Description
Blue light flashes slowly	Ready for Wi-Fi configuration
Blue light flashes quickly	Connecting to the router
Blue light always on	Connected to the router
Blue light flashes three times quickly and once slowly	Connecting to the router
Red light flashes slowly	Charging (sleeping mode)
Blue & Red lights flash quickly	Firmware is being upgraded
Blue & Red lights always on	Battery fully charged
All indicators off	Camera is turned off or in standby mode

8 Installing the Camera

Please make sure the camera is fully charged before starting the installation. Use a 5V/2A DC adapter to charge the battery until the indicator shows the battery is full. This ensures proper performance during setup and operation.

Installation Height and Angle


- Install the camera 8 – 10 feet (2 – 3 meters) above the ground to achieve the best PIR motion detection performance.
- For improved detection performance, mount the camera at a slight downward angle, approximately 25°.
- Avoid installing the camera where objects move directly toward the PIR sensor, as vertical movement reduces detection sensitivity.
- The installation angle and height together determine the effective PIR detection distance.

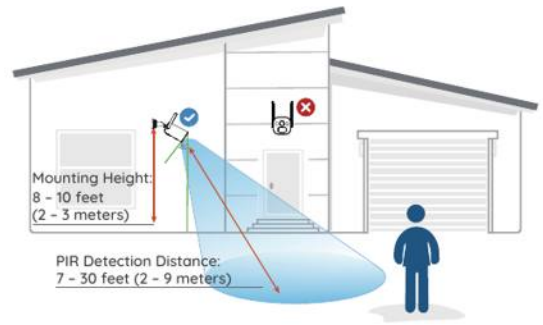


9 Mounting the Camera

Please make sure the camera is fully charged before starting the installation.

1. Rotate to separate the base from the bracket.

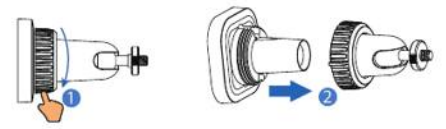

2. ① Drill holes using the mounting template and screw the base of the bracket to the wall.
   ② Attach the other part of the bracket to the base.
   ③ Screw the camera to the bracket.
   ④ Adjust the camera angle to get the best viewing angle.

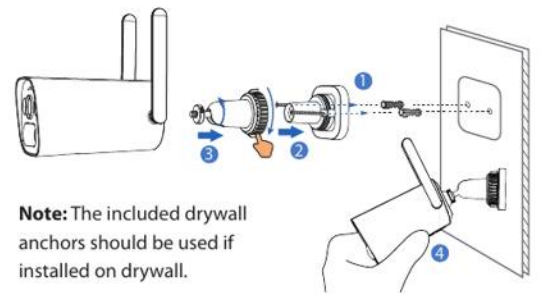


Note: The included drywall anchors should be used if installed on drywall.



12 Important Information

■ Camera Username & Password

The camera username & password are used to access and manage your camera. A strong password will significantly improve the security of your camera. If you have forgotten either of them, please press the reset button.

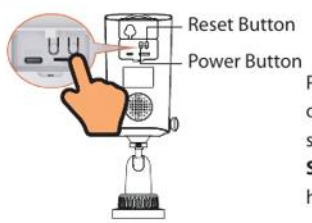

Press the reset button on the back of the camera and hold for 3~5 seconds to factory reset. A "**Reset Succeeded**" voice prompt will be heard when successful.

■ Replacement of Storage Media

Your camera supports event storage using the Micro SD card slot found on the back of the camera. The Micro SD card must be formatted to FAT32 or exFAT file systems.



Micro SD card
(FAT32 & exFAT)

■ Format a new or Micro SD Card to FAT32

① Purchase a new 16GB or greater Micro SD card.



② Insert Micro SD card into your computer's Micro SD slot, or into a Micro SD USB card reader.



③ Insert the USB card reader into a computer.




④ Download a FAT32 format tool or use the Vyanet FAT32 Format Tool found here: **https://www.vyanet.com/software**

⑤ Run the downloaded FAT32 tool.



Note: Always use caution when formatting any drive. Check to always ensure the correct drive is selected. Not selecting the correct drive when performing a format will result in permanent data loss.


⑥

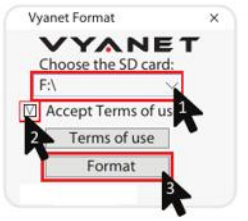


⑦



⑧

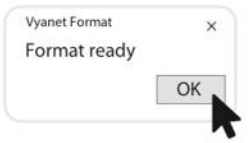

⑨



⑩



⑪




10 Mounting the Solar Panel


1. A location needs to be selected where sunlight is present throughout the entire year. The solar panel requires at least 4 hours of sunlight per day to maintain ideal battery levels during darkness. Conditions such as weather or location can affect the charging capacity of the solar panel.




2. Mount the bracket with the mounting template and the screws provided in the package.




3. Insert the solar panel into the mounted bracket and secure in place by twisting the retaining ring.

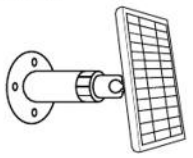

4. Loosen the retaining ring and adjust the solar panel to receive the maximum amount of sunlight throughout the day. Once a best angle is found, secure the solar panel again using the retaining ring.

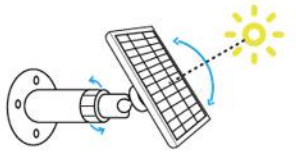


5. Insert the USB-C cable from the solar panel into the USB-C port on the camera.

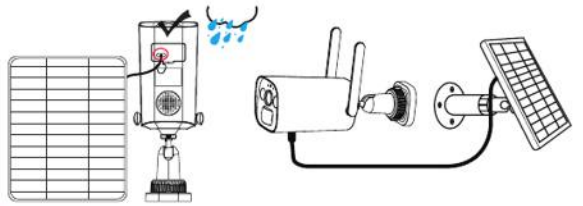

⚠ **Important Notes:**

1. Verify there are no obstructions to the solar panel throughout the day that would block sunlight to the solar panel. Any loss of sunlight will result in lower charging efficiency of the solar panel.
2. The solar panel should not be installed in a flat orientation. The solar panel should be tilted to minimize dust and debris buildup.
3. To maintain the solar panel, please wipe the panel to remove dust and debris on a regular interval or when there is a decrease seen in daily battery life.

4. To ensure the USB-C cable is securely connected, there is often a click that will occur to indicate a solid connection has been made.

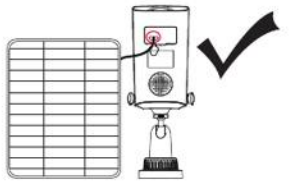

11 Connecting your Camera to a Computer

■ Vyanet VMS

Vyanet VMS is software used on a Windows or a MacOS computer. This software does not require additional plug-ins to operate. Vyanet VMS for Windows can be downloaded at **https://www.vyanet.com/software**. For Vyanet VMS for MacOS, the Apple App Store can be used to download and install.

Note: Vyanet VMS will be updated at regular intervals. Please check on occasion when using to ensure this application remains current.

■ Add the IP Camera

1. Open Vyanet VMS, and enter Vyanet Cloud credentials or create a local administrator account within Vyanet VMS.
2. Tap the "+" icon on the Vyanet VMS and follow the setup wizard to add your camera.

13 Product Specifications

WLAN frequency range: 2412MHz - 2472MHz
Maximum transmission power: < 16dBm
Wireless Standard: IEEE802.11b/g/n (2.4GHz)
Power Supply: DC 5V 2.0A 10W (Not included)
Solar: 5W Solar Panel
Battery: 10,000mAh 37Wh rechargeable battery

14 Troubleshooting

■ Camera is Not Powering On

If your camera is not turning on, please try the following:

1. Make sure the power button has been pressed to turn on the camera.
2. Fully charge the battery with a USB 5V/1A power adapter. A blue light indicates the battery is charging. It may take an extended amount of time for the blue light to appear. The battery is fully charged when both the blue and red lights appear together.
3. Contact SOCWorks if the blue light fails to come on after several hours of charging.

■ Failure to Scan QR Code on the Phone

If you cannot scan the QR code on your phone, please try the following:

1. Wipe the camera lens with a dry paper towel or tissue.
2. Vary the distance between the camera and mobile device to see if increasing or decreasing the distance helps scan.
3. Ensure the QR code is displayed in sufficient lighting.

■ Failure to Connect to Wi-Fi During Initial Setup Process

If the camera fails to connect to Wi-Fi, please try the following:

1. Verify the Wi-Fi network being connected to is broadcasting at 2.4GHz.
2. Verify the Wi-Fi network password entered is correct.
3. Move the camera closer to the Wi-Fi source or access point.
4. Verify the Wi-Fi connection used does not exceed 31 characters on the SSID (Wi-Fi network name) or 64 characters for the Wi-Fi password.
5. If still unable to connect the camera to Wi-Fi, please contact Vyanet SOCWorks at **socworks@vyanet.com**.

VYANET

Vyanet Operating Group, Inc.
410 SW Columbia St, Ste 120
Bend, OR 97702
(844) 4-VYANET



socworks@vyanet.com
(844) 4-VYANET

VYANET S2 Install

For a more detailed install guide, please refer to the Vyanet S2 Install Guide which can be accessed using this QR Code.

www.vyanet.com