Extreme networks

Extreme Platform ONE ™ Networking and ExtremeCloud IQ v25.14.0

Licensing Guide

Subscription and License Types, Management, and Troubleshooting

9041243-00 Rev AA
September 2026

Copyright © 2026 Extreme Networks, Inc. All rights reserved.

Legal Notice

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: https://www.extremenetworks.com/about-extreme-networks/company/legal/trademarks

Open Source Declarations

Some software files have been licensed under certain open source or third-party licenses. End-user license agreements and open source declarations can be found at: https://www.extremenetworks.com/support/policies/open-source-declaration/

Table of Contents

Abstract v
Preface vi
Text Conventions vi
Documentation and Training vii
Open Source Declarations viii
Training viii
Send Feedback viii
Help and Support viii
Subscribe to Product Announcements ix
Extreme Support Portal ix

Extreme Platform ONE Networking™ and ExtremeCloud IQ Subscriptions 12
License Entitlement Management 12
Link Your Extreme Portal Account | Extreme Platform ONE Networking or ExtremeCloud IQ (New) 14
Link Your Extreme Portal Account | ExtremeCloud IQ (Classic) 14
Unlink and Relink Your Extreme Portal Account | Extreme Platform ONE Networking and ExtremeCloud IQ (New) 15
Unlink and Relink Your Extreme Portal Account | ExtremeCloud IQ (Classic) 16
Trial Subscriptions 16
Trial Subscription Eligibility 17
Request a Trial Subscription 17
Upgrading to Extreme Platform ONE 18
What to Expect With a Mixed-Subscription Deployment 18
Unlocking Full Features 20

Subscriptions and Licenses 23
ExtremeCloud IQ Pilot 23
ExtremeCloud IQ CoPilot 24
ExtremeCloud IQ Navigator 25
ExtremeCloud IQ NAC 25
Third-Party Management Engine 26
Premier Switch Features 26
MACsec Switch Features 27
Extreme Platform ONE Standard Networking 27
ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility 29
Subscription Tier Priorities 29
Additional Requirements 30
ExtremeCloud IQ Controller 31
ExtremeCloud IQ Site Engine 31
Automatic Subscription Alignment 32
Subscription Expiration 33
ExtremeCloud IQ Legacy Entitlement Keys 33

Subscription Part Numbers....34

Management | Extreme Platform ONE™ Networking & ExtremeCloud IQ (New) 37

Subscriptions and Account Linking....37
ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility....38
Subscription Management....38
Subscription Management Example....39
Subscriptions & Licensing User Interface....41
Purchase a Subscription....42
Create a Subscription Request....42
Add Subscriptions to an Existing Enterprise Agreement Contract....43
Renew a Subscription....44
Add a Note to a Subscription....44
View Subscription History....45
General Subscription Management....45
Activate a Subscription....45
View the License Pool....46
Manage NAC Allocations | Extreme Platform ONE and ExtremeCloud IQ (New)....46
View Device State and Subscription Type....47
Pre-provisioning and Subscription Assignment....47
Contracts....48
Contract Status Descriptions....48
View Contract Information....49
Quick-Filter Contracts by a Pending Expiration Interval....49
Filter Contracts by Specified Date Range....49
Filter Contracts by Type or Status....50
Filter Contracts by Multiple Criteria....50
Download the Contracts Table....51
Renew a Contract....51
Contact Sales....51

Management | ExtremeCloud IQ (Classic)....52

View the License Pool....52
Manage NAC Allocations | ExtremeCloud IQ....53
Proactive Notifications....53
Enable or Disable Proactive Email Notifications....54
Entitlement Violations....54
ExtremeCloud IQ Pilot and Extreme Platform ONE Networking....54
ExtremeCloud IQ Navigator....55
ExtremeCloud IQ CoPilot....55
ExtremeCloud IQ NAC....56
Activate or Revoke an ExtremeCloud IQ CoPilot Subscription....57
Affected Devices Table....57
Pre-provisioning and Subscription Assignment....57
Troubleshooting....58

Abstract

This licensing guide for Extreme Platform ONE Networking and ExtremeCloud IQ version 25.14.0 covers subscription types, license entitlement management, and troubleshooting for network administrators managing device entitlements across cloud and on-premises deployments. The guide details License Entitlement Management (LEM), an automated system that assigns subscriptions from a license pool tied to a linked Extreme Portal account, and distinguishes licenses from entitlements. It documents available subscription types (Tiers A through D and 3RD)—along with subscription tier priorities, device eligibility rules, and ExtremeCloud IQ Pilot Twin subscriptions for backward compatibility with older ExtremeCloud IQ Site Engine and Controller versions. Management procedures are provided for Extreme Platform ONE Networking, ExtremeCloud IQ (New), and ExtremeCloud IQ (Classic), covering account linking, NAC allocation, mixed-subscription deployments, unlocking full features, contract management, and pre-provisioning. The guide also addresses trial subscription eligibility, automatic subscription alignment and expiration handling, and proactive entitlement violation notifications. Intended audience: network administrators with intermediate-to-advanced technical proficiency.

Preface

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.

Text Conventions

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as Extreme Networks switches, the product is referred to as *the switch*.

Table 1: Notes and warnings

Icon	Notice type	Alerts you to...
	Tip	Helpful tips and notices for using the product
	Note	Useful information or instructions
	Important	Important features or instructions
	Caution	Risk of personal injury, system damage, or loss of data
	Warning	Risk of severe personal injury

Table 2: Text

Convention	Description
`screen displays`	This typeface indicates command syntax, or represents information as it is displayed on the screen.
The words *enter* and *type*	When you see the word *enter* in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says *type*.
Key names	Key names are written in boldface, for example **Ctrl** or **Esc**. If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press **Ctrl**+**Alt**+**Del**
Words in italicized type	Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles.
NEW!	New information. In a PDF, this is searchable text.

Table 3: Command syntax

Convention	Description
bold text	Bold text indicates command names, keywords, and command options.
italic text	Italic text indicates variable content.
`[ ]`	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
`{ x | y | z }`	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x | **y**	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, such as passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, *member*[*member*...].
\	In command examples, the backslash indicates a “soft” line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

Documentation and Training

Find Extreme Networks product information at the following locations:

Current Product Documentation
Release Notes

Hardware and Software Compatibility for Extreme Networks products
Extreme Optics Compatibility
Other Resources such as articles, white papers, and case studies

Open Source Declarations

Some software files have been licensed under certain open source licenses. Information is available on the Open Source Declaration page.

Training

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit the Extreme Networks Training page.

Send Feedback

The User Enablement team at Extreme Networks has made every effort to ensure that this document is accurate, complete, and easy to use. We strive to improve our documentation to help you in your work, so we want to hear from you. We welcome all feedback, but we especially want to know about:

- Content errors, or confusing or conflicting information.
- Improvements that would help you find relevant information.
- Broken links or usability issues.

To send feedback, email us at Product-Documentation@extremenetworks.com.

Provide as much detail as possible including the publication title, topic heading, and page number (if applicable), along with your comments and suggestions for improvement.

Help and Support

If you require assistance, contact Extreme Networks using one of the following methods:

Extreme Portal

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

The Hub

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

Call GTAC

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1 (408) 579 2800. For the support phone number in your country, visit www.extremenetworks.com/support/contact.

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

1. Go to The Hub.
2. In the list of categories, expand the **Product Announcements** list.
3. Select a product for which you would like to receive notifications.
4. Select **Subscribe**.
5. To select additional products, return to the **Product Announcements** list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

Extreme Support Portal

The Extreme Networks Extreme Support Portal provides access to:

- License management
- Firmware downloads
- Case management
- GTAC Knowledge base
- And more

To access the portal, you must first create an account. The Extreme Support Portal provides separate registration forms for End Customers and Partners.

Before you begin, gather the following: A valid corporate email address — required to receive the appropriate level of portal access. Your company details: company name, address, phone number (include country code if outside the US), job title, and job role. At least one supporting identifier: Sold-to number, serial number, contract number, or Purchase Order (PO) number.

Create an End Customer Extreme Support Portal Account

The Extreme Support Portal provides separate registration forms for End Customers and Partners. Use this task to create an End Customer account.



Note
If you are adding a new user to an existing account, the new user must complete and be vetted through the same registration process.

The portal registration page is at https://extreme-networks.my.site.com/.

1. Go to the Extreme Support Portal and select **Login or Signup** on the login page.
2. On the login page, select **Create a new Extreme Customer Portal Account** .
3. Complete all required fields (marked *). Use your corporate email address to ensure the appropriate access level.

   Important
   Do not register with a personal email address.

4. Read the Support Portal Terms of Use and select the acknowledgment check box to accept.

   Important
   You must accept the Terms of Use before you can submit the form. You can adjust or withdraw consent at any time through the Email Preference Center.

5. Select **Register**.

   A confirmation message appears on the page and a password setup email is sent to your corporate email address.
6. Open the password setup email and follow the instructions to create your portal password.

   Tip
   If the email does not appear in your inbox within a few minutes, check your spam or junk mail folder.

7. To log in to the support portal go to: https://extremesaas.my.site.com/.

Create a Partner Extreme Support Portal Account

The Extreme Support Portal provides separate registration forms for End Customers and Partners. Use this task to create a Partner account.

The portal registration page is at https://extreme-networks.my.site.com/.

1. Go to the Extreme Support Portal and select **Login or Signup** on the login page.
2. On the login page, select **Create a new Extreme Partner Portal Account**.
3. Complete all required fields (marked *). Use your corporate email address to ensure the appropriate access level.

   Important
   Do not register with a personal email address.

4. Read the following terms and select the required check boxes:
   - Support Portal Terms of Use
   - Extreme Networks Standard Reseller Terms and Conditions
   - Trade Compliance Terms and Conditions

   You can adjust or withdraw consent at any time through the Email Preference Center.
5. Select **Register**.

   A confirmation message appears on the page and a password setup email is sent to your corporate email address.
6. Open the password setup email and follow the instructions to create your portal password.

   Tip
   If the email does not appear in your inbox within a few minutes, check your spam or junk mail folder.

7. To log in to the support portal go to: https://extremesaas.my.site.com/.

Extreme Platform ONE Networking™ and ExtremeCloud IQ Subscriptions

License Entitlement Management on page 12
Link Your Extreme Portal Account | Extreme Platform ONE Networking or ExtremeCloud IQ (New) on page 14
Link Your Extreme Portal Account | ExtremeCloud IQ (Classic) on page 14
Unlink and Relink Your Extreme Portal Account | Extreme Platform ONE Networking and ExtremeCloud IQ (New) on page 15
Unlink and Relink Your Extreme Portal Account | ExtremeCloud IQ (Classic) on page 16
Trial Subscriptions on page 16
Upgrading to Extreme Platform ONE on page 18

All managed network devices require subscriptions. This document describes the available subscription types, the requirements, and how to order and manage subscriptions using the following management applications:

- Extreme Platform ONE Networking
- ExtremeCloud IQ (New)
- ExtremeCloud IQ (Classic)

Note
All instances of ExtremeCloud IQ in this document refer to both ExtremeCloud IQ (Classic) and ExtremeCloud IQ (New), unless otherwise noted.
The terms **License** and **Entitlements** are not interchangeable. For more information, see Table 4 on page 13.

License Entitlement Management

License Entitlement Management (LEM) is a system that enables automatic subscription management. Subscriptions are not tied to specific device serial numbers, but instead stored in the *license pool* in your Extreme Portal Account. When your management application and Extreme Portal Account are linked, subscription assignment occurs automatically when you onboard new devices or when devices transition from the unmanaged to the managed state. Automatic subscription assignment requires sufficient subscriptions to cover all devices.

For more information about the terminology used in this guide, see Table 4.

Table 4: Terminology

Term	Definition
Contract	A record of the number of subscriptions and or support services in a purchase order, including their start and end dates. Each line item in a contract includes the quantity of subscriptions for the application or support service.
Contract Number	Each contract has a unique Contract Number—previously known as the Contract ID.
CUID	A customer account ID, assigned by Extreme Networks to manage subscriptions. Customers typically have a single CUID, while MSPs can have multiple CUIDs.
Entitlement	Entitlement refers to the right to use a feature or function. There might be multiple entitlements for one subscription. For instance, a subscription can include a cloud management entitlement and a TAC/OS entitlement. Typically, an entitlement has a meter that determines the unit of measure for the feature it covers. For instance, an entitlement can be per-device or per-user.
License	A license is required for the perpetual use of software and is typically downloaded or delivered with hardware. It defines the rights and restrictions of software usage for the user.
Managed Device	A managed device that is assigned a subscription and is managed by the cloud, Site Engine, or a controller. Managed devices can be monitored by Extreme Networks applications, and can be in **Connected** or **Disconnected** states.
Subscription	A subscription gives a customer the right to use an application, feature, or function for a defined period of time. A subscription has a start date and an end date. For example, a customer might purchase 30 subscriptions of Tier A, whereby each Tier A subscription contains an entitlement for management and TAC/OS. Premier subscriptions also include an entitlement for Premier support.
Subscription Group	A subscription group is a group of subscriptions that have the same start and end date, and are of the same subscription type.
Subscription Status	A subscription can be **Active**, **Inactive**, or **Expired**: • Active means the start date is in the past, and the end date is in the future. • Inactive means the start date is in the future. • Expired means the end date is in the past.

Table 4: Terminology (continued)

Term	Definition
Support Services	Support services provide assistance to ensure effective product operation and maintenance, and the resolution of product-related issues. These are available for standalone purchase, or as part of certain subscriptions.
Unmanaged Device	An unmanaged device is a device that does not have a subscription assigned to it. Extreme Networks does not provide services for unmanaged devices—no management, no monitoring, no updates, no upgrades. An unmanaged device is treated as inventory-only. If there are not enough subscriptions, you or the system can unmanage devices. Unmanaged devices can be deleted or converted to the **Managed** state. If enough subscriptions are available. Unmanaged devices are always in the **Disconnected** state.

Link Your Extreme Portal Account | Extreme Platform ONE Networking or ExtremeCloud IQ (New)

Use this task to link your Extreme Portal account and Extreme Platform ONE Networking or ExtremeCloud IQ (New).

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**.
2. Select the **Global** tab.
3. Select **Link Extreme Portal Account** and type your Extreme Portal credentials.

Related Links

View the License Pool on page 46

Link Your Extreme Portal Account | ExtremeCloud IQ (Classic)

Use this task to link your Extreme Portal account and ExtremeCloud IQ (Classic).

1. Go to **Global Settings** > **Administration** > **License Management**.

2. Select **Link My Extreme Portal Account** and enter your Extreme Portal credentials.

Note
If you are a partner or a distributor and are setting up an Extreme Portal account for a customer, type your Extreme Portal credentials and the Customer Unique Identifier (CUID). The CUID is included in the customer welcome letter.

Depending on the subscriptions purchased, ExtremeCloud IQ displays subscription information in the **Entitlements** and the **NAC Entitlements** tables.

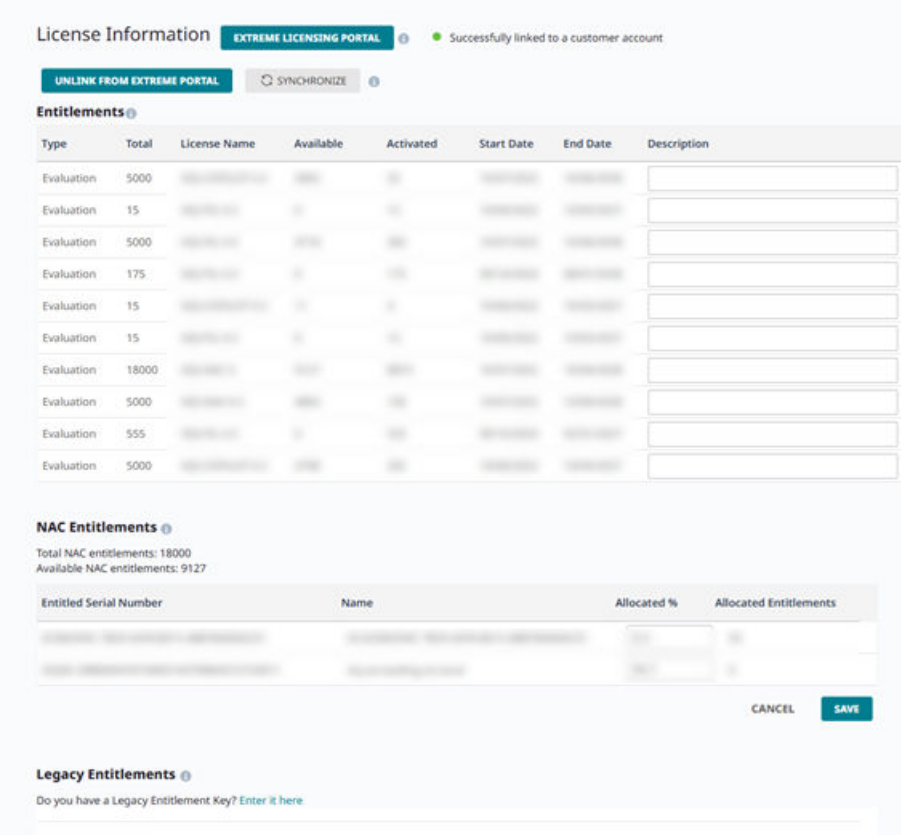


Figure 1: ExtremeCloud IQ License Information Page

Related Links

View the License Pool on page 52

Unlink and Relink Your Extreme Portal Account | Extreme Platform ONE Networking and ExtremeCloud IQ (New)

You must have full access to **Subscriptions & Licensing**—Administrator role.

Note
Perform this procedure only as part of a testing or troubleshooting strategy.

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**.
2. Select **Unlink from Extreme Portal**.

3. Select **Link Extreme Portal Account** and enter your Extreme Portal credentials.

Unlink and Relink Your Extreme Portal Account | ExtremeCloud IQ (Classic)

Note
Perform this procedure only as part of a testing or troubleshooting strategy.

1. Go to **Global Settings** > **Administration** > **License Management**.
2. Select **Unlink from Extreme Portal**.
3. Select **Link My Extreme Portal Account** and enter your Extreme Portal credentials.

   The subscription information appears in the **Entitlements** table.

Trial Subscriptions

Note
An administrator can request a 90-day free trial subscription for an Extreme Platform ONE application only once. Extreme Platform ONE Networking, ExtremeCloud SD-WAN, and Extreme Platform ONE Security are available for trial.

ExtremeCloud IQ (Classic) is no longer available for trial.

Trial subscription requests are not available for Managed Service Provider (MSP) tenants.

Users with the following Extreme Platform ONE Networking roles and other product or application roles can request a trial subscription:

Extreme Platform ONE Networking**:**

- Administrator
- BizOps

ExtremeCloud IQ (New)**:**

Administrator

ExtremeCloud IQ (Classic)

- Administrator
- Operator

ExtremeCloud SD-WAN

- Administrator

Extreme Intuitive Insights

- Administrator

The request trial must meet the following criteria to be valid:

- The account is linked to Extreme Portal.
- The request is initiated from the **Subscriptions & Licensing** page.
- An active subscription does not exist for the selected product.

- A previous trial was not granted.
- An expired subscription does not exist for the selected product.

If your request is rejected, you are notified and the next step is to contact the Sales team. In addition to not meeting the preceding criteria, a request can be rejected for the following reasons:

- Sanctioned country
- Sanctioned company
- Sanctioned individual
- Trial already expired
- Production entitlement already present or expired

Related Links

Request a Trial Subscription on page 17

Trial Subscription Eligibility

Request a trial subscription only if you meet the following criteria:

- You are a new Extreme Platform ONE or ExtremeCloud IQ (New) customer.
- You are an existing Extreme Platform ONE, ExtremeCloud IQ (New), or ExtremeCloud IQ (Classic) customer who has never purchased or requested a trial subscription for the application you are considering.

Note
If you requested and were granted a trial in the past but never used it, you are disqualified from a new trial.

Request a Trial Subscription

Use this task to request a 90-day trial subscription.

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**
2. On the **Subscriptions & Licensing** page, select **Start Trial**.

Note
On first request, a **Request Process** diagram opens.
- (Optional) Select **Do not show this message again**.
- Select **OK**.

   a. Select the checkbox to **Accept Terms and Conditions** and acknowledge the policy.
   b. Select the check box to agree to share contact information.
   c. Select **Accept and Continue**.
3. In **Select Request**, select **Subscriptions**, and then select **Next**.
4. Select the application that you want to trial, and select **Add** adding each one to the cart.
5. When you finish adding applications to the cart, select **Next**.

6. Type your phone number and fill out any optional information, then select **Next**.
7. Review your request, and then select **Next** to download the request document.
8. Submit the request document to your Extreme Networks partner or contact your account team to submit the request.

Note
Depending on the application and regulatory requirements, the trial subscription is available after a few minutes or up to five working days after verification. In addition to the in-product subscription-request notification, you receive email notification regarding the status of your request.

If you have not received the licenses after two business days, contact your account team.

If the trial subscription request is rejected, contact your account team.

Upgrading to Extreme Platform ONE

Upgrading from ExtremeCloud IQ to Extreme Platform ONE Networking does not require migration. It is subscription-dependent. Your network data remains in the cloud, and the login URL remains the same.

After purchasing and activating any quantity of Extreme Platform ONE Standard Networking subscriptions (Tiers A-D), the system detects them at the next login and loads the Extreme Platform ONE Networking interface. You can use the 9-dot menu to switch between the Extreme Platform ONE Networking and ExtremeCloud IQ (Classic) interfaces.

Note
Subscription notes defined in ExtremeCloud IQ (Classic) are available in Extreme Platform ONE Networking and ExtremeCloud IQ (New), and vice versa. Upgrading to Extreme Platform ONE Networking does not affect your subscription notes. For more information, see Add a Note to a Subscription on page 44.

You can use AI Expert to help you to learn about Extreme Platform ONE Networking updates to the menus and landing pages, or see the *Extreme Platform ONE User Guide*.

Important
If you have not purchased enough Extreme Platform ONE Standard Networking subscriptions to cover all devices, see Upgrading to Extreme Platform ONE on page 18.

What to Expect With a Mixed-Subscription Deployment

Full-feature access for Extreme Platform ONE Networking requires Extreme Platform ONE subscriptions. If a building, outdoor site, or fabric uses a ExtremeCloud IQ Pilot subscription, feature access is limited. To enable full-feature access, the site (indoor or outdoor), building, or fabric must use only Extreme Platform ONE subscriptions. For more information, see Table 5 on page 19.

A blue icon in Extreme Platform ONE Networking indicates limited-feature status. You can unlock full features provided that you have enough available subscriptions.

Note

If your mixed-subscription deployment includes active CoPilot subscriptions, you can use the 9-dot menu to switch to ExtremeCloud IQ (New), and then select **CoPilot** from the ExtremeCloud IQ (New) 9-dot menu.

Table 5: Comparison of available features according to subscription

Feature	Only ExtremeCloud IQ Pilot subscriptions	Mixed subscriptions	Only Extreme Platform ONE Standard subscriptions
Subscriptions All	No	Yes	Yes
Visualize | Physical layer	No	Yes	Yes
Visualize | Fabric layer	No	*	Yes
Visualize | Service layer	No	Yes	Yes
Visualize | Split view	No	Yes	Yes
Show Endpoint to Endpoint Service/ VLAN	No	**	Yes
Contracts	No	Yes	Yes
Inventory	No	Yes	Yes
Custom Roles	No	Yes	Yes
AI Expert	No	Yes	Yes
Agent workflows	No	Yes	Yes
Fabric Configuration	No	***	Yes

* For more information, see Unlocking Full Features on page 20.

** The **Show Endpoint to Endpoint Service/VLAN** feature requires that both selected devices be located in buildings or sites with full features unlocked.

*** The **Configure Fabric** option is available only if all buildings, where Fabric Engine devices are located, have full features unlocked. If a device is using an ExtremeCloud IQ Pilot subscription and there is an available Extreme Platform ONE subscription, the tooltip is: **Extreme Platform ONE Subscription not Assigned**. If the device already has an Extreme Platform ONE subscription, but the site or building is not compliant, the tooltip is: **Limited Extreme Platform ONE Features**.

Unlocking Full Features

Full-feature access for Extreme Platform ONE Networking requires Extreme Platform ONE subscriptions. Extreme Platform ONE Networking supports mixed-subscription deployments with some feature limitations. If you have enough Extreme Platform ONE subscriptions, you can unlock Extreme Platform ONE Networking full features for single or multiple sites (including outdoor sites), site groups, buildings, or fabrics, from the **Inventory**, **Sites**, or **Visualize** menus, or the **Device Inspector** panel.

Note
In **Visualize**, for the Physical and Fabric layers, the **Unlock Full Features** option is available at the site and group site levels in **Quick Location Navigation**, only if all child buildings have limited feature access. Blue icons indicate limited feature access. If you do not have enough available subscriptions, Extreme Platform ONE Networking can automatically swap (reassign) subscriptions with devices in locations for which full features are not unlocked.

First, ensure that you have enough subscriptions for all devices in the target sites or buildings. You have the following options:

- Use (manually reassign) existing subscriptions. See Reassign Subscriptions | Inventory on page 20, Reassign Subscriptions| Visualize on page 21, or Reassign Subscriptions | Device Inspector Panel on page 22.
- Purchase a new subscription to add more subscriptions. See Purchase a Subscription on page 42.

Related Links

Subscription Tier Priorities on page 29
Purchase a Subscription on page 42
Reassign Subscriptions | Inventory on page 20
Reassign Subscriptions| Visualize on page 21
Reassign Subscriptions | Device Inspector Panel on page 22

Reassign Subscriptions | Inventory

To reassign subscriptions, you must have write access to **Inventory** and **Subscriptions & Licensing**, and you must have sufficient Extreme Platform ONE Standard Networking subscriptions.

Important
This process is non-reversible.

Use this procedure to reassign subscriptions to a site, building, or fabric, replacing ExtremeCloud IQ Pilot subscriptions with Extreme Platform ONE Standard Networking subscriptions.

1. Go to **Subscriptions & Services** > **Inventory**.

2. Select all sites or filter sites.

   If one or more associated devices use ExtremeCloud IQ Pilot licenses, Extreme Platform ONE Networking displays a widget that shows the number of buildings and the number of devices using Pilot licenses.
3. Use the widget to drill down to the devices for the filtered sites, and then select **Unlock Full Features**.

   For more information, see What to Expect With a Mixed-Subscription Deployment on page 18.

   Note
   If one or more devices are Fabric Engine, to allow the reassignment, you must select all buildings with Fabric Engine.

4. Select the sites or buildings to unlock, and then select **Next**.

   Blue icons indicate limited features.
5. Select **Unlock**.

   If you do not have sufficient subscriptions to unlock the selected sites or buildings, the dialog lists the total number of required subscriptions by subscription tier. To purchase the requisite number of subscriptions, select **Request Subscription**.

Related Links

What to Expect With a Mixed-Subscription Deployment on page 18

Reassign Subscriptions| Visualize

To reassign subscriptions, you must have write access to **Inventory** and **Subscriptions & Licensing**, and you must have sufficient Extreme Platform ONE Standard Networking subscriptions.

Important
This process is non-reversible.

Use this procedure to reassign Extreme Platform ONE Standard Networking subscriptions to a site, building, or fabric, replacing ExtremeCloud IQ Pilot subscriptions with Extreme Platform ONE Standard Networking subscriptions.

1. Go to **Monitoring** > **Visualize**.
2. In Sites (**Quick Location Navigation**), select one or more sites or buildings.

   Blue icons indicate limited features.
3. Select , and then choose **Unlock Full Features**.

   Note
   If there are one or more Fabric Engine devices, to enable the reassignment, you must select all buildings with Fabric Engine.

4. Select the sites or buildings to unlock, and then select **Next**.

5. Select **Unlock**.

   If you do not have sufficient subscriptions to unlock the selected sites or buildings, the dialog lists the total number of required subscriptions by subscription tier. To purchase the requisite number of subscriptions, select **Request Subscription**.

Reassign Subscriptions | Device Inspector Panel

To reassign subscriptions, you must have write access to **Inventory** and **Subscriptions & Licensing**, and you must have sufficient Extreme Platform ONE Standard Networking subscriptions.

The selected device must display the status **Connected, Limited Features**.



Important
This process is non-reversible.

When you hover over **Connected, Limited Features**, Extreme Platform ONE Networking displays one of the following tooltips:

- **Extreme Platform ONE Subscription not Assigned**

  This tooltip indicates that the device is using a ExtremeCloud IQ Pilot subscription.
- **Limited Platform ONE Features**

  This tooltip indicates that the device is using an Extreme Platform ONE Standard Networking subscription, and the device belongs to a site or building with limited features.

Use this procedure to reassign subscriptions to a site, building, or fabric, replacing ExtremeCloud IQ Pilot licenses with Extreme Platform ONE Standard Networking subscriptions.

1. In the **Device Inspector** panel, select **Limited Features**.
2. Select the buildings or sites to unlock, and then select **Next**.

   Blue icons indicate limited features.
3. Select **Unlock**.

   If you do not have sufficient subscriptions to unlock the selected sites or buildings, the dialog lists the total number of required subscriptions, according to tier. To purchase the requisite subscriptions, select **Request Subscription**.



Subscriptions and Licenses

ExtremeCloud IQ Pilot on page 23
ExtremeCloud IQ CoPilot on page 24
ExtremeCloud IQ Navigator on page 25
ExtremeCloud IQ NAC on page 25
Third-Party Management Engine on page 26
Premier Switch Features on page 26
MACsec Switch Features on page 27
Extreme Platform ONE Standard Networking on page 27
ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility on page 29
Subscription Tier Priorities on page 29
Additional Requirements on page 30
ExtremeCloud IQ Controller on page 31
ExtremeCloud IQ Site Engine on page 31
Automatic Subscription Alignment on page 32
Subscription Expiration on page 33
ExtremeCloud IQ Legacy Entitlement Keys on page 33

The following sections describe the subscriptions available for ExtremeCloud IQ, and Extreme Platform ONE™ Networking.

ExtremeCloud IQ Pilot

ExtremeCloud IQ Pilot subscriptions give your managed devices all of the features and functionality offered by an ExtremeCloud IQ Pilot system. Each Pilot subscription covers a single device.

The following devices require ExtremeCloud IQ Pilot subscriptions:

- Cloud-native switches managed by ExtremeCloud IQ
- Cloud-native access points managed by ExtremeCloud IQ

- Devices managed by ExtremeCloud IQ Site Engine
- Devices that require an ExtremeCloud IQ Navigator subscription

Note
If there are not enough ExtremeCloud IQ Navigator subscriptions, you can use an ExtremeCloud IQ Pilot or Extreme Platform ONE Standard Networking subscription instead. For more information, see Subscription Tier Priorities on page 29.

The following devices do not require an ExtremeCloud IQ Pilot subscription:

- Digital Twin devices
- Simulated devices
- Unmanaged devices
- Ping-only devices onboarded through ExtremeCloud IQ Site Engine
- Devices assigned an ExtremeCloud IQ Navigator subscription
- Locally managed devices that have been onboarded to ExtremeCloud IQ
- Universal Compute Platform appliances and clusters
- Devices assigned an Extreme Platform ONE Standard Networking subscription

For more information about subscription requirements, see Additional Requirements on page 30.

Related Links

ExtremeCloud IQ Pilot and Extreme Platform ONE Networking on page 54
Additional Requirements on page 30

ExtremeCloud IQ CoPilot

Note
CoPilot subscriptions are available to existing CoPilot customers only.

CoPilot subscriptions offer eligible devices additional functionality. You must have an ExtremeCloud IQ Pilot or an Extreme Platform ONE Standard Networking subscription to use an ExtremeCloud IQ CoPilot subscription. ExtremeCloud IQ CoPilot is available for all ExtremeCloud IQ Pilot accounts, but is unavailable for Extreme Connect accounts or for Navigator accounts. After you link your account to the Extreme Portal, ExtremeCloud IQ obtains the CoPilot subscriptions from the license pool.

The following devices are **NOT** eligible for ExtremeCloud IQ CoPilot subscriptions:

- ExtremeCloud IQ Controller
- Extreme Campus Controller
- Devices onboarded through Extreme Campus Controller
- WiNG devices
- Devices onboarded through ExtremeCloud IQ Controller
- Devices onboarded through ExtremeCloud IQ Site Engine
- Digital Twin devices

- Simulated devices
- SR (legacy switch) devices reporting directly to ExtremeCloud IQ
- Dell N-series devices reporting directly to ExtremeCloud IQ
- Devices onboarded as **Managed Locally**
- Devices for which the subscription was revoked by using the **Actions** menu.

  Actions > **Change CoPilot License Status** > **Revoke CoPilot License**
- Unmanaged devices

Related Links

ExtremeCloud IQ Pilot on page 23
ExtremeCloud IQ CoPilot on page 55
Extreme Platform ONE Standard Networking on page 27

ExtremeCloud IQ Navigator

An ExtremeCloud IQ Navigator subscription provides management functions for third-party and non-native cloud devices. Features include Application Visibility, SSH Proxy, Web Proxy to WiNG Controller, and Web Proxy to Extreme Campus Controller and ExtremeCloud IQ Controller.

Each Navigator subscription covers a single device. The following devices require a Navigator subscription:

- Some devices managed by ExtremeCloud IQ Site Engine. For more information, see *ExtremeCloud IQ Site Engine Licensing*.
- WiNG (VX) controllers that are onboarded to ExtremeCloud IQ require one ExtremeCloud IQ Navigator subscription per device.
- WiNG APs that are onboarded using the WiNG (VX) controller require one subscription per device.

Related Links

ExtremeCloud IQ Navigator on page 55

ExtremeCloud IQ NAC

Network Access Control (NAC) uses a set of protocols to secure devices when they access the network. The 802.1X standard is a basic form of NAC. NAC controls access using policies such as pre-admission endpoint security checks and post-admission controls over access levels, and permissions that devices exercise in the network.

ExtremeCloud IQ NAC subscriptions are compatible with ExtremeCloud A3 version 4.0 and later, and with ExtremeCloud IQ Site Engine version 21.9 and later.

Because the quantity of total NAC subscriptions can change over time, the allocation is stored as a percentage. However, the management application displays the allocation both as a percentage and as a calculated absolute number.

Related Links

Manage NAC Allocations | Extreme Platform ONE and ExtremeCloud IQ (New) on page 46
Manage NAC Allocations | ExtremeCloud IQ on page 53
ExtremeCloud IQ NAC on page 56

Third-Party Management Engine

Third-Party Management Engine manages on-premises, non-cloud native devices that communicate using SNMP, including third-party devices and Extreme Networks legacy devices.

Third-Party Management Engine requires a Tier A or better subscription. If Third-Party Management Engine is unmanaged, it does not report statistics to the cloud management application. All devices managed by Third-Party Management Engine require a Tier 3RD or better subscription. See Subscription Tier Priorities on page 29.

Related Links

Subscription Tier Priorities on page 29

Premier Switch Features

While the base software included with each switch supports most switch features, certain features require a Premier license. Feature requirements are platform- and network operating system-specific. For details and ordering information, see the switch datasheets.

Universal Switches running Switch Engine or Fabric Engine might require a Premier license to enable advanced features or a higher feature tier. A Premier license is available as either a perpetual license or included as part of an Extreme Platform ONE Standard Networking subscription.

You can push a Perpetual Premier License to the switch using the management application GUI, or install it manually using a license file generated by the Extreme Portal: https://extremeportal.force.com/ExtrLogin.

For switches managed by ExtremeCloud IQ, Extreme Platform ONE, or ExtremeCloud IQ Site Engine with a Pilot or Extreme Platform ONE subscription used by the switches, the management application receives notification of the license and enables the use of Premier switch features for the duration of the subscription. The switches must be 5xxx or 7xxxx series. See the switch documentation for the minimum firmware versions.

Note
Although Extreme Platform ONE entitlements include Premier features, the management application displays Premier perpetual licenses only if an actual Premier license exists on the switch. If only Pilot or Extreme Platform ONE subscriptions exist, the management application displays only the subscription entitlement level.

MACsec Switch Features

While the base software included with each switch supports most switch features, MACsec features require a MACsec license. For details and ordering information, see the switch datasheets.

Extreme Platform ONE Standard Networking

Extreme Platform ONE Standard Networking subscriptions provide managed devices all the features and functionality offered by an ExtremeCloud IQ Pilot system, plus access to Extreme Platform ONE and device TAC OS Support. Each Extreme Platform ONE Standard Networking subscription includes subscriptions for a specific number of single devices.

Important
While TAC OS Support is included in Extreme Platform ONE Standard Networking subscriptions, there are exceptions documented in *Products with TAC & OS Excluded from a Platform ONE Subscription* published at https://www.extremenetworks.com/support/policies.

Platform ONE Standard Networking subscriptions are divided into subscription tiers, as described in the following table.

Table 6: Extreme Platform ONE Standard Networking Subscription Tiers

Subscription tier	Device family
Tier A	Universal APs Non-Universal APs 4000 Series 5100 Series 5300 Series Summit X435 Summit X440-G2 SR Series N Series BR Series XR Series XA 1400 Series Third-Party Management Engine
Tier B	5400 Series Summit X450-G2 ERS 4800 ERS 4900

Table 6: Extreme Platform ONE Standard Networking Subscription Tiers (continued)

Subscription tier	Device family
Tier C	5500 Series Summit X460-G2 Summit X465 Summit X590 VSP 4450 VSP 4850 VSP 4900 ERS 5900
Tier D	5700 Series 7000 Series Summit X670-G2 Summit X690 Summit X870 VSP 7200 Series VSP 7400 Series VSP 8200 Series VSP 8400 Series VSP 8600 Series
Tier 3RD	Devices managed by Third-Party Management Engine

The following devices require an Extreme Platform ONE Standard Networking subscription:

- Cloud-native switches managed by Extreme Platform ONE Networking
- Cloud-native access points managed by Extreme Platform ONE Networking
- Devices managed by ExtremeCloud IQ Site Engine

The following devices do not require an Extreme Platform ONE Standard Networking subscription:

- Digital Twin devices
- Simulated devices
- Unmanaged devices
- Ping-only devices onboarded through ExtremeCloud IQ Site Engine
- Devices assigned an ExtremeCloud IQ Navigator subscription

  If there are not enough ExtremeCloud IQ Navigator subscriptions, you can use an Extreme Platform ONE Standard Networking subscription instead. For more information, see Subscription Tier Priorities on page 29.
- Locally managed devices that have been onboarded to Extreme Platform ONE Networking
- Universal Compute Platform appliances and clusters

For more information about subscription requirements, see Additional Requirements on page 30.

Related Links

Additional Requirements on page 30

ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility

Some versions of ExtremeCloud IQ Site Engine and ExtremeCloud IQ Controller do not support Extreme Platform ONE Standard Networking subscriptions. To provide you with the necessary time to upgrade to later versions, every Extreme Platform ONE Standard Networking subscription includes an ExtremeCloud IQ Pilot Twin subscription with the same start date, end date, and subscription quantity.

- The Extreme Portal displays both Extreme Platform ONE Standard Networking and ExtremeCloud IQ Pilot Twin subscriptions.
- ExtremeCloud IQ (Classic) and ExtremeCloud IQ (New) do not display ExtremeCloud IQ Pilot Twin subscriptions.
- Extreme Platform ONE applications [1] do not display ExtremeCloud IQ Pilot Twin subscriptions.
- ExtremeCloud IQ Site Engine version 25.2 and earlier supports ExtremeCloud IQ Pilot and ExtremeCloud IQ Pilot Twin subscriptions.
- ExtremeCloud IQ Site Engine version 25.5 and later supports ExtremeCloud IQ Pilot and Extreme Platform ONE Standard Networking subscriptions.
- ExtremeCloud IQ Controller versions support ExtremeCloud IQ Pilot and ExtremeCloud IQ Pilot Twin subscriptions.

[1] Extreme Platform ONE Networking or Extreme Platform ONE Security

Note
If you purchased Extreme Platform ONE Standard Networking subscriptions and are running management application versions that are incompatible with them, you can use the provided ExtremeCloud IQ Pilot Twin subscriptions.

Contracts that include Extreme Platform ONE Standard Networking subscriptions identify the Pilot Twin subscriptions as XIQ-CHILD-PIL-S-C-PWP or XIQ-CHILD-PIL-S-C-EW.

Subscription Tier Priorities

When you add devices, or change the device status from **Unmanaged** to **Managed**, Extreme Platform ONE Networking and ExtremeCloud IQ can use a higher subscription tier if the appropriate tier is unavailable.

Example: For a device that belongs to Tier A, the management application assigns a Tier A subscription. If the Tier A subscription is unavailable, the management application assigns a Tier B subscription. See the following table for more information.

Table 7: Subscription tier priorities

Subscription	Navigator eligible device	Tier A device	Tier B device	Tier C device	Tier D device	TPME *	TPME * managed device
Tier 3RD	**First Choice**	—	—	—	—	—	**First Choice**
Navigator	Priority 2	—	—	—	—	—	—
Standard Tier A	Priority 3	**First Choice**	—	—	—	**First Choice**	Priority 2
Standard Tier B	Priority 4	Priority 2	**First Choice**	—	—	Priority 2	Priority 3
Standard Tier C	Priority 5	Priority 3	Priority 2	**First Choice**	—	Priority 3	Priority 4
Standard Tier D	Priority 6	Priority 4	Priority 3	Priority 2	**First Choice**	Priority 4	Priority 5
Pilot **	Priority 7	Priority 5	Priority 4	Priority 3	Priority 2	—	Priority 6
Unmanaged	Priority 8	Priority 6	Priority 5	Priority 4	Priority 3	Priority 5	Priority 7

* Third-Party Management Engine (TPME)

** Pilot subscriptions cannot be assigned for devices located in a site or building after you Unlock Full Features for that site or building.

Additional Requirements

There are additional requirements and considerations for the following applications and devices.

Device Stacks

Device stacks can use subscriptions of different tiers, subject to the following requirements:

- The subscriptions must all be of the same level—Standard or Pilot. A combination is unsupported.
- Each unit in a stack requires a subscription. If there are insufficient subscriptions to cover all devices in a stack, the entire stack is **Unmanaged**.

Note
Extreme Platform ONE Networking and ExtremeCloud IQ do not support onboarding stacks that include devices from different families (heterogenous stacks). ExtremeCloud IQ Site Engine supports heterogenous stacks, and can be onboarded to Extreme Platform ONE Networking or ExtremeCloud IQ.

ExtremeCloud IQ Site Engine

Each instance of ExtremeCloud IQ Site Engine, ExtremeCloud IQ Site Engine Analytics, and ExtremeCloud IQ Site Engine Control requires a subscription.

If there is no suitable subscription with available subscriptions, ExtremeCloud IQ Site Engine and all devices managed by the Site Engine are **Unmanaged**.

ExtremeCloud Tunnel Concentrator

Each instance of Tunnel Concentrator requires a Tier A subscription. If there is no suitable subscription, Tunnel Concentrator is inoperative.

Additionally, each AP connected to a Tunnel Concentrator requires a Tier A subscription.

ExtremeCloud IQ Controller

ExtremeCloud IQ Controller is a scalable, on-premises network management appliance (physical or virtual) designed for unified wired and wireless control in campus and high-density environments. It manages up to 20,000 devices (including 1,000 switches) and supports up to 100,000 concurrent users.



Note
ExtremeCloud IQ Controller requires a one-time, per appliance activation key (sold separately) to enable the software on the hardware or virtual appliance.

Each device managed by ExtremeCloud IQ Controller requires one of the following subscription options:

- ExtremeCloud IQ Pilot, or Pilot Twin (included with Extreme Platform ONE Standard Networking subscriptions)
- ExtremeCloud IQ Navigator

While it operates independently on-premises, it can optionally connect to the ExtremeCloud IQ or Extreme Platform ONE Networking cloud platform. While ExtremeCloud IQ Controller shares information with the cloud platform, it does not rely on the cloud platform for licensing.

Connected Mode

ExtremeCloud IQ Controller connects directly to License Entitlement Management (LEM). The Controller does not use the cloud platform connection to LEM.

Air-Gap Mode

ExtremeCloud IQ Controller stores subscriptions locally in a file for determining whether the deployment has sufficient subscriptions of each subscription type. This mode ensures that ExtremeCloud IQ Controller does not require an Internet connection for LEM.

For more information see *ExtremeCloud IQ Controller documentation*.

ExtremeCloud IQ Site Engine

ExtremeCloud IQ Site Engine extends and enhances ExtremeCloud IQ management of Extreme Networks Universal Hardware (switches and access points), and legacy, third-party,

and non-cloud native devices. ExtremeCloud IQ Site Engine provides end-to-end network management, task automation, real-time analytics, and service assurance.

ExtremeCloud IQ Site Engine includes all the features and functionality of Extreme Management Center. If you are an existing Extreme Management Center customer, contact your representative to have your Extreme Management Center license migrated to ExtremeCloud IQ Site Engine.

Note

ExtremeCloud IQ Site Engine requires an ExtremeCloud IQ Pilot or an Extreme Platform ONE Standard Networking subscription. ExtremeCloud IQ Site Engine is unsupported with ExtremeCloud IQ Connect accounts.

Each device managed by ExtremeCloud IQ Site Engine requires one of the following subscription options:

- ExtremeCloud IQ Pilot
- ExtremeCloud IQ Navigator
- Extreme Platform ONE Standard Networking
- No subscription—applies to devices added with a ping-only profile, typically used for monitoring non-SNMP devices, such as printers, cameras, and IoT sensors, or third-party devices where full management is not required.

There are two deployment modes for ExtremeCloud IQ Site Engine:

- **Connected mode:** ExtremeCloud IQ manages subscriptions for ExtremeCloud IQ Site Engine. As you add devices to ExtremeCloud IQ Site Engine, they onboard to ExtremeCloud IQ, with a request for an appropriate subscription. ExtremeCloud IQ activates the available subscription from the license pool and determines whether you meet or exceed the limits for each subscription type. All ExtremeCloud IQ Site Engines connected to the same ExtremeCloud IQ account share the same pool. A managed device requires one subscription, depending on the number of ExtremeCloud IQ Site Engines managing that device.
- **Air gap mode:** ExtremeCloud IQ Site Engine stores subscriptions locally in a file for determining whether you meet or exceed the limits for each subscription type. This mode ensures that ExtremeCloud IQ Site Engine does not require an Internet connection to verify the number of available subscriptions.

For more detailed information, visit *ExtremeCloud IQ Site Engine Licensing*.

Related Links

ExtremeCloud IQ Pilot on page 23
ExtremeCloud IQ Navigator on page 25
Extreme Platform ONE Standard Networking on page 27

Automatic Subscription Alignment

When you onboard new devices or the license pool changes, ExtremeCloud IQ aligns your subscriptions to avoid license violations. This feature automatically updates subscription consumption and changes the subscription types as needed.

When you onboard new devices, and there are available entitlements in the pool, the system automatically assigns the available subscriptions. If you onboard devices and there are no available subscriptions, an license violation occurs.

If there are insufficient Navigator subscriptions, ExtremeCloud IQ automatically assigns a higher-tier subscription if one is available.

When the following license pools grow, ExtremeCloud IQ assigns the subscriptions to eligible devices:

- CoPilot
- Pilot
- Navigator

If a device is part of a stack and there are sufficient subscriptions available, the system assigns subscriptions to all devices in the stack. If there are insufficient entitlements for all devices in a stack, ExtremeCloud IQ does not automatically assign entitlements to any of the devices in the stack.

Related Links

Entitlement Violations on page 54

Subscription Expiration

When a subscription expires, ExtremeCloud IQ automatically assigns available current subscriptions of the same type. If there are insufficient current subscriptions of the same type available to cover the expired assignments, subscription reallocation occurs automatically. If the higher-tier subscriptions do not have sufficient available subscriptions, the system reallocates subscriptions for the most recently onboarded devices first. Subscription tier reallocation follows the same logic as subscription assignment. For more information, see Subscription Tier Priorities on page 29.

ExtremeCloud IQ Legacy Entitlement Keys

Legacy Entitlement Keys are unsupported with the enhanced license and entitlement schema and new features. The option to add a Legacy Entitlement Key is disabled, and Legacy Entitlement Keys are no longer available for purchase. Contact GTAC for assistance with converting Legacy Entitlement Keys to ExtremeCloud IQ Pilot subscriptions.

Related Links

ExtremeCloud IQ Pilot on page 23

Subscription Part Numbers

Use the following part numbers to order subscriptions. Contact your Extreme Networks or Extreme Networks Partner Sales Representative.

Table 8: ExtremeCloud IQ Pilot

Part Number	Description
XIQ-PIL-S-C-PWP	ExtremeCloud IQ Pilot Right-to-use Subscription and PartnerWorks Plus SaaS Support for one device for one year
XIQ-PIL-S-C-EW	ExtremeCloud IQ Pilot Right-to-use Subscription and ExtremeWorks SaaS Support for one device for one year

Table 9: ExtremeCloud IQ CoPilot

Part Number	Description
XIQ-COPILOT-S-C-PWP	ExtremeCloud IQ CoPilot Right-to-use Subscription PartnerWorks Plus SaaS Support for one device for one year
XIQ-COPILOT-S-C-EW	ExtremeCloud IQ CoPilot Right-to-use Subscription ExtremeWorks SaaS Support for one device for one year

Note
ExtremeCloud IQ CoPilot subscriptions are available only for existing CoPilot customers.

Table 10: ExtremeCloud IQ Navigator

Part Number	Description
XIQ-NAV-S-C-PWP	ExtremeCloud IQ Navigator Right-to-use Subscription PartnerWorks Plus SaaS Support for one device for one year
XIQ-NAV-S-C-EW	ExtremeCloud IQ Navigator Right-to-use Subscription ExtremeWorks SaaS Support for one device for one year

Table 11: ExtremeCloud IQ NAC

Part Number	Description
XIQ-NAC-S-1K-PWP	ExtremeCloud IQ NAC Right-to-use Subscription and PartnerWorks Plus SaaS Support for 1K end-systems for one year
XIQ-NAC-S-10K-PWP	ExtremeCloud IQ NAC Right-to-use Subscription and PartnerWorks Plus SaaS Support for 10K end-systems for one year
XIQ-NAC-S-100K-PWP	ExtremeCloud IQ NAC Right-to-use Subscription and PartnerWorks Plus SaaS Support for 100K end-systems for one year
XIQ-NAC-S-1K-EW	ExtremeCloud IQ NAC Right-to-use Subscription and ExtremeWorks SaaS Support for 1K end-systems one year
XIQ-NAC-S-10K-EW	ExtremeCloud IQ NAC Right-to-use Subscription and ExtremeWorks SaaS Support for 10K end-systems for one year
XIQ-NAC-S-100K-EW	ExtremeCloud IQ NAC Right-to-use Subscription and ExtremeWorks SaaS Support for 100K end-systems for one year

Table 12: Extreme Platform ONE Networking™ Networking

Part Number	Description
EP1-STD-TA-S-C-PWP-1YR	Extreme Platform ONE Standard Networking Right-to-use and PartnerWorks Plus (PWP) TAC OS Support for one device of Tier A per year
EP1-STD-TB-S-C-PWP-1YR	Extreme Platform ONE Standard Networking Right-to-use and PartnerWorks Plus (PWP) TAC OS Support for one device of Tier B per year
EP1-STD-TC-S-C-PWP-1YR	Extreme Platform ONE Standard Networking Right-to-use and PartnerWorks Plus (PWP) TAC OS Support for one device of Tier C per year
EP1-STD-TD-S-C-PWP-1YR	Extreme Platform ONE Standard Networking Right-to-use and PartnerWorks Plus (PWP) TAC OS Support for one device of Tier D per year
EP1-STD-TA-S-C-EW-1YR	Extreme Platform ONE Standard Networking Right-to-use Subscription and ExtremeWorks (EW) SaaS and device TAC OS Support for one Tier A device, for one year
EP1-STD-TB-S-C-EW-1YR	Extreme Platform ONE Standard Networking Right-to-use Subscription and ExtremeWorks (EW) SaaS and device TAC OS Support for one Tier B device for one year
EP1-STD-TC-S-C-EW-1YR	Extreme Platform ONE Standard Networking Right-to-use Subscription and ExtremeWorks (EW) SaaS and device TAC OS Support for one Tier C device for one year
EP1-STD-TD-S-C-EW-1YR	Extreme Platform ONE Standard Networking Right-to-use Subscription and ExtremeWorks (EW) SaaS and device TAC OS Support for one Tier D device for one year
EP1-STD-T3RD-S-C-EW-1YR	Extreme Platform ONE Standard Networking Right-to-use Subscription for one Third-Party Tier device for one year

Table 12: Extreme Platform ONE Networking™ Networking (continued)

Part Number	Description
XIQ-CHILD-PIL-S-C-PWP	ExtremeCloud IQ Pilot Twin Right-to-use Subscription and PartnerWorks Plus SaaS Support for one device for one year
XIQ-CHILD-PIL-S-C-EW.	ExtremeCloud IQ Pilot Twin Right-to-use Subscription and ExtremeWorks Plus SaaS Support for one device for one year

Table 13: Extreme Platform ONE™ Security

Part Number	Description
EP1-SEC-S-C-250-EW	Extreme Platform ONE Secure Subscription with EW Support for 250 endpoints per year
EP1-SEC-S-C-250-EWP	Extreme Platform ONE Secure Subscription with EW Premier Support for 250 endpoints per year
EP1-SEC-S-C-250-PSS	Extreme Platform ONE Secure Subscription with PSS Support for 250 endpoints per year
EP1-SEC-S-C-1K-EW	Extreme Platform ONE Secure Subscription with EW Support for 1,000 endpoints per year
EP1-SEC-S-C-1K-EWP	Extreme Platform ONE Secure Subscription with EW Premier Support for 1,000 endpoints per year
EP1-SEC-S-C-1K-PSS	Extreme Platform ONE Secure Subscription with PSS Support for 1,000 endpoints per year
EP1-SEC-S-C-10K-EW	Extreme Platform ONE Secure Subscription with EW Support for 10,000 endpoints per year
EP1-SEC-S-C-10K-EWP	Extreme Platform ONE Secure Subscription with EW Premier Support for 10,000 endpoints per year
EP1-SEC-S-C-10K-PSS	Extreme Platform ONE Secure Subscription with PSS Support for 10,000 endpoints per year
EP1-SEC-S-C-100K-EW	Extreme Platform ONE Secure Subscription with EW Support for 100,000 endpoints per year
EP1-SEC-S-C-100K-EWP	Extreme Platform ONE Secure Subscription with EW Premier Support for 100,000 endpoints per year
EP1-SEC-S-C-100K-PSS	Extreme Platform ONE Secure Subscription with PSS Support for 100,000 endpoints per year
EP1-SECPLUS-S-C-50-EW	Extreme Platform ONE Secure Plus Subscription with EW Support for 50 endpoints and 50 remote users per year
EP1-SECPLUS-S-C-50-EWP	Extreme Platform ONE Secure Plus Subscription with EW Premier Support for 50 endpoints and 50 remote users per year
EP1-SECPLUS-S-C-50-PSS	Extreme Platform ONE Secure Plus Subscription with PSS Support for 50 endpoints and 50 remote users per year

Management | Extreme Platform ONE™ Networking & ExtremeCloud IQ (New)

Subscriptions and Account Linking on page 37
Subscription Management on page 38
General Subscription Management on page 45
Contracts on page 48

Note
All content in this chapter applies to both management applications, Extreme Platform ONE Networking and ExtremeCloud IQ (New), unless otherwise noted.

Manage subscriptions and trials on the **Subscriptions & Licensing** page. You can search for subscriptions, verify the subscription status, and filter results to view specific details.

It is helpful to understand the interrelationship between contracts, subscriptions, and entitlements. See License Entitlement Management on page 12.

Subscriptions and Account Linking

You can use Extreme Platform ONE Standard Networking subscriptions for the following products:

- Extreme Platform ONE Networking
- ExtremeCloud IQ (New)
- ExtremeCloud IQ (Classic)
- ExtremeCloud IQ Controller
- ExtremeCloud IQ Site Engine

To activate the Extreme Platform ONE Standard Networking subscriptions that you purchased, you must link your Extreme Portal account. For detailed instructions, see:

- Link Your Extreme Portal Account | Extreme Platform ONE Networking or ExtremeCloud IQ (New) on page 14
- Link Your Extreme Portal Account | ExtremeCloud IQ (Classic) on page 14

Note
You can link your Extreme Portal account either in Extreme Platform ONE Networking or ExtremeCloud IQ. If either is already linked, new subscriptions are automatically available for both applications.

Related Links

Link Your Extreme Portal Account | Extreme Platform ONE Networking or ExtremeCloud IQ (New) on page 14

ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility

Some versions of ExtremeCloud IQ Site Engine and ExtremeCloud IQ Controller do not support Extreme Platform ONE Standard Networking subscriptions. To provide you with the necessary time to upgrade to later versions, every Extreme Platform ONE Standard Networking subscription includes an ExtremeCloud IQ Pilot Twin subscription with the same start date, end date, and subscription quantity.

- The Extreme Portal displays both Extreme Platform ONE Standard Networking and ExtremeCloud IQ Pilot Twin subscriptions.
- ExtremeCloud IQ (Classic) and ExtremeCloud IQ (New) do not display ExtremeCloud IQ Pilot Twin subscriptions.
- Extreme Platform ONE applications [1] do not display ExtremeCloud IQ Pilot Twin subscriptions.
- ExtremeCloud IQ Site Engine version 25.2 and earlier supports ExtremeCloud IQ Pilot and ExtremeCloud IQ Pilot Twin subscriptions.
- ExtremeCloud IQ Site Engine version 25.5 and later supports ExtremeCloud IQ Pilot and Extreme Platform ONE Standard Networking subscriptions.
- ExtremeCloud IQ Controller versions support ExtremeCloud IQ Pilot and ExtremeCloud IQ Pilot Twin subscriptions.

[1] Extreme Platform ONE Networking or Extreme Platform ONE Security



Note
If you purchased Extreme Platform ONE Standard Networking subscriptions and are running management application versions that are incompatible with them, you can use the provided ExtremeCloud IQ Pilot Twin subscriptions.

Contracts that include Extreme Platform ONE Standard Networking subscriptions identify the Pilot Twin subscriptions as XIQ-CHILD-PIL-S-C-PWP or XIQ-CHILD-PIL-S-C-EW.

Subscription Management

View and manage subscriptions on the **Subscriptions & Licensing** page. You can view all subscriptions and licenses on the **Global** tab, or select one of the following tabs:

- **Wired & Wireless**
- **Credits**
- **Security**
- **SD-WAN**

Available options depend on your subscriptions, and user role. If you have not already purchased a subscription, you can request a free trial from the application or service tab.

Note
Subscriptions were previously referred to as licenses. The terms are not interchangeable. For information about the difference, see License Entitlement Management on page 12.

The following table describes terms related to contracts, subscriptions, and entitlements.

Table 14: Subscription management terminology

Term	Description
Activate	To use a subscription. When you manually assign a subscription to a device, or when the system automatically assigns an available subscription.
Contract	All-encompassing, a contract can include multiple subscriptions and includes pricing and terms.
Entitlement	Entitlement refers to the right to use a feature or function. There can be multiple entitlements for one subscription. For example, a subscription can include a cloud management entitlement and a TAC/OS entitlement. Typically, an entitlement has a meter that determines the unit of measure for the feature it covers. For example, an entitlement can be per-device or per-user.
Purchase	Buy the product or service. For more information about purchasing products or services, contact an official Extreme Networks Partner.
Renew	Extend an existing contract or subscription.
Revoke	Return an activated subscription to the license pool.
Subscription	Includes a start and end date and provides access to the management application products. A subscription provides explicit Extreme Networks entitlements.

Subscription Management Example

In this example, the customer has two contracts:

- Contract 123, which includes the following:
  - 30 Tier A subscriptions
  - 20 Tier B subscriptions
  - 15 MACsec licenses

- Contract 456, which includes 50 Tier A subscriptions.

Tier A and Tier B subscriptions are per device, and include the following entitlements:

- Management
- TAC / OS for eligible devices
- Premier Features for eligible devices

MACsec licenses are per device, and include the MACsec entitlement.

Therefore, the customer can make the following assignments:

- Tier A subscriptions to 80 devices (3 entitlements)
- Tier B subscriptions to 20 devices (3 entitlements)
- MACsec licenses to 15 devices (1 entitlement)

Related Links

Subscriptions & Licensing User Interface on page 41

Subscriptions & Licensing User Interface

Figure 2 identifies elements and features available on the **Subscriptions & Licensing** page. See Table 15 for descriptions of the numbered elements.

Figure 2: Subscriptions & Licensing interface

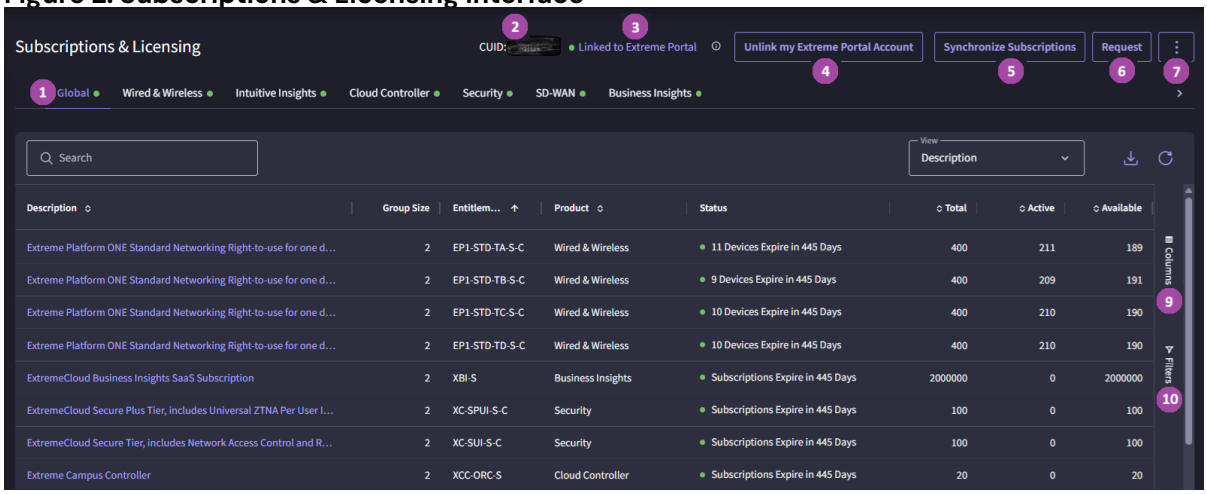


Table 15: Subscriptions & Licensing interface descriptions

Callout	Interface Area	Description
1	Global tab	Displays all subscriptions for all applications and services when unfiltered. The following columns display the total number of subscriptions, the number of active subscriptions, and the number still available. • **Total** = sum of all subscriptions available to use = sum all of the same subscription type with start date in the past and end date in the future = exclude expired and not yet valid • **Active** = sum of all subscriptions currently in use • **Available** = **Total** minus **Active** These numbers fluctuate as subscriptions are applied or removed from a device or devices. To display details for a specific application or service, select the corresponding tab.
2	CUID	The unique ID associated with the license pool. The CUID is very important when communicating with support personnel.
3	Extreme Portal link status	Indicates whether ExtremeCloud IQ is linked to your Portal account. The account must be linked to see content of the license pool.
4	Link / Unlink	Toggle the link status between ExtremeCloud IQ and your Extreme Portal account. **Caution:** Use **Unlink** only for troubleshooting when directed by Support personnel.

Table 15: Subscriptions & Licensing interface descriptions (continued)

Callout	Interface Area	Description
5	Synchronize Subscriptions	Synchronize the display of your Extreme Platform ONE Networking subscriptions with the license pool.
6	Request	Create a purchase request that you can submit to your partner for review and to get a quote.
7	3-dot menu	Displays action options: • Request History • Manage NAC Allocations • Contact Support • Contact Sales
8	View	Select **Simple**, or group subscriptions according to the **Description** or by **Product**.
9	Columns	Customize the columns that you see on the page. (Unavailable when you sort by **Product**.)
10	Filter	Filter the table by **Entitlement**, **Product**, or **Status**.

Purchase a Subscription

As you expand your system, you can purchase new subscriptions of the appropriate subscription types to cover additional devices, according to your needs.

For more information, you can contact sales or complete the workflow to create a subscription request and print the form to submit to your Extreme Networks partner.

Create a Subscription Request

Use this task to create a subscription request to send to your Extreme Networks Preferred Partner.

You can initiate a subscription request from multiple Extreme Platform ONE Networking entry points.

Note
Subscription Request is not available for Managed Service Provider (MSP) accounts.

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**, and then select **Request**.
   Alternatively, in Extreme Platform ONE you can go to **Subscriptions & Services** > **Contracts**, and then select **Request**.
2. Select **Request Quote**.
3. In the **Request Process** dialog, read the information and then select **OK**.

Tip
If you prefer not to see this information for future requests, select **Don't show this message again**.

4. To specify the request type, select either **Subscription** or **Contract**, and then select **Next**.
5. In the **Select Subscriptions** area, select one or more applications and then select **Add**.

   Note
   If your current deployment includes ExtremeCloud IQ Pilot subscriptions, the **Wired and Wireless** category displays the following message: **To unlock full features for all devices in your network, you need additional subscriptions.** To add enough Extreme Platform ONE Standard Networking subscriptions to replace the Pilot subscriptions, select **Select & Add** and follow the on-screen prompts.

6. Use the **Selected Subscriptions** pane to select and make changes to **Duration** and **Quantity** in the respective fields for each requested subscription.
7. Select **Next** and provide additional information.
   a. In **General information**, type your phone number.
   b. (Optional) Type the name of your **Preferred Partner**.
   c. (Optional) Type **Additional Comments**.
   d. Select **Next**.
8. Review the request details in **Review Request**, and then select **Next**.
9. Save the subscription request summary document, then print or digitize it, and submit the request to your Extreme Networks Preferred Partner.

   Use the Partner Locator to find and connect with a Preferred Partner.

Add Subscriptions to an Existing Enterprise Agreement Contract

Use this task to add subscriptions to an existing Enterprise Agreement contract.

Note
This feature applies only to Extreme Platform ONE contracts that are part of an Enterprise Agreement.

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**, and then select **Request**.

   Alternatively, you can go to **Subscriptions & Services** > **Contracts**, and then select **Request**.
2. Select **Add to Enterprise Agreement**.
3. On the **1 Select Contract** page, select the contract to which you want to add more subscriptions, and then select **Next**.
4. On the **2 Add Subscriptions** page, select one or more applications and then select **Add**.
5. After you add subscriptions, change the **Quantity** for each subscription, according to your needs.
6. Select **Next**.
7. (Optional) On the **Contact Details** page, provide additional information:
   a. Type your **Phone Number**.
   b. Type an email address to **Send a copy to**.
   c. To add an additional email address to copy on the request, select **Add recipient** and type the address.
8. Select **Next**.

9. Review the request details on the **Review** page, and then select **Next**.
10. In the **Confirm Added Subscriptions** dialog, read the conditions, and then select **I agree** to confirm.
11. Select **Submit**.

    In a few minutes, the system creates a new contract for the requested subscriptions. At the next anniversary for the selected contract, the system updates the contract to include the subscriptions that you added.

Renew a Subscription

Before a subscription expires, your Extreme Networks Preferred Partner will send you a renewal quote. If you prefer, you can contact your partner proactively. To find a new partner, use the Partner Locator.

To renew a subscription, send a subscription request to your Extreme Networks Preferred Partner. After a subscription request is processed, Extreme Networks adds subscriptions to the license pool for your CUID.

Related Links

Create a Subscription Request on page 42

NEW! Add a Note to a Subscription

Notes for subscriptions provide additional context that is useful when multiple admins share the same console. In a single-admin environment, notes provide historical context. Use notes to do the following:

- Record why you purchased a subscription.
- Leave information for whoever handles the next renewal cycle, especially if the circumstances were unusual or involved a special agreement.

Subscription notes are synchronized and appear in the following locations:

- Extreme Platform ONE Networking, **Subscriptions & Licensing**
- ExtremeCloud IQ (New), **Subscriptions & Licensing**
- ExtremeCloud IQ Site Engine, **Licensing**
- ExtremeCloud IQ (Classic), **License Information**

Use this task to add a note to a subscription.

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**.
2. Select the subscription for which you want to add the note.

   The **Global** tab lists all subscriptions that you have purchased, for all products. Select **Wired & Wireless** or another tab to filter the table by product.
3. In the **Subscription Details** dialog, double-click the corresponding cell in the **Notes (Optional)** column.
4. Enter the note, and then select **Save**.

View Subscription History

Use this task to view the history of subscription purchases, or trials and trial requests.

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**, select , and then select **Request History**.

   The **Subscriptions & Licensing / Request History** page organizes all subscription requests under the **Requests** and **Enterprise Agreements** tabs. You can order more subscriptions from either tab.

   - **Requests** tab: Select **Request** and see Create a Subscription Request on page 42.
   - **Enterprise Agreements** tab: Select **Add to Agreement** and see Add Subscriptions to an Existing Enterprise Agreement Contract on page 43.
2. To see the history of subscriptions added to existing contracts that are subject to an Enterprise Agreement, select **Enterprise Agreements**.
3. (Optional) Use the **Search** feature to refine the result set and view for a specific subset of subscriptions.

   You can view details in the columns.
4. (Optional) To download summary information for a subscription or a subscription request, select for the corresponding entry, and then select **Download**.

   To complete the download, save the file when prompted.

Related Links

Create a Subscription Request on page 42
Add Subscriptions to an Existing Enterprise Agreement Contract on page 43

General Subscription Management

Use the **Subscriptions & Licensing** interface to perform general subscription management tasks, such as viewing and activating subscriptions, and managing NAC allocations.

Note
Subscription counts in the license pool fluctuate when usage changes for a product, when a contract or a subscription expires, or after a new subscription order is processed.

Activate a Subscription

The following actions activate (use) a subscription:

- Add a device as **Managed**.
- Enable an entitled application. You may need to apply entitlements in some cases (for example, MACsec).

The following actions revoke a subscription.

- Unmanage or delete a device.
- Disable an entitled feature. You may need to revoke an entitlement manually in some cases (for example, MACsec) before you delete the device.

View the License Pool

An *license pool* is a set of entitlements that are available to you, including subscriptions and licenses. Subscriptions can have different start dates, and end dates. You can activate (assign) subscriptions in the pool when needed and return subscriptions to the pool when you remove them and they are no longer assigned (Active). You can view subscription expiration status; subscription type, term start and end date; and the number of total, active, and available subscriptions.

Subscription synchronization is automated and scheduled by the system. If you do not see your new subscriptions and licenses on the **Subscriptions & Licensing** page, you can initiate on-demand synchronization. You can synchronize subscriptions only once every 5 minutes.

Important
Do not use **Synchronize Subscriptions** just to refresh the information in the management application.

1. Go to **Subscriptions & Services** > **Global**.
   To view application-specific subscriptions, select the corresponding tab.
2. To search for records, start typing a search attribute such as product, subscription or subscription type, status, or a complete or phrase or words from a description in the **Search** field.

   Note
   Search terms are not case-sensitive.

   To clear the search, select **X** in the **Search** field.
3. To group the records according to product, select **View** and choose **Product**.
   The default view displays all records in alphabetical order according to the **Description**.
4. To filter records in a page, select **Filter** ( ) and choose the filter attribute.
   To clear an individual filter, click **X** for the appropriate filter. To clear all the filters, select **Clear All Filters**.

Manage NAC Allocations | Extreme Platform ONE and ExtremeCloud IQ (New)

Use this task to allocate NAC subscriptions to devices according to your needs.

Note
ExtremeCloud IQ Site Engine must be onboarded before you can manage NAC allocations.

1. Go to **Subscriptions & Licensing** and select **Global**.
2. At the top right corner of the page, select , and then select **Manage NAC Allocations**.

   Note
   The menu selection in this procedure does not appear unless you have one or more NAC subscriptions.

3. In the **NAC Entitlements Allocation** window, specify the allocation percentage of the license pool to assign to the corresponding entity.

4. Select **Save Allocations**.

View Device State and Subscription Type

Note
When the management application detects an entitlement violation state, the application automatically unmanages devices, and the **Subscription** column value for the devices changes to **Not Licensed**.

Table 16: State and Subscription Types

State	Subscription Type	Explanation
Managed	Standard Tier A	Standard Tier A subscription in use
Managed	Standard Tier B	Standard Tier B subscription in use
Managed	Standard Tier C	Standard Tier C subscription in use
Managed	Standard Tier D	Standard Tier D subscription in use
Managed	Standard Tier 3RD	Standard Tier Third-Party Management Engine subscription in use (by a third party, legacy, or ExtremeCloud IQ Site Engine device)
Managed	Pilot	Pilot subscription in use
Managed	Navigator	Navigator subscription in use
Managed	Not Applicable	Ping Only device reported by ExtremeCloud IQ Site Engine Universal AP device reported by ExtremeCloud IQ Controller Digital Twin Simulated device
Unmanaged	Not Applicable	Device unmanaged by admin
Unmanaged	Not Licensed	Device subscription (entitlement) expired
—empty—	—empty—	Connect level
—empty—	Not Applicable	Device onboarded as managed locally

Use this task to view device details, including state and subscription type.

1. To view device and state subscription details, go to **Subscriptions & Services** and select **Inventory**.
2. (Optional) To increase the table visibility, select **Show Summary** to hide the **Firmware Status** and **Hardware Lifecycle** summaries.
3. To choose which columns to display, or to reorder the columns, select .

Pre-provisioning and Subscription Assignment

The management application does not assign a subscription to a device until the device connects to the cloud for the first time. Therefore, you can pre-provision new devices before

decommissioning the old ones, even if you do not have enough subscriptions to cover all the devices. The following example explains how the process works.

Example

AP-A represents the old devices, and AP-B represents the new devices.

AP-A is operational, the **State** is **Managed**, and the device uses a subscription.

AP-B is not connected to the Internet.

1. Add the serial number for AP-B to the management application.
2. Assign policy and configure AP-B.

   AP-B does not use a subscription, and the **State** is **New**.
3. In the management application, **Unmanage** AP-A.

   AP-A is operational and provides service. Because the State is **Unmanaged**, the management application reports the device as **Disconnected**. The system does not collect statistics for the device, and you cannot change the configuration.

   AP-A no longer uses a subscription.
4. Connect AP-B to the Internet.


   The AP-B **State** changes from **New** to **Managed**, and AP-B uses a subscription.

Contracts

This section applies to Extreme Platform ONE Networking only.

You can view details for each contract in the **Contracts** page, and you can renew a contract to avoid service disruption. Information for each contract includes the following details:

- Contract number

  The following icon indicates a contract that is part of an Enterprise Agreement: 

.
- Start and end dates
- Partner
- Contract status
- Number of line items for the contract
- Location of the site where the contract is in use.

Related Links

License Entitlement Management on page 12
Subscription Management on page 38

Contract Status Descriptions

The **Contracts** page displays your contract details. Colored dots indicate the contract status:

- Green—subscriptions in good standing

- Amber—needs attention
- Red—canceled

View Contract Information

The **Contracts** page provides information about each Extreme Platform ONE Networking contract, including details such as start and end date and contract status.

Use this task to view contract information.

1. Go to **Subscriptions & Services** > **Contracts**.
2. To choose which columns to show, select  , and select or clear the corresponding check boxes.
3. To rearrange the order of the columns, select and drag a column heading in the table.

Quick-Filter Contracts by a Pending Expiration Interval

Use this task to filter contracts by a pending expiration interval.

1. Go to **Subscriptions & Services** > **Contracts**.
2. For **Filters Applied**, select one of the filter options:
   - None
   - Expires in 30 days
   - Expires in 60 days
   - Expires in 90 days

Related Links

Filter Contracts by Specified Date Range on page 49
Filter Contracts by Multiple Criteria on page 50

Filter Contracts by Specified Date Range

Filter contracts according to the following filter criteria:

- `Before` or `After` (Choice 1 for the specified date or dates)
- Date in `mm/dd/yyyy` format
- `AND`/`OR` (Boolean choices)
- `Before` or `After` (Choice 2 for the specified date or dates)

Use this task to filter contracts by a range of dates.

1. Go to **Subscriptions & Services** > **Contracts**.
2. On the **Start Date** column heading, select  .
   a. In the dialog, specify your filter criteria.
   b. Type the date in the correct format.
   c. Select **Apply**.
3. To redefine your criteria, select **Reset**.

Related Links

Quick-Filter Contracts by a Pending Expiration Interval on page 49
Filter Contracts by Multiple Criteria on page 50

Filter Contracts by Type or Status

Use this task to filter the table according to the type of contract, or the status of the contract.

1. Go to **Subscriptions & Services** > **Contracts**.
2. On the header row, select the corresponding  icon, and configure the settings.

Table 17: Filter settings

Filter by	Settings
Type	Choose **Standard** or **Enterprise Agreement**.
Status	Choose from the following options: • **All** • **Active** • **Expired**

Filter Contracts by Multiple Criteria

Filter contracts using the following criteria:

- Search box
- End Date
  - None
  - Expires in 30 days
  - Expires in 60 days
  - Expires in 90 days
- Partner
- Status
- Site

Use this task to filter contracts using multiple criteria options and the **Filters** sidebar.

1. Go to **Subscriptions & Services** > **Contracts**.
2. Select the **Filters** sidebar.
3. Select the filter criteria, and then select **Apply**.
4. To redefine your criteria, select **Reset**.

Related Links

Quick-Filter Contracts by a Pending Expiration Interval on page 49
Filter Contracts by Specified Date Range on page 49

Download the Contracts Table

Use this task to download the information in the **Contracts** table as a CSV file. If you filter the table, the downloaded file includes only the filtered information.

1. Go to **Subscriptions & Services** > **Contracts**.
2. (Optional) Select the filter criteria.
3. Select  .

Renew a Contract

Renew existing contracts from within Extreme Platform ONE Networking to ensure access to services without interruption.

Use this task to renew a contract.

1. Go to **Subscriptions & Services** > **Subscriptions & Licensing**, and then select **Request**.

   Alternatively, in Extreme Platform ONE you can go to **Subscriptions & Services** > **Contracts**, and then select **Request**.
2. Select **Request Quote**.
3. In the **Request Process** dialog, read the information and then select **OK**.

   Tip
   If you prefer not to see this information for future requests, select **Don't show this message again**.
4. Select **Contracts**, and then select **Next**.
5. Select the contracts to renew, and then select **Add**.
6. When you finish adding contracts to the cart, select **Next**.
7. Provide your phone number and optional information, and then select **Next**.
8. Review the request details in **Review Request**, and then select **Next**.
9. Save the subscription request summary document, then print or digitize it, and submit the request to your Extreme Networks Preferred Partner.

   Use the Partner Locator to find and connect with a Preferred Partner.

Contact Sales

Contact Extreme Networks Sales for information about contracts, subscriptions, and licenses, and for other needs you might have.

1. Go to **Subscriptions & Services** > **Contracts** and select **Contact Sales**.

   The Contact the Extreme Networks Sales Team web page opens.
2. Complete and submit the form.

   Alternatively, see **Other Ways to Get in Touch**, and select another contact option.

   A sales representative will contact you.

Management | ExtremeCloud IQ (Classic)

View the License Pool on page 52
Manage NAC Allocations | ExtremeCloud IQ on page 53
Proactive Notifications on page 53
Entitlement Violations on page 54
Activate or Revoke an ExtremeCloud IQ CoPilot Subscription on page 57
Affected Devices Table on page 57
Pre-provisioning and Subscription Assignment on page 57
Troubleshooting on page 58

The following sections provide information about entitlement management for ExtremeCloud IQ (Classic).

Note
All references to ExtremeCloud IQ in this chapter refer to ExtremeCloud IQ (Classic).

View the License Pool

A *license pool* is the set of licenses and subscriptions that are available to you. Entitlements can have different start dates, and end dates as specified in the license or subscription. You can activate subscriptions as needed and return them to the pool when you revoke them and they are no longer assigned (Active). You can view the expiration status; entitlement type, term start and end date; and the number of total, active, and available licenses and subscriptions.

Note
The subscription and license information is cached. The refresh interval depends on the location of your ExtremeCloud IQ account. To update the cached information from the license pool on the **License Information** page, select **Synchronize**.

Go to **Global Settings** > **Administration** > **License Management**.

Manage NAC Allocations | ExtremeCloud IQ

After you onboard compatible NAC engines (ExtremeCloud A3 and/or ExtremeCloud IQ Site Engine), ExtremeCloud IQ adds the serial numbers to the **NAC Entitlements** table using the following logic:

- ExtremeCloud IQ automatically allocates up to 100% of the total NAC entitlements from the entitlement pool to the first NAC engine (no user action is required). If the allocation is successful, the value in the **Allocated %** column updates. If the allocation is not successful, the value is 0%.
- ExtremeCloud IQ automatically allocates from the remaining percentage (if any) to the next NAC engine. For example, if the allocation for the first NAC engine is 20%, ExtremeCloud IQautomatically allocates from the remaining 80% to the second NAC engine.

Use this procedure to modify the number of allocated ExtremeCloud IQ NAC entitlements for an NAC engine.

1. Go to **Global Settings** > **Administration** > **License Management**.
2. In the **NAC Entitlements** table, select the serial number for the NAC engine, and then type a new number in the **Allocated %** column.

   The range is 0–100, with increments of 0.1. ExtremeCloud IQ sends the allocated values to NAC engines.
3. Select **SAVE**.

Proactive Notifications

To help you manage subscriptions proactively, ExtremeCloud IQ provides advanced notification of impending entitlement violations. When a subscription reaches each of the following thresholds, Administrators see a warning banner message and, optionally, receive email messages: 90, 60, 30, 7, 6, 5, 4, 3, 2, and 1 days before term expiration.

The banner displays the following message:

LICENSE EXPIRATION – At least one of your ExtremeCloud IQ subscriptions will expire within XX days. Check affected devices here.

Where XX is the number of days before the subscription term expires.

The banner appears only once for each user, after the day the subscription reaches a threshold of 90, 60, or 30 days. The system displays the banner daily, from the 7-day threshold.

The system can also send an email notification to each user on the day the subscription reaches a threshold of 90, 60, or 30 days. From the 7-day threshold, the system sends email notifications daily. If multiple subscriptions reach the same threshold, the system combines the notifications into one email. You can choose whether to opt-in to receiving the emails by going to **Global Settings** > **Account Details**. Subscription is not automatic.

The email notifications identify the type of subscriptions nearing term expiration, and include a CSV file attachment that lists affected devices. Each email provides additional information about the impending entitlement violations and the next steps to take.

Related Links

Enable or Disable Proactive Email Notifications on page 54

Enable or Disable Proactive Email Notifications

A banner introducing this feature appears once for each administrator, at login:

Email notifications about upcoming license expiration dates can be enabled/disabled here.

Select the link to open the **Global Settings** > **Account Details** page. If you select **X** to close the banner, it does not appear again. Use the following procedure to enable or disable notification emails.

1. Go to **Global Settings** > **Account Details**.
2. To receive notification emails, set the **Proactive license warning email messages** toggles to **ON**.

   If you want to opt out of receiving notification emails, set the toggles to **OFF**.

   There is a toggle for your primary **Email**, and one for your **Alternate Email**. You can set one or both toggles to **ON** or **OFF**.

Entitlement Violations

For devices that are approaching the subscription term expiration, the user interface displays a banner. The banner identifies the issue and provides a link to the **Device** list, where you can see which devices are affected.

LICENSE EXPIRATION - At least one of your ExtremeCloud IQ subscriptions will expire within XX days. Check affected devices here.

The following notification banner appears when you have devices not covered by a subscription (entitlement):

LICENSE VIOLATION - Unlicensed devices. Check affected devices here.

ExtremeCloud IQ Pilot and Extreme Platform ONE Networking

If there are not enough ExtremeCloud IQ Pilot or Extreme Platform ONE Networking subscriptions in the license pool, the system automatically changes the managed state to **Unmanaged** and the state to **Not Licensed**. The system unmanages enough devices to bring the system back into compliance, starting with the most recently onboarded devices. Unmanaged devices stop connecting to the CAPWAP server and therefore do not send the following information:

- Traps to the cloud
- CAPWAP-borne data updates
- Statistical information, including AVC hourly data reports

An unmanaged device looks for another CAPWAP server, and the AP LED alternates between amber and white as it periodically connects to Redirector. As a best practice, resolve entitlement violations as soon as possible.

You can perform the following tasks in ExtremeCloud IQ:

- On the **License Information** page, synchronize the cached information from the license pool. Alternatively, you can unlink from and relink to the Extreme Portal using your Extreme Portal credentials.
- Contact your Extreme Networks or Extreme Networks Partner Sales Representative to purchase or renew subscriptions.



Note
The number of Pilot licenses can be limited by a Managed Service Provider (MSP). If an MSP partner manages your account, contact them to increase the limit.

Related Links

Affected Devices Table on page 57
ExtremeCloud IQ Pilot on page 23
ExtremeCloud IQ Legacy Entitlement Keys on page 33

ExtremeCloud IQ Navigator

If there are not enough Navigator subscriptions in the pool, ExtremeCloud IQ automatically assigns a higher-tier subscription if one is available. View the number of available and activated subscriptions in **Global Settings** > **Administration** > **License Management**.

Related Links

Affected Devices Table on page 57
ExtremeCloud IQ Navigator on page 25
ExtremeCloud IQ Pilot and Extreme Platform ONE Networking on page 54

ExtremeCloud IQ CoPilot

When a CoPilot subscription expires, the covered device is not CoPilot-entitled. The CoPilot feature excludes devices not CoPilot-entitled and does not process data from those devices. Anomalies and statistical reports are not reported in CoPilot. If you have devices for which the CoPilot subscription has expired, a banner displays the following information:

Some CoPilot eligible devices do not have a CoPilot license allocated. To benefit from the full value of CoPilot, consider adding CoPilot licenses for all devices that are eligible. Contact your Extreme or partner representative for assistance. Check affected devices here.

The banner appears only on the CoPilot dashboard. After you dismiss the banner, it does not reappear for a week.

While the CoPilot entitlement violation is active, standard CoPilot features are not affected unless there is an active Pilot entitlement violation. CoPilot entitlement violations and Pilot entitlement violations can be active at the same time.

To resolve a CoPilot entitlement violation:

- Contact your Extreme Networks or Extreme Networks Partner Sales Representative to purchase the required number of subscriptions, or renew expired subscriptions.
- Revoke CoPilot entitlements. Go to **Manage** > **Devices** and select the devices to exclude from CoPilot monitoring. From the **Actions** menu, select **Change CoPilot License Status** > **Revoke CoPilot Licenses**.
- Change managed CoPilot-eligible devices to unmanaged.
- Update the cached information from the entitlement pool. Go to **Global Settings** > **Administration** > **License Management** and select **Synchronize**.

  Alternatively, you can unlink from and relink to the Extreme Portal using your Extreme Portal credentials.
- Disable CoPilot functions in **Global Settings** > **Administration** > **VIQ Management** > **Disable CoPilot feature for this VIQ**.

Multiple accounts

To help prevent subscription shortages, you can select which VIQs (accounts) use CoPilot. Enable or disable CoPilot for each ExtremeCloud IQ account in **Global Settings** > **Administration** > **VIQ Management** > **Enable/Disable CoPilot feature for this VIQ**.

Note

If you have multiple ExtremeCloud IQ accounts with CoPilot linked to the same entitlement pool, there might not be enough licenses to satisfy your requirements. For example, if two branches in different geolocations share the same pool, the first come, first served rule applies. To resolve this situation, do one of the following:

- Disable ExtremeCloud IQ CoPilot for the ExtremeCloud IQ account that is in violation.
- Add the required number of ExtremeCloud IQ CoPilot licenses.

Related Links

Affected Devices Table on page 57
Unlink and Relink Your Extreme Portal Account | ExtremeCloud IQ (Classic) on page 16
ExtremeCloud IQ CoPilot on page 24

ExtremeCloud IQ NAC

Network access control (NAC) entitlement violations are product-specific. Each NAC engine handles an NAC entitlement violation in a different way.

To resolve an ExtremeCloud IQ NAC entitlement violation:

- Contact your Extreme or Extreme Partner Sales Representative to purchase or renew subscriptions.
- Increase the allocated NAC quantity for your NAC engine.
- On the **License Information** page, synchronize the cached information from the license pool. Alternatively, you can unlink from and relink to the Extreme Portal using your Extreme Portal credentials.

Related Links

ExtremeCloud IQ NAC on page 25

Activate or Revoke an ExtremeCloud IQ CoPilot Subscription

ExtremeCloud IQ CoPilot must be enabled and the device must be CoPilot-eligible.

Use the following procedure to choose whether a CoPilot-eligible device gets a subscription. This procedure is useful if you have fewer CoPilot subscription than eligible devices.

1. Go to **Manage** > **Devices**.
2. Select the device for which you want to activate or revoke the CoPilot subscription.
3. From the **Actions** menu, select **Change CoPilot License Status** > **Activate CoPilot License** or **Revoke CoPilot License**.

Affected Devices Table

Entitlement notifications and violation banners include a link to the **Affected Devices** table. The table shows devices with subscriptions approaching the expiration date. Some table columns are specific to the subscription notification or violation banner.

- The **License** column shows the type of subscription.
- The **Subscription End Date** column shows the date when the subscription will expire.

Pre-provisioning and Subscription Assignment

ExtremeCloud IQ does not assign a subscription to a device until the device connects to the cloud for the first time. Therefore, you can pre-provision new devices before decommissioning the old ones, even if you do not have enough subscriptions to cover all the devices. The following example explains how the process works.

Example

AP-A represents the old devices, and AP-B represents the new devices.

AP-A is operational, the **State** is **Managed**, and the device uses a subscription.

AP-B is not connected to the Internet.

1. Add the serial number for AP-B to ExtremeCloud IQ.
2. Assign policy and configure AP-B.

   AP-B does not use a subscription, and the **State** is **New**.
3. In ExtremeCloud IQ, **Unmanage** AP-A.

   AP-A is operational and provides service. Because the State is **Unmanaged**, ExtremeCloud IQ reports the device as **Disconnected**. The system does not collect statistics for the device, and you cannot change the configuration.

   AP-A no longer uses a subscription.
4. Connect AP-B to the Internet.

The AP-B **State** changes from **New** to **Managed**, and AP-B uses a subscription.

Troubleshooting

- How do I know whether a device uses a Pilot subscription, a Navigator subscription, a Legacy Entitlement Key, or has no entitlement?
- How do I determine which devices have CoPilot subscription?
- How do I check which devices use MACsec or Premier switch licenses?
- How do I know which licenses and subscriptions are in the licenses pool?
- How do I know how many licenses and subscriptions are available to use, and how many are activated?
- The license and subscription information I see in ExtremeCloud IQ does not reflect reality. How do I refresh cached information?
- How do I realign an ExtremeCloud IQ Navigator subscription?
- What do I need to know about unmanaged devices?

Q: How do I know whether a device has an Extreme Platform ONE™ Networking subscription, Pilot subscription, Navigator subscription, a Legacy Entitlement Key, or no entitlement?

A: In ExtremeCloud IQ, go to **Manage** > **Devices**. The **Device License** table column indicates that a device uses a license or subscription, or neither. If this column does not appear in your table, use the column picker to add it to the displayed columns. Column values are:

- **Pilot**: An ExtremeCloud IQ Pilot subscription
- **Navigator**: An ExtremeCloud IQ Navigator subscription
- **Legacy**: An ExtremeCloud IQ Legacy Entitlement Key
- **Standard Tier A**: Extreme Platform ONE Standard Networking Subscription Tier A
- **Standard Tier B**: Extreme Platform ONE Standard Networking Subscription Tier B
- **Standard Tier C**: Extreme Platform ONE Standard Networking Subscription Tier C
- **Standard Tier D**: Extreme Platform ONE Standard Networking Subscription Tier D
- **Not Applicable**: No entitlement is required

Use **Filter** > **License** > **Device License** to determine the quantities of each value.

Q: How do I determine which devices have CoPilot subscription?

A: In ExtremeCloud IQ, navigate to **Manage** > **Devices**. The **CoPilot** column indicates devices that have CoPilot entitlements as either **Active**, or **None**.

The following entitlement status values can apply to CoPilot-eligible devices:

None

This status appears for the following reasons:

- CoPilot is not enabled for the VIQ.
- The device is not CoPilot compatible.
- The device is unmanaged.
- An administrator revoked the subscription.

Active

The CoPilot subscription is in use (consumed).

Unlicensed

The CoPilot subscription is expired.

If the **CoPilot** column does not appear in the table, use the column picker to add it. Use the **Filter** > **License** > **CoPilot** option to determine the quantity.

Q: How do I check which devices use MACsec or Premier switch entitlements?

A: In ExtremeCloud IQ, navigate to **Manage** > **Devices**. The **Feature License** column value indicates whether the switch uses a MACsec, Premier, or both licenses. If this column does not appear in your table, use the column picker to add it to the displayed columns. Values are:

- **MACsec**: A MACsec switch license
- **Premier**: A Premier switch license
- **None**: No license

Q: How do I know which entitlements are in the license pool?

A: Log in to the Extreme Portal and navigate to **Assets** > **Cloud Licenses Home**.

The table contains all subscriptions and licenses in the license pool. The identifier of the license pool is the CUID (Customer Unique Identifier). Ensure that your ExtremeCloud IQ account is linked to the same license pool at **ExtremeCloud IQ** > **Global Settings** > **Administration** > **VIQ Management**. If the CUID in the Extreme Portal matches the CUID in ExtremeCloud IQ, your ExtremeCloud IQ account is linked to the same license pool.

To view entitlements compatible with ExtremeCloud IQ, go to **ExtremeCloud IQ** > **Global Settings** > **Administration** > **License Management** > **Entitlements**.

Q: How do I know how many licenses or subscriptions are available to use, and how many are activated?

A: There are three ways to do this:

- Log in to the Extreme Portal and navigate to **Assets** > **Cloud Licenses Home** > **Entitlements Summary Report**. This report updates every 24 hours. **Active Quantity** indicates the number of subscriptions in use. **Inactive Quantity** indicates the number of subscriptions available for use. **Total Quantity** is the total number of used and available subscriptions.
- The **Global Settings** > **Administration** > **License Management** > **Entitlements** table shows, by type, the number of subscriptions that are in use, available, and a total of both. How often this data refreshes depends on the location of your ExtremeCloud IQ account. See the ExtremeCloud IQ Release Notes.
- The **ExtremeCloud IQ** > **CoPilot** > **Licenses** widget displays information about Pilot and CoPilot used and available subscriptions.

Q: The license pool (entitlement) information that I see in ExtremeCloud IQ does not reflect reality. How do I refresh cached license and subscription information?

A: The license and subscription information in **Global Settings** > **Administration** > **License Management** > **Entitlements** table is cached. The refresh interval depends on the location of your ExtremeCloud IQ account. To update the cached information from the license pool on the **License Information** page, select **Synchronize**.

Alternatively, you can unlink from and relink to the Extreme Portal using your Extreme Portal credentials.

Q: How do I realign an ExtremeCloud IQ Navigator entitlement?

A: If there are not enough ExtremeCloud IQ Navigator entitlements in the entitlement pool, an ExtremeCloud IQ Pilot or an Extreme Platform ONE Standard Networking entitlement can be used instead. For example, when ExtremeCloud IQ Navigator entitlements become available, if more entitlements are purchased, or a device that was using an ExtremeCloud IQ Navigator entitlement is deleted, the realignment is not automatic. To release the device entitlement and acquire another available entitlement, use the following procedure:

1. Go to **Manage** > **Devices**.
2. Select the check boxes for devices to which you want to reassign entitlements.
3. Select **Actions** > **Change Management Status** > **Unmanage Devices**.
4. Select **Actions** > **Change Management Status** > **Manage Devices**

Q: What do I need to know about unmanaged devices?

A: Remember the following points about unmanaged devices:

- Cannot receive configuration updates, which might result in unexpected behavior or network issues.
- Cannot participate in the ExtremeCloud IQ CoPilot anomaly detection and statistics gathering.
- Do not require an entitlement (ExtremeCloud IQ Pilot, ExtremeCloud IQ Navigator, ExtremeCloud IQ CoPilot, Extreme Platform ONE Standard Networking, or ExtremeCloud IQ Legacy Entitlement Key).

Related Links

Unlink and Relink Your Extreme Portal Account | ExtremeCloud IQ (Classic) on page 16