THERE ARE MORE CESSNAS FLYING THAN ANY OTHER MAKE

1965

CESSNA



MODEL 172 AND SKYHAWK

OWNER'S MANUAL

WORLD'S LARGEST PRODUCER OF GENERAL AVIATION AIRCRAFT SINCE 1956

PERFORMANCE - SPECIFICATIONS

	MODEL 172 SKYHAWK
GROSS WEIGHT	2300 lbs
SPEED:	
Top Speed at Sea Level	138 mph
Cruise, 75% Power at 7000 ft	130 mph
RANGE:	
Cruise, 75% Power at 7000 ft	550 miles
36 Gal. No Reserve	4.2 hours
	130 mph
Optimum Range at 10,000 ft	670 miles
36 Gal. No Reserve	6.6 hours
	102 mph
RATE OF CLIMB AT SEA LEVEL	645 fpm
SERVICE CEILING	13,100 ft
TAKE-OFF:	
Ground Run	865 ft
Total Distance Over 50-Foot Obstacle	1525 ft
LANDING:	
Landing Roll	520 ft
Total Distance Over 50-Foot Obstacle	1250 ft
EMPTY WEIGHT (Approximate)	1260 lbs
BAGGAGE	120 lbs
WING LOADING: Pounds/Sq Foot	13.2
POWER LOADING: Pounds/HP	15.9
FUEL CAPACITY: Total	39 gal.
OIL CAPACITY: Total	8 qts
PROPELLER: Fixed Pitch (Diameter)	76 inches
ENGINE:	
Continental Engine No.	O-300-C*
Horse Power	145

	MODEL 172 SKYHAWK
GROSS WEIGHT	2300 lbs
SPEED:	
Top Speed at Sea Level	139 mph
Cruise, 75% Power at 7000 ft	131 mph
RANGE:	
Cruise, 75% Power at 7000 ft	555 miles
36 Gal. No Reserve	4.2 hours
	131 mph
Optimum Range at 10,000 ft	670 miles
36 Gal. No Reserve	6.6 hours
	102 mph
RATE OF CLIMB AT SEA LEVEL	645 fpm
SERVICE CEILING	13,100 ft
TAKE-OFF:	
Ground Run	865 ft
Total Distance Over 50-Foot Obstacle	1525 ft
LANDING:	
Landing Roll	520 ft
Total Distance Over 50-Foot Obstacle	1250 ft
EMPTY WEIGHT (Approximate)	1330 lbs
BAGGAGE	120 lbs
WING LOADING: Pounds/Sq Foot	13.2
POWER LOADING: Pounds/HP	15.9
FUEL CAPACITY: Total	39 gal.
OIL CAPACITY: Total	8 qts
PROPELLER: Fixed Pitch (Diameter)	76 inches
ENGINE:	
Continental Engine No.	O-300-D
Horse Power	145

*The Model F172, which is manufactured by Reims Aviation S.A., Reims (Marne) France, is identical to the 172 except that it is powered by an O-300-D engine, manufactured under license by Rolls Royce, Crewe, England. All 172 information in this manual pertains to the F172 as well.

COPYRIGHT © 1984
Cessna Aircraft Company
Wichita, Kansas USA

CONGRATULATIONS .....

Welcome to the ranks of Cessna owners! Your Cessna has been designed and constructed to give you the most in performance, economy, and comfort. It is our desire that you will find flying it, either for business or pleasure, a pleasant and profitable experience.

This Owner's Manual has been prepared as a guide to help you get the most pleasure and utility from your Model 172/Skyhawk. It contains information about your Cessna's equipment, operating procedures, and performance; and suggestions for its servicing and care. We urge you to read it from cover to cover, and to refer to it frequently.

Our interest in your flying pleasure has not ceased with your purchase of a Cessna. World-wide, the Cessna Dealer Organization backed by the Cessna Service Department stands ready to serve you. The following services are offered by most Cessna Dealers:

FACTORY TRAINED MECHANICS to provide you with courteous expert service.


FACTORY APPROVED SERVICE EQUIPMENT to provide you with the most efficient and accurate workmanship possible.

A STOCK OF GENUINE CESSNA SERVICE PARTS on hand when you need them.


THE LATEST AUTHORITATIVE INFORMATION FOR SERVICING CESSNA AIRPLANES, since Cessna Dealers have all of the Service Manuals and Parts Catalogs, kept current by Service Letters and Service News Letters, published by Cessna Aircraft Company.

We urge all Cessna owners to use the Cessna Dealer Organization to the fullest.

A current Cessna Dealer Directory accompanies your new airplane. The Directory is revised frequently, and a current copy can be obtained from your Cessna Dealer. Make your Directory one of your cross-country flight planning aids; a warm welcome awaits you at every Cessna Dealer.

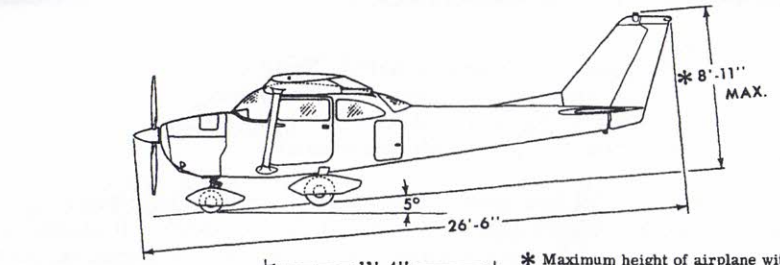

* Maximum height of airplane with nose gear depressed and an optional rotating beacon installed.

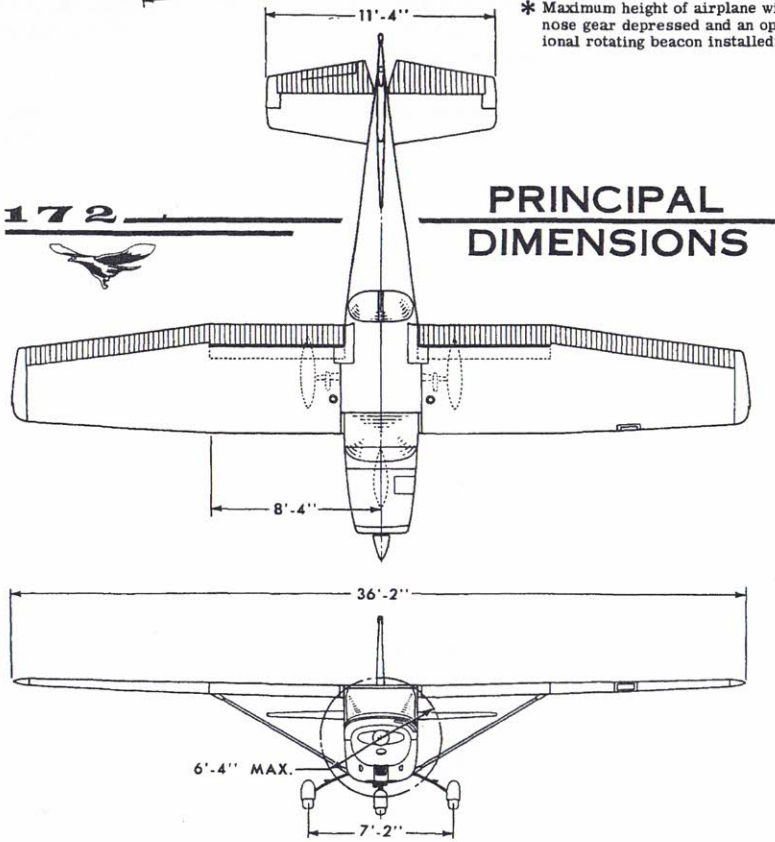


172 PRINCIPAL DIMENSIONS

TABLE OF CONTENTS

	Page
SECTION I - OPERATING CHECK LIST	1-1
SECTION II - DESCRIPTION AND OPERATING DETAILS	2-1
SECTION III - OPERATING LIMITATIONS	3-1
SECTION IV - CARE OF THE AIRPLANE	4-1
OWNER FOLLOW-UP SYSTEM	4-8
SECTION V - OPERATIONAL DATA	5-1
SECTION VI - OPTIONAL SYSTEMS	6-1
ALPHABETICAL INDEX	Index-1

This manual describes the operation and performance of both the Cessna Model 172 and the Cessna Skyhawk. Equipment described as "Optional" denotes that the subject equipment is optional on the Model 172. Much of this equipment is standard on the Skyhawk model.

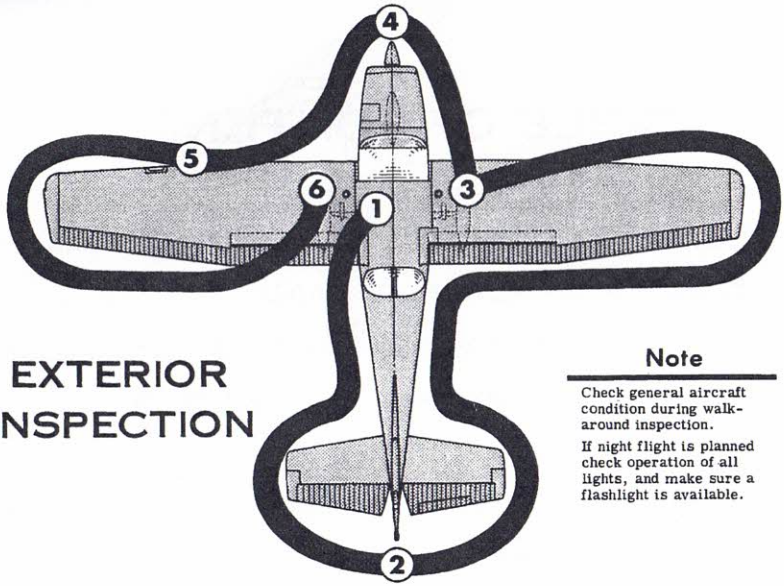

EXTERIOR INSPECTION

Note

Check general aircraft condition during walk-around inspection.

If night flight is planned check operation of all lights, and make sure a flashlight is available.

1
- a. Turn on master switch and check fuel quantity indicators, then turn master switch off.
- b. Check ignition switch "OFF."
- c. Check fuel selector valve handle "BOTH ON."
- d. On first flight of day and after each fueling, pull out strainer drain knob for about four seconds, to clear fuel strainer of possible water and sediment.
- e. Remove control wheel lock.
- f. Check baggage door for security.

2
- a. Remove rudder gust lock, if installed.
- b. Disconnect tail tie-down.

3
- a. Check main wheel tire for proper inflation.
- b. Inspect airspeed static source hole on side of fuselage for stoppage (left side only).
- c. Disconnect wing tie-down.

4
- a. Check oil level. Do not operate with less than six quarts. Fill for extended flight.
- b. Check propeller and spinner for nicks and security.
- c. Check nose wheel strut and tire for proper inflation.
- d. Disconnect tie-down rope.
- e. Make visual check to insure that fuel strainer drain valve is closed after draining operation.
- f. Check carburetor air filter for restrictions by dust or other foreign matter.

5
- a. Remove pitot tube cover, if installed, and check pitot tube opening for stoppage.
- b. Check fuel tank vent opening for stoppage.

6 Same as **3**

Figure 1-1.

Section I

172

OPERATING CHECK LIST

One of the first steps in obtaining the utmost performance, service, and flying enjoyment from your Cessna is to familiarize yourself with your airplane's equipment, systems, and controls. This can best be done by reviewing this equipment while sitting in the airplane. Those items whose function and operation are not obvious are covered in Section II.

Section I lists, in Pilot's Check List form, the steps necessary to operate your airplane efficiently and safely. It is not a check list in its true form as it is considerably longer, but it does cover briefly all of the points that you should know for a typical flight.

The flight and operational characteristics of your airplane are normal in all respects. There are no "unconventional" characteristics or operations that need to be mastered. All controls respond in the normal way within the entire range of operation. All airspeeds mentioned in Sections I and II are indicated airspeeds. Corresponding calibrated airspeed may be obtained from the Airspeed Correction Table in Section V.

BEFORE ENTERING THE AIRPLANE.

(1) Make an exterior inspection in accordance with figure 1-1.

BEFORE STARTING THE ENGINE.

(1) Seats and Seat Belts -- Adjust and lock.
(2) Brakes -- Test and set.
(3) Master Switch -- "ON."
(4) Fuel Selector -- "BOTH ON."

STARTING THE ENGINE.

(1) Carburetor Heat -- Cold.
(2) Mixture -- Rich.
(3) Primer -- As required.
(4) Ignition Switch -- "BOTH."
(5) Throttle -- Open 1/8".
(6) Propeller Area -- Clear.
(7) Starter -- Engage.

BEFORE TAKE-OFF.

(1) Throttle Setting -- 1600 RPM.
(2) Engine Instruments -- Within green arc and generator light out.
(3) Magnetos -- Check (75 RPM maximum differential between magnetos).
(4) Carburetor Heat -- Check.
(5) Flight Controls -- Check.
(6) Trim Tab -- "TAKE-OFF" setting.
(7) Cabin Doors -- Closed and locked.
(8) Flight Instruments and Radios -- Set.

TAKE-OFF.

NORMAL TAKE-OFF.

(1) Wing Flaps -- 0°
(2) Carburetor Heat -- Cold.
(3) Power -- Full throttle (applied smoothly).
(4) Elevator Control -- Lift nosewheel at 60 MPH.
(5) Climb Speed -- 85 MPH.

MAXIMUM PERFORMANCE TAKE-OFF.

(1) Wing Flaps -- 0°
(2) Carburetor Heat -- Cold.

(3) Brakes -- Apply.
(4) Power -- Full throttle.
(5) Brakes -- Release.
(6) Elevator Control -- Slightly tail low.
(7) Climb Speed -- 65 MPH (with obstacles ahead).

CLIMB.

NORMAL CLIMB.

(1) Airspeed -- 80 to 90 MPH.
(2) Power -- Full throttle.
(3) Mixture -- Full rich (unless engine is rough).

MAXIMUM PERFORMANCE CLIMB.

(1) Airspeed -- 80 MPH at sea level to 77 MPH at 10, 000 feet.
(2) Power -- Full throttle.
(3) Mixture -- Full rich (unless engine is rough).

CRUISING.

(1) Power -- 2200 to 2700 RPM.
(2) Trim Tab -- Adjust.
(3) Mixture -- Lean.

LET-DOWN.

(1) Mixture -- Rich.
(2) Power -- As desired.
(3) Carburetor Heat -- As required to prevent carburetor icing.

BEFORE LANDING.

(1) Fuel Selector -- "BOTH ON."
(2) Mixture -- Rich.
(3) Airspeed -- 70 - 80 MPH (flaps up).
(4) Carburetor Heat -- Apply before closing throttle.
(5) Wing Flaps -- As desired (below 100 MPH).
(6) Airspeed -- 65 to 75 MPH (flaps down).

NORMAL LANDING.

(1) Touchdown -- Main wheels first.
(2) Landing Roll -- Lower nosewheel gently.
(3) Braking -- Minimum required.

AFTER LANDING.

(1) Wing Flaps -- Up
(2) Carburetor Heat -- Cold.

SECURE AIRCRAFT.

(1) Mixture -- Full lean.
(2) All Switches -- Off.
(3) Brakes -- Set.
(4) Control Lock -- Installed.

Section II

DESCRIPTION AND OPERATING DETAILS

The following paragraphs describe the systems and equipment whose function and operation is not obvious when sitting in the airplane. This section also covers in somewhat greater detail some of the items listed in Check List form in Section I that require further explanation.

FUEL SYSTEM.

Fuel is supplied to the engine from two aluminum tanks, one in each wing. From these tanks, fuel flows by gravity through a selector valve and a strainer to the carburetor.

Refer to figure 2-1 for fuel quantity data. For fuel system servicing information, refer to Lubrication and Servicing Procedures in Section IV.

FUEL QUANTITY DATA (U.S. GALLONS)

TANKS	NO.	USABLE FUEL ALL FLIGHT CONDITIONS	ADDITIONAL USABLE FUEL (LEVEL FLIGHT)	UNUSABLE FUEL (LEVEL FLIGHT)	TOTAL FUEL VOLUME EACH
LEFT WING	1	18.0 gal.	1.0 gal.	0.5 gal.	19.5 gal.
RIGHT WING	1	18.0 gal.	1.0 gal.	0.5 gal.	19.5 gal.

Figure 2-1

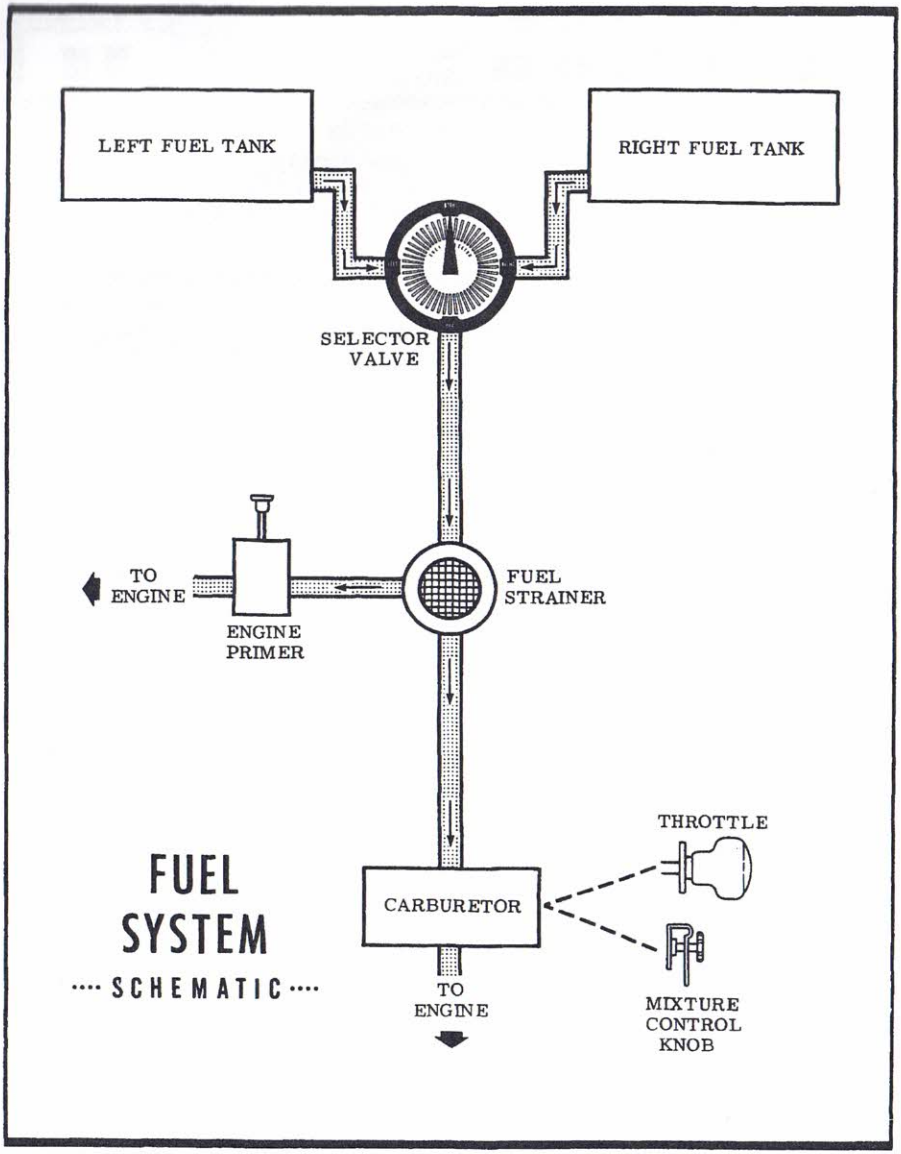

LEFT FUEL TANK
RIGHT FUEL TANK
SELECTOR VALVE
TO ENGINE
ENGINE PRIMER
FUEL STRAINER
FUEL SYSTEM
···· SCHEMATIC ····
CARBURETOR
THROTTLE
TO ENGINE
MIXTURE CONTROL KNOB

Figure 2-2.

FUEL STRAINER DRAIN KNOB.

Refer to fuel strainer servicing procedures, Section IV.

ELECTRICAL SYSTEM.

Electrical energy is supplied by a 14-volt, direct-current system powered by an engine-driven generator. A 12-volt battery is located on the left-hand forward portion of the firewall.

CIRCUIT BREAKERS.

All electrical circuits in the airplane, except the clock circuit, are protected by circuit breakers. The clock has a separate fuse mounted adjacent to the battery. The stall warning transmitter and horn circuit and turn-and-bank indicator circuit are protected by a single automatically resetting circuit breaker mounted behind the instrument panel. The remaining circuits are protected by "push-to-reset" breakers on the instrument panel.

GENERATOR WARNING LIGHT.

The red generator warning light indicates generator output. The light remains off as long as the generator functions properly. If a malfunction interrupts generator output, the light will illuminate. It also will illuminate when the battery or external power is on, before starting the engine, and whenever engine speed is insufficient to produce generator output. The light does not show battery drain.

LANDING LIGHTS (OPT).

A three-position, push-pull switch controls the optional landing lights. To turn one lamp on for taxiing, pull the switch out to the first stop. To turn both lamps on for landing, pull the switch out to the second stop.

ROTATING BEACON (OPT).

The rotating beacon should not be used when flying through clouds or overcast; the moving beams reflected from water droplets or particles in the atmosphere, particularly at night, can produce vertigo and loss of orientation.

CABIN HEATING AND VENTILATION SYSTEM.

For cabin ventilation, pull the "CABIN AIR" knob out. To raise the air temperature, pull the "CABIN HT" knob out approximately 1/4" to 1/2" for a small amount of cabin heat. Additional heat is available by pulling the knob out farther; maximum heat is available with the "CABIN HT" knob pulled full out and the "CABIN AIR" knob pushed full in. When no heat is desired in the cabin, the "CABIN HT" knob is pushed full in.

Front cabin heat and ventilating air is supplied by outlet holes spaced across a cabin manifold just forward of the pilot's and copilot's feet. Rear cabin heat and air is supplied by two ducts from the manifold, one extending down each side of the cabin. Windshield defrost air is also supplied by a duct leading from the cabin manifold.

Separate adjustable ventilators supply additional air; one near each upper corner of the windshield supplies air for the pilot and copilot, and two optional ventilators in the rear cabin ceiling supply air to the rear seat passengers.

STARTING ENGINE.


Ordinarily the engine starts easily with one or two strokes of the primer in warm temperatures to six strokes in cold weather, with the throttle open approximately 1/8 inch. In extremely cold temperatures, it may be necessary to continue priming while cranking.

Weak intermittent explosions followed by puffs of black smoke from the exhaust stack indicates overpriming or flooding. Excess fuel can be cleared from the combustion chambers by the following procedure: Set the mixture control full lean and the throttle full open; then crank the engine through several revolutions with the starter. Repeat the starting procedure without any additional priming.

If the engine is underprimed (most likely in cold weather with a cold engine) it will not fire at all, and additional priming will be necessary. As soon as the cylinders begin to fire, open the throttle slightly to keep it running.

After starting, if the oil gage does not begin to show pressure within 30 seconds in the summertime and about twice that long in very cold weather, stop engine and investigate. Lack of oil pressure can cause

TAXIING DIAGRAM

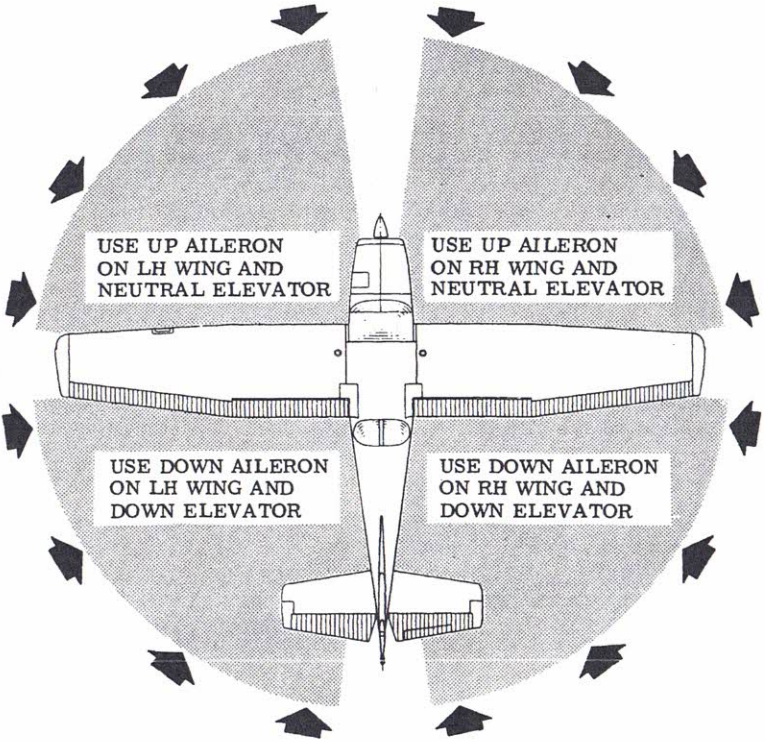

CODE

WIND DIRECTION

NOTE

Strong quartering tail winds require caution. Avoid sudden bursts of the throttle and sharp braking when the airplane is in this attitude. Use the steerable nose wheel and rudder to maintain direction.

Figure 2-3.

serious engine damage. After starting, avoid the use of carburetor heat unless icing conditions prevail.

TAXIING.

When taxiing, it is important that speed and use of brakes be held to a minimum and that all controls be utilized (see taxiing diagram, figure 2-3) to maintain directional control and balance.

Taxiing over loose gravel or cinders should be done at low engine speed to avoid abrasion and stone damage to the propeller tips.

BEFORE TAKE-OFF.

WARM-UP.

Since the engine is closely cowled for efficient in-flight engine cooling, precautions should be taken to avoid overheating during prolonged engine operation on the ground.

MAGNETO CHECK.

The magneto check should be made at 1600 RPM as follows: Move the ignition switch first to "R" position, and note RPM. Next move the switch back to "BOTH" position to clear the other set of plugs. Then move the switch to the "L" position and note RPM. The difference between the two magnetos operated individually should not be more than 75 RPM.

HIGH RPM MAGNETO CHECKS.

If there is a doubt concerning the operation of the ignition system, RPM checks at higher engine speeds will usually confirm whether a deficiency exists. If a full throttle runup is necessary, the engine should run smoothly and turn approximately 2230 to 2330 RPM with the carburetor heat off.

An absence of RPM drop may be an indication of faulty grounding of one side of the ignition system or should be cause for suspicion that the magneto timing has been "bumped-up" and is set in advance of the setting specified.

TAKE-OFF.

POWER CHECK.

It is important to check full-throttle engine operation early in the take-off run. Any signs of rough engine operation or sluggish engine acceleration is good cause for discontinuing the take-off. If this occurs, you are justified in making a thorough full-throttle, static runup before another take-off is attempted.

Full-throttle runups over loose gravel are especially harmful to propeller tips. When take-offs must be made over a gravel surface, it is very important that the throttle be advanced slowly. This allows the airplane to start rolling before high RPM is developed, and the gravel will be blown back of the propeller rather than pulled into it. When unavoidable small dents appear in the propeller blades, they should be immediately corrected as described in Section IV under propeller care.

Prior to take-off from fields above 5000 feet elevation, the mixture should be leaned to give maximum RPM in a full-throttle, static runup.

WING FLAP SETTINGS.

Normal and obstacle clearance take-offs are performed with wing flaps up. The use of 10° flaps will shorten the ground run approximately 10%, but this advantage is lost in the climb to a 50-foot obstacle. Therefore, the use of 10° flap is reserved for minimum ground runs or for take-off from soft or rough fields with no obstacles ahead.

If 10° of flaps are used in ground runs, it is preferable to leave them extended rather than retract them in the climb to the obstacle. The exception to this rule would be in a high altitude take-off in hot weather where climb would be marginal with flaps 10°.

Flap deflections of 30° to 40° are not recommended at any time for take-off.

PERFORMANCE CHARTS.

Consult the take-off chart in Section V for take-off distances under various gross weight, altitude, and headwind conditions.

CROSSWIND TAKE-OFFS.

Take-offs into strong crosswinds normally are performed with the minimum flap setting necessary for the field length, to minimize the drift angle immediately after take-off. The airplane is accelerated to a speed slightly higher than normal, then pulled off abruptly to prevent possible settling back to the runway while drifting. When clear of the ground, make a coordinated turn into the wind to correct for drift.

CLIMB.

CLIMB DATA.

For detailed data, refer to the Maximum Rate-of-Climb Data chart in Section V.

CLIMB SPEEDS.

Normal climbs are performed at 80 to 90 MPH with flaps up and full throttle for best engine cooling. The mixture should be full rich unless the engine is rough due to too rich a mixture. The best rate-of-climb speeds range from 80 MPH at sea level to 77 MPH at 10,000 feet. If an obstacle dictates the use of a steep climb angle, the best angle-of-climb speed should be used with flaps up and full throttle. These speeds vary from 65 MPH at sea level to 71 MPH at 10,000 feet.

NOTE

Steep climbs at these low speeds should be of short duration to improve engine cooling.

GO-AROUND CLIMB.

In a balked landing (go-around) climb, the wing flap setting should be reduced to 20° immediately after full power is applied. Upon reaching a safe airspeed, the flaps should be slowly retracted to the full up position.

CRUISE.

Normal cruising is done between 65% and 75% power. The power

settings required to obtain these powers at various altitudes and outside air temperatures can be determined by using your Cessna Power Computer.

Cruising can be done most efficiently at high altitudes because of lower air density and therefore lower airplane drag. This is illustrated in the following table which shows performance at 75% power at various altitudes.

OPTIMUM CRUISE PERFORMANCE

ALTITUDE	RPM	TRUE AIRSPEED	RANGE
Sea Level	2450	123	520
5000 ft.	2560	128	540
7000 ft.	Full Throttle	130	550

All figures are based on lean mixture, 36 gallons of fuel (no reserve), zero wind, standard atmospheric conditions, and 2300 pounds gross weight.

STALLS.

The stall characteristics are conventional and aural warning is provided by a stall warning horn which sounds between 5 and 10 MPH above the stall in all configurations.

Power-off stall speeds at maximum gross weight and aft c.g. condition are presented on page 5-2 as calibrated airspeeds since indicated airspeeds are unreliable near the stall.

LANDING.

Normal landings are made power-off with any flap setting. Slips are prohibited in full flap approaches because of a downward pitch encountered under certain combinations of airspeed and sideslip angle.

SHORT FIELD LANDINGS.

For a short field landing, make a power-off approach at approximately 67 MPH with flaps 40°, and land on the main wheels first. Immediately after touchdown, lower the nose gear to the ground and apply heavy braking as required. Raising the flaps after landing will provide more efficient braking.

CROSSWIND LANDINGS.

When landing in a strong crosswind, use the minimum flap setting required for the field length. Use a wing-low, crab, or a combination method of drift correction and land in a nearly level attitude. Hold a straight course with the steerable nosewheel and occasional braking if necessary.

COLD WEATHER OPERATION.

Prior to starting on cold morning, it is advisable to pull the propeller through several times by hand to "break loose" or "limber" the oil, thus conserving battery energy. In extremely cold (0°F and lower) weather, the use of an external preheater for both the engine and battery is recommended whenever possible to reduce wear and abuse to the engine and the electrical system. When using an external power source, the position of the master switch is important. Refer to Section VI, GROUND SERVICE PLUG RECEPTACLE, for operating details. Cold weather starting procedures are as follows:

With Preheat:

(1) Clear propeller.
(2) Pull master switch "ON."
(3) With magneto switch "OFF" and throttle closed, prime the engine four to ten strokes as the engine is being turned over.

NOTE

Use heavy strokes of primer for best atomization of fuel. After priming, push primer all the way in and turn to locked position to avoid possibility of engine drawing fuel through the primer.

(4) Turn magneto switch to "BOTH."
(5) Open throttle 1/4" and engage starter.

Without Preheat:

(1) Prime the engine 8 to 10 strokes while the propeller is being turned by hand.
(2) Clear propeller.
(3) Pull master switch "ON."
(4) Turn magneto switch to "BOTH."
(5) Open throttle 1/4".
(6) Pull carburetor air heat knob full on.
(7) Engage starter and continue to prime engine until it is running smoothly.
(8) Keep carburetor heat on until engine has warmed up.

NOTE

If the engine does not start the first time, it is probable that the spark plugs have been frosted over. Preheat must be used before another start is attempted.

During cold weather operations, no indication will be apparent on the oil temperature gage prior to take-off if outside air temperatures are very cold. After a suitable warm-up period (2 to 5 minutes at 1000 RPM), accelerate the engine several times to higher engine RPM. If the engine accelerates smoothly and the oil pressure remains normal and steady, the airplane is ready for take-off.

When operating in sub-zero temperature, avoid using partial carburetor heat. Partial heat may increase the carburetor air temperature to the 32° to 80°F range, where icing is critical under certain atmospheric conditions.

Refer to Section VI for cold weather equipment.

MODIFIED FUEL MANAGEMENT PROCEDURES

With a combination of highly volatile fuel, high fuel temperature, high operating altitude, and low fuel flow rate in the tank outlet lines, there is a remote possibility of accumulating fuel vapor and encountering power irregularities on some airplanes. To minimize this possibility, the following operating procedures are recommended:

(1) Take-off and climb to cruise altitude on "both" tanks. (This is consistent with current recommendations.)
(2) When reaching cruise altitude above 5000 feet MSL, promptly switch the fuel selector valve from "both" tanks to either the "right" or "left" tank.
(3) During cruise, use "left" and "right" tank as required.
(4) Select "both" tanks for landing as currently recommended.

POWER RECOVERY TECHNIQUES

In the remote event that vapor is present in sufficient amounts to cause a power irregularity, the following power recovery techniques should be followed:

OPERATION ON A SINGLE TANK

Should power irregularities occur when operating on a single tank, power can be restored immediately by switching to the opposite tank. In addition, the vapor accumulation in the tank on which the power irregularity occurred will rapidly dissipate itself such that that tank will also be available for normal operation after it has been unused for approximately one (1) minute.

OPERATION ON BOTH TANKS

Should power irregularities occur with the fuel selector on both tanks, the following steps are to be taken to restore power:

(1) Switch to a single tank for a period of 60 seconds.
(2) Then switch to the opposite tank and power will be restored.

Section 172 III

OPERATING LIMITATIONS

OPERATIONS AUTHORIZED.

Your Cessna exceeds the requirements of airworthiness as set forth by the United States Government, and is certificated under FAA Type Certificate No. 3A12 as Cessna Model No. 172F.

With standard equipment, the airplane is approved for day and night operations under VFR. Additional optional equipment is available to increase its utility and to make it authorized for use under IFR day and night. An owner of a properly equipped Cessna is eligible to obtain approval for its operation on single-engine scheduled airline service under VFR. Your Cessna Dealer will be happy to assist you in selecting equipment best suited to your needs.

MANEUVERS - NORMAL CATEGORY.

The airplane exceeds the requirements for airworthiness of the Federal Air Regulations, Part 3, set forth by the United States Government. Spins and aerobatic maneuvers are not permitted in normal category airplanes in compliance with these regulations. In connection with the foregoing, the following gross weights and flight load factors apply:

Gross Weight	2300 lbs.	
Flight Load Factor *Flaps Up	+3.8	-1.52
Flight Load Factor *Flaps Down	+3.5	

*The design load factors are 150% of the above, and in all cases, the structure meets or exceeds design loads.

Your airplane must be operated in accordance with all FAA approved markings, placards and check lists in the airplane. If there is any information in this section which contradicts the FAA approved markings, placards and check lists, it is to be disregarded.

MANEUVERS - UTILITY CATEGORY.

This airplane is not designed for purely aerobatic flight. However, in the acquisition of various certificates such as commercial pilot, instrument pilot and flight instructor, certain maneuvers are required by the FAA. All of these maneuvers are permitted in this airplane when operated in the utility category. In connection with the utility category, the following gross weight and flight load factors apply, with recommended entry speeds for maneuvers as shown.

Maximum Design Weight	2000 lbs.
Flight Maneuvering Load Factor, Flaps Up	+4.4 -1.76
Flight Maneuvering Load Factor, Flaps Down	+3.5

No acrobatic maneuvers are approved except those listed below:

MANEUVER	RECOMMENDED ENTRY SPEED
Chandelles	122 mph (106 knots)
Lazy Eights	122 mph (106 knots)
Steep Turns	122 mph (106 knots)
Spins	Slow Deceleration
Stalls (Except Whip Stalls)	Slow Deceleration

The baggage compartment and rear seat must not be occupied.

Aerobatics that may impose high inverted loads should not be attempted. The important thing to bear in mind in flight maneuvers is that your Cessna is clean in aerodynamic design and will build up speed quickly with the nose down. Proper speed control is an essential requirement for execution of any maneuver, and care should always be exercised to avoid excessive speed which in turn can impose excessive loads. In the execution of all maneuvers, avoid abrupt use of controls.

AIRSPEED LIMITATIONS.

The following are the certificated calibrated airspeed limits for your Cessna:

Maximum (Glide or dive, smooth air)	174 MPH (red line)
Caution Range	140-174 MPH (yellow arc)
Normal Range	59-140 MPH (green arc)

Flap Operating Range . . . . . 52-100 MPH (white arc)
Maneuvering Speed* . . . . . 122 MPH

*The maximum speed at which you can use abrupt control travel without exceeding the design load factor.

ENGINE OPERATION LIMITATIONS.

Power and Speed: 145 BHP at 2700 RPM

ENGINE INSTRUMENT MARKINGS.

OIL TEMPERATURE GAGE.

Normal Operating Range . . . . . Green Arc
Maximum Allowable . . . . . Red Line

OIL PRESSURE GAGE.

Minimum Idling . . . . . 10 psi (red line)
Normal Operating Range . . . . . 30-60 psi (green arc)
Maximum . . . . . 100 psi (red line)

FUEL QUANTITY INDICATORS.

Empty (1.50 gallons unusable each tank) . . . . . E (red line)

TACHOMETER.

Normal Operating Range:
At sea level . . . . . 2200-2500 (inner green arc)
At 5000 feet . . . . . 2200-2600 (middle green arc)
At 10,000 feet . . . . . 2200-2700 (outer green arc)
Maximum Allowable . . . . . 2700 (red line)

WEIGHT AND BALANCE.


The following information will enable you to operate your Cessna within the prescribed weight and center of gravity limitations. To figure the weight and balance for your particular airplane, use the Sample Problem, Loading Graph, and Center of Gravity Moment Envelope as follows:


Take the licensed Empty Weight and Moment/1000 from the Weight and Balance Data sheet, plus any changes noted on forms FAA-337, carried in your airplane, and write them down in the proper columns. Using the Loading Graph, determine the moment/1000 of each item to be carried. Total the weights and moments/1000 and use the Center of Gravity Moment Envelope to determine whether the point falls within the envelope, and if the loading is acceptable.

172 SAMPLE LOADING PROBLEM	Sample Airplane		Your Airplane	
	Weight (lbs)	Moment (lb - ins. /1000)	Weight ⋮	Moment ⋮
1. Licensed Empty Weight (Sample Airplane) ...	1324	48.2		
2. Oil - 8 Qts.*	15	-0.3	15	-0.3
3. Pilot & Front Passenger	340	12.2		
4. Fuel- (36 Gal at 6#/Gal)	216	10.4		
5. Rear Passengers	340	23.8		
6. Baggage (or Passenger on Auxiliary Seat)	65	6.2		
7. Total Aircraft Weight (Loaded)	2300	100.5		

8. Locate this point (2300 at 100.5) on the center of gravity envelope, and since this point falls within the envelope the loading is acceptable.

*Note: Normally full oil may be assumed for all flights.

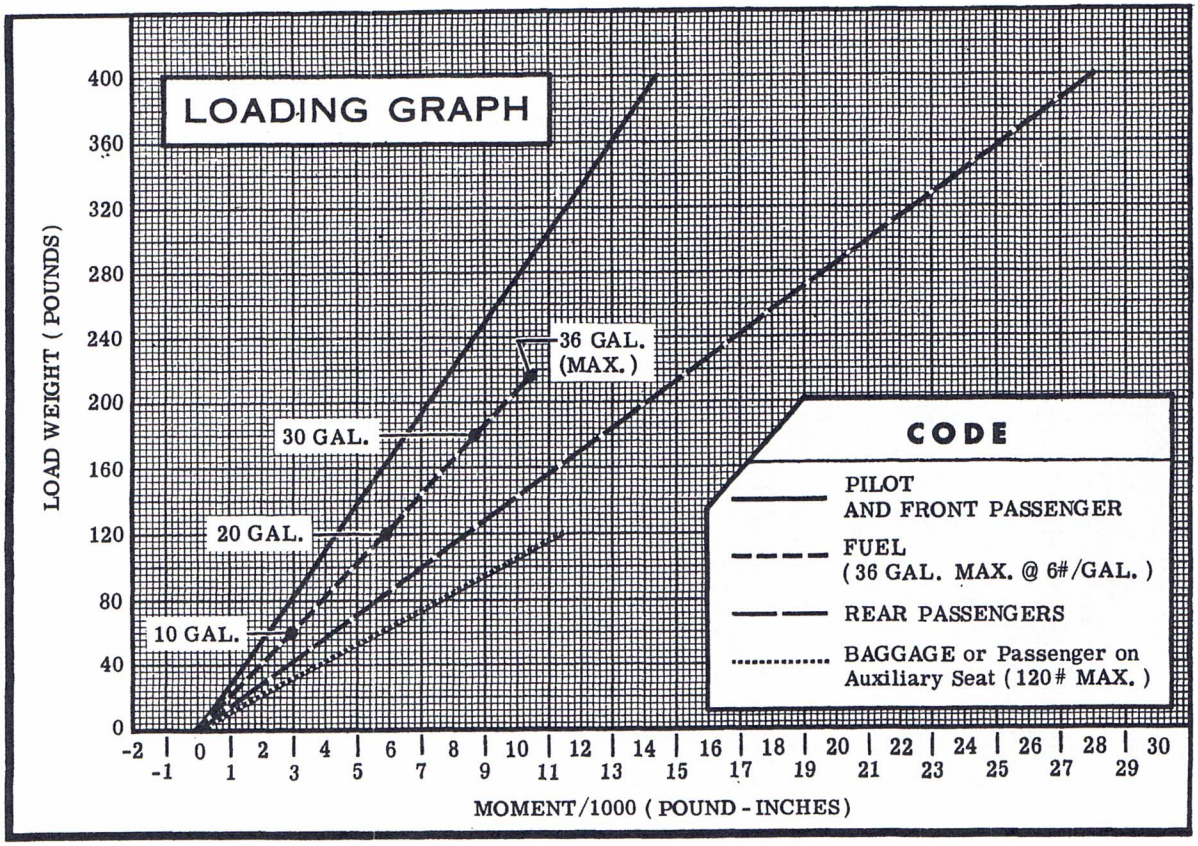
LOADING GRAPH
LOAD WEIGHT (POUNDS)
400
360
320
280
240
200
160
120
80
40
0
36 GAL.
(MAX.)
30 GAL.
20 GAL.
10 GAL.
CODE
PILOT
AND FRONT PASSENGER
FUEL
(36 GAL. MAX. @ 6#/GAL.)
REAR PASSENGERS
BAGGAGE or Passenger on
Auxiliary Seat (120# MAX.)
-2 -1 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
MOMENT/1000 (POUND - INCHES)

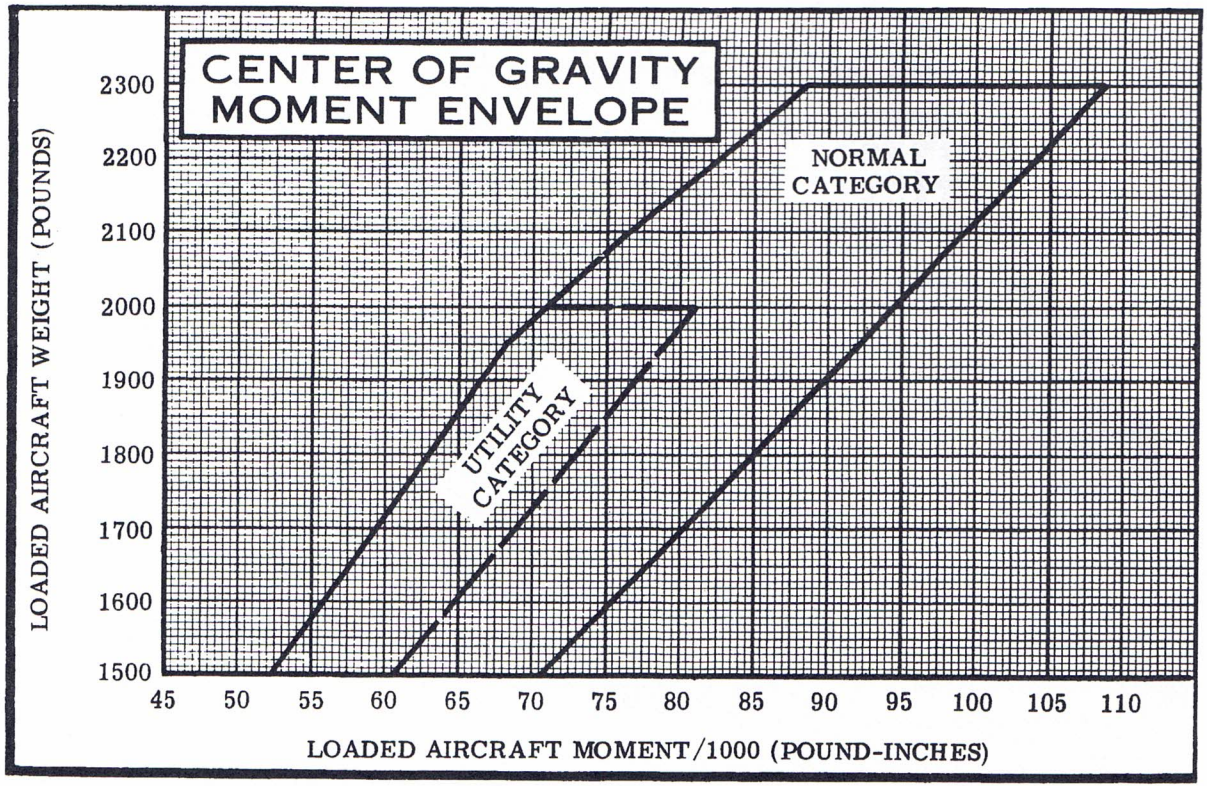
CENTER OF GRAVITY
MOMENT ENVELOPE
NORMAL
CATEGORY
UTILITY
CATEGORY
LOADED AIRCRAFT WEIGHT (POUNDS)
2300
2200
2100
2000
1900
1800
1700
1600
1500
45
50
55
60
65
70
75
80
85
90
95
100
105
110
LOADED AIRCRAFT MOMENT/1000 (POUND-INCHES)

Section 172 IV

CARE OF THE AIRPLANE

If your airplane is to retain that new plane performance and dependability, certain inspection and maintenance requirements must be followed. It is wise to follow a planned schedule of lubrication and preventative maintenance based on climatic and flying conditions encountered in your locality.

Keep in touch with your Cessna Dealer and take advantage of his knowledge and experience. He knows your airplane and how to maintain it. He will remind you when lubrications and oil changes are necessary, and about other seasonal and periodic services.

GROUND HANDLING.

The airplane is most easily and safely maneuvered by hand with the tow-bar attached to the nosewheel.

NOTE

When using the tow-bar, never exceed the turning angle of 30°, either side of center, or damage to the gear will result.

MOORING YOUR AIRPLANE.

Proper tie-down procedure is your best precaution against damage to your parked airplane by gusty or strong winds. To tie-down your airplane securely, proceed as follows:

(1) Set the parking brake and install the control wheel lock.
(2) Tie sufficiently strong ropes or chains (700 pounds tensile strength) to wing, tail, and nose tie-down fittings and secure each rope to a ramp tie-down.

(3) Install a surface control lock over the fin and rudder.
(4) Install a pitot tube cover.

WINDSHIELD - WINDOWS.

The plastic windshield and windows should be kept clean and waxed at all times. To prevent scratches and crazing, wash them carefully with plenty of soap and water, using the palm of the hand to feel and dislodge dirt and mud. A soft cloth, chamois or sponge may be used, but only to carry water to the surface. Rinse thoroughly, then dry with a clean, moist chamois. Rubbing the surface of the plastic with a dry cloth builds up an electrostatic charge so that it attracts dust particles in the air. Wiping with a moist chamois will remove both the dust and this charge.

Remove oil and grease with a cloth moistened with kerosene. Never use gasoline, benzine, alcohol, acetone, carbon tetrachloride, fire extinguisher or anti-ice fluid, lacquer thinner or glass cleaner. These materials will soften the plastic and may cause it to craze.

After removing dirt and grease, if the surface is not badly scratched, it should be waxed with a good grade of commercial wax. The wax will fill in minor scratches and help prevent further scratching. Apply a thin, even coat of wax, and bring it to a high polish by rubbing lightly with a clean, dry, soft flannel cloth. Do not use a power buffer; the heat generated by the buffing pad may soften the plastic.

Do not use a canvas cover on the windshield unless freezing rain or sleet is anticipated. Canvas covers may scratch the plastic surface.

PAINTED SURFACES.

The painted exterior surfaces of your new Cessna require an initial curing period which may be as long as 90 days after the finish is applied. During this curing period some precautions should be taken to avoid damaging the finish or interfering with the curing process. The finish should be cleaned only by washing with clean water and mild soap, followed by a rinse with water and drying with cloths or a chamois. Do not use polish or wax, which would exclude air from the surface, during this 90-day curing period. Do not rub or buff the finish, and avoid flying through rain, hail or sleet.

Once the finish has cured completely, it may be waxed with a good

automotive wax. A heavier coating of wax on the leading edges of the wings and tail and on the engine nose cap and propeller spinner will help reduce the abrasion encountered in these areas.

ALUMINUM SURFACES.

The clad aluminum surfaces of your Cessna may be washed with clear water to remove dirt; oil and grease may be removed with gasoline, naptha, carbon tetrachloride or other non-alkaline solvents. Dulled aluminum surfaces may be cleaned effectively with an aircraft aluminum polish.

After cleaning, and periodically thereafter, waxing with a good automotive wax will preserve the bright appearance and retard corrosion. Regular waxing is especially recommended for airplanes operated in salt water areas as a protection against corrosion.

PROPELLER CARE.

Preflight inspection of propeller blades for nicks, and wiping them occasionally with an oily cloth to clean off grass and bug stains will assure long, trouble-free service. It is vital that small nicks on the propellers, particularly near the tips and on the leading edges, are dressed out as soon as possible since these nicks produce stress concentrations, and if ignored, may result in cracks. Never use an alkaline cleaner on the blades; remove grease and dirt with carbon tetrachloride or Stoddard solvent.

INTERIOR CARE.

To remove dust and loose dirt from the upholstery and carpet, clean the interior regularly with a vacuum cleaner.

Blot up any spilled liquid promptly, with cleansing tissue or rags. Don't pat the spot; press the blotting material firmly and hold it for several seconds. Continue blotting until no more liquid is taken up. Scrape off sticky materials with a dull knife, then spot-clean the area.

Oily spots may be cleaned with household spot removers, used sparingly. Before using any solvent, read the instructions on the container

and test it on an obscure place on the fabric to be cleaned. Never saturate the fabric with a volatile solvent; it may damage the padding and backing materials.

Soiled upholstery and carpet may be cleaned with foam-type detergent, used according to the manufacturer's instructions. To minimize wetting the fabric, keep the foam as dry as possible and remove it with a vacuum cleaner.

The plastic trim, headliner, instrument panel and control knobs need only be wiped off with a damp cloth. Oil and grease on the control wheel and control knobs can be removed with a cloth moistened with kerosene. Volatile solvents, such as mentioned in paragraphs on care of the windshield, must never be used since they soften and craze the plastic.

INSPECTION SERVICE AND INSPECTION PERIODS.

With your airplane you will receive an Owner's Service Policy. Coupons attached to the policy entitle you to an initial inspection and the first 100-hour inspection at no charge. If you take delivery from your Dealer, he will perform the initial inspection before delivery of the airplane to you. If you pick up the airplane at the factory, plan to take it to your Dealer reasonably soon after you take delivery on it. This will permit him to check it over and to make any minor adjustments that may appear necessary. Also, plan an inspection by your Dealer at 100 hours or 180 days, whichever comes first. This inspection also is performed by your Dealer for you at no charge. While these important inspections will be performed for you by any Cessna Dealer, in most cases you will prefer to have the Dealer from whom you purchased the airplane accomplish this work.

Federal Air Regulations require that all airplanes have a periodic (annual) inspection as prescribed by the administrator, and performed by a person designated by the administrator. In addition, 100-hour periodic inspections made by an "appropriately-rated mechanic" are required if the airplane is flown for hire. The Cessna Aircraft Company recommends the 100-hour periodic inspection for your airplane. The procedure for this 100-hour inspection has been carefully worked out by the factory and is followed by the Cessna Dealer Organization. The complete familiarity of the Cessna Dealer Organization with Cessna equipment and with factory-approved procedures provides the highest type of service possible at lower cost.

AIRPLANE FILE.

There are miscellaneous data, information and licenses that are a part of the airplane file. The following is a check list for that file. In addition, a periodic check should be made of the latest Federal Air Regulations to insure that all data requirements are met.

A. To be displayed in the airplane at all times:

(1) Aircraft Airworthiness Certificate (Form FAA-1362).
(2) Aircraft Registration Certificate (Form FAA-500A).
(3) Airplane Radio Station License (Form FCC-404, if transmitter installed).

B. To be carried in the airplane at all times:

(1) Weight and Balance, and associated papers (latest copy of the Repair and Alteration Form, Form FAA-337, if applicable).
(2) Airplane Equipment List.

C. To be made available upon request:

(1) Airplane Log Book.
(2) Engine Log Book.

NOTE

Cessna recommends that these items, plus the Owner's Manual and the "Cessna Flight Guide" (Flight Computer), be carried in the airplane at all times.

Most of the items listed are required by the United States Federal Air Regulations. Since the regulations of other nations may require other documents and data, owners of exported airplanes should check with their own aviation officials to determine their individual requirements.

LUBRICATION AND SERVICING PROCEDURES

Specific servicing information is provided here for items requiring daily attention. A Servicing Intervals Check List is included to inform the pilot when to have other items checked and serviced.

DAILY

FUEL TANK FILLERS:

Service after each flight with 80/87 minimum grade fuel. The capacity of each wing tank is 19.5 gallons.

FUEL STRAINER:

On the first flight of the day and after each refueling, pull out fuel strainer drain knob for about four seconds, to clear fuel strainer of possible water and sediment. Release drain knob, then check that strainer drain is closed after draining.

OIL FILLER:

When preflight check shows low oil level, service with aviation grade engine oil; SAE 20 below 40°F. and SAE 40 above 40°F. Your Cessna was delivered from the factory with straight mineral oil (non-detergent) and should be operated with straight mineral oil for the first 25 hours. The use of mineral oil during the 25-hour break-in period will help seat the piston rings and will result in less oil consumption. After the first 25 hours, either mineral oil or detergent oil may be used. If a detergent oil is used, it must conform to Continental Motors Corporation Specification MHS-24. Your Cessna Dealer can supply an approved brand.

OIL DIPSTICK:

Check oil level before each flight. Do not operate on less than 6 quarts. To minimize loss of oil through breather, fill to 7 quart level for normal flights of less than 3 hours. For extended flight, fill to 8 quarts. If optional oil filter is installed, one additional quart is required when the filter element is changed.

SERVICING INTERVALS CHECK LIST

EACH 50 HOURS

BATTERY -- Check and service. Check oftener (at least every 30 days) if operating in hot weather.

ENGINE OIL AND OIL FILTER -- Change engine oil and replace filter element. If optional oil filter is not installed, change oil and clean screen every 25 hours. Change engine oil at least every four months even though less than 50 hours have been accumulated. Reduce periods for prolonged operation in dusty areas, cold climates, or when short flights and long idle periods result in sludging conditions.

CARBURETOR AIR FILTER -- Clean or replace. Under extremely dusty conditions, daily maintenance of the filter is recommended.

NOSE GEAR TORQUE LINKS -- Lubricate.

EACH 100 HOURS

BRAKE MASTER CYLINDERS -- Check and fill.

SHIMMY DAMPENER -- Check and fill.

FUEL STRAINER -- Disassemble and clean.

FUEL TANK SUMP DRAINS -- Drain water and sediment.

FUEL LINE DRAIN PLUG -- Drain water and sediment.

VACUUM SYSTEM OIL SEPARATOR (OPT) -- Clean.

SUCTION RELIEF VALVE INLET SCREEN (OPT) -- Clean.

EACH 500 HOURS

VACUUM SYSTEM AIR FILTER (OPT) -- Replace filter element. Replace sooner if suction gage reading drops below 3.75 in. Hg.

WHEEL BEARINGS -- Lubricate. Lubricate at first 100 hours and at 500 hours thereafter.

AS REQUIRED

NOSE GEAR SHOCK STRUT -- Keep inflated and filled.

GYRO INSTRUMENT AIR FILTERS (OPT) -- Replace at instrument overhaul.

OWNER FOLLOW-UP SYSTEM



172

Your Cessna Dealer has an owner follow-up system to notify you when he receives information that applies to your Cessna. In addition, if you wish, you may choose to receive similar notification directly from the Cessna Service Department. A subscription card is supplied in your airplane file for your use, should you choose to request this service. Your Cessna Dealer will be glad to supply you with details concerning these follow-up programs, and stands ready through his Service Department to supply you with fast, efficient, low cost service.



Section 172 V

OPERATIONAL DATA

The operational data shown on the following pages are compiled from actual tests with airplane and engine in good condition and using average piloting technique and best power mixture. You will find this data a valuable aid when planning your flights. However, inasmuch as the number of variables included precludes great accuracy, an ample fuel reserve should be provided. The range performance shown makes no allowance for wind, navigational error, pilot technique, warm-up, take-off, climb, etc. All of these factors must be considered when estimating reserve fuel.

A power setting selected from the range charts usually will be more efficient than a random setting, since it will permit you to estimate your fuel consumption more accurately. You will find that using the charts and your Power Computer will pay dividends in overall efficiency.

Range and endurance figures shown in the charts are based on flight test using McCauley 1C172/EM 7653 propeller. Other conditions of the tests are shown in the chart headings. Allowances for fuel reserve, headwinds, take-offs, and climb, and variations in mixture leaning technique should be made and are in addition to those shown on the charts. Other indeterminate variables such as carburetor metering-characteristics engine and propeller conditions, and turbulence of atmosphere may account for variations of 10% or more in maximum range.

AIRSPEED CORRECTION TABLE

FLAPS	IAS	40	50	60	70	80	90	100	110	120	130	140
FLAPS UP	CAS	55	60	66	72	80	89	98	108	117	127	136
FLAPS DOWN	CAS	52	58	65	73	82	91	101	•	•	•	•

Figure 5-1.

POWER OFF STALLING SPEEDS MPH - CAS

	CONDITION	ANGLE OF BANK 0°	20°	40°	60°
2300 LBS. GROSS WEIGHT	FLAPS UP	57	59	65	81
	FLAPS 10°	52	54	59	74
	FLAPS 40°	49	51	56	69

Figure 5-2.

TAKE-OFF DATA

TAKE-OFF DISTANCE FROM HARD SURFACE RUNWAY, FLAPS UP

GROSS WEIGHT LBS.	IAS AT 50 FT. MPH	HEAD WIND KNOTS	@ S.L. & 59° F		@ 2500 ft. & 50° F		@ 5000 ft. & 41° F		@ 7500 ft. & 32° F	
			GROUND RUN	TOTAL TO CLEAR 50' OBS.	GROUND RUN	TOTAL TO CLEAR 50' OBS.	GROUND RUN	TOTAL TO CLEAR 50' OBS.	GROUND RUN	TOTAL TO CLEAR 50' OBS.
1700	60	0	435	780	520	920	625	1095	765	1370
		10	290	570	355	680	430	820	535	1040
		20	175	385	215	470	270	575	345	745
2000	65	0	630	1095	755	1325	905	1625	1120	2155
		10	435	820	530	1005	645	1250	810	1685
		20	275	580	340	720	425	910	595	1255
2300	70	0	865	1525	1040	1910	1255	2480	1565	3855
		10	615	1170	750	1485	920	1955	1160	3110
		20	405	850	505	1100	630	1480	810	2425

Note: Increase distance 10% for each 25°F above standard temperature for particular altitude.

MAXIMUM RATE-OF-CLIMB DATA

GROSS WEIGHT LBS.	@ S.L. & 59° F			@ 5000 ft. & 41°F			@ 10,000 ft. & 23° F			@ 15,000 ft. & 5° F		
	IAS MPH	RATE OF CLIMB FT/MIN.	GALS OF FUEL USED	IAS MPH	RATE OF CLIMB FT/MIN.	FROM S.L. FUEL USED	IAS MPH	RATE OF CLIMB FT/MIN.	FROM S.L. FUEL USED	IAS MPH	RATE OF CLIMB FT/MIN.	FROM S.L. FUEL USED
1700	75	1085	1.0	73	825	1.9	71	570	2.9	70	315	4.4
2000	77	840	1.0	76	610	2.2	74	380	3.6	73	155	6.3
2300	80	645	1.0	78	435	2.6	77	230	4.8	76	22	11.5

Note: Flaps up, full throttle and mixture leaned for smooth operation above 5000 ft.
Fuel used includes warm-up and take-off allowance.

Figure 5-3.

CRUISE & RANGE PERFORMANCE

172 SKYHAWK

Gross Weight- 2300 Lbs. ✱
Standard Conditions ✱
Zero Wind ✱ Lean Mixture ✱
36 Gal. of Fuel (No Reserve)

NOTE: Maximum cruise is normally limited to 75% power. For standard 172 performance, subtract 1 MPH from the higher cruise speeds shown.

ALT.	RPM	% BHP	TAS MPH	GAL. / HOUR	ENDR. HOURS	RANGE MILES
2500	2700	93	138	10.5	3.4	470
	2600	84	131	9.5	3.8	495
	2500	75	125	8.5	4.2	530
	2400	67	119	7.6	4.7	560
	2300	59	113	6.8	5.3	595
	2200	52	106	6.2	5.8	615
	2100	46	100	5.7	6.4	635
5000	2700	87	136	9.8	3.7	500
	2600	78	130	8.8	4.1	525
	2550	74	127	8.4	4.3	550
	2500	70	124	7.9	4.5	560
	2400	62	118	7.1	5.1	600
	2300	55	111	6.4	5.6	625
	2200	49	105	5.9	6.1	640
	2100	44	98	5.5	6.4	640
7500	2650	77	132	8.7	4.2	550
	2600	73	129	8.2	4.3	560
	2500	65	123	7.4	4.9	600
	2400	58	116	6.7	5.3	620
	2300	52	110	6.1	5.9	650
	2200	47	103	5.7	6.4	655
	2100	42	97	5.3	6.7	655
10,000	2600	68	128	7.7	4.7	605
	2500	61	121	7.0	5.2	625
	2400	55	115	6.4	5.6	645
	2300	49	108	5.9	6.1	655
	2200	45	102	5.5	6.6	670
	2100	41	96	5.2	6.8	655
12,500	2600	63	126	7.2	5.0	630
	2500	57	120	6.6	5.4	650
	2400	52	113	6.1	5.9	670
	2300	47	107	5.7	6.3	670
	2200	43	101	5.4	6.6	670

Figure 5-4.

LANDING DATA

LANDING DISTANCE ON HARD SURFACE RUNWAY
NO WIND – 40° FLAPS – POWER OFF

GROSS WEIGHT LBS.	APPROACH IAS MPH	@ S.L. & 59° F		@ 2500 ft. & 50° F		@ 5000 ft. & 41° F		@ 7500 ft. & 32° F	
		GROUND ROLL	TOTAL TO CLEAR 50' OBS.	GROUND ROLL	TOTAL TO CLEAR 50' OBS.	GROUND ROLL	TOTAL TO CLEAR 50' OBS.	GROUND ROLL	TOTAL TO CLEAR 50' OBS.
2300	65	520	1250	560	1310	605	1385	650	1455

Note: Reduce landing distance 10% for each 5 knot headwind.

Figure 5-5.

Section 172 VI

OPTIONAL SYSTEMS

This section contains a description, operating procedures, and performance data (when applicable) for some of the optional equipment which may be installed in your Cessna. Owner's Manual Supplements are provided to cover operation of other optional equipment systems when installed in your airplane. Contact your Cessna Dealer for a complete list of available optional equipment.

AUXILIARY FUEL TANK SYSTEM

An optional auxiliary fuel tank system (figure 6-1) is available to increase the airplane operating range. System components include an 18 gallon fuel tank (17.55 gallons usable) installed on the baggage compartment floor, an electric fuel transfer pump behind the tank, an electrically-operated fuel quantity indicator and fuel transfer pump switch on the instrument panel, a fuel tank filler provision on the right side of the fuselage, a fuel tank sump drain valve at the front of the tank on the bottom of the fuselage, and the necessary plumbing.

The auxiliary fuel system is connected to the right main fuel tank plumbing above the right cabin door.

AUXILIARY FUEL SYSTEM OPERATION.

To operate the auxiliary fuel system, proceed as follows:

PRE-FLIGHT CHECK:

(1) Turn on master switch and check fuel quantity indicator for reading.

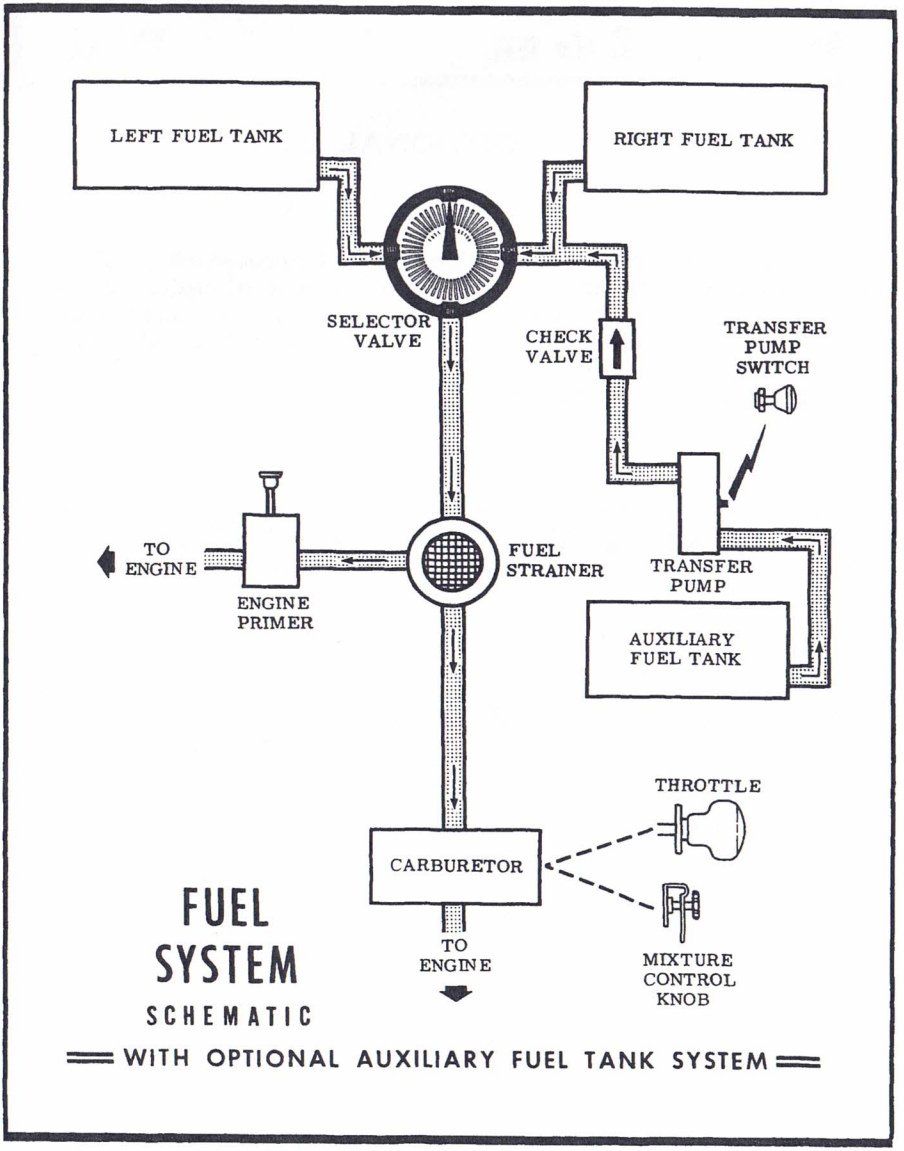

LEFT FUEL TANK
RIGHT FUEL TANK
SELECTOR VALVE
CHECK VALVE
TRANSFER PUMP SWITCH
TO ENGINE
ENGINE PRIMER
FUEL STRAINER
TRANSFER PUMP
AUXILIARY FUEL TANK
THROTTLE
CARBURETOR
TO ENGINE
MIXTURE CONTROL KNOB
FUEL SYSTEM SCHEMATIC
WITH OPTIONAL AUXILIARY FUEL TANK SYSTEM

Figure 6-1.

(2) Momentarily pull on transfer pump switch and listen for pump operation. Turn off master switch.
(3) Check quantity of fuel in tank for agreement with fuel quantity indicator. Fill tank for anticipated requirements.
(4) Drain small amount of fuel from fuel tank drain valve to check for possible water and sediment.

DURING FLIGHT:

(1) Take-off, climb and land with fuel selector valve handle set on "BOTH" for maximum safety.
(2) After leveling off at cruise altitude, switch to "RIGHT" and operate from this tank until the fuel supply is exhausted.
(3) Switch to "LEFT" for operation, then pull on transfer pump switch and refill right main fuel tank from auxiliary tank. Push transfer pump switch off when fuel transfer is completed.

NOTE

Transfer of total fuel from the auxiliary tank will take from 45 minutes to 1 hour.

(4) Return fuel selector valve handle to "BOTH" position after refilling right tank, or if desired switch again to right main tank.

IMPORTANT

Do not operate the transfer pump with the fuel selector turned to either "BOTH" or "RIGHT" positions. Total or partial engine stoppage will result from air being pumped into fuel lines after fuel transfer has been completed. If the pump should accidentally be turned on with the fuel selector in either of these positions, and engine stoppage occurs, the engine will restart in from 3 to 5 seconds after turning off the transfer pump as the air in the fuel line will be evacuated rapidly.

COLD WEATHER EQUIPMENT

WINTERIZATION KIT.

For continuous operation in temperatures consistently below 20°F, the Cessna winterization kit, available from your Cessna Dealer, should be installed to improve engine operation.

GROUND SERVICE PLUG RECEPTACLE.

A ground service plug receptacle may be installed to permit the use of an external power source for cold weather starting and during lengthy maintenance work on the electrical system.

When using a battery type cart as an external power source for starting the engine, the master switch should be turned off. This prevents a low airplane battery from draining the limited external power available from a battery cart. If a generator type external power source is used for starting, the master switch may be turned off or on, as desired by the pilot.

RADIO SELECTOR SWITCHES

RADIO SELECTOR SWITCH OPERATION.

Operation of the radio equipment is normal as covered in the respective radio manuals. When more than one radio is installed, an audio switching system is necessary. The operation of this switching system is described below.

TRANSMITTER SELECTOR SWITCH.

The transmitter selector switch (figure 6-2) is labeled "TRANS," and has two positions. When two transmitters are installed, it is nec-

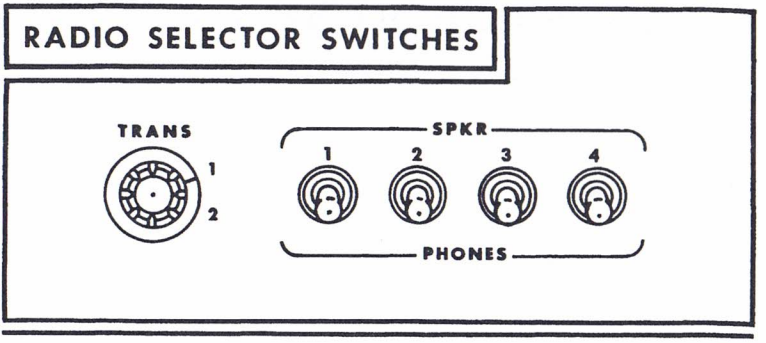


Figure 6-2.

essary to switch the microphone to the radio unit the pilot desires to use for transmission. This is accomplished by placing the transmitter selector switch in the position corresponding to the radio unit which is to be used.

SPEAKER-PHONE SWITCHES.

The speaker-phone switches (figure 6-2) determine whether the output of the receiver in use is fed to the headphones or through the audio amplifier to the speaker. Place the switch for the desired receiving system either in the up position for speaker operation or in the down position for headphones.

AUTOPILOT-OMNI SWITCH.

When a Nav-O-Matic autopilot is installed with two compatible omni receivers, an autopilot-omni switch is utilized. This switch selects the omni receiver to be used for the omni course sensing function of the autopilot. The switch is mounted just to the right of the autopilot control unit at the bottom of the instrument panel. The switch positions, labeled "OMNI 1" and "OMNI 2", correspond to the omni receivers in the radio panel stack.

ALPHABETICAL INDEX

A

After Landing, 1-4
Air Filter, Carburetor, 4-7
Airplane,
- before entering, 1-1
- care, 4-2, 4-3
- file, 4-5
- ground handling, 4-1
- inspection service-periods, 4-4
- lubrication and servicing, 4-6, 4-7
- mooring, 4-1

Airspeed Correction Table, 5-2
Airspeed Limitations, 3-2
Aluminum Surfaces, 4-3
Authorized Operations, 3-1
Auxiliary Fuel Tank System, 6-1
- operation, 6-1
- schematic, 6-2

B

Baggage, Weight, inside front cover
Battery, 4-7
Beacon, Rotating, 2-3
Before Entering Airplane, 1-1
Before Landing, 1-4
Before Starting Engine, 1-1
Before Take-off, 1-2, 2-6
- magneto checks, 2-6
- warm-up, 2-6

Brake Master Cylinders, 4-7

C

Cabin Heating and Ventilating System, 2-4
Capacity,
- fuel, inside covers, 2-1
- oil, inside covers

Carburetor, 2-2, 6-2
- air filter, 4-7

Care,
- exterior, 4-2, 4-3
- interior, 4-3
- propeller, 4-3

Center of Gravity Moment Envelope, 3-6
Circuit Breakers, 2-3
Climb, 1-3, 2-8
- data, 2-8, 5-3
- go-around climb, 2-8
- maximum performance, 1-3
- normal, 1-3
- speeds, 2-8

Cold Weather Equipment, 6-4
- ground service receptacle, 6-4
- winterization kit, 6-4

Cold Weather Operation, 2-10
Correction Table, Airspeed, 5-2
Crosswind Landing, 2-10
Cruise - Range Performance, 5-4
Cruising, 1-3, 2-8

D

Data,
- climb, 2-8, 5-3
- fuel quantity, 2-1
- landing, 5-5
- take-off, 5-3

Diagram,
- exterior inspection, iv
- principal dimensions, ii
- taxiing, 2-5

Dimensions, Principal, ii
Drain Knob, Fuel Strainer, 2-3
Drain Plug, Fuel Line, 4-7
Drain Plugs, Fuel Tank, 4-7

E

Electrical System, 2-3
  battery, 4-7
  circuit breakers, 2-3
  generator warning light, 2-3
  ground service plug receptacle, 6-4
  landing lights, 2-3
  rotating beacon, 2-3
Empty Weight, inside front cover
Engine, inside front cover
  before starting, 1-1
  instrument markings, 3-3
  oil screen, 4-7
  operation limitations, 3-3
  primer, 2-2, 6-2
  starting, 1-2, 2-4
Envelope, Weight and Balance, 3-6
Equipment, Cold Weather, 6-4
Exterior Inspection Diagram, iv

F

File, Airplane, 4-5
Filters, Gyro Instrument Air, 4-7
Fuel Specification and Grade, inside back cover
Fuel System, 2-1
  auxiliary fuel system, 6-1
  capacity, inside covers, 2-1
  carburetor, 2-2, 6-2
  fuel line drain plug, 4-7
  fuel tank (auxiliary), 6-2
  fuel tanks (main), 2-2, 6-2
  fuel tank sump drains, 4-7
  mixture control knob, 2-2, 6-2
  primer, 2-2, 6-2
  quantity data, 2-1
  schematics, 2-2, 6-2
  selector valve, 2-2, 6-2
  strainer drain knob, 2-3
  strainer, 2-2, 4-6, 4-7, 6-2
  tank fillers, 4-6
  throttle, 2-2, 6-2
  transfer pump (auxiliary fuel), 6-2
  transfer pump switch, 6-2

G

Generator Warning Light, 2-3
Go-Around Climb, 2-8
Gross Weight, inside front cover
Ground Handling, 4-1
Ground Service Receptacle, 6-4
Gyro Instrument Air Filters, 4-7

H

Handling Airplane on Ground, 4-1
Heating and Ventilating System, Cabin, 2-4
Hydraulic Fluid Specification, inside back cover

I

Inspection Diagram, Exterior, iv
Inspection Service-Periods, 4-4
Instrument Markings, 3-3
Interior Care, 4-3

L

Landing, inside front cover, 2-9
  after, 1-4

before, 1-4
crosswind, 2-10
data, 5-5
lights, 2-3
normal, 1-4
short field, 2-10
Let-Down, 1-3
Light,
generator warning, 2-3
landing, 2-3
rotating beacon, 2-3
Limitations, Airspeed, 3-2
Limitations, Engine Operating, 3-3
Loading Graph, 3-5
Loading Problem, Sample, 3-4
Lubrication and Servicing Procedures, 4-6

M

Maneuvers, Normal Category, 3-1
Maneuvers, Utility Category, 3-2
Master Cylinders, Brake, 4-7
Maximum Performance Climb, 1-3
Maximum Performance Take-off, 1-2
Maximum Rate-of-Climb Data, 5-3
Mixture Control Knob, 2-2, 6-2
Moment Envelope, Center of Gravity, 3-6
Mooring Your Airplane, 4-1

N

Normal Category, Maneuvers, 3-1
Normal Climb, 1-3
Normal Landing, 1-4
Normal Take-off, 1-2
Nose Gear,
shock strut, 4-7
torque links, 4-7

O

Oil Specification and Grade, inside back cover
Oil System,
capacity, inside covers
filter, 4-7
oil filler and dipstick, 4-6
Operating Limitations, Engine, 3-3
Operation, Auxiliary Fuel Tank System, 6-1
Operation, Cold Weather, 2-10
Operations Authorized, 3-1
Optimum Cruise Performance, 2-9
Owner Follow-Up System, 4-8

P

Painted Surfaces, 4-2
Performance, Specifications, inside front cover
Power Loading, inside front cover
Primer, Engine, 2-2, 6-2
Principal Dimensions, ii
Propeller, inside front cover
care, 4-3

Q

Quantity Data, Fuel, 2-1

R

Radio Selector Switches, 6-4, 6-5
operation, 6-4
speaker-phone switches, 6-5
transmitter selector switch, 6-4
Range, inside front cover
Range - Cruise Performance, 5-4
Rate of Climb, inside front cover
Receptacle, Ground Service, 6-4

S

Sample Loading Problem, 3-4
Schematic, Auxiliary Fuel Tank System, 6-2
Schematic, Fuel System, 2-2
Secure Aircraft, 1-4
Selector Valve, Fuel, 2-2, 6-2
Service Ceiling, inside front cover
Servicing Intervals Check List, 4-7
Servicing Procedures, 4-6
Servicing Requirements Table, inside back cover
Shimmy Dampener, 4-7
Specification and Grade,
- fuel, inside back cover
- hydraulic fluid, inside back cover
- oil, inside back cover

Specifications - Performance, inside front cover
Speed, inside front cover
Stalling Speeds Chart, 5-2
Stalls, 2-9
Starting Engine, 1-2, 2-4
Strainer, Fuel, 2-2, 4-6, 4-7, 6-2
Strainer Drain Knob, Fuel, 2-3
Suction Relief Valve Inlet Screen, 4-7
Surfaces,
- painted, 4-2
- aluminum, 4-3

Switches, Radio Selector, 6-4, 6-5
System,
- auxiliary fuel tank, 6-1
- cabin heating and ventilating, 2-4
- electrical, 2-3
- fuel, 2-1
- owner follow-up, 4-8

T

Table of Contents, iii
Take-off, inside front cover, 1-2, 2-7
- before, 1-2, 2-6
- crosswind, 2-8
- data, 5-3
- maximum performance, 1-2
- normal, 1-2
- performance charts, 2-7
- power check, 2-7
- wing flap settings, 2-7

Taxiing, 2-6
- diagram, 2-5

Throttle, 2-2, 6-2
Tire Pressures, inside back cover
Torque Links, Nose Gear, 4-7
Transfer Pump (Auxiliary Fuel), 6-2
Transfer Pump Switch, 6-2

U

Utility Category, Maneuvers, 3-2

V

Vacuum System Oil Separator, 4-7
Valve, Fuel Selector, 2-2, 6-2

W

Warning Light, Generator, 2-3
Weight,
- empty, inside front cover
- gross, inside front cover

Weight and Balance, 3-4
- loading graph, 3-5
- moment envelope, 3-6
- sample loading problem, 3-4

Wheel Bearings, 4-7
Windshield and Windows, 4-2
Wing Loading, inside cover
Winterization Kit, 6-4

WARRANTY

■ The Cessna Aircraft Company (Cessna) warrants each new aircraft, including factory installed equipment and accessories, and warrants all new aircraft equipment and accessories bearing the name "Cessna," to be free from defects in material and workmanship under normal use and service. Cessna's obligation under this warranty is limited to supplying a part or parts to replace any part or parts which, within six (6) months after delivery of such aircraft or such aircraft equipment or accessories to the original retail purchaser or first user, shall be returned transportation charges prepaid to Cessna at Wichita, Kansas, or such other place as Cessna may designate and which upon examination shall disclose to Cessna's satisfaction to have been thus defective.

■ The provisions of this warranty shall not apply to any aircraft, equipment or accessories which have been subject to misuse, negligence or accident, or which shall have been repaired or altered outside of Cessna's factory in any way so as in the judgment of Cessna to affect adversely its performance, stability or reliability. This warranty is expressly in lieu of any other warranties, expressed or implied, including any implied warranty of merchantability or fitness for a particular purpose, and of any other obligation or liability on the part of Cessna of any nature whatsoever and Cessna neither assumes nor authorizes any one to assume for it any other obligation or liability in connection with such aircraft, equipment and accessories.

SERVICING REQUIREMENTS

FUEL:

AVIATION GRADE -- 80/87 MINIMUM GRADE
CAPACITY EACH TANK -- 19.5 GALLONS

ENGINE OIL:

AVIATION GRADE -- SAE 40 ABOVE 40°F.
SAE 20 BELOW 40°F.
(AIRCRAFT DELIVERED WITH STRAIGHT MINERAL OIL. EITHER MINERAL OIL OR DETERGENT OIL MAY BE USED. IF DETERGENT OIL IS USED, IT MUST CONFORM TO CONTINENTAL MOTORS SPECIFICATION MHS-24.)
CAPACITY OF ENGINE SUMP -- 8 QUARTS
(DO NOT OPERATE ON LESS THAN 6 QUARTS. TO MINIMIZE LOSS OF OIL THROUGH BREATHER, FILL TO 7 QUART LEVEL FOR NORMAL FLIGHTS OF LESS THAN 3 HOURS. FOR EXTENDED FLIGHT, FILL TO 8 QUARTS. IF OPTIONAL OIL FILTER IS INSTALLED, ONE ADDITIONAL QUART IS REQUIRED WHEN THE FILTER ELEMENT IS CHANGED.)

HYDRAULIC FLUID:

MIL-H-5606 HYDRAULIC FLUID

TIRE PRESSURES:

NOSE WHEEL----------26 PSI ON 5.00x5 TIRE
26 PSI ON 6.00x6 TIRE
MAIN WHEELS----------24 PSI ON 6.00x6 TIRES



"TAKE YOUR CESSNA HOME
FOR SERVICE AT THE SIGN
OF THE CESSNA SHIELD".

CESSNA AIRCRAFT COMPANY

WICHITA, KANSAS



Technify Motors GmbH
Platanenstraße 14
D - 09356 St. Egidien

Tel. +49-(0)37204/ 696-0
Fax +49-(0)37204/ 696-2912
www.continentaldiesel.de
support@ccontinentaldiesel.de

Supplement
Pilot´s Operating Handbook
for the
(Reims) Cessna (F) 172 F,G,H,I,K,L,M
equipped with
TAE 125-01 and TAE 125-02-99
Installation

Issue 3

MODEL No.	REIMS F172F
SERIAL No.	0132
REGISTER No.	EC-NNX

This supplement must be attached to the EASA approved Pilot´s Operating Handbook when the TAE 125-01 or TAE 125-02-99 installation has been installed in accordance with EASA STC A.S.01527 or EASA STC 10014287.

The information contained in this supplement supersede or add to the information published in the EASA approved Pilot´s Operating Handbook only as set forth herein.
For limitations, procedures, performance and loading information not contained in this supplement, consult the EASA approved Pilot´s Operating Handbook.

This supplement Pilot's Operating Handbook is approved with EASA AFM Approval 10031525.

Doc.-No.: 20-0310-21023




This page intentionally left blank

APPROVAL

The content of approved chapters is approved by EASA. All other content is approved by TAE under the authority of EASA DOA No. EASA.21J.010 in accordance with Part 21.

LOG OF REVISIONS

Revision	Section	Description	Approved	
			Date	Endorsed
3/0	all	new Issue	23.08.2010	EASA AFM Approval 10031525
3/1	1	New oil, editorial changes	April 14, 2011	Revision No. 1 to AFM supplement ref. 20-0310-21023 is approved under the authority of DOA ref. EASA.21J.010. Date: April 14, 2011 Office of Airworthiness
	2	New oil		
	3	Procedures updated		
	4	Procedures updated		
	5	Editorial changes		
	6	Editorial changes		
	7	New section		
3/2	1	New gearbox oil, editorial changes	June 30, 2011	Revision No. 2 to AFM supplement ref. 20-0310-21023 is approved under the authority of DOA ref. EASA.21J.010. Date: June 30, 2011 Office of Airworthiness
	2	New gearbox oil		
	4	Procedures updated		
	5	Editorial changes		

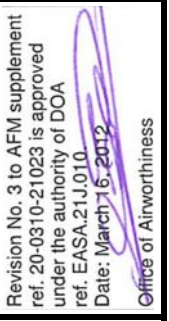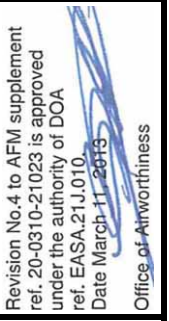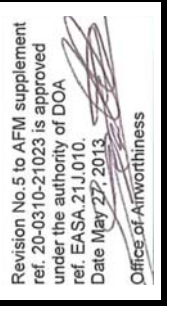Revision	Section	Description	Approved	
			Date	Endorsed
3/3	1	New fuel, new gearbox oil	March 16, 2012	
	2	New fuel, new gearbox oil		
	4	New fuel, Procedures updated		
	6	New fuel		
3/4	1	New fuel, new gearbox oil	March 11, 2013	
	2	New fuel, new gearbox oil		
	5	Editorial changes		
3/5	---	EASA STC / AFM numbers corrected on the cover	May 27, 2013	

Revision	Section	Description	Approved	
			Date	Endorsed
3/6	all	all instances mentioning Alternator switch English Wording	03.09.2014	Revision No. 6 to AFM supplement ref. 20-0310-21122 is approved under the authority of DOA ref. EASA.21J.010 Date: September 03, 2014 Office of Airworthiness
	1	Safety Recommendation New fuel New gearbox oil Note Fuel Additive	03.09.2014	
	2	Note added New fuel New gearbox oil Note Fuel Additive	03.09.2014	
	3	Description adapted	03.09.2014	
	4	Caution added Description adapted	03.09.2014	
	5	Wording	03.09.2014	
	6	Wording	03.09.2014	
3/7	4	Procedure added	26.01.2015	Revision No. 7 to AFM supplement ref. 20-0310-21023 is approved under the authority of DOA ref. EASA.21J.010 Date: January 26, 2015 Office of Airworthiness

Revision	Section	Description	Approved	
			Date	Endorsed
3/8	1	New Propeller	April 08, 2015	EASA STC 10014287, Rev. 8
	4	Minor changes		
	5	Splitted due to propeller specs.		
	5a	New Section		
	5b	New Section		
3/9	1	Update Liquids	Jan. 22, 2018	Revision No. 9 to AFM supplement ref. 20-0310-21023 is approved under the authority of DOA ref. EASA.21J.010. Date: Jan. 22, 2018 Office of Airworthiness
	2	Update Liquids Update Engine Instrument Markings		
	3	various minor corrections		
	4	Update FADEC Test above 5500ft		

Remark: The parts of the text which changed are marked with a vertical line on the margin of the page.

LIST OF EFFECTIVE SECTIONS

Sections	Issue/Revision	Date
1	3/8	Jan. 22, 2018
2	3/7	Jan. 22, 2018
3	3/7	Jan. 22, 2018
4	3/9	Jan. 22, 2018
5	3/7	April 08, 2015
5a	3/0	April 08, 2015
5b	3/0	April 08, 2015
6	3/6	Sept. 03, 2014
7	3/6	Sept. 03, 2014

GENERAL REMARK

The content of this POH supplement is developed on basis of the EASA-approved POH.

TABLE OF CONTENTS

COVER SHEET

LOG OF REVISIONS ..... page iii

LIST OF EFFECTIVE SECTIONS ..... page vii

GENERAL REMARK ..... page vii

TABLE OF CONTENTS ..... page viii

CONVERSION TABLES ..... page ix


ABBREVIATIONS ..... page xiii


SECTION 1	GENERAL (a non-approved chapter)
SECTION 2	LIMITATIONS (an approved chapter)
SECTION 3	EMERGENCY PROCEDURES (a non-approved chapter)
SECTION 4	NORMAL PROCEDURES (a non-approved chapter)
SECTION 5	PERFORMANCE (a non-approved chapter)
SECTION 6	APPENDIX (a non-approved chapter)
SECTION 7	SUPPLEMENTS

CONVERSION TABLES

VOLUME		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Liter [l] US gallon [US gal] US quart [US qt] Imperial gallon [Imp gal] Cubic inch [in³]	[l] / 3.7854 = [US gal] [l] / 0.9464 = [US qt] [l] / 4.5459 = [[Imp gal] [l] x 61.024 = [in³]	 [US gal] x 3.7854 = [l] [[US qt] x 0.9464 = [l] [[Imp gal] x 4.5459 = [l] [in³] / 61.024 = [l]
TORQUE		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Kilopondmeter [kpm] Foot pound [ft.lb] Inch pound [in.lb]	[kpm] x 7.2331 = [ft.lb] [kpm] x 86.7962 = [in.lb]	 [ft.lb] / 7.2331 = [kpm] [in.lb] / 86.7962 = [kpm]
TEMPERATURE		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Degree Celsius [ºC] Degree Fahrenheit [ºF]	[ºC] x 1.8 + 32 = [ºF]	 ([ºF] - 32) / 1.8 = [ºC]
SPEED		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Kilometers per hour [km/h] Meters per second [m/s] Miles per hour [mph] Knots [kts] Feet per minute [fpm]	[km/h] / 1.852 = [kts] [km/h] / 1.609 = [mph] [m/s] x 196.85 = [fpm]	 [mph] x 1.609 = [km/h] [kts] x 1.852 = [km/h] [fpm] / 196.85 = [m/s]

PRESSURE		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Bar [bar] Hectopascal [hpa] =Millibar [mbar] Pounds per square inch [psi] inches of mercury column [inHg]	[bar] x 14.5038 = [psi] [hpa] / 33.864= [inHg] [mbar] / 33.864 = [inHg]	 [psi] / 14.5038 = [bar] [inHg] x 33.864 = [hPa] [inHg] x 33.864 = [mbar]
MASS		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Kilogramm [kg] Pound [lb]	[kg] / 0.45359 = [lb]	 [lb] x 0.45359 = [kg]
LENGTH		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Meter [m] Millimeter [mm] Kilometer [km] Inch [in] Foot [ft] Nautical mile [nm] Statute mile [sm]	[m] / = 0.3048 [ft] [mm] / = 25.4 [in] [km] / = 1.852 [nm] [km] / = 1.609 [sm]	 [in] x 25.4 = [mm] [ft] x 0.3048 = [m] [nm] x 1.852 = [km] [sm] x 1.609 = [km]
FORCE		
Unit [Abbr.]	Conversion factor SI to US / Imperial	Conversion factor US / Imperial to Si
Newton [N] Decanewton [daN] Pound [lb]	[N] / 4.448 = [lb] [daN] / 0.4448 = [lb]	 [lb] x 4.448 = [N] [lb] x 0.4448 = [daN]

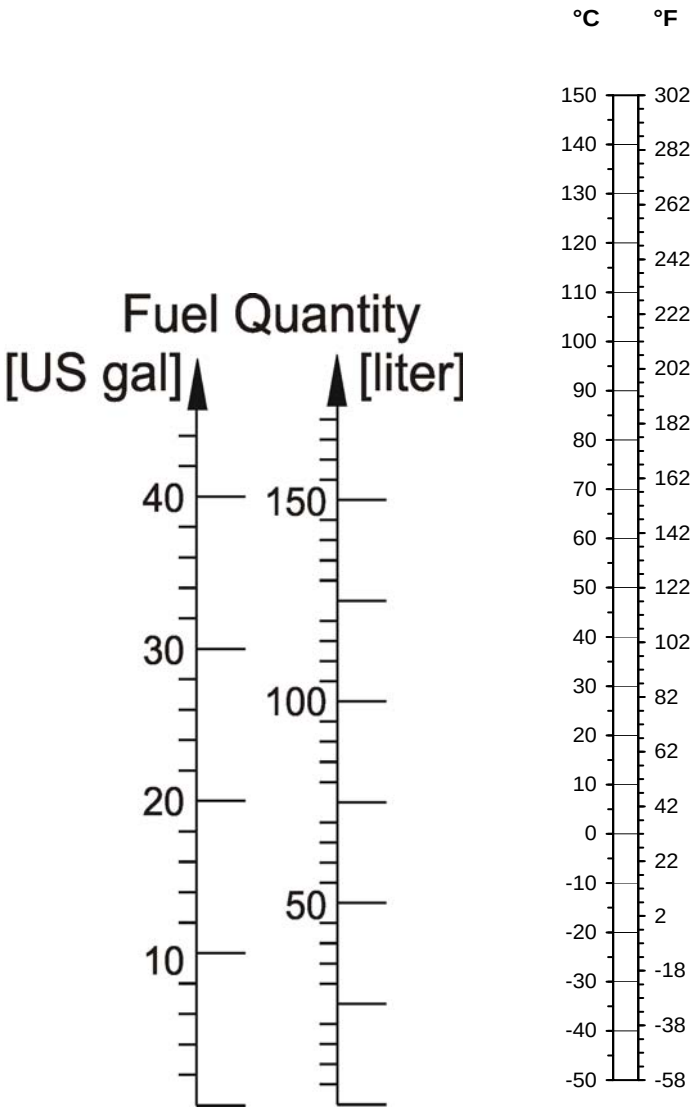
°C
°F
150
140
130
120
110
100
90
80
70
60
50
40
30
20
10
0
-10
-20
-30
-40
-50
302
282
262
242
222
202
182
162
142
122
102
82
62
42
22
2
-18
-38
-58
Fuel Quantity
[US gal]
[liter]
40
30
20
10
150
100
50

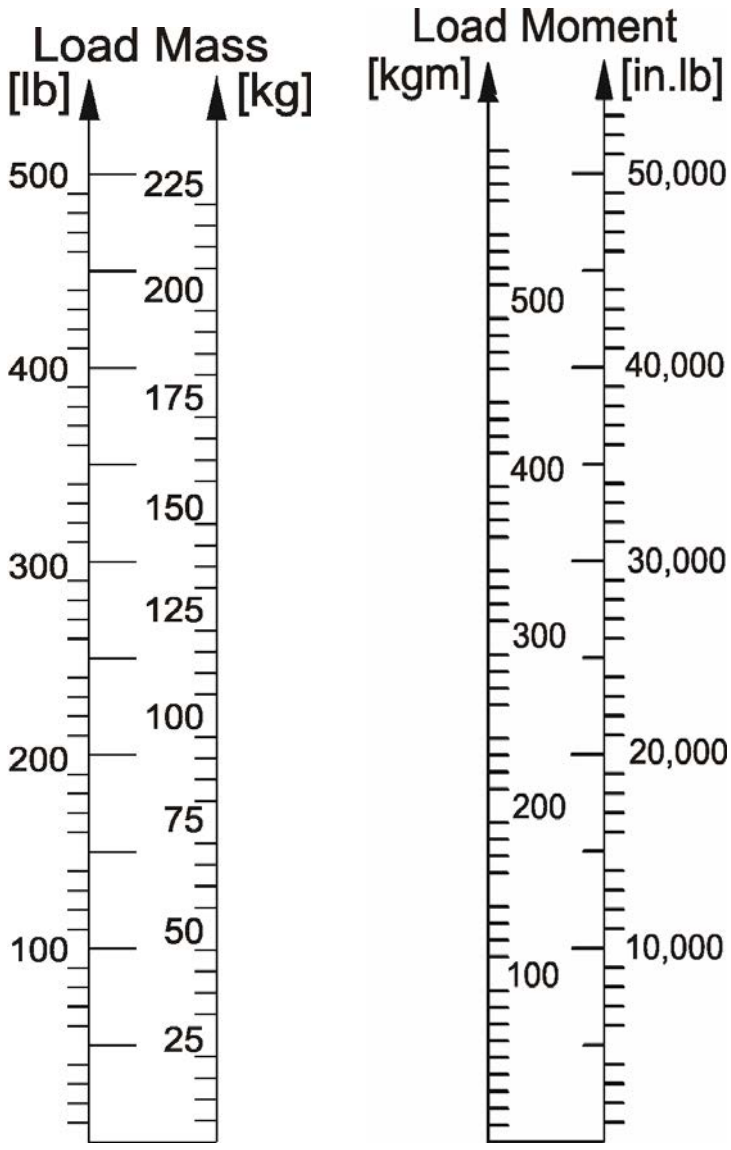
Load Mass
[lb]
[kg]
500
400
300
200
100
225
200
175
150
125
100
75
50
25
Load Moment
[kgm]
[in.lb]
500
400
300
200
100
50,000
40,000
30,000
20,000
10,000

ABBREVIATIONS

FADEC	Full Authority Digital Engine Control
CED 125	Compact Engine Display Multifunctional instrument for indication of engine data
AED 125	Auxiliary Engine Display Multifunctional instrument for indication of engine and airplane data

This page intentionally left blank

SECTION 1
GENERAL

Safety Recommendations

The following symbols and warnings are used in this manual. They must be heeded strictly to prevent personal injury and material damage, to avoid impairment of the operational safety of the aircraft and to rule out any damage to the aircraft as a consequence of improper handling.

▲ **WARNING:**	Non-compliance with these safety rules could lead to injury or even death.
■ CAUTION:	Non-compliance with these special notes and safety measures could cause damage to the engine or to the other components.
◆ Note:	Information added for a better understanding of an instruction.

UPDATE AND REVISION OF THE MANUAL

▲ **WARNING:**	A safe operation is only assured with an up to date POH supplement. Information about actual POH supplement issues and revisions are published in the Service Bulletin TM TAE 000-0004.
◆ Note:	The Doc.-No of this POH supplement is published on the cover sheet of this supplement.

ENGINE

▲ **WARNING:** The engine requires an electrical power source for operation. If the main battery and alternator fail, the engine will only operate for a maximum of 30 minutes on FADEC backup battery power.
Therefore, it is important to pay attention to indications of alternator failure.

Engine manufacturer:..... Technify Motors GmbH

Engine model: ..... TAE 125-01 or TAE 125-02-99

The TAE 125-02-99 is the successor of the 125-01. Both engine variants have the same power output and the same propeller speeds but different displacement. While the TAE 125-01 has 1689 ccm, the TAE 125-02-99 has 1991 ccm. Both TAE 125 engine variants are liquid cooled in-line four-stroke 4-cylinder motors with DOHC (double overhead camshaft) and are direct Diesel injection engines with common-rail technology and turbocharging. Both engine variants are controlled by a FADEC system. The propeller is driven by a built-in-gearbox (i=1.69) with mechanical vibration dampening and overload release. The engine variants have an electrical self starter and an alternator.

Due to this specific characteristic, all of the information from the flight manual recognized by EASA are no longer valid with reference to:

- carburetor and carburetor pre-heating
- ignition magnetos and spark plugs, and
- mixture control and priming system

PROPELLER

Manufacturer: ..... MT Propeller Entwicklung GmbH
Model: MTV-6-A/187-129
..... MTV-6-A/190-69 (only TAE 125-02-99)
Number of blades: 3
Diameter: ..... 1.87 m (MTV-6-A/187-129)
..... 1.90 m (MTV-6-A/190-69)
Type: ..... constant speed

FUELS and LIQUIDS

▲	**WARNING:**	The engine must not be started under any circumstances if the level is too low.

■	CAUTION:	Use of unapproved fuels may result in damage to the engine and fuel system components, resulting in possible engine failure.

■	CAUTION:	Use approved oil with exact declaration only!

■	CAUTION:	Normally it is not necessary to fill the cooling liquid or gearbox oil between maintenance intervals. If the level is too low, please notify the service department immediately.

Fuel: ..... JET A-1 (ASTM 1655)
..... JET A (ASTM 1655)
..... Jet Fuel No. 3 (GB6537-2006)
..... JP-8 (MIL-DTL-83133E)
..... JP-8+100 (MIL-DTL-83133E)
Only TAE 125-02-99:
..... TS-1 (GOST 10227-86)
..... TS-1 (GSTU 320.00149943.011-99)

Alternative: ..... Diesel (**DIN** EN 590)
Only TAE 125-02-99:
.....SASOL GTL Diesel

◆ Note: The liquid fuel additive Biobor JF can be used in jet and diesel fuel systems to eliminate growth of fungi. For further details refer to the manufacturer specifications.

Engine oil: ..... AeroShell Oil Diesel Ultra
..... AeroShell Oil Diesel 10W-40
.....Shell Helix Ultra 5W-30
.....Shell Helix Ultra 5W-40

Gearbox oil: .....Shell Gearbox Oil EP 75W-90 API GL-4
.....Shell Spirax EP 75W-90 API Gl-4
.....Shell Spirax S4 G 75W-90
.....Shell Spirax GSX 75W-80 GL-4
..... Shell Spirax S6 GXME 75W-80
Only TAE 125-02-99:
..... Shell Spirax S6 ATF ZM
.....Centurion Gearbox Oil N1

Coolant:.....Water/Radiator Protection at a ratio of 50:50

Radiator Protection: ..... BASF Glysantin Protect Plus / G48
..... Valvoline/Zerex Glysantin G48
..... BASF Glysantin Alu Protect / G30
..... Valvoline/Zerex Glysantin G30
..... BASF Glysantin Protect / G05
..... Valvoline/Zerex Glysantin G05
Only TAE 125-02-99:
.....Mobil Antifreeze Extra (G48)
..... Comma Xstream Green - Concentrate (G48)

◆ Note: The freezing point of the coolant is -36°C.

INSTRUMENT PANEL

Components of the new installation can be seen as example in the following Figure.

Some installations are equipped with a key switch for the starter instead of the push button and the switch "Engine Master" is designated "IGN". For these installations, the appropriate note in brackets (Switch resp.), ("IGN" resp.) is added subsequently throughout the entire supplement for the Pilot´s Operating Handbook.

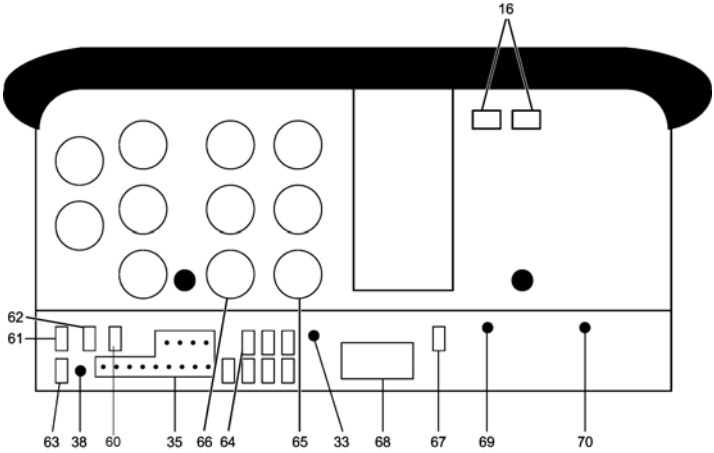


Figure 1-1 Example of Instrument panel with TAE 125 installation

16. Fuel Quantity Gauges (Oil Temperature and Oil Pressure Gauge **N/A**)
33. "Alt. Air Door" Alternate Air Door (Carburetor Heat Button **N/A**)
35. Circuit Breakers
38. "Starter"- Push Button (Switch resp.) for Starter
60. "ALT" - Switch for Alternator
61. "BAT" - Switch for Battery
62. "MAIN" - Switch for Main Bus
63. "Engine Master" ("IGN" resp.) - Switch electrical supply FADEC
64. "Fuel Pump" - Switch for the Electric Fuel Pump

65. AED 125 SR with indication of Fuel Flow, Fuel Temperature, Voltage and a warning light "Water Level" (yellow) for low coolant level
66. CED 125 (Tachometer **N/A**)
    The Compact Engine Display contains indication of Propeller Rotary Speed, Oil Pressure, Oil Temperature, Coolant Temperature, Gearbox Temperature and Load.
67. "Force B" - Switch for manually switching the FADEC
68. Lightpanel with:
    "FADEC" Test Knob
    "A FADEC B" Warning lights for FADEC A and B (red)
    "Alt" Alternator Warning light (red)
    "AED" Caution Light (amber) for AED 125
    "CED" Caution Light (amber) for CED 125
    "CED/AED" - Test/Confirm Knob for CED 125, AED 125 and Caution Lights (amber)
    "Fuel L";"Fuel R" Caution Lights for low fuel level (amber)
    "Glow" Glow Control Light (amber)

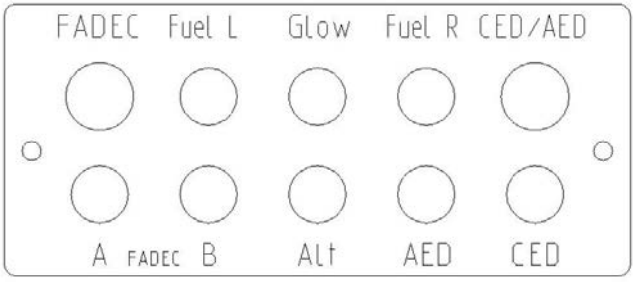


Figure 1-2 Lightpanel

69. “Shut-off Cabin Heat“ control knob to close cabin heat in case emergency (Push for shut-off)
70. “Cabin Heat“ Cabin heat control

FUEL SYSTEM (Left, Right)

The fuel system of both TAE 125 installations includes the original standard or long-range tanks of the Cessna 172. Additional sensors for Fuel Temperature and "Low Level" Warning are installed.
The fuel flows out of the tanks to the Fuel Selector Valve with the positions LEFT, RIGHT and OFF, through a reservoir tank to the fuel shut-off valve and then via the electrically driven Fuel Pump to the fuel filter. There is no BOTH position.
The electrically driven Fuel Pump supports the fuel flow to the Filter Module if required. Upstream to the Fuel Filter Module a thermostat-controlled Fuel Pre-heater is installed. Then, the engine-driven feed pump and the high-pressure pump supply the rail, from where the fuel is injected into the cylinders depending upon the position of the thrust lever and regulation by the FADEC.
Surplus fuel flows to the Filter Module and then through the Fuel Selector Valve back into the pre-selected tank. A temperature sensor in the Filter Module controls the heat exchange between the fuel feed and return.
Since the density of diesel and jetfuel (0.84kg/l) is higher than of AVGAS (0.715kg/l), the usable fuel capacity was reduced by this factor through the fuel filler neck, to stay within the approved wing load.

Fuel Capacitiy				
Tanks		Total Capacity	Total Unusable Fuel	Total Usable Fuel
F,G,H	2 Standard-Tanks: each 62.85 l (16.60 US gal)	125.7 l (33.2 US gal)	11.4 l (3 US gal)	114.3 l (30.2 US gal)
I,K,L,M	2 Standard-Tanks each 67.55 l (17.85 US gal)	135.1 l (35.7 US gal)	15.1 l (4 US gal)	120.0 l (31.7 US gal)
F-M	2 Long-Range-Tanks: each 83.65 l (22.10 US gal)	167.3 l (44.2 US gal)	15.1 l (4 US gal)	152.2 l (40.2 US gal)

FUEL SYSTEM (Left, Right)

■ CAUTION: In flight conditions with downward pointing wing, switch the fuel selector to the upper fuel tank.

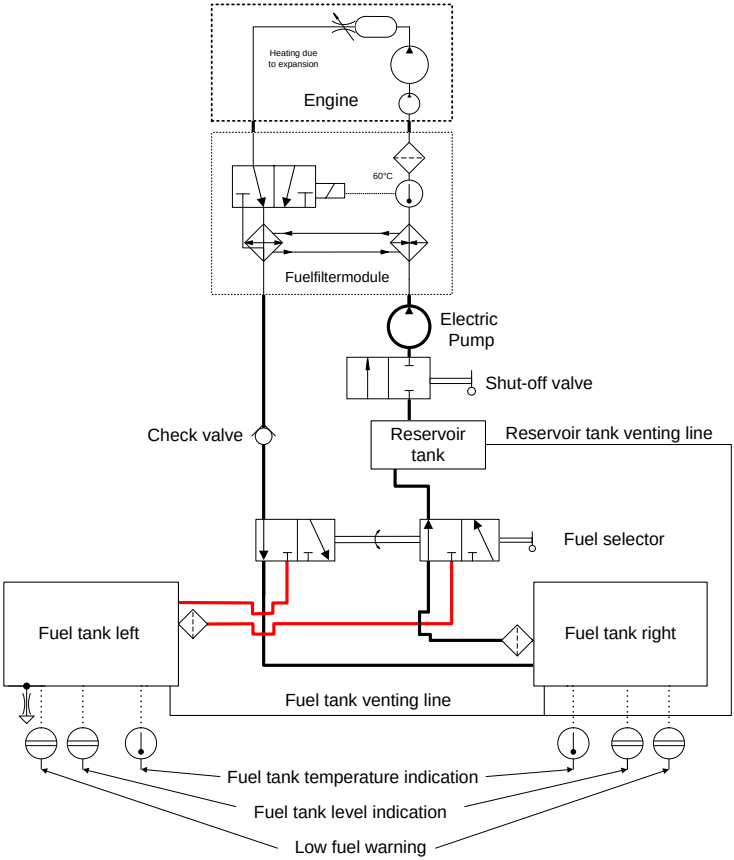


Figure 1-3a Scheme of the Fuel System (Left, Right)

FUEL SYSTEM (Left, Right, Both)

The fuel system of both TAE 125 installations includes the original standard or long-range tanks of the Cessna 172. Additional sensors for Fuel Temperature and "Low Level" Warning are installed.
The fuel flows out of the tanks to the Fuel Selector Valve with the positions LEFT, RIGHT and BOTH, through a reservoir tank to the fuel shut-off valve and then via the electrically driven Fuel Pump to the fuel filter.
The electrically driven Fuel Pump supports the fuel flow to the Filter Module if required. Upstream to the Fuel Filter Module a thermostat-controlled Fuel Pre-heater is installed.Fuel can be shut off by the seperate shutoff valve. Then, the engine-driven feed pump and the high-pressure pump supply the rail, from where the fuel is injected into the cylinders depending upon the position of the thrust lever and regulation by the FADEC.
Surplus fuel flows to the Filter Module and then through the Fuel Selector Valve back into the pre-selected tank, if BOTH is selected the fuel returns to both tanks. A temperature sensor in the Filter Module controls the heat exchange between the fuel feed and return.
Since the density of diesel and jet fuel (0.84 kg/l) is higher than AVGAS (0.715 kg/l), the usable fuel capacity was reduced by this factor through the fuel filler neck, to stay within the approved wing load.

Fuel Capacitiy				
Tanks		Total Capacity	Total Unusable Fuel	Total Usable Fuel
F,G,H	2 Standard-Tanks: each 62.85 l (16.60 US gal)	125.7 l (33.2 US gal)	11.4 l (3 US gal)	114.3 l (30.2 US gal)
I,K,L,M	2 Standard-Tanks each 67.55 l (17.85 US gal)	135.1 l (35.7 US gal)	15.1 l (4 US gal)	120.0 l (31.7 US gal)
F-M	2 Long-Range-Tanks: each 83.65 l (22.10 US gal)	167.3 l (44.2 US gal)	15.1 l (4 US gal)	152.2 l (40.2 US gal)

FUEL SYSTEM (Left, Right, Both)

■	CAUTION:	In flight conditions with downward pointing wing, switch the fuel selector to the upper fuel tank or to the position BOTH

■	CAUTION:	In turbulent air it is strongly recommended to use the BOTH position.

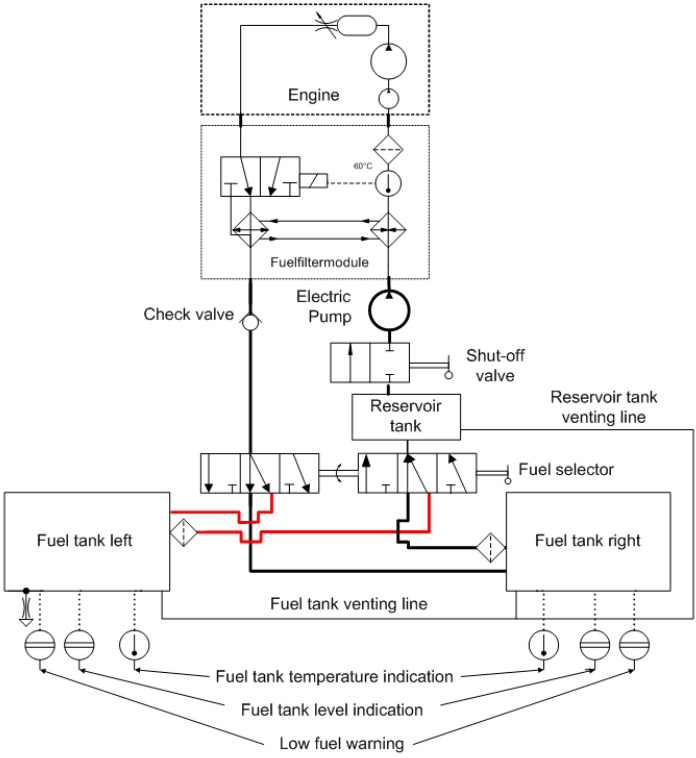


Figure 1-3b Scheme of the Fuel System (Left, Right, Both)

◆	Note:	The handling of the fuel selector positions left, right and both are described in the original POH.

ELECTRICAL SYSTEM

The electrical system of both TAE 125 installation differs from the previous installation and is equipped with the following operating and display elements:

1. Switch "Main Bus"
   This switch controls the Main Bus. The Main Bus is necessary to be able to run FADEC and engine with Battery/Alternator without disturbance in the event of onboard electrical system malfunctions. Normally, Alternator, Main Bus and Battery have to be switched on simultaneously.
2. Switch "Alternator"
   Controls the alternator. Must be ON in normal operation.
3. Switch "Battery"
   Controls the Battery.
4. Push Button (Switch resp.) "Starter"
   Controls the magneto switch of the starter.
5. Ammeter
   The Ammeter shows the alternator current. In case of battery discharge if alternator inoperative the alternator warning light will illuminate.
6. Warning Light "Alternator"
   Illuminates when the power output of the alternator is too low or the Alternator Switch is switched off. Normally, this warning light always illuminates when the "Engine Master" ("IGN" resp.) is switched on without revolution and extinguishes immediately after starting the engine.
7. Switch "Fuel Pump"
   This switch controls the electric fuel pump.
8. Switch "Engine Master" ("IGN" resp.)
   Controls the two redundant FADEC components and the Alternator Excitation Battery with two independent contacts. The Alternator Excitation Battery is used to ensure that the Alternator continues to function properly even if the main battery fails.

▲ **WARNING:** If the "Engine Master" is switched off, the power supply to the FADEC is interrupted and the engine will shut down.

9. Switch "Force B"
   If the FADEC does not automatically switch from A-FADEC to the B-FADEC in case of an emergency despite of obvious necessity, this switch allows to switch manually to the B-FADEC.

▲ **WARNING:** When operating on FADEC backup battery only, the "Force B" switch must not be activated. This will shut down the engine.

10. FADEC Backup Battery
    The electrical system includes a FADEC backup battery to ensure power supply to A-FADEC in case that supply from both battery and alternator is interrupted. The engine can be operated for a maximum of 30 minutes when powered by the FADEC backup battery only. Only A-FADEC is connected to the backup battery.

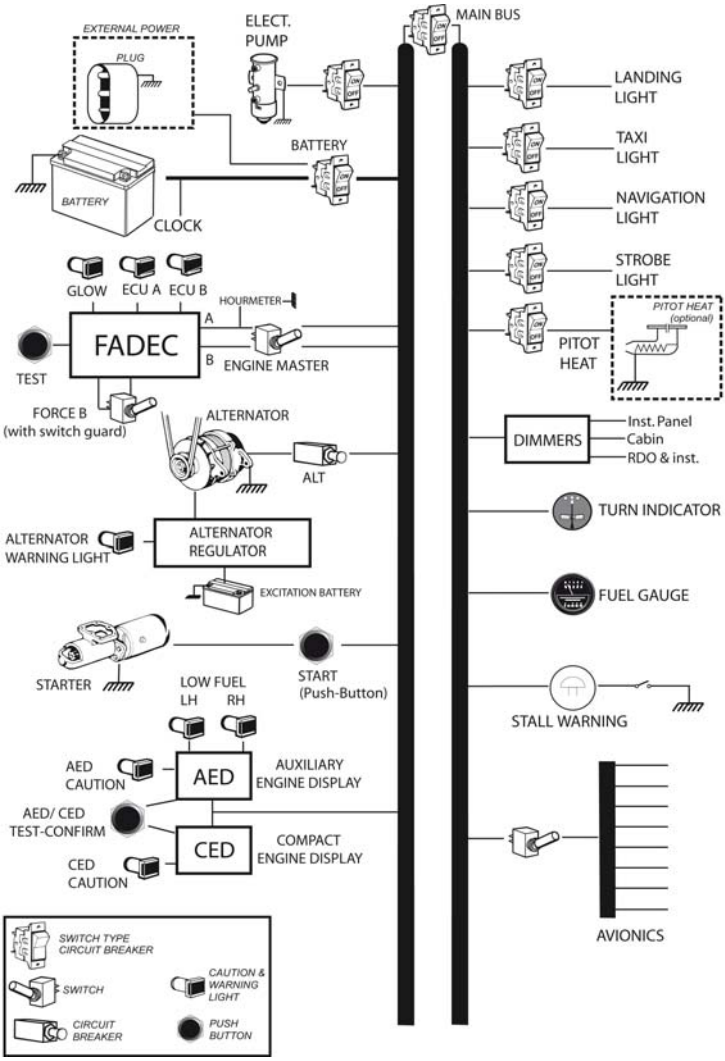


Figure 1-4a Basic wiring of the electrical system with alternator circuit breaker and without FADEC backup battery

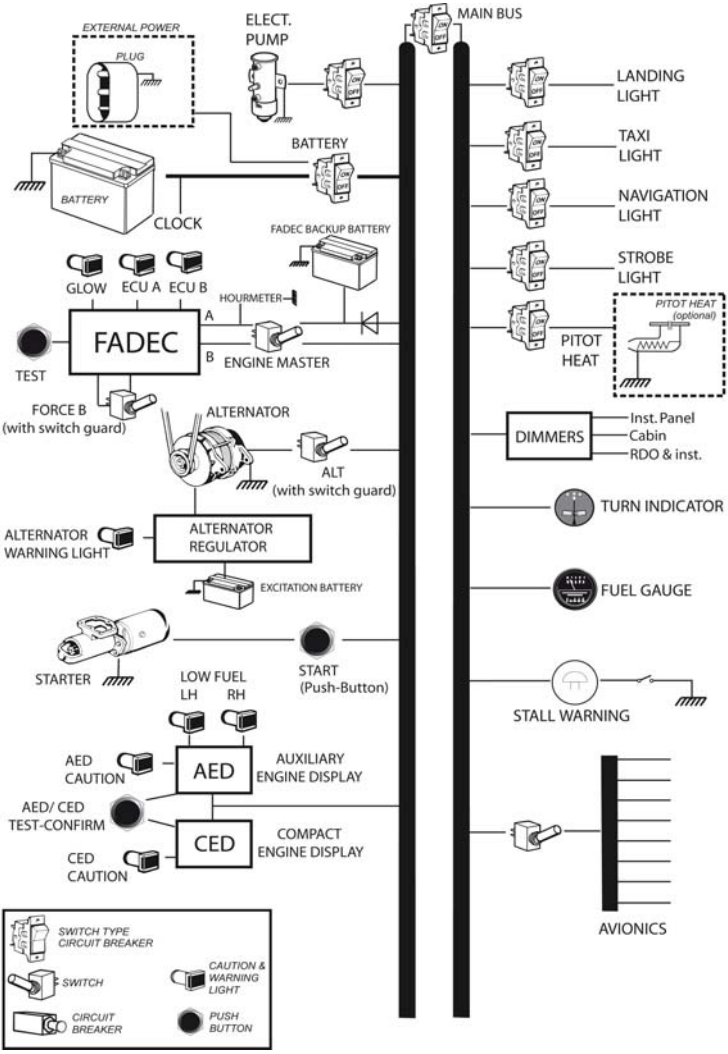


Figure 1-4b Basic wiring of the electrical system with alternator switch and FADEC backup battery

FADEC-RESET

In case of a FADEC-warning, one or both FADEC warning lights are flashing. If then the "FADEC" Test Knob is pressed for at least 2 seconds,

a) the active warning lights will extinguish if it was a LOW category warning.

b) the active warning lights will be illuminated steady if it was a HIGH category warning.

■ CAUTION: If a FADEC-warning occurred, contact your service center.

When a high category warning occurs the pilot should land as soon as possible, since the affected FADEC ECU has diagnosed a severe fault. A low category fault has no significant impact on engine operation.
Refer also to the engine OM-02-01 or OM-02-02 for additional information.

COOLING

The engine variants are fitted with a fluid-cooling system whose three-way thermostat regulates the flow of coolant between the large and small cooling circuit.
The coolant exclusively flows through the small circuit up to a cooling water temperature of 84°C and then between 84 and 94°C both through the small and the large circuit.
If the cooling water temperature rises above 94°C, the complete volume of coolant flows through the large circuit and therefore through the radiator. This allows a maximum cooling water temperature of 105°C.
There is a sensor in the expansion reservoir which sends a signal to the warning light "Water level" on the instrument panel if the coolant level is low.
The cooling water temperature is measured in the housing of the thermostat and passed on to the FADEC and CED 125.
The connection to the heat exchanger for cabin heating is always open; the warm air supply is regulated by the pilot over the heating valve. See Figure 1-5a.

In normal operation the control knob "Shut-off Cabin Heat" must be OPEN, with the control knob "Cabin Heat" the supply of warm air into the cabin can be controlled.
In case of certain emergencies (refer to section 3), the control knob "Shut-off Cabin Heat" has to be closed according to the appropriate procedures.
Aircraft having a TAE 125-02-99 engine installation, can be equipped with a gearbox oil cooler that is connected to the coolant circuit.

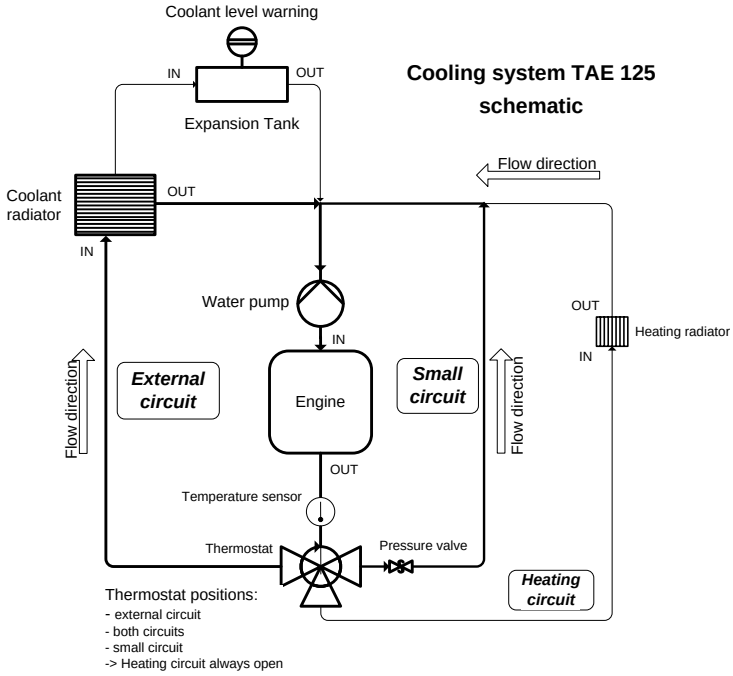


Figure 1-5a Cooling system TAE 125-01 & TAE 125-02-99

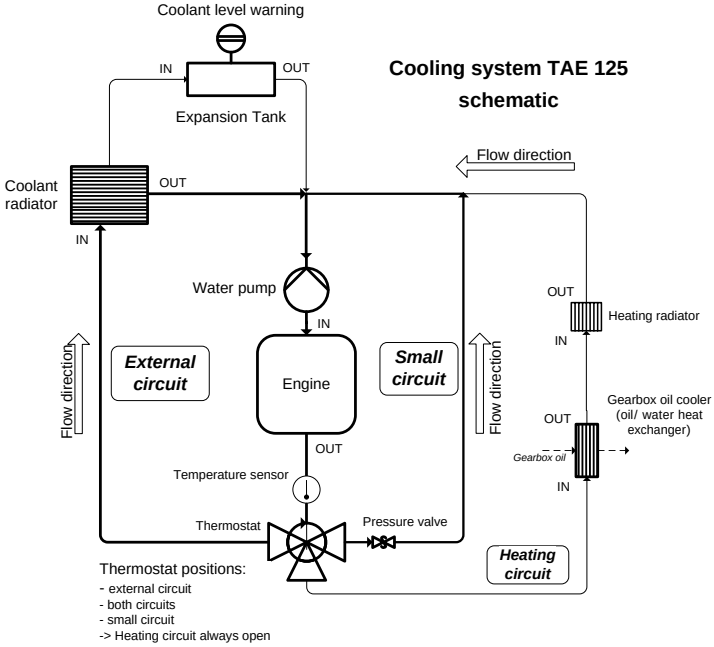


Figure 1-5b Cooling system TAE 125-02-99 with Gearbox Oil Cooler

This page intentionally left blank

SECTION 2
LIMITATIONS

▲ **WARNING:** It is not allowed to start up the engine using external power. If starting the engine is not possible using battery power, the condition of the battery must be verified before flight.

WEIGHT LIMITS

Normal Category:

Maximum Ramp Weight: ..... 1044 kg (2302 lbs)
Maximum Takeoff Weight: ..... 1043 kg (2300 lbs)
Maximum Landing Weight ..... 1043 kg (2300 lbs)

Utility Category:

Maximum Ramp Weight: ..... 908 kg (2002 lbs)
Maximum Takeoff Weight: ..... 907 kg (2000 lbs)
Maximum Landing Weight ..... 907 kg (2000 lbs)

MANEUVER LIMITS

■ CAUTION: Intentionally initiating negative G maneuvers is prohibited

Normal Category: No change

Utility Category: Intentionally initiating spins is prohibited

FLIGHT LOAD FACTORS

No change

■ CAUTION: Avoid extended negative g-loads duration. Extended negative g-loads can cause propeller control and engine problems.

◆ Note: The load factor limits for the engine must also be observed. Refer to the Operation & Maintenance Manual for the engine.

ENGINE OPERATING LIMITS

Engine manufacturer:..... Technify Motors GmbH
Engine model: ..... TAE 125-01 or TAE 125-02-99
Take-off and Max. continuous power:..... 99 kW (135 HP)
Take-off and Max. continuous RPM:..... 2300 min^{-1}

◆ Note:	In the absence of any other explicit statements, all of the information on RPM in this supplement to the Pilot´s Operating Handbook are propeller RPM.

◆ Note:	This change of the original aircraft is certified up to an altitude of 17,500 ft.

Engine operating limits for take-off and continuous operation**:**

▲ **WARNING:**	It is not allowed to start the engine outside of these temperature limits.

◆ Note:	The operating limit temperature is a temperature limit below which the engine may be started, but not operated at the Take-off RPM. The warm-up RPM to be selected can be found in Section 4 of this supplement.

Oil temperature:
Minimum engine starting temperature: ..... -32 °C
Minimum operating limit temperature: .....50 °C
Maximum operating limit temperature: .....140 °C

Coolant temperature:
Minimum engine starting temperature: ..... -32 °C
Minimum operating limit temperature: .....60 °C
Maximum operating limit temperature: .....105 °C

Gearbox temperature:

Mininum operating limit temperature: ..... -30 °C
Maximum operating limit temperature: .....120 °C
Min. fuel temperature limits in the fuel tank:

Fuel	Minimum fuel temperature in the fuel tank before Take-off	Minimum fuel temperature in the fuel tank during the flight
JET A-1, JET A, Fuel No.3 JP-8, JP-8+100, TS-1 (TAE 125-02-99 only)	-30°C	-35°C
Diesel Sasol GTL Diesel (TAE 125-02-99 only)	greater than 0°C	-5°C

Table 2-3a Minimum fuel temperature limits in the fuel tank

▲ **WARNING:** The fuel temperature of the fuel tank not used should be observed if its later use is intended.

▲ **WARNING:** The following applies to Diesel and JET fuel mixtures in the tank:
As soon as the proportion of Diesel in the tank is more than 10% Diesel, the fuel temperature limits for Diesel operation must be observed. If there is uncertainty about which fuel is in the tank, the assumption should be made that it is Diesel.

Oil Pressure

Minimum oil pressure: ..... 1.2 bar
Minimum oil pressure (at Take-off power) ..... 2.3 bar
Minimum oil pressure (in flight) ..... 2.3 bar
Maximum oil pressure ..... 6.0 bar
Maximum oil pressure (cold start < 20 sec.): ..... 6.5 bar
Maximum oil consumption: ..... 0.1 l/h (0.1 quart/h)

ENGINE INSTRUMENT MARKINGS

The engine data to be monitored are integrated in the combined engine instrument CED-125.
The ranges of the individual engine monitoring parameters are shown in the following table.

◆ Note: "Load" describes the available percentage of maximum engine power.

Instrument AED/CED		Red range	Amber range	Green range	Amber range	Red range
Tachometer	[RPM]	--------	--------	0-2300	--------	> 2300
Oil pressure	[bar]	0 - 1.1	1.2 - 2.2	2.3 - 5.1	5.2 - 6.5	> 6.5
	[psi]	0 - 16	17.4 - 32	33.4 - 74	75.4 - 87.0	> 87.0
Coolant temperature	[°C]	< -32	-32...+59	60 - 100	101 - 105	> 105
Oil temperature	[°C]	< -32	-32...+49	50 - 129	130 - 140	> 140
Gearbox temperature	[°C]	--------	--------	< 115	115 - 120	> 120
Load	[%]	--------	--------	0 - 100	--------	--------
Fuel Temperature (left and right)	[°C]	< -30	-30...-1	0 - 69	70 - 75	> 75
Alternator Current	[A]	--------	--------	0 - 52.4	52.5 - 60	>60
Electrical System Voltage	[V]	0 - 10	11 - 12.5	12.6 - 14	15.0	>15

Table 2-3b Markings of the engine instruments

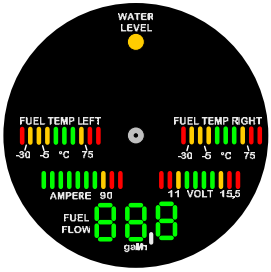


Figure 2-1a AED 125



Figure 2-1b CED 125

◆ Note:

The AED/CED caution lamp is switched on if an engine reading is in the amber or red range.
The AED/CED caution lamp remains on even when the parameter returns to the green/normal operating range and must be confirmed by pressing the Confirm/Test knob.
After being confirmed, the AED/CED caution lamp will switch on again whenever another parameter enters amber/red range.
Pressing the Confirm/Test knob longer than one second will initiate the power-up test sequence.

PERMISSIBLE FUEL GRADES

■ CAUTION: Using non-approved fuels and additives can lead to dangerous engine malfunctions.

Fuel: .....JET A-1 (ASTM 1655)
.....JET A (ASTM 1655)
.....Jet Fuel No. 3 (GB6537-2006)
.....JP-8 (MIL-DTL-83133E)
.....JP-8+100 (MIL-DTL-83133E)
Only TAE 125-02-99:
..... TS-1 (GOST 10227-86)
.....TS-1 (GSTU 320.00149943.011-99)

Alternative: ..... Diesel (**DIN** EN 590)

Only TAE 125-02-99:
.....SASOL GTL Diesel

◆ Note: The liquid fuel additive Biobor JF can be used in jet and diesel fuel systems to eliminate growth of fungi. For further details refer to the manufacturer specifications.

MAXIMUM FUEL QUANTITIES

Due to the higher specific density of Kerosene and Diesel in comparison to Aviation Gasoline (AVGAS) with the TAE 125 installation the permissible tank capacity has been reduced.

Fuel Capacitiy				
Tanks		Total Capacity	Total Unusable Fuel	Total Usable Fuel
F,G,H	2 Standard-Tanks: each 62.85 l (16.60 US gal)	125.7 l (33.2 US gal)	11.4 l (3 US gal)	114.3 l (30.2 US gal)
I,K,L,M	2 Standard-Tanks each 68.55 l (17.85 US gal)	135.1 l (35.7 US gal)	15.1 l (4 US gal)	120.0 l (31.7 US gal)
F-M	2 Long-Range-Tanks: each 83.65 l (22.10 US gal)	167.3 l (44.2 US gal)	15.1 l (4 US gal)	152.2 l (40.2 US gal)

■ CAUTION:	To prevent air from penetrating into the fuel system avoid running the tanks dry. As soon as the "Low Level" Warning Light illuminates, switch to a tank with sufficient fuel or land.
■ CAUTION:	With ¼ tank or less, prolonged uncoordinated flight is prohibited when operating on either left or right tank.
■ CAUTION:	In turbulent air it is strongly recommended to use the BOTH position.
◆ Note:	The tanks are equipped with a Low Fuel Warning. If the fuel level is below 10 l (2.6 US gal) usable fuel, the "Fuel L" or "Fuel R" Warning Light illuminates respectively.

PERMISSIBLE OIL TYPES

Engine oil: ..... AeroShell Oil Diesel Ultra
..... AeroShell Oil Diesel 10W-40
..... Shell Helix Ultra 5W-30
..... Shell Helix Ultra 5W-40

Gearbox oil: .....Shell Gearbox Oil EP 75W-90 API GL-4
.....Shell Spirax EP 75W-90 API Gl-4
.....Shell Spirax S4 G 75W-90
.....Shell Spirax GSX 75W-80 GL-4
..... Shell Spirax S6 GXME 75W-80
Only TAE 125-02-99:
..... Shell Spirax S6 ATF ZM
.....Centurion Gearbox Oil N1

■ CAUTION: Use approved oil with exact designation only!

PERMISSIBLE COOLING LIQUID

Coolant:.....Water/Radiator Protection at a ratio of 50:50

Radiator Protection: ..... BASF Glysantin Protect Plus / G48
..... Valvoline/Zerex Glysantin G48
..... BASF Glysantin Alu Protect / G30
..... Valvoline/Zerex Glysantin G30
..... BASF Glysantin Protect / G05
..... Valvoline/Zerex Glysantin G05
Only TAE 125-02-99:
.....Mobil Antifreeze Extra (G48)
..... Comma Xstream Green - Concentrate (G48)

PLACARDS

Near the fuel tank caps:

Cessna 172 F, G, H (with standard tanks):

JET FUEL ONLY
JET A-1 / DIESEL
"CAP. 57.2 LITER (15.1 U.S. GAL.)
USABLE TO BOTTOM OF FILLER INDICATOR TAB"

Cessna 172 I, K, L, M (with standard tanks):

JET FUEL ONLY
JET A-1 / DIESEL
CAP. 60.0 LITERS (15.85 U.S. GAL.)
USABLE TO BOTTOM OF FILLER INDICATOR TAB

At the fuel selector valve:

With standard tanks F, G, H:

Left and Right position: 57.2 Ltr./ 15.1 gal
Both position: 114.4 Ltr./ 30.2 gal

With standard tanks I, K, L, M:

Left and Right position: 60 Ltr./ 15.85 gal
Both position: 120 Ltr./ 31.7 gal

With long-range tanks F-M:

Left and Right Position: 76.1 Ltr/ 20.1 gal
Both Position: 152.2 Ltr/ 40.2 gal

On the oil funnel or at the flap of the engine cowling:

"Oil, see POH supplement"

If installed, at the flap of the engine cowling to the External Power Receptacle**:**

"ATTENTION 12 V DC OBSERVE CORRECT POLARITY"

All further placards contained in this section of the EASA-approved POH remain valid.

SECTION 3
EMERGENCY PROCEDURES

INDEX OF CHECKLISTS

ENGINE MALFUNCTION 3-2
During Take-off (with sufficient Runway ahead) 3-2
Immediately after Take-off 3-3
During Flight 3-3
Restart after Engine Failure 3-4
FADEC Malfunction in Flight 3-5
Abnormal Engine Behavior 3-7
FIRES 3-8
Engine Fire when starting Engine on Ground 3-8
Engine Fire in Flight 3-8
Electrical Fire in Flight 3-9
ENGINE SHUT DOWN IN FLIGHT 3-10
EMERGENCY LANDING 3-10
Emergency Landing with Engine out 3-10
FLIGHT IN ICING CONDITIONS 3-11
RECOVERY FROM SPIRAL DIVE 3-12
ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS 3-13
Alternator Warning light illuminates during normal Engine Operation 3-15
Ammeter shows Battery Discharge during normal Engine Operation for more than 5 Minutes 3-16
Total Electrical Failure 3-17
ROUGH ENGINE OPERATION OR LOSS OF POWER 3-18
Decrease in Power 3-18
Ice Formation in the Carburetor 3-18
Soiled spark Plugs 3-18
Ignition Magnet Malfunctions 3-18
Oil pressure too low 3-19
Oil temperature "OT" too high: 3-19
Coolant temperature "CT" too high: 3-20
Light "Water Level" illuminates 3-20
Gearbox temperature "GT" too high: 3-20
Fuel Temperature too high: 3-20
Fuel Temperature too low: 3-21
Propeller RPM too high: 3-21
Fluctuations in Propeller RPM: 3-22

GENERAL

▲ **WARNING:**	Due to an engine shut-down or failures indicated by the FADEC warning lights there might be a loss propeller valve currency which leads in a low pitch setting of the propeller. This might result in overspeed. Airspeeds below 100 KIAS are suitable to avoid overspeed in failure case. If the propeller speed control fails, climbs can be performed at 65 KIAS and a powersetting of 100%.

ENGINE MALFUNCTION

DURING TAKE-OFF (WITH SUFFICENT RUNWAY AHEAD)

(1) Thrust Lever - IDLE
(2) Brakes - APPLY
(3) Wing flaps (if extended) - RETRACT
(4) Engine Master (“IGN“ resp.) - OFF
(5) Alternator, Main Bus and Battery switch - OFF
(6) Fuel Shut-off Valve - CLOSED

IMMEDIATELY AFTER TAKE-OFF

If there is an engine malfunction after take-off, lower the nose to keep the airspeed and attain gliding attitude. In most cases, landing should be executed straight ahead with only small heading corrections to avoid obstacles.

▲ **WARNING:** Altitude and airspeed are seldom sufficient for a return to the airfield with a 180° turn while gliding.

(1) Airspeed..... 65 KIAS (wing flaps retracted)
.....60 KIAS (wing flaps extended)
(2) Fuel Shut-off Valve - CLOSED
(3) Engine Master (“IGN“ resp.) - OFF
(4) Wing flaps - as required (Full down recommended)
(5) Alternator, Main Bus and Battery switch - OFF

DURING FLIGHT

◆ Note: Running a tank dry activates both FADEC warning lights flashing.

In case that one tank was flown empty, at the first signs of insufficient fuel feed proceed as follows:

(1) Fuel Shut-off Valve - OPEN (push full in)
(2) Immediately switch the Fuel Selector to tank with sufficient fuel quantity, if the BOTH option is installed, select the fuel selector position BOTH
(3) Electric Fuel Pump - ON
(4) Check the engine (engine parameters, airspeed/altitude change, whether the engine responds to changes in the Thrust Lever position).
(5) If the engine acts normal, continue the flight and land as soon as possible.

▲ **WARNING:** The high-pressure pump must be checked by an authorized service center before the next flight.

RESTART AFTER ENGINE FAILURE

Whilst gliding to a suitable landing strip, try to determine the reason for the engine malfunction. If time permits and a restart of the engine is possible, proceed as follows:

(1) Airspeed between 65 and 85 KIAS (maximal 100 KIAS)
(2) Glide below 13,000 ft
(3) Fuel Shut-off Valve - OPEN (push full in)
(4) Fuel Selector switch to tank with sufficient fuel quantity, if the BOTH option is installed, select the fuel selector position BOTH
(5) Electric Fuel Pump - ON
(6) Thrust Lever - IDLE
(7) Engine Master ("IGN" resp.) OFF and then ON
(if the propeller does not turn, then additionally Starter ON)

◆ Note: The propeller will normally continue to turn as long as the airspeed is above 65 KIAS. Should the propeller stop at an airspeed of more than 65 KIAS or more, the reason for this should be found out before attempting a restart.
If it is obvious that the engine or propeller is blocked, do not use the Starter.

◆ Note: If the Engine Master is in position OFF, the Load Display shows no value even if the propeller is turning.

(8) Check the engine power: Thrust lever 100%, engine parameters, check altitude and airspeed

FADEC MALFUNCTION IN FLIGHT

◆ Note: The FADEC consists of two components that are independent of each other: FADEC A and FADEC B. In case of malfunctions in the active FADEC, it automatically switches to the other.

a) One FADEC Light is flashing

1. Press FADEC test knob at least 2 seconds
2. FADEC light extinguished (LOW warning category):
   a) Continue normal flight,
   b) Inform service center after landing.
3. FADEC light illuminated steady (HIGH warning category)
   a) Monitor the other FADEC light.
   b) Land as soon as possible.
   c) Select an airspeed to avoid engine overspeed.
   d) Inform service center after landing.

b) Both FADEC Lights are flashing

◆ Note: CED load display should be considered unreliable with both FADEC lights illuminated. Use other indications to assess engine condition.

1. Press FADEC test knob at least 2 seconds
2. FADEC Lights extinguished (LOW warning category):
   a) Continue normal flight,
   b) Inform service center after landing.
3. FADEC Lights illuminated steady (HIGH warning category):
   a) Check the available engine power,
   b) Expect engine failure.
   c) Flight can be continued, however the pilot should
      i) Select an appropriate airspeed to avoid engine overspeed.
      ii) Land as soon as possible.
      iii) Be prepared for an emergency landing.
   d) Inform service center after landing.
4. In case a fuel tank was flown empty, proceed at the first signs of insufficient fuel feed as follows:
   a) Immediately switch the Fuel Selector to tank with sufficient fuel quantity, if the BOTH option is installed, select the fuel selector position BOTH
   b) Electric Fuel Pump - ON
   c) Select an airspeed to avoid engine overspeed.
   d) Check the engine (engine parameters, airspeed/altitude change, whether the engine responds to changes in the Thrust Lever position).
   e) If the engine acts normally, continue the flight and land as soon as possible.

▲ **WARNING:** The high-pressure pump must be checked by an authorized service center before the next flight.

ABNORMAL ENGINE BEHAVIOR

If the engine acts abnormal during flight and the system does not automatically switch to the B-FADEC, it is possible switch to the B-FADEC manually.

▲ **WARNING:** It is only possible to switch from the automatic position to B-FADEC (A-FADEC is active in normal operation, B-FADEC is active in case of malfunction). This only becomes necessary when no automatic switching occurred in case of abnormal engine behavior.

(1) Select an appropriate airspeed to avoid engine overspeed

▲ **WARNING:** When operating on FADEC backup battery only, the "Force B" switch MUST NOT BE activated. This will shut down the engine.

(2) "Force-B" switch to B-FADEC

(3) Flight may be continued, but the pilot should:

i) Select an airspeed to avoid engine overspeed

ii) Land as soon as possible

iii) Be prepared for an emergency landing

FIRES

ENGINE FIRE WHEN STARTING ENGINE ON GROUND

(1) Engine Master (“IGN“ resp.) - OFF
(2) Fuel Shut-off Valve - CLOSED
(3) Electric Fuel Pump - OFF
(4) Switch "Battery" - OFF
(5) Extinguish the flames with a fire extinguisher, wool blankets or sand.
(6) Inform service center after landing for examination of fire damages.

ENGINE FIRE IN FLIGHT

(1) Engine Master - OFF
(2) Fuel Shut-off Valve - CLOSED
(3) Electric Fuel Pump - OFF
(4) Switch "Main Bus" - OFF
(5) Cabin heat and ventilation OFF (closed) except the fresh air nozzles on the ceiling
(6) Establish Best Glide Speed
(7) Perform emergency landing (as described in the procedure "Emergency Landing With Engine Out")

ELECTRICAL FIRE IN FLIGHT

The first sign of an electrical fire is an unmistakable sharp, acrid smell. As the fire grows, electrical load might be higher than normal or circuit breakers start to trip. In this event proceed as follows:

(1) Main Bus - OFF
(2) Avionics Master - OFF
(3) Fresh Air Nozzles, Cabin Heat and Ventilation - OFF (closed)
(4) Fire Extinguisher - Activate (if available)
(5) All electrical consumers - Switch OFF, leave Alternator, Battery and Engine Master ON

▲ **WARNING:** After the fire extinguisher has been used, make sure that the fire is extinguished before exterior air is used to remove smoke from the cabin.

(6) If there is evidence of continued electrical fire, consider turning off Battery and Alternator.

▲ **WARNING:** If the FADEC Backup battery is not installed this will shut down the engine and require an emergency landing (refer to "EMERGENCY LANDING WITH ENGINE OUT"). The engine has been demonstrated to continue operating for a maximum of 30 minutes when powered by the FADEC Backup battery only.

(7) Fresh Air Nozzles, Cabin Heat and Ventilation - ON (open)
(8) Check Circuit Breaker, do not reset if open

If the fire has been extinguished:

(9) Main Bus - ON
(10) Avionics Master - ON

▲ **WARNING:** Turn on electrical equipment required to continue flight depending on the situation and land as soon as possible. Switch circuit breakers ON one at a time, with delay after each.

ENGINE SHUT DOWN IN FLIGHT

If it is necessary to shut down the engine in flight (for instance, abnormal engine behavior does not allow continued flight or there is a fuel leak, etc.), proceed as follows:

(1) Select an airspeed to avoid engine overspeed (best glide recommended)
(2) Engine Master (“IGN“ resp.) - OFF
(3) Fuel Shut-off Valve - CLOSED
(4) Electric Fuel Pump - OFF
(5) If the propeller also has to be stopped (for instance, due to excessive vibrations)
    i) Reduce airspeed below 55 KIAS
    ii) When the propeller is stopped, continue to glide at 65 KIAS

EMERGENCY LANDING

EMERGENCY LANDING WITH ENGINE OUT

If all attempts to restart the engine fail and an emergency landing is imminent, select suitable site and proceed as follows:

(1) Airspeed
    i) 65 KIAS (flaps retracted)
    ii) 60 KIAS (flaps extended)
(2) Fuel Shut-off Valve - CLOSED
(3) Engine Master (“IGN“ resp.) - OFF
(4) Wing Flaps - as required (Full down recommended)
(5) Alternator, Main Bus and Battery switch - OFF
(6) Cabin Doors - unlock before touch-down
(7) Touch-down - slightly nose up attitude
(8) Brake firmly

◆	Note:	Gliding Distance. Refer to Figure 5-4 "Maximum Glide" Section 5 of this supplement.

FLIGHT IN ICING CONDITIONS

▲ **WARNING:** It is prohibited to fly in known icing conditions.

In case of inadvertent icing encounter proceed as follows:

(1) Pitot Heat switch - ON (if installed)
(2) Turn back or change the altitude to obtain an outside air temperature that is less conducive to icing.
(3) Pull the cabin heat control full out and open defroster outlets to obtain maximum windshield defroster airflow. Adjust cabin air control to get maximum defroster heat and airflow.
(4) Advance the Thrust Lever to increase the propeller speed and keep ice accumulation on the propeller blades as low as possible.
(5) Watch for signs of air filter icing and pull the "Alternate Air Door" control if necessary. An unexplaned loss in engine power could be caused by ice blocking the air intake filter. Opening the "Alternate Air Door" allows preheated air from the engine compartment to be aspirated.
(6) Plan a landing at the nearest airfield. With an extremely rapid ice build up, select a suitable "off airfield" landing site.
(7) With an ice accumulation of 0.5 cm or more on the wing leading edges, a significantly higher stall speed should be expected.
(8) Leave wing flaps retracted. With a severe ice build up on the horizontal tail, the change in wing wake airflow direction caused by wing flap extension could result in a loss of elevator effectiveness.
(9) Perform a landing approach using a forward slip, if necessary, for improved visibility.
(10) Approach at 65 to 75 KIAS depending upon the amount of the accumulation.
(11) Perform a landing in level attitude.

RECOVERY FROM SPIRAL DIVE

If a spiral is encountered in the clouds, proceed as follows:

(1) Retard Thrust Lever to idle position
(2) Stop the turn by using coordinated aileron and rudder control to align the symbolic airplane in the turn coordinator with the horizontal reference line.
(3) Cautiously apply elevator back pressure to slowly reduce the airspeed to 80 KIAS70 KIAS.
(4) Adjust the elevator trim control to maintain an 80 KIAS 70 KIAS glide.
(5) Keep hands off the control wheel, using rudder control to hold a straight heading.
(6) Readjust the rudder trim (if installed) to relieve the rudder of asymmetric forces.
(7) Clear the engine occasionally, but avoid using enough power to disturb the trimmed glide.
(8) Upon breaking out of clouds, resume normal cruising flight and continue the flight.

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS

▲ **WARNING:** If the power supply from both alternator and main battery is interrupted, continued engine operation is dependent on the remaining capacity of the FADEC backup battery. The engine has been demonstrated to continue operating for a maximum of 30 minutes when powered by the FADEC backup battery only. In this case, all electrical equipment will not operate:

- land immidiately
- do not switch the „FORCE-B“ switch, this will shut down the engine

■ CAUTION: The engine requires an electrical power source for its operation. If the alternator fails, continued engine operation time is dependent upon the remaining capacity of the main battery, the FADEC backup battery and equipment powered.
The engine has been demonstrated to continue operating for approximately 120 minutes based upon the following assumptions:

■ CAUTION: This table only gives a reference point. The pilot should turn off all nonessential items and supply power only to equipment which is absolutely necessary for continued flight depending upon the situation.

Deviating from this recommendation, the remaining engine operating time may change.

Equipment		Time switched on	
		in [min]	in [%]
NAV/COM 1 receiving	ON	120	100
NAV/COM 1 transmitting	ON	12	10
NAV/COM 2 receiving	OFF	0	0
NAV/COM 2 transmitting	OFF	0	0
GPS	ON	60	50
Transponder	ON	120	100
Fuel Pump	OFF	0	0
AED-125	ON	120	100
Battery	ON	120	100
CED-125	ON	120	100
Landing Light	ON	12	10
Flood Light	ON	1.2	1
Pitot Heat	ON	24	20
Wing Flaps	ON	1.2	1
Interior Lighting	OFF	0	0
Nav Lights	OFF	0	0
Beacon	OFF	0	0
Strobes	OFF	0	0
ADF	OFF	0	0
Intercom	OFF	0	0
Engine Control	ON	120	100

Table 3-1a

ALTERNATOR WARNING LIGHT ILLUMINATES DURING NORMAL ENGINE OPERATION.

(1) Ammeter - CHECK.
(2) Alternator switch CHECK - ON
(3) Battery Switch CHECK - ON

■ CAUTION: If the FADEC was supplied by battery only until this point, the RPM can momentarily drop, when the alternator is switched on. In any case: leave the alternator switched ON!

(4) Electrical load - REDUCE IMMEDIATELY as follows:
    i) NAV/ COM 2 – OFF
    ii) Fuel Pump – OFF
    iii) Landing Light – OFF (use as required for landing)
    iv) Taxi Light – OFF
    v) Strobe Light – OFF
    vi) Nav Lights – OFF
    vii) Beacon – OFF
    viii) Interior Lights – OFF
    ix) Intercom – OFF
    x) Pitot Heat – OFF (use as required)
    xi) Autopilot – OFF
    xii) Non-essential equipment – OFF
(5) The pilot should:
    i) Land as soon as possible.
    ii) Be prepared for an emergency landing.
    iii) Expect an engine failure

AMMETER SHOWS BATTERY DISCHARGE DURING NORMAL ENGINE OPERATION FOR MORE THAN 5 MINUTES

◆ Note: When the AED Ammeter indication decreases to the far left and the voltage indication is decreasing simultaneously, the battery is being discharged.

(1) Alternator switch CHECK - ON
(2) Battery Switch CHECK - ON

■ CAUTION: If the FADEC was supplied by battery only until this point, the RPM can momentarily drop, when the alternator is switched on. In any case: leave the alternator switched ON!

(3) Electrical load - REDUCE IMMEDIATELY as follows:
   i) NAV/ COM 2 – OFF
   ii) Fuel Pump – OFF
   iii) Landing Light – OFF (use as required for landing)
   iv) Taxi Light – OFF
   v) Strobe Light – OFF
   vi) Nav Lights – OFF
   vii) Beacon – OFF
   viii) Interior Lights – OFF
   ix) Intercom – OFF
   x) Pitot Heat – OFF (use as required)
   xi) Autopilot – OFF
   xii) Non-essential equipment – OFF
(4) The pilot should:
   i) Land as soon as possible
   ii) Be prepared for an emergency landing
   iii) Expect an engine failure

TOTAL ELECTRICAL FAILURE
(all equipment inoperative, except engine)

▲ **WARNING:**	If both alternator and main battery fail, continued engine operation is dependent on the remaining capacity of the FADEC backup battery. The engine has been demonstrated to continue operating for a maximum of 30 minutes when powered by the FADEC backup battery only. In this case, all other electrical equipment will not operate.

▲ **WARNING:**	If the aircraft was operated on battery power only until this point (alternator warning light illuminated), the remaining engine operating time may be less than 30 minutes.

▲ **WARNING:**	Do not activate the FORCE-B switch, this will shut down the engine.

(1) Alternator switch CHECK - ON
(2) Battery Switch CHECK – ON
(3) Land as soon as possible
    i) Be prepared for an emergency landing
    ii) Expect an engine failure

ROUGH ENGINE OPERATION OR LOSS OF POWER

DECREASE IN POWER

(1) Push Thrust Lever full forward (Take-off position)
(2) Fuel Selector to tank with sufficient fuel quantity and temperature, if the BOTH option is installed, select the fuel selector position BOTH.
(3) Electric Fuel Pump - ON
(4) Reduce airspeed to 65-85 KIAS (best glide recommended), (max. 100 KIAS)
(5) Check engine parameters (FADEC lights, oil pressure and temperature, fuel quantity)

If normal engine power is not achieved, the pilot should:

i) Land as soon as possible
ii) Be prepared for an emergency landing
iii) Expect an engine failure

▲ **WARNING:** The high pressure pump must be checked before the next flight.

ICE FORMATION IN THE CARBURETOR

- N/A, since this is a Diesel engine -

SOILED SPARK PLUGS

- N/A, since this is a Diesel engine -

IGNITION MAGNET MALFUNCTIONS

- N/A, since this is a Diesel engine -

OIL PRESSURE TOO LOW (< 2.3 BAR IN CRUISE (YELLOW RANGE) OR < 1.2 BAR AT IDLE (RED RANGE)):

(1) Reduce power as quickly as possible
(2) Check oil temperature: If the oil temperature is high or near operating limits,
    i) Land as soon as possible
    ii) Be prepared for an emergency landing
    iii) Expect an engine failure

◆ Note: During warm-weather operation or long climbs at low airspeed engine temperatures could rise into the yellow range and trigger the "Caution" light. This indication allows the pilot to avoid overheating of the engine as follows:

(3) Increase the climbing airspeed, reduce angle of climb
(4) Reduce power, if the engine temperatures approache the red range

OIL TEMPERATURE "OT" TOO HIGH (RED RANGE):

(1) Increase airspeed and reduce power as quickly as possible
(2) Check oil pressure: if the oil pressure is lower than normal (< 2.3 bar in cruise or < 1.2 bar at idle),
    i) Land as soon as possible
    ii) Be prepared for an emergency landing
    iii) Expect an engine failure
(3) If the oil pressure is in the normal range:
    i) Land as soon as possible

COOLANT TEMPERATURE "CT" TOO HIGH (RED RANGE):

(1) Increase airspeed and reduce power as quickly as possible
(2) Cabin Heat - COLD (push Lever “Cabin Heat“)
(3) If coolant temperature reduces rapidly to normal range, fly normally and monitor coolant temperature. Cabin heat as required.
(4) If this does not cause the coolant temperature to drop,
    i) Land as soon as possible
    ii) Be prepared for an emergency landing
    iii) Expect an engine failure

LIGHT "WATER LEVEL" ILLUMINATES

(1) Increase airspeed and reduce power as quickly as possible
(2) Coolant temperature "CT" check and monitor
(3) Oil temperature "OT" check and monitor
(4) If coolant temperature and/or oil temperature are rising into yellow or red range,
    i) Land as soon as possible
    ii) Be prepared for an emergency landing
    iii) Expect an engine failure

GEARBOX TEMPERATURE "GT" TOO HIGH (RED RANGE):

(1) Reduce power to 55% - 75% as quickly as possible
(2) Land as soon as possible.

FUEL TEMPERATURE TOO HIGH (RED RANGE):

(1) Switch to fuel tank with lower fuel temperature, if this contains sufficient fuel
(2) Reduce engine power, if possible
(3) If fuel temperature remains in Red Range, land as soon as possible

FUEL TEMPERATURE TOO LOW (AMBER RANGE for Diesel Operation, RED RANGE for Kerosine Operation):

The fuel in the selected tank will be heated by the return flow, the temperature in the non-active tank must be monitored.

(1) Switch to fuel tank with higher fuel temperature, if this contains sufficient fuel
(2) Change to altitude with higher outside air temperature
(3) If use of the non-active tank is intended, switch fuel selector to BOTH when installed

PROPELLER RPM TOO HIGH:

Propeller RPM between 2,400 and 2,500 for more than 10 seconds or over 2,500:

(1) Reduce power
(2) Reduce airspeed below 100 KIAS or as appropriate to prevent propeller overspeed
(3) Set power as required to maintain altitude and land as soon as possible.

◆ Note:	If the propeller speed control fails, climbs can be performed at 65 KIAS and a power setting of 100%. In case of overspeed the FADEC will reduce the engine power at higher airspeeds to avoid propeller speeds above 2500 rpm.

FLUCTUATIONS IN PROPELLER RPM:

If the propeller RPM fluctuates by more than + / - 100 RPM with a constant Thrust Lever position:

(1) Change the power setting and attempt to find a power setting where the propeller RPM no longer fluctuates.
(2) If this does not work, set the maximum power at an airspeed < 100 KIAS until the propeller speed stabilizes.
(3) If the problem is resolved, continue the flight
(4) If the problem continues, select a power setting where the propeller RPM fluctuations are minimum. Fly at an airspeed below 100 KIAS and land as soon as possible.

SECTION 4
NORMAL PROCEDURES

PREFLIGHT INSPECTION

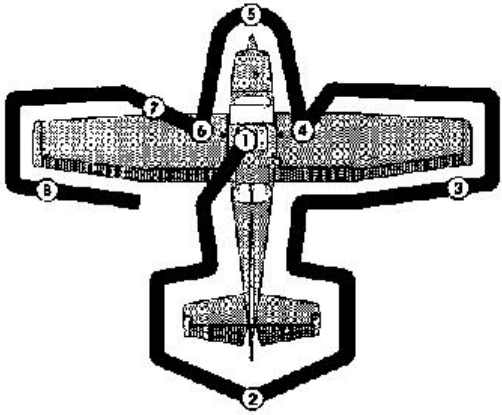


Figure 4-1a Preflight Inspection

◆ Note: Visually check airplane for general condition during walk around inspection. In cold weather, remove even small accumulations of frost, ice or snow from wing, tail and control surfaces. Also, make sure that control surfaces contain no internal accumulations of ice or debris. Prior to flight, check that pitot heater (if installed) is warm to touch within 30 seconds with battery and pitot heat switches on. If a night flight is planned, check operation of all lights, and make sure a flashlight is available.

(1) CABIN

(1) Pilot´s Operating Handbook - AVAILABLE IN THE AIRPLANE
(2) Airplane Weight and Balance - CHECKED
(3) Parking Brake - SET
(4) Control Wheel Lock - REMOVE
(5) "Engine Master" ("IGN" resp.) - OFF
(6) Avionics Power Switch - OFF
(7) "Shut-off Cabin Heat" - OFF (Push Full Forward)

▲ **WARNING:** When turning on the Battery switch, using an external power source, or pulling the propeller through by hand, treat the propeller as if the Engine Master ("IGN" resp.) was on.

(8) Battery and Main Bus switches - ON
(9) Fuel Quantity Indicators and Fuel Temperature - CHECK
(10) Light “Water Level“ - CHECK OFF
(11) Battery and Main Bus switches - OFF
(12) Entry in log-book concerning type of fuel filled - CHECK
(13) Static Pressure Alternate Source Valve - CHECK
(14) Fuel Selector Valve - tank with sufficient fuel quantity
(15) Fuel Shut-off Valve - ON (Push Full In)
(16) Baggage Door - CHECK, lock with key, if the child's seat is supposed to be occupied.

(2) EMPENNAGE

(1) Rudder Gust Lock (if attached) - REMOVE
(2) Tail Tie - Down - DISCONNECT
(3) Control Surfaces - CHECK freedom of movement and security

(3) RIGHT WING Trailing Edge

(1) Aileron - CHECK freedom of movement and security

(2) Flap - CHECK for security and condition

(4) RIGHT WING

(1) Wing Tie-Down - DISCONNECT

(2) Main Wheel Tire - CHECK for proper inflation and general condition (weather checks, tread depth and wear, etc.)

▲ **WARNING:** If, after repeated sampling, evidence of contamination still exists, the airplane should not be flown. Tanks should be drained and system purged by qualified maintenance personnel. All evidence of contamination must be removed before further flight.

---

(3) Fuel Tank Sump Quick Drain Valves - DRAIN at least a cupful of fuel (using sampler cup) from each sump location to check for water, sediment and the right type of fuel (Diesel or JET-A1) before each flight and after each refueling. If water is observed, take further samples until clear and then gently rock wings and lower tail to the ground to move any additional contaminants to the sampling points. Take repeated samples from all fuel drain points until all contamination has been removed. If contaminants are still present, refer to above WARNING and do not fly airplane.

(4) Fuel Quantity - CHECK VISUALLY for desired level not above marking in fuel filler.

(5) Fuel Filler Cap - SECURE

(5) NOSE

(1) Reservoir tank Quick Drain Valve - DRAIN at least a cupful of fuel (using sampler cup) from valve to check for water, sediment and proper fuel grade (Diesel or JET-A1) before each flight and after each refueling. If water is observed, take further samples until clear and then gently rock wings and lower tail to the ground to move any additional contaminants to the sampling point. Take repeated samples until all contamination has been removed.

◆ Note: The reservoir tank drain is located in the fuselage on the co-pilot side of the aircraft.

(2) Before first flight of the day and after each refueling - DRAIN the Fuel Strainer Quick Drain Valve with the sampler cup to remove water and sediment from the screen. Ensure that the screen drain is properly closed again. If water is discovered, there might be even more water in the fuel system. Therefore, take further samples from Fuel Strainer and the Tank Sumps.

◆ Note: The fuel strainer drain is located on the lower end of the fuel strainer.

(3) Engine Oil Dipstick/Filler Cap
   a) Oil level - CHECK
   b) Dipstick/filler cap - SECURE

   Do not operate below the minimum dipstick indication.

(4) Engine Air and Cooling Inlets - CLEAR of obstructions.

(5) Landing Light - CHECK for condition and cleanliness

(6) Propeller and Spinner - CHECK for nicks and security.

(7) Gearbox Oil Level - CHECK the oil has to cover at least half of the inspection glass

(8) Nose Wheel Strut and Tire- CHECK for proper inflation of strut and general condition (weather checks, tread depth and wear, etc.) of tire.

(9) Left Static Source Opening - CHECK for blockage

(6) LEFT WING

(1) Fuel Quantity - CHECK VISUALLY for desired level not above marking in fuel filler.

(2) Fuel Filler Cap - SECURE

(3) Fuel Tank Sump Quick Drain Valves - DRAIN at least a cupful of fuel (using sampler cup) from each sump location to check for water, sediment and the right type of fuel (Diesel or JET-A1) before each flight and after each refueling. If water is observed, take further samples until clear and then gently rock wings and lower tail to the ground to move any additional contaminants to the sampling points. Take repeated samples from all fuel drain points until all contamination has been removed. If contaminants are still present, refer to previous WARNING (see right wing) and do not fly airplane.

(4) Main Wheel Tire- CHECK for proper inflation and general condition (weather checks, tread depth and wear, etc.)

(7) LEFT WING Leading Edge

(1) Pitot Tube Cover (if mounted) - REMOVE and CHECK for pitot blockage

(2) Fuel Tank Vent Opening - CHECK for blockage

(3) Stall Warning Opening - CHECK for blockage

(4) Wing Tie-Down - DISCONNECT

(8) LEFT WING Trailing Edge

(1) Aileron - CHECK freedom of movement and security.

(2) Flap - Check for security and conditions

BEFORE STARTING ENGINE

(1) Preflight Inspection - COMPLETE
(2) Seats and Seat Belts - ADJUST and LOCK
(3) Brakes - TEST and SET, Parking Brake - SET
(4) Avionics Power Switch, Autopilot (if installed) and Electrical Equipment - OFF

■ CAUTION: The Avionics Power Switch must be off during engine start to prevent possible damage to avionics.

(5) Circuit Breakers - CHECK IN
(6) Battery, Alternator and Main Bus Switches - ON

■ CAUTION: The electronic engine control needs an electrical power source for its operation. For normal operation Battery, Alternator and Main Bus have to be switched on. Separate switching is only allowed for tests and in the event of emergencies.

(7) Fuel Quantity and Temperature - CHECK
(8) Fuel Selector Valve - SET to BOTH position. The fuel temperature limitations must be observed.
(9) Fuel Shut-off Valve - OPEN (Push Full In)
(10) Alternate Air Door - CLOSED
(11) Thrust Lever - CHECK for freedom of movement
(12) Load Display - CHECK 0% at Propeller RPM 0

PROCEDURES UP TO 5500ft AIRFIELD ELEVATION

STARTING ENGINE

▲	**WARNING:**	Do not use ground power unit for engine starts. It is not allowed to start up the engine using external power. If starting the engine is not possible using battery power, the condition of the battery must be verified before flight.

(1) Electric Fuel Pump - ON
(2) Navigation Lights and Flashing Beacon - ON (as required)
(3) Thrust Lever - IDLE
(4) Area Aircraft / Propeller - CLEAR
(5) "Engine Master" ("IGN" resp.) - ON, wait until the Glow Control light extinguishes
(6) Starter - ON, keep starter engaged until min. 500rpm Release when engine starts, leave Thrust Lever in idle

■	CAUTION:	Do not overheat the starter motor. Do not operate the starter motor for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.

(7) Oil Pressure - CHECK

■	CAUTION:	If after 3 seconds the minimum oil pressure of 1 bar is not indicated: shut down the engine immediately!

(8) CED-Test Knob - PRESS (to delete Caution light)
(9) Ammeter - CHECK for positive charging current
(10) Voltmeter - CHECK for green range

(11) FADEC Backup Battery test
   a) Alternator - OFF, engine must operate normally
   b) Battery - OFF, for min. 10 seconds;
      engine must operate normally, the red FADEC lamps must not be illuminated
   c) Battery - ON
   d) Alternator - ON

▲ **WARNING:** It must be ensured that both battery and alternator are ON!
If the guarded alternator switch is installed, the switch guard must be closed.

(12) Master Switch – ON

(13) Radios – ON

(14) Ammeter – Check positive charge, alternator warning light must be OFF

(15) Voltmeter – Check in green range

(16) Electric Fuel Pump – OFF

(17) Flaps – RETRACT

WARM UP

(1) Let the engine warm up about 2 minutes at 890 RPM.

(2) Increase RPM to 1,400 until Oil Temperature 50°C, Coolant Temperature 60°C.

BEFORE TAKE-OFF

(1) Parking Brake – SET

(2) Cabin Doors and Windows – CLOSED and LOCKED

(3) Flight Controls – FREE and CORRECT

(4) Flight Instruments – CHECK and SET

(5) Fuel quantity – CHECK

(6) Fuel Selector Valve – SET to BOTH position. The fuel temperature limitations must be observed

(7) Elevator Trim and Rudder Trim (if installed) - SET for Takeoff

(8) FADEC and propeller adjustment function check:
   a) Thrust Lever - IDLE (both FADEC lights should be OFF).
   b) FADEC Test Button - PRESS and HOLD button for entire test.
   c) Both FADEC lights - ON, RPM increases

▲ **WARNING:** If the FADEC lights do not come on at this point, it means that the test procedure has failed and take off should not be attempted.

   d) The FADEC automatically switches to B-component (only FADEC B light is ON)
   e) The propeller control is excited, RPM decreases
   f) The FADEC automatically switches to channel A (only FADEC A light is ON), RPM increases
   g) The propeller control is excited, RPM decreases
   h) FADEC A light goes OFF, idle RPM is reached, the test is completed.
   i) FADEC Test Button - RELEASE

(9) Force B Switch - switch to FADEC B

(10) Engine - check running without a change

(11) Force B Switch - switch back to Automatic

▲ **WARNING:** If there are prolonged engine misfires or the engine shuts down during the test, take off may not be attempted.

▲ **WARNING:** The whole test procedure has to be performed without any failure. In case the engine shuts down or the FADEC lights are flashing, take off is prohibited. This applies even if the engine seems to run without failure after the test.

◆ Note:	If the test button is released before the self test is over, the FADEC immediately switches over to normal operation.

◆ Note:	While switching from one FADEC to another, it is normal to hear and feel a momentary surge in the engine.

(12) Thrust Lever - FULL FORWARD, load display min. 94%, RPM 2240 - 2300
(13) Thrust Lever - IDLE
(14) Engine Instruments and Ammeter - CHECK
(15) Suction gage - CHECK
(16) Wing Flaps - SET for Take-off (0° or 10°).
(17) Electric Fuel Pump - ON
(18) Strobe Lights - AS DESIRED
(19) Radios and Avionics - ON and SET
(20) Autopilot (if installed) - OFF
(21) Air Conditioning (if installed) - OFF
(22) Thrust Lever Friction Control - ADJUST
(23) Brakes - RELEASE

PROCEDURES OVER 5500ft AIRFIELD ELEVATION

◆ Note: Procedures apply only to TAE 125-02-99. For TAE 125-01 refer to procedures for airfield elavations up to 5500ft.

◆ Note: Due to the increase of the idle speed with increasing pressure altitudes, the FADEC test is only possible to a limited extent from an airfield elevation of approximately 5500ft.
Over 5500ft, the FADEC test is only possible if the load selector lever remains in the idle position after engine start until the FADEC test is starting.
If the load selector lever is moved from the idle position, a FADEC test is no longer possible at pressure altitudes above 5500ft. For this purpose, the engine has to be stopped and re-started to perform the FADEC test.

STARTING ENGINE

▲ **WARNING:** Do not use ground power unit for engine starts. It is not allowed to start up the engine using external power. If starting the engine is not possible using battery power, the condition of the battery must be verified before flight.

(1) Electric Fuel Pump - ON
(2) Navigation Lights and Flashing Beacon - ON (as required)
(3) Thrust Lever - IDLE
(4) Area Aircraft / Propeller - CLEAR
(5) "Engine Master" ("IGN" resp.) - ON, wait until the Glow Control light extinguishes
(6) Starter - ON, keep starter engaged until min. 500rpm Release when engine starts, leave Thrust Lever in idle

■ CAUTION:	Do not overheat the starter motor. Do not operate the starter motor for more than 10 seconds. After operating the starter motor, let it cool off for 20 seconds. After 6 attempts to start the engine, let the starter cool off for half an hour.

(7) Oil Pressure - CHECK

■ CAUTION:	If after 3 seconds the minimum oil pressure of 1 bar is not indicated: shut down the engine immediately!

(8) CED-Test Knob - PRESS (to delete Caution light)

(9) Ammeter - CHECK for positive charging current

(10) Voltmeter - CHECK for green range

(11) FADEC Backup Battery test

a) Alternator - OFF, engine must operate normally

b) Battery - OFF, for min. 10 seconds;
engine must operate normally, the red FADEC lamps must not be illuminated

c) Battery - ON

d) Alternator - ON

▲ **WARNING:**	It must be ensured that both battery and alternator are ON! If the guarded alternator switch is installed, the switch guard must be closed.

(12) Ammeter – Check positive charge, alternator warning light must be OFF

(13) Voltmeter – Check in green range

(14) Flaps – RETRACT

WARM UP AND FADEC-TEST

(1) Let the engine warm up about 2 minutes at 890 RPM.
(2) Increase RPM to 1,400 until Oil Temperature 50°C, Coolant Temperature 60°C.
(3) Thrust Lever - IDLE
(4) "Engine Master" ("IGN" resp.) - OFF
(5) Area Aircraft / Propeller - CLEAR
(6) "Engine Master" ("IGN" resp.) - ON, wait until the Glow Control light extinguishes
(7) Starter - ON, keep starter engaged until min. 500rpm Release when engine starts, leave Thrust Lever in idle
(8) Ammeter - CHECK for positive charging current
(9) Voltmeter - CHECK for green range
(10) FADEC and propeller adjustment function check:
    a) Thrust Lever - IDLE (both FADEC lights should be OFF).
    b) FADEC Test Button - PRESS and HOLD button for entire test.
    c) Both FADEC lights - ON, RPM increases

▲ **WARNING:** If the FADEC lights do not come on at this point, it means that the test procedure has failed and take off should not be attempted.

    d) The FADEC automatically switches to B-component (only FADEC B light is ON)
    e) The propeller control is excited, RPM decreases
    f) The FADEC automatically switches to channel A (only FADEC A light is ON), RPM increases
    g) The propeller control is excited, RPM decreases
    h) FADEC A light goes OFF, idle RPM is reached, the test is completed.
    i) FADEC Test Button - RELEASE
(11) Force B Switch - switch to FADEC B
(12) Engine - check running without a change
(13) Force B Switch - switch back to Automatic

▲ **WARNING:**	If there are prolonged engine misfires or the engine shuts down during the test, take off may not be attempted.

▲ **WARNING:**	The whole test procedure has to be performed without any failure. In case the engine shuts down or the FADEC lights are flashing, take off is prohibited. This applies even if the engine seems to run without failure after the test.

◆ Note:	If the test button is released before the self test is over, the FADEC immediately switches over to normal operation.

◆ Note:	While switching from one FADEC to another, it is normal to hear and feel a momentary surge in the engine.

(14) Avionic Switch – ON
(15) Radios – ON
(16) Electric Fuel Pump – OFF

BEFORE TAKE-OFF

(1) Parking Brake – SET
(2) Cabin Doors and Windows – CLOSED and LOCKED
(3) Flight Controls – FREE and CORRECT
(4) Flight Instruments – CHECK and SET
(5) Fuel quantity – CHECK
(6) Fuel Selector Valve – SET to BOTH position
(7) Elevator Trim and Rudder Trim (if installed) - SET for Takeoff
(8) Thrust Lever - FULL FORWARD, load display min. 94%, RPM 2240 - 2300
(9) Thrust Lever - IDLE

(10) Engine Instruments and Ammeter - CHECK
(11) Suction gage - CHECK
(12) Wing Flaps - SET for Take-off (0° or 10°).
(13) Electric Fuel Pump - ON
(14) Strobe Lights - AS DESIRED
(15) Radios and Avionics - ON and SET
(16) Autopilot (if installed) - OFF
(17) Air Conditioning (if installed) - OFF
(18) Thrust Lever Friction Control - ADJUST
(19) Brakes - RELEASE

TAKE-OFF

NORMAL TAKEOFF

(1) Wing Flaps - 0° or 10°
(2) Thrust Lever - FULL FORWARD
(3) Elevator Control - LIFT NOSE WHEEL at 55 KIAS.
(4) Climb Speed - 65 to 80 KIAS

SHORT FIELD TAKEOFF

(1) Wing Flaps - 10°
(2) Brakes - APPLY
(3) Thrust Lever - FULL FORWARD
(4) Brakes - RELEASE
(5) Airplane Attitude - SLIGHTLY TAIL LOW
(6) Elevator Control - LIFT NOSE WHEEL at 44 KIAS
(7) Climb Speed - 58 KIAS (until all obstacles are cleared)

AFTER TAKEOFF

(1) Altitude about 300 ft, Airspeed more than 65 KIAS - Wing Flaps - RETRACT
(2) Electric Fuel Pump - OFF

CLIMB

(1) Airspeed - 70 to 85 KIAS.

◆ Note:	If a maximum performance climb is necessary, use speeds shown in the "Maximum Rate Of Climb" chart in Section 5. In case that Oil Temperature and/or Coolant Temperature are approaching the upper limit, continue at a lower climb angle for better cooling if possible.

◆ Note:	If the optional LEFT, RIGHT, BOTH fuel selector valve is installed it is recommended to select the BOTH position. The fuel temperatures have to be monitored.

(2) Thrust Lever - FULL FORWARD

CRUISE

(1) Power - maximum load 100% (maximum continuous power), 75% or less is recommended.
For economic cruise set load 70% or less.

(2) Elevator trim and Rudder trim (if installed) - ADJUST

(3) Compliance with Limits for Oil Pressure, Oil Temperature, Coolant Temperature and Gearbox Temperature (CED 125 and Caution light) - MONITOR closely

(4) Fuel Quantity and Temperature (Display and LOW LEVEL warning lights) - MONITOR.
Whenever possible, the airplane should be flown with the fuel selector in the BOTH position to empty and heat both fuel tanks evenly. However, operation in the LEFT or RIGHT position may be desirable to correct a fuel quantity imbalance or during periods of intentional uncoordinated flight maneuvres. During prolonged operation with the fuel selector in either the LEFT or RIGHT position the fuel balance and temperatures should be closely monitored.

■	CAUTION:	Do not use any fuel tank below the minimum permissible fuel temperature!

■	CAUTION:	In turbulent air it is strongly recommended to use the BOTH position.

■	CAUTION:	With ¼ tank or less prolonged or uncoordinated flight is prohibited when operating on either the left or right tank.

(5) FADEC and Alternator Warning Lights - MONITOR

DESCENT

(1) Fuel Selector Valve - SELECT BOTH position (if installed) or SET to tank with sufficient fuel quantity (LEFT or RIGHT)

◆ Note: If the optional LEFT, RIGHT, BOTH, fuel selector valve is installed it is recommended to select the BOTH position. The fuel temperatures have to be monitored.

(2) Power - AS DESIRED

BEFORE LANDING

(1) Pilot and Passenger Seat Backs - MOST UPRIGHT POSITION
(2) Seats and Seat Belts - SECURED and LOCKED
(3) Fuel Selector Valve - SELECT BOTH position (if installed) or SET to tank with sufficient fuel quantity (LEFT or RIGHT)

◆ Note: If the optional LEFT, RIGHT, BOTH, fuel selector valve is installed it is recommended to select the BOTH position.The fuel temperatures have to be monitored.

(4) Electric Fuel Pump - ON
(5) Landing / Taxi Lights - ON
(6) Autopilot (if installed) - OFF
(7) Air Conditioning (if installed) - OFF

LANDING

NORMAL LANDING

(1) Airspeed - 69 to 80 KIAS (wing flaps UP)
(2) Wing Flaps - AS REQUIRED (0°-10° below 110 KIAS; 10°-40° below 85 KIAS)
(3) Airspeed in Final Approach:
    - wing flaps 20°: 63 KIAS
    - wing flaps 40°: 60 KIAS
(4) Touchdown - MAIN WHEELS FIRST
(5) Landing Roll - LOWER NOSE WHEEL GENTLY
(6) Brakes - MINIMUM REQUIRED

SHORT FIELD LANDING

(1) Airspeed - 69 to 80 KIAS (Flaps UP)
(2) Wing Flaps - 40°
(3) Airspeed in the Final Approach - (until flare)
(4) Power - REDUCE to idle after clearing obstacles.
(5) Touchdown - MAIN WHEELS FIRST
(6) Brakes - APPLY HEAVILY
(7) Wing Flaps - RETRACT

BALKED LANDING

(1) Thrust Lever - FULL FORWARD
(2) Wing Flaps - RETRACT TO 20° (immediately after Thrust Lever FULL FORWARD)
(3) Climb Speed - 58 KIAS
(4) Wing Flaps - 10° (until all obstacles are cleared)
(5) Wing Flaps - RETRACT after reaching a safe altitude and 65 KIAS

AFTER LANDING

(1) Wing Flaps - RETRACT
(2) Electric Fuel Pump - OFF

SECURING AIRPLANE

(1) Parking Brake - SET
(2) Thrust Lever - IDLE
(3) Avionics Power Switch, Electric Equipment, Autopilot (if installed) - OFF
(4) Main Bus switch - OFF
(5) "Engine Master" ("IGN" resp.) - OFF
(6) Switch Battery - OFF
(7) Control Lock - INSTALL
(8) Fuel Selector Valve - LEFT or RIGHT (to prevent crossfeeding between tanks)

AMPLIFIED PROCEDURES

STARTING ENGINE

The TAE 125 is a direct Diesel injection engine with common-rail technology and a turbocharger. It is controlled automatically by the FADEC, which makes a proper performance of the FADEC test important for safe flight operation.
All information relating to the engine are compiled in the CED 125 multifunction instrument.
Potentiometers within the Thrust Lever transmit the load value selected by the pilot to the FADEC.
With the Engine Master ("IGN" resp.) in position ON the glow relay is triggered by the FADEC and the Glow Plugs are supplied with electrical power, in position OFF the Injection Valves are not supplied by the FADEC and stay closed.
The switch/push button "Starter" controls the Starter.

EXTERNAL POWER

External power may be used to charge the battery or for maintenance purposes. To charge the battery with external power the battery switch must be ON.

When using an External Power Source, the Battery Switch must be in the OFF position before connecting the External Power Source to the airplane receptacle.

It is not allowed to start up the engine using external power. If starting the engine is not possible using battery power, the condition of the battery must be verified before flight.

TAXIING

When taxiing, it is important that speed and use of brakes be held to a minimum and that all controls be utilized (Refer to Figure 4-2, Taxiing Diagram) to maintain directional control and balance.
The Alternate Air Door Control should be always pushed for ground operation to ensure that no unfiltered air is sucked in.
Taxiing over loose gravel or cinders should be done at low engine speed to avoid abrasion and stone damage to the propeller tips.

BEFORE TAKE-OFF

WARM UP

To warm up the engine, operate the engine for about 2 minutes at 890 RPM.
Let the engine run at propeller RPM of 1,400 to ensure normal operation of the TAE 125 until it reaches an Engine Oil Temperature of 50°C (green range) and a Coolant Temperature of 60°C (green range).

MAGNETO CHECK

N/A since this is a Diesel engine.

ALTERNATOR CHECK

Prior to flights where verification of proper alternator and alternator control unit operation is essential (such as night and instrument flights), a positive verification can be made by loading the electrical system momentarily (3 to 5 seconds) with the landing light or by operating the wing flaps during the engine runup (20% load). The ammeter will remain within a needle width of zero if the alternator and alternator control unit are operating properly.

BATTERY CHECK

If there is doubt regarding the battery conditions or functionality the battery has to be checked after warm-up as follows:

Switch-off the alternator while the engine is running (battery remains "ON").

Perform a 10 sec. engine run. The voltmeter must remain in the green range. If not, the battery has to be charged or, if necessary, exchanged.

After this test the alternator has to be switched on again.

TAKE-OFF

POWER CHECK

It is important to check full load engine operation early in the takeoff roll. Any signs of rough engine operation or sluggish engine acceleration is good cause for discontinuing the take-off. If this occurs, you are justified in making a thorough full load static runup before another take-off is attempted.
After full load is applied, adjust the Thrust Lever Friction Control to prevent the Thrust Lever from creeping back from a maximum power position. Similar friction lock adjustments should be made as required in other flight conditions to maintain a fixed Thrust Lever setting.

WING FLAP SETTINGS

Flap deflections greater than 10° are not approved for normal and short field takeoffs. Using 10° wing flaps reduces the ground roll and total distance over a 15 m obstacle by approximately 10%.

CLIMB

Normal climbs are performed with flaps up and full load and at speeds 5 to 10 knots higher than best rate-of-climb speeds for the best combination of engine cooling, climb speed and visibility. The speed for best climb is about 70 KIAS/ . If an obstruction dictates the use of a steep climb angle, climb at 62 KIAS and flaps up.

◆ Note:	Climbs at low speeds should be of short duration to improve engine cooling.

CRUISE

As guidance for calculation of the optimum altitude and power setting for a given flight use the tables in chapter 5. Observe the various rates of consumption with Diesel or Jet A-1-operation.

LANDING

NORMAL LANDING

Remarks in Pilot´s Operating Handbook concerning carburetor pre-heating are **N/A.**

BALKED LANDING

In a balked landing (go around) climb, reduce the flap setting to 20° immediately after full power is applied. If obstacles must be cleared during the go-around climb, reduce wing flap setting to 10° and maintain a safe airspeed until the obstacles are cleared. After clearing any obstacles, the flaps may be retracted as the airplane accelerates to the normal flaps up climb speed.

CARBURETOR ICING

N/A since this is a Diesel engine.

FLIGHT IN HEAVY RAIN

N/A since no special procedures are necessary for heavy rain.

COLD WEATHER OPERATION

Special attention should be paid to operation of the aircraft and the fuel system in winter or before any flight at low temperatures. Correct preflight draining of the fuel system is particularly important and will prevent the accumulation of water.
The following limitations for cold weather operation are established due to temperature. “Operating limits“.
(Refer also to Section 2 "Limitations")

Fuel	Minimum permissible fuel temperature in the fuel tank before Take-off	Minimum permissible fuel temperature in the fuel tank during the flight
JET A-1, JET-A, Fuel No.3 JP-8 JP8+100 TS-1 (TAE 125-02-99 only)	-30°CC	-35°CC
Diesel Sasol GTL Diesel (TAE 125-02-99 only)	greater than 0°C	-5°C

Figure 4-1a Minimum fuel temperature limits in the fuel tank

▲ **WARNING:** The fuel temperature of the fuel tank not in use should be observed if it is intended for later use.

▲ **WARNING:** The following applies to Diesel and JET fuel mixtures in the tank:
As soon as the proportion of Diesel in the tank is more than 10% Diesel, the fuel temperature limits have to be observed for Diesel operation. If there is uncertainty about the type of fuel in the tank, the assumption should be made that it is Diesel.

◆ Note: It is advisable to refuel before each flight and to enter the type of fuel filled and the additives used in the log-book of the airplane.

Cold weather often causes conditions which require special care during airplane operations. Even small accumulations of frost, ice or snow must be removed, particularly from wing, tail and all control surfaces to assure satisfactory flight performance and handling. Also, control surfaces must be free of any internal accumulations of ice or snow.

If snow or slush covers the take-off surface, allowance must be made for take-off distances which will be increasingly extended as snow or slush depth increases. The depth and consistency of this cover can, in fact, prevent take-off in many instances.

Cold weather starting procedures are the same as the normal starting procedures. Use caution to prevent inadvertent forward movement of the airplane during starting when parked on snow or ice.

HOT WEATHER OPERATION

Engine temperatures may rise into the
yellow range and activate the "Caution" Light when operating in hot weather or longer climbouts at low speed. This indication gives the pilot the opportunity to keep the engine from possibly overheating by doing the following:

i) decrease rate of climb

ii) increase airspeed

iii) reduce power, if the engine temperatures approach the red range.

Should the seldom case occur that the fuel temperature is rising into the yellow or red range, switch to the other tank or to the BOTH position, if installed.

This page intentionally left blank

SECTION 5
PERFORMANCE

SAMPLE PROBLEM

The following sample flight problem utilizes information from the various tables and diagrams of this section to determine the predicted performance data for a typical flight.
Assume the following information has already been determined:

AIRPLANE CONFIGURATION

Takeoff Weight ..... 1043 kg
Usable Fuel ..... 120.0 l (31.7 US gal)

TAKEOFF CONDITIONS

Field Pressure Altitude ..... 1000 ft
Temperature ..... 28°C (ISA +15°C)
Wind Component along Runway ... 12 Knot Headwind
Field Length ..... 1067 m (3500 ft)

CRUISE CONDITIONS

Total Distance ..... 841 km (400 NM)
Pressure Altitude ..... 6000 ft
Temperature ..... 23°C (ISA + 20°C)
Expected Wind Enroute ..... 10 Knot Headwind

LANDING CONDITIONS

Field Pressure Altitude ..... 2000 ft
Temperature ..... 25°C
Field Length ..... 914 m (3000 ft)

GROUND ROLL AND TAKE-OFF

The ground roll and take-off distance chart, Figure 5-1a ff (Ground Roll and Take-off Distance), should be consulted, keeping in mind that distances shown are based on the short field technique. Conservative distances can be established by reading the chart at the next higher value of weight, temperature and altitude. For example, in this particular sample problem, the takeoff distance information presented for a weight of 1,043 kg, pressure altitude of 1000 ft and a temperature of 30°C should be used and results in the following:

Ground Roll.....283 m (927 ft)

Total Distance to clear a 15 m obstacle.....547 m (1793 ft)

These distances are well within the available takeoff field length. However, a correction for the effect of wind may be made based on Note 2 of the takeoff chart. The correction for a 12 Knot Headwind is:

$$\frac{12\ \text{Kt}}{9\ \text{Kt}} \times 10\ \% = 13\ \%\ \text{(Decrease)}$$

This results in the following distances, corrected for wind:

Ground Roll, zero wind	283 m (927 ft)
Decrease at 12 Knot Headwind (283m x 13%)=	- 37 m (121 ft)
Corrected Ground Roll	246 m (806 ft)

Total Distance to clear a 15 m obstacle, zero wind.....	547 m (1793 ft)
Decrease at 12 Knot Headwind (547 m x 13%)=	- 71 m (233 ft)
Corrected Total Distance to clear a 15 m obstacle	476 m (1560 ft)

CRUISE

The cruising altitude should be selected based on a consideration of trip length, winds aloft and the airplanes performance. A typical cruising altitude and the expected wind enroute have been given for this sample problem. However, the power setting selection for cruise must be determined based on several considerations. These include the cruise performance characteristics presented in Figures 5-4a ff. Considerable fuel savings and longer range result when lower power settings are used.

Figure 5-4b shows a range of 548 NM at zero wind, a power setting of 70% and altitude of 6,000 ft.

With an expected headwind of 10 Knot at 6,000 ft altitude the range has to be corrected as follows:

Range at zero wind (standard tanks) ..... 548 NM
Reduction due to Headwind.....(5.1 h x 10 Knots) = - 51NM
Corrected Range..... 497 NM

This shows that the flight can be performed at a power setting of approximately 70% with full tanks without an intermediate fuel stop.

Figure 5-4b is based on ISA conditions. For a temperature of 20°C above ISA temperature, according to Note 3, true airspeed and maximum range are increased by 2%.

The following values most nearly correspond to the planned altitude and expected temperature conditions. Engine Power setting chosen is 70%.

The resultants are:

Engine Power:.....70%
True Airspeed: .....102 kt + 2% = 104 kt
Fuel Consumption in cruise: .....18.6 l/h (4.9 US gal/h)

FUEL REQUIRED

The total fuel requirement for the flight may be estimated using the performance information in Figures 5-3 and 5-4. For this sample problem, Figure 5-3a shows that a climb from 1,000 ft to 6,000 ft requires 3.9 l (1.0 US gal) of fuel. The corresponding distance during the climb is 10.3 NM. These values are for a standard temperature and are sufficiently accurate for most flight planning purposes.
However, a further correction for the effect of temperature may be made as noted in Note 2 of the climb chart in Figure 5-3. An effect of 10°C above the standard temperature is to increase time and distance by 10%.

In this case, assuming a temperature 20°C above standard, the correction would be:

$$\frac{20\ °C}{10\ °C} \times 10\ \% = \quad 20\ \% \text{ (Increase)}$$

With this factor included, the fuel estimate would be calculated as follows:

Fuel to climb, standard temperature:
3.9 l (1.0 US gal)

Increase due to non-standard temperature:
3.9 l (1.0 US gal) x 20.0% = 0.8 l (0.2 US gal)

Corrected fuel to climb:
4.7 l (1.2 US gal)

Using a similar procedure for the distance to climb results in 12.4 NM.

The resultant cruise distance is:

Total Distance	400.0 NM
Climbout Distance	- 12.4 NM
Cruise Distance	387.6 NM

With an expected 10 Knot headwind, the ground speed for cruise is predicted to be:

104 Knot
- 10 Knot
94 Knot

Therefore, the time required for the cruise portion of the trip is:

$$\frac{387.6 \text{ NM}}{94 \text{ Kt}} = 4.1 \text{ hrs}$$

The fuel required for cruise is:

4.1 h x 18.6 l/h = 76.2 l (20.1 US gal)

The total estimated fuel required is as follows:

Engine Start, Taxi and Takeoff	4.0 l (1.1 US gal)
Climb	+ 4.7 l (1.2 US gal)
Cruise	+ 76.2 l (20.1 US gal)
Total fuel required	84.9 l (22.4 US gal)

This gives with full tanks a reserve of:

120.0 l (31.7 US gal)
- 84.9 l (22.4 US gal)
35.1 l (9.3 US gal)

Once the flight is underway, ground speed checks will provide a more accurate basis for estimating the time enroute and the corresponding fuel required.

LANDING DISTANCE

Refer to Pilot´s Operating Handbook

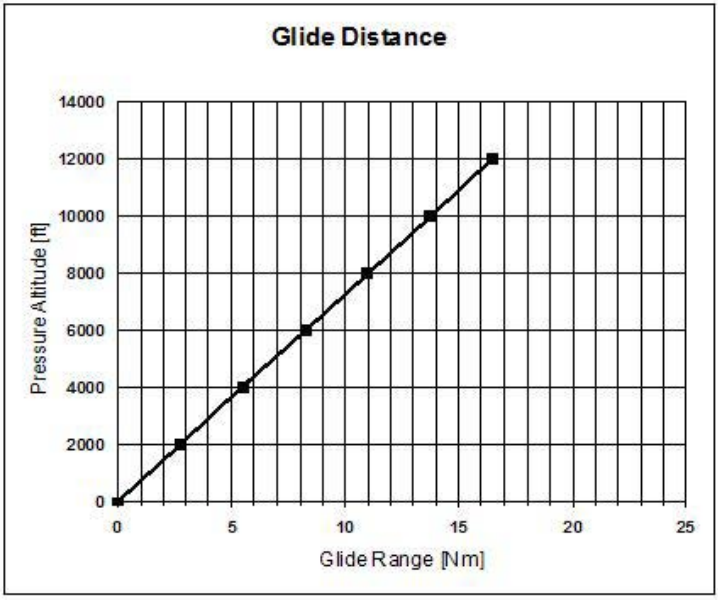


Figure 5-1 Maximum Glide at 73 KIAS/ 84 mph

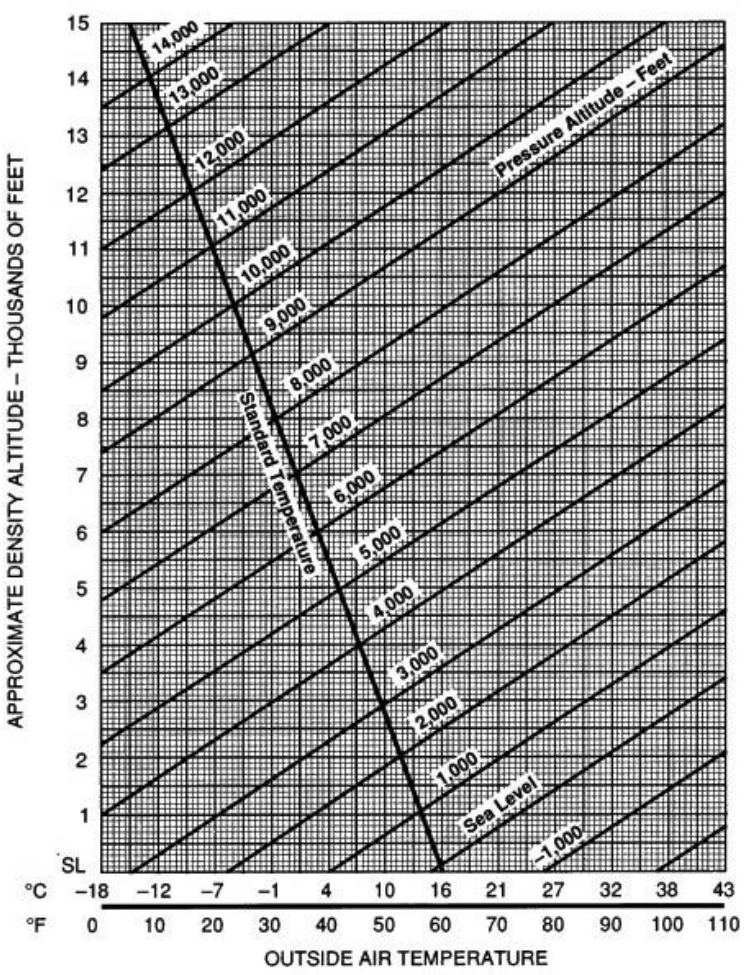


Figure 5-2 Density Altitude Chart

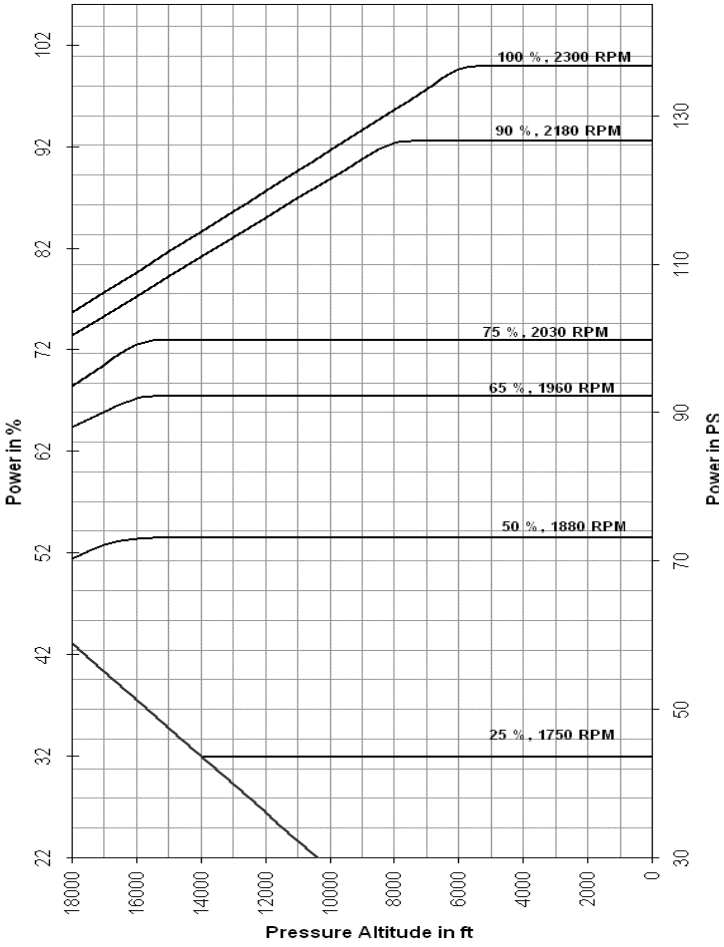


Figure 5-3 Engine Power Over Altitude

SECTION 5a
PERFORMANCE

◆ Note:	This chapter applies to aircraft with propellers **MTV-6-A/187-129**. The correct propeller designation can be found on the blades.

◆ Note:	The chapter not relevant to the respective propeller can be omitted.

GROUND ROLL AND TAKE-OFF DISTANCE
at 907 kg (2000 lbs)

SHORT FIELD TAKE-OFFS

Conditions:
Take-off weight 907 kg (2000 lbs)
Flaps 10°
Full Power Prior to Brake Release
Paved, level, dry runway
Zero Wind

Lift Off: .....44 KIAS/ 51 mph

Speed at 15 m / 50 ft: .....50 KIAS/ 58 mph

Notes:

1. Short field technique
2. Decrease distances 10% for each 9 Knot headwind. For operation with tailwinds up to 10 Knot increase distances by 10% for each 2 Knot.
3. For operation on dry, grass runway, increase distances by 15% of the "ground roll" figure.
4. Consider additional distances (min. 20%) for wet grass runway, softened ground or snow.

Press. alt	Ground Roll and Take-Off Distance [m] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	129	149	159	170	183	201	224
	15 m obst.	249	288	308	329	355	389	436
1000	Gnd Roll	138	160	171	182	196	215	240
	15 m obst.	267	308	330	353	380	417	467
2000	Gnd Roll	148	171	183	196	211	230	257
	15 m obst.	286	331	354	378	407	447	500
3000	Gnd Roll	159	183	196	210	226	247	275
	15 m obst.	307	354	379	405	437	479	536
4000	Gnd Roll	170	197	221	225	242	265	295
	15 m obst.	329	380	407	435	468	514	576
5000	Gnd Roll	183	211	226	242	260	285	317
	15 m obst.	353	408	437	467	503	552	618
6000	Gnd Roll	196	227	243	259	279	306	341
	15 m obst.	379	438	469	501	540	593	663
7000	Gnd Roll	218	251	269	287	309	339	377
	15 m obst.	421	486	520	556	599	657	736
8000	Gnd Roll	241	279	298	319	343	375	418
	15 m obst.	467	539	577	617	665	729	816
9000	Gnd Roll	268	309	331	354	381	417	464
	15 m obst.	519	600	641	685	739	810	907
10000	Gnd Roll	298	344	368	393	423	463	516
	15 m obst.	577	667	714	763	822	902	1010

Figure 5-1a Ground Roll and Take-Off Distance [m] at take-off weight 907 kg (2000 lbs)

Press. alt	Ground Roll and Take-Off Distance [ft] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	423	489	523	559	601	658	733
	50 ft obst.	817	944	1010	1079	1163	1276	1429
1000	Gnd Roll	453	524	560	599	644	705	786
	50 ft obst.	875	1011	1082	1156	1246	1367	1531
2000	Gnd Roll	486	561	600	642	691	756	842
	50 ft obst.	938	1084	1160	1239	1336	1466	1641
3000	Gnd Roll	521	602	644	688	741	810	903
	50 ft obst.	1006	1163	1244	1329	1432	1572	1759
4000	Gnd Roll	559	646	691	738	795	870	969
	50 ft obst.	1080	1247	1334	1426	1537	1686	1888
5000	Gnd Roll	600	693	741	792	853	933	1040
	50 ft obst.	1159	1339	1432	1531	1649	1810	2026
6000	Gnd Roll	644	744	796	851	916	1002	1117
	50 ft obst.	1244	1438	1538	1644	1771	1944	2176
7000	Gnd Roll	713	824	882	942	1015	1110	1237
	50 ft obst.	1380	1594	1705	1823	1964	2155	2413
8000	Gnd Roll	791	914	978	1045	1125	1231	1372
	50 ft obst.	1531	1769	1893	2023	2180	2392	2678
9000	Gnd Roll	878	1015	1086	1160	1249	1367	1523
	50 ft obst.	1702	1966	2103	2248	2422	2658	2976
10000	Gnd Roll	976	1128	1207	1290	1388	1519	1693
	50 ft obst.	1894	2188	2340	2501	2695	2958	3311

Figure 5-1b Ground Roll and Take-Off Distance [ft] at take-off weight 907 kg (2000 lbs)

GROUND ROLL AND TAKE-OFF DISTANCE
at 1043 kg (2300 lbs)

SHORT FIELD TAKE-OFFS

Conditions:
Take-off weight 1043 kg (2300 lbs)
Flaps 10°
Full Power Prior to Brake Release
Paved, level, dry runway
Zero Wind

Lift Off: .....48 KIAS/ 55 mph

Speed at 15 m / 50 ft: .....54 KIAS/ 62 mph

Notes:

1. Short field technique
2. Decrease distances 10% for each 9 Knot headwind. For operation with tailwinds up to 10 Knot increase distances by 10% for each 2 Knot.
3. For operation on dry, grass runway, increase distances by 15% of the "ground roll" figure.
4. Consider additional distances (min. 20%) for wet grass runway, softened ground or snow.

Press. alt	Ground Roll and Take-Off Distance [m] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	186	214	229	245	264	289	322
	15 m obst.	359	414	443	474	510	560	627
1000	Gnd Roll	199	230	246	263	283	309	345
	15 m obst.	384	444	475	507	547	600	672
2000	Gnd Roll	213	246	263	281	303	332	369
	15 m obst.	412	476	509	544	586	643	720
3000	Gnd Roll	228	264	282	302	325	356	396
	15 m obst.	441	510	546	583	628	690	772
4000	Gnd Roll	245	283	303	324	349	382	425
	15 m obst.	474	547	585	626	674	740	828
5000	Gnd Roll	263	304	325	348	374	410	456
	15 m obst.	508	587	628	672	724	794	889
6000	Gnd Roll	283	327	349	373	402	440	490
	15 m obst.	546	631	675	721	777	853	955
7000	Gnd Roll	313	362	387	413	445	487	543
	15 m obst.	605	699	748	800	862	946	1059
8000	Gnd Roll	347	401	429	458	494	540	602
	15 m obst.	672	776	830	888	956	1050	1175
9000	Gnd Roll	385	445	476	509	548	600	668
	15 m obst.	747	863	923	986	1063	1166	1306
10000	Gnd Roll	428	495	529	566	609	667	743
	15 m obst.	831	960	1027	1097	1183	1283	1453

Figure 5-1c Ground Roll and Take-Off Distance [m] at take-off weight 1043 kg (2300 lbs)

Press. alt	Ground Roll and Take-Off Distance [ft] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	609	703	752	804	866	947	1055
	50 ft obst.	1176	1359	1453	1553	1674	1837	2056
1000	Gnd Roll	652	753	806	861	927	1015	1131
	50 ft obst.	1260	1456	1557	1664	1793	1968	2203
2000	Gnd Roll	699	808	864	923	994	1088	1212
	50 ft obst.	1350	1560	1669	1784	1922	2109	2361
3000	Gnd Roll	749	866	926	990	1066	1166	1300
	50 ft obst.	1448	1673	1790	1913	2061	2262	2532
4000	Gnd Roll	804	929	994	1062	1143	1251	1394
	50 ft obst.	1554	1795	1920	2052	2211	2427	2717
5000	Gnd Roll	863	997	1067	1140	1227	1343	1497
	50 ft obst.	1668	1927	2061	2203	2374	2605	2916
6000	Gnd Roll	927	1071	1146	1225	1318	1443	1607
	50 ft obst.	1791	2069	2213	2366	2549	2797	3132
7000	Gnd Roll	1027	1186	1269	1356	1460	1598	1780
	50 ft obst.	1986	2294	2454	2623	2826	3101	3472
8000	Gnd Roll	1138	1315	1407	1504	1619	1772	1974
	50 ft obst.	2204	2546	2724	2911	3137	3442	3854
9000	Gnd Roll	1264	1460	1562	1670	1797	1967	2192
	50 ft obst.	2449	2830	3027	3235	3486	3826	4283
10000	Gnd Roll	1405	1623	1736	1856	1998	2186	2436
	50 ft obst.	2725	3149	3368	3600	3879	4257	4765

Figure 5-1d Ground Roll and Take-Off Distance [ft] at take-off weight 1043 kg (2300 lbs)

MAXIMUM RATE-OF-CLIMB at 1043 kg (2300 lbs)

Conditions:

Take-off weight 1043 kg (2300 lbs)
Climb speed v_y = 69 KIAS/ 79 mph
Flaps Up
Full Power

Notes:

1. For operation in air colder than this table provides, use coldest data shown.
2. For operation in air warmer than this table provides, use extreme caution.

PRESS ALT [FT]	Climb speed [KIAS]	Rate of Climb (ft/min) Temperature - °C				
		-20°C	0°C	+20°C	+40°C	+50°C
0	69	684	665	647	542	433
1000	69	675	656	638	532	422
2000	69	666	646	628	522	412
3000	69	656	636	618	511	401
4000	69	647	626	607	500	390
5000	69	637	616	596	489	379
6000	69	626	605	585	478	367
7000	69	592	570	550	444	335
8000	69	558	536	515	410	303
9000	69	523	500	479	376	271
10000	69	488	465	443	341	238
11000	69	453	429	407	306	205
12000	69	417	393	371	271	171
13000	69	381	357	334	236	138
14000	69	345	320	296	200	103
15000	69	308	283	259	163	69
16000	69	271	245	221	126	34
17000	69	234	207	182	89	-2
18000	69	196	169	143	51	-38

Figure 5-2a Maximum Rate of Climb ISA at take-off weight 1043 kg (2300 lbs)

TIME, FUEL AND DISTANCE TO CLIMB at 1043 kg (2300 lbs)

Conditions:

Take-off weight 1043 kg (2300 lbs)
Climb speed v_y = 69 KIAS/ 79 mph
Flaps Up
Full Power
Standard Temperature (ISA)

Notes:

1. Add 4 l (1.1 US gal) of fuel for engine start, taxi and takeoff allowance.
2. Increase time and distance by 10% for 10°C above standard temperature.
3. Distances shown are based on zero wind.
4. Time, distance and fuel required are only valid from the point where the airplane climbs at v_y = 69 KIAS.

Press. Alt. [ft]	OAT [°C]	Vy [KIAS]	ROC [FPM]	Time [MIN]	Distance [NM]	Fuel used [l]	Fuel used [US Gal]
0	15	69	653	0.0	0.0	0.0	0.0
1000	13	69	645	1.5	1.8	0.8	0.2
2000	11	69	637	3.1	3.7	1.5	0.4
3000	9	69	629	4.7	5.7	2.3	0.6
4000	7	69	621	6.3	7.7	3.1	0.8
5000	5	69	612	7.9	9.9	3.9	1.0
6000	3	69	603	9.5	12.1	4.7	1.2
7000	1	69	571	11.3	14.5	5.4	1.4
8000	-1	69	538	13.1	17.1	6.1	1.6
9000	-3	69	505	15.0	20.0	6.8	1.8
10000	-5	69	472	17.0	23.0	7.5	2.0
11000	-7	69	439	19.2	26.4	8.2	2.2
12000	-9	69	405	21.6	30.2	8.9	2.3
13000	-11	69	371	24.2	34.3	9.6	2.5
14000	-13	69	337	27.0	39.0	10.4	2.7
15000	-15	69	303	30.1	44.2	11.2	3.0
16000	-17	69	268	33.6	50.2	12.0	3.2
17000	-19	69	233	37.6	57.1	13.0	3.4
18000	-21	69	198	42.2	65.2	14.0	3.7

Figure 5-3a Time, Fuel and Distance to Climb at 1043 kg (2300 lbs)

CRUISE PERFORMANCE, RANGE AND ENDURANCE WITH STANDARD TANKS, Cessna 172 F,G,H at 1043 kg (2300 lbs)

Conditions:
Take-off weight 1043 kg (2300 lbs)
Flaps Up
Zero wind

Notes:

1. Endurance information is based on standard tanks with 114.3 l (30.2 US gal) usable fuel.
2. The table assumes 4 l (1.1 US gal) for startup and taxi; time, fuel and distance to climb 45 min. reserve.
3. Increase true airspeed (KTAS/mph)) and maximum range (NM) by 1% per 10°C above ISA temperature.
4. Cruise Power above 75% not recommended. For economic cruise set load 70% or less.

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
SL	100	115	132	29.5	7.8	343	3.0
SL	90	110	126	25.3	6.7	396	3.6
SL	80	104	120	21.7	5.7	451	4.3
SL	70	98	113	18.6	4.9	507	5.2
SL	60	91	104	15.8	4.2	565	6.2
SL	50	82	95	13.0	3.4	637	7.7
2000	100	117	134	29.5	7.8	347	2.9
2000	90	111	128	25.3	6.7	399	3.5
2000	80	106	122	21.7	5.7	454	4.2
2000	70	99	114	18.6	4.9	510	5.0
2000	60	92	106	15.8	4.2	569	6.1
2000	50	83	96	13.0	3.4	639	7.6
4000	100	119	137	29.5	7.8	350	2.8
4000	90	113	130	25.3	6.7	403	3.4
4000	80	107	124	21.7	5.7	458	4.1
4000	70	101	116	16.6	4.9	514	4.9
4000	60	93	107	15.8	4.2	572	5.9
4000	50	84	97	13.0	3.4	641	7.4
6000	100	121	139	29.5	7.8	354	2.7
6000	90	115	133	25.3	6.7	406	3.3
6000	80	109	126	21.7	5.7	461	4.0
6000	70	102	118	18.6	4.9	517	4.8
6000	60	95	109	15.8	4.2	574	5.8
6000	50	85	98	13.0	3.4	642	7.2
8000	90	117	135	25.3	6.7	410	3.1
8000	80	111	128	21.7	5.7	465	3.8
8000	70	104	120	18.6	4.9	520	4.6
8000	60	96	111	15.8	4.2	577	5.6
8000	50	86	99	13.0	3.4	643	7.0

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
10000	90	119	137	25.3	6.7	414	3.0
10000	80	113	130	21.7	5.7	468	3.7
10000	70	106	122	18.6	4.9	523	4.5
10000	60	97	112	15.8	4.2	579	5.4
10000	50	87	101	13.0	3.4	643	6.8
12000	80	115	132	21.7	5.7	472	3.5
12000	70	107	124	18.6	4.9	526	4.3
12000	60	99	114	15.8	4.2	581	5.2
12000	50	88	102	13.0	3.4	642	6.6
14000	80	117	134	21.7	5.7	475	3.3
14000	70	109	126	18.6	4.9	529	4.1
14000	60	100	115	15.8	4.2	582	5.0
14000	50	89	102	13.0	3.4	641	6.4

Figure 5-4a Cruise Performance, Range and Endurance with standard tanks F,G,H; 1043 kg (2300 lbs)

CRUISE PERFORMANCE, RANGE AND ENDURANCE WITH STANDARD TANKS, Cessna 172 I,K,L,M at 1043 kg (2300 lbs)

Conditions:
Take-off weight 1043 kg (2300 lbs)
Flaps Up
Zero wind

Notes:

1. Endurance information is based on standard tanks with 120.0 l (31.7 US gal) usable fuel.
2. The table assumes 4 l (1.1 US gal) for startup and taxi; time, fuel and distance to climb 45 min. reserve.
3. Increase true airspeed (KTAS/mph)) and maximum range (NM) by 1% per 10°C above ISA temperature.
4. Cruise Power above 75% not recommended. For economic cruise set load 70% or less.

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
SL	100	115	132	29.5	7.8	365	3.2
SL	90	110	126	25.3	6.7	421	3.8
SL	80	104	120	21.7	5.7	478	4.6
SL	70	98	113	18.6	4.9	537	5.5
SL	60	91	104	15.8	4.2	598	6.6
SL	50	82	95	13.0	3.4	673	8.2
2000	100	117	134	29.5	7.8	369	3.1
2000	90	111	128	25.3	6.7	425	3.7
2000	80	106	122	21.7	5.7	482	4.5
2000	70	99	114	18.6	4.9	541	5.4
2000	60	92	106	15.8	4.2	602	6.4
2000	50	83	96	13.0	3.4	675	8.0
4000	100	119	137	29.5	7.8	373	3.0
4000	90	113	130	25.3	6.7	429	3.6
4000	80	107	124	21.7	5.7	486	4.4
4000	70	101	116	18.6	4.9	545	5.2
4000	60	93	107	15.8	4.2	605	6.3
4000	50	84	97	13.0	3.4	678	7.8
6000	100	121	139	29.5	7.8	377	2.9
6000	90	115	133	25.3	6.7	432	3.5
6000	80	109	126	21.7	5.7	490	4.2
6000	70	102	118	18.6	4.9	548	5.1
6000	60	95	109	15.8	4.2	608	6.1
6000	50	85	98	13.0	3.4	679	7.7
8000	90	117	135	25.3	6.7	436	3.4
8000	80	111	128	21.7	5.7	494	4.1
8000	70	104	120	18.6	4.9	552	4.9
8000	60	96	111	15.8	4.2	611	6.0
8000	50	86	99	13.0	3.4	680	7.5

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
10000	90	119	137	25.3	6.7	440	3.2
10000	80	113	130	21.7	5.7	498	3.9
10000	70	106	122	18.6	4.9	555	4.8
10000	60	97	112	15.8	4.2	614	5.8
10000	50	87	101	13.0	3.4	681	7.3
12000	80	115	132	21.7	5.7	502	3.8
12000	70	107	124	18.6	4.9	559	4.6
12000	60	99	114	15.8	4.2	617	5.6
12000	50	88	102	13.0	3.4	681	7.1
14000	80	117	134	21.7	5.7	506	3.6
14000	70	109	126	18.6	4.9	562	4.4
14000	60	100	115	15.8	4.2	619	5.4
14000	50	89	102	13.0	3.4	680	6.8

Figure 5-4b Cruise Performance, Range and Endurance with standard tanks I,K,L,M; 1043 kg (2300 lbs)

CRUISE PERFORMANCE, RANGE AND ENDURANCE WITH LONG-RANGE TANKS Cessna 172 F-M at 1043 kg (2300 lbs)

Conditions:
Take-off weight 1043 kg (2300 lbs)
Flaps Up
Zero wind

Notes:

1. Endurance information is based on long-range tanks with 152.2 l (40.2 US gal) usable fuel.
2. The table assumes 4 l (1.1 US gal) for startup and taxi; time, fuel and distance to climb 45 min. reserve.
3. Increase true airspeed (KTAS/mph)) and maximum range (NM) by 1% per 10°C above ISA temperature.
4. Cruise Power above 75% not recommended. For economic cruise set load 70% or less.

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
SL	100	115	132	29.5	7.8	492	4.3
SL	90	110	126	25.3	6.7	561	5.1
SL	80	104	120	21.7	5.7	634	6.1
SL	70	98	113	18.6	4.9	708	7.2
SL	60	91	104	15.8	4.2	785	8.6
SL	50	82	95	13.0	3.4	879	10.7
2000	100	117	134	29.5	7.8	498	4.2
2000	90	111	128	25.3	6.7	568	5.0
2000	80	106	122	21.7	5.7	640	6.0
2000	70	99	114	18.6	4.9	714	7.1
2000	60	92	106	15.8	4.2	791	8.5
2000	50	83	96	13.0	3.4	884	10.5
4000	100	119	137	29.5	7.8	504	4.1
4000	90	113	130	25.3	6.7	574	4.9
4000	80	107	124	21.7	5.7	647	5.8
4000	70	101	116	18.6	4.9	721	7.0
4000	60	93	107	15.8	4.2	797	8.4
4000	50	84	97	13.0	3.4	889	10.3
6000	100	121	139	29.5	7.8	510	4.0
6000	90	115	133	25.3	6.7	581	4.8
6000	80	109	126	21.7	5.7	654	5.7
6000	70	102	118	18.6	4.9	727	6.8
6000	60	95	109	15.8	4.2	803	8.2
6000	50	85	98	13.0	3.4	893	10.2
8000	90	117	135	25.3	6.7	587	4.7
8000	80	111	128	21.7	5.7	660	5.6
8000	70	104	120	18.6	4.9	734	6.7
8000	60	96	111	15.8	4.2	809	8.0
8000	50	86	99	13.0	3.4	896	10.0

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
10000	90	119	137	25.3	6.7	594	4.5
10000	80	113	130	21.7	5.7	667	5.4
10000	70	106	122	18.6	4.9	740	6.5
10000	60	97	112	15.8	4.2	815	7.9
10000	50	87	101	13.0	3.4	899	9.8
12000	80	115	132	21.7	5.7	674	5.3
12000	70	107	124	18.6	4.9	747	6.3
12000	60	99	114	15.8	4.2	820	7.7
12000	50	88	102	13.0	3.4	901	9.6
14000	80	117	134	21.7	5.7	680	5.1
14000	70	109	126	18.6	4.9	753	6.2
14000	60	100	115	15.8	4.2	825	7.5
14000	50	89	102	13.0	3.4	902	9.3

Figure 5-4c Cruise Performance, Range and Endurance with long range tanks, 1043 kg (2300 lbs)

This page intentionally left blank

SECTION 5b
PERFORMANCE

◆ Note:	This chapter applies to aircrafts with propellers **MTV-6-A/190-69** and TAE 125-02-99 installation. The correct propeller designation can be found on the blades.

◆ Note:	The chapter not relevant to the respective propeller can be omitted.

GROUND ROLL AND TAKE-OFF DISTANCE
at 907 kg (2000 lbs)

SHORT FIELD TAKE-OFFS

Conditions:
Take-off weight 907 kg (2000 lbs)
Flaps 10°
Full Power Prior to Brake Release
Paved, level, dry runway
Zero Wind

Lift Off: .....44 KIAS/ 51 mph

Speed at 15 m / 50 ft: .....50 KIAS/ 58 mph

Notes:

1. Short field technique
2. Decrease distances 10% for each 9 Knot headwind. For operation with tailwinds up to 10 Knot increase distances by 10% for each 2 Knot.
3. For operation on dry, grass runway, increase distances by 15% of the "ground roll" figure.
4. Consider additional distances (min. 20%) for wet grass runway, softened ground or snow.

Press. alt	Ground Roll and Take-Off Distance [m] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	122	141	151	162	173	191	215
	15 m obst.	227	262	281	302	322	356	402
1000	Gnd Roll	131	151	162	174	186	204	230
	15 m obst.	243	281	301	323	345	381	431
2000	Gnd Roll	140	162	174	187	199	219	247
	15 m obst.	261	301	323	347	370	408	462
3000	Gnd Roll	151	174	186	200	214	235	264
	15 m obst.	280	323	346	372	397	438	496
4000	Gnd Roll	162	187	200	215	229	252	284
	15 m obst.	300	347	371	399	426	470	532
5000	Gnd Roll	173	200	215	230	246	271	305
	15 m obst.	322	372	398	428	457	504	571
6000	Gnd Roll	186	215	230	247	264	291	327
	15 m obst.	346	400	428	460	491	542	613
7000	Gnd Roll	206	238	255	274	292	322	362
	15 m obst.	383	443	474	509	544	600	697
8000	Gnd Roll	228	264	283	303	324	356	401
	15 m obst.	425	491	526	565	603	666	753
9000	Gnd Roll	253	292	313	336	359	395	444
	15 m obst.	471	545	583	626	669	738	835
10000	Gnd Roll	281	324	347	373	398	438	492
	15 m obst.	523	604	647	695	742	819	926

Figure 5-1a Ground Roll and Take-Off Distance [m] at take-off weight 907 kg (2000 lbs)

Press. alt	Ground Roll and Take-Off Distance [ft] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	401	464	496	533	569	626	704
	50 ft obst.	745	861	922	990	1057	1167	1320
1000	Gnd Roll	430	497	532	571	609	671	755
	50 ft obst.	798	922	987	1060	1132	1250	1414
2000	Gnd Roll	461	532	570	612	653	719	809
	50 ft obst.	855	988	1058	1137	1213	1340	1516
3000	Gnd Roll	494	571	611	656	700	771	867
	50 ft obst.	917	1060	1135	1219	1301	1437	1625
4000	Gnd Roll	530	612	656	704	751	827	931
	50 ft obst.	984	1137	1218	1308	1396	1541	1744
5000	Gnd Roll	569	657	704	756	807	888	999
	50 ft obst.	1056	1221	1307	1404	1499	1655	1872
6000	Gnd Roll	611	706	756	812	866	953	1073
	50 ft obst.	1135	1311	1404	1508	1609	1777	2010
7000	Gnd Roll	677	782	837	898	959	1056	1188
	50 ft obst.	1257	1453	1556	1671	1784	1969	2228
8000	Gnd Roll	749	866	927	995	1062	1169	1315
	50 ft obst.	1394	1611	1724	1852	1977	2183	2470
9000	Gnd Roll	830	959	1027	1102	1177	1295	1457
	50 ft obst.	1546	1786	1912	2054	2193	2421	2739
10000	Gnd Roll	920	1063	1138	1222	1304	1436	1615
	50 ft obst.	1715	1982	2122	2279	2433	3686	3039

Figure 5-1b Ground Toll and Take-Off Distance [ft] at take-off weight 907 kg (2000 lbs)

GROUND ROLL AND TAKE-OFF DISTANCE
at 1043 kg (2300 lbs)

SHORT FIELD TAKE-OFFS

Conditions:
Take-off weight 1043 kg (2300 lbs)
Flaps 10°
Full Power Prior to Brake Release
Paved, level, dry runway
Zero Wind

Lift Off: .....48 KIAS/ 55 mph

Speed at 15 m / 50 ft: .....54 KIAS/ 62 mph

Notes:

1. Short field technique
2. Decrease distances 10% for each 9 Knot headwind. For operation with tailwinds up to 10 Knot increase distances by 10% for each 2 Knot.
3. For operation on dry, grass runway, increase distances by 15% of the "ground roll" figure.
4. Consider additional distances (min. 20%) for wet grass runway, softened ground or snow.

Press. alt	Ground Roll and Take-Off Distance [m] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	176	203	218	234	250	275	309
	15 m obst.	327	378	404	434	464	512	579
1000	Gnd Roll	189	218	233	250	267	294	331
	15 m obst.	350	405	433	465	497	548	620
2000	Gnd Roll	202	234	250	268	287	315	355
	15 m obst.	375	434	464	499	532	588	665
3000	Gnd Roll	217	250	268	288	307	338	381
	15 m obst.	402	465	498	535	571	630	713
4000	Gnd Roll	233	269	288	309	330	363	408
	15 m obst.	432	499	534	574	613	676	765
5000	Gnd Roll	250	288	309	332	354	389	438
	15 m obst.	464	536	573	616	657	726	821
6000	Gnd Roll	268	310	332	356	380	418	471
	15 m obst.	498	575	616	661	706	780	882
7000	Gnd Roll	297	343	367	394	421	463	521
	15 m obst.	552	637	682	733	783	864	977
8000	Gnd Roll	329	380	407	437	466	513	577
	15 m obst.	612	707	757	813	867	958	1084
9000	Gnd Roll	364	421	451	484	516	568	639
	15 m obst.	678	784	839	901	962	1062	1202
10000	Gnd Roll	404	466	499	536	572	630	709
	15 m obst.	752	869	931	1000	1067	1179	1333

Figure 5-1c Ground Roll and Take-Off Distance [m] at take-off weight 1043 kg (2300 lbs)

Press. alt	Ground Roll and Take-Off Distance [ft] Outside Air Temperature [°C]							
[ft]	---	-20°C	0°C	10°C	20°C	30°C	40°C	50°C
0	Gnd Roll	577	667	714	767	818	901	1014
	50 ft obst.	1072	1239	1326	1425	1521	1679	1900
1000	Gnd Roll	619	715	765	821	877	965	1086
	50 ft obst.	1149	1327	1421	1526	1629	1799	2035
2000	Gnd Roll	663	766	820	881	940	1034	1164
	50 ft obst.	1231	1422	1523	1636	1746	1928	2181
3000	Gnd Roll	711	821	880	944	1008	1109	1248
	50 ft obst.	1320	1525	1633	1754	1873	2068	2339
4000	Gnd Roll	763	881	944	1013	1081	1190	1339
	50 ft obst.	1416	1637	1752	1882	2009	2218	2510
5000	Gnd Roll	819	946	1013	1087	1161	1278	1437
	50 ft obst.	1520	1757	1881	2020	2157	2381	2694
6000	Gnd Roll	879	1016	1088	1168	1247	1372	1544
	50 ft obst.	1633	1887	2020	2170	2316	2557	2893
7000	Gnd Roll	974	1125	1204	1293	1380	1519	1709
	50 ft obst.	1809	2091	2239	2404	2567	2834	3206
8000	Gnd Roll	1078	1246	1334	1432	1528	1682	1893
	50 ft obst.	2006	2318	2482	2665	2845	3142	3554
9000	Gnd Roll	1195	1380	1478	1587	1693	1864	2097
	50 ft obst.	2225	2570	2752	2956	3156	3484	3942
10000	Gnd Roll	1324	1530	1638	1759	1877	2066	2325
	50 ft obst.	2468	2852	3053	3280	3501	3866	4373

Figure 5-1d Ground Roll and Take-Off Distance [ft] at take-off weight 1043 kg (2300 lbs)

MAXIMUM RATE-OF-CLIMB at 1043 kg (2300 lbs)

Conditions:

Take-off weight 1043 kg (2300 lbs)
Climb speed v_y = 69 KIAS/ 79 mph
Flaps Up
Full Power

Notes:

1. For operation in air colder than this table provides, use coldest data shown.
2. For operation in air warmer than this table provides, use extreme caution.

PRESS ALT [FT]	Climb speed [KIAS]	Rate of Climb (ft/min) Temperature - °C				
		-20°C	0°C	+20°C	+40°C	+50°C
0	69	771	757	736	642	521
1000	69	764	750	729	635	514
2000	69	757	743	721	627	506
3000	69	751	736	714	620	499
4000	69	744	729	706	612	491
5000	69	736	721	698	604	482
6000	69	729	713	690	595	474
7000	69	699	683	660	566	447
8000	69	668	652	629	537	419
9000	69	637	621	598	507	392
10000	69	607	590	566	477	364
11000	69	575	558	535	446	336
12000	69	544	527	503	416	307
13000	69	513	495	471	385	279
14000	69	481	463	438	354	250
15000	69	449	430	406	323	220
16000	69	416	397	373	291	191
17000	69	384	364	340	259	161
18000	69	351	331	306	227	131

Figure 5-2a Maximum Rate of Climb ISA at take-off weight 1043 kg (2300 lbs)

TIME, FUEL AND DISTANCE TO CLIMB at 1043 kg (2300 lbs)

Conditions:

Take-off weight 1043 kg (2300 lbs)
Climb speed v_y = 69 KIAS/ 79 mph
Flaps Up
Full Power
Standard Temperature (ISA)

Notes:

1. Add 4 l (1.1 US gal) of fuel for engine start, taxi and takeoff allowance.
2. Increase time and distance by 10% for 10°C above standard temperature.
3. Distances shown are based on zero wind.
4. Time, distance and fuel required are only valid from the point where the airplane climbs at v_y = 69 KIAS.

Press. Alt.	OAT	Vy	ROC	Time	Distance	Fuel used	
[ft]	[°C]	[KIAS]	[FPM]	[MIN]	[NM]	[l]	[US Gal]
0	15	69	747	0.0	0.0	0.0	0.0
1000	13	69	741	1.3	1.6	0.7	0.2
2000	11	69	735	2.7	3.2	1.3	0.4
3000	9	69	729	4.1	4.9	2.0	0.5
4000	7	69	723	5.4	6.7	2.7	0.7
5000	5	69	717	6.8	8.5	3.4	0.9
6000	3	69	711	8.2	10.5	4.0	1.1
7000	1	69	682	9.7	12.5	4.6	1.2
8000	-1	69	653	11.2	14.6	5.2	1.4
9000	-3	69	623	12.7	17.0	5.8	1.5
10000	-5	69	594	14.4	19.4	6.3	1.7
11000	-7	69	564	16.1	22.1	6.8	1.8
12000	-9	69	534	17.9	25.0	7.4	1.9
13000	-11	69	504	19.8	28.2	7.9	2.1
14000	-13	69	474	21.9	31.6	8.4	2.2
15000	-15	69	444	24.1	35.3	8.9	2.4
16000	-17	69	413	26.4	39.4	9.5	2.5
17000	-19	69	382	28.9	43.9	10.0	2.6
18000	-21	69	351	31.6	48.8	10.5	2.8

Figure 5-3a Time, Fuel and Distance to Climb at 1043 kg (2300 lbs)

CRUISE PERFORMANCE, RANGE AND ENDURANCE WITH STANDARD TANKS, Cessna 172 F,G,H at 1043 kg (2300 lbs)

Conditions:
Take-off weight 1043 kg (2300 lbs)
Flaps Up
Zero wind

Notes:

1. Endurance information is based on standard tanks with 114.3 l (30.2 US gal) usable fuel.
2. The table assumes 4 l (1.1 US gal) for startup and taxi; time, fuel and distance to climb 45 min. reserve.
3. Increase true airspeed (KTAS/mph)) and maximum range (NM) by 1% per 10°C above ISA temperature.
4. Cruise Power above 75% not recommended. For economic cruise set load 70% or less.

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
SL	100	117	135	29.5	7.8	351	3.0
SL	90	113	130	25.3	6.7	408	3.6
SL	80	108	124	21.7	5.7	468	4.3
SL	70	102	118	18.6	4.9	530	5.2
SL	60	96	110	15.8	4.2	596	6.2
SL	50	87	100	13.0	3.4	674	7.7
2000	100	120	138	29.5	7.8	355	2.9
2000	90	115	132	25.3	6.7	412	3.5
2000	80	110	126	21.7	5.7	473	4.2
2000	70	104	120	18.6	4.9	535	5.1
2000	60	97	112	15.8	4.2	601	6.1
2000	50	88	101	13.0	3.4	675	7.6
4000	100	122	140	29.5	7.8	360	2.8
4000	90	117	135	25.3	6.7	417	3.4
4000	80	112	129	21.7	5.7	478	4.1
4000	70	106	122	18.6	4.9	540	4.9
4000	60	99	114	15.8	4.2	605	6.0
4000	50	89	102	13.0	3.4	676	7.4
6000	100	124	143	29.5	7.8	364	2.7
6000	90	119	137	25.3	6.7	422	3.3
6000	80	114	131	21.7	5.7	482	4.0
6000	70	108	124	18.6	4.9	545	4.8
6000	60	100	115	15.8	4.2	609	5.8
6000	50	90	103	13.0	3.4	676	7.3
8000	90	122	140	25.3	6.7	427	3.2
8000	80	116	134	21.7	5.7	487	3.9
8000	70	110	126	18.6	4.9	549	4.7
8000	60	102	117	15.8	4.2	612	5.7
8000	50	90	104	13.0	3.4	674	7.1

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
10000	90	124	143	25.3	6.7	432	3.1
10000	80	118	136	21.7	5.7	492	3.8
10000	111	128	18.6	4.9	554	4.6	4.5
10000	60	103	119	15.8	4.2	616	5.6
10000	50	91	104	13.0	3.4	670	7.0
12000	90	126	145	25.3	6.7	437	3.0
12000	80	120	139	21.7	5.7	498	3.6
12000	70	113	130	18.6	4.9	559	4.4
12000	60	105	120	15.8	4.2	618	5.4
12000	50	90	104	13.0	3.4	661	6.8
14000	90	129	148	25.3	6.7	442	2.9
14000	80	123	141	21.7	5.7	503	3.5
14000	70	115	133	18.6	4.9	563	4.3
14000	60	106	122	15.8	4.2	621	5.2
14000	50	88	101	13.0	3.4	642	6.6

Figure 5-4a Cruise Performance, Range and Endurance with standard tanks F,G,H; 1043 kg (2300 lbs)

CRUISE PERFORMANCE, RANGE AND ENDURANCE WITH STANDARD TANKS, Cessna 172 I,K,L,M at 1043 kg (2300 lbs)

Conditions:
Take-off weight 1043 kg (2300 lbs)
Flaps Up
Zero wind

Notes:

1. Endurance information is based on standard tanks with 120.0 l (31.7 US gal) usable fuel.
2. The table assumes 4 l (1.1 US gal) for startup and taxi; time, fuel and distance to climb 45 min. reserve.
3. Increase true airspeed (KTAS/mph)) and maximum range (NM) by 1% per 10°C above ISA temperature.
4. Cruise Power above 75% not recommended. For economic cruise set load 70% or less.

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
SL	100	117	135	29.5	7.8	374	3.2
SL	90	113	130	25.3	6.7	433	3.8
SL	80	108	124	21.7	5.7	496	4.6
SL	70	102	118	18.6	4.9	561	5.5
SL	60	96	110	15.8	4.2	631	6.6
SL	50	87	100	13.0	3.4	712	8.2
2000	100	117	134	29.5	7.8	369	3.1
2000	90	111	128	25.3	6.7	425	3.7
2000	80	106	122	21.7	5.7	482	4.5
2000	70	99	114	18.6	4.9	541	5.4
2000	60	92	106	15.8	4.2	602	6.4
2000	50	83	96	13.0	3.4	675	8.0
4000	100	122	140	29.5	7.8	383	3.0
4000	90	117	135	25.3	6.7	443	3.6
4000	80	112	129	21.7	5.7	507	4.4
4000	70	106	122	18.6	4.9	572	5.3
4000	60	99	114	15.8	4.2	640	6.3
4000	50	89	102	13.0	3.4	715	7.9
6000	100	124	143	29.5	7.8	388	2.9
6000	90	119	137	25.3	6.7	449	3.5
6000	80	114	131	21.7	5.7	512	4.3
6000	70	108	124	18.6	4.9	578	5.1
6000	60	100	115	15.8	4.2	645	6.2
6000	50	90	103	13.0	3.4	716	7.7
8000	90	122	140	25.3	6.7	454	3.4
8000	80	116	134	21.7	5.7	518	4.2
8000	70	110	126	18.6	4.9	583	5.0
8000	60	102	117	15.8	4.2	649	6.1
8000	50	90	104	13.0	3.4	714	7.6

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
10000	90	124	143	25.3	6.7	460	3.3
10000	80	118	136	21.7	5.7	524	4.0
10000	70	111	128	18.6	4.9	588	4.9
10000	60	103	119	15.8	4.2	653	5.9
10000	50	91	104	13.0	3.4	710	7.4
12000	90	126	145	25.3	6.7	465	3.2
12000	80	120	139	21.7	5.7	529	3.9
12000	70	113	130	18.6	4.9	594	4.7
12000	60	105	120	15.8	4.2	656	5.8
12000	50	90	104	13.0	3.4	701	7.2
14000	90	129	148	25.3	6.7	471	3.1
14000	80	123	141	21.7	5.7	535	3.8
14000	70	115	133	18.6	4.9	599	4.6
14000	60	106	122	15.8	4.2	659	5.6
14000	50	88	101	13.0	3.4	681	7.0

Figure 5-4b Cruise Performance, Range and Endurance with standard tanks I,K,L,M; 1043 kg (2300 lbs)

CRUISE PERFORMANCE, RANGE AND ENDURANCE WITH LONG-RANGE TANKS Cessna 172 F-M at 1043 kg (2300 lbs)

Conditions:

Take-off weight 1043 kg (2300 lbs)
Flaps Up
Zero wind

Notes:

1. Endurance information is based on long-range tanks with 152.2 l (40.2 US gal) usable fuel.
2. The table assumes 4 l (1.1 US gal) for startup and taxi; time, fuel and distance to climb 45 min. reserve.
3. Increase true airspeed (KTAS/mph)) and maximum range (NM) by 1% per 10°C above ISA temperature.
4. Cruise Power above 75% not recommended. For economic cruise set load 70% or less.

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
SL	100	117	135	29.5	7.8	502	4.3
SL	90	113	130	25.3	6.7	577	5.1
SL	80	108	124	21.7	5.7	656	6.1
SL	70	102	118	18.6	4.9	739	7.2
SL	60	96	110	15.8	4.2	826	8.6
SL	50	87	100	13.0	3.4	927	10.7
2000	100	120	138	29.5	7.8	509	4.2
2000	90	115	132	25.3	6.7	584	5.0
2000	80	110	126	21.7	5.7	665	6.0
2000	70	104	120	18.6	4.9	747	7.1
2000	60	97	112	15.8	4.2	834	8.5
2000	50	88	101	13.0	3.4	932	10.5
4000	100	122	140	29.5	7.8	516	4.1
4000	90	117	135	25.3	6.7	592	4.9
4000	80	112	129	21.7	5.7	673	5.9
4000	70	106	122	18.6	4.9	756	7.0
4000	60	99	114	15.8	4.2	842	8.4
4000	50	89	102	13.0	3.4	936	10.4
6000	100	124	143	29.5	7.8	524	4.0
6000	90	119	137	25.3	6.7	600	4.8
6000	80	114	131	5.7	681	5.8	5.7
6000	70	108	124	18.6	4.9	764	6.9
6000	60	100	115	15.8	4.2	849	8.2
6000	50	90	103	13.0	3.4	938	10.2
8000	90	122	140	25.3	6.7	609	4.7
8000	80	116	134	21.7	5.7	690	5.6
8000	70	110	126	18.6	4.9	773	6.7
8000	60	102	117	15.8	4.2	856	8.1
8000	50	90	104	13.0	3.4	938	10.0

Press. Alt.	Load	Speed		Fuel Flow		Distance	Endu-rance Time
[ft]	[%]	[KTAS]	[mph]	[l/h]	[US Gal/h]	[NM]	[Hrs]
10000	90	124	143	25.3	6.7	617	4.6
10000	80	118	136	21.7	5.7	699	5.5
10000	70	111	128	18.6	4.9	781	6.6
10000	60	103	119	15.8	4.2	863	8.0
10000	50	91	104	13.0	3.4	934	9.9
12000	90	126	145	25.3	6.7	626	4.5
12000	80	120	139	21.7	5.7	708	5.4
12000	70	113	130	18.6	4.9	790	6.5
12000	60	105	120	15.8	4.2	869	7.8
12000	50	90	104	13.0	3.4	924	9.7
14000	90	129	148	25.3	6.7	635	4.4
14000	80	123	141	21.7	5.7	717	5.3
14000	70	115	133	18.6	4.9	798	6.3
14000	60	106	122	15.8	4.2	875	7.6
14000	50	88	101	13.0	3.4	899	9.5

Figure 5-4c Cruise Performance, Range and Endurance with long range tanks, 1043 kg (2300 lbs)

This page intentionally left blank

SECTION 6
APPENDIX

▲ **WARNING:**	Do not start the engine in any case when filling levels are below the corresponding minimum marking.
■ CAUTION:	Normally, a refill of coolant or gearbox oil between service intervals is not necessary. In case of low coolant or gearbox oil levels, inform the maintenance company immediately.

ENGINE OIL

Both engine variants are filled with 4.5 - 6 l engine oil (refer to section 1 of this supplement for specification).
A dip stick is used to check the oil level. It is accessible by a flap on the upper right-hand side of the engine cowling.
The drain screw is located on the lower left-hand outside of the oil pan, the oil filter is on the upper left-hand side of the housing.
The oil system has to be checked for sealing after the first 5 operating hours (visual inspection).
Checks and changes of oil and oil filter have to be performed regularly according to the engine Operation and Maintenance Manual. See OM-02-01 for the TAE 125-01 engine or OM-02-02 for the TAE 125-02 engine.
The Supplement of the Aircraft Maintenance Manual has to be considered as well. See AMM-20-01 for the TAE 125-01 engine or AMM-20-02 for the TAE 125-02 engine.

GEARBOX OIL

To ensure the necessary propeller speed, bothtboth engine variants arevariants are equipped with a reduction gearbox filled with gearbox oil (refer to section 1 of this supplement for specification).
The level can be checked through a viewing glass on the lower leading edge of the gearbox. To do so open the flap on the left front side of the engine cowling.
The drain screw is located at the lowest point of the gearbox. A filter is installed upstream of the pump, as well as microfilter in the Constant Speed Unit. Check the gearbox for sealing after the first 5 hours of operation (visual inspection). Regular checks as well as oil and filter changes have to be performed in accordance with the engine Operation and Maintenance Manual. See OM-02-01 for the TAE 125-01 engine or OM-02-02 for the TAE 125-02 engine.
The Supplement of the Aircraft Maintenance Manual has to be considered as well. See AMM-20-01 for the TAE 125-01 engine or AMM-20-02 for the TAE 125-02 engine.

▲	**WARNING:**	It is not allowed to start the engine with low gearbox oil level.

■	CAUTION:	Between scheduled maintenance topping up gearbox oil should not be necessary. If low gearbox oil level is detected, inform your service centre immediately.

FUEL

Both engine variants can be operated with kerosene (Jet A-1, Jet A, Fuel No. 3, JP-8, TS-1 [TAE 125-02-99 only]) or Diesel fuel.
Due to the higher specific density of engine fuel or Diesel in comparison to aviation gasoline (AVGAS) the permissible capacity for standard tanks was reduced as mentioned in Section 1.
Appropriate placards are attached near the fuel filler connections.
For temperature limitations refer to Section 2 "Limitations" and Section 4 "Normal Operation".

It is recommended to refuel before each flight and to enter the type of fuel into the log-book.

COOLANT

To cool the engine a liquid cooling system was installed with a water/approved radiator protection mixture at a ratio of 1:1.
A heat exchanger for cabin heating is part of the cooling system.
Check the cooling system for sealing after the first 5 hours of operation (visual inspection).
The coolant has to be changed in accordance with the engine Operation and Maintenance Manual. See OM-02-01 for the TAE 125-01 engine or OM-02-02 for the TAE 125-02 engine.
The Supplement of the Aircraft Maintenance Manual has to be considered as well. See AMM-20-01 for the TAE 125-01 engine or AMM-20-02 for the TAE 125-02 engine.

▲	**WARNING:**	It is not allowed to start the engine with low coolant level.

■	CAUTION:	Between scheduled maintenance topping-up coolant should not be necessary. If low coolant level is detected, inform your service centre immediately.

■ CAUTION.	The water has to satisfy the following requirements: 1. visual appearance: colorless, clear and no deposits allowed 2. pH-value: 6.5 to 8.5 3. maximum water hardness: 2.7 mmol/l 4. maximum hydrogen carbonate concentration: 100 mg/l 5. maximum chloride concentration: 100 mg/l 6. maximum sulfate concentration: 100 mg/l

◆ Note:	The freezing point of the coolant is -36°C.

◆ Note:	The waterworks also provide information. In general, tap water may be diluted with distilled water. Pure distilled water may not be used to mix with approved radiator protection.

WEIGHT & BALANCE

Item	Weight x Arm = Moment (lbs)	(in)	(lbs in)
Empty Weight			
plus Engine Oil (1.6 US gal at 7.5 lbs/US gal)		-12	
plus Gearbox Oil (0.26 US gal at 7.5 lbs/US gal)		-27	
plus unusable fuel standard tanks F,G,H (3 US gal at 6.7lbs/US gal) I,K,L,M (4 US gal at 6.7lbs/US gal)		46	
long-range tanks (4 US gal at 6.7lbs/US gal)		46	
plus Coolant (1 US gal at 8.3 lbs/ US gal)		-10	
Changes in Equipment			
Basic Empty Weight			

Figure 6-1 Calculating the Basic Empty Weight

		Your aircraft	
		Mass kg	Moment mkp
Calculation of the loaded condition	**1. Basic Empty Weight:** Use the values for your airplane with the present equipment. Unusable fuel, engine oil, gearbox oil and coolant are included.		
	2. Usable Fuel (at 0.84 kg/l), Standardtanks F,G,H (114.3 l max) Standardtanks I,K,L,M (120.0 l max) Long-range tanks (152.2 l max.)		
	3. Pilot and Front Passenger (Station 0.86 to 1.17 m)		
	4. Rear Passenger		
	5. *Baggage Area 1 or Passenger on the children's seat (Station 2.08 to 2.74; max.54kg)		
	6. *Baggage Area 2 (Station 2.74 to 3.61; max.23kg)		
	7. Ramp Weight and Moment		
	8. Fuel allowance for engine start, taxi and runup		
	9. Take-off Weight and Moment Shall not exceed the max. MTOW. (Subtract Step 8 from Step 7)		
	10.Locate this point in the weight and balance envelope in the original POH. Check if its within the envelope. *Maximum allowable combined weight capacity for Baggage Areas 1 and 2 is 54 kg.		

Figure 6-2 Calculating Weight and Moment

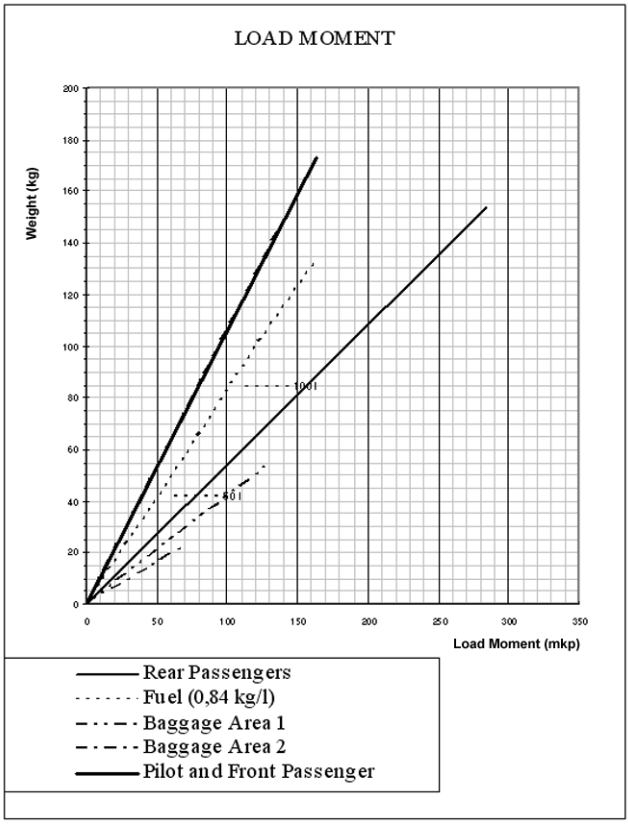


Figure 6-3 Load Moment

*max. usable Fuel standard tanks (I,K,L,M)
**max. usable Fuel long range tanks

This page intentionally left blank

SECTION 7
SUPPLEMENTS

TABLE OF CONTENTS

No supplements

This page intentionally left blank