PIPER

Mission:

Piper Make Solar House

SIDE B

Disassembly

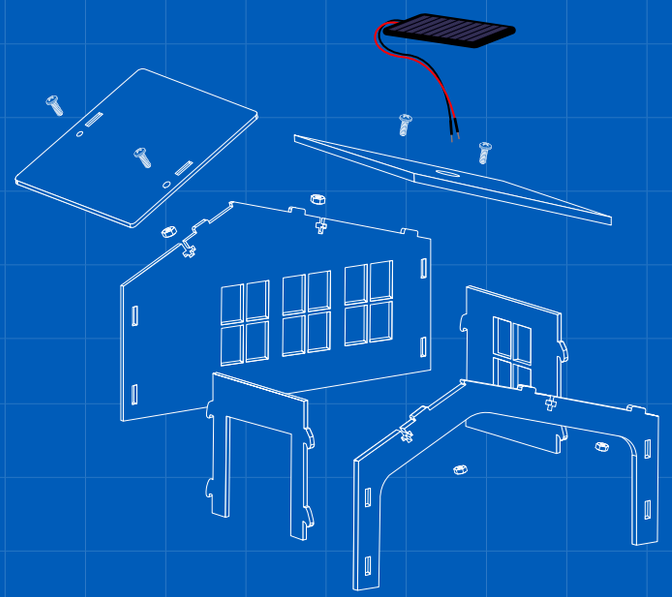

INVENTORY

1 Solar Panel	2 Side Walls
1 Large Roof Panel	4 Nuts
1 Small Roof Panel	4 #4-40 Screws
1 Back Wall	1 Capacitor
1 Front Wall	3 1M ohm Resistors

1

Remove Screws and Nuts then detach Roof pieces

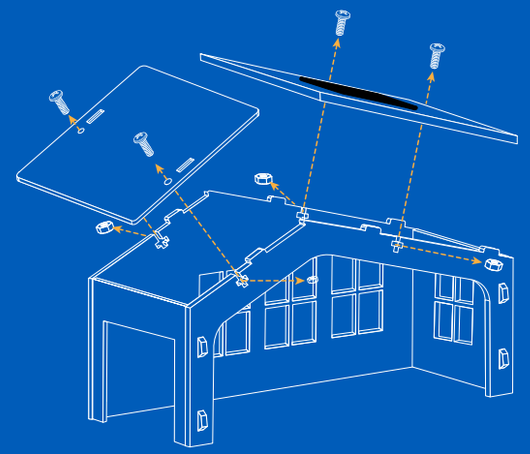

Place each item on its spot on the Component Sheet

2

Detach Solar Panel

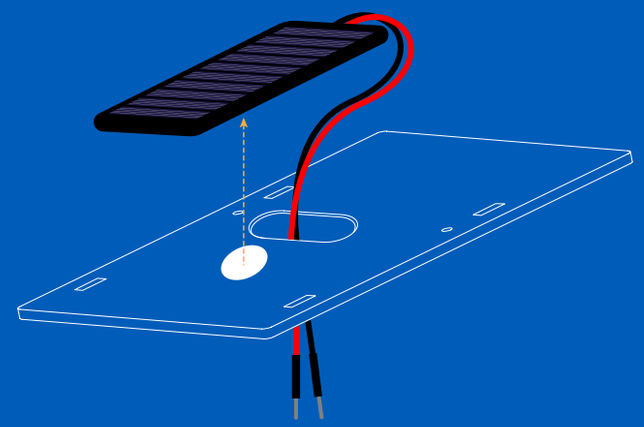

3

Disassemble house by tilting to slide the notches out of slots

DISASSEMBLY COMPLETE!

If not already done, place each piece on its spot in the Component Sheet

Piper Make Solar House - Version 1.0.1