
JETI Transmitters in OpenRCsimulator by bultodepapas

JETI transmitters uses USB HID mode when connected with USB cable to the PC. Transmitter is detected correctly in the simulator. Description is little bit longer, so the initial ‘J’ is missing.

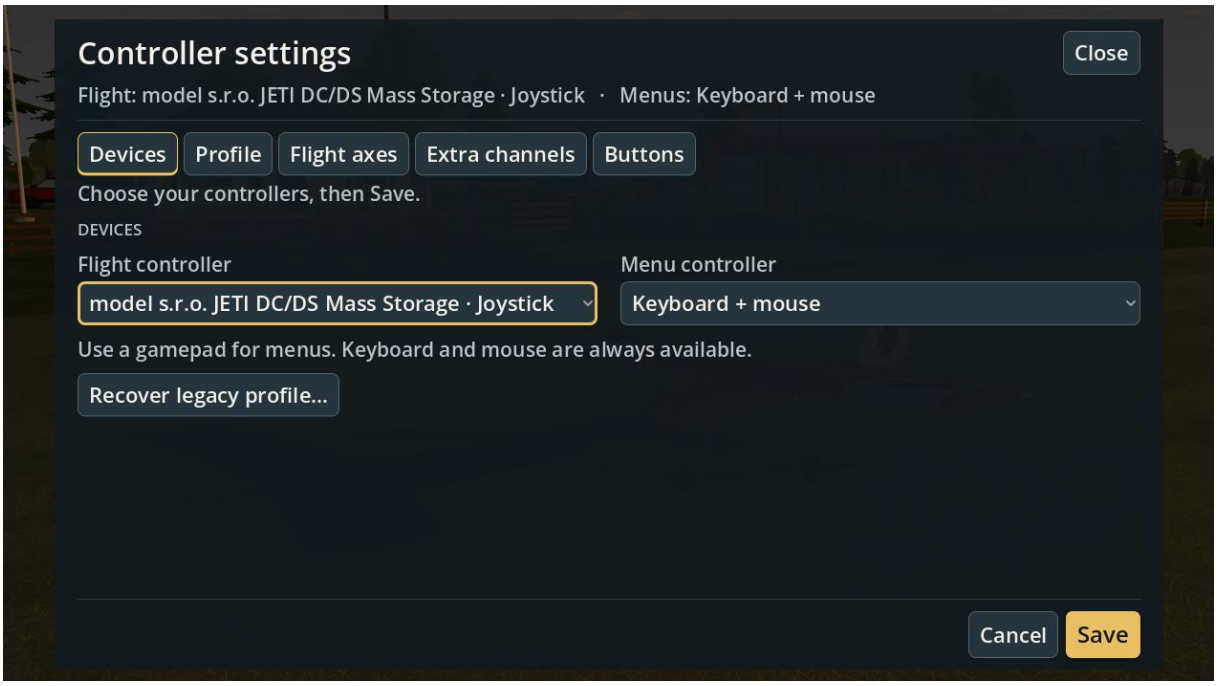


All control axes work out-of-box. No further config needed here. Default settings, as shown on the screenshot, corresponds to the ‘Mode 2’ on our transmitters. I am not a RC pilot, but I was able to take off and control the airplane. So far so good.




This is a little bit problematic, as should expected. Binding labels are from a controller and it is hard to link the description with physical switch on the transmitter. However, button

remapping works as it should. Since you can't identify the switch on the transmitter from the description, you may get a lot of conflicts at first. So, it is better to clear all assignments first and to do it again from scratch. Ideally a custom profile with real names corresponding to the transmitter should be available.

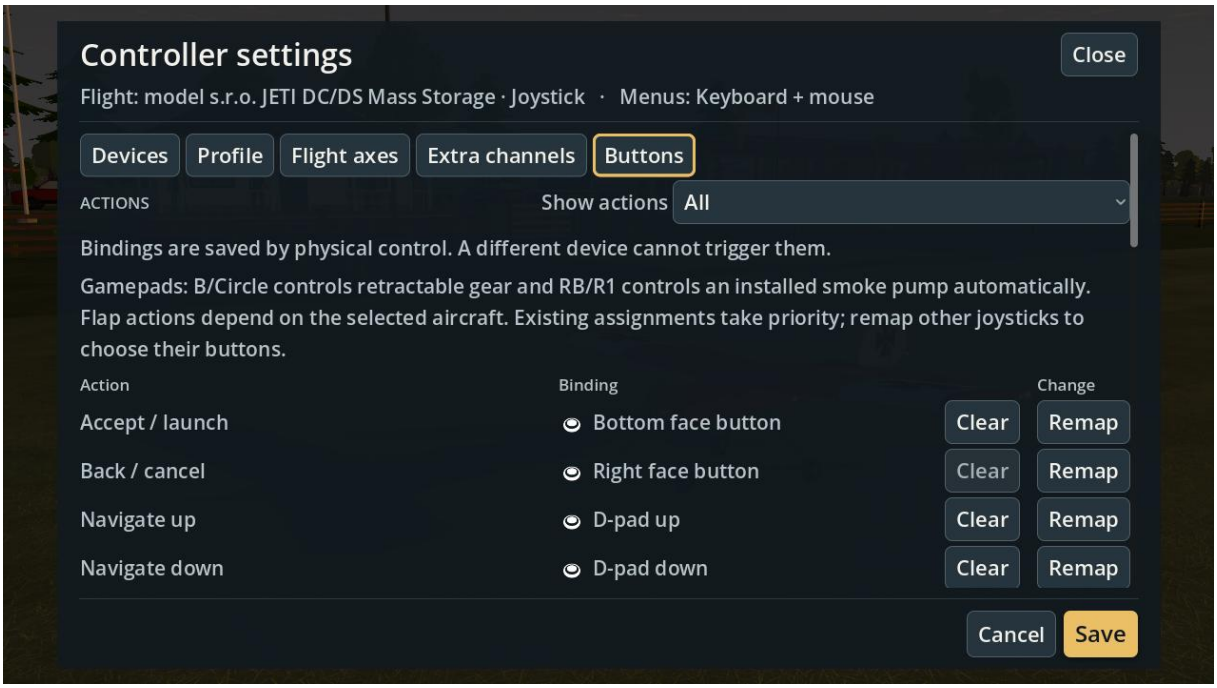

Below I will try to explain, how transmitter controls are mapped to the default windows controller testing tool. As an example, a DC-16II transmitter is given. There are 4 main axes and 4 potentiometers. These are mapped to the axes/rotation/sliders on the PC. On the transmitter there are several buttons/switches with prefix ‚S', for instance Sa…Sj. With our transmitter you have freedom to choose any type of switch on any position, therefore every switch is represented with 3 buttons on the HID protocol. In this ideology some of the buttons may end up unused when you use for example 2pos switch instead of 3pos. I hope it will be clearer from a screenshot below (from windows controller test tool). Switch 'Sa' is represented by 3 buttons on the controller, button 1-3. Button 1 is activated when 'Sa' is in 'up' state, button 2 when 'Sa' is in 'middle' state and button 3 when 'Sa' is in 'bottom' state. That means that buttons in each triplet are exclusive – only 1 of them will be active at a time.

If switch ‘Sa’ is 2pos switch, then only positions ‘up’ and ‘down’ will be available and position ‘middle’ (button 2) will be left unused. I hope the description will help you a little bit.

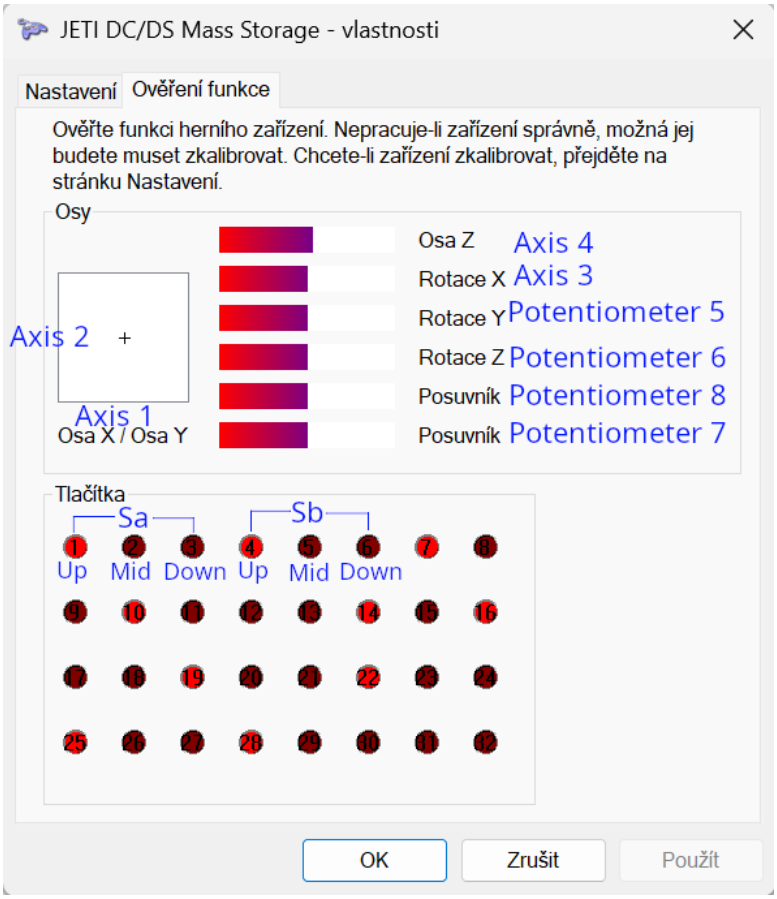


JETI model
dc-16
DUAL BAND RADIO CONTROL SYSTEM
Default
21%
Main Menu
Model
Fine Tuning
Advanced Properties
Timers/Sensors
Applications
THR
User
2.4GHz & 900MHz NG
SA
SB
SC
SD
SE
SF
SG
SH
SI
SJ
power
menu
esc
trim 3 - 4
trim 1 - 2
phones
duplex
CARBON LINE