
Manual for Benn Venn's SD Loader Card reader for the VZ/Laser/Seltron/Fellow/Texet

manual release v3.5 (Oct 2026)





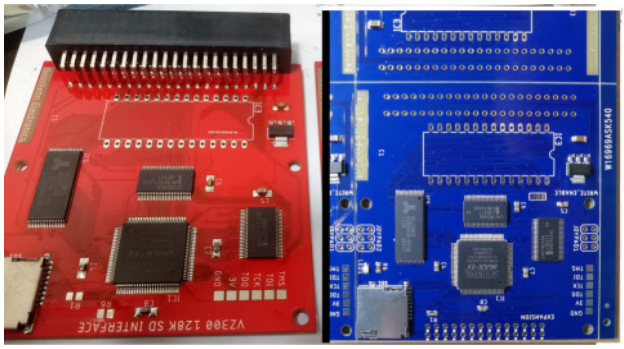

The old and new versions of the SD Loader.



Benn Venn Electronics SD Loader, encased in a black plastic housing, printed and supplied by Igor Kromin.

* Give your VZ200/VZ300 or equivalent a new lease on life with this SD card loader.
* Load .VZ snapshots instantly onto your system, supports both Binary and Basic files.
* Watch cool videos or play loads of games all on the one SD memory card.
* Includes 128kbytes of onboard sram to max out your VZ system.

Index

-Intro
-Installation
-Overview of the SD Card reader 'SD Loader' BIOS Operating System.
-2k (4k) units.
-Command Line Interface.
-Formatting the memory card.
-Commands:
    -HELP.
    -DIR - directory Listing.
    -CD - change directory.
    -LOAD - loading Files.
    -SAVE - saving Files.
    -JOY - enables the loaders joysticks I/O port.
    -NOJOY - disables the loaders joysticks I/O port.
-SD Card reader I/O Ports.
    -SNES Joy pads.
-Article "A Dick smith VZ200 without the dick smith"
    -review of the SD Loader
    -Adding a reset button to the SD Loader.
    -Implementing a ~56k serial Xmodem using the GPIO port.
-VZDOS routines, video and music fiddlings.
-About : The .VZ snapshot file.
-VZ Video – Notes from Ben.
-Resources.

Intro

In Aug 2019, Ben Grimmett, an avid 8-bit enthusiast and entrepreneur of all Gameboy Z80 8-bit things, along with being a previous VZ owner, announced to the Facebook VZ & Laser group that he would create a SD card reader, with its own operating system, for these computers. All of the VZ & Laser community jumped with joy to hear such a thing. Eight weeks later his beta SD card reader was in operation. 50 were initially produced and went up for sale, and, within days just about all of them were sold out. Moving forward through Covid and world wide lockdowns to around August 2022, Mark II release of the SD card reader was ready for production, and another forty were up for sale. With an updated and bug-fixed operating system, version 2.0 is back better than before.
Jan2026 : and a third batch are now currently available at the time of writing. Sold out.
https://bennvenn.myshopify.com/products/vz300-sd-loader
Sep2026 : and a fourth batch are now currently available.

With it also being designed with an 8-bit I/O port along with a port for Gameboy gamepad joystick things, it comes with 128KB of ram that is accessible via bank switched memory. Great for storing graphics screens for animation.

Installation

Depending on the supplied or installed expansion port (Straight or 90 degrees), the SD Loader is inserted into the VZ/Laser computer unit as shown in the below photos. At 90 degrees or laying flat. This gives easy user access to the little SD memory card slot that is located on the top right hand corner.





SD memory card insertion and removal

Insert the SD memory card with the pins either away from you, or facing down. Lightly push the card in all of the way, and you should be able to feel a small click whereby the internal slot mechanism clicks in and holds the little memory card firmly in place. To release, simply apply light pressure on the card as though you were pushing it in further, and you should feel another small click which indicates that the card is now unlocked, releasing pressure from off the memory card it should automatically feed out from the slot by an internal spring.
Please note that the SD card needs to be pre-configured, see elsewhere in this manual, or use the games card that is now supplied with your purchase.
With the SD Loader firmly in place, and the SD memory card also firmly in its little slot, turn your computer on. You will see a new boot screen indicating the firmware dos version (current version at the time of writing is 2.32), and that the memory card should have been detected.
If a message advises you that the card is not found, either try turning off the computer , re-inserting the card, and turning back on. OR that there is a problem with the card – either VZDOS.ROM is not installed, the SD memory card is formatted incorrectly, or that the SD memory card is faulty. And of these, any could easily be a likely factor without further investigation.

In a worse-case scenario if you are having issues, ask on the VZ Fans Facebook page, or contact Ben himself.

Overview of the SD Card reader Operating System

A number of new commands are offered with the SD Card loader/reader.
Loading of BASIC and Binary files, and saving BASIC files are possible.
128 KB of memory is offered via bank switching, split into two pages, mapped from 8000-FFFF.
An I/O port on the reader itself for Gameboy gamepad type joypads with plastic 'knockouts' around the controller ports and the expansion port within the plastic case. They can be snapped out if you wish to install controllers or the expansion header, or left in there for the stock look.

2k (4k) units

The Laser200, Saloria Fellow, Texet 8000A, early Laser210 and very early German/Sanyo VZ200's that came only with 2k user RAM with 2k Video RAM have a 4k gap within the addressing when used with the SD Loader without modification. As such total memory available will still only be 2k. Your SD Loader for the use on these computers will require a different firmware, available from Benn Venn Electronics.
The Loader was originally designed for a 6K user-ram VZ/Laser computers, and thusly the address gap will exist with these specific models. The firmware patch for the SD Loader for the use with these computers was released on the Facebook site under the files section on the 19th Nov 2022. Search for the name 'VZ300.POF' and it should be found. Once uploaded in to the Loader, this replaces the SD Loader's ram from 0x8000 to 0xFFFF, assuming only 2k of user ram is fitted above the 2k of video ram. It needs to be programmed with Altera/Intel USB Blaster. Talk directly to Ben should you need more information on this. These things are available from ebay for around au$6 at the time of writing Sep 2026. No idea what this equates to in UK pounds, or the Euro. Maybe 3 euro(?)
The .POF file that is required can be found here: "Selora 2k VZ300.POF"
https://github.com/bushy555/VZ200/tree/master/hardware/SDLOADER
This will fix your 4k computer to run the SD Loader.

Oct 2026: There has been a discovery that a 2k VZ200 with ROM 2.0 with the SD Loader still refuses to run a few specific games, and it could well still end up being bad ram / rom. At the time of writing this is still being investigated.

Plugging in the SD Loader, and typing the following, should show you your new total amount of RAM available to you in DOS BASIC. Note this does not indicate the extended RAM that is still available through the use of Bank switching.

Remove the SD Loader, and type this: PRINT PEEK(30897)+256*PEEK(30898)
Record the number. Then plug the SD Loader back in, and type it again. The number should have changed, indicating that you now have more user RAM memory.

The SD loader expands the 2+6kb 200/210 and the 2+16kb 300/310 out to 34kb of usable RAM (excluding video RAM). The same as if you had a factory VZ/Laser 64k RAM pack plugged in. Where is all of the other memory you ask? It is all tied up in bank switching, meaning that the 64k RAM pack has three more banks of RAM that can be selected and switched in & out at will. The SD Loader has seven additional banks of RAM – each bank being 16k in size.
The disappointment to all of this? : Only one chunk or bank of 16kb of all of this extra extended RAM goodness can only be accessed at any one time. It can be available from BASIC once top of memory and the stack pointer are moved down in memory, but is far easier to manipulate bank switching in assembly through port 112.

The card reader BIOS O/S firmware was designed around a SDHC class memory card being present. This means 2Gb or greater. 256,512meg & 1 gig cards wont work. The O/S uses the FAT32 file system which allows for up to a single 2Tb partition, however, Windows typically can only format up to a single 32Gb partition. Use third party partition tools to create a single 64 gig partition on a 64gig SD card.
Be aware when formatting your SD Card that the SD Loader project is expecting a MBR FAT32 format, and not a GUID FAT32 format. The difference in wording is subtle, but the physical format of the records, sectors, etc are vastly different. You may require a hex editor to wipe out the first few sectors on the SD Card in order to format the card successfully with a MBR FAT32 format.

-The saving of a BASIC file is limited to eight (8) characters within the filename.
-The directory listing has support for long filenames (greater than 8 characters), being displayed as '>'
-Sub directories are shown in the VZ/Laser's inverse colour.
-A small HELP screen is available from BASIC.

The SD new operating system commands are :

HELP	- shows a simple help page of commands.
DIR	- lists the files on the memory card.
CD"filename"	- Moves into the sub-directory named "filename"
LOAD"filename"	- Loads the program named "filename".
SAVE"filename"	- Saves the current program in memory as "filename"
JOY	- Enables the loaders joysticks I/O port (Default). Disables normal VZ joysticks.
NOJOY	- Disables the loaders joysticks I/O port, which enables normal VZ/Laser joysticks.

CLI - Command Line interface

During the boot process, pressing <SPACE> will allow you into the command line interface. A few extra commands are added to within the CLI, listed below, which are mostly for memory manipulation - moving and writing commands. These are a simple way to modify or enter data into memory. Type HELP for a list of commands.

Note, Ben has included key anti-bounce within his source, however, some key bouncing may still occur. Type slowly and carefully.

Commands within the CLI are :

HEXVIEW address(16)	: View memory locations.
WRITE destination:data	: Write directly to a memory location.
COPY src:dest:count	: Copy from scr to dest. an amount of memory.
FILL destination:val:count	: Fill an amount of memory with a constant.
JUMP address(16)	: Jump to an address in memory.
IN address(8)	: Read a byte value in from a port I/O address.
OUT address(8):data	: Write a byte value to a port I/O address.
BASIC	: Boot to BASIC
DIR	: Perform a directory listing.
LOAD filename	: Load in a file named filename.
RUN	: RUN a program in memory.
CLS	: Clear the screen.

Formatting the memory card

Take a 2 to 64 gig micro SD card, (Tested: 64GB SDXC) Plug it into an adapter, plug the adapter into your favourite operating system on your home computer, and format away the card. MBR FAT32. Not FAT or exFAT or NTFS.
Preference for formatting is to use a Windows operating system to format the memory card.
Both Linux and OSX FAT32 formats can be a little off, (clearly for this to be a known factor, these formats are not 100% compatible with Windows). Perhaps the newer versions of these Operating Systems use the newer GUID properties rather than old-school MBR. Unexpected results can potentially happen when reading/writing to the memory card, and corruption to both data and filenames, and even data loss is quite possible. For 100% confidence in things always working, always format the SD Card within a known operating system that can guarantee a MBR FAT32 format. Eg, 200% confidence is guaranteed when formatting is done by a clunky old Windows 7 system.
A note from Ben mentions that cluster size is important, even though it can handle clusters from 512bytes to 64kbytes. If the Cluster is larger than the file size, the O/S doesn't need to link chains.

I personally have found that the cluster size of 16KB has worked fine on a 2Gig and 64Gig SD cards, having stored well over 200 .VZ snapshot files in tens of sub-directories. Always nicely eject the SD card, otherwise data loss is quite possible if files in cache are still yet to be written. An ejection forces the writing and the closure of any files still in cache memory.

Upon power up the SD card will be initialised, FAT32 will be initialised. If VZDOS.VZ is found on the root directory, it will be copied to $4000 and executed. This allows the latest firmwares to be launched without reflashing the EPROM. BASIC is loaded by default. This is for both Mk I and Mk II Loaders.
From the Help : “IF VZDOS.VZ is found on the SD Card this new version of the BIOS will be loaded in placed of the default BIOS.”

Mark 1 SD Card reader loaders, find, download, and copy over the v2.0 operating system file ‘VZDOS.VZ’ on to your memory card to upgrade this particular SD Card reader to the latest version.
Mark II of the SD card readers were supplied with v2.0 of the firmware BIOS operating system. At the time of editing, v2.32 of ‘VZDOS.VZ’ is now available and should be copied to the root of your SD memory card.

On the Loader PCB there is a jumper which enables EEPROM re-writing which allows you to update the firmware version via CLOADing, and this will directly to the EEPROM. Once finished, the jumper can be removed to disable re-writing.

VZDOS.VZ : BIOS firmware for SD memory card.
VZDOS.BIN : BIOS firmware for EPROM/EEPROM programming.
VZDOS.OBJ : BIOS firmware for EPROM/EEPROM programming. (Same file as above .BIN)
VZDOS.WAV : BIOS firmware for cassette CLOAD’ing to the EEPROM once the jumper is set.
These files can be found within the files section of the VZ/ Laser Fans Facebook group.

For SD card readers that refuse to read memory cards correctly, try this fix:

Format Ultra 2Gb, 8Gb, 16Gb, 32Gb, 64gb micro sd card.
Use hex program "HxD". (https://mh-nexus.de/en/hxd/)
Load sd card physical drive
Go to top / offset 0.
zero out the entire Sector 0 of the physical memory card disk to wipe out the partitions.
Save drive.
Format normally. FAT32. select Default sector allocation.
Should work fine using SD loader DOS v2.32 “VZDOS.VZ”

An interesting feature to experiment with is the further use of the auto-boot ‘VZDOS.VZ’ file as an autostart program, which could be a selection menu, a game, or an auto boot graphics and music demonstration program. This is saved in a separate directory within the v2.0 SD ROM files; can be found on the mentioned github page below; this was a one off release by Ben for a specific issue but will work for any program as long as it is named TES2.DAT. (Or edit the firmware file with a hex editor, find this filename, and edit at will)

Operating System Commands

HELP
From version 2.0, typing in 'HELP' will give you a one/two page screen showing hints and tips.

Directory Listing
Type DIR to show the contents on the memory card. This will show 16 files and then stop advising you to press space to continue or press break to end the listing.
The directory listing will show long file names as > .
This is when a file is saved from Windows with a filename greater than eight characters.

Loading Files
On your home computer, scrounge the internet and download all of the .VZ snapshot files that you can find. Copy these over on to your SD memory card. Take the card and plug it into your VZ Card reader.
Perform a directory listing to see your files.
To load a particular basic or binary .VZ file, simply type :
LOAD "VZ FILE"
Note that the FAT32 system only allows for eight characters for the filename.
The operating system will detect if the file is basic (F0) or binary (F1). If it is a binary file, it will attempt to automatically execute the file. If it is a basic file, the file will load, but will leave you at DOS BASIC, allowing you to LIST or RUN the program, or CSAVE to tape as an example.

CD – change directory
The command CD will allow you to change from one directory to another.
CD"directory name" : will change from the current directory into the directory named "directory name"
CD".." : will change from the current directory, up one directory level.

Saving Files
SAVE"filename" will allow you to save BASIC programs in memory to the SD memory card.
Note that the file system only allows for a maximum of eight characters within the filename.
If you attempt to use nine or greater, a syntax error will occur.
If you attempt to save a file with the same filename that already exists on the memory card, the operating system will ask / confirm if you wish to overwrite. Nice touch Ben.

JOY
The JOY command will re-enable the SD loader's port allowing you to use your SD loader SNES/gamepad joysticks. See port 74 below.
By default upon power start up, the SD Loader will put the SNES game pad port in the VZ/Laser memory address space.

NOJOY
Use NOJOY if you want to use your own normal factory JS20/JS30 VZ/Laser/Salora joysticks.

The NOJOY command actually disables the SD loader SNES game pad port - it stops pushing its own joystick data into the joystick address space that will cause a data collision between both joysticks if the factory VZ/Laser JI20/JI30 interface is plugged in. See port 74 below.


Note: Sub directories need to be created on to the memory card from within the Windows operating system, (ie CMD → MD FILENAME). Or within Linux /OSX if this is working for you. (not overly recommended due to not being 110% FAT32 compatible)



‘breakout’ proto board

https://bennvenn.myshopify.com/products/vz300-sd-loader-expansion-proto-board

A ‘breakout’ proto board is now available for the SD Loader

Debug software for controlling the LEDs can be found on Cameron’s github listed below.

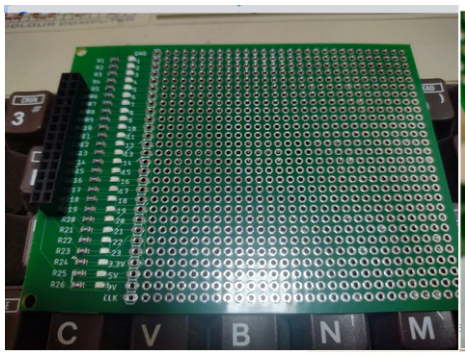

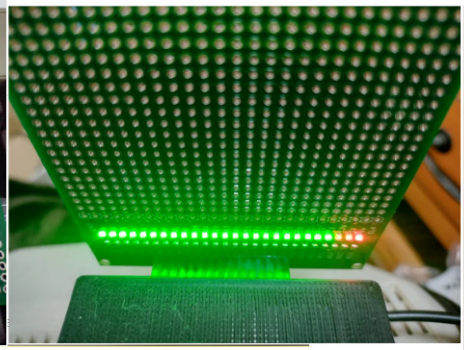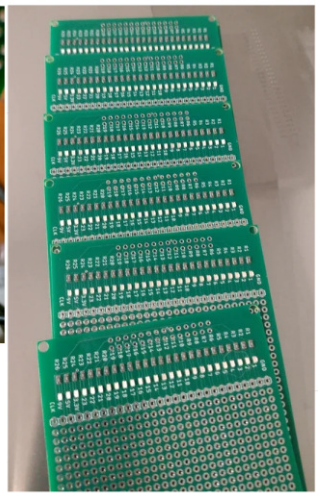SD Card reader I/O Ports

55	RAM map.	Set to 0 for VZ200 compatibility (RAM mapped from $9000-$FFFF Set to 1 for VZ300 compatibility (RAM mapped from $B800-$FFFF
	OUT 55, 8	Turns on the LED for testing. Led is controlled by bit 3.
	OUT 55, 0	Turns off the LED for testing.
56	SPI port CFG for SD interface.	
57	SPI port Data for SD interface.	
58	Bit0 = EPROM(0) or SRAM(1) mapped to DOS ROM AREA (Note, SRAM write is enabled even when EPROM is selected. This means you can code a loop to read and write from the DOS ROM area to copy itself into ram before switching to SRAM) Bit1 = SRAM BankLow - DOS ROM SRAM bank 0 or 1 ($4000-$67FF) Bit2 = SRAM BankHigh - SRAM Bank 0 or 1 (Expanded RAM up to $FFFF) Bit3 = on board LED if fitted. (If you mod your VZ's ROM /CS line, you can use this signal to disable the original ROM and map in SRAM allowing you to load BASIC rom's from SD card. This has not been implemented yet.	
74	Control the SD Loader’s Joypad SNES controlling interface. Enabled by default. OUT74,0 : Disable the SNES interface to allow OEM VZ joysticks on the OEM joystick interface. OUT74,1 : Enable the SNES controller interface. See JOY / NOJOY command.	

SNES Joypads

SNES pad IO addresses - The original VZ addresses are supported as well as the expanded joypad address space which gives you access to all 12 buttons on the SNES pad.


SNES pad I/O addresses. (All 12 buttons on the SNED pad are supported)


```
constant Cont1a          : integer := 46;
constant Cont1b          : integer := 45;
constant Cont2a          : integer := 43;
constant Cont2b          : integer := 39;
constant ContBa          : integer := 42;
constant ContBb          : integer := 37;
constant Joy1a           : integer := 64;
constant Joy1b           : integer := 65;
constant Joy2a           : integer := 66;
constant Joy2b           : integer := 67;
constant DDR0add         : integer := 68;
constant DDR1add         : integer := 69;
constant DDR2add         : integer := 70;
constant IO0add          : integer := 71;
constant IO1add          : integer := 72;
constant IO2add          : integer := 73;
constant JoyDisablePort  : integer := 74;
```

-The Cont ports are as the VZ hardware engineers intended, port values are decimal.
-JoyXY ports are 2 bytes each controller to map the full 12 bits of the SNES pad or 8 bits of the NES pad.
-DDRx is the IO port direction register, 0=output, 1=input for each pin.
-IOx is the Input/output port for each 8 bit IO port. You can read back the port even if it is set to an output to check the current state of the pin.

To check if the VZ/Laser joysticks or SNES pads are working, this simply program will show the input figures.

```
10 PRINT”LEFT:”;INP(43);INP(39);”RIGHT:”;INP(46);INP(45)
20 GOTO 10
```

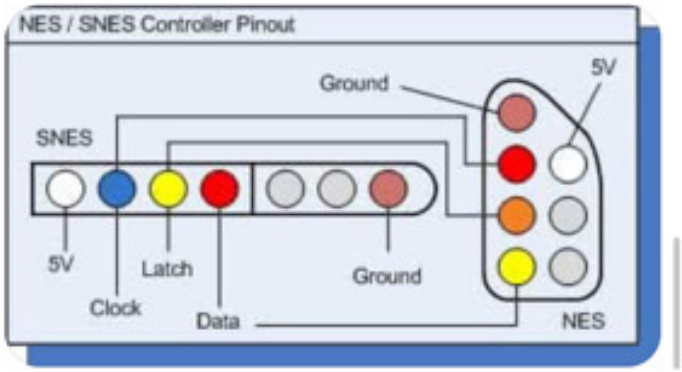


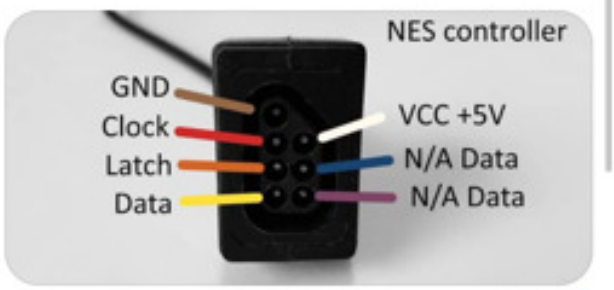


BENN VENN SD

BOARD VIEW
Component Side Connector Below
↓







CONTROLLER EXTENSION CABLE VIEW
Looking into the connector that you'll be plugging into

1 GND
2 +3V
3 Clock
4 NC
5 Latch
6 Data

PIN	SIGNAL	SNES	NES
1	GND	Brown	Brown
2	+3V	White	White
3	Clock	Blue	Red
4	Not Connected		
5	Latch	Yellow	Orange
6	Data	Red	Yellow

Please note: Your cable colours most likely will not match these unless you are using genuine SNES / NES parts. Always check with a multimeter

---

Taken from : Old Vintage Computing research: A Dick smith VZ200 without the dick smith (but with a serial port), by Cameron Kaiser.

https://oldvcr.blogspot.com/2026/09/a-dick-smith-vz200-without-dick-smith.html

In this article Cameron takes on an Aus VZ200 and a NTSC 2k VZ200 with the SD Loader.
He has written a number of utilities for the breakout board along with implementing a 56k serial modem utilising the I/O of the SD Loader, so its worth while adding it to this SD Loader manual.



Still, our prize for all that is ... the BennVenn board "just works" with this seppo VZ200, though I suspect this is the first time his board has ever been used with an American unit, and the TOM pointer is filled out all the way to 65535 as expected. It appears the cartridge thinks this machine is a Salora Fellow, a Finnish rebadge of the 4K PAL Laser 200 (by contrast, the Salora Manager is a Finnish rebadge of the CreatiVision-derived Laser 2001). This is determined by a simple memory map check in a snippet of its VHDL that Ben shared with me:

```
RAMarea300    <= '0' when (Address > x"B7FF" ) else '1'; --B800 or higher
RAMarea200    <= '0' when (Address > x"8FFF" ) else '1'; --9000 or higher
RAMareaSelora    <= '0' when (Address > x"7FFF" ) else '1'; --8000 or higher
```

This section checks the detected top of memory and sets certain flags to be able to fill the rest of the address space with RAM. The VZ-300 has the most onboard RAM ending at $b7ff, so the cartridge only adds on an extra 18K. On the other hand, the Fellow's memory space ends at $7fff, just like ours, so it gets an entire 32K to fill the remainder. The cartridge detects our memory map is the same as a Salora Fellow, so we also get the extra 32K, which is exactly what we want.

As we finish getting our system in order, there was one more modification I ended up doing out of concern for the workout I was giving its rocker power switch, especially when all I really wanted to do is merely reset the computer. (The BennVenn reader does not handle card re-insertion, even the same card, without a reset.) Like most CPUs of the time, the Z80 does not reset itself automatically when power is applied, so a small circuit in the VZ200 briefly pulls its reset line to ground when the power switch is first turned on. The length of time the reset line is grounded is determined by a single capacitor also connected on one side to ground. Once this capacitor fully charges, the reset line is pulled up to +5V and the chip continues operation.

Earlier VZ reset switches simply shorted this capacitor to discharge it, thus forcing the reset line to be grounded anew until the capacitor charged back up, and this particular modification was well-documented in Australian hobbyist magazines of the time. Unfortunately, although the TRM schematics label resistors and capacitors, the VZ200 board itself does not (or anything else), and the capacitor in question appears to have moved with the redesign of the board for PAL. I also couldn't think of a place to *put* the reset button, nor was I particularly enthusiastic about drilling a hole in the case to make one, first due to the questionable quality of the plastic itself and second for purposes of historical preservation of an unusual machine.

Happily we have another option, and it doesn't require altering the VZ200 at all: the expansion port itself has both reset and ground lines that go directly to the CPU. Recall from our wire-up of a Gremlin Blasto arcade board (where we had no reset circuit of any kind) that its 8080A CPU could be crudely reset by simply putting a pushbutton switch between its reset pin and ground. As the Z80 can serve as a drop-in upgrade for an 8080, it can be reset in the same way.




That means all we have to do is solder a pushbutton switch between the corresponding pins (i.e., pins 1 and 2) in the SD loader cartridge, in this orientation the farthest two from the SD card slot. One caution: don't get this backwards because even though pin 22 appears as N/C in the TRM, it's actually ground — and pin 21 is +5V.



However, not only do we have to modify the cartridge's case to make the switch accessible, but we also need to figure out some way of detaching the switch if we want to even open the case. For that, the wires I actually soldered to the pins go to two Dupont female jumpers. I then soldered the pushbutton to two Dupont male jumpers (polarity doesn't matter).



After that I drilled a second hole in the side of the cartridge case ...

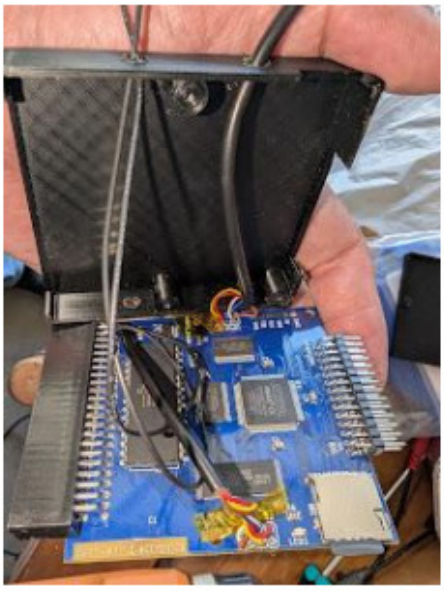

... and threaded the female jumpers out through it.



Last but not least, we connect the male jumpers to them. If we need to get back into the case, we just pull off the button switch and reattach it after.



Our complete upgraded system, with cartridge, joysticks and reset button, is ready to go. (Perhaps a reset button feature could be considered for a future revision of the SD loader.) That makes it time for a little tour of the system – which is where another, less tractable problem with this particular unit will emerge shortly.

Serial Modem

The serial modem project starts at about 3/4 of the way through the article.

The programs we wrote for this article and their assembler source code are all on Github, including pre-built binaries and ready-to-go Bush Food Loader "slushware" you can use with your own SD card loader, all of which are under the BSD 2-clause license.

https://github.com/classilla/bushfood
https://github.com/classilla/bushfood/releases

VZDOS routines, video and music fiddlings.

$5F00 - OpenFile
Description : opens selected file
In : reg HL = pointer to filename. Reg A = filehandle number. Starting typically at 1.
Call : call 5f00h
Jump table : 5ff0h

$5F03 - Select Handle
Description : Selects Handle. Loads first frame into the ram buffer.
In : a = filehandle number. Starting typically at 1.
Call : call 5f03h

$5F06 - DrawFrame
Description : Draw frame from buffer to video ram.
Call : call 5f06h
Jump table : 5FF6h

$5F09 - FAT NextSector
Description : Performs a sector read from the SD Card, then performs a fast copy of 512 bytes
: from 'ram buffer' to a destination memory location that is configurable ($FB80)
In : Word location at $FB80 is a "destination memory" location for the copy.
: Example : Setting $FB80 to $7000, copies a sector of 512 bytes over from the rambuffer to the value set at FB80, in this case, video screen (which is at $7000).
: This will copy a MODE(0) screen, or 512 bytes (one quarter) of MODE(1) screen.
: Second example, setting $FB80 to $B000, then calling $5F09, will copy 512 bytes from the RAM buffer, which all has its own internal pointers, to $B000, where you are then free to manipulate or further read from this location.
: This feature is used in the continuous video examples that have been released.
Call : Call $5F09

$5F15 - SEEK
Description : File Seek.
Call : Call $5F15.
In : 0=go back to the start of the file. Any other number will skip further into the file.
: calling seek twice with DE=10, will skip 20 sectors etc.
: This will let you seek up to 32mbytes into a DAT file per call.
: Ben says: "It could be a little faster but overall, it's not too bad. Maybe 1.5 seconds to seek 32mbytes into a file"

$5FF0 - Jump table
$5FF0 : OpenFile
$5FF3 : SD2VRAM
$5FF6 : DrawFrame
$5FF9 : Fat32_Root
? unsure if $5F15 has been added. : File Seek.

Example of video, taken from Ben's "AHAFAST" video.
"Take On Me", by Aha! is the groups unofficial music video by default. (…just go with it.)
Due to the auto loading of the first sector before the loop, we can start at $7200 instead of $7000, otherwise everything is 'out-of-whack' by 512bytes, and the video file would need to be further edited.

```
        SDbufferAddress equ 0FB80h
        FAT_NextSector  equ 05F09h

        org     7FE8h
        db      20h, 20h, 00h, 00h, 56h, 5Ah, 44h, 4Fh ; generic header
        db      53h, 00h, 00h, 00h, 00h, 00h, 00h, 00h
        db      00h, 00h, 00h, 00h, 00h, 0F1h,00h, 80h

        org     8000h

        ld      a,08H
        ld      (6800h),a               ;set hires mode
        ld      hl, FILENAME
        ld      a, 1
        call    $5f00                   ; OpenFile
        ld      a, 1
        call    $5f03                   ; SelectHandle - This loads the first frame
                                        ; into RAMbuffer, not VRAM! Add an extra sector
                                        ; to the DAT file, or copy from buffer to vram

infloop:ld      HL, 7200h
        ld      (SDbufferAddress), HL
        call    FAT_NextSector          ;512 bytes to vram
        ld      HL, 7400h
        ld      (SDbufferAddress), HL
        call    FAT_NextSector          ;512 bytes to vram
        ld      HL, 7600h
        ld      (SDbufferAddress), HL
        call    FAT_NextSector          ;512 bytes to vram
        ld      HL, 7000h
        ld      (SDbufferAddress), HL
        call    FAT_NextSector          ;512 bytes to vram
        jr      infloop
FILENAME:
        db      22h,"AHA",22h           ; filename to load
end
```

…and then you need to encode a video (eg, AHA) using the below technique over the page.

About : The .VZ snapshot file

The .VZ format was put together rather very quickly one night in 1999 by Brian Murray to get "something / anything" to work with Guy Thomason's upcoming new emulator to be able to load and save files. The format is a memory "snapshot" and not necessarily technically correct by any means. It is a legitimate true VZ enthusiast hacked-together format, that became the standard as it was the first slapped-together data format outside of the actual physical hardware. Purists should hate this format.
.CAS : This cassette file format came a little later but we may as say that noone uses.
.CVZ : Gavin Turner created his own .CVZ image for his DSVZ200 and WINVZ300 emulators.

The ".VZ" file format consists of a 24 byte header, and then followed by the program data.

```
typedef struct vzFile
{       byte vzmagic[4];
        byte filename[17];
        byte ftype;
        byte start_addrl;
        byte start_addrh;
} VZFILE;
```

Header in Assembly:

```
defs    'VZF1'                  ; vzmagic       [04].
defs    'FILENAME12345678'      ; filename      [17].
defb    $F1                     ; Filetype              [01].
defw    $8000                   ; Start address         [02].
```

F0 being for a BASIC program with a starting address typically at 7AE9.
F1 being a binary, typically being an autostart/auto execute game or utility.

VZ Video – Notes directly from Ben.

You'll need:
Download FFMPEG
Download ImageMagik

To create the DAT file for the VZ: at the command line -
FFMPEG -i source.mp4 -r 12 -f image2 -vf format=gray -s 128x64 .\output\%d.bmp

r 12 = frame rate, 12 frames per second. Adjust to suit. This will be higher when I tidy up the code. Source can be a range of video formats. Make an output directory. After running this, you'll get hundreds/thousands of bitmap files in the output folder.You'll then want to convert the greyscale to 1bit format. At the command line in the output folder, type:

MAGICK mogrify -dither None -monochrome *.bmp

This will convert from greyscale to 1bit using an intensity threshold algorithm to set the black/white level. For a better image in certain video's, you can use dithering

MAGICK mogrify -dither FloydSteinberg -monochrome *.bmp

This will take a minute or two. You now need to convert the bitmaps to raw images and stack them. I've coded a cpp app to do this for me. Run it from the output directory.

ConsoleApplication1.exe

The source is included if you want to tinker. It is based on Jonnection's work
(https://www.instructables.com/Streaming-video-from-SD-card-to-Nokia-LCD-with-Ard/)

The VZ side code:
Still a work in progress: The goal - You can open multiple files from the SD and attach a file handle to each, 0-15. You can then seek in the file or read 1 sector at a time from them (512 bytes). It'll be up to you how you use this data.

To display video:
Point HL to the video file name. With A holding the file handler number e.g.

```
ld a,0
ld HL,VideoFile
call OpenFile ;opens the file and asigns it to Handle 0
call SD2VRAM ; Copy one frame to VRAM from the file
loop:
  call DrawFrame ; Draw another frame from the file
  jr loop

VideoFile:      .db 22H,"TAKEONME",22h
```

A jump table will be hardcoded into the VZDOS ROM. You will need to update your VZDOS ROM to make use of these changes, or include the functions in your game code.

```
Jump table:
.org 5FF0h
        jp OpenFile
        jp SD2VRAM
        jp DrawFrame
        jp Fat32_Root
```

Resources/References:

https://www.facebook.com/groups/4609469943	VZ/Laser Fans Facebook Group.
https://bennvenn.myshopify.com/products/vz300-sd-loader	Benn Venn loader shop listing.
https://mh-nexus.de/en/hxd/	Hex program "HxD".
https://ffmpeg.org/	FFMPEG
https://imagemagick.org/index.php	ImageMagick.
https://www.pcbway.com/project/shareproject/VZ300_SD_Loader_Flash_Cart_705db675.html	
https://oldvcr.blogspot.com/2026/09/a-dick-smith-vz200-without-dick-smith.html	
https://github.com/classilla/bushfood	Breakout board / Serial modem
https://github.com/classilla/bushfood/releases	Breakout board / Serial modem
https://github.com/bushy555/VZ200/tree/master/hardware/SDLOADER	SD firmware version archive.

Examples

What can the SD Loader be used for?
Videos, music, animation, games, all of your programs.

Here are a few real-world working examples.

https://www.youtube.com/watch?v=YXWYmT9W4m0	Danger Mouse cartoon.
https://www.youtube.com/watch?v=ouEL4OW3U6U	Money for Nothing.

…and Ben even ported the entire movie “Interstella” to a jazillion JPG files and placed them altogether. Yes, you too can now watch the entire Interstella movie in green and red on the VZ/Laser should you wish to. A number of clips are now available for watching that are found in the ‘VZ Everything software” repository which can be found on archive.org.
Given enough time, they may be here somewhere : https://github.com/bushy555/VZ200

ROM Releases

V0.0 Nov 2019.
v1.5
v1.6

v1.7 Jan 2022. Overwrite support added, break and reuse cluster chains. Added new CLI commands (FILL, COPY). Partitioned SD's now supported. Directories Supported

v1.8 Jan 2022. Directory listing 15/16 lines issue bug fix. Now supports opening of Long file names.

v2.0 Oct 2022. Further small issues fixed, along with SNES port commands (JOY/NOJOY) for Mk II.

v2.1 Oct 2022. Fixes.

v2.2 Nov 2022. Optimised SD functions (Can dump a sector direct to VRAM)
Included is test code to show how to use it, and a 24 frame per second AHA dat file
At 24fps the video runs fast so we're probably closer to around 28-30 frames per second.
If used in GRAFX mode, that'll be divided by 3, but 10fps is not too bad!
It should at least remove the visible screen drawing.

v2.31 . 22 May 2023. Added a seek command. Calling Seek with the number of sectors to advance in DE.
0=go back to the start of the file. Any other number will skip further into the file. calling seek twice with DE=10, will skip 20 sectors etc. This will let you seek up to 32mbytes into a DAT file per call. It could be a little faster but overall, it's not too bad. Maybe 1.5 seconds to seek 32mbytes into a file. I might modify it later for an 32bit absolute sector in a file. The call is located at 0x5F15

v2.32 24/May/2023. Bug fix.

This manual was slapped together very crudely by Dave. All feedback & errors welcomed; send to either /dev/nul or bushy555@gmail.com (same difference really)