Touchscreen

User Manual



一、Product Specifications

◆ Ports:

1 x 3.5 mm audio jack, 1 x Mini HDMI port

1 x USB-C charging port, 1 x USB-C full-featured port

◆ Color: Black

◆ Housing Material: ABS plastic

◆ Operation: Plug and play

◆ Resolution: 1920 x 1200

◆ Refresh Rate: 60 Hz

◆ Brightness: 350 cd/m² (350 nits)

◆ Screen Size: 14 inches

◆ Aspect Ratio: 16:10

◆ Colors: 16.7 million

◆ Contrast Ratio: 1200:1

◆ Speakers: Built-in dual speakers

◆ Color Gamut: 100% sRGB

◆ Viewing Angle: 170°

◆ Panel Type: IPS

◆ DC Plug: Not included

◆ Dimensions: 12.36" x 8.07" x 0.7" (0.24" at thinnest point)


◆ Weight: 1.7 lbs (with case)

◆ Touchscreen: YES

二、Package Contents

- 1 x USB-A to USB-C charging cable
- 1 x USB-C to USB-C full-featured cable
- 1 x HDMI to Mini HDMI cable
- 1 x Instruction manual
- 1 x Portable Monitor

三、Button Overview

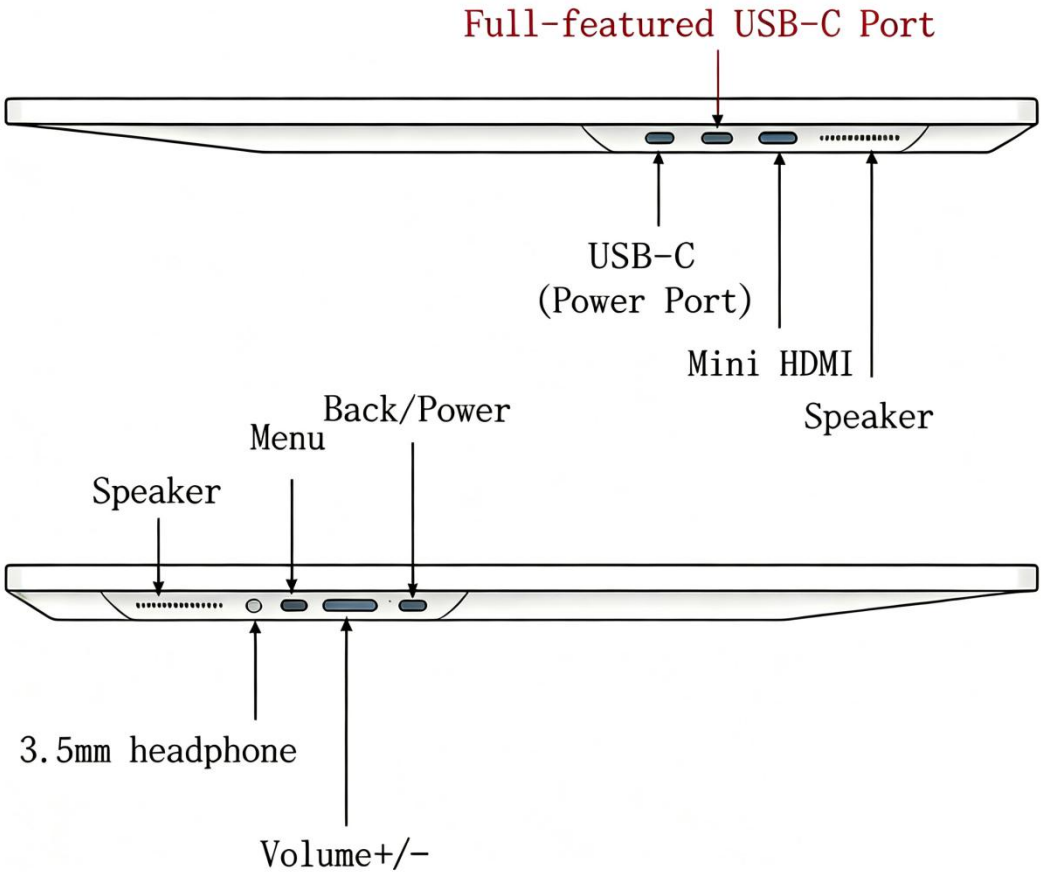

- **3.5 mm Jack:** Headphone/speaker extension port.
- **Menu:** Enter the system menu or confirm a selection.
- **Volume:** Normally, it functions as an up/down scroll key. Pressing the left or right side, however, serves as a shortcut.

  A. Press the left side to quickly adjust the volume.

  B. Press the right side to quickly adjust the brightness.
- **Back/Power:** Short press to go back; press and hold for 3 seconds to turn the power on or off.
- **USB-C(Power Port):** For charging only. Support maximum 20V voltage input.
- **Mini HDMI:** Transmits audio and video signals.
- **Full-Featured USB-C Port:** Supports high-speed data transfer, video transmission, and fast charging.

四、Button Operation

◆ Press and hold the POWER/BACK button for 3 seconds to turn the monitor on/off.

◆ Press the MENU button to open the monitor's OSD menu. In the menu, use the VOLUME +/- buttons to navigate up and down. Press the MENU button to confirm. To go back, press the POWER/BACK button briefly.

◆ Normally, you don't need to press the menu button. Just press the left or right side of the VOLUME +/- button to quickly access volume or brightness adjustment.

五、What's the full-featured USB-C port

◆ A Full-Featured USB-C port is a Type-C connector that supports three core functions at the same time: USB data transfer, USB-PD power delivery, and DisplayPort Alternate Mode (DP-Alt Mode) for video/audio output.

◆ Such as USB 3.1 Gen2 Type-C with DP-Alt Mode、USB 3.2 Type-C with DP-Alt Mode 、 USB4 Type-C 、 Thunderbolt 3/4 /5.

◆ Some full-featured USB-C port icons are shown below.



A B C D

六、Connection Overview

（1）If the device has a full-featured USB-C port , it can be connected using a full-featured USB-C to USB-C cable.



Method 1



Method 2（Adapter not included）

Note:

1、The display has two USB-C ports. The one in the middle is a full-function port, and the other is a charging-only port. When you use a full-function cable for a single-cable connection, make sure to connect it to the full-function port, not the charging port.

2、The USB-C to USB-C cable is a full-function cable, and the USB-A to USB-C cable is a charging-only cable.

3、If you use Method 1 and your device's battery is low or its voltage is insufficient, the screen may go black, flicker, or become too dim to use. In this case, you will still need to power the portable monitor as shown in Method 2.


（2）、If the device does not have a full-featured USB-C port but has an HDMI port, ...



Method 3

Note:

Please connect the cable (USB-A to USB-C) to the full-featured USB-C port on the portable monitor. Otherwise, the touch function may not work. If you use Method 3 and your device's battery is low or its voltage is insufficient, the screen may go black, flicker, or become too dim to use. In this case, you will still need to power the portable monitor as shown in Method 4

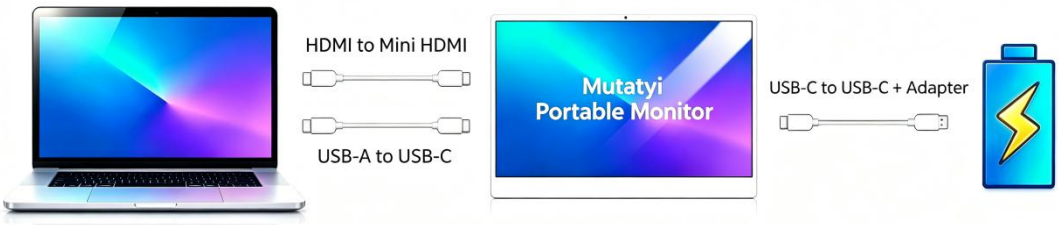


Method 4 (Adapter not included)

Note:

iPhone, iPad, capacitive stylus pens, Fire TV Stick, Steam Deck, Switch, PS3/PS4/PS5, Xbox, and other game consoles do not support touch functionality, but they can still be used as regular displays.

七、Display Screen Functions


(1) Mirror/Expand/Main Display

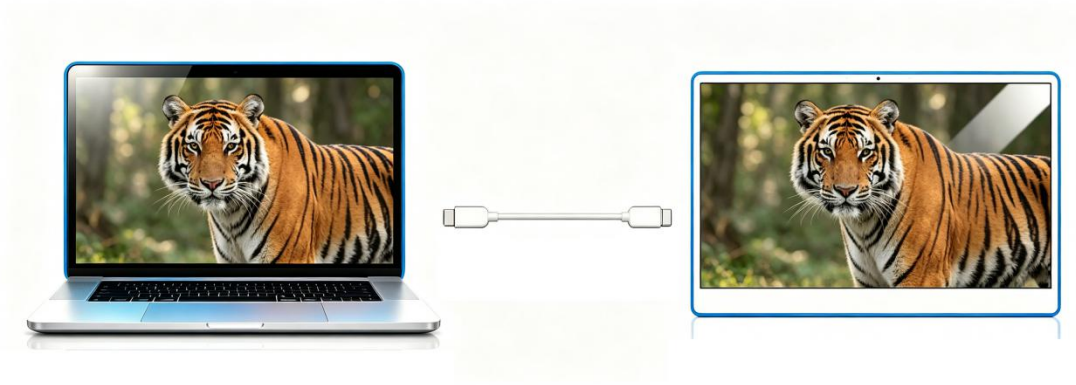

A: Mirror Mode



B:Extended Mode

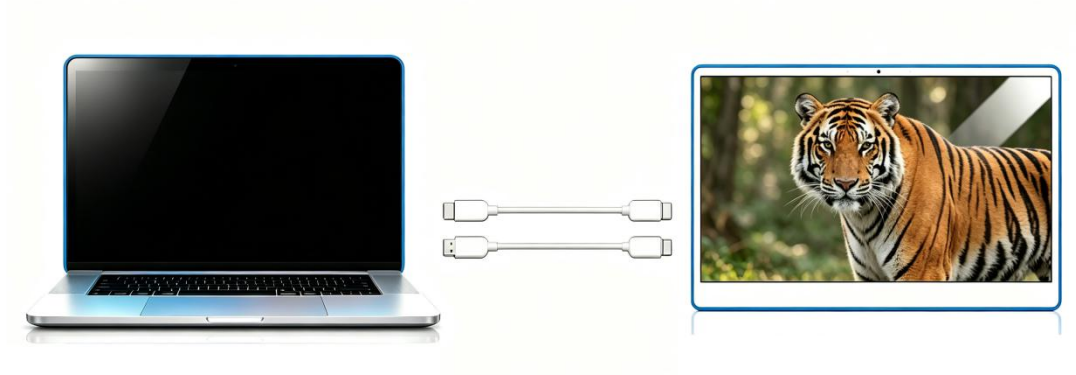

C:Main Display （Only primary screen active）


(2)Settings

A: Windows

✧ Right-click the desktop and select Display settings.

✧ Scroll down to the Multiple displays section.

✧ To select a different display mode, choose Duplicate these displays, Extend these displays, or Show only on 2.

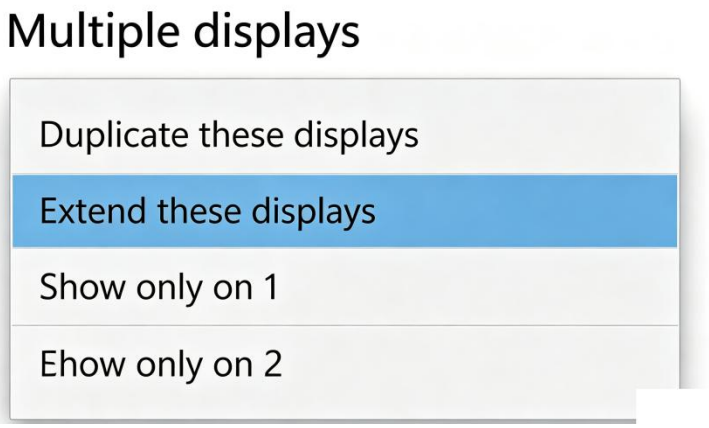


B: MacOS

✧ Choose Apple menu > System Preferences, then click Displays.

✧ Click the Arrangement tab.


✧ For Extend Mode, make sure the Mirror Displays checkbox is not selected. For Mirror Mode, make sure it is selected.

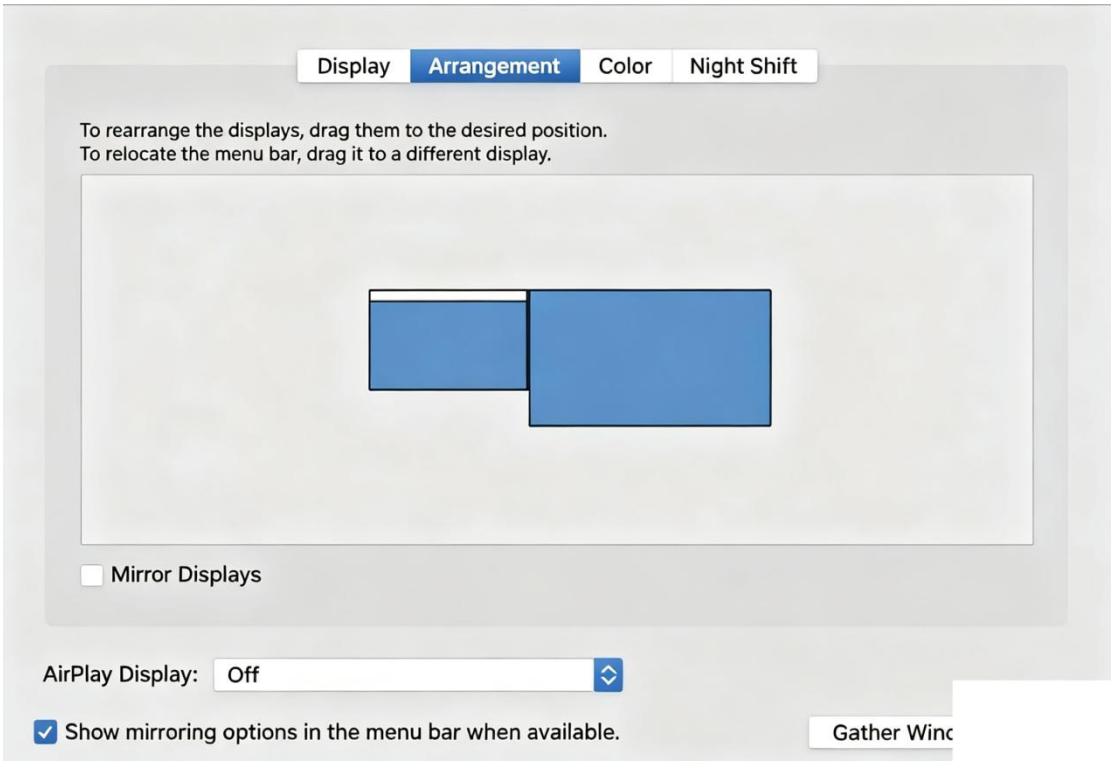

C: How to extend a second screen to the left?

✧ Press and hold the left mouse button, drag the display icon to the left of the other display icon, and release the mouse button.

✧ Click Apply

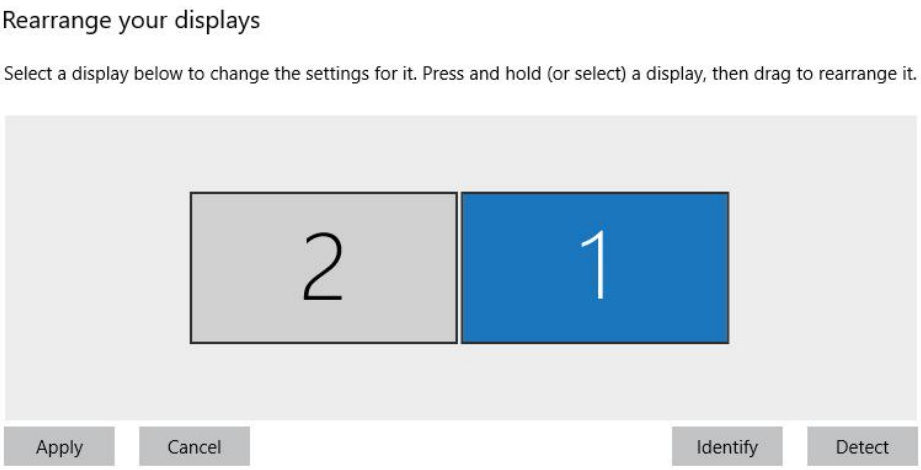


(3)Vertical Mode

A: Windows

✧ Right-click the desktop and select Display settings.

✧ Scroll down to the Display orientation option.

✧ Select Landscape or Portrait.

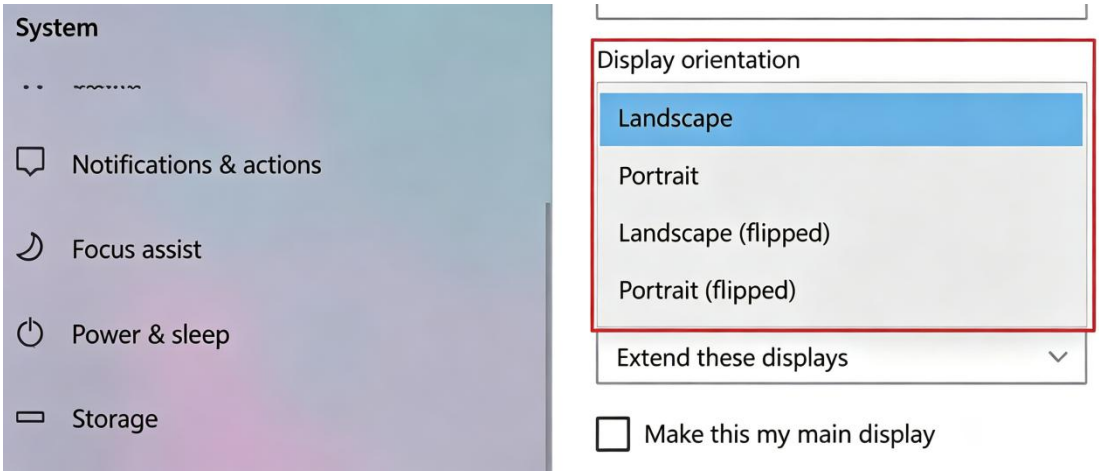


B: Mac OS

✧ Choose Apple menu > System Preferences.

✧ Hold down the Command and Option (Alt) keys, then click Displays.

✧ Look for the newly visible Rotation drop-down menu.

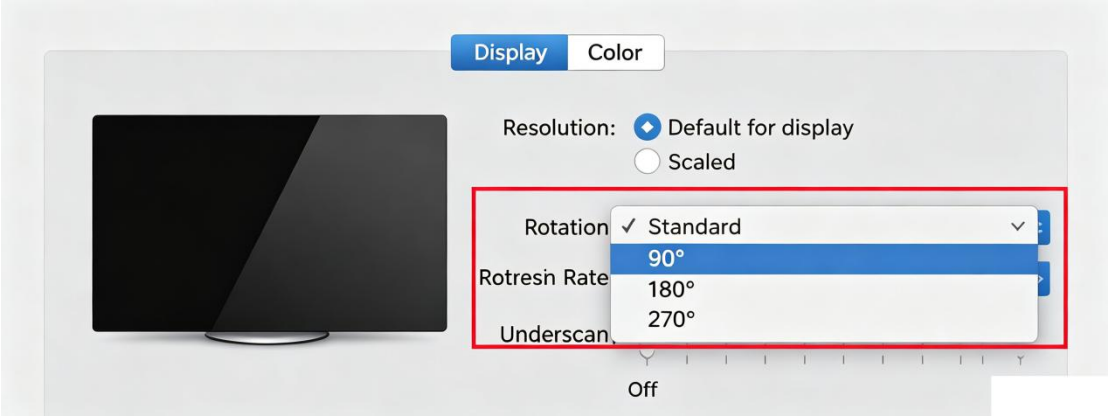

八、Troubleshooting

1. **Using Only the USB-A to USB-C Cable**

If you use only the USB-A to USB-C cable to connect the monitor to the device, the screen may display “No Signal” or flicker. The USB-A to USB-C cable is for power only and does not support video transmission. It must be used together with an HDMI to Mini HDMI cable.

2. **The monitor flickers frequently, restarts repeatedly, or becomes too dim.**

These are usually caused by insufficient power. If this happens, connect portable monitor to an power source.

3. **Black Screen or No Signal**

A. Use the original cable.

B. If you are using a full-featured single-cable connection, make sure you connect to the full-featured USB-C port on the portable monitor, not the power-only USB-C port.

C. If you are using a USB-A to USB-C cable, you must also connect an HDMI-to-Mini HDMI cable at the same time.

D. Regardless of the connection type, if your device’s battery is low or its voltage is insufficient, you still need to connect the power cable to the portable monitor.

4. **Why touch function not supported?**

iPhone, iPad, capacitive stylus pens, Fire TV Stick, Steam Deck, Switch, PS3/PS4/PS5, Xbox, and other game consoles do not support touch functionality. However, they can still be used as regular displays.

5. **My phone has a USB-C port but does not respond after connecting to the monitor**

A. Some phones' USB-C ports only support charging, not display output. The portable monitor only supports phones with a full-featured USB-C port (Thunderbolt 3/4/5 or a USB 3.1 USB-C port with DP Alt Mode).

B. If your phone has a full-featured port, it may not provide enough power to the monitor. In this case, connect your device or the portable monitor to an additional power source.

6. **Compatible Devices**

Mobile phones、 laptops、desktop computers、tablet、steam deck、switch、PS3/4/5、Xbox、game consoles etc.. But iPhone, iPad, capacitive stylus pens, Fire TV Stick, Steam Deck, Switch, PS3/PS4/PS5, Xbox, and other game consoles do not support touch functionality. However, they can still be used as regular displays.