


User Manual



Contents

一. Button Overview.....	3
二. Button Operation.....	5
三. Connection Overview.....	5
四. Display Screen Functions.....	8
五. Connecting Cables.....	12
六. Troubleshooting.....	13

一、Button Overview

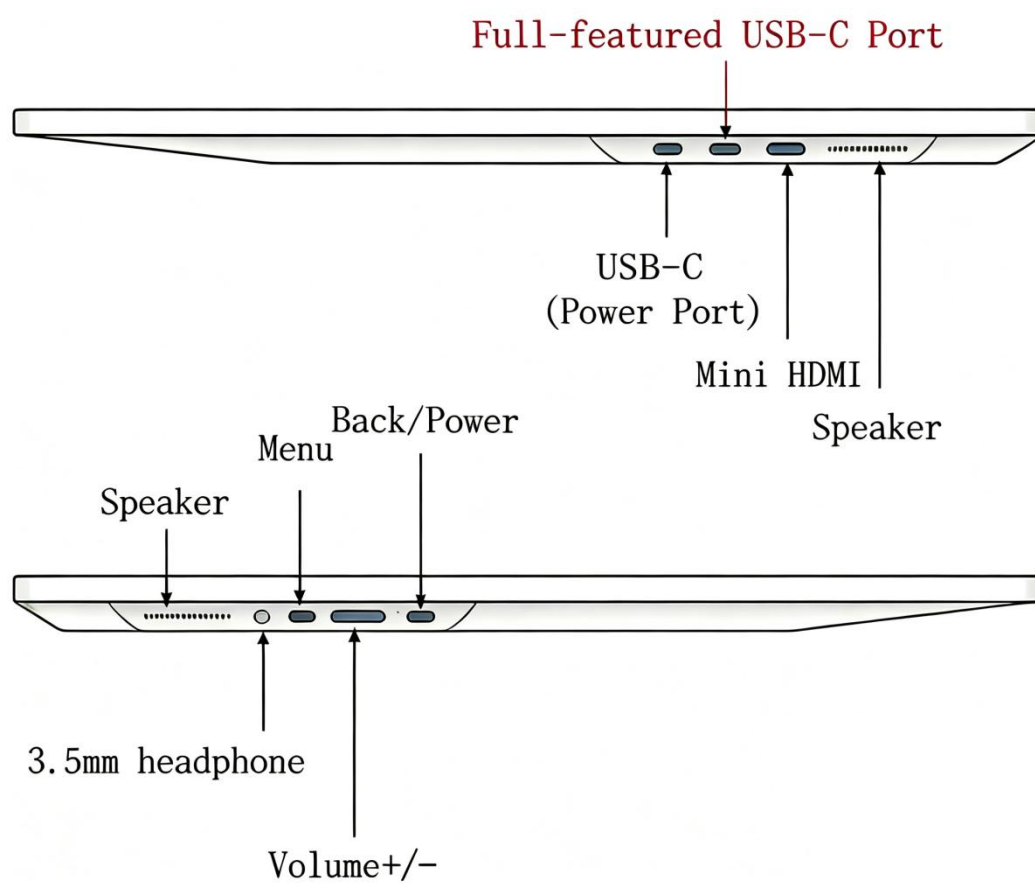

- ◆ **3.5 mm Jack:** Headphone/speaker extension port.
- ◆ **Menu:** Enter the system menu or confirm a selection.
- ◆ **Volume:**
 - A. Press the side buttons to quickly adjust the volume.
 - B. Press the middle button to quickly adjust the brightness.
 - C. In the menu, it can also be used as an up/down button.
- ◆ **Back/Power:** Short press to go back; press and hold for 3 seconds to turn the power on or off.
- ◆ **USB-C (Power Port):** For power only. Supports 5V/9V/12V/15V/19V/20V voltage input.
- ◆ **Mini HDMI:** Transmits audio and video signals.
- ◆ **Full-Featured USB-C Port:** Supports high-speed data transfer, video transmission, and fast charging.

二、Button Operation

◆ Press and hold the POWER/BACK button for 3 seconds to turn the monitor on/off.

◆ Press the MENU button to open the monitor's OSD menu. In the menu, use the VOLUME +/- buttons to navigate up and down. Press the MENU button to confirm. To go back, press the POWER/BACK button briefly.

◆ Note: Devices with a full-featured USB-C port can be connected using the included USB-C to USB-C cable, but they must be connected to the monitor's full-featured USB-C port. If they are connected to a standard USB-C power port, they will not work properly.

三、Connection Overview

(1) 、 If the device has a full-featured USB-C port (such as Thunderbolt 3/4/5 or a USB 3.1 USB-C port with DP Alt Mode), it can be connected using a USB-C to USB-C cable.



Full-Featured Port Icons



Method 1: USB-C to USB-C

Note: Connect the cable to the full-featured USB-C port on both the device and the portable monitor. The portable monitor has only one full-featured USB-C port, so be sure to use that port and not the power-only USB-C port. If you use Method 1 and your device's battery is low or its voltage is insufficient, the screen may go black, flicker, or become too dim to use. In this case, you will still need to power the portable monitor as shown in Method 2.



Method 2: USB-C to USB-C + USB-C to USB-A + Adapter

(2) 、 If the device does not have a full-featured USB-C port but has an HDMI port, ...



Method 3: HDMI to Mini HDMI + USB-A to USB-C

Note: If you use Method 3 and your device's battery is low or its voltage is insufficient, the screen may go black, flicker, or become too dim to use. In this case, you will still need to power the portable monitor as shown in Method 4.



Method 4: HDMI to Mini HDMI + USB-C to USB-A + Adapter

四、Display Screen Functions


(1) Mirror/Expand/Main Display



A: Mirror Mode



B: Extended Mode

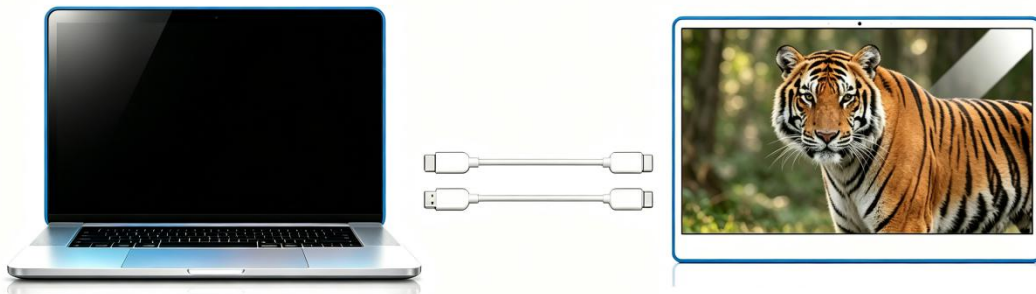

C:Main Display (Only primary screen active)

(2) Settings

A: Windows


- ✧ Right-click the desktop and select **Display settings**.
- ✧ Scroll down to the **Multiple displays** section.
- ✧ To select a different display mode, choose **Duplicate these displays**, **Extend these displays**, or **Show only on 2**.

Multiple displays

Duplicate these displays
Extend these displays
Show only on 1
Show only on 2

B: MacOS

- ✧ Choose Apple menu > System Preferences, then click **Displays**.
- ✧ Click the **Arrangement** tab.
- ✧ For **Extend Mode**, make sure the **Mirror Displays** checkbox is not selected. For **Mirror Mode**, make sure it is selected.

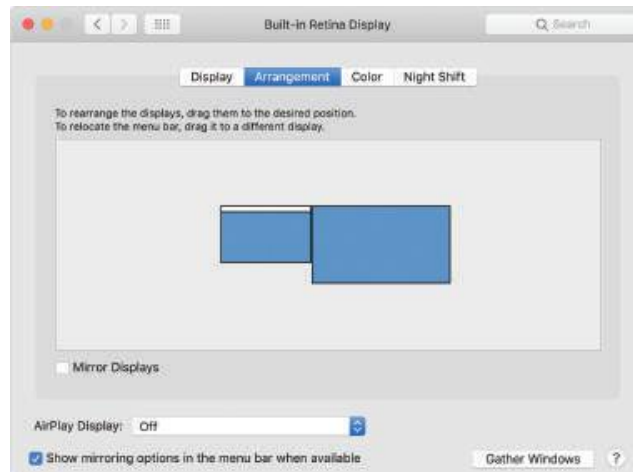


C: How to extend a second screen to the left?

- ✧ Press and hold the left mouse button, drag the display icon to the left of the other display icon, and release the mouse button.
- ✧ Click **Apply**

Rearrange your displays


Select a display below to change the settings for it. Press and hold (or select) a display, then drag to rearrange it.

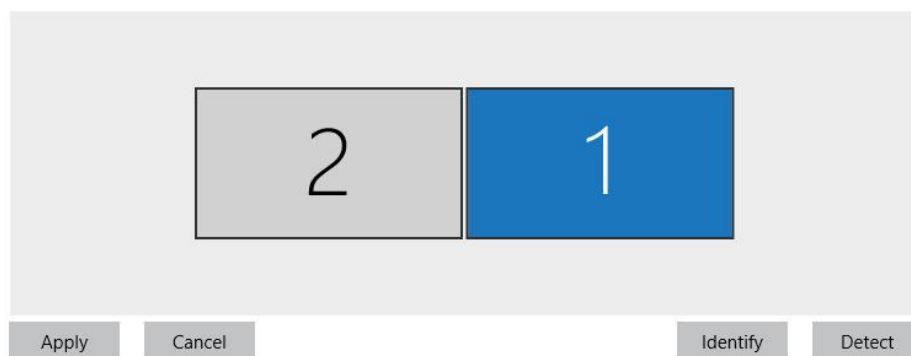

(3) Vertical Mode

A: Windows

- ✧ Right-click the desktop and select **Display settings**.
- ✧ Scroll down to the **Display orientation** option.
- ✧ Select **Landscape** or **Portrait**.

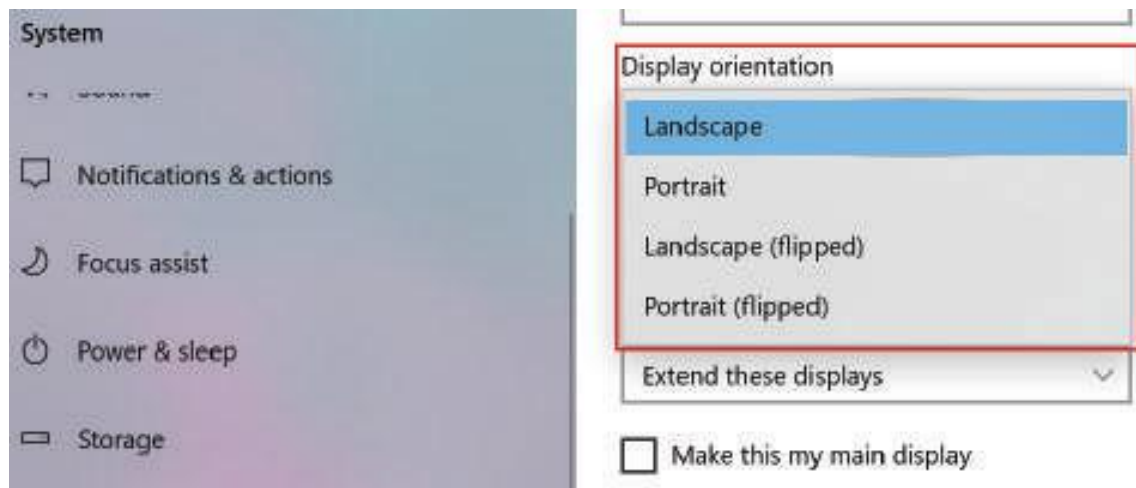

B: Mac OS

- ✧ Choose Apple menu > System Preferences.
- ✧ Hold down the Command and Option (Alt) keys, then click **Displays**.
- ✧ Look for the newly visible **Rotation** drop-down menu.



五、Connecting Cables



Full-Featured USB-C to USB-C Cable

It supports simultaneous video and data transmission while supplying power.



USB-A to USB-C Power Cable

For power only. Does not support video transmission.



HDMI to Mini HDMI Cable

For video signal transmission. An external power source is required.

六、Troubleshooting

1. Using Only the USB-A to USB-C Cable

If you use only the USB-A to USB-C cable to connect the monitor to the device, the screen may display "No Signal" or flicker. The USB-A to USB-C cable is for power only and does not support video transmission. It must be used together with an HDMI to Mini HDMI cable.

2. The monitor flickers frequently, restarts repeatedly, or becomes too dim.

These are usually caused by insufficient power. If this happens, connect your device or portable monitor to an additional power source.

3. Black Screen or No Signal

A. Use the original cable.

B. If you are using a full-featured single-cable connection, make sure you connect to the full-featured USB-C port on the portable monitor, not the power-only USB-C port.

C. If you are using a USB-A to USB-C cable, you must also connect an HDMI-to-Mini HDMI cable at the same time.

D. Regardless of the connection type, if your device's battery is low or its voltage is insufficient, you still need to connect the power cable to the device or the portable monitor.

4. My phone has a USB-C port but does not respond after connecting to the monitor

A. Some phones' USB-C ports only support charging, not display output. The portable monitor only supports phones with a full-featured USB-C port (Thunderbolt 3/4/5 or a USB 3.1 USB-C port with DP Alt Mode).

B. If your phone has a full-featured port, it may not provide enough power to the monitor. In this case, connect your device or the portable monitor to an additional power source.

5. Compatible Devices

Mobile phones、laptops、desktop computers、tablet、steam deck、switch、PS3/4/5、Xbox、game consoles etc..