



MUST FOLLOW ESIC LABEL AND RIBBON PART NUMBER

EXAMPLE:

ITEM	Location	P/N	Description
1	Outer box label	FPS-506-D0001527-101	Label, Carton label, Bigfoot 2100W
2	blank label	FPS-501-D0000187-101	Label Blank, For Carton, L152.4mmxW101.6mm
3	Ribbon	FPS-099-D0000073-101	Other Indirect Material, Ribbon, Ricoh B110CR W110mm, 300m/Roll, HF


Load the Media

Caution • While performing any tasks near an open printhead, remove all rings, watches, hanging necklaces, identification badges, or other metallic objects that could touch the printhead. You are not required to turn off the printer power when working near an open printhead, but Zebra recommends it as a precaution.


Insert the Media into the Printer

The majority of the illustrations in this section show roll media because the media loading path is the same for both roll and fanfold media.

1. Raise the media door.

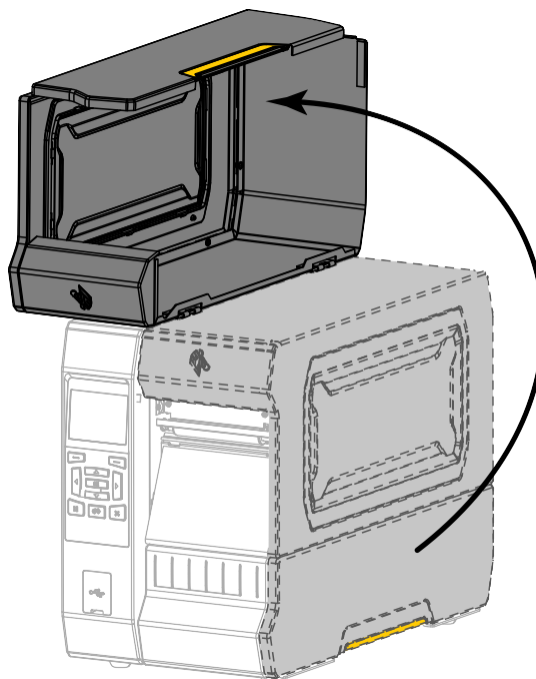

2. Remove and discard any tags or labels that are torn or dirty or that are held by adhesives or tape.


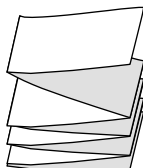


3. Insert roll or fanfold media into the printer.



Roll Media

Place the roll of media on the media supply spindle. Push the roll as far back as it will go.

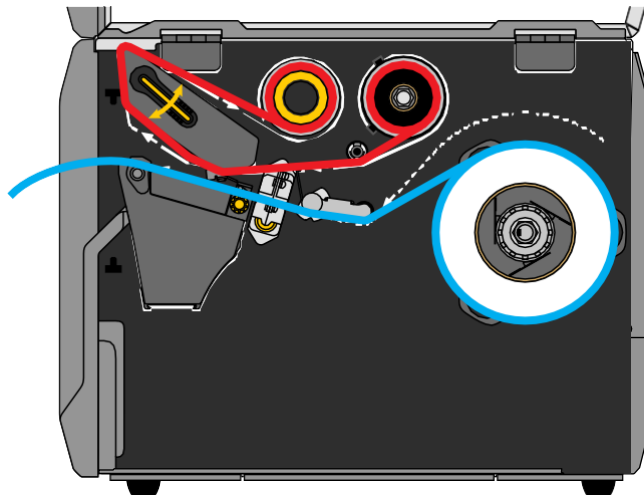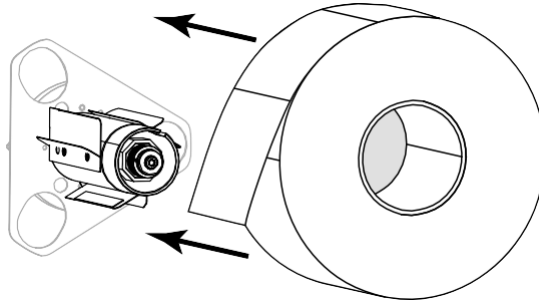


1. If you have not already done so, follow the instructions in the section [Insert the Media into the Printer](#)




Caution • The printhead may be hot and could cause severe burns. Allow the printhead to cool.

Open the printhead assembly by rotating the printhead-open lever upward.

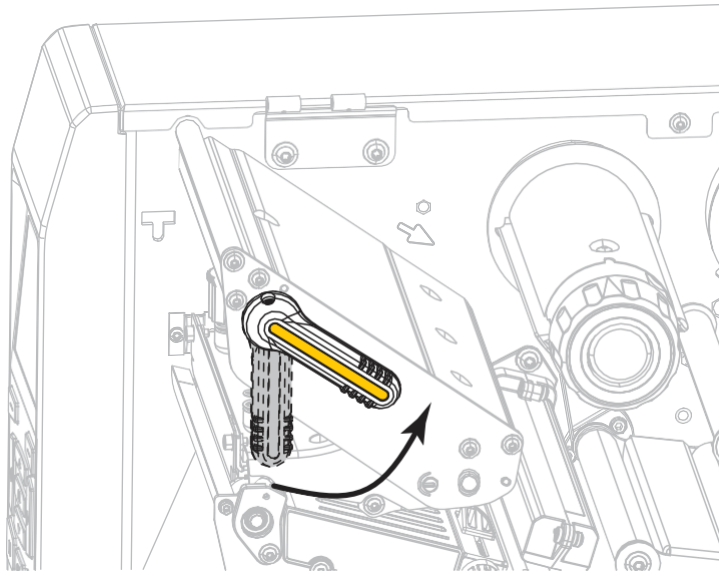


3. Rotate the media guide adjustment knob as shown until the media guide slides all the way out.

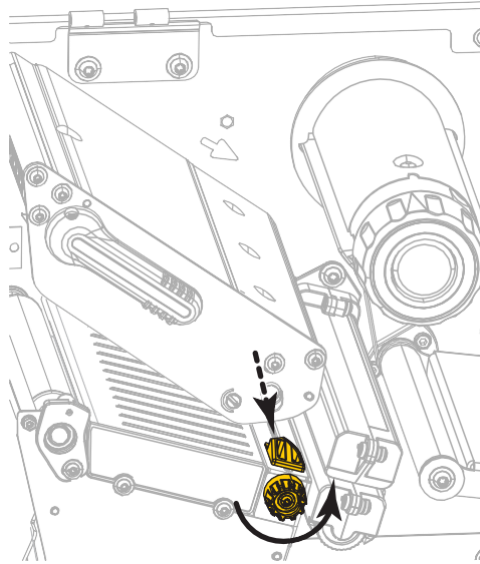


4. **Caution** • The printhead may be hot and could cause severe burns. Allow the printhead to cool.




From the media spindle (1), feed the media under the dancer assembly (2), through the media sensor (3), and under the printhead assembly (4). Slide the media back until it touches the inside back wall of the media sensor.

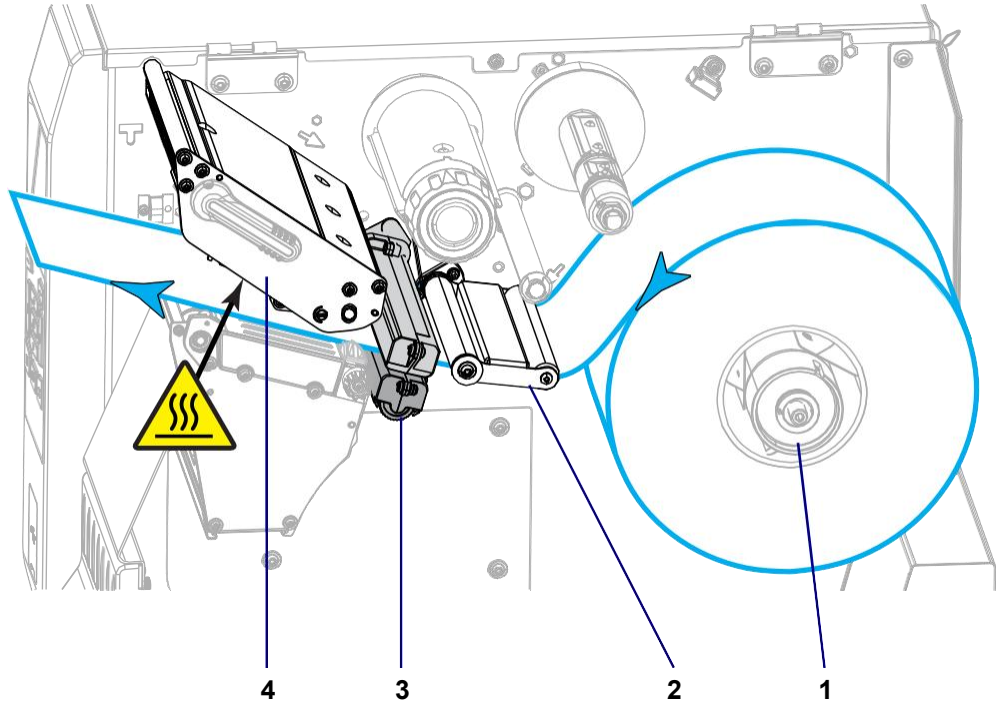


5. Rotate the media guide adjustment knob as shown until the media guide just touches the edge of the media.

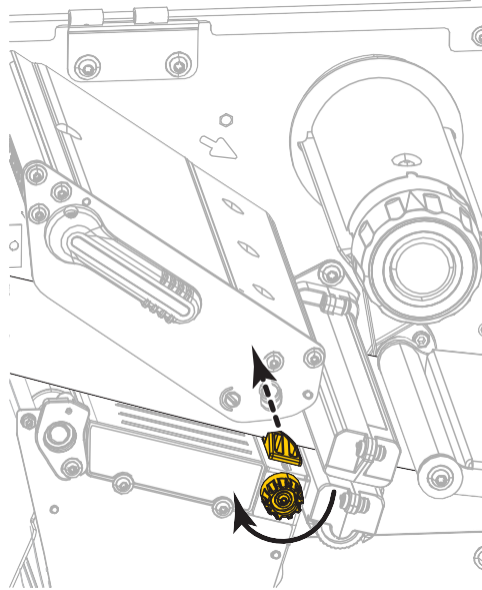

6. Rotate the printhead-open lever downward until it locks the printhead in place.

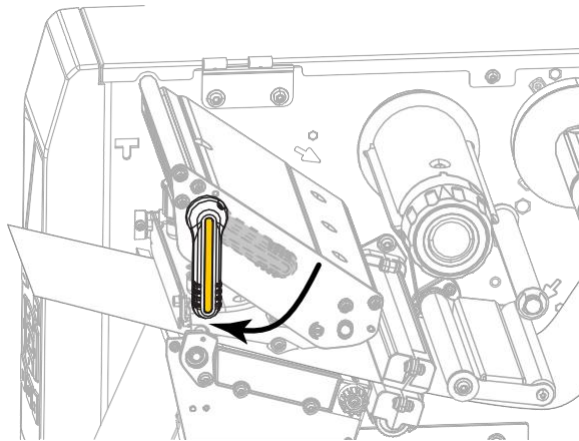

7. Close the media door.

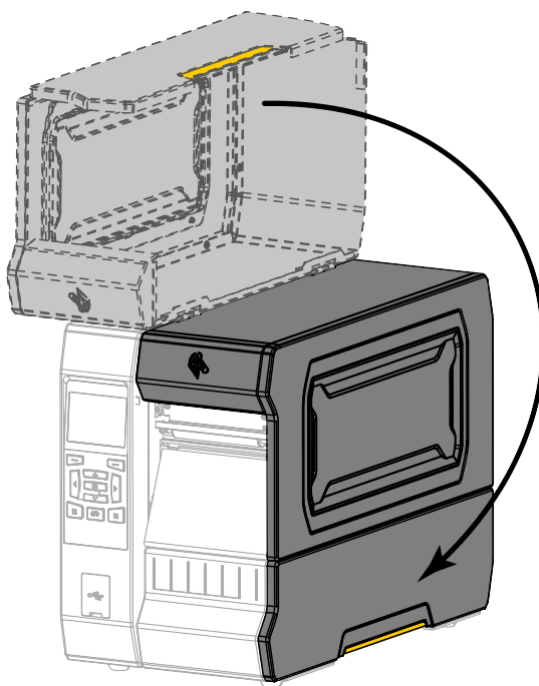

8. Press PAUSE to exit pause mode and enable printing.
9. The printer may perform a label calibration or feed a label, depending on your settings.
10. For best results, calibrate the printer.

Media loading is complete.

Load the Ribbon



Note • This section applies only to printers that have the Thermal Transfer option installed.


Ribbon is used only with thermal transfer labels. For direct thermal labels, do not load ribbon in the printer. To determine if ribbon must be used with a particular media

Caution • While performing any tasks near an open printhead, remove all rings, watches, hanging necklaces, identification badges, or other metallic objects that could touch the printhead. You are not required to turn off the printer power when working near an open printhead, but Zebra recommends it as a precaution. If you turn off the power, you will lose all temporary settings, such as label formats, and you must reload them before you resume printing.



Important • Use ribbon that is wider than the media to protect the printhead from wear. Ribbon must be coated on the outside.


1. Raise the media door.

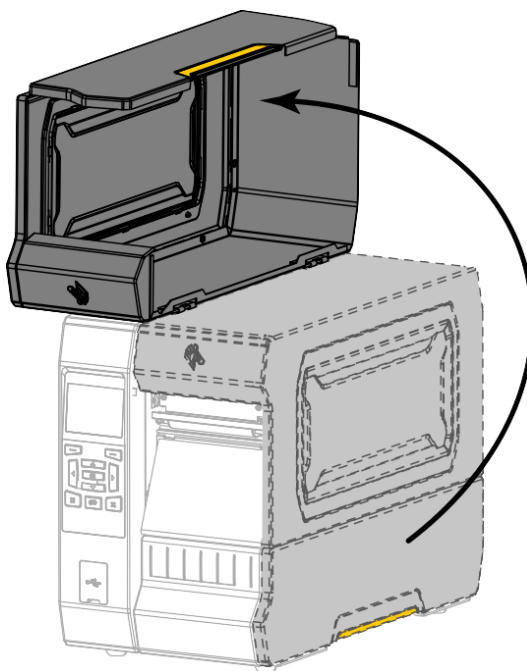




2. **Caution** • The printhead may be hot and could cause severe burns. Allow the printhead to cool.


Open the printhead assembly by rotating the printhead-open lever upward.

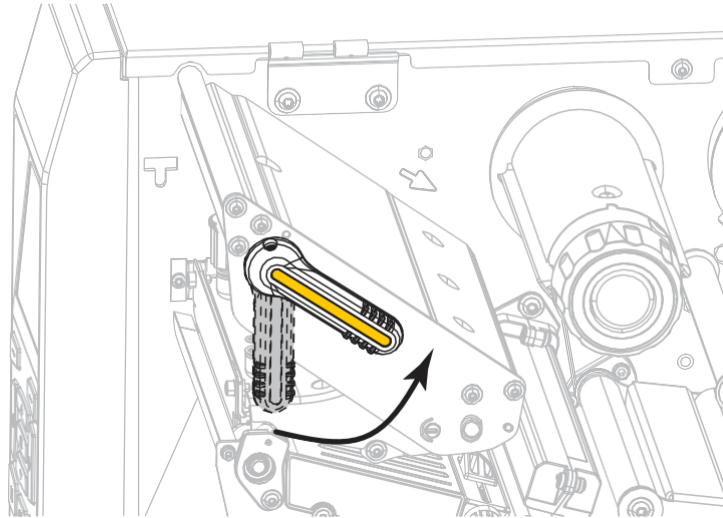


3. Place the roll of ribbon on the ribbon supply spindle with the loose end of the ribbon unrolling as shown. Push the roll back as far as it will go.

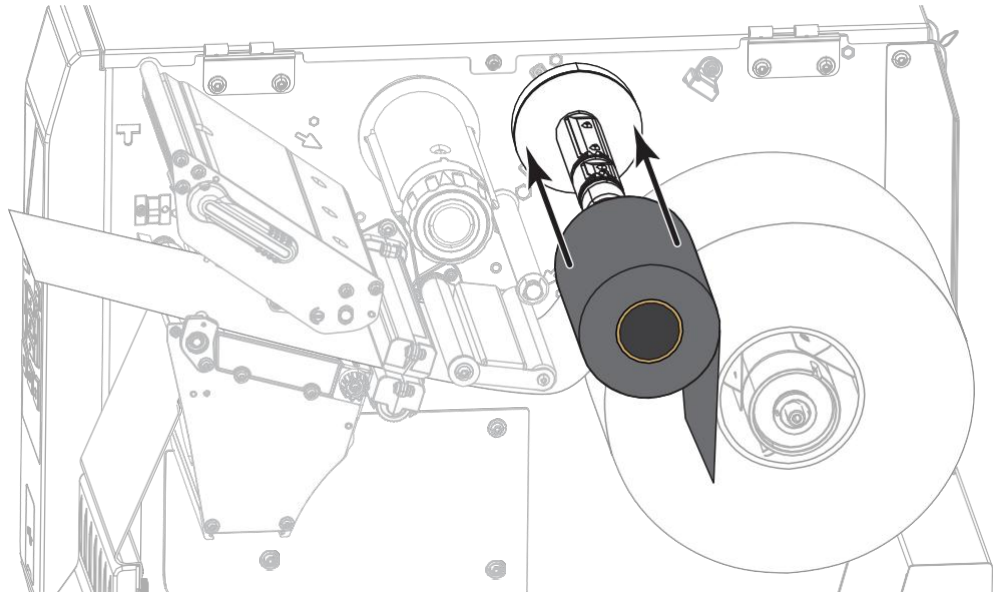



4. Bring the ribbon under the printhead assembly and around its left side, as shown.

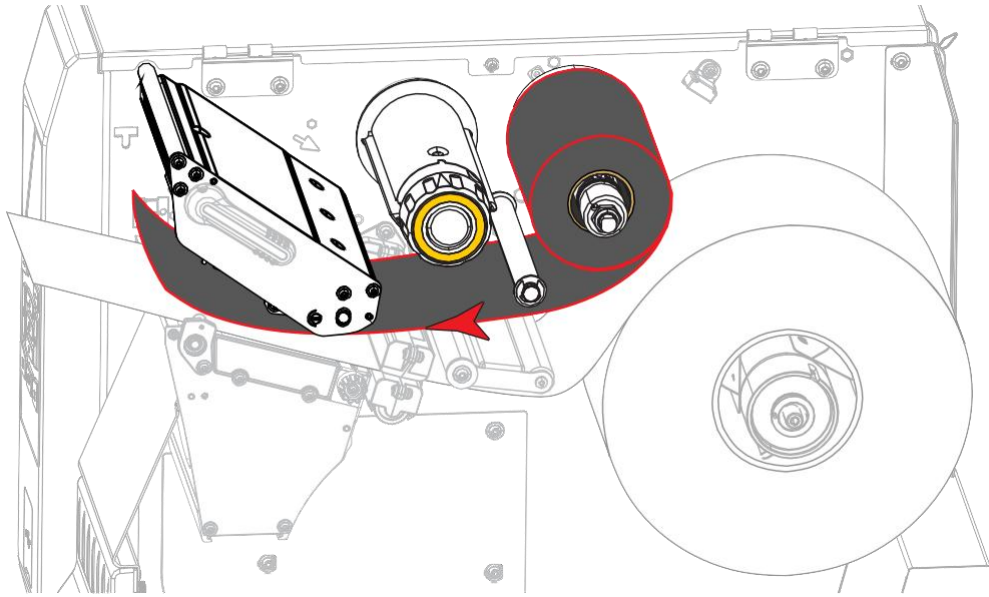

5. With the ribbon tracking as far back as it can under the printhead assembly, wrap the ribbon around the ribbon take-up spindle. Rotate the spindle several turns in the direction shown to tighten and align the ribbon.

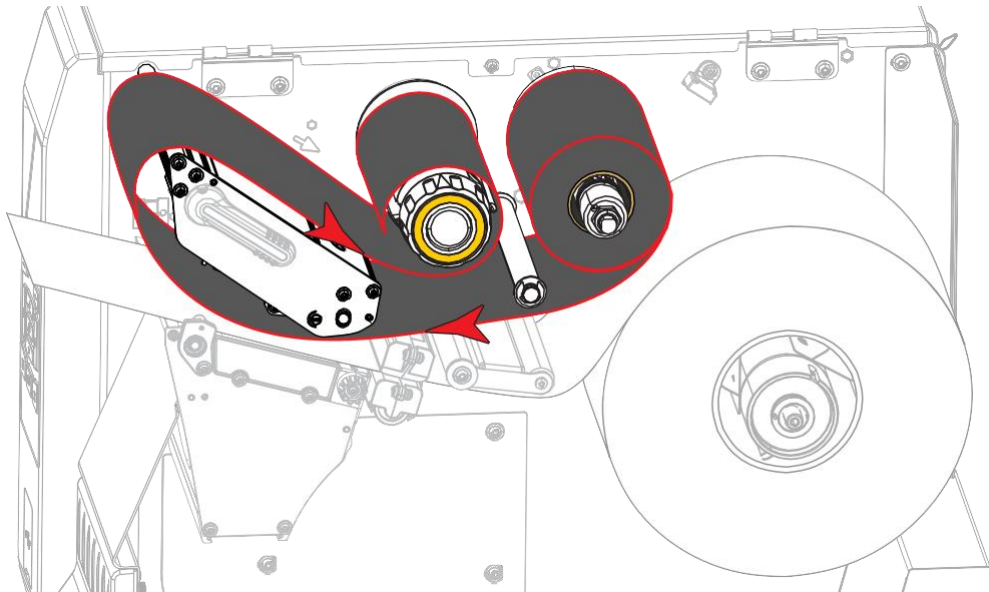

6. Is media already loaded in the printer?

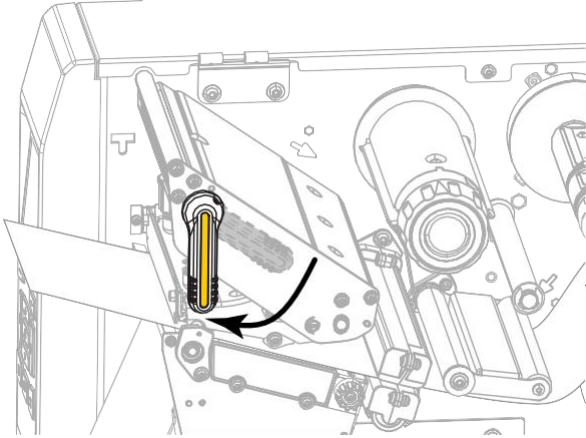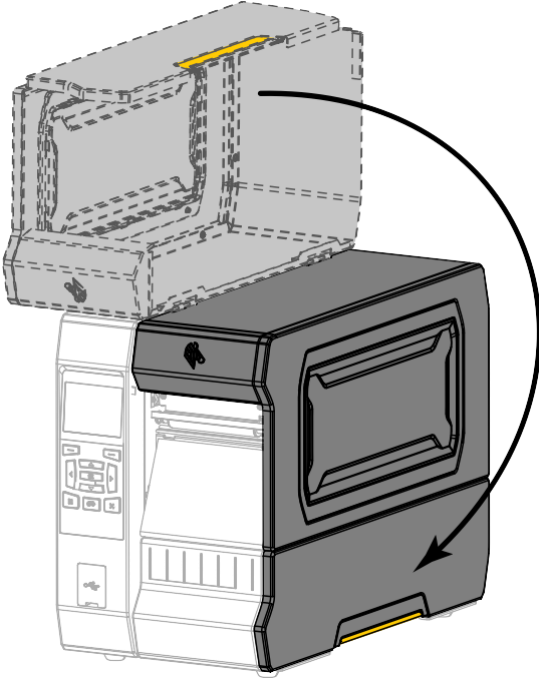If...	Then...
No	Continue with to load media in the printer.
Yes	a. Rotate the printhead-open lever downward until it locks the printhead in place.  b. Close the media door.  c. If necessary, press PAUSE to enable printing.