

CU 3X2, CU 3X4

Installation and operating instructions



Other languages

<http://net.grundfos.com/qr/i/96842987>

be
think
innovate

GRUNDFOS 

English (GB) Installation and operating instructions

Original installation and operating instructions

CONTENTS

	Page
1. Symbols used in this document	2
2. Product description	2
2.1 Indicator lights	3
2.2 Terminals	3
2.3 Potentially explosive environments	3
3. Identification	4
3.1 Type key	4
4. Installation	4
4.1 Location	5
4.2 Enclosure class	5
4.3 Terminals	5
4.4 Cables	5
4.5 Security	5
5. Mechanical installation	6
6. EMC-correct installation	6
6.1 Internal GENibus connection	7
6.2 Fieldbus communication interface modules	7
6.3 Fitting the CIM module	7
7. Startup	9
8. Technical data	9
9. Electrical data	9
9.1 Supply voltage	9
9.2 Power consumption	9
9.3 Circuit breaker	9
9.4 Backup fuse	9
9.5 Short-circuit protection	9
9.6 Digital inputs	9
9.7 Analog inputs	9
9.8 Digital outputs (relay outputs)	9
9.9 Conductors	9
9.10 USB port	9
9.11 Battery backup (UPS)	10
9.12 Terminal groups	10
10. Overview of inputs and outputs	11
11. Maintenance	12
12. Service	12
13. Replacing the CU 3X2	12
13.1 Replacing the CIM module	12
14. Dimensions	12
15. Disposal	12

Warning



Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Symbols used in this document

Warning



If these safety instructions are not observed, it may result in personal injury.

Warning



If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.

Caution

If these safety instructions are not observed, it may result in malfunction or damage to the equipment.

Note

Notes or instructions that make the job easier and ensure safe operation.

2. Product description

The CU 3X2 is a flexible control unit for control and monitoring of up to six pumps. In the following sections two variants will be described:

- CU 352
 - Water supply and booster systems
 - Heating and air-conditioning systems.
- CU 362
 - Wastewater and draining applications.

In the following the two variants will be designated CU 3X2.



Warning

If the CU 3X2 is used in a manner not specified by the manufacturer, the protection provided by the CU 3X2 may be impaired.

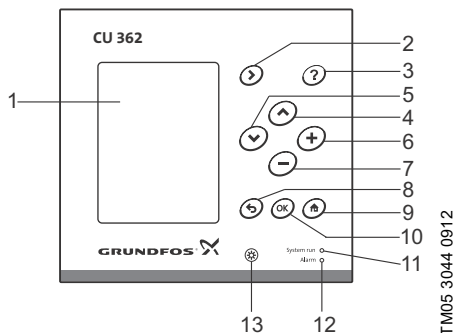


Fig. 1 Example of CU 3X2

Pos.		Description
1		LCD display
2		Changes to next column in menu structure.
3		Changes to help text.*
4		Goes up in lists.
5		Goes down in lists.
6		Increases the value of a selected parameter.
7		Reduces the value of a selected parameter.
8		Goes one display back.
9		Goes back to menu "Status".
10		Saves a value.
11		Green indicator light (operation)
12		Red indicator light (alarm)
13		Changes the brightness of the display.

* Some help texts apply to the entire display, other texts to the individual lines of the display.

2.1 Indicator lights

The CU 3X2 has one green and one red indicator light.

The green indicator light is on when the power supply has been switched on.

The red indicator light is on when the system is in alarm mode.

2.2 Terminals

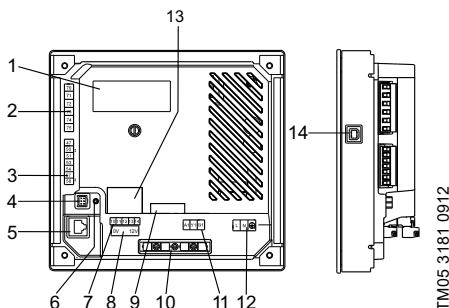


Fig. 2 Back of the CU 3X2

Pos.	Description
1	Nameplate
2	Terminals for digital output relays
3	Terminals for analog inputs
4	Service connection
5	Ethernet (RJ45)
6	Voltage indicator
7	Terminals for digital inputs
8	Terminals for backup battery
9	Terminals for CIM module (optional)
10	Cable clamps for GENIbus connections
11	Internal GENIbus connection
12	Terminal for power supply
13	Label for backup battery
14	USB port

For further information, see section [9.12 Terminal groups](#).

2.3 Potentially explosive environments

The CU 3X2 must not be installed in explosive environments, but may be used together with Grundfos pumps approved for installation in potentially explosive environments.

3. Identification

The CU 3X2 can be identified by means of the nameplate on the back. See fig. 3.

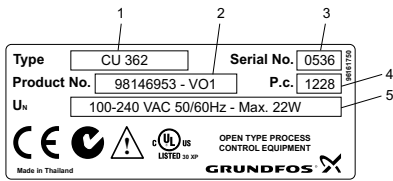


Fig. 3 Example of nameplate

Pos.	Description
1	Type designation
2	Product number and version number
3	Serial number
4	Production code (year and week)
5	Rated voltage, frequency and power

The CU 3X2 has a label for the backup battery. See fig. 4.

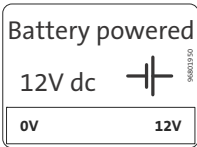


Fig. 4 Label for backup battery



Fig. 5 Protective earth terminal

3.1 Type key

Code	Example	CU	3	X	2
CU	Control unit				
3X	Controller series				
2	Model number				

4. Installation

The CU 3X2 is only intended for use in control panels.

Before installation, check the following:

- Does the CU 3X2 correspond to the one ordered?
- Is it suitable for the power supply available at the installation site?
- Has it been damaged during transportation?



Warning
Switch off the power supply before making connections. Make sure that it cannot be accidentally switched on.



Warning
The electrical installation should be carried out by an authorised person in accordance with local regulations.



Warning
Observe local regulations for safety, health and environment.



Warning
The terminals L and N as well as 70 to 75 may be connected to dangerous contact voltage. External control voltage from other groups may occur.



Warning
All wires to units outside the control panel must be of the type H05VV-F according to CENELEC HD21 (to avoid injury from touching wires).
USA and Canada:
Field wiring installation shall comply with National Electrical Code (NEC) and/or Canadian Electrical Code.



Warning
The installation must incorporate a circuit breaker in order to switch off the mains supply. It must be close to the CU 3X2 and easily accessible for the operator. It must be marked as circuit breaker for the CU 3X2. The circuit breaker must be according to IEC 60947-1 and IEC 60947-3.

Warning

Short-circuit protection

The installation must incorporate external fuses.

EU/IEC:

Use fuses that comply with IEC 60127. Rated maximum 10 A, minimum 250 VAC in both line and in neutral when connecting the controller to the power source.



USA and Canada (branch circuit protection):

Use a UL/CSA-listed non-time delay, class-rated Branch Circuit Fuse (such as class RK5) rated maximum 10 A, minimum 250 VAC in both line and in neutral when connecting the controller to the power source.

Warning

The terminals are only separated with basic insulation. Therefore, do not connect a PELV circuit to a terminal adjacent to a terminal connected to live voltage.



PELV circuits and live wires must be separated with double or reinforced insulation.

4.1 Location

The CU 3X2 is designed for installation in the front of a control panel or a separate cabinet.

For outdoor installation the CU 3X2 must be mounted in a control cabinet with an enclosure class of minimum IPX4.

4.2 Enclosure class

The CU 3X2 is IP55 when mounted in the front of an IPX4 enclosure. The cabinet must be of a flame-retardant material.

USA and Canada

The CU 3X2 is type 3R when mounted in the front of a cabinet with type rating 1, 2, 3, 3R, 5, 12, 12K or 13.

4.3 Terminals

All terminals are suitable for conductors of 0.5 to 2.5 mm² or AWG 20-13.

4.4 Cables

Cables must be rated min. 70 °C.

4.5 Security

Grundfos connected products must be behind a firewall or connected to a private network.

If a firewall or private network is not in place, the Grundfos product may be subject to a cyber-security risk and becomes vulnerable to an attack or compromise.

Follow the highly recommended configuration requirements below. If in doubt, consult an IT Infrastructure Specialist.

4.5.1 CU 352/354/362/372/3X2 DH

CU 3xx is a traditional network connected device and must be placed on a private network behind a firewall. It must not be connected directly to the Internet. Also, no TCP/IP ports must be forwarded to the product. If you need remote access to the device, you must use technologies such as Virtual Private Networks (VPNs) to ensure a secured connection. Consider contacting an IT Infrastructure Specialist to establish such a solution.

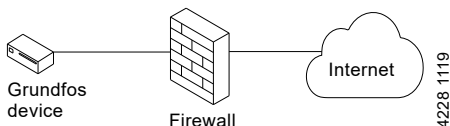


Fig. 6 Secure connectivity for CU 352/354/362/372/3X2 DH

TM07 4228 1119

5. Mechanical installation

Fasten the CU 3X2 with the four screws, M5 x 10, supplied with the unit (pos. 1).

Maximum torque: 1.4 Nm.

Dimensions of the CU 3X2, see section

[14. Dimensions.](#)

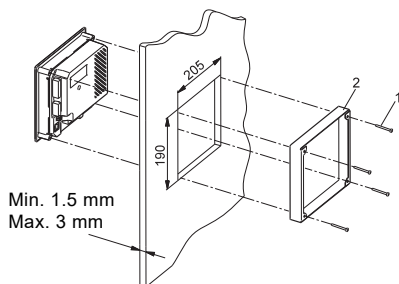


Fig. 7 Mounting in panel front (standard)

Note In order to achieve enclosure class IP55, the CU 3X2 must be mounted in a panel or cabinet.

Connect the earth terminal (between the cable clamps) on the CU 3X2 to the mounting frame (pos. 2, fig. 7). See fig. 8.

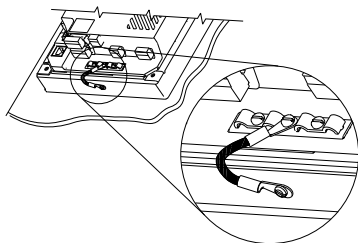


Fig. 8 Earth connection

TM03 1301 4105

TM04 2065 1908

6. EMC-correct installation

The CU 3X2 is normally mounted in a panel which also contains an IO 351 module, contactors and other power equipment. The panel can also contain other Grundfos modules and frequency converters.

In order to ensure faultless operation, it is very important to install the electronic modules in an EMC-correct way:

- Ensure a sufficient earth connection between the CU 3X2 and the frame. See fig. 8.
- Use screened cables for GENIbus. Connect the screen to the cable clamp of the CU 3X2 in front of the terminals A1, Y1 and B1. See fig. 9. Also use screened cable for the CIM module.

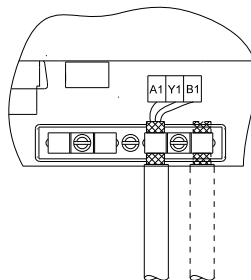


Fig. 9 Screen fixed with cable clamp

Note Any isolating plastic tape between screen and sheath must be removed before mounting the cable in the cable clamp.

- Signal conductors for digital and analog inputs and outputs should be screened, i.e. run the screen all the way to the CU 3X2 and connect it to frame with for instance a cable clamp. Do not twist screen ends to avoid pig tails, as this will destroy the screen effect at high frequencies. Use cable clamps instead.

TM04 2065 1908

6.1 Internal GENIbus connection

Internal communication is established via GENIbus.

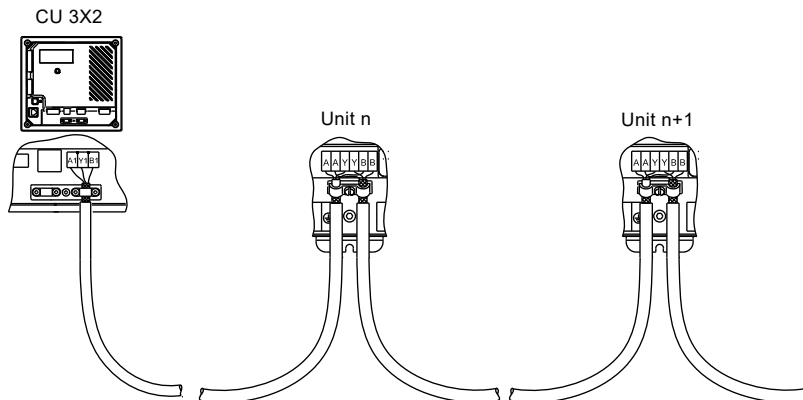


Fig. 10 GENIbus connection

The module type and the number of modules depend on the application software.

6.2 Fieldbus communication interface modules

The CU 3X2 can be connected to an external communication network via an add-on CIM module. CIM: Communication Interface Module.

The CIM modules must be ordered separately.

Connect the CIM module as described in the installation and operating instructions supplied with the module.

6.3 Fitting the CIM module



Warning

Switch off the power supply to the CU 3X2 before fitting the CIM module.

The CIM module must be fitted by an authorised person.



Warning

Electrostatic discharge (ESD) must be avoided when fitting the CIM module, for instance by wearing an antistatic wrist strap as shown in fig. 13.

1. Remove the screw in the back cover of the CU 3X2. See fig. 11.

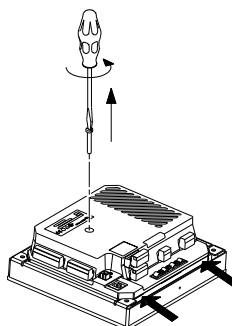


Fig. 11 Removing the screw that holds the back cover

TM05 1917 3911

TM04 2402 2508

2. Open the back cover and break off the tap. See fig. 12.

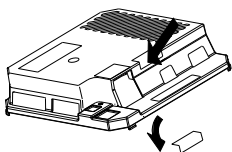
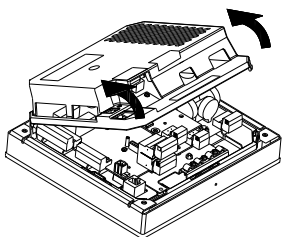


Fig. 12 Opening the back cover and breaking off the tap

TM04 2403 2508

3. Fit the CIM module. See fig. 13.

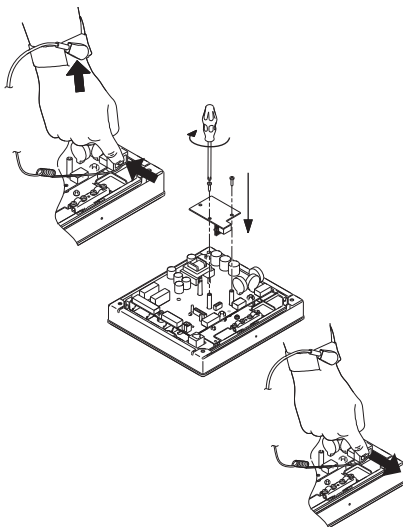


Fig. 13 Fitting the CIM module

TM03 2227 3905

4. Place the labels supplied with the CIM module on the back cover. See fig. 14.

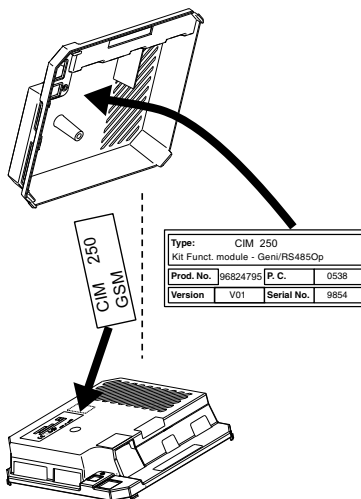


Fig. 14 Placing the new labels on the back cover

TM04 2586 2708

5. Refit the back cover to the CU 3X2, and secure it with the mounting screw. See fig. 15.


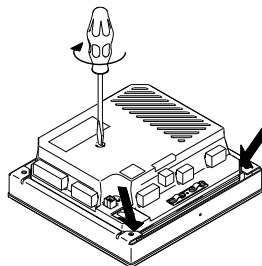


Fig. 15 Refitting the back cover

TM04 2587 2708

7. Startup

Startup must be carried out by an authorised person.

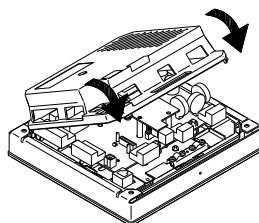

Warning

Prior to startup, read the installation and operating instructions for the product in question.

8. Technical data

Transient voltages typically present on the mains supply are category 2.

Altitude above sea level

Maximum 2000 m.

Ambient temperature

- During operation: -20 to +60 °C (must not be exposed to direct sunlight).
- In stock: -20 to +60 °C.
- During transportation: -20 to +60 °C.
- * At temperatures below 0 °C, the display may react slowly.

Relative air humidity

5 to 95 %.

Enclosure class

IP1X.

For indoor use only.

Pollution degree

External pollution degree 3.

9. Electrical data

9.1 Supply voltage

1 x 100-240 VAC $\pm$ 10 %, 50/60 Hz, PE (Class 1 equipment).

9.2 Power consumption

Maximum 22 W.

9.3 Circuit breaker

Installation of circuit breakers must be done in accordance with local regulations.

9.4 Backup fuse

Maximum 10 A. Both standard fuses as well as quick- and slow-blow fuses are suitable.

9.5 Short-circuit protection

Use fuses that comply with IEC 60127.

USA and Canada (branch circuit protection): Use a UL/CSA-listed non-time delay (high capacity) fuse that complies with the UL248 series or an inverse time circuit breaker that complies with UL489.

Fuse types RK1, RKS, J and CC are acceptable.

9.6 Digital inputs

Open-circuit voltage	24 VDC
Closed-circuit current	5 mA, DC
Frequency range	0-4 Hz

9.7 Analog inputs

Input current and voltage	0-20 mA
	4-20 mA
	0-10 V
Tolerance	$\pm$ 3.3 % of full scale
Repetitive accuracy	$\pm$ 1 % of full scale
Input resistance, current	< 250 Ω
Input resistance, voltage	> 50 k Ω $\pm$ 10 %
Supply to sensor	24 V, 30 mA, short-circuit protected

9.8 Digital outputs (relay outputs)

Normally open contacts	C, NO
Maximum contact load	240 VAC, 2 A
Minimum contact load	5 VDC, 10 mA

9.9 Conductors

Rigid conductors	0.5 - 2.5 mm ²
Flexible conductors without ferrule	20-13 AWG (US)
Flexible conductors with ferrule	0.5 - 1.5 mm ²
With/without plastic collar	20-13 AWG (US)

9.10 USB port

USB port	USB 2.0, type B
----------	-----------------

9.11 Battery backup (UPS)

A battery can be connected to the CU 3X2 as backup for the normal power supply. The battery can be connected directly to the CU 3X2 without a fuse. With the backup battery the CU 3X2 can continue to operate despite interruptions in the normal power supply.

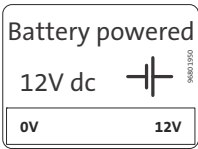


Fig. 16 Label for backup battery

9.11.1 Battery data

The backup battery should meet the below requirements:

Battery make	Power Sonic
Battery type	Lead acid battery AGM type
Battery series	PS 12xxx series UL R/C under file number MH20845
Rated voltage	12 V
Battery capacity	40 Ah, recommended (24 hours operating time)
Nominal charging time	8 hours (40 Ah battery)

9.11.2 Battery monitoring

The CU 3X2 can monitor the following:

- short circuit
- wrong polarity
- defective battery
- battery missing
- low battery voltage.

9.12 Terminal groups

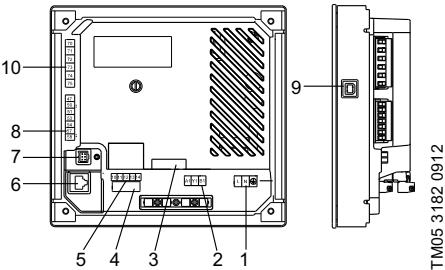


Fig. 17 Terminal groups

The terminals of the groups 2, 3, 5 and 6 are insulated from all other terminal groups by reinforced insulation, 2224 VAC.

Group 1	Connection of power supply
Group 2	Internal GENIbus connection
Group 3	Fieldbus connection (CIM module) (not standard)
Group 4	Connection of backup battery
Group 5	Digital inputs
Group 6	Ethernet connection
Group 7	Service connection (GENIbus)
Group 8	Analog inputs
Group 9	USB port
Group 10	Digital outputs

All control terminals in groups 2, 3, 5 and 6 are supplied with SELV voltage (Safety Extra-Low Voltage).

10. Overview of inputs and outputs

DI: Digital input

DO: Digital output

AI: Analog input


NC: Normally closed contact

NO: Normally open contact

C: Common.

Position numbers, see fig. 17.

Group	Terminal	Designation	Data	Diagram
1	L	Connection to phase conductor	1 x 100-240 VAC ± 10 %, 50/60 Hz	
	N	Connection to neutral conductor		
	PE	Connection to protective earth		
2	A1	RS-485 A	GENIbus (Fix the screen with a cable clamp.)	
	Y1	RS-485 GND		
	B1	RS-485 B		
		Functional earth		
3	Connection to external fieldbus, see installation and operating instructions for the CIM module.			
4	0 V +12 VDC	Connection to battery	Backup battery	
5	10	DI1	Digital input	
	11	GND		
	12	DI2		
	13	GND		
	14	DI3		
All terminals (except mains terminals) must only be connected to voltages not exceeding 16 V _{rms} and 22.6 V _{peak} or 35 VDC.				
Ethernet RJ45				
6	External computing devices connected to the Ethernet connection must comply with the standards IEC 60950 and UL 60950.			
7	GENIbus		Service connection	
8	47	+24 V	Supply to sensor. Short-circuit-protected 30 mA	
	50	+24 V	Supply to sensor. Short-circuit-protected 30 mA	
	51	AI1	Input for analog signal, 0-20/4-20 mA or 0-10 V	
	53	+24 V	Supply to sensor. Short-circuit-protected 30 mA	
	54	AI2	Input for analog signal, 0-20/4-20 mA or 0-10 V	
	57	AI3	Input for analog signal, 0-20/4-20 mA or 0-10 V	
	58	GND*		
All terminals (except mains terminals) must only be connected to voltages not exceeding 16 V _{rms} and 22.6 V _{peak} or 35 VDC.				

Group	Terminal	Designation	Data	Diagram
9		USB port	USB 2.0, type B	
10	70	Relay 1	C	
	71		NO	
	72		NC	
	73	Relay 2	C	
	74		NO	
	75		NC	

* GND is isolated from other earth connections.

11. Maintenance

The CU 3X2 is maintenance-free during normal use and operation. It should be cleaned with a wet cloth.

12. Service

The CU 3X2 cannot be serviced. It must be replaced if faulty. See section 13. *Replacing the CU 3X2*.

13. Replacing the CU 3X2

- 1. Switch off the power supply to the CU 3X2.
- 2. Switch off the power supply to components with external supply.
- 3. Mark the individual conductors with the numbers of the corresponding terminals.
- 4. Disconnect all conductors.
- 5. Remove the CU 3X2 from the panel/cabinet.
- 6. Fit the new unit as described in section 5. *Mechanical installation*.
- 7. Connect all conductors according to markings.
- 8. Configure the new CU 3X2 by means of a PC Tool. See service instructions for the product in question.

13.1 Replacing the CIM module

See also section 6.3 *Fitting the CIM module*.

- 1. Switch off the power supply to the CU 3X2.
- 2. Switch off the power supply to components with external supply.
- 3. Mark the individual conductors with the numbers of the corresponding terminals.
- 4. Remove the screws that holds the CIM module.
- 5. Remove the CIM module from the CU 3X2.
- 6. Fit the new CIM module.
- 7. Connect the CIM module as described in the installation and operating instructions supplied with the CIM module.

14. Dimensions

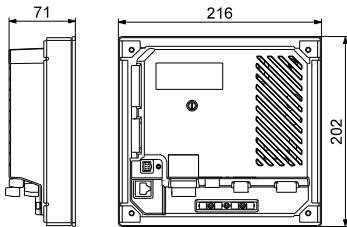


Fig. 18 Dimensional sketch

15. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

- 1. Use the public or private waste collection service.
- 2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

TM04 2068 1908

中国 RoHS

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴联苯醚 (PBDE)
印刷电路板	X	O	O	O	O	O
紧固件	X	O	O	O	O	O
本表格依据 SJ/T 11364 的规定编制 O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。 X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 该规定的限量要求。  该产品环保使用期限为 10 年，标识如左图所示。 此环保期限只适用于产品在安装与使用说明书中所规定的条件下工作						

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the products CU323, CU352, CU354, CU362, CU372, to which the declaration below relates, are in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky CU323, CU352, CU354, CU362, CU372, na které se toto prohlášení vztahuje, jsou v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství.

DK: EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne CU323, CU352, CU354, CU362, CU372 som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EU-medlemsstaternes lovgivning.

ES: Declaración de conformidad de la UE

Grundfos declara, bajo su exclusiva responsabilidad, que los productos CU323, CU352, CU354, CU362, CU372 a los que hace referencia la siguiente declaración cumplen lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la UE.

FR: Déclaration de conformité UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits CU323, CU352, CU354, CU362, CU372, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des États membres UE relatives aux normes énoncées ci-dessous.

HR: EU deklaracija sukladnosti

Mi, Grundfos, izjavljujemo s punom odgovornošću da su proizvodi CU323, CU352, CU354, CU362, CU372, na koja se izjava odnosi u nastavku, u skladu s direktivama Vijeća dolje navedene o usklađivanju zakona država članica EU-a.

IT: Dichiarazione di conformità UE

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti CU323, CU352, CU354, CU362, CU372, ai quali si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri UE.

LV: ES atbilstības deklarācija

Sabiedrība Grundfos ar pilnu atbildību paziņo, ka produkti CU323, CU352, CU354, CU362, CU372, uz kuriem attiecas tālāk redzamā deklarācija, atbilst tālāk norādītajām Padomes direktīvām par EK/ES dalībvalstu normatīvo aktu tuvināšanu.

PL: Deklaracja zgodności UE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze produkty CU323, CU352, CU354, CU362, CU372, których deklaracją niniejsza dotyczy, są zgodne z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich.

RO: Declarația de conformitate UE

Noi Grundfos declarăm pe propria răspundere că produsele CU323, CU352, CU354, CU362, CU372, la care se referă această declarație, sunt în conformitate cu Directivele de Consiliu specificate mai jos privind armonizarea legilor statelor membre UE.

RU: Декларация о соответствии нормам ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия CU323, CU352, CU354, CU362, CU372, к которым относится нижеприведенная декларация, соответствуют нижеприведенным Директивам Совета Евросоюза о тождественности законов стран-членов ЕС.

SI: Izjava o skladnosti EU

V Grundfosu s polno odgovornostjo izjavljamo, da je izdelek CU323, CU352, CU354, CU362, CU372, na katerega se spodnja izjava nanaša, v skladu s spodnjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic EU.

BG: Декларация за съответствие на ЕО

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продуктите CU323, CU352, CU354, CU362, CU372, за които се отнася настоящата декларация, отговарят на следните директиви на Съвета за уеднавяване на правните разпоредби на държавите-членки на ЕО.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte CU323, CU352, CU354, CU362, CU372, auf die sich diese Erklärung beziehen, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen.

EE: EÜ vastavusdeklaratsioon

Meie, Grundfos, kinnitame ja kanname ainusikulist vastutust selle eest, et toode CU323, CU352, CU354, CU362, CU372, mille kohta all olev deklaratsioon käib, on kooskõlas Nõukogu Direktiividega, mis on nimetatud all pool vastavalt vastuvõetud õigusaktidele ühtlustamise kohta EÜ liikmesriikides.

FI: EU-vaatimustenmukaisuusvakuutus

Grundfos vakuuttaa omalla vastuullaan, että tuotteet CU323, CU352, CU354, CU362, CU372, joita tämä vakuutus koskee, ovat EU:n jäsenvaltioiden lainsäädännön lähentämiseen tähtäviin Euroopan neuvoston direktiivien vaatimusten mukaisia seuraavasti.

GR: Δήλωση συμμόρφωσης ΕΕ

Εμείς, η Grundfos, δηλώνουμε με αποκλειστική δική μας ευθύνη ότι τα προϊόντα CU323, CU352, CU354, CU362, CU372, στα οποία αναφέρεται η παρακάτω δήλωση, συμμορφώνονται με τις παρακάτω Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΕ.

HU: EU megfelelőségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) CU323, CU352, CU354, CU362, CU372 termékek, amelyre az alábbi nyilatkozat vonatkozik, megfelelnek az Európai Unió tagállamainak jogi irányelveit összhangoló tanács alábbi előírásainak.

LT: ES atitikties deklaracija

Mes, Grundfos, su visa atsakomybe pareiškiame, kad produktai CU323, CU352, CU354, CU362, CU372, kuriems skirta ši deklaracija, atitinka žemiau nurodytas Tarybos Direktivas dėl ES šalių narių įstatymų suderinimo.

NL: EU-conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat de producten CU323, CU352, CU354, CU362, CU372, waarop de onderstaande verklaring betrekking heeft, in overeenstemming zijn met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EU-lidstaten.

PT: Declaração de conformidade UE

A Grundfos declara sob sua única responsabilidade que os produtos CU323, CU352, CU354, CU362, CU372, aos quais diz respeito a declaração abaixo, estão em conformidade com as Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da UE.

RS: Deklaracija o usklađenosti EU

Mi, kompanija Grundfos, izjavljujemo pod punom vlastitom odgovornošću da je proizvod CU323, CU352, CU354, CU362, CU372, na koji se odnosi deklaracija ispod, u skladu sa dole prikazanim direktivama Saveta za usklađivanje zakona država članica EU.

SE: EU-försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkterna CU323, CU352, CU354, CU362, CU372, som omfattas av nedanstående försäkran, är i överensstämmelse med de rådsdirektiv om inbördes närmande till EU-medlemsstaternas lagstiftning som listas nedan.

SK: ES vyhlásenie o zhode

My, spoločnosť Grundfos, vyhlasujeme na svoju plnú zodpovednosť, že produkty CU323, CU352, CU354, CU362, CU372 na ktoré sa vyhlásenie uvedené nižšie vzťahuje, sú v súlade s ustanoveniami nižšie uvedených smerníc Rady pre zblíženie právnych predpisov členských štátov EÚ.

TR: AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirimi konusu olan CU323, CU352, CU354, CU362, CU372 ürünlerinin, AB Üye ülkelerinin direktiflerinin yakınlaştırılmasıyla ilgili durumun aşağıdaki Konsey Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğun bize ait olduğunu beyan ederiz.

CN: 欧盟符合性声明

我们，格兰富，在我们的全权责任下声明，产品 CU323, CU352, CU354, CU362, CU372，即该合格证所指之产品，欧盟使其成员国法律趋于一致的以下理事会指令。

KO: EU 적합성 선언

Grundfos는 아래의 선언과 관련된 CU323, CU352, CU354, CU362, CU372 제품이 EU 회원국 법률에 기반하여 아래의 이사회 지침을 준수함을 단독 책임 하에 선언합니다.

ID: Deklarasi kesesuaian Uni Eropa

Kami, Grundfos, menyatakan dengan tanggung jawab kami sendiri bahwa produk CU323, CU352, CU354, CU362, CU372, yang berkaitan dengan pernyataan ini, sesuai dengan Petunjuk Dewan berikut ini serta sedapat mungkin sesuai dengan hukum negara-negara anggota Uni Eropa.

MK: Декларација за сообразност на ЕУ

Ние, Grundfos, изјавуваме под целосна одговорност дека произведите CU323, CU352, CU354, CU362, CU372, на кои се однесува допунаведената декларација, се во согласност со овие директиви на Советот за приближување на законите на земјите-членки на ЕУ.

NO: EUs samsvarsærklæring

Vi, Grundfos, erklærer under vårt eneansvar at produktene CU323, CU352, CU354, CU362, CU372 som denne erklæringen gjelder, er i samsvar med styrets direktiver om tilnærming av forordninger i EU-landene.

TH: คำประกาศความสอดคล้องตามมาตรฐาน EU

เราในนามของบริษัท Grundfos ขอประกาศภายใต้ความรับผิดชอบของเราแต่เพียงผู้เดียวว่าผลิตภัณฑ์ CU323, CU352, CU354, CU362, CU372 ซึ่งเกี่ยวข้องกับคำประกาศนี้ มีความสอดคล้องกับระเบียบค่าส่งตามรายการด้านล่างนี้ของสภาราชชาติว่าด้วยค่าประมาณค่าตามกฎหมายของรัฐที่เป็นสมาชิก EU

VI: Tuyên bố tuân thủ EU

Chúng tôi, Grundfos, tuyên bố trong phạm vi trách nhiệm duy nhất của mình rằng sản phẩm CU323, CU352, CU354, CU362, CU372 mà tuyên bố dưới đây có liên quan tuân thủ các Chỉ thị Hội đồng sau về việc áp dụng luật pháp của các nước thành viên EU.

UA: Декларація відповідності директивам ЕУ

Ми, компанія Grundfos, під нашу одноосібну відповідальність заявляємо, що вироби CU323, CU352, CU354, CU362, CU372, до яких відноситься нижченаведена декларація, відповідають директивам ЕУ, переліченим нижче, щодо тотожності законів країн-членів ЄС.

JP: EU 適合宣言

Grundfos は、その責任の下に、CU323, CU352, CU354, CU362, CU372 製品が EU 加盟諸国の法規に関連する、以下の評議会指令に適合していることを宣言します。

BS: Izjava o usklađenosti EU

Mi, kompanija Grundfos, izjavljujemo pod vlastitom odgovornošću da je proizvod CU323, CU352, CU354, CU362, CU372, na koji se odnosi izjava ispod, u skladu sa niže prikazanim direktivama Vijeća o usklađivanju zakona država članica EU.

KZ: Сәйкестік жөніндегі ЕО декларациясы

Біз, Grundfos, ЕО мүше елдерінің заңдарына жақын төменде көрсетілген Кеңес директиваларына сәйкес төмендегі декларацияға қатысты CU323, CU352, CU354, CU362, CU372 өнімдері біздің жеке жауапкершілігімізде екенін мәлімдейміз.

MY: Perisytiharan keakuran EU

Kami, Grundfos, mengisytiharkan di bawah tanggungjawab kami semata-mata bahawa produk CU323, CU352, CU354, CU362, CU372, yang berkaitan dengan perisytiharan di bawah, akur dengan Perintah Majlis yang disenaraikan di bawah ini tentang penghampiran undang-undang negara ahli EU.

AR: إقرار مطابقة EU

نحن نحن، جروندفوس، بمقتضى مسؤوليتنا الفردية بآن المتوجين الذين يختص بهذا الإقرار أدناه، يكونان مطابقين لتوجيهات المجلس المذكورة أدناه بشأن التقريب (بين قوانين الدول أعضاء المجموعة الأوروبية/الاتحاد الأوروبي EU).

TW: EU 合格聲明

葛蘭富根據我們唯一的責任，茲聲明與以下聲明相關之 CU323, CU352, CU354, CU362, CU372 產品，符合下列近似 EU 會員國法律之議會指令。

AL: Deklara e konformitetit të BE

Ne, Grundfos, deklarojmë vetëm nën përgjegjësinë tonë se produktet CU323, CU352, CU354, CU362, CU372, me të cilat lidhet kjo deklarata, janë në pajtueshmëri me direktivat e Këshillit të renditura më poshtë për përfaqsimin e ligjeve të shteteve anëtare të BE-së.

- Low Voltage Directive (2014/35/EU).
Standard used:
EN 61010-1:2010
- EMC Directive (2014/30/EU).
Standard used:
EN61326-1:2013
- RoHS2 Directive (2011/65/EU and 2015/863/EU).
Standard used: EN50581:2012

This EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication number 96842987 0220).

Bjerringbro, 18/1/2017



Svend Aage Kaae
Director
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile the technical file and empowered to sign the EU declaration of conformity.

Declaration of conformity EAC



Блоки управления насосами серии CU сертифицированы на соответствие требованиям Технических регламентов Таможенного союза: ТР ТС 004/2011 "О безопасности низковольтного оборудования"; ТР ТС 020/2011 "Электромагнитная совместимость технических средств".

Сертификат соответствия:

№ ТС RU C-DK.AИ30.B.01166, срок действия до 07.12.2019г.

Выдан: Органом по сертификации продукции "ИВАНОВО-СЕРТИФИКАТ" ООО "Ивановский Фонд Сертификации".

Адрес: 153032, Российская Федерация, г. Иваново, ул. Станкостроителей, д.1

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romanian@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskovaška 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses Revised 15.01.2019

96842987 0220
ECM: 1279482

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved.
© 2020 Grundfos Holding A/S, all rights reserved.