


AP70

- ⓖⓑ Installation and operating instructions
- ⓓ Montage- und Betriebsanleitung
- ⓕ Notice d'installation et d'entretien
- ⓖ Istruzioni di installazione e funzionamento
- ⓔ Instrucciones de instalación y funcionamiento
- ⓖ Instruções de instalação e funcionamento
- ⓖⓚ Οδηγίες εγκατάστασης και λειτουργίας
- ⓓⓕ Installatie- en bedieningsinstructies
- Ⓢ Monterings- och driftsinstruktion
- ⓕⓕ Asennus- ja käyttöohjeet
- ⓓⓕ Monterings- og driftsinstruktion

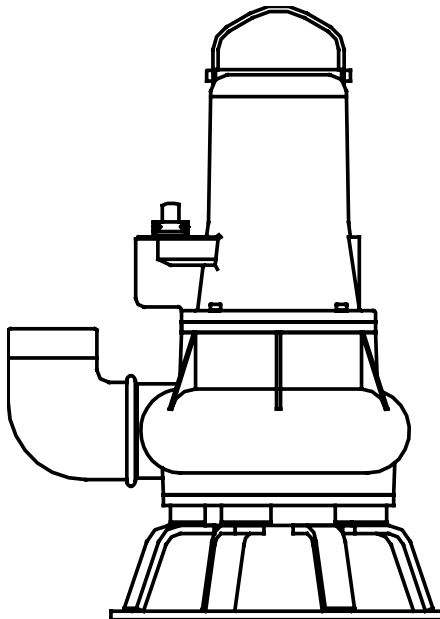

Declaration of Conformity

We **GRUNDFOS** declare under our sole responsibility that the products **AP70**, to which this declaration relates, are in conformity with the Council Directives on the approximation of the laws of the EEC Member States relating to

- Machinery (98/37/EEC).
Standard used: EN 292.
- Electromagnetic compatibility (89/336/EEC).
Standards used: EN 61 000-6-2 and EN 61 000-6-3.
- Electrical equipment designed for use within certain voltage limits (73/23/EEC).
Standards used: EN 60 335-1 and EN 60 335-2-41.

Déclaration de Conformité

Nous **GRUNDFOS** déclarons sous notre seule responsabilité que les produits **AP70** auxquels se réfère cette déclaration sont conformes aux Directives du Conseil concernant le rapprochement des législations des Etats membres CEE relatives à

- Machines (98/37/CEE).
Standard utilisé: EN 292.
- Compatibilité électromagnétique (89/336/CEE).
Standards utilisés: EN 61 000-6-2 et EN 61 000-6-3.
- Matériel électrique destiné à employer dans certaines limites de tension (73/23/CEE).
Standards utilisés: EN 60 335-1 et EN 60 335-2-41.

Declaración de Conformidad

Nosotros **GRUNDFOS** declaramos bajo nuestra única responsabilidad que los productos **AP70** a los cuales se refiere esta declaración son conformes con las Directivas del Consejo relativas a la aproximación de las legislaciones de los Estados Miembros de la CEE sobre

- Máquinas (98/37/CEE).
Norma aplicada: EN 292.
- Compatibilidad electromagnética (89/336/CEE).
Normas aplicadas: EN 61 000-6-2 y EN 61 000-6-3.
- Material eléctrico destinado a utilizarse con determinadas límites de tensión (73/23/CEE).
Normas aplicadas: EN 60 335-1 y EN 60 335-2-41.

Δήλωση Συμμόρφωσης

Εμείς η **GRUNDFOS** δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα **AP70** συμμορφώνονται με την Οδηγία του Συμβουλίου επί της σύγκλισης των νόμων των Κρατών Μελών της Ευρωπαϊκής Ένωσης σε σχέση με τα

- Μηχανήματα (98/37/EEC).
Πρότυπο που χρησιμοποιήθηκε: EN 292.
- Ηλεκτρομαγνητική συμβατότητα (89/336/EEC).
Πρότυπα που χρησιμοποιήθηκαν: EN 61 000-6-2 και EN 61 000-6-3.
- Ηλεκτρικές συσκευές σχεδιασμένες για χρήση εντός ορισμένων ορίων ηλεκτρικής τάσης (73/23/EEC).
Πρότυπα που χρησιμοποιήθηκαν: EN 60 335-1 και EN 60 335-2-41.

Försäkran om överensstämmelse

Vi **GRUNDFOS** försäkrar under ansvar, att produkterna **AP70**, som omfattas av denna försäkran, är i överensstämmelse med Rådets Direktiv om inbördes närmande till EU-medlemsstaternas lagstiftning, avseende

- Maskinell utrustning (98/37/EEC).
Använd standard: EN 292.
- Elektromagnetisk kompatibilitet (89/336/EC).
Använda standarder: EN 61 000-6-2 och EN 61 000-6-3.
- Elektrisk material avsedd för användning inom vissa spänningsgränser (73/23/EC).
Använda standarder: EN 60 335-1 och EN 60 335-2-41.

Overensstemmelseserklæring

Vi **GRUNDFOS** erklærer under ansvar, at produkterne **AP70**, som denne erklæring omhandler, er i overensstemmelse med Rådets direktiver om indbyrdes tilnærmelse til EF medlemsstaternes lovgivning om

- Maskiner (98/37/EØF).
Anvendt standard: EN 292.
- Elektromagnetisk kompatibilitet (89/336/EØF).
Anvendte standarder: EN 61 000-6-2 og EN 61 000-6-3.
- Elektrisk materiel bestemt til anvendelse inden for visse spændingsgrænser (73/23/EØF).
Anvendte standarder: EN 60 335-1 og EN 60 335-2-41.

Konformitätserklärung

Wir **GRUNDFOS** erklären in alleiniger Verantwortung, daß die Produkte **AP70**, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-Mitgliedstaaten übereinstimmen:

- Maschinen (98/37/EWG).
Norm, die verwendet wurde: EN 292.
- Elektromagnetische Verträglichkeit (89/336/EWG).
Normen, die verwendet wurden: EN 61 000-6-2 und EN 61 000-6-3.
- Elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen (73/23/EWG).
Normen, die verwendet wurden: EN 60 335-1 und EN 60 335-2-41.

Dichiarazione di Conformità

Noi **GRUNDFOS** dichiariamo sotto la nostra esclusiva responsabilità che i prodotti **AP70** ai quali questa dichiarazione si riferisce sono conformi alle Direttive del Consiglio concernente il ravvicinamento delle legislazioni degli Stati membri CEE relative a

- Macchine (98/37/CEE).
Standard usato: EN 292.
- Compatibilità elettromagnetica (89/336/CEE).
Standard usati: EN 61 000-6-2 e EN 61 000-6-3.
- Materiale elettrico destinato ad essere utilizzato entro certi limiti di tensione (73/23/CEE).
Standard usati: EN 60 335-1 e EN 60 335-2-41.

Declaração de Conformidade

Nós **GRUNDFOS** declaramos sob nossa única responsabilidade que os produtos **AP70** aos quais se refere esta declaração estão em conformidade com as Directivas do Conselho das Comunidades Europeias relativas à aproximação das legislações dos Estados Membros respeitantes à

- Máquinas (98/37/CEE).
Norma utilizada: EN 292.
- Compatibilidade electromagnética (89/336/CEE).
Normas utilizadas: EN 61 000-6-2 e EN 61 000-6-3.
- Material eléctrico destinado a ser utilizado dentro de certos limites de tensão (73/23/CEE).
Normas utilizadas: EN 60 335-1 e EN 60 335-2-41.

Overeenkomstigheidsverklaring

Wij **GRUNDFOS** verklaren geheel onder eigen verantwoordelijkheid dat de producten **AP70** waarop deze verklaring betrekking heeft in overeenstemming zijn met de Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgevingen van de Lid-Staten betreffende

- Machines (98/37/EEG).
Norm: EN 292.
- Elektromagnetische compatibiliteit (89/336/EEG).
Normen: EN 61 000-6-2 en EN 61 000-6-3.
- Elektrisch materiaal bestemd voor gebruik binnen bepaalde spanningsgrenzen (73/23/EEG).
Normen: EN 60 335-1 en EN 60 335-2-41.

Vastaavuusvakuutus

Me **GRUNDFOS** vakuutamme yksin vastuullisesti, että tuotteet **AP70**, jota tämä vakuutus koskee, noudattavat direktiivejä jotka käsittelevät EY:n jäsenvaltioiden koneellisia laitteita koskevien laki- en yhdenmukaisuutta seur.

- Koneet (98/37/EY).
Käytetty standardi: EN 292.
- Elektromagneettinen vastaavuus (89/336/EY).
Käytetyt standardit: EN 61 000-6-2 ja EN 61 000-6-3.
- Määrättyjen jänniterajoitusten puitteissa käytettävät sähköiset laitteet (73/23/EY).
Käytetyt standardit: EN 60 335-1 ja EN 60 335-2-41.

Bjerringbro, 1st May 2002



Kenth Hvid Nielsen
Technical Manager

AP70

**Installation and
operating instructions**

Page 4

GB

**Montage- und
Betriebsanleitung**

Seite 8

D

**Notice d'installation
et d'entretien**

Page 14

F

**Istruzioni di installazione
e funzionamento**

Pag. 19

I

**Instrucciones de instalación
y funcionamiento**

Pág. 23

E

**Instruções de instalação
e funcionamento**

Pág. 27

P

**Οδηγίες εγκατάστασης
και λειτουργίας**

Σελίδα 31

GR

**Installatie- en
bedieningsinstructies**

Pag. 36

NL

**Monterings- och
driftsinstruktion**

Sida 40

S

**Asennus- ja
käyttöohjeet**

Sivu 44

SF

**Monterings- og
driftsinstruktion**

Side 48

DK

CONTENTS



	Page
1. General description	4
1.1 Applications	4
1.2 Operating conditions	4
1.3 Sound pressure level	4
2. Safety	4
3. Transportation and storage	4
4. Installation	4
4.1 Installation on auto-coupling	4
4.2 Free-standing installation	5
4.3 Pumps supplied with control box	5
4.4 Separate level controllers	5
5. Electrical connection	5
5.1 Motor protection	5
6. Start-up	6
6.1 Direction of rotation	6
7. Maintenance and service	6
7.1 Contaminated pumps	6
8. Fault finding chart	7
9. Disposal	7

 Before beginning installation procedures, these installation and operating instructions should be studied carefully. The installation and operation should also be in accordance with local regulations and accepted codes of good practice.

1. General description

1.1 Applications

GRUNDFOS AP70 pumps are designed for pumping:

- wastewater,
- sludge-containing water,
- groundwater,
- sewage from restaurants, hotels, camping sites, etc.

The compact design makes the pumps suitable for both temporary and permanent installation. Furthermore, the pumps are suitable for free-standing installation as well as installation by means of an auto-coupling guide rail system.

1.1.1 Explosive environments

Use the explosion-proof AP pump versions for applications involving the risk of explosion.

Note: In each individual case the explosion classification of the pump **must** be approved by the local authorities for use at the desired installation site.

1.2 Operating conditions

1.2.1 pH-value

AP pumps in permanent installations can cope with pH-values ranging from 4 to 10.

1.2.2 Liquid temperature

Liquid temperature: 0°C to +40°C.

For short periods up to +60°C.

1.2.3 Density of pumped liquid

Maximum density of pumped liquid: 1100 kg/m³.

1.2.4 Installation depth

Maximum 10 metres below liquid level.

1.2.5 Level of pumped liquid

The lowest stop level must always be above the top of the pump housing.

1.2.6 Operation

Maximum 15 starts per hour.

Note: The pumps are designed for intermittent operation only.

1.3 Sound pressure level

The sound pressure level of the pump is lower than the limiting values stated in the EC Council Directive 98/37/EEC relating to machinery.

2. Safety

 Pump installation in wells must be carried out by specially trained persons.

3. Transportation and storage

The pump may be transported and stored in a vertical or horizontal position. Make sure that it cannot roll or fall over.

Always lift the pump by its carrying handle, **never** by the motor cable or the hose/pipe.

For long periods of storage, the pump must be protected against moisture and heat.

After a long period of storage, the pump should be inspected before it is put into operation. Make sure that the impeller can rotate freely. Pay special attention to the shaft seals and the cable entry.

4. Installation

The loose nameplate supplied with the pump should be fixed at the installation site.

Prior to installation, check the oil level in the oil chamber, see section 7. *Maintenance and service*.

4.1 Installation on auto-coupling

See figs. A and B, pages 52 and 53.

Pumps for permanent installation can be installed on a stationary auto-coupling and operated completely or partially submerged in the pumped liquid.

1. Drill mounting holes for guide rail bracket on the inside of the pit and fasten the guide rail bracket provisionally with two screws.

2. Place the auto-coupling base unit on the bottom of the pit. Use a plumb line to establish the correct positioning. Fasten with heavy-duty expansion bolts. If the bottom of the pit is uneven, the auto-coupling base unit must be supported so that it is level when being fastened.
3. Assemble the discharge line in accordance with the generally accepted procedures and without exposing the line to distortion or tension.
4. Insert the guide rails in the rings of the auto-coupling base unit and adjust the length of the rails accurately to the guide rail bracket.
5. Unscrew the provisionally fastened guide rail bracket, fit it on top of the guide rails and finally fasten it firmly to the pit wall.

Note: The guide rails must not have any axial play as this would cause noise during pump operation.

6. Clean out debris from the pit before lowering the pump into the pit.
7. Fit the auto-coupling half on to the discharge port of the pump. Then slide the guide bar of this coupling half between the guide rails and lower the pump into the pit by means of a chain. When the pump reaches the auto-coupling base unit, the pump will automatically connect tightly.
8. Hang up the end of the chain on a suitable hook at the top of the pit.
9. Adjust the length of the motor cable by coiling it up on a relief fitting, so the cable is not damaged during operation. Fasten the relief fitting to a suitable bracket at the top of the pit. Make sure that the cables are not sharply bent or pinched.

Note: The end of the cable must not be submerged, as water may penetrate through the cable into the motor.

4.2 Free-standing installation

See fig. C, page 54.

AP70 pumps should be provided with a separate base stand.

For free-standing installation of the pumps, fit a 90° elbow to the discharge port. The pump can be installed with a hose or rigid pipe and valves.

In order to facilitate service of the pump, fit a flexible union or coupling to the discharge line for easy separation.

If a hose is used, make sure that the hose does not buckle and that the inside diameter of the hose matches that of the discharge port.

If a rigid pipe is used, the union or coupling, non-return valve and isolating valve should be fitted in the sequence mentioned, as seen from the pump side.

Lower the pump into the liquid.

If the pump is installed in muddy conditions or on uneven ground, it is recommended to support the pump on bricks.

4.3 Pumps supplied with control box

Pumps supplied with a control box may be supplied with a level switch with cable. The level switch cable, if supplied, should be fastened in the retainer on the pump handle.

The difference in level between start and stop may be adjusted by adjusting the free length of cable between the level switch and the retainer.

Large difference in level: Long cable.

Small difference in level: Short cable.

4.4 Separate level controllers

Three-phase AP pumps without control box or level switch can be supplied with a separate level controller with level switches: Type LC for one-pump installations and type LCD for two-pump installations.

LC is fitted with two or three level switches. The third level switch, which is optional, is for high-level alarm.

LCD is fitted with three or four level switches: one for common stop and two for start of pumps. The fourth level switch, which is optional, is for high-level alarm.

When installing the level switches, the following points should be observed:

- To prevent air intake and vibrations, the **stop level switch** must be fitted in such a way that the pump is stopped before the liquid level is lowered below the top of the pump housing.
- The **start level switch** should be installed in such a way that the pump is started at the required level; however, the pump must always be started before the liquid level reaches the bottom inlet pipe in the pit.
- The **high-level alarm switch**, if installed, should always be installed about 10 cm above the starting level switch; however, alarm must always be given before the liquid level reaches the inlet pipe to the pit.

5. Electrical connection


The electrical connection of the pump should be carried out in accordance with local regulations.

The operating voltage and frequency are marked on the nameplate. Voltage tolerance: $\pm 10\%$ of the voltage stated on the nameplate. Make sure that the motor is suitable for the electricity supply available at the installation site.

5.1 Motor protection

All three-phase GRUNDFOS AP pumps supplied *without* control box must be connected to a separate motor starter. The explosion-proof pumps have a thermal switch built into the motor windings. The thermal switch is connected to the control circuit of the motor starter, see fig. 1.

Fig. 1

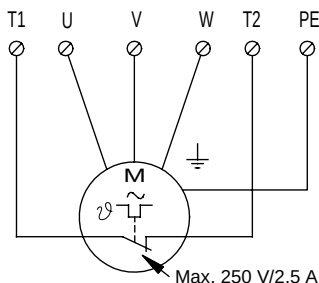

TM00 1618 0693



The separate control box/motor starter must not be installed in explosive environments.

6. Start-up

Do not start up the pump until the system has been filled with liquid and vented. Make sure that the pump is submerged in the liquid, open the isolating valves, if fitted, and check the setting of the level switches.

Note: The pump may, however, be started for a very short period without being submerged for checking of the direction of rotation.

6.1 Direction of rotation

Before starting up three-phase pumps, check the direction of rotation. The direction of rotation should be clockwise when viewed from above. When starting up, the pump will jerk in the opposite direction to the direction of rotation. If the direction of rotation is wrong, interchange two of the three phases of the electricity supply.

7. Maintenance and service



Before starting work on the pump, make sure that the electricity supply has been switched off and that it cannot be accidentally switched on. Furthermore, all rotating parts must have stopped moving.

Before carrying out maintenance and service, make sure that the pump has been thoroughly flushed with clean water. Rinse the pump parts in water after dismantling.



When unscrewing the inspection screw of the oil chamber, please note that pressure may have built up in the chamber. Do not remove the screw until the pressure has been fully relieved.

Pumps running normal operation should be inspected at least once a year. If the pumped liquid is very muddy or sandy, inspect the pump at shorter intervals.

When the pump is new or after replacement of the shaft seals, check the oil level after one week of operation.

For long and trouble-free operation of the pump the following points should be checked regularly:

- **Power consumption**

- **Oil level and oil condition**

The oil becomes greyish white like milk if it contains water. This may be the result of a defective shaft seal. The oil should be replaced after 3000 hours of operation.

Use Shell Ondina 15 oil or similar type.

Note: Used oil must be disposed of in accordance with local regulations.

The following table states how much oil the AP pumps must have in the oil chamber:

Pump type	Quantity of oil in oil chamber
AP70.80.09.3	0.80 l
AP70.80.09.3Ex	0.80 l
AP70.80.13.3	0.80 l
AP70.80.13.3Ex	0.80 l
AP70.80.19.3	1.20 l
AP70.80.19.3Ex	1.20 l
AP70.80.24.3	1.20 l
AP70.80.24.3Ex	1.20 l

Ex = explosion-proof.

- **Cable entry**

Make sure that the cable entry is watertight and that the cables are not bent sharply and/or pinched.

- **Pump parts**

Check the impeller, pump housing, neck ring, etc. for possible wear. Replace defective parts.

- **Ball bearings**

Check the shaft for noisy or heavy operation (turn the shaft by hand). Replace defective ball bearings.

A general overhaul of the pump is usually required in case of defective ball bearings or poor motor function. This work must be carried out by the manufacturer or a competent workshop.

7.1 Contaminated pumps

Note: If a pump has been used for a liquid which is injurious to health or toxic, the pump will be classified as contaminated.

If GRUNDFOS is requested to service the pump, GRUNDFOS must be contacted with details about the pumped liquid, etc. *before* the pump is returned for service. Otherwise GRUNDFOS can refuse to accept the pump for service.

Possible costs of returning the pump are paid by the customer.

However, any application for service (no matter to whom it may be made) must include details about the pumped liquid if the pump has been used for liquids which are injurious to health or toxic.

8. Fault finding chart



Make sure that all power supplies have been switched off and that all rotating parts have stopped moving before attempting to diagnose any fault.

Fault	Cause	Remedy
1. Motor does not start. Fuses blow or motor starter trips out immediately. Caution: Do not start again!	a) Supply failure; short-circuit; earth-leakage fault in cable or motor winding.	Have the cable and motor checked and repaired by a qualified electrician.
	b) Fuses blow due to use of wrong type of fuse.	Install fuses of the correct type.
	c) Impeller blocked by impurities.	Clean the impeller.
	d) Level switch out of adjustment or defective.	Check the level switch.
2. Pump operates, but motor starter trips out after a short while.	a) Low setting of thermal relay in motor starter.	Set the relay in accordance with the specifications on the name-plate.
	b) Increased current consumption due to large voltage drop.	Measure the voltage between motor phases. Tolerance: $\pm 10\%$.
	c) Impeller blocked by impurities. Increased current consumption in all three phases.	Clean the impeller.
3. Pump operates at below-standard performance and power consumption.	a) Impeller blocked by impurities.	Clean the impeller.
	b) Wrong direction of rotation.	Check the direction of rotation and possibly interchange two phases, see section 6.1 <i>Direction of rotation</i> .
4. Pump operates, but gives no liquid.	a) Discharge valve closed or blocked.	Check discharge valve and possibly open and/or clean.
	b) Non-return valve blocked.	Clean non-return valve.
	c) Air in pump.	Vent the pump.


9. Disposal

Disposal of this product or parts of it must be carried out according to the following guidelines:

1. Use the local public or private waste collection service.
2. In case such waste collection service does not exist or cannot handle the materials used in the product, please deliver the product or any hazardous materials from it to your nearest GRUNDFOS company or service workshop.

- GB: 1-pump installation on auto-coupling
- D: Eine Pumpe mit Autokupplung
- F: Une pompe avec système d'accouplement automatique
- I: Una pompa con accoppiamento rapido
- E: Una bomba con autoacoplamiento
- P: Uma bomba com acoplamento automático
- GR: Εγκατάσταση μίας αντλίας με αυτόματη ζεύξη
- NL: Eén pomp met voetbochtsnelkoppeling
- S: En pump installerad med kopplingsfot
- SF: Yhden pumpun asennus jalustaliittimellä
- DK: En pumpe med auto-kobling

Fig. A

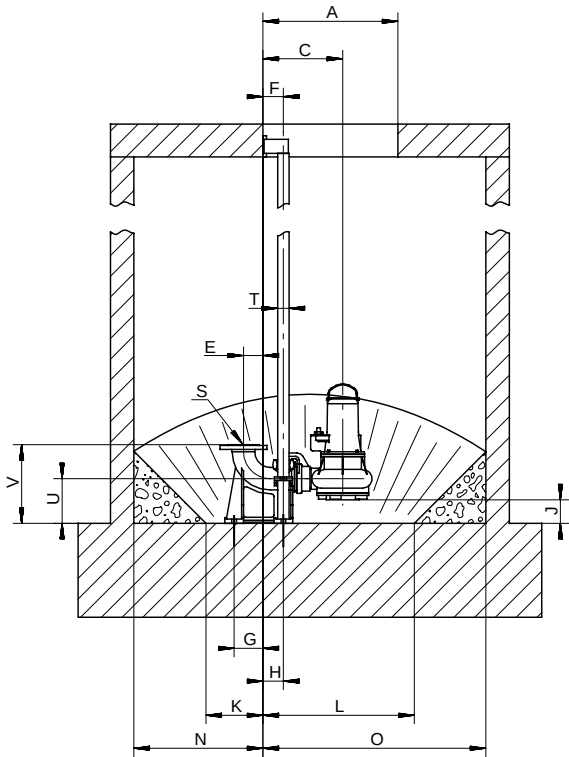


TM01 2580 2098

A	B	C	D	E	F	G	H	I	J
ø600	ø600	340	340	83	87	123	87	270	100

K	L	M	N	O	P	R	S	T	U	V
243	645	200	550	950	690	–	DN80	1½"	190	335

- GB: 2-pump installation on auto-coupling
- D: Zwei Pumpen mit Autokupplung
- F: Deux pompes avec système d'accouplement automatique
- I: Due pompe con accoppiamento rapido
- E: Dos bombas con autoacoplamiento
- P: Duas bombas com acoplamento automático
- GR: Εγκατάσταση δύο αντλιών με αυτόματη ζεύξη
- NL: Tvee pompen met voetbochtsnelkoppeling
- S: Två pumpar installerade med kopplingsfot
- SF: Kahden pumpun asennus jalustaliittimellä
- DK: To pumper med auto-kobling

Fig. B

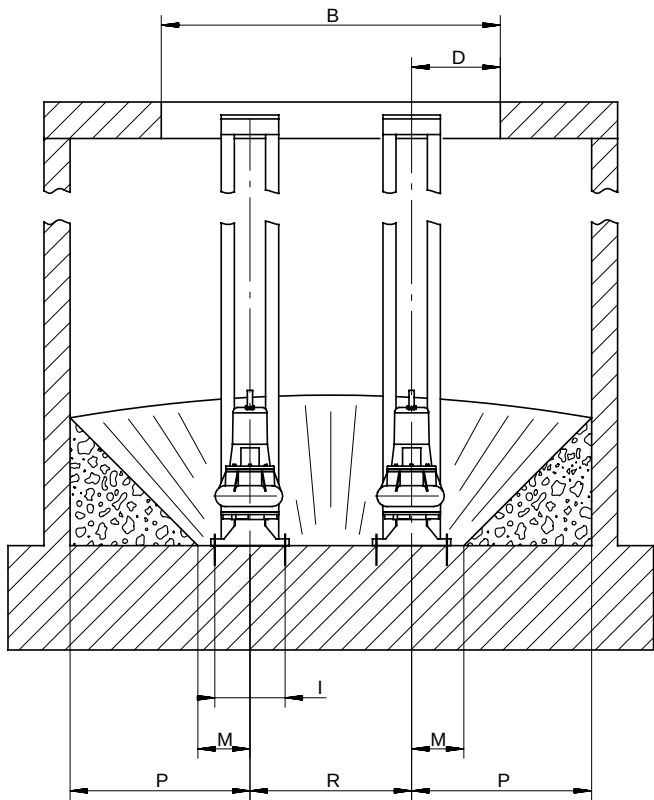


TM01 2581 2098

A	B	C	D	E	F	G	H	I	J
600	1300	340	340	83	87	123	87	270	100

K	L	M	N	O	P	R	S	T	U	V
243	645	200	820	1180	690	620	DN80	1½"	190	335

- GB: Free-standing Installation
- D: Freistehender Einbau
- F: Installation fixe sur socle
- I: Installazione su piede d'appoggio
- E: Instalación portátil
- P: Instalação autónoma
- GR: Ανεξάρτητη εγκατάσταση
- NL: Vrijstaande opstelling
- S: Fristående installation
- SF: Vapaasti seisova asennus
- DK: Fritstående installation

Fig. C

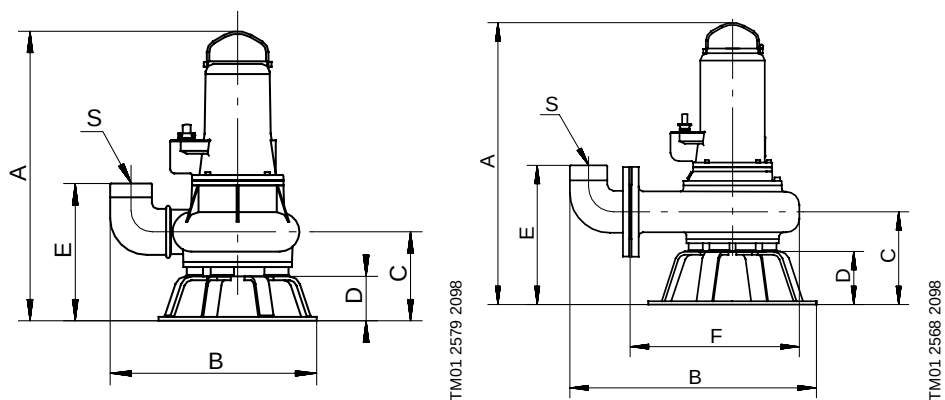

AP70	A	B	C	D	E	F	S
AP70.80.09.3	586	418	180	90	278	–	R 3
AP70.80.09.3Ex	586	418	180	90	278	–	R 3
AP70.80.13.3	586	418	180	90	278	–	R 3
AP70.80.13.3Ex	586	418	180	90	278	–	R 3
AP70.80.19.3	663	580	218	125	327	398	R 3
AP70.80.19.3Ex	663	580	218	125	327	398	R 3
AP70.80.24.3	663	580	218	125	327	398	R 3
AP70.80.24.3Ex	663	580	218	125	327	398	R 3

Denmark

GRUNDFOS DK A/S
Poul Due Jensens Vej 7A
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500
Lote 34A
1619 - Garin
Pcia. de Buenos Aires
Phone: +54-3327 414 444
Telefax: +54-3327 411 111

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Brazil

GRUNDFOS do Brasil Ltda.
Rua Tomazina 106
CEP 83325 - 040
Pinhais - PR
Phone: +55-41 668 3555
Telefax: +55-41 668 3554

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai)
Co. Ltd.
22 Floor, Xin Hua Lian Building
755-775 Huai Hai Rd, (M)
Shanghai 200020
PRC
Phone: +86-512-67 61 11 80
Telefax: +86-512-67 61 81 67

Czech Republic

GRUNDFOS s.r.o.
Cajkovského 21
779 00 Olomouc
Phone: +420-68-5716 111
Telefax: +420-68-543 8908

Finland

OY GRUNDFOS Pumput AB
Mestarintie 11
Piispankylä
FIN-01730 Vantaa (Helsinki)
Phone: +358-9 878 9150
Telefax: +358-9 878 91550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier
(Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou
Av.
P.O. Box 71
GR-19002 Peania
Phone: +30-10-66 83 400
Telefax: +30-10-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706/
27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbalint,
Phone: +36-34 520 100
Telefax: +36-34 520 200

India

GRUNDFOS Pumps India Private Limited
Flat A, Ground Floor
61/62 Chamiers Aptmt
Chamiers Road
Chennai 600 028
Phone: +91-44 432 3487
Telefax: +91-44 432 3489

Indonesia

PT GRUNDFOS Pompa
Jl. Rawa Sumur III, Blok III / CC-1
Kawasan Industri, Pulogadung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910/460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit 34, Stillorgan Industrial Park
Blackrock
County Dublin
Phone: +353-1-2954926
Telefax: +353-1-2954739

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112/95838212
Telefax: +39-02-95309290/
95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin Miyakoda
Hamamatsu City
Shizuoka pref. 431-21
Phone: +81-53-428 4760
Telefax: +81-53-484 1014

Korea

GRUNDFOS Pumps Korea Ltd.
2nd Fl., Dong Shin Building
994-3 Daechi-dong, Kangnam-Ku
Seoul 135-280
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam UI/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de Mexico S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Mexico
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Nederland B.V.
Postbus 104
NL-1380 AC Weesp
Tel.: +31-294-492 211
Telefax: +31-294-492244/492299

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przemierowo
Phone: +48-61-650 13 00
Telefax: +48-61-650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2780 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Russia

OOO GRUNDFOS
Shkolnaya, ul., 39
RUS-109544 Moscow
Phone: +7-095 564 8800, 737 3000
Telefax: +7-095 564 8811, 737 7536

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
24 Tuas West Road
Jurong Town
Singapore 638381
Phone: +65-6865 1222
Telefax: +65-6861 8402

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 63, Ångereðsvinkeln 9
S-424 22 Ångered
Tel.: +46-771-32 23 00
Telefax: +46-31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-1-806 8111
Telefax: +41-1-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
14, Min-Yu Road
Jungli Industrial Park
Tunglo, Miao-Li County
Taiwan, R.O.C.
Phone: +886-37-98 05 57
Telefax: +886-37-98 05 70

Thailand

GRUNDFOS (Thailand) Ltd.
947/168 Moo 12, Bangna-Trad Rd., K.M. 3,
Bangna, Phrakonong
Bangkok 10260
Phone: +66-2-744 1785 ... 91
Telefax: +66-2-744 1775 ... 6

Turkey

GRUNDFOS POMPA SAN. ve TIC. LTD. STI
Bulgurlu Caddesi no. 32
TR-81190 Üsküdar Istanbul
Phone: +90 - 216-4280 306
Telefax: +90 - 216-3279 988

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 8TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

96 43 48 20 0502	30
Repl. V7 14 51 29 11 98	