

BMP, -N, -R

Installation and operating instructions



English (GB) Installation and operating instructions

Original installation and operating instructions.

CONTENTS

	Page
1. Symbols used in this document	2
2. General description	2
2.1 Handling	2
3. Applications	2
3.1 Pumped liquids	2
4. Preparation	3
5. Technical data	3
5.1 Sound pressure level	3
5.2 Liquid temperature	3
5.3 Ambient temperature	3
6. Installation	3
6.1 Position of pump	3
6.2 Installation examples	3
7. Pipe connection	4
8. Operating conditions	4
8.1 Inlet pressure	4
8.2 Discharge pressure	4
9. Electrical connection	4
9.1 Frequency converter operation	4
9.2 Motor protection	4
9.3 Generator operation	4
10. Start-up	4
11. Operation	4
11.1 Operation settings	4
12. Checking of operation	5
13. Maintenance	5
14. Motor bearings	5
15. Automatic monitoring devices	5
15.1 Level switch	5
15.2 Thermal sensor	5
16. Periods of inactivity	5
16.1 Flushing of pump	5
16.2 Transport and storage	5
16.3 Frost protection	5
17. Service	5
18. Fault finding chart	6
19. Checking of motor and cable	7
20. Disposal	7

**Warning**

Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Symbols used in this document

**Warning**

If these safety instructions are not observed, it may result in personal injury.

2. General description

Grundfos BMP pumps are piston pumps, i.e. the flow is proportional to the motor speed. The pressure is equal to the counter pressure. Consequently, it is important that the maximum pump pressure is not exceeded.

BMP pumps are supplied from the factory in boxes in which they should remain until they are to be installed. The pumps are ready for installation.

2.1 Handling

The motor lifting eyes must always be used for lifting the entire pump.

Note: The pump may not be in balance.

3. Applications

3.1 Pumped liquids

Thin, non-explosive liquids, not containing solid particles or fibres. The liquid must not attack the pump materials chemically. In case of doubt, please contact Grundfos.

**Warning**

The pump must not be used for the pumping of inflammable liquids such as diesel oil, petrol or similar liquids.

The pump must never operate with water/liquid containing substances which would remove the surface tension, e.g. soap. If this type of detergent is used for cleaning the system, the water/liquid must be led around the pump via a bypass.

Pump type	Recommended pumped liquids
BMP	• Raw water • potable water • groundwater • surface water (lakes and rivers).
BMP-N	• Softened water (cation exchange) • demineralised water (demineralised/de-ionised water) • water processed according to the reverse osmosis principle (RO water). If coolants such as HFA, HFC, etc. are to be pumped, please contact Grundfos.
BMP-R	• Brackish water • sea water • brine • water containing various chemicals.

Note: The liquid to be pumped must be prefiltered to maximum 10 microns (abs. $\beta_{10} > 5000$).

4. Preparation

Before installation, the following checks should be made:

1. Transport damages

Make sure that the pump has not been damaged during transportation.

2. Pump type

Check that the type designation corresponds to order, see pump nameplate.

3. Electricity supply

Check that the supply voltage and frequency correspond to the values stated on the motor nameplate and frequency converter nameplate, if any.

5. Technical data

See motor and pump nameplates.

5.1 Sound pressure level

The table below indicates the sound pressure level in dB(A) measured in a reverberation room at a distance of 1 metre from the pump. The anechoic noise level is calculated by subtracting 3 dB(A) from the stated values.

Sound pressure level in dB(A) at 140 bar*, 50 Hz					
BMP 0.2	72.4	BMP 0.3 N	72.3	BMP 0.6 R	72.4
BMP 0.4	72.6	BMP 0.6 N	72.4	BMP 1.0 R	72.6
BMP 0.6	72.8	BMP 1.0 N	72.8	BMP 1.8 R	71.7
BMP 1.0	71.3	BMP 1.7 N	72.0	BMP 2.2 R	71.7
BMP 1.2	71.3	BMP 2.1 N	72.0	BMP 5.1 R	78.0
BMP 2.5	71.4	BMP 3.4 N	71.4	BMP 6.5 R	78.0
BMP 3.2	72.4	BMP 4.4 N	72.4	BMP 7.2 R	78.0
BMP 6.2	78.3	BMP 6.2 N	78.3	BMP 8.2 R	78.0
BMP 7.0	78.3	BMP 7.0 N	78.3	BMP 10.2 R	78.0
BMP 8.0	78.3	BMP 8.0 N	78.3		

* For maximum discharge pressure, see pump nameplate.

5.2 Liquid temperature

3 °C to 50 °C (37.4 °F to 122 °F) at maximum discharge pressure.

5.3 Ambient temperature

0 °C to 50 °C (32 °F to 122 °F).

6. Installation

The BMP pump can be used in both closed and open systems.

- The suction port is marked with an "I".
- The discharge port is marked with an "O".

6.1 Position of pump

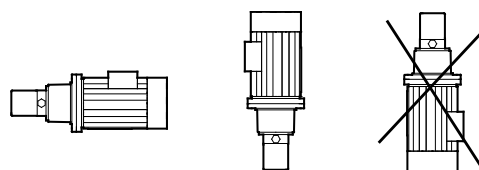


Fig. 1 Position of pump

The pump must be installed on a solid foundation by means of the bolt holes in the foot-mounted motor. It is recommended to use vibration-absorbing machine feet.

Dimensional sketches and dimensions, see pages 8 and 9.

6.2 Installation examples

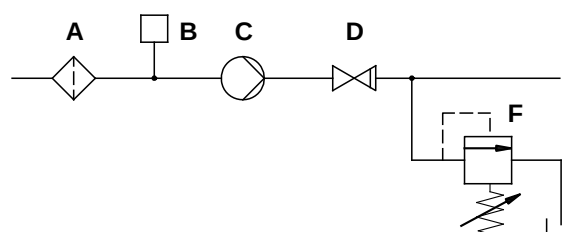


Fig. 2 System with one BMP pump

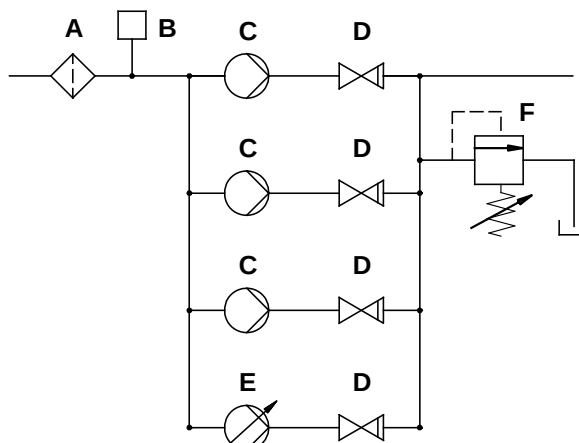


Fig. 3 System with three BMP pumps and one frequency-converter controlled BMPE pump

Key to the symbols in figs 2 and 3:

Pos.	Description
A	Prefilter, maximum 10 microns (abs. $\beta_{10} > 5000$)
B	Low-pressure switch
C	BMP pump
D	Non-return valve
E	Frequency-converter controlled BMPE pump
F	Pressure relief valve (adjustable)

TM02 9104 1804

TM02 9337 2404

TM02 9338 2404

7. Pipe connection

The BMP pump has a threaded connection on the suction and discharge sides of the pump, see pages 8 and 9.

Note: BMP-R pumps with flows ranging from 5.1 to 10.2 m³/h are fitted with clamp liners for Victaulic/PJE clamp couplings on the suction and discharge sides.

Note: It is recommended to use flexible high-pressure hoses.

If the suction pipe connected to the pump suction port (I) is disconnected from the water supply, the pump will be emptied of water. When the pump is to be started again, the starting procedure in section 10. must be followed carefully.

8. Operating conditions

8.1 Inlet pressure

0 to 4 bar (1 bar abs. to 5 bar abs.).

It is recommended to install a low-pressure switch after the prefilter. The low-pressure switch must switch off the electricity supply to the pump if the inlet pressure falls outside the range from 0 to 4 bar.

8.2 Discharge pressure

Warning



To avoid any damage to the system, a pressure relief valve **must** be fitted on the discharge side. The pressure relief valve setting must not exceed the maximum permissible discharge pressure by more than 5 %, see pump nameplate.

9. Electrical connection

The electrical connection must be carried out by a qualified electrician in accordance with local regulations.

Warning



Before removing the terminal box cover and before any removal/dismantling of the pump, make sure that the electricity supply has been switched off.

The pump must be connected to an external mains switch with a minimum contact gap of 3 mm in all poles.

The operating voltage and frequency are marked on the motor nameplate. Make sure that the motor is suitable for the electricity supply on which it will be used.

The motor must be connected to a motor starter.

Carry out the electrical connection as shown in the diagram inside the terminal box cover.

9.1 Frequency converter operation

Motors supplied by Grundfos:

All three-phase motors supplied by Grundfos can be connected to a frequency converter. The frequency converter must be set to operation with a constant torque.

Dependent on the frequency converter type, this may cause increased acoustic noise from the motor. Furthermore, it may also cause the motor to be exposed to detrimental voltage peaks.

Note: Grundfos motors type MG 90 (1.5 kW, 2-pole), for supply voltages up to and including 440 V (see motor nameplate), must be protected against voltage peaks higher than 650 V (peak value) between the supply terminals.

It is recommended to protect all other motors against voltage peaks higher than 850 V.

The above disturbances, i.e. both increased acoustic noise and detrimental voltage peaks, can be eliminated by fitting an LC filter between the frequency converter and the motor.

For further details, please contact your frequency converter or motor supplier.

9.2 Motor protection

The pump must be connected to an effective motor starter which must protect the motor against damage from voltage drop, phase failure, overload and a locked rotor.

9.2.1 Setting of motor starter

For cold motors, the tripping time for the motor starter must be less than 10 seconds at 5 times the rated full-load current of the motor.

To ensure the best protection of the motor, the setting of the motor starter should be carried out as follows:

1. Set the starter overload to the rated full-load current (I_N) of the motor.
2. Start the pump and let it run for half an hour at normal performance.
3. Slowly grade down the scale indicator until the motor starter trips.
4. Increase the overload setting by 5 %, but not higher than the full-load current (I_N).

For motors wound for star-delta starting, the starter overload unit should be set as described above, but the maximum setting must not exceed the following:

Starter overload setting = Rated full-load current (I_N) x 0.58.

In the case of frequency converter operation, follow the manufacturer's instructions.

9.3 Generator operation

In the case of generator operation, contact Grundfos.

10. Start-up

Before the pump is installed in the piping system, this should be flushed through with clean water to remove possible impurities from pipes, hoses, etc.

1. **Venting:** Before starting the pump, slacken the vent plugs "A", see fig. 4. When the water starts running out of the holes, the pump has been filled with water. Retighten the plugs.
2. **Direction of rotation:** Start the pump (for 1 sec. only) and check the direction of rotation. The correct direction of rotation is stated on the pump nameplate. If necessary, interchange any two of the incoming supply wires.
Note: The pump must not run dry.
3. **Water supply:** When the suction pipe has been connected to the water supply or tank, start the pump with an open discharge port (O).
4. **Prefilter:** It is recommended to replace the filter element after 1 to 10 hours of operation after the first start-up.

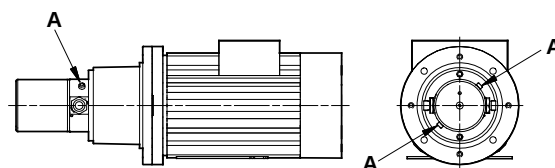


Fig. 4 Vent plugs

11. Operation

During operation the pump must always be connected to the water supply.

Note: Dry running will damage the pump.

11.1 Operation settings

The flow and discharge pressure of the pump should always be kept within the ranges for which the system was originally designed.

If the system requires flows and pressures outside the design range, please contact Grundfos.

12. Checking of operation

Check the following at suitable intervals:

- Flow and pressure.
- Current consumption.
- Pressure drop over the prefilter.
Replace the filter element when "clogged filter" is indicated.
- Whether the motor ball bearings are worn.
- Whether the shaft seal is leaky.
The shaft seal is lubricated by the pumped liquid. Small quantities of liquid are therefore drained via the drain hole in the coupling housing.
- Whether the noise level has changed.

It is recommended to write the operating data in the log book supplied with the pump. The data can be useful for maintenance purpose.

13. Maintenance

The BMP pump requires no periodic maintenance.

It is recommended to inspect the pump once a year.

14. Motor bearings

Under optimum operating conditions, the operating life of the motor ball bearings is approx. 20,000 operating hours. After that period, the bearings must be replaced. The new bearings must be filled with grease.

Grease type, see motor nameplate.

15. Automatic monitoring devices

15.1 Level switch

Systems supplied from a water tank must be fitted with a level switch which switches off the electricity supply to the pump if the water level gets too low.

15.2 Thermal sensor

It is recommended to install a thermal sensor which switches off the electricity supply to the pump if the water temperature exceeds 50 °C (122 °F).

16. Periods of inactivity

In the case of periods of inactivity exceeding

- 1 month for BMP and BMP-N and
- 6 hours for BMP-R,

it is important to flush the system through with clean fresh water.

Note: Fill the pump with Grundfos motor liquid, type SML-2, in periods of inactivity exceeding 1 month.

16.1 Flushing of pump

Disconnect the suction pipe from the water supply. The pump will be emptied through the suction pipe.

When the pump is to be started again, the venting procedure in section 10. *Start-up* must be followed carefully.

The pump must run during the flushing procedure.

Flushing can for instance be effected through small quick-couplings or gate valves (not supplied with the pump) fitted either side of the pump.

Flush the pump for at least 2 minutes.

16.2 Transport and storage

Note: During transportation and storage, the BMP pump must never be preserved with liquids which are aggressive to the pump materials.

In periods of inactivity exceeding one month, fill the pump with Grundfos motor liquid, type SML-2, to prevent corrosion. This liquid is frost-proof down to -20 °C.

Note: Never just drain the pump!

For further information on anti-freeze liquids, please contact Grundfos.

16.3 Frost protection

Recommended procedure:

1. Disconnect the water supply to the pump/system.
2. Drain the pump by removing the lower drain plug. Fit and tighten the plug when the pump has been drained of liquid.
3. Connect the suction port (I) to a container with anti-freeze liquid. Connect one end of a hose to the discharge port (O) and the other to the container.
4. Briefly start and stop the pump.
Note: The pump must not run dry.

5. Drain the pump of anti-freeze liquid by removing the lower drain plug. Fit and tighten the plug.

The pump is now protected against internal corrosion and frost.

Storage temperature:

-20 °C to 70 °C (-4 °F to 158 °F) (factory-filled with anti-freeze liquid).

17. Service

Note: If a pump has been used for a liquid which is injurious to health or toxic, the pump will be classified as contaminated.

If Grundfos is requested to service the pump, Grundfos must be contacted with details about the pumped liquid, etc. *before* the pump is returned for service. Otherwise Grundfos can refuse to accept the pump for service.

Possible costs of returning the pump are paid by the customer.

However, any application for service (no matter to whom it may be made) must include details about the pumped liquid if the pump has been used for liquids which are injurious to health or toxic.

18. Fault finding chart







Warning

Before starting work on the pump, make sure that the electricity supply has been switched off and that it cannot be accidentally switched on.

Fault	Possible cause	Remedy
1. The pump stops during operation.	a) No water supply. The low-pressure switch has cut out. The level switch has cut out.	Check that the low-pressure switch functions normally and is adjusted correctly. Check that the minimum inlet pressure is correct. If not, check the feed pump. Check the water level in the water tank.
	b) The fuses are blown.	Check and replace the main fuses and/or fuses for control circuit, if necessary.
	c) The motor starter overload unit has tripped.	Reset the starter overload, see also sections 9.2 Motor protection and 10. Start-up .
	d) The magnetic coil in the motor starter/contactactor is defective (not cutting in).	Replace the coil. Check the coil voltage.
	e) The control circuit has cut out or is defective.	Check the control circuit and the contacts in the monitoring devices (low-pressure switch, level switch, etc.).
	f) The motor/supply cable is defective.	Check motor and cable, see section 9. Electrical connection .
2. The pump runs, but gives no water or develops any pressure.	a) No or insufficient water supply at the pump suction port.	Check that the inlet pressure during operation is at least 0 bar, see section 8.1 Inlet pressure . Restart the pump as described in section 10. Start-up .
	b) The piping system or pump is choked up.	Check the piping system and pump.
	c) The prefilter is clogged.	Clean the prefilter.
	d) The pump is worn.	Replace the wear parts. Contact Grundfos Service.
	e) Wrong direction of rotation.	See section 10. Start-up .
3. The pump runs at reduced capacity.	a) The pump is partly blocked by impurities.	Dismantle, clean and check the pump. Replace defective parts. Contact Grundfos Service.
	b) The pump is defective.	Replace defective parts. Contact Grundfos Service.
	c) The prefilter is clogged.	Clean the prefilter.
	d) The motor speed is too low.	Check the electricity supply. Contact the electricity supply authorities, if necessary. If a frequency converter is used, adjust the speed.

19. Checking of motor and cable

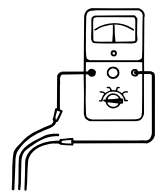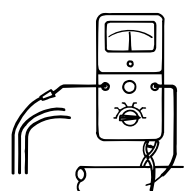1. Supply voltage  TM00 1371 3597	Measure the voltage between the phases by means of a voltmeter. Connect the voltmeter to the terminals at the mains connection.	The voltage should, when the motor is loaded, be within $\pm 5\%$ of the rated voltage. The motor may burn if there are larger variations in voltage. If the voltage is constantly too high or too low, the motor must be replaced by one corresponding to the supply voltage. Large variations in voltage indicate poor electricity supply, and the pump should be stopped until the defect has been found. Resetting of the motor starter may be necessary.
2. Current consumption  TM00 1372 3597	Measure the current of each phase while the pump is operating at a constant discharge pressure (if possible at the capacity where the motor is most heavily loaded). The motor full-load current appears on the motor nameplate.	The difference between the current of the phase with the highest amp consumption and the one with the lowest amp consumption must not exceed 10 % of the lowest amp consumption. If so, or if the current exceeds the full-load current, check the following possible faults: • Too high operating pressure which may overload the motor. • Too high speed which may overload the motor. • Damaged pump which may overload the motor. • The motor windings are short-circuited or partly disjointed. • Too high or too low supply voltage. • Poor connection in leads. Weak cables.
Points 3 and 4: Measurement not needed if supply voltage and current consumption are normal.		
3. Winding resistance  TM00 1373 3597	Disconnect the phase leads in the terminal box. Measure the winding resistance as shown on the drawing.	The highest value must not exceed the lowest value by more than 5 %. If the deviation is higher, and the supply cable is OK, the motor should be overhauled.
4. Insulation resistance  TM00 1374 3597	Disconnect the phase leads in the terminal box. Measure the insulation resistance from each phase to earth (frame). (Make sure that the earth connection is made carefully.)	The insulation resistance for a new, cleaned or repaired motor must be approx. 10 MΩ measured to earth. For a given motor the critical insulation resistance (R_{crit}) can be calculated as follows: $R_{crit} = U_N \text{ [kV]} \times 0.5 \text{ [M}\Omega\text{/kV]}.$ If the measured insulation resistance is lower than R_{crit}, the motor must be overhauled.


20. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

DIMENSIONAL SKETCHES

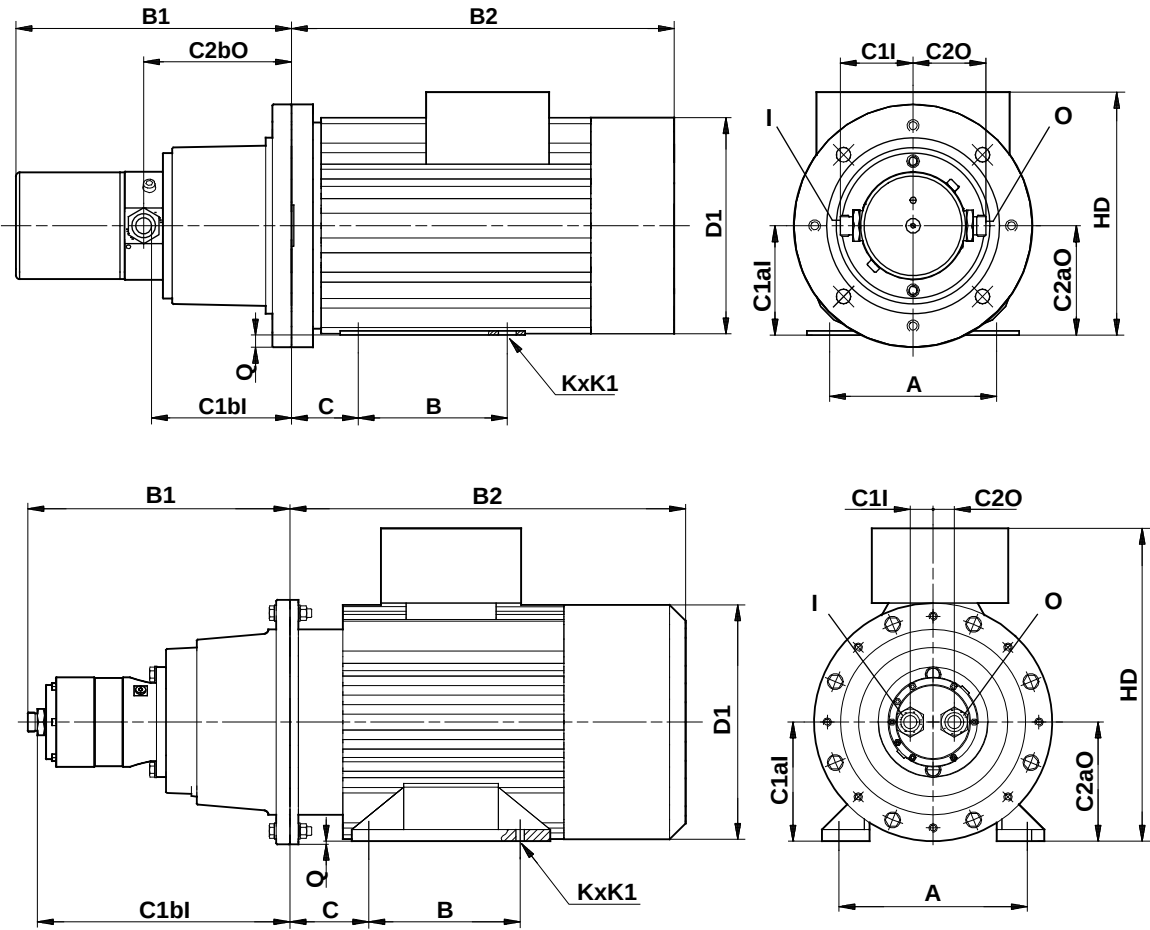

DIMENSIONS

Pump type	Dimensions [mm]															K x K1	I	O
	B1	B2	B1 + B2	C1I	C2O	C1aI	C2aO	C1bI	C2bO	D1	HD	A	B	C	Q			
BMP 0.2	230	281	511	55	56	73	110	122	128	180	238	140	125	56	10	Ø8x15	GE 12	GE 12
BMP 0.4	230	335	565	55	56	83	120	122	128	196	255	160	140	63	25	Ø10x17	GE 12	GE 12
BMP 0.6	250	372	622	55	56	95	132	142	148	225	283	190	140	70	13	Ø10x19	GE 12	GE 12
BMP 1.0	304	391	695	64	65	114	153	169	172	276	330	216	178	89	18	Ø10x14	GE 12	GE 12
BMP 1.2	304	391	695	64	65	114	153	169	172	276	330	216	178	89	18	Ø10x14	GE 12	GE 12
BMP 2.5	419	547	966	29	32	160	160	402	402	335	410	254	254	108	15	Ø12x14	GE 25	GE 25
BMP 3.2	435	602	1037	29	32	180	180	418	418	366	465	279	241	121	0	Ø12x18	GE 25	GE 25
BMP 6.2	502	748	1250	40	43	225	225	488	485	463	585	256	286	149	0	Ø16x16	GE 25	GE 25
BMP 7.0	502	748	1250	40	43	225	225	488	485	463	585	256	311	149	0	Ø16x16	GE 25	GE 25
BMP 8.0	502	748	1250	40	43	225	225	488	485	463	585	256	311	149	0	Ø16x16	GE 25	GE 25

Pump type	Dimensions [mm]															K x K1	I	O
	B1	B2	B1 + B2	C1I	C2O	C1aI	C2aO	C1bI	C2bO	D1	HD	A	B	C	Q			
BMP 0.3 N	230	281	511	55	56	73	110	122	128	180	238	140	100	56	10	Ø8x15	GE 12	GE 12
BMP 0.6 N	250	281	531	55	56	73	110	142	148	180	238	140	125	56	10	Ø8x15	GE 12	GE 12
BMP 1.0 N	250	372	622	55	56	95	132	142	148	225	283	190	140	70	13	Ø10x19	GE 12	GE 12
BMP 1.7 N	364	503	867	64	65	142	181	229	232	335	410	254	210	108	15	Ø12x14	GE 12	GE 12
BMP 2.1 N	364	503	867	64	65	142	181	229	232	335	410	254	210	108	15	Ø12x14	GE 12	GE 12
BMP 3.4 N	398	547	945	29	32	160	160	381	381	335	410	254	254	108	15	Ø12x14	GE 25	GE 25
BMP 4.4 N	414	602	1016	29	32	180	180	397	381	366	465	279	279	121	0	Ø12x18	GE 25	GE 25
BMP 6.2 N	502	748	1250	40	43	225	225	488	485	463	585	356	286	149	0	Ø16x16	GE 25	GE 25
BMP 7.0 N	502	748	1250	40	43	225	225	488	485	463	585	356	286	149	0	Ø16x16	GE 25	GE 25
BMP 8.0 N	502	748	1250	40	43	225	225	488	485	463	585	356	311	149	0	Ø16x16	GE 25	GE 25

Pump type	Dimensions [mm]															K x K1	I	O
	B1	B2	B1 + B2	C1I	C2O	C1aI	C2O	C1bI	C2bO	D1	HD	A	B	C	Q			
BMP 0.6 R	230	281	511	55	55	90	90	116	116	180	238	140	125	56	10	Ø8x15	GE 12	GE 12
BMP 1.0 R	250	335	585	55	55	100	100	146	146	196	255	160	140	63	25	Ø10x17	GE 12	GE 12
BMP 1.8 R	306	391	697	64	64	132	132	163	165	276	330	216	140	89	18	Ø10x14	GE 12	GE 12
BMP 2.2 R	306	391	697	64	64	132	132	163	165	276	330	216	140	89	18	Ø10x14	GE 12	GE 12
BMP 5.1 R	497	547	1044	42	43	160	-	-	-	335	410	254	254	108	15	Ø12x14	1 1/2" PJE	1 1/2" PJE
BMP 6.5 R	497	602	1099	42	43	180	-	-	-	366	465	279	241	121	0	Ø12x18	1 1/2" PJE	1 1/2" PJE
BMP 7.2 R	497	602	1099	42	43	180	-	-	-	366	465	279	279	121	0	Ø12x18	1 1/2" PJE	1 1/2" PJE
BMP 8.2 R	497	602	1099	42	43	180	-	-	-	366	465	279	279	121	0	Ø12x18	1 1/2" PJE	1 1/2" PJE
BMP 10.2 R	497	669	1166	42	43	200	-	-	-	405	541	318	305	133	0	Ø16x16	1 1/2" PJE	1 1/2" PJE

[illegible]

System sketch

GRUNDFOS® 

Declaration of conformity

GB: EC declaration of conformity

We, Grundfos, declare under our sole responsibility that the products BMP, to which this declaration relates, are in conformity with these Council directives on the approximation of the laws of the EC member states:

DK: EF-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne BMP som denne erklæring omhandler, er i overensstemmelse med disse af Rådets direktiver om indbyrdes tilnærmelse til EF-medlemsstaternes lovgivning:

GR: Δήλωση συμμόρφωσης EC

Εμείς, η Grundfos, δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα BMP στα οποία αναφέρεται η παρούσα δήλωση, συμμορφώνονται με τις εξής Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΕ:

FR: Déclaration de conformité CE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits BMP, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des Etats membres CE relatives aux normes énoncées ci-dessous :

IT: Dichiarazione di conformità CE

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti BMP, ai quali si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri CE:

PT: Declaração de conformidade CE

A Grundfos declara sob sua única responsabilidade que os produtos BMP, aos quais diz respeito esta declaração, estão em conformidade com as seguintes Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da CE:

RU: Декларация о соответствии ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия BMP, к которым относится настоящая декларация, соответствуют следующим Директивам Совета Евросоюза об унификации законодательных предписаний стран-членов ЕС:

SK: Prehlásenie o konformite ES

My firma Grundfos prehlasujeme na svoju plnú zodpovednosť, že výrobky BMP, na ktoré sa toto prehlásenie vzťahuje, sú v súlade s ustanovením smernice Rady pre zblíženie právnych predpisov členských štátov Európskeho spoločenstva v oblastiach:

RS: EC deklaracija o usaglašenosti

Mi, Grundfos, izjavljujemo pod vlastitom odgovornostu da je proizvod BMP, na koji se ova izjava odnosi, u skladu sa direktivama Saveta za usklađivanje zakona država članica EU:

SE: EG-försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkterna BMP, som omfattas av denna försäkran, är i överensstämmelse med rådets direktiv om inbördes närmande till EU-medlemsstaternas lagstiftning, avseende:

CZ: ES prohlášení o shodě

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky BMP, na něž se toto prohlášení vztahuje, jsou v souladu s ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství v oblastech:

DE: EG-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte BMP, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen:

ES: Declaración CE de conformidad

Nosotros, Grundfos, declaramos bajo nuestra entera responsabilidad que los productos BMP, a los cuales se refiere esta declaración, están conformes con las Directivas del Consejo en la aproximación de las leyes de los Estados Miembros del EM:

HR: EZ izjava o usklađenosti

Mi, Grundfos, izjavljujemo pod vlastitom odgovornošću da je proizvod BMP, na koji se ova izjava odnosi, u skladu s direktivama ovog Vijeća o usklađivanju zakona država članica EU:

HU: EK megfelelősségi nyilatkozat

Mi, a Grundfos, egyedüli felelősséggel kijelentjük, hogy a BMP termékek, amelyekre jelen nyilatkozik vonatkozik, megfelelnek az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak:

PL: Deklaracja zgodności WE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze wyroby BMP, których deklaracja niniejsza dotyczy, są zgodne z następującymi wytycznymi Rady d/s ujednolicenia przepisów prawnych krajów członkowskich WE:

RO: Declarație de conformitate CE

Noi, Grundfos, declarăm pe propria răspundere că produsele BMP, la care se referă această declarație, sunt în conformitate cu aceste Directive de Consiliu asupra armonizării legilor Statelor Membre CE:

SI: ES izjava o skladnosti

V Grundfosu s polno odgovornostjo izjavljamo, da so naši izdelki BMP, na katere se ta izjava nanaša, v skladu z naslednjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic ES:

FI: EY-vaatimusten mukaisuusvakuutus

Me, Grundfos, vakuutamme omalla vastuullamme, että tuotteet BMP, joita tämä vakuutus koskee, ovat EY:n jäsenvaltioiden lainsäädännön yhdenmukaistamiseen tähtäävien Euroopan neuvoston direktiivien vaatimusten mukaisia seuraavasti:


TR: EC uygunluk bildirgesi

Grundfos olarak bu beyannameye konu olan BMP ürünlerinin, AB Üyesi Ülkelerin kanunlarını birbirine yaklaştırmaya üzerine Konsey Direktifleriyle uyumlu olduğunu yalnızca bizim sorumluluğumuz altında olduğunu beyan ederiz:

— Machinery Directive (2006/42/EC)
Standard used: EN 809:1998 + A1:2009

This EC declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication number 96552823 0915)

Bjerringbro, 23 September 2015



Svend Aage Kaas
Director
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and empowered to sign the EC declaration of conformity.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарьянская, 11, оф. 56, 5Ц
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosna and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS s.r.o.
Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500
Telefax: +358-(0) 207 889 550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
Gotanda Metalon Bldg., 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
109544, г. Москва, ул. Школьная, 39-41,
стр. 1
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS d.o.o.
Šlandrova 8b, SI-1231 Ljubljana-Črnuče
Phone: +386 31 718 808
Telefax: +386 (0)1 5680 619
E-mail: slovenia@grundfos.si

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 8899
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloom Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200, Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Repre-
sentative Office of Grundfos Kazakhstan in
Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses Revised 29.09.2015

96552823 0915
ECM: 1167077

The name Grundfos, the Grundfos logo, and be think innovate are registered trademarks owned by Grundfos Holding A/S or Grundfos A/S, Denmark. All rights reserved worldwide. © Copyright Grundfos Holding A/S