


JP Basic Booster

Installation and operating instructions

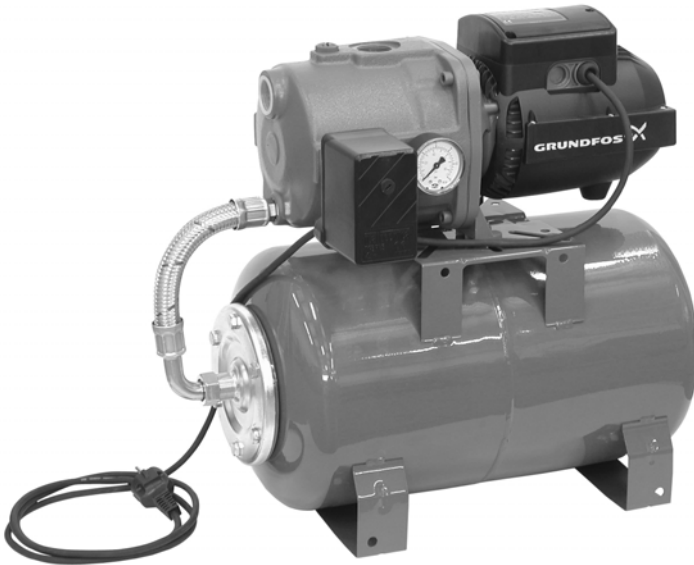

Declaration of conformity	4
English (GB)	
Safety instructions.	6
Български (BG)	
Упътване за монтаж и експлоатация.	10
Čeština (CZ)	
Montážní a provozní návod.	15
Hrvatski (HR)	
Montažne i pogonske upute	20
Magyar (HU)	
Szerelési és üzemeltetési utasítás	25
Українська (UA)	
Інструкції з монтажу та експлуатації	30
Polski (PL)	
Instrukcja montażu i eksploatacji	34
Русский (RU)	
Руководство по монтажу и эксплуатации	39
Română (RO)	
Instrucțiuni de instalare și utilizare	46
Slovenčina (SK)	
Návod na montáž a prevádzku	50
Slovensko (SI)	
Navodila za montažo in obratovanje.	55
Srpski (RS)	
Uputstvo za instalaciju i rad	60
Türkçe (TR)	
Montaj ve kullanım kılavuzu	65

Declaration of conformity

GB: EC declaration of conformity

We, Grundfos, declare under our sole responsibility that the product JP Basic Booster, to which this declaration relates, is in conformity with these Council directives on the approximation of the laws of the EC member states:

- Machinery Directive (2006/42/EC).
Standard used: EN 809: 2009.
- Low Voltage Directive (2006/95/EC).
Standards used: EN 60335-1: 2002 and EN 60335-2-41: 2003.
- EMC Directive (2004/108/EC).
Standards used: EN 60730-1: 2000 and EN 60730-1, A16: 2007.
- Ecodesign Directive (2009/125/EC).
Electric motors:
Commission Regulation No. 640/2009.
Applies only to three-phase Grundfos motors marked IE2 or IE3.
See motor nameplate.
Standard used: EN 60034-30: 2009.

CZ: ES prohlášení o shodě

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobek JP Basic Booster, na nějž se toto prohlášení vztahuje, je v souladu s ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství v oblastech:

- Směrnice pro strojní zařízení (2006/42/ES).
Použitá norma: EN 809: 2009.
- Směrnice pro nízkonapěťové aplikace (2006/95/ES).
Použitá norma: EN 60335-1: 2002 a EN 60335-2-41: 2003.
- Směrnice pro elektromagnetickou kompatibilitu (EMC) (2004/108/ES).
Použitá norma: EN 60730-1: 2000 a EN 60730-1, A16: 2007.
- Směrnice o požadavcích na ekodesign (2009/125/ES).
Elektrické motory:
Nařízení Komise č. 640/2009.
Platí pouze pro třífázové motory Grundfos označené IE2 nebo IE3.
Viz typový štítek motoru.
Použitá norma: EN 60034-30: 2009.

HU: EK megfelelési nyilatkozat

Mi, a Grundfos, egyedüli felelősséggel kijelentjük, hogy a JP Basic Booster termék, amelyre jelen nyilatkozik vonatkozik, megfelel az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak:

- Gépek (2006/42/EK).
Alkalmazott szabvány: EN 809: 2009.
- Kisfeszültségű Direktíva (2006/95/EK).
Alkalmazott szabványok: EN 60335-1: 2002 és EN 60335-2-41: 2003.
- EMC Direktíva (2004/108/EK).
Alkalmazott szabványok: EN 60730-1: 2000 és EN 60730-1, A16: 2007.
- Környezetbarát tervezésre vonatkozó irányelv (2009/125/EK).
Villamos motorok:
A Biztonság 640/2009/EK rendlete.
Csak az IE2 vagy IE3 jelzésű háromfázisú Grundfos motorokra vonatkozik. Lásd a motor adataitabláját.
Alkalmazott szabvány: EN 60034-30: 2009.

PL: Deklaracja zgodności WE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze wyroby JP Basic Booster, których deklaracja niniejsza dotyczy, są zgodne z następującymi wytycznymi Rady d/s ujednolicenia przepisów prawnych krajów członkowskich WE:

- Dyrektywa Maszynowa (2006/42/WE).
Zastosowana norma: EN 809: 2009.
- Dyrektywa Niskonapięciowa (LVD) (2006/95/WE).
Zastosowane normy: EN 60335-1: 2002 oraz EN 60335-2-41: 2003.
- Dyrektywa EMC (2004/108/WE).
Zastosowane normy: EN 60730-1: 2000 oraz EN 60730-1, A16: 2007.
- Dyrektywa Ekoprojektowa (2009/125/WE).
Silniki elektryczne:
Rozporządzenie Komisji (WE) Nr 640/2009.
Dotyczy tylko trójfazowych silników firmy Grundfos z oznaczeniami IE2 lub IE3. Patrz tabliczka znamionowa silnika.
Zastosowana norma: EN 60034-30: 2009.

BG: ЕС декларация за съответствие

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продукта JP Basic Booster, за който се отнася настоящата декларация, отговаря на следните указания на Съвета за уеднаквяване на правните разпоредби на държавите членки на ЕС:

- Директива за машините (2006/42/EC).
Приложен стандарт: EN 809: 2009.
- Директива за нисковолтови системи (2006/95/EC).
Приложени стандарти: EN 60335-1: 2002 и EN 60335-2-41: 2003.
- Директива за електромагнитна съвместимост (2004/108/EC).
Приложени стандарти: EN 60730-1: 2000 и EN 60730-1, A16: 2007.
- Директива за екодизайн (2009/125/EC).
Електродвигатели:
Регламент на Комисията № 640/2009.
Отнася се само за трифазни електродвигатели на Grundfos, маркирани с IE2 или IE3. Вижте табелата с данни на двигателя.
Приложен стандарт: EN 60034-30: 2009.

HR: EZ izjava o usklađenosti

Mi, Grundfos, izjavljujemo pod vlastitom odgovornošću da je proizvod JP Basic Booster, na koji se ova izjava odnosi, u skladu s direktivama ovog Vijeća o usklađivanju zakona država članica EU:

- Direktiva za strojeve (2006/42/EZ).
Korištena norma: EN 809: 2009.
- Direktiva za niski napon (2006/95/EZ).
Korištene norme: EN 60335-1: 2002 i EN 60335-2-41: 2003.
- Direktiva za elektromagnetsku kompatibilnost (2004/108/EZ).
Korištene norme: EN 60730-1: 2000 i EN 60730-1, A16: 2007.
- Direktiva o ekološkoj izvedbi (2009/125/EZ).
Električni motori:
Regulativa Komisije br. 640/2009.
Odnosi se samo na trofazne Grundfos motore s oznakama IE2 ili IE3. Pogledajte natpisnu pločicu motora.
Korištena norma: EN 60034-30: 2009.

UA: Свідчення про відповідність вимогам ЄС

Компанія Grundfos заявляє про свою виключну відповідальність за те, що продукт JP Basic Booster, на який поширюється дана декларація, відповідає таким рекомендаціям Ради з уніфікації правових норм країн - членів ЄС:

- Механічні прилади (2006/42/ЄС).
Стандарти, що застосовувалися: EN 809: 2009.
- Низька напруга (2006/95/ЄС).
Стандарти, що застосовувалися: EN 60335-1: 2002 та EN 60335-2-41: 2003.
- Електромагнітна сумісність (2004/108/ЄС).
Стандарти, що застосовувалися: EN 60730-1: 2000 та EN 60730-1, A16: 2007.
- Директива з екодизайну (2009/125/ЄС).
Електродвигуни:
Постанова Комісії № 640/2009.
Застосовуються тільки до трифазних електродвигунів Grundfos, позначених IE2 або IE3. Дивіться паспортну таблицю електродвигуна.
Стандарти, що застосовувалися: EN 60034-30: 2009.

RU: Декларация о соответствии ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия JP Basic Booster, к которым относится настоящая декларация, соответствуют следующим Директивам Совета Евросоюза об унификации законодательных предписаний стран-членов ЕС:

- Механические устройства (2006/42/EC).
Применявшийся стандарт: EN 809: 2009.
- Низковольтное оборудование (2006/95/EC).
Применявшиеся стандарты: EN 60335-1: 2002 и EN 60335-2-41: 2003.
- Электромагнитная совместимость (2004/108/EC).
Применявшиеся стандарты: EN 60730-1: 2000 и EN 60730-1, A16: 2007.
- Директива по экологическому проектированию энергопотребляющей продукции (2009/125/EC).
Электродвигатели:
Постановление Комиссии № 640/2009.
Применяется только к трехфазным электродвигателям Grundfos, обозначенным IE2 или IE3. См. шильдик с техническими данными двигателя.
Применявшийся стандарт: EN 60034-30: 2009.

RO: Declarație de conformitate CE

Noi, Grundfos, declarăm pe propria răspundere că produsele JP Basic Booster, la care se referă această declarație, sunt în conformitate cu aceste Directive de Consiliu asupra armonizării legilor Statelor Membre CE:

- Directiva Utilaje (2006/42/CE).
- Standard utilizat: EN 809: 2009.
- Directiva Tensiune Joasă (2006/95/CE).
- Standarde utilizate: EN 60335-1: 2002 și EN 60335-2-41: 2003.
- Directiva EMC (2004/108/CE).
- Standarde utilizate: EN 60730-1: 2000 și EN 60730-1, A16: 2007.
- Directiva Ecodesign (2009/125/CE).
- Motoare electrice:
- Regulamentul Comisiei nr. 640/2009.
- Se aplică numai motoarelor trifazate Grundfos cu marca IE2 sau IE3.
- Vezi plăcuța de identificare a motorului.
- Standard utilizat: EN 60034-30: 2009.

SI: ES izjava o skladnosti

V Grundfosu s polno odgovornostjo izjavljamo, da so naši izdelki JP Basic Booster, na katere se ta izjava nanaša, v skladu z naslednjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic ES:

- Direktiva o strojih (2006/42/ES).
- Uporabljena norma: EN 809: 2009.
- Direktiva o nizki napetosti (2006/95/ES).
- Uporabljeni normi: EN 60335-1: 2002 in EN 60335-2-41: 2003.
- Direktiva o elektromagnetni združljivosti (EMC) (2004/108/ES).
- Uporabljeni normi: EN 60730-1: 2000 in EN 60730-1, A16: 2007.
- Eco-design direktiva (2009/125/ES).
- Električni motorji:
- Uredba Komisije št. 640/2009.
- Se nanaša samo na trofazne motorje Grundfos z oznako IE2 ali IE3.
- Glejte napisno ploščico motorja.
- Uporabljena norma: EN 60034-30: 2009.

TR: EC uygunluk bildirgesi

Grundfos olarak bu beyannameye konu olan JP Basic Booster ürünlerinin, AB Üyesi Ülkelerin kanunlarını birbirine yaklaştırmaya yönelik Konsey Direktifleriyle uyumlu olduğunun yalnızca bizim sorumluluğumuz altında olduğunu beyan ederiz:

- Makineler Yönetmeliği (2006/42/EC).
- Kullanılan standart: EN 809: 2009.
- Düşük Voltaj Yönetmeliği (2006/95/EC).
- Kullanılan standartlar: EN 60335-1: 2002 ve EN 60335-2-41: 2003.
- EMC Direktifi (2004/108/EC).
- Kullanılan standartlar: EN 60730-1: 2000 ve EN 60730-1, A16: 2007.
- Ecodesign Direktifi (2009/125/EC).
- Elektrikli motorlar:
- 640/2009 sayılı Komisyon Yönetmeliği.
- Sadece IE2 veya IE3 işaretli trifaze Grundfos motorlar için geçerlidir.
- Motor bilgi etiketine bakınız.
- Kullanılan standart: EN 60034-30: 2009.

SK: Prehlásenie o konformite EÚ

My firma Grundfos prehlasujeme na svoju plnú zodpovednosť, že výrobok JP Basic Booster, na ktorý sa toto prehlásenie vzťahuje, je v súlade s ustanovením smernice Rady pre zblíženie právnych predpisov členských štátov Európskeho spoločenstva v oblastiach:

- Smernica pre strojové zariadenie (2006/42/EC).
- Použitá norma: EN 809: 2009.
- Smernica pre nízkonapäťové aplikácie (2006/95/EC).
- Použitie normy: EN 60335-1: 2002 a EN 60335-2-41: 2003.
- Smernica pre elektromagnetickú kompatibilitu (2004/108/EC).
- Použitie normy: EN 60730-1: 2000 a EN 60730-1, A16: 2007.
- Smernica o ekodizajne (2009/125/EC).
- Elektromotory:
- Nariadenie Komisie č. 640/2009.
- Platné iba pre trojfázové motory Grundfos, označené ako IE2 alebo IE3.
- Viď typový štítok motora.
- Použitá norma: EN 60034-30: 2009.

RS: EC deklaracija o konformitetu

Mi, Grundfos, izjavljujemo pod vlastitom odgovornostjo da je proizvod JP Basic Booster, na koji se ova izjava odnosi, u skladu sa direktivama Saveta za usklađivanje zakona država članica EU:

- Direktiva za mašine (2006/42/EC).
- Korišćen standard: EN 809: 2009.
- Direktiva niskog napona (2006/95/EC).
- Korišćeni standardi: EN 60335-1: 2002 i EN 60335-2-41: 2003.
- EMC direktiva (2004/108/EC).
- Korišćeni standardi: EN 60730-1: 2000 i EN 60730-1, A16: 2007.
- Direktiva o ekološkom projektovanju (2009/125/EC).
- Električni motori:
- Propis Komisije br. 640/2009.
- Važi samo za trofazne Grundfos motore označene sa IE2 ili IE3.
- Pogledajte natpisnu pločicu motora.
- Korišćen standard: EN 60034-30: 2009.

Bjerringbro, 1st December 2011



Svend Aage Kaae
Technical Director
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and empowered to sign the EC declaration of conformity.

CONTENTS

	Page
1. Symbols used in this document	6
2. Applications	6
3. System sizing	6
4. Electrical connection	6
5. Start-up	7
5.1 Shaft seal run-in	7
6. Adjustment	7
6.1 Calculating the cut-in and cut-out pressures	7
6.2 Adjusting the precharge pressure	7
6.3 Setting the pressure switch	8
7. Operation and maintenance	8
8. Frost protection	8
9. Technical data	8
10. Fault finding	9
11. Disposal	9



Warning
Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Symbols used in this document



Warning
If these safety instructions are not observed, it may result in personal injury.



Warning
If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.



Caution
If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Note
Notes or instructions that make the job easier and ensure safe operation.

2. Applications

The JP Basic Booster is suitable for pressure boosting of fresh water in domestic water supply systems.

3. System sizing



Warning
The system in which the product is incorporated must be designed for the maximum pump pressure.

4. Electrical connection



Warning
The electrical installation should be carried out by an authorised person in accordance with local regulations.

Check that the supply voltage and frequency correspond to the values stated on the nameplate.



Warning
During electrical installation, make sure that the power supply cannot be accidentally switched on.



Warning
The unit must be connected to an external mains switch with a minimum contact gap of 3 mm in all poles.
As a precaution, the pump must be connected to a socket with earth connection.
We recommend to fit the permanent installation with an earth leakage circuit breaker (ELCB) with a tripping current ≤ 30 mA.

Single-phase motors incorporate a thermal switch and require no additional motor protection.

5. Start-up

Caution

Do not start the pump until it has been filled with liquid.

Note

We recommend to fit a non-return valve on the suction side of the pump.

5.1 Shaft seal run-in

The seal faces are lubricated by the pumped liquid, meaning that there may be a certain amount of leakage from the shaft seal.

When the pump is started up for the first time, or when a new shaft seal is installed, a certain run-in period is required before the leakage is reduced to an acceptable level. The time required for this depends on the operating conditions, i.e. every time the operating conditions change, a new run-in period will be started.

Under normal conditions, the leaking liquid will evaporate. As a result, no leakage will be detected.

6. Adjustment

The JP Basic Booster comes with the following factory settings in bar:

Pump	Tank precharge pressure	Cut-in pressure	Cut-out pressure
JP Basic Booster	1.9	2.0	2.8

6.1 Calculating the cut-in and cut-out pressures

The cut-in pressure is the sum of these variables:

- required minimum pressure at the highest tapping point
- head from the pump to the highest tapping point
- pressure loss in pipes.

Recommended cut-out pressure:
cut-in pressure + 0.8 - 1.5 bar.

Note

The cut-out pressure must not exceed the maximum discharge pressure of the pump.

6.2 Adjusting the precharge pressure

When the pump cut-in pressure has been determined, the required precharge pressure of the diaphragm tank can be calculated. The precharge pressure must be adjusted to 90 % of the cut-in pressure.

Caution

When adjusting/reading the precharge pressure, make sure that there is no water pressure on the diaphragm tank from the pipework.

Note

If the pressure switch setting is changed, the precharge pressure must be adjusted too.

See the installation and operating instructions for the diaphragm tank.

6.3 Setting the pressure switch



Warning

Switch off the power supply before adjusting the pressure switch.
Fit the cover on the pressure switch before you switch on the power supply to check the cut-in and cut-out pressure.

The cut-out pressure must be lower than the maximum operating pressure of the pump and tank. Remove the cover from the pressure switch to access the adjusting screws. See fig. 1.

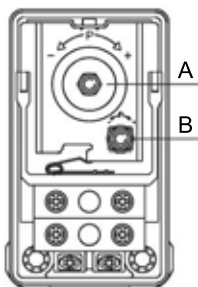


Fig. 1 Pressure switch

Setting the cut-out pressure

1. Turn screw (pos. A) clockwise to increase the cut-out pressure.
Turn it counter-clockwise to reduce the cut-out pressure.
The differential pressure range remains unchanged.
2. Start the pump and check by reading the pressure gauge whether the desired cut-out and cut-in pressures have been obtained.

Setting the cut-in pressure

1. Turn screw (pos. B) clockwise to reduce the cut-in pressure.
Turn it counter-clockwise to increase the cut-in pressure.
The differential pressure range is widened and narrowed respectively.
2. Start the pump and check by reading the pressure gauge whether the desired cut-out and cut-in pressures have been obtained.

Repeat the procedure until the right cut-in and cut-out pressures have been obtained.

7. Operation and maintenance



Warning

Prior to start-up, the system should be flushed through with clean water and drained to remove possible impurities.



Do not cover the motor of the booster system as an adequate supply of cool air must reach the motor cooling fan.

8. Frost protection

If there is a risk of frost, the tank and pump must be drained.

9. Technical data

Ambient temperature

Maximum +40 °C.

Storage temperature

Minimum -10 °C.
Maximum +45 °C.

Liquid temperature

+35 °C.

System pressure

Maximum 6 bar.

Inlet pressure

At inlet pressures above 1.5 bar the discharge pressure must be at least 2.5 bar.

Supply voltage

1 x 220-240 V, 50 Hz.

Insulation class

F.

Enclosure class

IP44.

Relative air humidity

Maximum 95 %.

Sound power level

The sound power level of the pump is lower than 72 dB(A).

Start/stop frequency

Maximum 20 per hour.

TM05 2711 0412

10. Fault finding



Warning

Before starting fault finding, switch off the power supply. Make sure that the power supply cannot be accidentally switched on.

Fault	Cause	Remedy
1. The pump does not start.	a) The fuses in the electric installation have burnt.	Replace the fuses. If the new fuses also burn, check the electric installation.
	b) The earth leakage circuit breaker or the voltage-operated circuit breaker has tripped.	Cut in the circuit breaker and check the electric installation.
2. There is power on the pressure switch but not the pump.	a) The power supply to the pump is disconnected after the pressure switch unit.	Check the cable connections.
	b) The pressure switch unit is defective.	Repair or replace the pressure switch unit. *
3. The pump does not start when water is consumed.	a) Too big difference in height between the pressure switch unit and the tapping point.	Adjust the cut-in pressure.
	b) The pressure switch unit is defective.	Repair or replace the pressure switch unit. *
4. Frequent starts/stops.	a) Leakage in the pipework.	Check and repair the pipework.
	b) The pressure tank has no precharge pressure, or the tank size is insufficient.	Check the tank precharge pressure, and recharge the tank, if necessary. See section 6.
5. The pump does not stop.	a) The pressure switch unit is defective.	Repair or replace the pressure switch unit. *
6. The motor cuts out during operation.	a) The thermal switch in the motor has tripped due to overheating.	The thermal switch will cut in automatically when the motor has cooled sufficiently. If the problem still persists, check these two possible causes: • Impeller stuck. Clean the pump. • Motor defective. Repair or replace the motor. *

* Or contact the nearest Grundfos company or service workshop.

11. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana, ramal Campana
Centro Industrial Garín - Esq. Haendel y
Mozart
AR-1619 Garín Pcia. de Buenos Aires
Pcia. de Buenos Aires
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belorussia

Представительство ГРУНДФОС в
Минске
220123, Минск,
ул. В. Хоружей, 22, оф. 1105
Тел.: +(37517) 233 97 65,
Факс: +(37517) 233 97 69
E-mail: grundfos_minsk@mail.ru

Bosnia/Herzegovina

GRUNDFOS Sarajevo
Trg Heroja 16,
BiH-71000 Sarajevo
Phone: +387 33 713 290
Telefax: +387 33 659 079
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
50/F Maxdo Center No. 8 XingYi Rd.
Hongqiao development Zone
Shanghai 200336
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

Croatia

GRUNDFOS CROATIA d.o.o.
Cebini 37, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.grundfos.hr

Czech Republic

GRUNDFOS s.r.o.
Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Mestarintie 11
FIN-01730 Vantaa
Phone: +358-3066 5650
Telefax: +358-3066 56550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

HILGE GmbH & Co. KG
Hilgestrasse 37-47
55292 Bodenheim/Rhein
Germany
Tel.: +49 6135 75-0
Telefax: +49 6135 1737
e-mail: hilge@hilge.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Lim-
ited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Jl. Rawasumur III, Blok III / CC-1
Kawasan Industri, Puloagung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymoun Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
Gotanda Metalion Bldg., 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

México

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Ista Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznań
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

România

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос
Россия, 109544 Москва, ул. Школьная 39
Тел. (+7) 495 737 30 00, 564 88 00
Факс (+7) 495 737 75 36, 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

GRUNDFOS Predstavništvo Beograd
Dr. Milutina Ivkovića 2a/29
YU-11000 Beograd
Phone: +381 11 26 47 877 / 11 26 47 496
Telefax: +381 11 26 48 340

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovenia

GRUNDFOS d.o.o.
Šlandrova 8b, SI-1231 Ljubljana-Črnuče
Phone: +386 1 568 0610
Telefax: +386 1 568 0619
E-mail: slovenia@grundfos.si

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-1-806 8111
Telefax: +41-1-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

ТОВ ГРУНДФОС УКРАЇНА
01010 Київ, Вул. Московська 86,
Тел.: (+38 044) 390 40 50
Факс.: (+38 044) 390 40 59
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 8TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Представительство ГРУНДФОС в
Ташкенте
700000 Ташкент ул.Усмана Носира 1-й
тулик 5
Телефон: (3712) 55-68-15
Факс: (3712) 53-36-35

Revised 04.01.2012

98150786 0212

ECM: 1088246

The name Grundfos, the Grundfos logo, and the payoff Be-Think-Innovate are registered trademarks owned by Grundfos Management A/S or Grundfos A/S, Denmark. All rights reserved worldwide.
