

Tanks

Dosing tank and accessories

Installation and operating instructions



English (GB) Installation and operating instructions

Original installation and operating instructions.

CONTENTS

	Page
1. Symbols used in this document	2
2. General notes	2
3. Warranty	2
4. Qualification and training of personnel	2
5. Safety	3
5.1 Safety-conscious working	3
5.2 Safety notices on installation and maintenance work	3
5.3 Unauthorised conversions and impermissible spare parts	3
6. Transport and storage	3
6.1 Unpacking	3
6.2 Storage	3
7. Applications	3
7.1 Improper operating methods	3
8. Product overview	3
8.1 General description	3
8.2 Assembled dosing tank station	3
9. Technical data	4
9.1 Operating conditions	4
9.2 Material	4
9.3 Dosing tank versions	4
9.4 Product numbers, volume, weights	4
9.5 Dimensions	4
10. Installation	6
10.1 General notes	6
10.2 Tightness test	6
11. Commissioning and operation	6
12. Maintenance	6
12.1 Cleaning	6
13. Accessories	6
13.1 Collecting tray	6
13.2 Handheld mixer	6
13.3 Electric stirrer	6
13.4 Side extraction device	7
13.5 Drain valve G 3/4"	8
13.6 Aeration / ventilation valve for dosing tank	8
13.7 Filling unit	8
13.8 Dissolving hopper	8
13.9 Pump mounting set	8
13.10 Floor-mounting set	8
14. Disposal	8



Warning

Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Symbols used in this document




Warning

If these safety instructions are not observed, it may result in personal injury.



If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Notes or instructions that make the job easier and ensure safe operation.

2. General notes

These installation and operating instructions contain all the information needed to commission and operate the dosing tank listed below.

If you require further information, or should problems arise which are not described in detail in this manual, please contact your nearest Grundfos branch.

3. Warranty

A warranty claim in accordance with our general terms of sale and delivery is only valid, if the following requirements are fulfilled:

- The product is used in accordance with the information in this manual.
- The product is not dismantled or incorrectly handled.
- The maintenance is carried out by authorised and qualified personnel.

4. Qualification and training of personnel

The personnel responsible for the installation, operation and service must be appropriately qualified for these tasks. Areas of responsibility, levels of authority and the supervision of the personnel must be precisely defined by the operating company. If necessary, the personnel must be trained appropriately.

5. Safety

These installation and operating instructions contain general instructions that must be observed during installation, operation and maintenance of the dosing tank. They must be read by the installation engineer and the relevant qualified operator prior to installation and start-up, and must be available at the installation location at all times.

5.1 Safety-conscious working

The safety notices in these instructions should be observed in the same way as statutory health and safety at work guidelines and the operating and safety notices provided by the operating company.

Risks of not observing the safety instructions

Non-observance of the safety instructions may have dangerous consequences for the personnel, the environment and the pump and may result in the loss of any claims for damages.

It may lead to the following hazards:

- Personal injury from exposure to electrical, mechanical and chemical influences.
- Damage to the environment and personal injury from leakage of harmful substances.
- Failure of important functions of the system.

5.2 Safety notices on installation and maintenance work

All safety and protection equipment must be put back into operation as soon as work is complete.



Warning

Installation and maintenance must only be carried out by authorised and qualified personnel.



Warning

When dosing dangerous media, observe the corresponding safety precautions. Wear protective clothing (gloves and goggles) if required.

5.3 Unauthorised conversions and impermissible spare parts

Modifications or changes to the dosing tank are only permitted with the consent of the manufacturer. Genuine spare parts and accessories approved by the manufacturer are safe to use.

6. Transport and storage

Caution Do not throw or drop the dosing tank.

6.1 Unpacking

- Retain the packaging for future storage or return, or dispose of the packaging in accordance with local regulations.
- Install the dosing tank as soon as possible after unpacking.

6.2 Storage

Keep the dosing tank in a dry, cool place.

- Min./Max. storage temperature: -20 to +45 °C.

7. Applications

Grundfos dosing tanks are intended as reservoirs for storage and dosing of chemicals, as described in these instructions.

Caution No other applications are approved or permitted. Grundfos is not liable for damage resulting from incorrect use.

7.1 Improper operating methods

The operational safety of the pump is only guaranteed if it is used in accordance with section 9. [Technical data](#).

The specified limit values should not be exceeded.

8. Product overview

8.1 General description

The dosing tank can be used as a reservoir for dosing media. Depending on the model, the dosing tank can be fitted with a dosing pump, suction lance and stirrer.

Characteristics of the dosing tank:

- cylindrical tank with screw cap
- 7 sizes ranging between 40 and 1000 litres
- embossed litre scale
- moulded 3/4" thread for drain valve, not drilled open, closed with gasket and screw plug
- moulded 2" thread for connection of Grundfos suction lance, closed with gasket and screw plug
- screw cap with gating for holding a standard key lock
- installation space for dosing pump and electric stirrer and/or handheld mixer, above the filler opening
- the 60 to 500-litre dosing tanks have sintered M6 threaded inserts
 - for assembly of DDA, DDE, DDC, DDI 222, or DMX 221 dosing pump
 - for assembly of electric stirrer
 - for floor mounting with a set of brackets and fixing screws.

8.2 Assembled dosing tank station

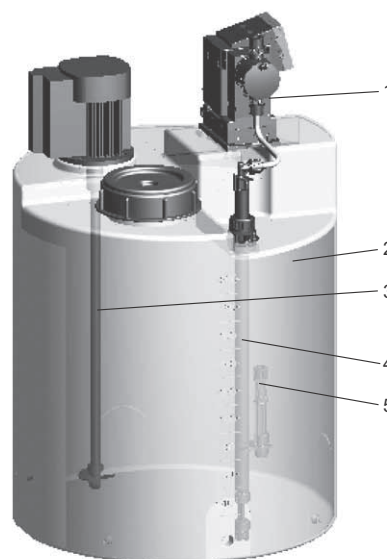


Fig. 1 Assembled dosing tank station (example)

Item	Description
1	Dosing pump
2	Dosing tank
3	Electric stirrer
4	Suction lance
5	Level indication for switch-off of electric stirrer

TM04 8561 27/12

9. Technical data

9.1 Operating conditions

The resistance of the parts that come into contact with media depends on the medium, media temperature and operating pressure. Ensure that parts which come into contact with media during operating conditions are resistant to the dosing medium.

Caution

- Min./Max. ambient temperature: -20 to +45 °C
- Min./Max. storage temperature: -20 to +45 °C
- Min./Max. liquid temperature: -20 to +45 °C
 - Dosing medium must be in the liquid phase.

9.2 Material

- Tank: UV-stabilised polyethylene (LLDPE)
- Gaskets in screw cap and screw plugs: EPDM
- Screw plugs: PE

9.4 Product numbers, volume, weights

Product number		Volume [l]	With opening for electric stirrer	Weight [kg]
Natural white	Black			
96688081	95701166	40	-	3.4
98148805	98149053	60	-	5.5
98150038	98150040		yes	5.5
98149057	98149082	100	-	7.5
98150051	98150052		yes	7.5
98149215	98149224	200	-	11.5
98150053	98150054		yes	11.5
98149245	98149252	300	-	13
98150055	98150056		yes	13
98149266	98149269	500	-	28
98150057	98150058		yes	28
96688086	95706305	1000	-	40
96689131	95704476		yes, with reinforced beam	48

9.5 Dimensions

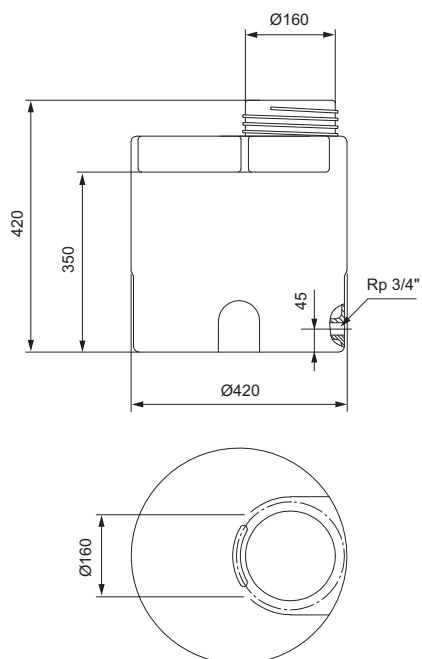


Fig. 2 40-litre dosing tank

9.3 Dosing tank versions

Size

- 40 litres
- 60 litres
- 100 litres
- 200 litres
- 300 litres
- 500 litres
- 1000 litres

Colour

- natural white (semi-transparent) with black cap, or
- black (for media sensitive to light) with black cap

Prepared for direct assembly of an electric stirrer

- with opening for electric stirrer (60-500 l)
- with opening and reinforced beam for holding an electric stirrer (1000 l).

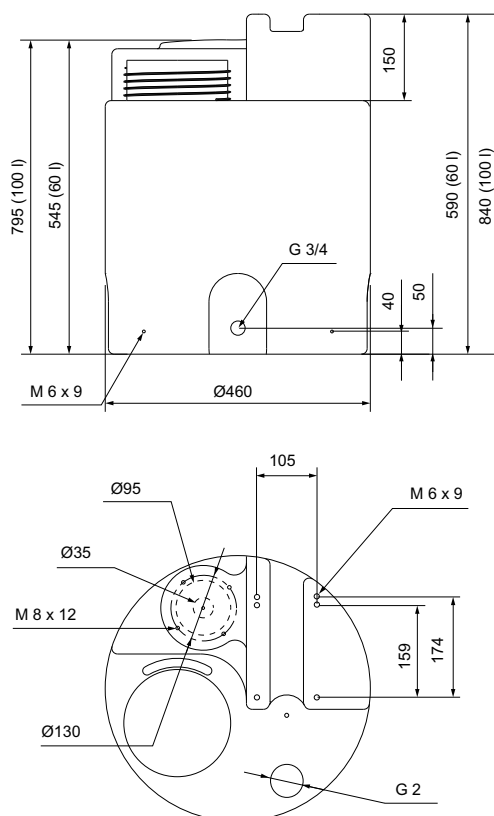


Fig. 3 60 and 100-litre dosing tank

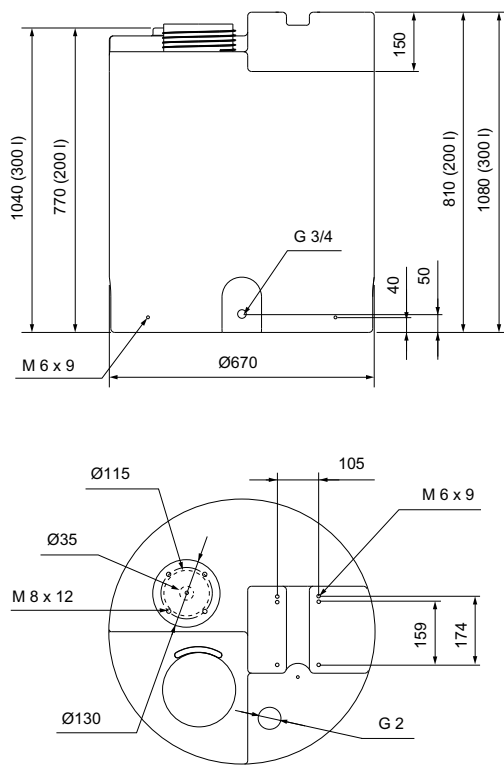


Fig. 4 200 and 300-litre dosing tank

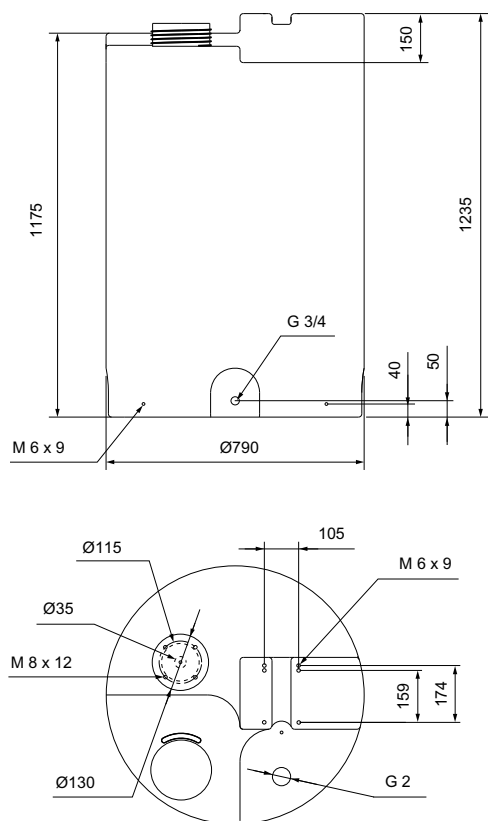


Fig. 5 500-litre dosing tank

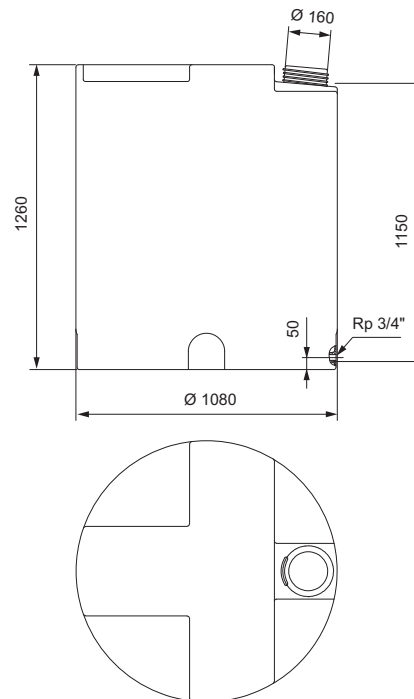


Fig. 6 1000-litre dosing tank

TM04 8518 1012

TM04 8519 1012

TM04 8520 1012

10. Installation

10.1 General notes



Warning

The dosing tank may only be installed by a qualified specialist.

10.2 Tightness test

- Before filling the dosing tank, check that the following requirements are fulfilled:
 - the suction lance is connected,
 - the optional drain valve is fully closed.
- Fill the dosing tank with water and check for leaks.

11. Commissioning and operation

The dosing tank is not operated. Within the system, it simply serves as a reservoir for storage and dosing of the medium.

When commissioning, all the system components must be ready for operation.

Caution

Follow the installation and operating instructions for the components used.

12. Maintenance

The dosing tank requires no maintenance.

Caution

Follow the installation and operating instructions for the components used.

12.1 Cleaning

Clean the dosing tank and accessories if necessary.



Warning

When dosing dangerous media, observe the corresponding safety precautions.

Wear protective clothing (gloves and goggles) if required.

Caution

Follow the installation and operating instructions for the components used.

13. Accessories

13.1 Collecting tray

Product No.	For dosing tank [l]	Volume [l]	Material	Colour	Diameter [mm]	Height [mm]
96726831	60	80	PE	transparent	500	545
96726832	100	120	PE	transparent	500	700
98150059	200	210	PE	transparent	770	595
96726834	300	400	PE	transparent	770	960
95701272	500	500	PE	transparent	860	980
96726836	1000	1000	PE	transparent	1150	1080

13.2 Handheld mixer

Product number: 98133793

Handheld mixer, PVC, for mixing chemicals in the dosing tank. The handheld mixer is suitable for 40 to 500-litre Grundfos dosing tanks.

- With DN 15 through-bolt for connection to the dosing tank
- Shaft length 1200 mm, length can be adapted to the corresponding dosing tank:
 - For pre-assembled dosing tank stations, the length of the handheld mixer is adapted to the tank size before delivery.
 - If ordered separately, adapt the length of the handheld mixer to the tank on site and stick on the knob again.



TM04 8521 1012

Fig. 7 Handheld mixer

13.3 Electric stirrer

Electric stirrers ensure that the dosing medium in the dosing tank is mixed constantly. 1500 rpm electric stirrers are suitable for dosing media with low viscosity.

Grundfos electric stirrers are available in the following versions:

- 7 sizes for Grundfos dosing tanks with contents of between 60 litres and 1000 litres.
- 3-phase or single-phase motor.
- Material version: mixing shaft / mixing blade
 - standard: stainless steel, PP-coated / glass-fibre reinforced PP.
 - for outgassing media: stainless steel, PP-coated / glass-fibre reinforced PP, with a sealing flange on the motor flange.
 - for aggressive media: stainless steel 1.4571/ glass-fibre reinforced PP.

For more details please refer to the instructions for the electric stirrers.

13.4 Side extraction device

- The PVC / FKM side extraction device can only be used on dosing tanks without collecting tray.
 - Please order the connections for extraction pipes separately.
 - The length of the liquid riser is adapted to the dosing tank in question, if required.
1. Fit the extraction device in the coupling thread of the dosing tank:
 - Unscrew the screw plug
 - Drill open the threaded hole
 - Screw in the extraction device and seal with Teflon tape.
 2. Use the provided installation material to fix the liquid riser to the tank wall:
 - Cut M6 thread into tank wall
 - Fit a screw from inside through tank wall and counter nut, and then screw it into the retaining ring.
 - Secure from outside with the counter nut.
 3. Seal the liquid riser with the provided screw plug.

Product No.	Description
96697826	Side extraction device DN 4 / DN 8 • with stop valve and filter • for fitting in coupling thread of dosing tank
96697988	Side extraction device DN 4 / DN 8 • with stop valve, filter and liquid riser • extraction to the right • with through-bolt for connection to dosing tank
96696926	Side extraction device DN 4 / DN 8 • with stop valve, filter and liquid riser • extraction to the left • with through-bolt for connection to dosing tank
96727271	Side extraction device DN 20 • with ball cock • with through-bolt for connection to dosing tank
96727270	Side extraction device DN 20 • with ball cock and liquid riser • with through-bolt for connection to dosing tank

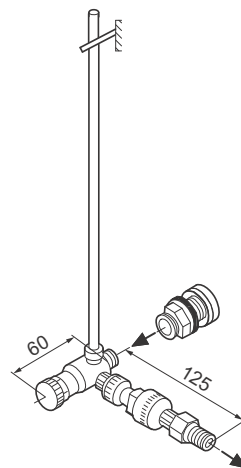


Fig. 8 Side extraction device DN 4 / DN 8

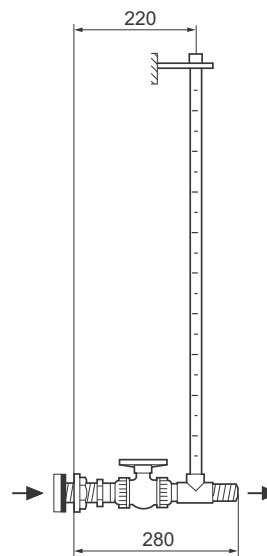


Fig. 9 Side extraction device DN 20

All dimensions are rough figures given in mm.


TM04 1240 5008

TM04 1241 5008

13.5 Drain valve G 3/4"

Product number: 96689132

- Drain valve, PVC / EPDM, for installation in the threaded sleeve of the dosing tank
 - Unscrew the screw plug
 - Drill open the threaded hole
 - Screw in the drain valve and seal with Teflon tape.

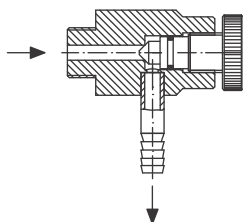


TM04 1232 5008

Fig. 10 Drain valve

13.6 Aeration / ventilation valve for dosing tank

Product number: 96694401

- Aeration / ventilation valve, PVC / FKM / glass, spring-loaded, opening pressure 0.05 bar
1. Observe direction of the arrow on the valve when mounting the valve at the dosing tank. Mounting directions:
 - for ventilation valve: arrow pointing upwards (a)
 - for aeration valve: arrow pointing downwards (b)
 2. Drill a hole (Ø24) into the top surface of the dosing tank
 3. Attach the valve with the seal ring underneath, and screw it down from the opposite side with the union nut.

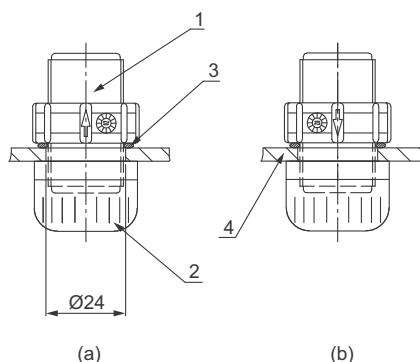

TM04 1242 5008


Fig. 11 Aeration / ventilation valve

Item	Description
1	Valve
2	Union nut
3	Sealing ring
4	Dosing tank
(a)	Ventilation valve
(b)	Aeration valve

13.7 Filling unit

Product number: 96727265

- Filling unit, PVC / EPDM, for filling the dosing tank with liquid media
- With G 1" through-bolt for connection to the dosing tank (hole must be produced by the customer)
- Connecting pipe with DN 15 cementing connection

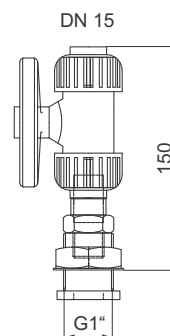


TM04 1243 5008

Fig. 12 Filling unit

13.8 Dissolving hopper

Product number: 96726979

- Dissolving hopper, PVC / EPDM, for washing powders into a 300-litre, 500-litre, or 1000-litre dosing tank
- Dosing tank connection: DN 40 through-bolt
- Water connection: G 5/4, with union nut and inlay for PVC pipe (cementing diameter: 25 mm)

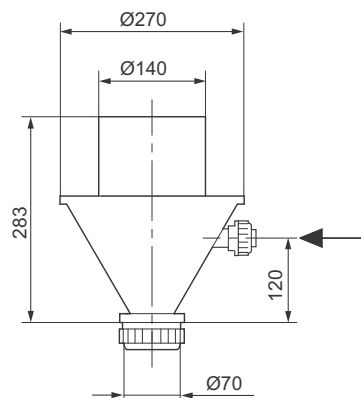

TM04 1244 5008

Fig. 13 Dissolving hopper

13.9 Pump mounting set

- Set of screws for mounting a DDA, DDC, DDE, DDI, or a DMX 221 pump on a dosing tank.

Product No.	Description
98133793	Stainless-steel screws for mounting the pump on a 60 to 500-litre dosing tank
95730864	PP screws for mounting the pump on a 40 or 1000-litre dosing tank

13.10 Floor-mounting set

Product number: 98149921

- Set of 4 floor-mounting brackets with fixing screws for 60 to 500-litre dosing tanks

14. Disposal

This product or parts of it must be disposed of in an environmentally sound way. Use appropriate waste collection services. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 - Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 411 111

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56
Tel.: +7 (375 17) 286 39 72, 286 39 73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia/Herzegovina

GRUNDFOS Sarajevo
Trg Heroja 16,
BiH-71000 Sarajevo
Phone: +387 33 713 290
Telefax: +387 33 659 079
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

GRUNDFOS Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

Grundfos Alldos
Dosing & Disinfection
ALLDOS (Shanghai) Water Technology
Co. Ltd.
West Unit, 1 Floor, No. 2 Building (T 4-2)
278 Jinhu Road, Jin Qiao Export Process-
ing Zone
Pudong New Area
Shanghai, 201206
Phone: +86 21 5055 1012
Telefax: +86 21 5032 0596
E-mail: grundfosalldos-CN@grundfos.com

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
50/F Maxdo Centre No. 8 Xing Yi Rd.
Hongqiao Development Zone
Shanghai 200336
PRC
Phone: +86-21 6122 5222
Telefax: +86-21 6122 5333

Croatia

GRUNDFOS CROATIA d.o.o.
Cebini 37, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS s.r.o.
Čapkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Mestarintie 11
FIN-01730 Vantaa
Phone: +358-(0)207 889 900
Telefax: +358-(0)207 889 550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS Water Treatment GmbH
Reetzstraße 85
D-76327 Pfingsttal (Söllingen)
Tel.: +49 7240 61-0
Telefax: +49 7240 61-177
E-mail: gwt@grundfos.com

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
E-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbalint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 097
Phone: +91-44 4596 6800

Indonesia

PT GRUNDFOS Pompa
Jl. Rawa Sumur III, Blok III / CC-1
Kawasan Industri, Pulogadung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
Gotanda Metalion Bldg. 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo,
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel.: +48-61) 650 13 00
Fax: +48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90
Romania
GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос
Россия, 109544 Москва, ул. Школьная
39
Тел. (+7) 495 737 30 00, 564 88 00
Факс (+7) 495 737 75 36, 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

GRUNDFOS Predstavništvo Beograd
Dr. Milutina Ivkovića 2a/29
YU-11000 Beograd
Phone: +381 11 26 47 877 / 11 26 47 496
Telefax: +381 11 26 48 340

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS d.o.o.
Šlandrova 8b, SI-1231 Ljubljana-Črnuče
Phone: +386 1 568 0610
Telefax: +386 1 568 0619
E-mail: slovenia@grundfos.si

South Africa

Grundfos (PTY) Ltd.
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algiete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
(Box 333) Lunnagårdsgatan 6
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31-331 94 60

Switzerland

GRUNDFOS ALLDOS International AG
Schönmattdstraße 4
CH-4153 Reinach
Tel.: +41-61-717 5555
Telefax: +41-61-717 5500
E-mail: grundfosalldos-CH@grundfos.com

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloom Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Repre-
sentative Office of Grundfos Kazakhstan in
Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses revised 21.05.2014

98173093 1014
ECM: 1144540

The name Grundfos, the Grundfos logo, and be think innovate are registered trademarks owned by Grundfos Holding A/S or Grundfos A/S, Denmark. All rights reserved worldwide. © Copyright Grundfos Holding A/S