

LLC 1000W

Installation and operating instructions



English (GB) Installation and operating instructions

Original installation and operating instructions

CONTENTS

	Page
1. Symbols used in this document	2
2. Applications	2
3. Product description	3
3.1 General construction	3
3.2 Description of function	4
3.3 Technical data	4
4. Transport and storage	4
5. Installation	5
5.1 Mechanical installation	5
5.2 Electrical installation	5
6. Startup	6
7. Operation	6
8. Taking the product out of operation	6
9. Maintenance	6
10. Fault finding	7
11. Service, spare parts, accessories	7
12. Disposal	7

1. Symbols used in this document



Warning
If these safety instructions are not observed, it may result in personal injury.



Warning
If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.



Caution
If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Note
Notes or instructions that make the job easier and ensure safe operation.

2. Applications

The level controller described in these installation and operating instructions is used for level-dependent on/off switching of grey wastewater pumps. The level controller is primarily used where the levels of conductive, non-flammable liquids in tanks or pits must be strictly maintained, or where these liquids require very shallow pumping.



Warning
Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.



Warning
This product can be used by children of eight years and up and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are under supervision or have been instructed in the safe use of the product and understand the hazards involved.
Children must not play with the product. Cleaning and maintenance of the product must not be made by children without supervision.



Warning
The level controller must only be used for the applications mentioned in this manual. Other applications are considered as non-approved. No liability is accepted for resulting damages. The risk is borne solely by the operator.



Warning
Use in explosion protection zones is not permitted.

3. Product description

3.1 General construction

The level controller consists of four stainless steel rod electrodes (pos. 1) (300, 600 or 1000 mm long) in an electrode bracket (pos. 2), a mounting bracket (pos. 3), 10 m cable (pos. 4), a plug-in control box (pos. 5) and a 1 1/4" barrel nipple (pos. 6) for fixing the sheet steel angle to the discharge port of UNILIFT KP. See fig. 1.

The control box houses the evaluation electronics, a safety plug and a Schuko outlet for connection to the pump.

The control box houses the evaluation electronics, a safety plug and a Schuko outlet for connection to the pump.


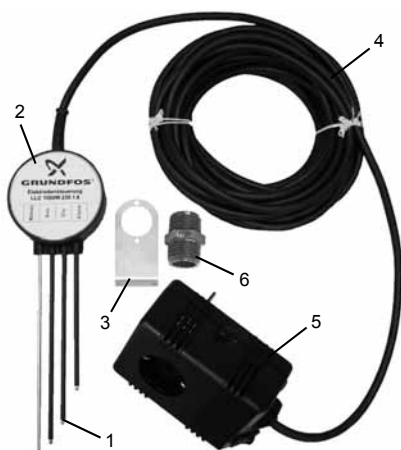


Fig. 1 LLC 1000W level controller

TM05 3939 1812

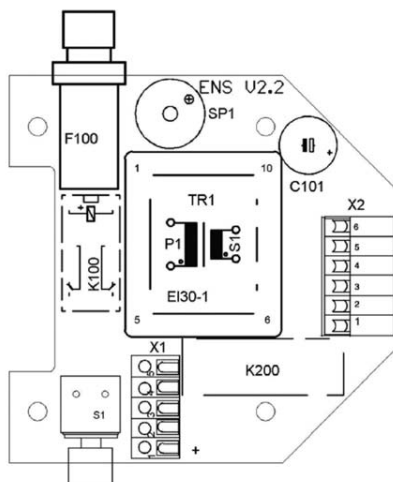

TM05 3940 1812

Fig. 2 Terminal diagram

Contact assignment, terminal block X1

1	Emptying function (L)
2	Filling function (N)
3	Protective earth conductor
4	Plug (L)
5	Plug (N)

Contact assignment, terminal block X2

1	Long electrode (yellow/green)
2	Short electrode (blue)
3	Medium electrode (brown)
4	Alarm electrode (black)
5	Alarm contact, potential-free
6	Alarm contact, potential-free

3.2 Description of function

The voltage between the electrodes is approximately 12 V DC, and the operating voltage for the pump connection is 1 x 230 V. The four electrode rods extend into the liquid to be pumped at differing lengths. The longest electrode functions as a frame electrode; the second-longest is the stop electrode, followed by the start electrode, the shortest electrode being the alarm electrode.

The level controller is factory-set to emptying function. If the liquid level rises to the start electrode, the controller switches on the pump. If the liquid level falls below the stop electrode, the controller switches the pump off. If the liquid reaches the alarm electrode, a potential-free contact in the control box closes, and the built-in buzzer will sound. The additional potential-free changeover contact is provided for special applications and can also be used for an external alarm. The position of the contacts (spring terminals) on the guide plate in the control box is shown in fig. 2.

The function can be reversed by moving the cable from connector X1-1 to connector X1-2, so that the connected device turns on when the stop electrode is reached, and turns off when the start electrode is reached (filling function). The alarm is then triggered when the tank to be filled is overfilled.

After installation, the level controller functions automatically. Settings on the device must not be adjusted.

3.3 Technical data

Designation	LLC 1000W
Supply voltage:	1 x 230 V, 50 Hz, N, PE
Rated current	Max. 6.0 A
Power	1000 W
Enclosure class, control box	IP20
Enclosure class, electrode bracket	IP68
Contact load, high-level alarm, potential-free	Max. 2 A, max. 230 V
Cable length	10 m
EMC noise emission	According to EN 61000-6-3
EMC noise immunity	According to EN 61000-6-2
Max. liquid temperature	55 °C
Ambient temperature	0-40 °C
Country of origin	Germany

Materials

Component	Material
Electrodes	Stainless steel
Electrode bracket	Plastic
Cable sheath	Rubber
Plug housing	Plastic

4. Transport and storage

The level controller is delivered in appropriate packaging and should remain packed until installation.

The controller must be stored in a dry, cool, frost-free space. The controller must not be exposed to direct sunlight.

5. Installation

Warning

Installation and operation in a potentially explosive environment are not permissible.



Make sure that the power supply cannot be accidentally switched on during installation. We recommend that you unplug the control box from the socket.

The electronic connections on the control box must not be exposed to moisture.


5.1 Mechanical installation

5.1.1 Mounting bracket

Attach the bracket using the two screws on the electrode bracket. See fig. 3.

Note

The long side must face upwards.

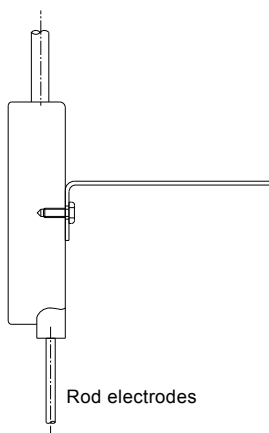

Rod electrodes

Fig. 3 Place the mounting bracket on the electrode bracket

5.1.2 Electrode bracket

The electrode bracket can either be attached directly to the pump or to a tank wall.

The level controller can be used for Grundfos pump types Unilift CC and Unilift KP.

The length of the electrodes must be adjusted to the length of the pump. The difference in length between the start and stop electrodes corresponds to the switching differential.

The control electrodes must not come into contact with the pump or the walls of the pump pit. The frame electrode must be the longest electrode and may touch the bottom.

Caution

Make sure that the pump stop point as specified by the electrode length is safely reached.

Make sure that the pump stop point as specified by the electrode length is safely reached.

It may be necessary to shorten the stop electrode. If the electrodes are to be trimmed to change the switching points, cut the protective tube at the bottom end of the electrodes by approximately 5 mm after trimming. Tighten the rod electrodes gently with pliers prior to startup in order to prevent them from coming loose during pump operation.

Assembly on the pump

Push the electrode bracket onto the pump pressure outlet using the mounting bracket, so that the electrodes face down. Then connect the electrode bracket to the discharge port of the UNILIFT KP using the 3-stage pressure outlet of the UNILIFT CC supplied with the pump or using the attached 1 1/4" barrel nipple.

5.2 Electrical installation



Warning

Connection work must be carried out by authorised staff.

The level controller is now ready for connection. Electrical connection work on the device itself is not necessary if the pump is equipped with a plug.

If electrical connection work is required in order to use certain functions or to connect the power supply for the pump and the mains directly to the control box, and thus not use the sockets, detach the rear wall of the control box.



Warning

Make sure that the power supply cannot be accidentally switched on during electrical installation. We recommend that you unplug the control box from the socket.

If the potential-free alarm contact is to be used to forward the alarm signal to a main controller, connect the signal cable to terminal block X2, terminals 3 and 4.

If the filling function is to be used instead of the emptying function, move the lead from terminal X1-1 to terminal X1-2.

TM05 3941 1812

6. Startup

Note

Trim the electrodes to the desired length in advance, depending on the pump. Take into account the technically feasible switching levels of the pump.

After installation, plug the control box into a socket and plug the pump plug into the control box socket.

Carry out test runs. To do so, press and hold the switch on the control box. The level controller will not operate when the switch is actuated. The pump runs for as long as the button is held.

If you encounter faults during test operation, verify that the power supply is correct, that the connected units function properly, and that the liquid has sufficient conductivity. See section [10. Fault finding](#) for more details.

If the switch on the control box is not pressed, the level controller operates automatically.

Change over from the emptying function (delivery state) to the filling function is described in section [5.2 Electrical installation](#).

7. Operation

Once the level controller has been installed and started up, no further action is required.

The level controller operates automatically and switches the connected wastewater pumps on and off based on the liquid level.

For a trial run or to briefly switch the pump on and off during commissioning or service work, the pump can be manually operated by pushing the switch on the control box. See also section [6. Startup](#).

8. Taking the product out of operation

1. Disconnect the control box from the power supply, for instance by unplugging the control box from the socket.
2. Unplug the pump from the pump control box, or remove the cables from the terminals in the event of direct connection to the pump.
3. Remove the electrode bracket from the pump.
4. Carefully wash the electrodes with clean water.

9. Maintenance

The level controller is maintenance-free. However, the electrode tips must be cleaned at regular intervals to remove any deposits that could otherwise lead to malfunctions. The maintenance intervals to be observed depend on the operating conditions and the liquid pumped.

Warning



Before starting work on the product, switch off the power supply. Make sure that the power supply cannot be accidentally switched on. We recommend that you unplug the control box from the socket.

10. Fault finding



Warning

Before starting work on the product, switch off the power supply. Make sure that the power supply cannot be accidentally switched on. We recommend that you unplug the control box from the socket.

Fault	Possible cause	Remedy
1. The pump does not start.	a) No power supply, or incorrect power supply.	Check the power supply.
	b) Incorrect electrical connection.	Check the electrical connection and correct as needed.
	c) Defective cable.	Check the cable. Contact Grundfos Service in the event of a defective cable.
	d) The motor protection of the pump has tripped due to overheating, blockage, voltage fault or other pump fault.	For actions to take when motor protection on the pump has tripped, see the installation and operating instructions for the pump.
	e) Fuse in control box has blown.	Replace fuse (fine-wire slow-blow fuse 8 A). If the fuse blows again immediately, identify and remedy the cause.
	f) Controller fault or defective electronics.	Contact Grundfos Service.
	g) Electrodes contaminated.	Clean the electrodes.
	h) Pump defective.	Replace the pump.
2. The pump does not stop.	a) Button on the control box is stuck.	Loosen the button.
	b) Controller fault.	Contact Grundfos Service.
	c) Stop electrode too long.	Trim the stop electrode. Note the minimum possible stop point of the pump.
3. Pump starts and stops in wrong order.	a) Incorrect switching function selected.	Move cable on terminal block X1 from terminal 1 to terminal 2 or vice versa.

11. Service, spare parts, accessories

Note

Spare parts and accessories not supplied by Grundfos will not be inspected or approved by Grundfos.

The use of non-authorised spare parts and accessories voids any Grundfos warranty liability for consequential damage.

Any malfunctions which cannot be repaired must only be corrected by Grundfos or authorised specialist companies.

Please provide an exact description in the event of a malfunction to allow our service technician to prepare and provide the appropriate spare parts.

12. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the product LLC 1000W, to which the declaration below relates, is in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

DK: EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produktet LLC 1000W som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EU-medlemsstaternes lovgivning.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass das Produkt LLC 1000W, auf das sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmt.

TR: AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirim konusu olan LLC 1000W ürünlerinin, AB üye ülkelerinin direktiflerinin yakınlaştırılmasıyla ilgili durumun aşağıdaki Konsey Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğun bize ait olduğunu beyan ederiz.

- Low Voltage Directive (2014/35/EU).
Standards used:
EN 60335-1:2002 + A1:2004, A2:2006, A11:2004, A12:2006, A13:2008, A14:2010, A15:2011.
EN 60204-1:2006 + A1:2009.
- EMC Directive (2014/30/EU).
Standards used:
EN 61000-6-2:2005, EN 61000-6-3:2007+A1:2011

This EU declaration of conformity is only valid when published as part of the Grundfos safety instructions (publication number 98335640 0517).

Székesfehérvár, 19/04/2016



Róbert Kis
Engineering Manager
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile the technical file and empowered to sign the EU declaration of conformity.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznań
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
Shkolnaya, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495)
737-30-00
Факс (+7) 495 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen
Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuenteclilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloeam Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses Revised 07.06.2017

98335640 0517
ECM: 1206635

The name Grundfos, the Grundfos logo, and **be think innovate** are registered trademarks owned by Grundfos Holding A/S or Grundfos A/S, Denmark. All rights reserved worldwide.

© Copyright Grundfos Holding A/S