

CRK, MTR

Installation and operating instructions



English (GB) Installation and operating instructions

Original installation and operating instructions

These installation and operating instructions describe Grundfos CRK and MTR pumps.

Sections 1-4 give the information necessary to be able to unpack, install and start up the product in a safe way.

Sections 5-11 give important information about the product, as well as information on service, fault finding and disposal of the product.

CONTENTS

	Page
1. General information	2
1.1 Hazard statements	2
1.2 Notes	3
2. Receiving the product	3
2.1 Lifting the product	3
3. Installing the product	4
3.1 Mechanical installation	4
3.2 Pump location	4
3.3 Electrical connection	5
4. Starting up the product	6
4.1 Before starting the product	6
4.2 Starting the product	6
5. Product introduction	7
5.1 Applications	7
5.2 Pumped liquids	7
5.3 Identification	7
6. Technical data	9
6.1 Ambient temperature	9
6.2 Maximum permissible operating pressure and liquid temperature for the shaft seal	9
6.3 Minimum flow rate	10
6.4 Electrical data	10
6.5 Maximum number of starts	10
7. Sound pressure level	10
8. Servicing the product	11
8.1 Maintaining the product	11
8.2 Filters	12
8.3 Periodic checks	12
8.4 Coupling adjustment	12
8.5 Contaminated products	12
8.6 Service documentation	12
9. Taking the product out of operation	12
9.1 Taking the product permanently out of operation	12
10. Fault finding the product	13
11. Disposing of the product	14



Read this document before installing the product. Installation and operation must comply with local regulations and accepted codes of good practice.

1. General information

1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.

DANGER



Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.

WARNING



Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

CAUTION



Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:

SIGNAL WORD



Description of hazard

Consequence of ignoring the warning.
- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.


2. Receiving the product

2.1 Lifting the product

When lifting the entire product with motor, follow these instructions:


- Pump with motor sizes 0.37 - 5.5 kW:
Lift the pump in the motor flange by means of straps or the like.
- Pump with motor sizes 7.5 - 22 kW:
Lift the pump by means of the motor eyebolts.
- Pump with motor sizes 30-45 kW:
Lift the pump by means of the lifting brackets on the motor flange.

0.37 - 5.5 kW




TM04 0339 0608

7.5 - 22 kW



TM04 0341 0608

30-45 kW

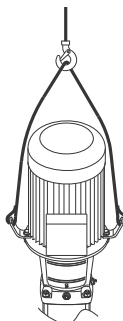

TM05 9564 4113

55-75 kW

Fig. 1 Lifting points

In case of pumps with other motors than MG or Siemens, we recommend that you lift the pump by means of the straps in the motor flange.

3. Installing the product

3.1 Mechanical installation

WARNING

Moving parts

- Death or serious personal injury
- Tighten the coupling screws to the correct torque.
 - Install the coupling guards securely to the pump with the screws intended for this purpose.

CAUTION

Hot surface

- Minor or moderate personal injury
- The pump must be installed so that persons cannot accidentally come into contact with the hot surface of the motor.

3.2 Pump location

The pump is designed for tank mounting in vertical and horizontal position. However, only MTR version H and MTRE version H are suitable for horizontal mounting.

The pump is positioned in a hole cut into the tank and is secured to the tank by four hexagon head screws through the holes in the mounting flange.

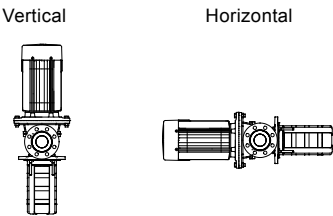


Fig. 2 Vertical and horizontal installation

On horizontally installed MTR, MTRE pumps with motors from 5.5 kW and up the motors have feet and must be supported.




Fig. 3 Horizontally installed MTR with foot

For horizontally mounted pumps ensure a sufficient sealing between pump flange and tank. A sealing gasket will usually suffice.

Before changing shaft seals for horizontally mounted pumps, drain the tank.

MTR 32, 45 and 64 pumps can only be installed in vertical position.

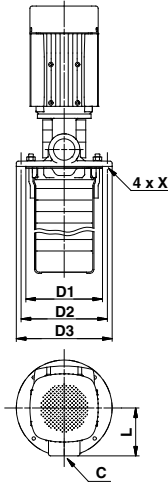


Fig. 4 Vertical installation

Mounting flange dimensions:

Pump type	D1	D2	D3	L	C	X
CRK 2, 4	140	160	180	100	Rp 1 1/4 G 1 1/4	Ø7.5
MTR 1s, 1, 3, 5, 8	140	160	180	100	Rp 1 1/4 G 1 1/4	Ø9.5
MTR 10, 15, 20	200	225	250	125	Rp 2 G 2	Ø9
MTR 32	190	220	250	150	DN 65	Ø12
MTR 45, 64	240	265	290	165	DN 80	Ø12

TM02 8042 4503

TM01 4990 1399

TM04 5755 3809

3.2.1 Inlet conditions

The bottom of the pump strainer must be at least 25 mm above the bottom of the tank.

The pumps are designed to provide full performance down to a level of A mm above the bottom of the strainer.

At a liquid level between A and B mm above the bottom of the strainer, the built-in priming screw will protect the pump against dry running.

MTR 32, 45 and 64 pumps have no priming screw.

Pump type	A [mm]	B [mm]
CRK 2, 4 and MTR 1s, 1, 3, 5	41	28
MTR 10, 15, 20	50	25
MTR 32, 45, 64	70	-

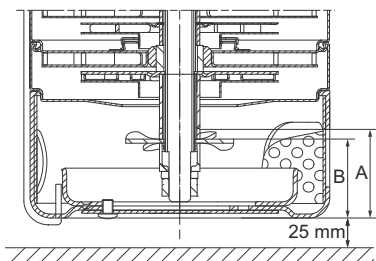


Fig. 5 CRK 2, 4 and MTR 1s, 1, 3, 5, 8

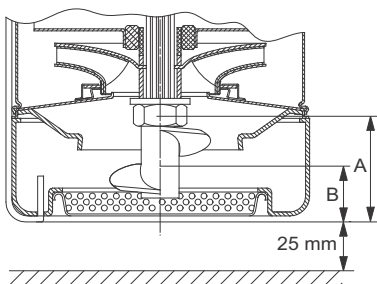


Fig. 6 MTR 10, 15, 20

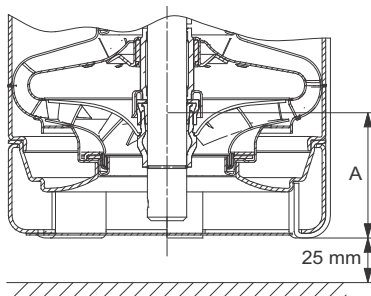


Fig. 7 MTR 32, 45, 64

3.3 Electrical connection

WARNING

Electric shock

Death or serious personal injury

- Before starting any work on the product, make sure that the power supply has been switched off and that it cannot be accidentally switched on.
- Connect the pump to an external main switch close to the pump and to a motor-protective circuit breaker or a CUE frequency converter. Make sure that you can lock the main switch in OFF position (isolated). Type and requirements as specified in EN 60204-1, 5.3.2.



The electrical connection must be carried out by an authorized electrician in accordance with local regulations.

The electrical connection must be carried out as shown in the wiring diagram inside the terminal box cover.

The operating voltage and frequency are marked on the pump nameplate. Please make sure that the motor is suitable for the power supply on which it will be used.

Single-phase Grundfos motors incorporate a thermal switch and require no additional motor protection.

TM05 7225 0813

TM07 2800 4118

TM05 7224 0813

Three-phase motors must be connected to a motor-protective circuit breaker.

The terminal box can be turned to four positions, in 90 ° steps. See fig. 8.

1. If necessary, remove the coupling guards. Do *not* remove the coupling.
2. Remove the bolts securing the motor to the pump.
3. Turn the motor to the required position.
4. Replace and tighten the bolts.
5. Replace the coupling guards.

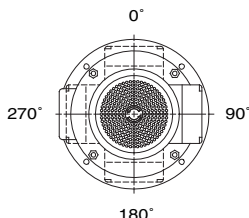


Fig. 8 Terminal box positions

3.3.1 Frequency converter operation

Motors supplied by Grundfos

All three-phase motors supplied by Grundfos can be connected to a frequency converter.

Depending on the frequency converter type, this may cause increased acoustic noise from the motor.

Furthermore, it may cause the motor to be exposed to detrimental voltage peaks.



Grundfos motors, types MG 71 and MG 80 as well as MG 90 (1.5 kW, 2-pole), for supply voltages up to and including 440 V (see motor nameplate), must be protected against voltage peaks higher than 650 V (peak value) between the supply terminals.

We recommend to protect all other motors against voltage peaks higher than 850 V.

The above disturbances, i.e. both increased acoustic noise and detrimental voltage peaks, can be eliminated by fitting an LC filter between the frequency converter and the motor.

For further information, please contact the frequency converter or motor supplier.

Other motor makes

If other motors makes than those supplied by Grundfos are used, contact Grundfos or the motor manufacturer.

4. Starting up the product

WARNING

Too high pressure and leakage

Death or serious personal injury

- Do not run the pump against a closed outlet valve for more than approx. 5 minutes.



4.1 Before starting the product

- Make sure that all pipe connections are tight.
- Make sure that the pump is partly filled with liquid (partly submerged).
- Make sure that the strainer is not blocked by impurities.

4.2 Starting the product

1. Close the isolating valve on the outlet side of the pump.
2. If the pump is fitted with a vent valve, this valve must be opened. See fig. 9.

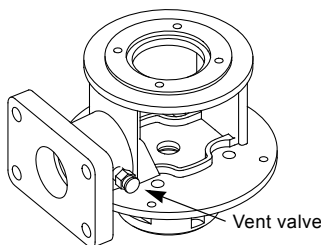


Fig. 9 Position of the vent valve

3. See the correct direction of rotation of the pump on the motor fan cover or on the coupling guard. When seen from the top, the pump must rotate counterclockwise.
 4. Start the pump and check the direction of rotation.
 5. Open the outlet pipe isolating valve a little.
 6. If the pump is fitted with a vent valve, this valve must be closed when a steady flow of liquid runs out of it.
 7. Completely open the outlet pipe isolating valve.
- The pump has now been vented and is ready for operation.

5. Product introduction

5.1 Applications

The Grundfos pumps, types CRK and MTR, are tank mounted multistage centrifugal pumps designed for the following applications:

- liquid transfer in machine tools
- condensate transfer
- liquid transfer in industrial washing machines
- pressure boosting of cold or hot clean liquids
- similar applications.

5.2 Pumped liquids

Thin, non-explosive liquids, not containing fibres. The liquid must not attack the pump materials chemically.

When pumping liquids with a density and/or viscosity higher than that of water, use motors with correspondingly higher outputs, if required.

MTR version A pumps have a cast iron pump head.

In MTR version I and CRK version I pumps all parts in contact with the pumped liquid are of stainless steel ENDIN 1.4301 or better.

5.3 Identification

5.3.1 Nameplate for CRK and MTR

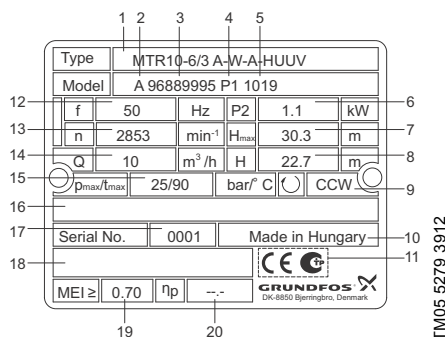


Fig. 1 Example of nameplate

Pos.	Description
1	Type designation
2	Model
3	Product number
4	Place of production
5	Production year and week (YYWW)
6	P2, 50 Hz
7	Head against closed valve
8	Head at rated flow rate
9	Direction of rotation CCW: Counterclockwise CW: Clockwise

Pos.	Description
10	Country of production
11	Approval marks
12	Frequency
13	Speed
14	Rated flow rate
15	Maximum pressure and temperature
16	The number of the copy of the technical file kept at KEMA (stated if the pump is ATEX classified)
17	The serial number of the pump (stated if the pump is ATEX classified)
18	ATEX category (stated if the pump is ATEX classified)
19	Minimum efficiency index
20	Hydraulic pump efficiency

5.3.2 Type key for CRK

Example CRK E 4 - 160 / 2 -x -x -x -xxxx

Pump type	
Pump with integrated frequency control	
Rated flow rate [m³/h]	
Number of chambers* x 10	
Number of impellers*	
Code for pump version	
Code for pipe connection	
Code for materials	
Code for shaft seal and rubber pump parts	

* See fig. 2.

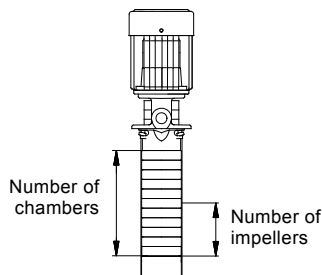


Fig. 2 Number of chambers / impellers

5.3.3 Type key for MTR, MTR E

Example	MTR	E	32	(s)	-2	/1	-1	-A	-F	-A	-H	UU	V
Pump type													
Pump with integrated frequency control													
Rated flow rate [m³/h]													
All impellers with reduced diameter (applies only to MTR 1s)													
Number of chambers, see fig. 2													
Number of impellers, see fig. 2													
Number of impellers with reduced diameter													
Pump version													
A Basic version													
B Oversize motor													
C Inlet pipe													
E Pump with certificate/approval													
F 120 °C version													
H Horizontal version													
J Pump with different max. speed													
P Undersize motor													
T Double oversize													
X Special version													
Pipe connection													
F DIN flange													
G ANSI flange													
J JIS flange													
M Square flange with internal thread													
W Internal thread													
WB NPT internal thread													
X Special version													
Materials													
A Basic version													
I Wetted parts EN/DIN 1.4301 / AISI 304													
X Special version													
Shaft seal													
H Balanced cartridge seal													
Q Silicon carbide													
U Tungsten carbide													
B Carbon													
E EPDM													
F FXM													
K FFKM													
V FKM													

6. Technical data

Pump type	CRK	MTR
Minimum liquid temperature [°C]	-10	-10
Maximum liquid temperature [°C]	+90	+90 (120*)
Maximum operating pressure [bar]	25	25
Enclosure class	IP55	IP55

* Applies to pump version F.

6.1 Ambient temperature

Motor power [kW]	Motor make	Motor efficiency class	Max. ambient temperature at full load [°C]	Max. altitude above sea level [m]	Pos. in output curve in fig.
0.06 - 0.18	Siemens	-	+40	1000	1
0.25 - 0.55	MG	-	+40	1000	1
0.75	MG	IE2	+60	3500	2
1.1 - 22	MG	IE2	+60	3500	2
30-45	Siemens	IE2	+55	2750	3

If the ambient temperature exceeds the above temperature values or the pump is installed at an altitude exceeding the above altitude values, the motor must not be fully loaded due to the risk of overheating. Overheating may result from excessive ambient temperatures or the low density and consequently low cooling effect of the air.

In such cases, it may be necessary to use a motor with a higher rated output.

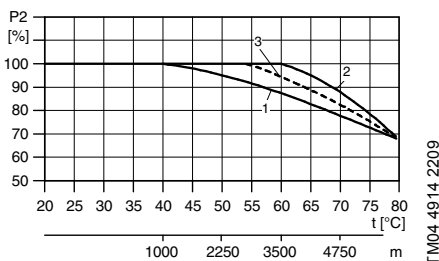


Fig. 3 Relationship between motor output (P2) and ambient temperature/altitude

Example: A pump with a 1.1 kW IE2 MG motor: If this pump is installed 4750 m above sea level, the motor must not be loaded more than 88 % of rated output. At an ambient temperature of 75 °C, the motor must not be loaded more than 78 % of rated output. If the pump is installed 4750 m above sea level at an ambient temperature of 75 °C, the motor must not be loaded more than 88 % × 78 % = 68.6 % of rated output.

6.2 Maximum permissible operating pressure and liquid temperature for the shaft seal

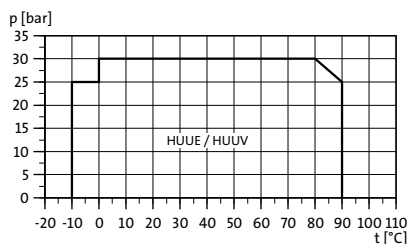


Fig. 4 MTR 1s to 64

6.3 Minimum flow rate

Due to the risk of overheating, the pump must not be used at flows below the minimum flow rate.

The curve below shows the minimum flow rate as a percentage of the nominal flow rate in relation to the liquid temperature.

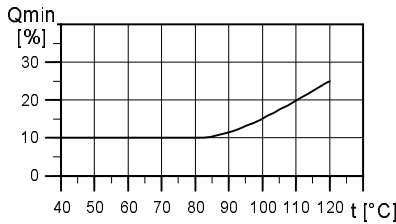


Fig. 5 Minimum flow rate in relation to temperature

6.4 Electrical data

See motor nameplate.

6.5 Maximum number of starts

Motor size [kW]	Recommended maximum number of starts per hour
0.06 - 0.18	100
0.25 - 2.2	250
3-4	100
5.5 - 11	50
15-22	40
30-45	8

7. Sound pressure level

The table below shows airborne noise emitted by CRK and MTR pumps with motors fitted by Grundfos.

Motor [kW]	L _{pA} [dB(A)]	
	50 Hz	60 Hz
0.37	50	55
0.55	50	53
0.75	50	54
1.1	52	57
1.5	54	59
2.2	54	59
3.0	55	60
4.0	62	66
5.5	60	65
7.5	60	65
11	60	65
15	60	65
18.5	60	65
22	66	70
30	71	75
37	71	75
45	71	75

8. Servicing the product

WARNING

Electric shock



- Death or serious personal injury
- Before starting any work on the product, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

WARNING

Moving parts



- Death or serious personal injury
- Tighten the coupling screws to the correct torque.
 - Install the coupling guards securely to the pump with the screws intended for this purpose.

CAUTION

Corrosive liquids



- Death or serious personal injury
- Wear personal protective equipment.

CAUTION

Toxic liquids



- Death or serious personal injury
- Wear personal protective equipment.

CAUTION

Hot or cold liquid



- Minor or moderate personal injury
- Wear personal protective equipment.

CAUTION

Hot or cold surface



- Minor or moderate personal injury
- Make sure that no one can accidentally come into contact with hot or cold surfaces.



8.1 Maintaining the product

Pump bearings and shaft seal are maintenance-free.

8.1.1 Motor bearings

Motors not fitted with grease nipples are maintenance-free.

Motors fitted with grease nipples should be lubricated with a high-temperature, lithium-based grease. See the instructions on the fan cover.

In the case of seasonal operation (motor is idle for more than 6 months of the year), we recommend to grease the motor when the pump is taken out of operation.

Depending on the ambient temperature, the motor bearings must be replaced or lubricated according to the table below. The table applies to 2-pole motors. The number of operating hours stated for bearing replacement are guidelines only.

Motor size [kW]	Bearing replacement interval [operating hours]				
	40 °C	45 °C	50 °C	55 °C	60 °C
0.37 - 0.75	18000	-	-	-	-
1.1 - 7.5	20000	15500	12500	10000	7500
Motor size [kW]	Lubrication interval [operating hours]				
	40 °C	45 °C	50 °C	55 °C	60 °C
11 - 18.5	4500	3400	2500	1700	1100
22	4000	3100	2300	1500	1000
30-55	4000	3000	2000	1500	-
75	2000	1500	1000	500	-

Intervals for 4-pole motors are twice as long as those for 2-pole motors.

If the ambient temperature is lower than 40 °C, bearings must be replaced/lubricated at the intervals mentioned under 40 °C.

8.2 Filters

Chip trays, filters, etc. must be cleaned at regular intervals to ensure a correct flow of liquid.

8.3 Periodic checks

At regular intervals, depending on the conditions and time of operation, the following checks must be made:

- Check the quantity of liquid and operating pressure.
- Check that there are no leaks.
- Check that the motor is not overheating.
- Check the tripping function of the motor-protective circuit breaker.
- Check that all controls are operating satisfactorily.

If the above checks do not reveal any abnormal operating details, no further checks are necessary. Should any faults be found, check the symptoms according to section [10. Fault finding the product](#).

8.4 Coupling adjustment

For adjustment of coupling in CRK and MTR 1s to 20, see page [15](#).

For adjustment of coupling in MTR 32, 45, 64, see page [16](#).

8.5 Contaminated products

The product will be classified as contaminated if it has been used for a liquid which is injurious to health or toxic.

If you request Grundfos to service the product, contact Grundfos with details about the liquid before returning the product for service. Otherwise, Grundfos can refuse to accept the product for service.

Any application for service must include details about the liquid.

Clean the product in the best possible way before you return it.

Costs of returning the product are to be paid by the customer.

8.6 Service documentation

Service documents and service kits are available in Grundfos Product Center (<http://product-selection.grundfos.com>).

9. Taking the product out of operation

9.1 Taking the product permanently out of operation

CAUTION

Corrosive liquids

- Death or serious personal injury
- Wear personal protective equipment.



CAUTION

Toxic liquids

- Death or serious personal injury
- Wear personal protective equipment.



CAUTION

Hot or cold liquid

- Minor or moderate personal injury
- Wear personal protective equipment.



CAUTION

Hot or cold surface

- Minor or moderate personal injury
- Make sure that no one can accidentally come into contact with hot or cold surfaces.



The product will be classified as contaminated if it has been used for a liquid which is injurious to health or toxic.

10. Fault finding the product

WARNING

Electric shock



- Death or serious personal injury
- Before starting any work on the product, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

WARNING

Moving parts



- Death or serious personal injury
- Tighten the coupling screws to the correct torque.
 - Install the coupling guards securely to the pump with the screws intended for this purpose.

CAUTION

Corrosive liquids



- Death or serious personal injury
- Wear personal protective equipment.

CAUTION

Toxic liquids



- Death or serious personal injury
- Wear personal protective equipment.

CAUTION

Hot or cold liquid



- Minor or moderate personal injury
- Wear personal protective equipment.

CAUTION

Hot or cold surface



- Minor or moderate personal injury
- Make sure that no one can accidentally come into contact with hot or cold surfaces.



Fault	Cause	Remedy
1. Motor does not run when started.	a) Power supply failure.	Connect the power supply.
	b) Fuses are blown.	Replace fuses.
	c) Motor-protective circuit breaker has tripped.	Reactivate the motor-protective circuit breaker.
	d) Thermal protection has tripped.	Reactivate the thermal protection.
	e) Main contacts in motor-protective circuit breaker are not making contact or the coil is faulty.	Replace contacts or magnetic coil.
	f) Control circuit is defective.	Repair the control circuit.
	g) Motor is defective.	Replace the motor.
2. Motor-protective circuit breaker trips immediately when power supply is switched on.	a) One fuse blown/automatic circuit breaker has tripped.	Replace fuse/cut in the circuit breaker.
	b) Contacts in motor-protective circuit breaker are faulty.	Replace motor-protective circuit breaker contacts.
	c) Cable connection is loose or faulty.	Fasten or replace the cable connection.
	d) Motor winding is defective.	Replace the motor.
	e) Pump mechanically blocked.	Remove the mechanical blocking of the pump.
	f) Motor-protective circuit breaker overload setting is too low.	Set the motor-protective circuit breaker correctly.
3. Motor-protective-circuit breaker trips occasionally.	a) Motor-protective circuit breaker overload setting is too low.	Set the motor-protective circuit breaker correctly.
	b) Low voltage at peak times.	Reestablish constant power supply.
4. Motor-protective-circuit breaker has not tripped but the pump does not run.	a) Check 1 a), b), d), e) and f).	

Fault	Cause	Remedy
1. Motor does not run when started.	a) Power supply failure.	Connect the power supply.
	b) Fuses are blown.	Replace fuses.
	c) Motor-protective circuit breaker has tripped.	Reactivate the motor-protective circuit breaker.
	d) Thermal protection has tripped.	Reactivate the thermal protection.
	e) Main contacts in motor-protective circuit breaker are not making contact or the coil is faulty.	Replace contacts or magnetic coil.
	f) Control circuit is defective.	Repair the control circuit.
	g) Motor is defective.	Replace the motor.
5. Pump runs but gives no liquid or pump performance is not constant.	a) Pump strainer partly blocked by impurities.	Clean the strainer.
	b) Liquid level in tank too low.	Increase the liquid level.
	c) Pump draws in air.	Check the inlet conditions.
6. Leakage in shaft seal.	a) Shaft seal is defective.	Replace the shaft seal.
7. Noise.	a) Cavitation.	Check the inlet conditions.
	b) Pump does not rotate freely (frictional resistance) because of incorrect pump shaft position.	Adjust the pump shaft.
	c) Frequency converter operation.	See section Motors supplied by Grundfos .

11. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.
3. See also end-of-life information at www.grundfos.com/product-recycling.




TM02 8050 4503

TM02 8051 4503

TM02 8052 4503

TM02 7420 3403

MTR 32, 45, 64

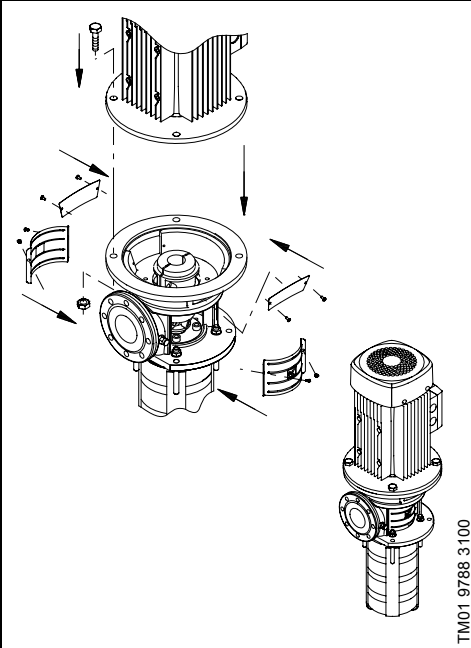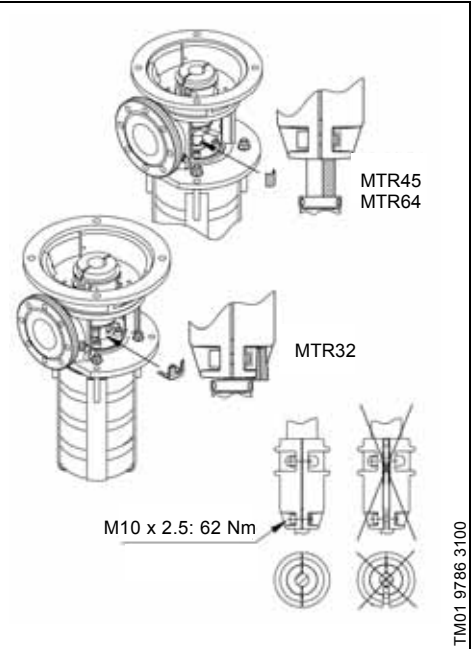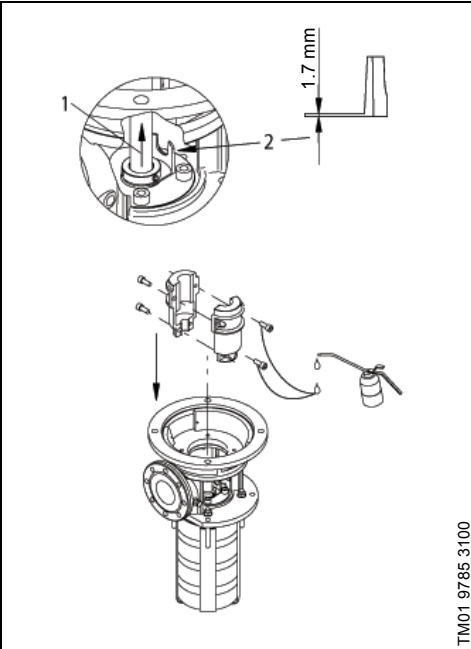

Declaration of conformity

GB: EC/EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the products CRK, MTR, to which the declaration below relates, are in conformity with the Council Directives listed below on the approximation of the laws of the EC/EU member states.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky CRK, MTR, na které se toto prohlášení vztahuje, jsou v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství.

DK: EF/EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne CRK, MTR som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EF/EU-medlemsstaternes lovgivning.

ES: Declaración de conformidad de la CE/UE

Grundfos declara, bajo su exclusiva responsabilidad, que los productos CRK, MTR a los que hace referencia la siguiente declaración cumplen lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la CE/UE.

FR: Déclaration de conformité CE/UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits CRK, MTR, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des États membres CE/UE relatives aux normes énoncées ci-dessous.

HR: EC/EU deklaracija sukladnosti

Mi, Grundfos, izjavljujemo s punom odgovornošću da su proizvodi CRK, MTR, na koja se izjava odnosi u nastavku, u skladu s dolje navedenim direktivama Vijeća o usklađivanju zakona država članica EZ-a / EU-a.

IT: Dichiarazione di conformità CE/UE

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti CRK, MTR, ai quali si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il ravvicinamento delle legislazioni degli Stati membri CE/UE.

LV: EK/ES atbilstības deklarācija

Sabiedrība Grundfos ar pilnu atbildību paziņo, ka produkti CRK, MTR, uz kuru attiecas tālāk redzamā deklarācija, atbilst tālāk norādītajām Padomes direktīvām par EK/ES dalībvalstu normatīvo aktu tuvināšanu.

PL: Deklaracja zgodności WE/UE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze produkty CRK, MTR, których deklaracja niniejsza dotyczy, są zgodne z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich.

RO: Declarația de conformitate CE/UE

Noi Grundfos declarăm pe propria răspundere că produsele CRK, MTR, la care se referă această declarație, sunt în conformitate cu Directivele de Consiliu specificate mai jos privind armonizarea legilor statelor membre CE/UE.

RU: Декларация о соответствии нормам ЕЭС/ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия CRK, MTR, к которым относится нижеприведённая декларация, соответствуют нижеприведённым Директивам Совета Евросоюза о тождественности законов стран-членов ЕЭС/ЕС.

SI: Izjava o skladnosti ES/EU

V Grundfosu s polno odgovornostjo izjavljamo, da je izdelek CRK, MTR, na katerega se spodnja izjava nanaša, v skladu s spodnjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic ES/EU.

BG: Декларация за съответствие на ЕС/ЕО

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продуктите CRK, MTR, за които се отнася настоящата декларация, отговарят на следните директиви на Съвета за уеднавяване на правните разпоредби на държавите-членки на ЕС/ЕО.

DE: EG-/EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte CRK, MTR, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-/EU-Mitgliedsstaaten übereinstimmen.

EE: EÜ / ELi vastavusdeklaratsioon

Meie, Grundfos, kinnitame ja kanname ainuiskulist vastutust selle eest, et toode CRK, MTR, mille kohta all olev deklaratsioon käib, on kooskõlas Nõukogu Direktiividega, mis on nimetatud all pool vastavalt vastuvõetud õigusaktidele ühtlustamise kohta EÜ / EL liikmesriikides.

FI: EY/EU-vaatimustenmukaisuusvakuutus

Grundfos vakuuttaa omalla vastuullaan, että tuotteet CRK, MTR, joita tämä vakuutus koskee, ovat EY/EU:n jäsenvaltioiden lainsäädännön lähentämiseen tähtäviin Euroopan neuvoston direktiivien vaatimusten mukaisia seuraavasti.

GR: Δήλωση συμμόρφωσης EK/EE

Εμείς, η Grundfos, δηλώνουμε με αποκλειστική δική μας ευθύνη ότι τα προϊόντα CRK, MTR, στα οποία αναφέρεται η παρακάτω δήλωση, συμμορφώνονται με τις παρακάτω Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΚ/ΕΕ.

HU: EC/EU megfeleléségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) CRK, MTR termékek, amelyre az alábbi nyilatkozat vonatkozik, megfelelnek az Európai Közösség/Európai Unió tagállamainak jogi irányelveit összefoglaló tanács alábbi előírásainak.

LT: EB/ES atitikties deklaracija

Mes, Grundfos, su visa atsakomybe pareiškime, kad produktai CRK, MTR, kuriems skirta ši deklaracija, atitinka žemiau nurodytas Tarybos Direktyvas dėl EB/ES šalių narių įstatymų suderinimo.

NL: EG/EU-conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat de producten CRK, MTR, waarop de onderstaande verklaring betrekking heeft, in overeenstemming zijn met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EG-/EU-lidstaten.

PT: Declaração de conformidade CE/UE

A Grundfos declara sob sua única responsabilidade que os produtos CRK, MTR, aos quais diz respeito a declaração abaixo, estão em conformidade com as Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da CE/UE.

RS: Deklaracija o uskladenosti EC/EU

Mi, kompanija Grundfos, izjavljujemo pod punom vlastitom odgovornošću da je proizvod CRK, MTR, na koji se odnosi deklaracija ispod, u skladu sa dole prikazanim direktivama Saveta za usklađivanje zakona država članica EC/EU.

SE: EG/EU-försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkterna CRK, MTR, som omfattas av nedanstående försäkran, är i överensstämmelse med de rättsdirektiv om inbördes närmande till EG/EU-medlemsstaternas lagstiftning som listas nedan.

SK: Prehlásenie o zhode s EC/EU

My, spoločnosť Grundfos, vyhlasujeme na svoju plnú zodpovednosť, že produkty CRK, MTR na ktoré sa vyhlásenie uvedené nižšie vzťahuje, sú v súlade s ustanoveniami nižšie uvedených smerníc Rady pre zblíženie právnych predpisov členských štátov Európskeho spoločenstva/EÚ.

TR: EC/AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirim konusu olan CRK, MTR ürünlerinin, EC/AB Üye ülkelerinin direktiflerinin yakınlştırılmasıyla ilgili durumun aşağıdaki Konsey Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğun bize ait olduğunu beyan ederiz.

BS: Izjava o usklađenosti EC/EU

Mi, kompanija Grundfos, izjavljujemo pod vlastitom odgovornošću da je proizvod CRK, MTR, na koji se odnosi izjava ispod, u skladu sa niže prikazanim direktivama Vijeća o usklađivanju zakona država članica EC/EU.

UA: Декларація відповідності директивам EC/EU

Ми, компанія Grundfos, під нашу одноосібну відповідальність заявляємо, що вироби CRK, MTR, до яких відноситься нижченаведена декларація, відповідають директивам EC/EU, переліченим нижче, щодо тотожності законів країн-членів ЄС.

- Machinery Directive (2006/42/EC).
Standard used: EN 809:1998, A1:2009
- Ecodesign Directive (2009/125/EC).
Electric motors:
Commission Regulation No 640/2009.
Applies only to three-phase Grundfos motors marked IE2 or IE3.
See motor nameplate.
Standard used: EN 60034-30:2009.
- Water pumps:
Commission Regulation No 547/2012.
Applies only to water pumps marked with the minimum efficiency index MEI. See pump nameplate.

This EC/EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication number 98476088).

Additional directives and standards effective from 22 July 2019:

- RoHS Directives: 2011/65/EU and 2015/863/EU
Standard used: EN 50581:2012

Bjerringbro, 17 December 2018



Erik Andersen
Senior Manager
GRUNDFOS Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Manufacturer and person empowered to sign the EC/EU declaration of conformity

RUS

MTR

Руководство по эксплуатации

Руководство по эксплуатации на данное изделие является составным и включает в себя несколько частей:

Часть 1: настоящее «Руководство по эксплуатации».

Часть 2: электронная часть «Паспорт. Руководство по монтажу и эксплуатации» размещенная на сайте компании Грундфос. Перейдите по ссылке, указанной в конце документа.

Часть 3: информация о сроке изготовления, размещенная на фирменной табличке изделия.

Сведения о сертификации:

Насосы типа MTR сертифицированы на соответствие требованиям Технических регламентов Таможенного союза: ТР ТС 004/2011 «О безопасности низковольтного оборудования»; ТР ТС 010/2011 «О безопасности машин и оборудования»; ТР ТС 020/2011 «Электромагнитная совместимость технических средств».

KAZ

MTR

Пайдалану бойынша нұсқаулық

Атаулы өнімге арналған пайдалану бойынша нұсқаулық құрамалы болып келеді және келесі бөлімдерден тұрады:

1 бөлім: атаулы «Пайдалану бойынша нұсқаулық»

2 бөлім: Грундфос компаниясының сайтында орналасқан электронды бөлім «Төлқұжат, Құрастыру және пайдалану бойынша нұсқаулық». Құжат соңында көрсетілген сілтеме арқылы өтіңіз.

3 бөлім: өнімнің фирмалық тақташасында орналасқан шығарылған уақыты жөніндегі мәлімет

Сертификаттау туралы ақпарат:

MTR типті сорғылары «Төмен вольтты жабдықтардың қауіпсіздігі туралы» (ТР ТС 004/2011), «Машиналар және жабдықтар қауіпсіздігі туралы» (ТР ТС 010/2011) «Техникалық заттардың электрлі магниттік сәйкестілігі» (ТР ТС 020/2011) Кеден Одағының техникалық регламенттерінің талаптарына сәйкес сертификатталды.

KG

MTR

Пайдалануу боюнча колдонмо

Аталган жабдууну пайдалануу боюнча колдонмо курамдык жана өзүнө бир нече бөлүкчөнү камтыйт:

1-Бөлүк: «Пайдалануу боюнча колдонмо»

2-Бөлүк: «Паспорт. Пайдалануу жана монтаж боюнча колдонмо» электрондук бөлүгү Грундфос компаниянын сайтында жайгашкан. Документтин аягында көрсөтүлгөн шилтемеге кайрылыңыз.

3-Бөлүк: жабдуунун фирмалык тактасында жайгашкан даярдоо мөөнөтү тууралуу маалымат.

Шайкештик жөнүндө декларация

MTR түрүндөгү соргучтар Бажы Биримдиктин Техникалык регламенттин талаптарына ылайыктуу тастыкталган:

ТР ТБ 004/2011 «Төмөн вольттук жабдуунун коопсуздугу жөнүндө»; ТР ТБ 010/2011 «Жабдуу жана машиналардын коопсуздугу жөнүндө»; ТР ТБ 020/2011 «Техникалык каражаттардын электрмагниттик шайкештиги».

ARM

MTR

Հահագործման ձեռնարկ

Տվյալ սարքավորման շահագործման ձեռնարկը բաղկացած է մի քանի մասերից.

Մաս 1. սույն «Հահագործման ձեռնարկ»:

Մաս 2. էլեկտրոնային մաս. այն է՝ «Անձնագիր: Մոնտաժման և

շահագործման ձեռնարկ» տեղադրված «Գրունտֆոս». Անցեք փաստաթղթի վեբօւմ նշված հղումով.

Մաս 3. տեղեկություն արտադրման ամսաթվի վերաբերյալ՝ նշված սարքավորման պիտակի վրա:

Տեղեկություններ հավաստագրման մասին՝

MTR տիպի պոմպերը սերտիֆիկացված են համաձայն Մաքսային Միության տեխնիկական կանոնակարգի պահանջների՝ TP TC 004/2011 «Ցածրավոլտ սարքավորումների վերաբերյալ», TP TC 010/2011 «Մեքենաների և սարքավորումների անվտանգության վերաբերյալ» ; TP TC 020/2011 «Տեխնիկական միջոցների էլեկտրամագնիսական համատեղելիության վերաբերյալ»:



<http://net.grundfos.com/qr/i/99310687>

10000142896	0717
ECM: 1213063	

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznań
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romanian@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses Revised 15.01.2019

98476088 0119
ECM: 1252726

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and 'be think innovate' are registered trademarks owned by The Grundfos Group. All rights reserved.
© 2019 Grundfos Holding A/S, all rights reserved.