

Agitators 509

Electric agitator

Installation and operating instructions



Declaration of conformity

GB: EC declaration of conformity

We, Grundfos, declare under our sole responsibility that the products **Agitators 509**, to which this declaration relates, are in conformity with these Council directives on the approximation of the laws of the EC member states:

- Machinery Directive (2006/42/EC).
- Standards used: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

This EC declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions.

DK: EF-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne **Agitators 509** som denne erklæring omhandler, er i overensstemmelse med disse af Rådets direktiver om indbyrdes tilnærmelse til EF-medlemsstaternes lovgivning:

- Maskindirektivet (2006/42/EF).
- Anvendte standarder: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Denne EF-overensstemmelseserklæring er kun gyldig når den publiceres som en del af Grundfos-monterings- og driftsinstruktionen.

ES: Declaración CE de conformidad

Nosotros, Grundfos, declaramos bajo nuestra entera responsabilidad que los productos **Agitators 509**, a los cuales se refiere esta declaración, están conformes con las Directivas del Consejo en la aproximación de las leyes de los Estados Miembros del EM:

- Directiva de Maquinaria (2006/42/CE).
- Normas aplicadas: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Esta declaración CE de conformidad sólo es válida cuando se publique como parte de las instrucciones de instalación y funcionamiento de Grundfos.

IT: Dichiarazione di conformità CE

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti **Agitators 509**, ai quali si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri CE:

- Direttiva Macchine (2006/42/CE).
- Norme applicate: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Questa dichiarazione di conformità CE è valida solo quando pubblicata come parte delle istruzioni di installazione e funzionamento Grundfos.

NL: EC overeenkomstigheidsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat de producten **Agitators 509** waarop deze verklaring betrekking heeft, in overeenstemming zijn met de Richtlijnen van de Raad in zake de onderlinge aanpassing van de wetgeving van de EG Lidstaten betreffende:

- Machine Richtlijn (2006/42/EC).
- Gebruikte normen: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Deze EC overeenkomstigheidsverklaring is alleen geldig wanneer deze gepubliceerd is als onderdeel van de Grundfos installatie- en bedieningsinstructies.

RU: Декларация о соответствии ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия **Agitators 509**, к которым относится настоящая декларация, соответствуют следующим Директивам Совета Евросоюза об унификации законодательных предписаний стран-членов ЕС:

- Механические устройства (2006/42/ЕС).
- Применявшиеся стандарты: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Данная декларация о соответствии ЕС имеет силу только в случае публикации в составе инструкции по монтажу и эксплуатации на продукцию производства компании Grundfos.

CZ: ES prohlášení o shodě

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky **Agitators 509**, na něž se toto prohlášení vztahuje, jsou v souladu s ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství v oblastech:

- Směrnice pro strojní zařízení (2006/42/ES).
- Použité normy: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Toto ES prohlášení o shodě je platné pouze tehdy, pokud je zveřejněno jako součást instalačních a provozních návodů Grundfos.

DE: EG-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte **Agitators 509**, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen:

- Maschinenrichtlinie (2006/42/EG).
- Normen, die verwendet wurden: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Diese EG-Konformitätserklärung gilt nur, wenn sie in Verbindung mit der Grundfos Montage- und Betriebsanleitung veröffentlicht wird.

FR: Déclaration de conformité CE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits **Agitators 509**, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des Etats membres CE relatives aux normes énoncées ci-dessous :

- Directive Machines (2006/42/CE).
- Normes utilisées : EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Cette déclaration de conformité CE est uniquement valide lors de sa publication dans la notice d'installation et de fonctionnement Grundfos.

HU: EK megfelelőségi nyilatkozat

Mi, a Grundfos, egyedüli felelősséggel kijelentjük, hogy a **Agitators 509** termékek, amelyekre jelen nyilatkozik vonatkozik, megfelelnek az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak:

- Gépek (2006/42/EK).
- Alkalmazott szabványok: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Ez az EK megfelelőségi nyilatkozat kizárólag akkor érvényes, ha Grundfos telepítési és üzemeltetési utasítás részeként kerül kiadásra.

PL: Deklaracja zgodności WE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze wyroby **Agitators 509**, których deklaracja niniejsza dotyczy, są zgodne z następującymi wytycznymi Rady d/s ujednolicenia przepisów prawnych krajów członkowskich WE:

- Dyrektywa Maszynowa (2006/42/WE).
- Zastosowane normy: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

Deklaracja zgodności WE jest ważna tylko i wyłącznie wtedy kiedy jest opublikowana przez firmę Grundfos i umieszczona w instrukcji montażu i eksploatacji.


SI: ES izjava o skladnosti

V Grundfosu s polno odgovornostjo izjavljamo, da so naši izdelki **Agitators 509**, na katere se ta izjava nanaša, v skladu z naslednjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic ES:

- Direktiva o strojih (2006/42/ES).
- Uporabljeni normi: EN ISO 12100: 2010, EN 60034-1: 2010, EN 60204-1: 2006.

ES izjava o skladnosti velja samo kadar je izdana kot del Grundfos instalacije in navodil delovanja.

Pfinztal, 15 th July, 2013



Ulrich Stemick
Technical Director
Grundfos Water Treatment GmbH
Reetzstr. 85, D-76327 Pfinztal, Germany
Person authorised to compile technical file and
empowered to sign the EC declaration of conformity.

Original installation and operating instructions.

CONTENTS

	Page
1. General notes	3
2. Intended purpose	3
2.1 Guarantee	3
3. Safety	3
3.1 Identification of safety notices in this manual	3
3.2 Qualification and training of staff	3
3.3 Risks when safety notices are not observed	4
3.4 Safety-conscious working	4
3.5 Safety notices for the person responsible for operations / user	4
3.6 Safety notices for maintenance, inspection and installation work	4
3.7 Unauthorised modification and impermissible spare parts	4
3.8 Incorrect operation	4
4. Description of product and accessories	4
4.1 General description	4
4.2 Technical data	4
4.3 Assembled dosing tank station	4
4.4 Versions / order numbers	5
4.5 Motor data	5
4.6 Weight	5
4.7 Dimensional drawings	6
5. Transport and storage	6
5.1 Unpacking	6
5.2 Storage	6
6. Installation	7
6.1 General notes	7
6.2 Requirement of installation location for agitator, suction line and level switch	7
6.3 Installation	7
6.4 Electrical connections	8
7. Commissioning	8
8. Operation	8
9. Maintenance	8
9.1 Cleaning the agitator	8
10. Disposal	8

**Warning**

These installation and operating instructions are also available online at www.Grundfos.com.

Please read these installation and operating instructions before installation. Installation and operation must be undertaken in accordance with local regulations and the rules of technology.

1. General notes

These installation and operating instructions contain all the information needed to commission and operate the agitator 509 listed below.

If you require further information or should problems arise which are not described in detail in this manual, please contact your nearest Grundfos branch.

2. Intended purpose

Agitators 509 from Grundfos are intended for the mixing and loosening of dosing media as described in these instructions.

Caution *No other applications are approved or permitted. Grundfos is not liable for damage resulting from incorrect use.*

2.1 Guarantee

In line with our general conditions of sale and delivery, a guarantee claim can only be recognised if:

- the agitator was only used as described in the corresponding instructions.
- the agitator has been neither dismantled nor incorrectly operated.
- repairs have only been carried out by authorised and qualified personnel.
- only genuine spare parts have been used for repairs.

3. Safety

These instructions contain general information which should be observed when installing, operating and maintaining the agitator. These instructions must therefore be read with care by technicians and appropriately trained specialists/operators before installation and commissioning and must always be available at the installation site.

It is not only the general safety notices described in this "Safety" section that must be observed, but all specific safety notices that are provided in the other sections too.

3.1 Identification of safety notices in this manual


If the safety notices or other information provided in these instructions are not observed, this may result in injury and the agitator may be damaged. Safety notices and other information are identified by the following symbols:

**Warning**

Failure to observe these safety notices may result in injury.



Caution *Failure to observe these safety notices may result in malfunction and damage to property.*



Note *Information or instructions intended to simplify use and ensure safe operation.*

Information on the agitator must be clearly legible at all times.

3.2 Qualification and training of staff

The staff responsible for operation, maintenance, inspection and installation must be suitably qualified for this work. Areas of responsibility, levels of responsibility and staff supervision must be precisely defined by the person responsible for operations.

If staff do not have the necessary knowledge, they should be trained and instructed accordingly. The person responsible for operations is in charge of ensuring that the staff understand the content of these instructions.

3.3 Risks when safety notices are not observed

Non-observance of the safety notices may have dangerous consequences for staff, the environment and the pump. Non-observance of the safety notices may lead to the loss of any claims for damages.

Non-observance of the safety notices may lead to the following risks:

- failure of important functions of the agitator / system
- failure of prescribed methods for maintenance
- personal injury caused by electrical, mechanical and chemical influences
- environmental damage due to media hazardous to health escaping.

3.4 Safety-conscious working

The safety notices in these instructions should be observed in the same way as statutory health and safety at work guidelines and the operating and safety notices provided by the person responsible for operations.

3.5 Safety notices for the person responsible for operations / user

Dangerous hot or cold parts on the agitator must be protected to avoid accidental contact.

Hazards caused by electrical energy must be prevented (for more details, please refer to the relevant regulations, for example those of the VDE and the local power supply company).

3.6 Safety notices for maintenance, inspection and installation work

The person responsible for operations must ensure that all installation, maintenance and inspection work is undertaken by authorised specialists who are appropriately trained by reading these instructions.

All work on the agitator may only be carried out with the device switched off.

All safety and protection equipment must be put back into operation as soon as work is complete.

Warning

Electrical connections may only be established by trained staff.

Do not open the agitator under any circumstances.

Repairs may only be undertaken by authorised and qualified staff.



Warning

When dosing dangerous media, observe the corresponding safety precautions.

Wear protective clothing (gloves and goggles) if required.



3.7 Unauthorised modification and impermissible spare parts

Modifications or changes to the agitator are only permitted with the consent of the manufacturer. Genuine spare parts and accessories approved by the manufacturer are safe to use.

Liability cannot be assumed if spare parts which are not genuine are used.

3.8 Incorrect operation

The operating safety of the agitator supplied is only ensured if it is used in compliance with section 4.2 *Technical data* and 6. *Installation*. The specified limit values should on no account be exceeded.

4. Description of product and accessories

4.1 General description

The agitators 509 ensure that the dosing medium in the dosing tank is mixed constantly. The 1500 rpm agitators are suitable for dosing media with a low viscosity.

Grundfos agitators are available in the following versions.

- 7 sizes for Grundfos dosing tanks with contents of between 60 l and 1000 l.
- Plastic version (PP): spindle PP-coated, mixer turbine made from PP.
 - The annular turbine draws in the product to be mixed axially and discharges it radially.
 - For outgassing media, with a sealing flange on the motor flange (PP-S).
- Stainless steel version for aggressive media (SS): spindle and mixer propeller made from stainless steel 1.4571.
- Depending on agitator size, 3-phase current and optionally single-phase motor.

4.2 Technical data

- Permissible ambient temperature: 0 °C to +40 °C
- Dosing medium must be in the liquid phase.

4.3 Assembled dosing tank station

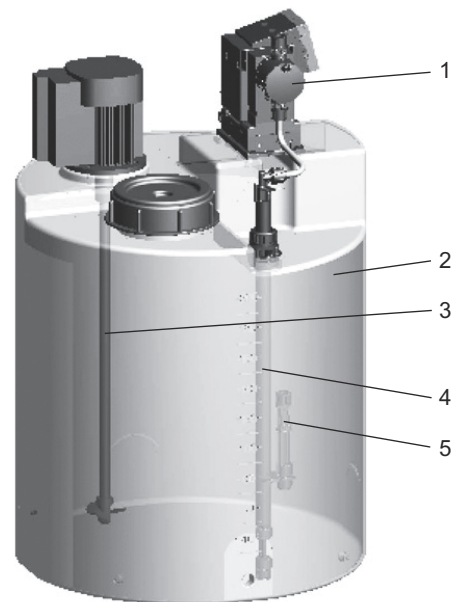


Fig. 1 Assembled dosing tank station (example)

Item	Description
1	Dosing pump
2	Dosing tank
3	Agitator
4	Suction lance
5	Level monitoring

TM04 8566 2712

4.4 Versions / order numbers

4.4.1 Material (mixer and spindle): stainless steel (1.4571) Mixer version: propeller

Agitator	Motor	Order no.
for 60-litre tank	Three-phase current, 0.09 kW	95740735
	Single-phase, 0.09 kW	95740738
for 100-litre tank	Three-phase current 0.09 kW	95740728
	Single-phase 0.09 kW	95740733
for 200-litre tank	Three-phase current 0.25 kW	95740741
for 300-litre tank	Three-phase current 0.25 kW	95740744
for 500-litre tank	Three-phase current 0.25 kW	95740747
for 1000-litre tank	Three-phase current 0.55 kW	95740750

4.4.2 Material (mixer and spindle): PP, without sealing flange Mixer version: turbine

Agitator	Motor	Order no.
for 60-litre tank	Three-phase current, 0.09 kW	95740736
	Single-phase, 0.09 kW	95740739
for 100-litre tank	Three-phase current 0.09 kW	95740731
	Single-phase 0.09 kW	95740754
for 200-litre tank	Three-phase current 0.25 kW	95740742
for 300-litre tank	Three-phase current 0.25 kW	95740745
for 500-litre tank	Three-phase current 0.25 kW	95740748
for 1000-litre tank	Three-phase current 0.55 kW	95740751

4.4.3 Material (mixer and spindle): PP, with sealing flange Mixer version: turbine

Agitator	Motor	Order no.
for 60-litre tank	Three-phase current, 0.09 kW	95740737
	Single-phase, 0.09 kW	95740740
for 100-litre tank	Three-phase current 0.09 kW	95740732
	Single-phase 0.09 kW	95740734
for 200-litre tank	Three-phase current 0.25 kW	95740743
for 300-litre tank	Three-phase current 0.25 kW	95740746
for 500-litre tank	Three-phase current 0.25 kW	95740749
for 1000-litre tank	Three-phase current 0.55 kW	95740752


4.5 Motor data

- Three-phase current motor up to 0.25 kW: 220-240/380-420 V, (50/60 Hz), 440-480 V (60 Hz), IP 65/F
- Three-phase current motor from 0.55 kW: 230/400 V, (50 Hz), 460 V (60 Hz), IP 55/F
- Single-phase motor: 230 V (50/60 Hz), IP 65/F, up to 100 l tank

4.6 Weight

Agitator	Max. weight [kg]
for 60-litre tank	9
for 100-litre tank	9.5
for 200-litre tank	11
for 300-litre tank	14
for 500-litre tank	14.5
for 1000-litre tank	17.5


4.7 Dimensional drawings

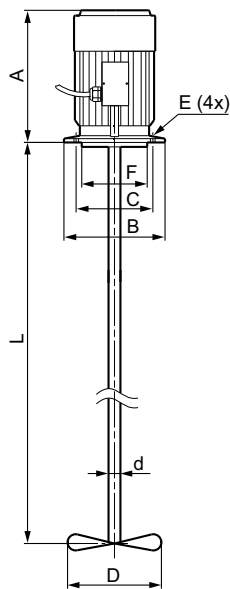

TM04 1245 5008

Fig. 2 Stainless steel version* with propeller as mixer

* Material of mixer and spindle

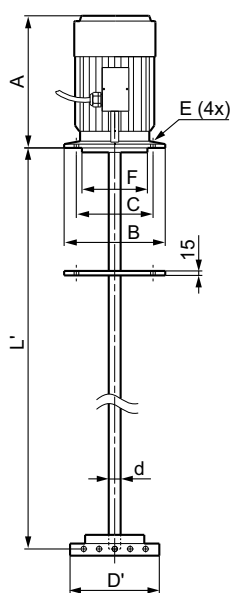

TM04 8949 2313

Fig. 3 PP version* with turbine as mixer

* Material of mixer and spindle

Agitator	L	L'	A	B	C	Ø D	Ø D'	Ø d	Ø E	F
for 60-litre tank	450	448	206	140	115	80	80	12	9	95
for 100-litre tank	699	697	206	140	115	80	80	12	9	95
for 200-litre tank	651	653	210	160	130	110	100	18	9	110
for 300-litre tank	900	903	210	160	130	110	100	18	9	110
for 500-litre tank	1051	1053	210	160	130	110	100	18	9	110
for 1000-litre tank	1150	1153	231	200	165	130	100	25	11	130

Dimensions in mm

5. Transport and storage

Do not throw or drop the agitator.
In particular protect the mixer spindle and mixer from knocks, impact and twisting.

Caution **Do not hold or transport the agitator by the spindle or mixer.**
Do not use the protective packaging as packaging for transport.

5.1 Unpacking

- Unpack the agitator as soon as you receive it and check for visible transport damage.
- Retain the packaging for future storage or return, or dispose of the packaging in accordance with local regulations.
- Fit the agitator as soon as possible after unpacking.

5.2 Storage

Keep the agitator in a dry, cool place.

6. Installation

6.1 General notes



Warning

The agitator may only be fitted by a qualified specialist.

In particular protect the mixer spindle and mixer from knocks, impact and twisting.

Caution

When introducing into the tank, the mixer spindle must not be strained by the weight of the drive.

Do not hold or transport the agitator by the spindle or mixer.

Do not position agitator centrally in the tank.

Caution

The mixer must not be positioned too close to the tank base and it must not run dry.

6.2 Requirement of installation location for agitator, suction line and level switch

- Installation surfaces (dosing tank cover or mounting frames) must be as free from vibrations as possible.
- Mixer spindle and mixer must not touch any part of the tank.
- Do not position agitator centrally in the tank.
- The mixer must not be positioned too close to the tank base and it must not run dry.

The following dimensions are recommended as approximate figures for compliance with the installation requirements:

Agitator	Variant	a	b	c
for 60-litre tank, height: 533	SS	83	200	130
	PP	85	200	130
	PP-S	100	200	130
for 100-litre tank, height: 791	SS	92	200	130
	PP	94	200	130
	PP-S	109	200	130
for 200-litre tank, height: 755	SS	104	260	170
	PP	102	260	170
	PP-S	117	260	170
for 300-litre tank, height: 1030	SS	130	260	170
	PP	133	260	170
	PP-S	142	260	170
for 500-litre tank, height: 1200	SS	149	285	195
	PP	147	285	195
	PP-S	162	285	195
for 1000-litre tank, height: 1290	SS	140	360	270
	PP	143	360	270
	PP-S	162	360	270

Dimensions in mm

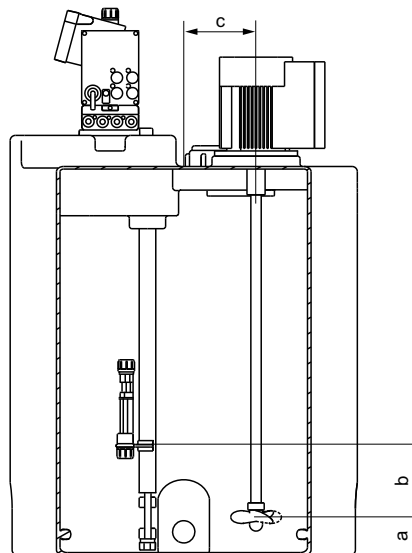


Fig. 4 Installation sketch

Item	Description
a	minimum distance between mixer and tank base
b	minimum distance of level switch above mixer
c	recommended distance between agitator and centre of tank

6.3 Installation

1. Install agitator vertically on suitable dosing tank using 4 screws.
 - When guiding into tank do not twist mixer spindle or strain it with the weight of the drive.
2. After installation check that the mixer spindle and mixer are not touching any point of the tank.
3. Before commissioning use level switch to ensure the level monitoring.
 - Minimum distance between level switch and mixer: twice the diameter of the mixer ($\varnothing D$ or $\varnothing D'$) above the mixer (see Fig. 3).

TM04 8950 2313

6.4 Electrical connections

Warning

Electrical connections may only be established by trained staff.

Before opening housing, disconnect agitator from power supply.

Observe the local safety regulations.

Protect the cable connections and plugs against corrosion and humidity.

Before connecting the mains cable check whether the supply voltage stated on the nameplate matches the local figures (permissible mains frequency deviation: $\pm 5\%$). An incorrect mains voltage may destroy the agitator.

Caution

1. Connect motor following circuit diagram in terminal box.
2. Fuse motor with a motor overload switch of the appropriate rating.
3. Check direction of rotation before commissioning (note arrow indicating direction of rotation).

7. Commissioning

When commissioning all the system's components must be ready for operation.

Follow the installation and operating instructions for the components used.

Caution

The agitator must not run if it has nothing to stir (run dry). Use level switch to generally ensure the correct level.

8. Operation

Note

Depending on the installation, the electric agitator is switched on and off using an external control unit during operations.

9. Maintenance

In the event of contamination or deposits, the agitator (mixer spindle and mixer) can be cleaned:

9.1 Cleaning the agitator

Warning

The entire system should be switched off before any maintenance work.

Disconnect supply voltage before opening housing.

Warning

The agitator may only be removed and fitted by a qualified specialist.

In particular protect the mixer spindle and mixer from knocks, impact and twisting.

When removing or introducing into the tank, the mixer spindle must not be strained by the weight of the drive.

Do not hold or transport the agitator by the spindle or mixer.

Caution

9.1.1 Removal

1. Remove electrical connections and level monitoring if necessary.
2. Loosen the agitator's 4 retaining bolts.
3. Lift agitator vertically out of the dosing tank.
 - Do not twist mixer spindle or strain with the weight of the drive.

9.1.2 Cleaning

1. Use appropriate cleaning agents to clean mixer spindle and mixer.

9.1.3 Installation

1. Install agitator vertically on dosing tank using 4 screws.
 - When guiding into tank do not twist mixer spindle or strain it with the weight of the drive.
2. After installation check that the mixer spindle and mixer are not touching any point of the tank.
3. Before commissioning re-establish electrical connections and level monitoring with level switch, check direction of rotation.

10. Disposal

This product or parts of it must be disposed of in an environmentally sound way. Use appropriate waste collection services. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro Industrial Garin
1619 - Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 411 111

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56
Тел.: +7 (375 17) 286 39 72, 286 39 73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia/Herzegovina

GRUNDFOS Sarajevo
Trg Heroja 16,
BiH-71000 Sarajevo
Phone: +387 33 713 290
Telefax: +387 33 659 079
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

Grundfos Alldos
Dosing & Disinfection
ALLDOS (Shanghai) Water Technology Co. Ltd.
West Unit, 1 Floor, No. 2 Building (T 4-2)
278 Jinhui Road, Jin Qiao Export Processing Zone
Pudong New Area
Shanghai, 201206
Phone: +86 21 5055 1012
Telefax: +86 21 5032 0596
E-mail: grundfosalldos-CN@grundfos.com

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
50/F Maxdo Centre No. 8 Xing Yi Rd.
Hongqiao Development Zone
Shanghai 200336
PRC
Phone: +86-21 6122 5222
Telefax: +86-21 6122 5333

Croatia

GRUNDFOS CROATIA d.o.o.
Cebini 37, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.grundfos.hr

Czech Republic

GRUNDFOS s.r.o.
Čapkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumpat AB
Mestarintie 11
FIN-01730 Vantaa
Phone: +358-(0)207 889 900
Telefax: +358-(0)207 889 550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malcombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS Water Treatment GmbH
Reetzstraße 85
D-76327 Pfintztal (Söllingen)
Tel.: +49 7240 61-0
Telefax: +49 7240 61-177
E-mail: gwt@grundfos.com

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
E-mail: info@grundfos.de
Service in Deutschland:
E-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 097
Phone: +91-44 4596 6800

Indonesia

PT GRUNDFOS Pompa
Jl. Rawa Sumur III, Blok III / CC-1
Kawasan Industri, Pulogadung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
Gotanda Metalion Bldg. 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo,
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос
Россия, 109544 Москва, ул. Школьная 39
Тел. (+7) 495 737 30 00, 564 88 00
Факс (+7) 495 737 75 36, 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

GRUNDFOS Predstavništvo Beograd
Dr. Milutina Ivkovića 2a/29
YU-11000 Beograd
Phone: +381 11 26 47 877 / 11 26 47 496
Telefax: +381 11 26 48 340

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovenia

GRUNDFOS d.o.o.
Štandrova 8b, SI-1231 Ljubljana-Črnuče
Phone: +386 1 568 0610
Telefax: +386 1 568 0619
E-mail: slovenia@grundfos.si

South Africa

Grundfos (PTY) Ltd.
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
(Box 333) Lunnagårdsgatan 6
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31-331 94 60

Switzerland

GRUNDFOS ALLDOS International AG
Schönmattdstraße 4
CH-4153 Reinach
Tel.: +41-61-717 5555
Telefax: +41-61-717 5500
E-mail: grundfosalldos-CH@grundfos.com

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-1-806 8111
Telefax: +41-1-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloeam Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

ТОВ ГРУНДФОС УКРАЇНА
01010 Київ, Вул. Московська 86,
Тел.: (+38 044) 390 40 50
Факс.: (+38 044) 390 40 59
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Representative Office of Grundfos Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses revised 06.05.2013

98484127 0713
ECM: 1114765

The name Grundfos, the Grundfos logo, and be think innovate are registered trademarks owned by Grundfos Holding A/S or Grundfos A/S, Denmark. All rights reserved worldwide. © Copyright Grundfos Holding A/S