

CME Booster

Safety instructions and other important information



English (GB)	
Safety instructions.	4
(AR) العربية	
تعليمات السلامة	15
Declaration of conformity 1	16

English (GB) Safety instructions

Original safety instructions

CONTENTS

	Page
1. Symbols used in this document	4
2. System sizing	4
3. Mechanical installation	4
4. Electrical connection	5
4.1 Protection against electric shock - indirect contact	5
4.1.1 Additional protection	5
4.1.2 Motor protection	5
4.1.3 Protection against mains voltage transients	5
5. Startup	5
6. Control panel	5
6.1 Setpoint setting	6
6.2 Start/stop of pump	6
6.3 Resetting of fault indications	6
7. Operating conditions	7
7.1 Ambient temperature	7
7.1.1 Ambient temperature during storage and transportation	7
7.1.2 Ambient temperature during operation	7
7.2 Installation altitude	7
8. Working on the product	7
8.1 Megging	7
9. Technical data	7
9.1 Supply voltage	7
9.2 Overload protection	7
9.3 Maximum total head	7
10. Fault finding	8
11. Further product information	9
12. Disposal	9



Warning

Prior to installation, read this document and the quick guide. Installation and operation must comply with local regulations and accepted codes of good practice.



Warning

The use of this product requires experience with and knowledge of the product. Persons with reduced physical, sensory or mental capabilities must not use this product, unless they are under supervision or have been instructed in the use of the product by a person responsible for their safety. Children must not use or play with this product.

1. Symbols used in this document



Warning

If these safety instructions are not observed, it may result in personal injury.



Warning

If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.



Warning

The surface of the product may be so hot that it may cause burns or personal injury.



If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Notes or instructions that make the job easier and ensure safe operation.

2. System sizing



Warning

The system in which the CME Booster is incorporated must be designed for the maximum pump pressure.



The default setting will cause the pump not to stop until it reaches its maximum pressure.

3. Mechanical installation



Warning

Before starting work on the product, switch off the power supply. Make sure that the power supply cannot be accidentally switched on.

4. Electrical connection

Carry out the electrical connection according to local regulations.

Check that the supply voltage and frequency correspond to the values stated on the nameplate.

Warning

Before making connections in the terminal box or breaker cabinet, make sure that the power supply has been switched off for at least 5 minutes. Make sure that the power supply cannot be accidentally switched on.

The product must be connected to an external all-pole mains switch according to local regulations.



The product must be earthed and protected against indirect contact in accordance with local regulations.

We recommend to fit the permanent installation with an earth leakage circuit breaker (ELCB) with a tripping current < 30 mA.

If the power supply cable is damaged, it must be replaced by the manufacturer, the manufacturer's service partner or a similarly qualified person.

4.1 Protection against electric shock - indirect contact

4.1.1 Additional protection

If the pump is connected to an electric installation where an earth leakage circuit breaker (ELCB) is used as additional protection, the circuit breaker must be marked with the following symbols:



ELCB

This circuit breaker is type B.

The total leakage current of all the electrical equipment in the installation must be taken into account.

During start and at asymmetrical supply systems, the leakage current can be higher than normal and may cause the ELCB to trip.

4.1.2 Motor protection

The pump requires no external motor protection. The motor incorporates thermal protection against slow overloading and blocking, TP 211 according to IEC 34-11).

4.1.3 Protection against mains voltage transients

The pump is protected against voltage transients by built-in varistors between the phases and between phases and earth.

5. Startup

Caution

Do not start the pump until it has been filled with liquid.

6. Control panel



Warning

If the control panel is cracked or perforated, replace it immediately. Contact the nearest Grundfos sales company.



Warning

The product may be so hot that only the buttons should be touched to avoid burns.

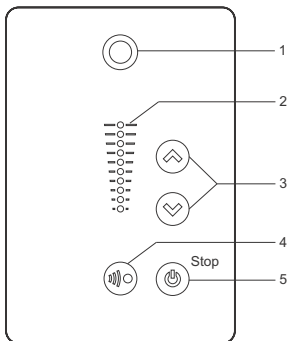


Fig. 1 Standard control panel

Pos.	Symbol	Description
1		Grundfos Eye Shows the operating status of the pump. See section 11. Further product information.
2	-	Light fields for indication of setpoint.
3		Changes the setpoint.
4		Enables IR communication with the Grundfos GO Remote and other products of the same type.*
5		Makes the pump ready for operation/starts and stops the pump. Start: If the button is pressed when the pump is stopped, the pump will only start if no other functions with higher priority have been enabled. See section 11. Further product information. Stop: If the button is pressed when the pump is running, the pump will always be stopped. When the pump is stopped via this button, the "Stop" text next to the button will illuminate.

* CME Boosters cannot communicate via radio.

TM05 4848 3512

6.1 Setpoint setting

Caution The setpoint must not be set higher than the pressure which the pump can deliver.

Set the desired setpoint of the pump by pressing or .

The light fields on the control panel will indicate the setpoint set.

H_{max} : maximum head (see pump nameplate).

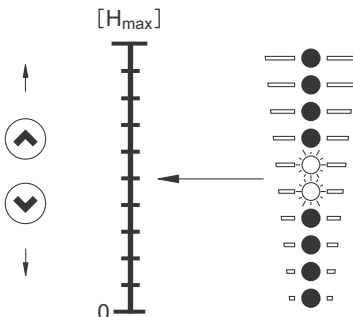


Fig. 2

6.2 Start/stop of pump

Start the pump by pressing or by continuously pressing until the desired setpoint is indicated.

Stop the pump by pressing . When the pump is stopped, the "Stop" text next to the button will illuminate. The pump can also be stopped by continuously pressing until none of the light fields are on.

If the pump has been stopped by pressing , it can only be given free to operation by pressing again.

If the pump has been stopped by pressing , it can only be restarted by pressing .

6.3 Resetting of fault indications

A fault indication can be reset in one of the following ways:

- Briefly press or on the pump. This will not change the setting of the pump. A fault indication cannot be reset by pressing or if the buttons have been locked.
- Switch off the power supply until the indicator lights are off.
- With the Grundfos GO Remote.

TM05 7678 1413

7. Operating conditions

7.1 Ambient temperature

7.1.1 Ambient temperature during storage and transportation

-30 - 60 °C.

7.1.2 Ambient temperature during operation

-20 - 50 °C.

The motor can operate with the rated power output (P2) at 50 °C, but continuous operation at higher temperatures will reduce the expected product life. If the motor is to operate at ambient temperatures between 50 and 60 °C, an oversized motor must be selected. Contact Grundfos for further information.

7.2 Installation altitude

Caution The motor must not be installed more than 2000 metres above sea level.

Installation altitude is the height above sea level of the installation site.

- Motors installed up to 1000 metres above sea level can be loaded 100 %.
- Motors installed more than 1000 metres above sea level must not be fully loaded due to the low density and consequent low cooling effect of the air. See fig. 3.

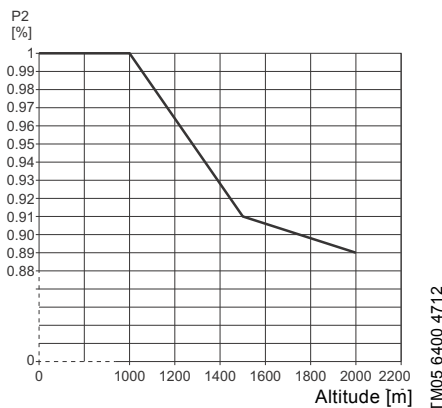


Fig. 3 Derating of motor output (P2) in relation to altitude above sea level

8. Working on the product

Warning



Before fitting add-on modules, making connections in the terminal box or breaker cabinet or starting fault finding, make sure that the power supply has been switched off for at least 5 minutes. Make sure that the power supply cannot be accidentally switched on.

8.1 Megging

Caution

Megging of an installation incorporating MGE motors is not allowed, as the built-in electronics may be damaged.

9. Technical data

9.1 Supply voltage

1 x 220-240 V - 10 %/+ 10 %, 50/60 Hz - 2 %/+ 2 %, PE.

9.2 Overload protection

The overload protection of the E-motor has the same characteristic as an ordinary motor protective circuit breaker. As an example, the E-motor can stand an overload of 110 % of rated current for 1 minute.

9.3 Maximum total head

Pump type	Maximum head [m]
CMBE 1-44	44
CMBE 1-75	75
CMBE 1-99	99
CMBE 3-30	30
CMBE 3-62	62
CMBE 3-93	93
CMBE 5-31	31
CMBE 5-62	62
CMBE 10-27	27
CMBE 10-54	54

10. Fault finding



Warning

Before starting work on the product, switch off the power supply. Make sure that the power supply cannot be accidentally switched on.

Fault	Grundfos Eye	Cause	Remedy
1. Pump does not run.	No lights on.	a) Power supply failure.	Switch on power supply. Check cables and cable connections for defects and loose connections.
		b) Fuses blown.	Check cables and cable connections for defects, and replace the fuses.
	Alarm. Motor stopped. Two opposite red indicator lights flashing simultaneously.	c) Sensor is defective.	Replace sensor.
2. Pump performance is unstable.	No lights on.	a) Pump inlet pressure too low.	Check the inlet conditions of the pump.
		b) Suction pipe is partly blocked by impurities.	Remove and clean suction pipe.
		c) Leakage in suction pipe.	Remove and repair suction pipe.
		d) Air in suction pipe or pump.	Vent suction pipe or pump. Check the inlet conditions of the pump.
3. Pump has tried to restart five times and is now stopped.	Alarm. Motor stopped. Two opposite red indicator lights flashing simultaneously.	a) Pump inlet pressure too low.	Check the inlet conditions of the pump.
		b) Suction pipe is partly blocked by impurities.	Remove and clean suction pipe.
		c) The foot or non-return valve is blocked in closed position.	Remove and clean, repair or replace valve.
		d) Leakage in suction pipe.	Remove and repair the suction pipe.
		e) Air in suction pipe or pump.	Vent suction pipe or pump. Check the inlet conditions of the pump.
4. Pump runs backwards when switched off.	No lights on.	a) Leakage in suction pipe.	Remove and repair suction pipe.
		b) Foot or non-return valve defective.	Remove and clean, repair or replace valve.
		c) Foot valve is blocked in completely or partly open position.	Remove and clean, repair or replace valve.

11. Further product information

Use either the QR code or the web address below to access the complete installation and operating instructions for the relevant product.

CRE, CRIE, CRNE, SPKE, MTRE and CME pumps



TM05 6174 4612

grundfos.com/E-pump1-manual

12. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

11. الوثائق الإضافية للمنتج

استخدم إما رمز الاستجابة السريعة (QR) أو عنوان الويب أدناه للوصول إلى التعليمات الكاملة للتركيب والتشغيل للمنتج ذي الصلة.

المضخات **CRE** و **CRIE** و **CRNE** و **SPKE** و **MTRE** و **CME**

TM05 6174 4612



grundfos.com/E-pump1-manual

12. التلخيص من المنتج

يجب التلخيص من هذا المنتج أو أجزاء منه بطريقة صحيحة
ببينا:

1. استخدم خدمة جمع النفايات العامة أو الخاصة.
2. إذا لم يكن هذا ممكناً، اتصل بأقرب شركة جرونډفوس أو ورشة خدمة.

عرضة للتغييرات.

10. تحديد العطل

تحذير

قبل بدء العمل في المضخة، افصل إمداد القدرة.
وتأكد من أن إمداد القدرة لا يمكن توصيله من
غير قصد.



العطل	Grundfos Eye	السبب	الإصلاح
1. المضخة لا تدور.	لا توجد أضواء مضاءة.	(a) خلل في إمداد القدرة.	وصل إمداد القدرة. افحص الكابلات وتوصيلات الكابلات بحثًا عن خلل وتوصيلات مفكوكة.
		(b) المصاهر محترقة.	افحص الكابلات وتوصيلات الكابلات بحثًا عن خلل، واستبدل المصاهر.
	إنذار. الموتور توقف. ضوءان مابينان متقابلان يومضان في نفس الوقت.	(c) الحساس به خلل.	استبدل الحساس.
2. أداء المضخة غير منتظم.	لا توجد أضواء مضاءة.	(a) ضغط دخول المضخة منخفض جدا.	افحص أحوال مدخل المضخة.
		(b) أنبوب المص مسدود جزئيًا بالشوائب.	فك أنبوب المص ونظفه.
		(c) تسريب في أنبوب المص.	فك أنبوب المص وأصلحه.
		(d) هواء في أنبوب المص أو المضخة.	نفس أنبوب المص أو المضخة. افحص أحوال مدخل المضخة.
3. المضخة حاولت إعادة التشغيل 5 مرات والآن توقفت.	إنذار. الموتور توقف. ضوءان مابينان متقابلان يومضان في نفس الوقت.	(a) ضغط دخول المضخة منخفض جدا.	افحص أحوال مدخل المضخة.
		(b) أنبوب المص مسدود جزئيًا بالشوائب.	فك أنبوب المص ونظفه.
		(c) الصمام السفلي أو الصمام غير المرجح مسدود في وضع مغلق.	فك ونظف أو أصلح أو استبدل الصمام.
		(d) تسريب في أنبوب المص.	فك أنبوب المص وأصلحه.
		(e) هواء في أنبوب المص أو المضخة.	نفس أنبوب المص أو المضخة. افحص أحوال مدخل المضخة.
4. المضخة تدور عكسيا عند إيقاف تشغيلها.	لا توجد أضواء مضاءة.	(a) تسريب في أنبوب المص.	فك أنبوب المص وأصلحه.
		(b) الصمام السفلي أو الصمام غير المرجح به خلل.	فك ونظف أو أصلح أو استبدل الصمام.
		(c) الصمام السفلي مسدود في وضع مفتوح كاملا أو جزئيًا.	فك ونظف أو أصلح أو استبدل الصمام.

7. أحوال التشغيل

7.1 درجة الحرارة المحيطة

7.1.1 درجة الحرارة المحيطة أثناء التخزين والنقل
30- 60 °C.

7.1.2 درجة الحرارة المحيطة أثناء التشغيل
20- 50 °C.


يمكن تشغيل الموتور بخرج القدرة المقنن (P2) عند درجة حرارة 50 مئوية، لكن التشغيل المتواصل عند درجة حرارة أعلى سيقلل العمر المتوقع للمنتج. وإذا كان الموتور سيتم تشغيله في درجة حرارة محيطية بين 50 و60 درجة مئوية، يجب اختيار موتور أكبر من المعتاد. اتصل بـ جروندفوس لمزيد من المعلومات.

7.2 ارتفاع التركيب

لا يجب تركيب الموتور على ارتفاع أكبر من 2000 متر فوق مستوى البحر.

ارتفاع التركيب هو ارتفاع موقع التركيب فوق مستوى البحر.

- المواتير المركبة فوق مستوى البحر حتى 1000 متر يمكن تحميلها 100%.
- المواتير المركبة أكثر من 1000 متر فوق مستوى البحر لا يجب تحميلها بالكامل بسبب الكثافة المنخفضة وتأثير التبريد المنخفض الناتج عن الهواء. انظر الشكل 3.

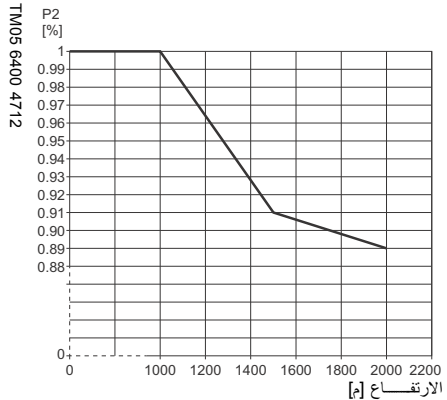

شكل 3 تقليل مقنن خرج الموتور (P2) بالنسبة لارتفاع فوق مستوى البحر

8. العمل في المنتج

تحذير

قبل تركيب وحدات إضافية، أو عمل توصيلات في صندوق التوصيل أو خزانة قواطع الدوائر الكهربائية أو البدء في تحديد العطل، تأكد من فصل إمداد القدرة لمدة 5 دقائق على الأقل. وتأكد من أن إمداد القدرة لا يمكن توصيله من غير قصد.



8.1 قياس مقاومة العزل الكهربائي

غير مسموح بقياس عزل المقاومة الكهربائية للتركيب الذي يتضمن مواتير MGE، حيث أن الإلكترونيات المدمجة يمكن أن تتلف.

تحذير

9. البيانات التقنية

9.1 فولتية الإمداد

1 × 220-240 فولت - 10% + 10%، 50/60 هرتز - 2% + 2% PE.


9.2 الحماية من الحمل الزائد

الحماية من الحمل الزائد للموتور الإلكتروني لها نفس الخاصية مثل باقي الموتور العادي. كمثال، يمكن أن يتحمل الموتور الإلكتروني حملاً زائداً 110% من التيار المقنن لمدة دقيقة واحدة.

9.3 العلو الإجمالي الأقصى

نوع المضخة	العلو الأقصى [م]
CMBE 1-44	44
CMBE 1-75	75
CMBE 1-99	99
CMBE 3-30	30
CMBE 3-62	62
CMBE 3-93	93
CMBE 5-31	31
CMBE 5-62	62
CMBE 10-27	27
CMBE 10-54	54

TM05 4848 3612

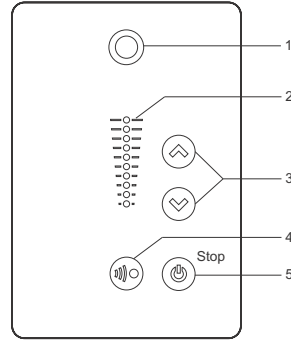

شكل 1 لوحة تحكم قياسية

الموضع	الرمز	الوصف
1		Grundfos Eye يبين حالة تشغيل المضخة. انظر القسم 11. الوثائق الإضافية للمنتج.
2	-	حقل ضوء للدلالة على نقطة التحديد.
3		يغير نقطة التحدد.
4		يمكّن اتصال الأشعة تحت الحمراء بوحدّة تحكم Grundfos GO ومنتجات أخرى من نفس النوع.* يجعل المضخة جاهزة للتشغيل/تشغيل ويوقف المضخة.
5		التشغيل: في حالة ضغط الزر عندما تكون المضخة متوقفة، فإن المضخة ستشغل إذا لم تكن هناك وظائف أخرى ذات أولوية أعلى قد تم تمكينها. انظر القسم 11. الوثائق الإضافية للمنتج. الإيقاف: في حالة ضغط الزر عندما تكون المضخة دائرة، فإن المضخة سيتم إيقافها دائماً. عند إيقاف المضخة بواسطة هذا الزر، سوف يضيء النص Stop (إيقاف) بجوار الزر.


عن طريق CME لا يمكن الاتصال بمقويات الضغط*
اللاسلكي.

6.1 ضبط نقطة التحدد

تحذير لا يجب ضبط نقطة التحدد أعلى من الضغط
الذي تستطيع المضخة تقديمه.

اضبط نقطة التحدد المطلوبة للمضخة بضغط (⊕) أو (⊖).
سوف يدل حقل الضوء في لوحة التحكم على ضبط نقطة
التحديد.

Hmax: العلو الأقصى (انظر لوحة اسم موديل المضخة).

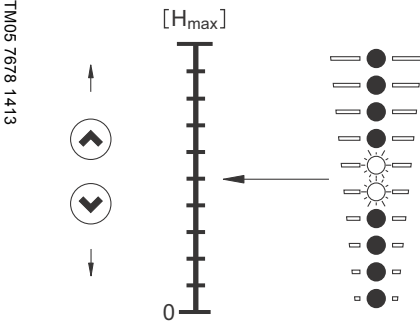

شكل 2

6.2 تشغيل/إيقاف المضخة

شغل المضخة بضغط (⊕) أو بضغط (⊖) متواصلاً حتى يتم
إظهار نقطة التحدد المطلوبة.
أوقف المضخة بضغط (⊖). عندما تتوقف المضخة، سوف
يضيء النص Stop بجوار الزر. كما يمكن إيقاف المضخة
بضغط (⊖) متواصلاً حتى تضيء حقل الضوء.
إذا تم إيقاف المضخة بضغط (⊕)، فيمكن السماح لها بحرية
التشغيل فقط بضغط (⊖) مرة أخرى.
إذا تم إيقاف المضخة بضغط (⊖)، فإنه يمكن إعادة تشغيلها
فقط بضغط (⊕).

6.3 إعادة ضبط مبيّنات الخلل

يمكن إعادة ضبط مبيّن الخلل بواحدة من الطرق التالية:

- ضغط (⊕) أو (⊖) للحظة في المضخة.
لن يغير ذلك ضبط المضخة.
لا يمكن إعادة ضبط مبيّن الخلل بضغط (⊕) أو (⊖) إذا
كانت الأزرار تم قفلها.
- أفضل إمداد القدرة حتى تنطفئ أضواء المبيّنات.
- بواسطة وحدة تحكم Grundfos GO.

TM05 7678 1413

4. التوصيلات الكهربائية

نفذ التوصيل الكهربائي وفقا للوائح المحلية.
تحقق من أن فلتية وتردد مصدر الطاقة يتوافقان مع القيم
المذكورة بلوحة اسم الموديل.

تحذير

قبل عمل التوصيلات في صندوق التوصيل أو
خزانة قواطع الدوائر الكهربائية، تأكد من فصل
إمداد القدرة لمدة 5 دقائق على الأقل. وتأكد من أن
إمداد القدرة لا يمكن توصيله من غير قصد.

يجب توصيل المضخة بمفتاح مأخذ تيار
رئيسي جميع الأقطاب خارجي طبقا للقوانين
المحلية.

يجب تآريض المنتج وحمايته من التلامس غير
المباشر طبقا للقوانين المحلية.

نحن نصنع بترويد التركيب الدائم بقاطع
دائرة للتسرب الأرضي (ELCB) له تيار إعتاق
أقل من 30 مللي أمبير.


في حالة تلف كابل إمداد القدرة، يجب استبداله
بواسطة جهة التصنيع، أو شريك خدمة جهة
التصنيع، أو شخص مؤهل على نحو مماثل.

4.1 الحماية من الصدمة الكهربائية - التلامس غير

المباشر

4.1.1 الحماية الإضافية

إذا كانت المضخة موصلة بتركيب كهربائي يستخدم فيه
قاطع دائرة تسرب أرضي (ELCB) كحماية إضافية، فيجب
أن يحمل قاطع الدائرة الرموز الآتية:



قاطع الدائرة هذا يكون من النوع B.

يجب الأخذ في الاعتبار إجمالي تيار التسرب لجميع
المعدات الكهربائية في التركيب.

أثناء التشغيل وفي أنظمة الإمداد اللا تماثلي، يمكن أن
يكون تيار التسرب أعلى من العادي وربما يتسبب في
إعتاق قاطع دائرة التسرب الأرضي.

4.1.2 حماية الموتور

لا تتطلب المضخة حماية موتور خارجية. ويوجد بالموتور
حماية حرارية من التحميل الزائد البطئ والانسداد، TP 211
طبقا للمعيار IEC 34-11.

4.1.3 الحماية من التغيرات المؤقتة في فولتية مصدر

التغذية الرئيسي

تكون المضخة محمية من التغيرات المؤقتة في الفولتية
بواسطة مقاومات متغيرة (فارستور) مندمجة بين الأطوار
وبين الأطوار والأرضي.

5. بدء التشغيل

تحذير

لا تشغل المضخة لحين امتلائها بالسائل.

6. لوحة التحكم

تحذير

إذا تشققت لوحة التحكم أو انقلب، استبدلها
فورا. اتصل بأقرب شركة لمبيعات
جروندفوس.

تحذير

قد يكون المنتج ساخنا جدا للحد الذي لا يجب
فيه لمس أي شيء إلا الأزرار فقط لتجنب
الحروق.

1. الرموز المستخدمة في هذه الوثيقة

المحتويات

صفحة

15	1. الرموز المستخدمة في هذه الوثيقة
15	2. تحديد حجم النظام
15	3. التركيب الميكانيكي
14	4. التوصيلات الكهربائية
14	4.1 الحماية من الصدمة الكهربائية - التلامس غير المباشر
14	4.1.1 الحماية الإضافية
14	4.1.2 حماية الموتور
14	4.1.3 الحماية من التغيرات المؤقتة في فولتية مصدر التغذية الرئيسي
14	5. بدء التشغيل
14	6. لوحة التحكم
13	6.1 ضبط نقطة التحديد
13	6.2 تشغيل/إيقاف المضخة
13	6.3 إعادة ضبط مبيّنات الخلل
12	7. أحوال التشغيل
12	7.1 درجة الحرارة المحيطة
12	7.1.1 درجة الحرارة المحيطة أثناء التخزين والنقل
12	7.1.2 درجة الحرارة المحيطة أثناء التشغيل
12	7.2 ارتفاع التركيب
12	8. العمل في المنتج
12	8.1 قياس مقاومة العزل الكهربائي
12	9. البيانات التقنية
12	9.1 فولتية الإمداد
12	9.2 الحماية من الحمل الزائد
12	9.3 العلو الإجمالي الأقصى
11	10. تحديد العطل
10	11. الوثائق الإضافية للمنتج
10	12. التخلص من المنتج

تحذير
عدم التقيد بتعليمات السلامة يمكن أن يؤدي إلى إصابة شخصية.



تحذير
عدم التقيد بتلك التعليمات يمكن أن يؤدي إلى التعرض لصدمة كهربائية وبالتالي خطر الإصابة الشخصية أو الموت.



تحذير
سطح المنتج يمكن أن يكون ساخناً جداً بحيث أنه يمكن أن يسبب حروقاً أو إصابة شخصية.



تحذير
عدم التقيد بتعليمات السلامة يمكن أن يؤدي إلى عطل المعدة أو تلفها



ملحوظة
الملاحظات أو التعليمات التي تجعل العمل أسهل، وتضمن التشغيل الآمن.



2. تحديد حجم النظام

تحذير
يجب تصميم النظام الذي سيتم دمجه فيه مقوي الضغط CME من أجل الضغط الأقصى للمضخة.



تحذير
سيُسبب الضغط الافتراضي في عدم توقف المضخة حتى تبلغ أقصى ضغط لها.



3. التركيب الميكانيكي

تحذير
قبل بدء العمل في المضخة، افصل إمداد القدرة. وتأكد من أن إمداد القدرة لا يمكن توصيله من غير قصد.



تحذير
قبل التركيب، اقرأ هذه الوثيقة والدليل السريع.
يجب أن يراعى التركيب والتشغيل اللوائح المحلية والقوانين المقبولة للممارسة الجيدة.



تحذير
يتطلب استخدام هذا المنتج خبرة ومعرفة بالمنتج. يجب عدم استخدام الأشخاص الذين يعانون نقصاً في قدراتهم الجسدية أو الحسية أو العقلية لهذا المنتج، إلا إذا كانوا تحت إشراف أو تم تعليمهم كيفية استخدام المنتج بواسطة شخص مسؤول عن سلامتهم. لا يجب على الأطفال استعمال هذا المنتج أو العبث به.



Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the product CME Booster, to which the declaration below relates, is in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

AR: إقرار مطابقة EU

CME نقرر نحن، جرونډفوس، بمقتضى مسؤوليتنا الفردية بأن المنتج الذي يختص به الإقرار أدناه، يكون مطابقاً لتوجيهات المجلس المذكورة أدناه بشأن الترتيب بين قوانين الدول أعضاء المجموعة الأوروبية/الاتحاد الأوروبي (EU).

- Machinery Directive (2006/42/EC).
Standard used: EN 809:1998, A1:2009.
- Low Voltage Directive (2014/35/EU).
Standard used: EN 61800-5-1:2007.
- EMC Directive (2014/30/EU).
Standard used: EN61800-3:2004 + A1:2012..

This EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication number 98959461 0616).

Bjerringbro, May 18 - 2016



Svend Aage Kaae
Director
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and
empowered to sign the EU declaration of conformity.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosna and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS s.r.o.
Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500
Telefax: +358-(0) 207 889 550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
Gotanda Metalion Bldg., 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznań
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
109544, г. Москва, ул. Школьная,
39-41, стр. 1
Тел. (+7) 495 564-88-00 (495)
737-30-00
Факс (+7) 495 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen
Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuenteclilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Representative Office of Grundfos Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses Revised 25.01.2016

98959461 0616
ECM: 1187560

The name Grundfos, the Grundfos logo, and **be think innovate** are registered trademarks owned by Grundfos Holding A/S or Grundfos A/S, Denmark. All rights reserved worldwide.

© Copyright Grundfos Holding A/S