

AQtap Solar Package

Cabinet / Kit

Installation and operating instructions

English (GB) Installation and operating instructions

Original installation and operating instructions

These installation and operating instructions describe Grundfos AQtap solar package, both package and kit.

Sections 1-4 give the information necessary to be able to unpack, install and start up the product in a safe way.

Sections 5-9 give important information about the product, as well as information on servicing, fault finding and disposal of the product.

CONTENTS

	Page
1. General information	2
1.1 Target groups	2
1.2 Symbols used in this document	2
1.3 Safety-related symbols on the product	2
2. Receiving the product	3
2.1 Transporting the product	3
2.2 Unpacking	3
2.3 Scope of delivery	3
3. Installing the product	3
3.1 Installation sequence	3
3.2 Location	3
3.3 Tools and material	4
3.4 Mechanical installation of the AQtap solar package cabinet	4
3.5 Electrical connection	4
3.6 Complete installation	5
4. Product introduction	5
4.1 Product description	5
4.2 Applications	5
4.3 Identification	6
5. Servicing the product	6
5.1 Maintaining the product	6
5.2 Replacing the battery	7
5.3 Replacing the MPPT solar charger	7
6. Taking the product out of operation	7
6.1 Taking the product out of operation	7
6.2 Preparing the product for disposal	7
7. Technical data	8
7.1 Dimensions	8
7.2 AQtap solar package part numbers and spare parts	8
8. Disposing of the product	8

Caution

Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

Note

These installation and operating instructions are also available on www.grundfos.com.

1. General information

Note

These installation and operating instructions apply to both AQtap solar package cabinet and AQtap solar package kit.

1.1 Target groups

These installation and operating instructions contain general instructions that must be observed during installation, startup, operation and servicing of the product. The responsible service staff must read these installation and operating instructions prior to any work at the product. These installation and operating instructions must be available at the installation location at all times.

1.1.1 Qualification and training of staff

The staff responsible for the installation, startup and servicing must be trained for these tasks. Areas of responsibility, levels of authority and the supervision of the staff must be precisely defined by the operating company.

1.1.2 Obligations of the operating company

- Observe the local safety regulations.
- Instruct the operating staff.
- Provide the stipulated safety equipment and personal protective equipment.
- Arrange regular maintenance.

1.1.3 Obligations of the service personnel

- Read this manual thoroughly before putting the product into operation.
- Observe the recognised health and safety regulations as well as the accident prevention regulations.

1.2 Symbols used in this document



WARNING

If these safety instructions are not observed, it may result in personal injury.



WARNING

If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.

Caution

If these safety instructions are not observed, it may result in malfunction or damage to the equipment.

Note

Notes or instructions that make the job easier and ensure safe operation.

1.3 Safety-related symbols on the product

Symbol	Description
	This is an electrical safety class II product.
	This product complies with directive 2006/66/EU and contains batteries which should not be disposed of with other household waste, but must be collected separately.

All signs and symbols on the product must be observed and maintained legible.

2. Receiving the product

2.1 Transporting the product

Do not throw or drop the AQtap solar package.

Caution Grundfos accepts no liability for damage caused by incorrect transportation or missing or unsuitable packaging of the product!

- The AQtap solar package is delivered in a cardboard box with protective inserts. Keep the AQtap solar package in the packaging during transport and intermediate storage.
- Retain the packaging for future storage or return, or dispose of the packaging in accordance with local regulations.
- Return the AQtap solar package in its original packaging or equivalent.

2.1.1 Intermediate storage

- Keep the AQtap solar package in its original packaging.
- Store indoors, protected from direct rain and sun.
- Permissible storage temperature: -10 °C to +50 °C.
- Permissible air humidity: max. relative humidity: 95 % (non-condensing).

2.2 Unpacking

Before installation, the following checks should be made:

1. Check that the AQtap solar package has not been damaged during transportation.
2. Check that the specifications of the AQtap solar package correspond to the order. See nameplate.
3. Check the scope of delivery.

2.3 Scope of delivery

2.3.1 AQtap solar package cabinet

The AQtap solar package cabinet scope of delivery comprises the following:

- Cabinet, IP55, 400 x 500 x 210 mm, including:
 - Battery 12 V, 55 Ah
 - MPPT solar charger for input voltage up to 100 V
 - 0.5 m of cable to connect the MPPT solar charger to the battery
 - 5 m of cable to connect the battery to the AQtap
- 1 standard cabinet key
- AQtap solar package installation and operating instructions

2.3.2 AQtap solar package kit

The AQtap solar package kit scope of delivery comprises the following:

- Battery 12 V, 55 Ah
- MPPT solar MPPT solar charger for input voltage up to 100 V
- 0.5 m of cable to connect the MPPT solar charger to the battery
- 5 m of cable to connect the battery to the AQtap
- AQtap solar package installation and operating instructions

3. Installing the product

DANGER

ELECTRIC SHOCK

Wall mounting must be made with the Grundfos wall mounting kit.

Switch off or disconnect the solar panels, before making any connections.

The AQtap solar package cabinet must only be opened by authorised and qualified staff.

All electrical connections must be carried out by a qualified electrician in accordance with local regulations.

Before obtaining access to terminals, all supply circuits must be disconnected.

Stripped parts of wires must not protrude from terminals.



3.1 Installation sequence

The order of installation and electrical connections must be observed:

1. [Mechanical installation of the AQtap solar package cabinet](#)
2. [Electrical connection: Connecting the MPPT solar charger to the battery](#) and [Connecting the battery to the AQtap](#)
3. [Electrical connection: Connecting the solar panel to the MPPT solar charger](#)

3.2 Location

WARNING

EXPLOSION

Gasses escaping from the battery can cause explosions.

Keep the area around the battery well ventilated, the drain hole at the bottom of the cabinet must not be blocked.

The AQtap solar package cabinet is not designed for built-in appliances.

Caution

The AQtap solar package kit must be built into a IPx4 cabinet with a drain hole.

The AQtap solar package cabinet must be mounted vertically.

Caution

The AQtap solar package kit parts must be mounted vertically.

If the AQtap solar package cabinet is installed outdoors, a canopy must be installed to protect the AQtap solar package against direct sunlight, overheating and rain.

Caution

- The AQtap solar package must be mounted vertically on a straight, flat wall. The wall must be able to hold the weight of the AQtap solar package.
- Ensure sufficient space for cabling.

Observe section [Ambient condition requirements](#).

3.3 Tools and material

The following tools and material are needed for installation of the AQtap solar package cabinet, they must be provided by the customer. Tools and material for installation of the AQtap solar package kit must be adjusted to custom side conditions.

3.3.1 Tools

- drilling device ($d = \varnothing 10 \text{ mm}$, $l = 50 \text{ mm}$)
- yard stick
- screwdriver for slotted screws
- adjustable spanner
- flat pliers
- cutter
- pencil

3.3.2 Material

For the cable requirements see section [3.5 Electrical connection](#)

- wall mounting kit
(4 screws, 4 dowels, 4 tightening washers, 4 nuts)
- cables for the solar power input
- all-pole disconnection switch

3.4 Mechanical installation of the AQtap solar package cabinet



DANGER

ELECTRIC SHOCK

The AQtap solar package cabinet must only be opened by authorised and qualified staff.

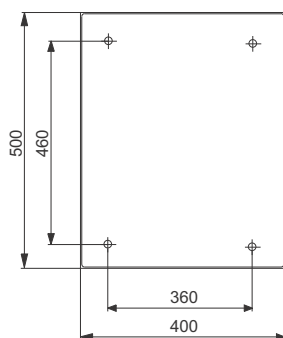


Fig. 1 Drilling scheme

1. Choose an appropriate mounting place, see section [3.2 Location](#).
2. Open the AQtap solar package cabinet.
– unlock it with the standard cabinet key.
3. Mark the 4 drilling points at the mounting place according to the drilling scheme.
4. Drill the 4 holes $d = \varnothing 10 \text{ mm}$, 50 mm deep.
5. Insert the 4 dowels in the drilled holes.
6. Screw the 4 screws into the dowels with an adjustable spanner. The thread rod must point outwards, the wood screw part must be completely screwed in.
7. Place the cabinet on the 4 screws, flat to the wall.
8. Place the 4 washers on the screws.
9. Screw on the 4 nuts with a torque wrench M8, torque 5 Nm.

3.5 Electrical connection

3.5.1 Safety instructions

DANGER

ELECTRIC SHOCK

Switch off or disconnect the solar panels, before making any connections.

The AQtap solar package cabinet must only be opened by authorised and qualified staff.

All electrical connections must be carried out by a qualified electrician in accordance with local regulations.

Before obtaining access to terminals, all supply circuits must be disconnected.

Stripped parts of wires must not protrude from terminals.



Caution

We recommend to use armoured cables or run cables in conduits on the outside of the AQtap solar package.

Caution

All used and unused cable entries of the cabinet must be sealed after connection to prevent animals from entering the AQtap solar package cabinet.

3.5.2 Connecting the MPPT solar charger to the battery

Caution

Do not short-circuit the two poles of the batteries.

Note

The AQtap solar package kit is delivered with unconnected parts. The AQtap solar package cabinet is delivered with connected battery cables.

1. Connect the two red wires to the plus (+) pole of the battery.
2. Connect the two black wires to the minus (-) pole of the battery.
3. Connect the wires to the battery plug according to the imprint on the MPPT solar charger and tighten the screws.

3.5.3 Connecting the battery to the AQtap

Caution

The battery is supplied charged. As soon as it is connected there is power on the AQtap.

Caution

Do not short-circuit the two poles of the batteries.

Refer to the installation and operating instruction of the AQtap.

3.5.4 Connecting the solar panel to the MPPT solar charger

Ensure correct polarity!

Caution

Check the polarity with a multimeter before connecting the cables from the solar panels.

Check that the solar panel voltage corresponds to the value stated in section [7. Technical data](#) and on the nameplate.

1. Switch off or disconnect the solar panels.
2. Pull the solar panel cable through one of the bigger (M20) cable glands of the AQtap solar package cabinet.
3. Connect the two wires of the solar panel cable to the solar panel plug according to the imprint on the MPPT solar charger and tighten the screws.
4. Tighten the cable gland at the cabinet.
5. Switch on or connect the solar panels.

TM06 4302 1915

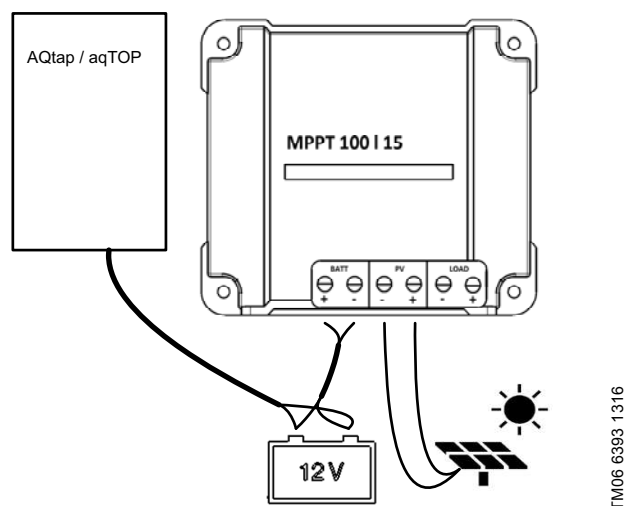


Fig. 2 Electrical connection of AQtap solar package

3.5.5 Cable dimensions and max. length

Note

For extending wires and coupling of multiple solar panels use the standard Grundfos parts, see section [7.2 AQtap solar package part numbers and spare parts](#).

Observe the requirements for the cable cross section depending on the selected cable length, as shown in the following tables:

Cable from solar panel to MPPT solar charger

Cable length	min. cable cross section	
[m]	AWG	[mm ²]
< 12	16	1.5
< 20	14	2.5
< 30	12	4
< 50	10	6

Cable from solar package battery to AQtap

Cable length	min. cable cross section	
[m]	AWG	[mm ²]
< 2	16	1.5
< 3.5	14	2.5
< 5	12	4
< 8	10	6

3.6 Complete installation

1. Place the AQtap solar package installation and operating instructions in the AQtap solar package cabinet.
2. Close the AQtap solar package cabinet and lock it with the standard cabinet key.
3. Switch on or connect the solar panels.

4. Product introduction

4.1 Product description

The AQtap solar package is developed to enhance the solar powering of AQtap water dispensers, for installations where the internal battery and charging with solar power are insufficient due to the solar radiation and degree of AQtap utilization.

When GF 270 solar panels are used for the AQtap water supply system, installation must be made with an AQtap solar package.

The AQtap solar packages include a MPPT solar charger and a battery with higher capacity.

The AQtap solar package cabinet provides the components mounted in a cabinet ready for connection to the AQtap.

The AQtap solar package kit provides the components as individual parts for flexible installation.

4.2 Applications

4.2.1 Intended use

Providing solar power supply for AQtap water dispensers.

The operational safety of the AQtap solar package is only ensured if it is used in accordance with section [7. Technical data](#).

4.2.2 Improper use

- The AQtap solar package must not be used for charging an external battery.
- The AQtap solar package must not be used for charging other types of battery than the Grundfos part.
- The AQtap solar package must not be exposed to direct sunlight or to rain.
- The AQtap solar package must not be used if the ventilation of the cabinet is restricted, e. g. if the drain hole at the bottom of the cabinet is blocked, so gasses from the battery can explode.
- The AQtap solar package must not be used if it is damaged, after improper repair or after unauthorized modification.

WARNING

EXPLOSION



Gasses escaping from the battery can cause explosions.

Keep the area around the battery well ventilated, the drain hole at the bottom of the cabinet must not be blocked.

Other applications or the operation of the AQtap solar package in ambient and operating conditions, which are not approved, are considered improper and are not permitted. Grundfos accepts no liability for any personal injury or damage resulting from incorrect use.

Caution

4.3 Identification

4.3.1 Nameplate

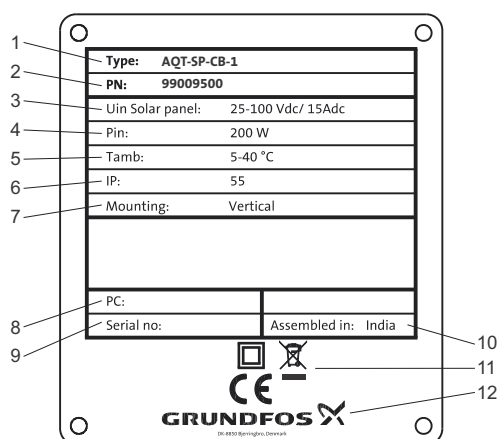


Fig. 3 Nameplate

Pos.	Description
1	Type (example), see section 4.3.2 Type key
2	Product number
3	Supply voltage, solar panel
4	Max. power consumption
5	Ambient temperature
6	Protection class of cabinet
7	Mounting orientation
8	Production date code (yyww)
9	Serial number
10	State of origin (assembly)
11	Marks of approval
12	Manufacturer

4.3.2 Type key

Code	Example:	AQT	-SP	-CB	-1
Product name					
AQT	AQT				
Type					
AA	AQTap				
AO	aqTOP				
SP	Solar package				
Device					
ST	Standard				
CB	Cabinet				
KT	Kit				
Version					
1	Version 1				

5. Servicing the product

WARNING

EXPLOSION



Gasses escaping from the battery can cause explosions.

Keep the area around the battery well ventilated, the drain hole at the bottom of the cabinet must not be blocked.

DANGER

ELECTRIC SHOCK



If the electrical mains connection is damaged, it must be replaced by Grundfos, a Grundfos service partner or a similarly qualified specialist, in order to avoid a hazard.

All servicing work must be carried out by authorised and qualified staff.

Switch off or disconnect the solar panels, before carrying out servicing work or opening the cabinet. Safety installations, which have been disabled during servicing, must be enabled again immediately after servicing.

5.1 Maintaining the product

5.1.1 Maintenance schedule

- Maintain the AQTap solar package according to these instructions:
 - At least every 6 months.
- Replace the battery if it is worn out.
- Replace the MPPT solar charger if it is defective.

5.1.2 Check the ventilation of the battery area

- For AQTap solar package cabinet: Make sure that the drain hole at the bottom of the cabinet is not blocked.
- For AQTap solar package kit: Make sure that the ventilation of the battery area is in good condition.

5.1.3 Check all parts of the AQTap solar package

- Make a general and visual inspection of the AQTap solar package's good condition.
- Make sure that all wires and connections are in a good condition and the poles are not corroded.
- Verify that the cable glands are closed tightly.
- Verify that the fastening of the AQTap solar package is not loose.
- Verify the good condition of the cables from the solar panels.

5.2 Replacing the battery

1. Switch off or disconnect the solar panels.
2. Open the AQtap solar package cabinet.
3. Disconnect the two black wires from the minus (-) pole of the battery.
4. Disconnect the two red wires from the plus (+) pole of the battery.
5. Take out the old battery and dispose of it according to local regulations, see section [8. Disposing of the product](#).
6. Place the new battery with the minus (-) pole on the right side.
7. Connect the two red wires to the plus (+) pole of the battery.
8. Connect the two black wires to the minus (-) pole of the battery.
9. Close the cabinet and lock it with the keys.
10. Switch on or connect the solar panels.

Caution

The battery in the kit is supplied charged. As soon as it is connected there is power on the AQtap.

Caution

Do not short-circuit the two poles of the batteries.

Note

The waste battery must be disposed of according to local regulations!

5.3 Replacing the MPPT solar charger

Ensure correct polarity!

Caution

Check the polarity with a multimeter before connecting the cables from the solar panels.

1. Switch off or disconnect the solar panels.
2. Open the AQtap solar package cabinet.
3. Disconnect the two black wires from the minus (-) pole of the battery.
4. Disconnect the two red wires from the plus (+) pole of the battery.
5. Disconnect the two wires of the solar panel cable from the solar panel plug at the MPPT solar charger.
6. Take out the old MPPT solar charger and dispose of it according to local regulations, see section [8. Disposing of the product](#).
7. Place the new MPPT solar charger.
8. Connect the two wires of the solar panel cable to the solar panel plug according to the imprint on the MPPT solar charger and tighten the screws.
9. Connect the two red wires to the plus (+) pole of the battery.
10. Connect the two black wires to the minus (-) pole of the battery.
11. Close the cabinet and lock it with the keys.
12. Switch on or connect the solar panels.

6. Taking the product out of operation

6.1 Taking the product out of operation

1. Switch off or disconnect the solar panels.
2. Open the AQtap solar package cabinet.
3. Disconnect the two black wires from the minus (-) pole of the battery. Place it securely so it cannot touch the battery poles during transportation.
4. Unscrew the fastening screws and take the AQtap solar package cabinet off the wall.
5. For storage and transportation see section [2.1 Transporting the product](#).

6.2 Preparing the product for disposal

Note

The waste batteries must be disposed of according to local regulations!

1. Switch off or disconnect the solar panels.
2. Open the AQtap solar package cabinet.
3. Disconnect the battery at both poles.
4. Take out the old battery and dispose of it according to local regulations, see section [8. Disposing of the product](#).
5. Unscrew the fastening screws and take the AQtap solar package cabinet off the wall.
6. Dispose of the AQtap solar package, see section [8. Disposing of the product](#).

7. Technical data

Caution The values stated in the technical data must be adhered to.

AQtap solar package cabinet

Weight	31 kg
Dimensions	400 x 500 x 210 mm
Protection class	IP55

AQtap solar package kit

Weight of battery	17 kg
Weight of MPPT solar charger	0.5 kg
Weight of cables	0.5 kg
Dimensions of battery	260 x 210 x 170 mm

Battery

The battery complies with the battery directive (2006/66/EC). The rechargeable nonspillable AGM lead-acid battery included contains lead, it does not contain mercury and cadmium.

Voltage supply	battery 12 V, 55 Ah
Charging current	max. 16.5 A
Orientation of the battery with regards to polarity	left pole: plus (+) pole, red cable right pole: minus (-) pole, black cable
AGM battery	filled with absorbing glass fibre mats, so no liquid can leak out

Ambient condition requirements

Ambient temperature	5-40 °C
Max. relative humidity	95 % (non-condensing)
Mounting	designed for wall-mounting, protected from direct sunlight and rain

Power supply requirements

Power supply	solar panel DC voltage: 25-100 V / 15 A
Recommended capacity	Min. 200 W

7.1 Dimensions

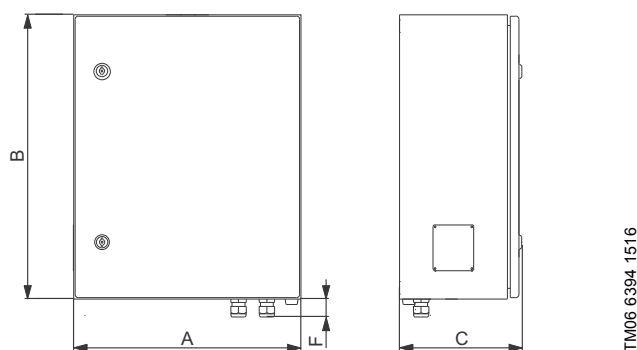


Fig. 4 Dimensional sketch of AQtap solar package cabinet

A [mm]	B [mm]	C [mm]	F [mm]
400	500	210	31.6

7.2 AQtap solar package part numbers and spare parts

Product	Product No.
AQtap solar package cabinet	99009500
AQtap solar package kit	99009524
Wall mounting kit, comprising 4 sets of: dowel S10, for hole d 10 x 50 mm, tightening washer 14 x 8.7 mm, nut M8 x 40 mm, FZB, countersunk screw M8 x 100 mm	99334221
Battery (12 V, 55 Ah)	99022382
MPPT solar charger	99036493
Wire kit - solar panel to dispenser	98257868
Wire kit - array to array	98257892
Wire kit - array to terminal	98390224
Wire kit - array to controller	98257868
Circuit breaker	96959028
Power on/off switch	96959028

8. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way:

The battery must be removed before the product is disposed of, see section [6.1 Taking the product out of operation](#). The waste battery should be disposed of through the national collective schemes. If in doubt, contact your local Grundfos company.

Use appropriate waste collection services. If this is not possible, contact the nearest Grundfos company or service workshop.

This product complies with directive 2006/66/EU and contains batteries which should not be disposed of with other household waste, but must be collected separately.

Declaration of conformity

GB: EC/EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the product AQtap/aqTOP Solar Package, to which this declaration relates, is in conformity with these Council directives on the approximation of the laws of the EC/EU member states:

FR: Déclaration de conformité CE/UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que le produit AQtap/aqTOP Solar Package, auquel se réfère cette déclaration, est conforme aux Directives du Conseil concernant le rapprochement des législations des États membres CE/UE relatives aux normes énoncées ci-dessous.

- Low Voltage Directive (2014/35/EU).
Standards used:
EN 60950-23:2006/AC:2008
EN 62109-1:2010
- EMC Directive (2014/30/EU).
Standards used:
EN 61000-6-3:2007/A1:2011/AC:2012
EN 61000-6-2:2005/AC:2005
EN 61000-6-1:2007
EN 55014-1:2006/A2:2011
EN 55014-2:1997/A2:2008
- Applies from 22.07.2019
RoHS Directives (2011/65/EU and 2015/863/EU).
Standard used:
EN 50581:2012

This EC/EU declaration of conformity is only valid when published as part of the Grundfos instructions (publication number 99077845).

Bjerringbro, 20th June 2018



Poul Madsen
Group Vice President
Emerging Water Technologies
GRUNDFOS Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and
empowered to sign the EC/EU declaration of conformity.

Denmark

GRUNDFOS LIFELINK A/S
Poul Due Jensens Vej 7
DK-8850 Bjerringbro
Tlf.: +45-87 50 14 00
www.grundfos.com

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Finland

OY GRUNDFOS Pumput AB
Mestarintie 11
FIN-01730 Vantaa
Phone: +358-(0)207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przewmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-8800 (495) 737-3000
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Repre-
sentative Office of Grundfos Kazakhstan in
Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses Revised 09.08.2017

99077845 0718
ECM: 1237350

The name Grundfos, the Grundfos logo, and be think innovate are registered trademarks owned by Grundfos Holding A/S or Grundfos A/S, Denmark. All rights reserved worldwide. © Copyright Grundfos Holding A/S