

DTS

Dosing tank station

Installation and operating instructions



Further languages

<http://net.grundfos.com/qr/i/98446198>

be
think
innovate

GRUNDFOS 

Original installation and operating instructions

CONTENTS

	Page
1. Safety instructions	2
1.1 Purpose of this manual	2
1.2 Identification of notices	2
1.3 Qualification and training of personnel	2
1.4 Safety notices for the operating company/operator	2
1.5 Safety notices for maintenance, inspection and installation work	3
2. Product introduction	3
2.1 Intended use	3
2.2 Identification	3
3. Technical data	5
3.1 Operating conditions	5
3.2 Electrical data	5
3.3 Hydraulic data	5
3.4 Dimensions	5
3.5 Materials in contact with media	8
4. Structure and function	9
4.1 Product overview	9
5. Commissioning	10
5.1 Transport and storage	10
5.2 Installation	10
5.3 Tightness check	11
5.4 Electrical connection	11
6. Operation	11
7. Maintenance	11
7.1 Cleaning	11
7.2 Service	11
8. Accessories, spare parts	12
9. Disposal	12
10. Appendix	12
10.1 Documentation enclosed	12
10.2 Other documentation	12



Warning
Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.



Warning
Read the installation and operating instructions of the components used.

1. Safety instructions**1.1 Purpose of this manual**

These installation and operating instructions, along with the relevant component instructions, contain all the information needed to commission and operate the DTS dosing tank station.

If you require further information or should problems arise which are not described in detail in this manual, please contact your nearest Grundfos branch.

1.2 Identification of notices

Information on the system itself, e.g. identification of fluid connections, must be clearly legible at all times.

1.2.1 Symbols used in this document


Warning

If these safety instructions are not observed, it may result in personal injury.



Caution

If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Note

Notes or instructions that make the job easier and ensure safe operation.

1.3 Qualification and training of personnel

The personnel responsible for operation, maintenance, inspection and installation must be suitably qualified for this work. Areas of responsibility, responsibilities and supervision of personnel must be strictly controlled by the operating company.

If the personnel do not have the necessary knowledge, they must be trained and instructed accordingly. If necessary, the training can be provided by the manufacturer/supplier at the request of the operator of the pump. The operating company must ensure that personnel understand the content of this manual.

1.4 Safety notices for the operating company/operator

Dangerous hot or cold system parts must be protected to prevent accidental contact.

Any protection against accidental contact used for moving parts must not be removed when the system is operated.

Escaping hazardous media (e.g. hot, toxic) must be diverted such that they do not represent a hazard to people's health or the environment. Statutory regulations must be observed.

1.5 Safety notices for maintenance, inspection and installation work

The operating company must ensure that all maintenance, inspection and installation work is carried out by authorised, qualified personnel who have been appropriately trained.

All work on the system may only be undertaken with the system stopped. The procedures described in this manual for bringing the system to a stop must be followed.

System parts which contain media hazardous to health must be decontaminated.

All safety and protection equipment must be put back into operation as soon as work is completed.

Observe the points described in Section 5. *Commissioning* prior to recommissioning.



Warning

Ensure that the system is suitable for the dosing medium used.

Observe the safety regulations provided by the manufacturer of the chemicals used.



Warning

Repairs must be carried out by authorised and qualified personnel.

Wear protective clothing (gloves and goggles) when working on the system, connections or lines.

The resistance of the parts that come into contact with media depends on the medium, media temperature and operating pressure.

Caution

Ensure that parts in contact with the media are chemically resistant to the dosing medium under operating conditions.

2. Product introduction

DTS dosing tank stations comprise of a tank with optional equipment and optional preparation for the specified Grundfos dosing pump, see 2.2.2 *Type key*.

2.1 Intended use

- DTS dosing tank stations are intended for storing and dosing certain liquid dosing media.
- The operating safety of DTS dosing tank stations is only ensured, if used in accordance with the values mentioned in section 3. *Technical data*. The specified limit values must not be exceeded.
- DTS dosing tank stations may only be operated by technical personnel in accordance with the installation and operating instructions.
- Modifications or changes to DTS dosing tank stations are only permitted with the consent of the manufacturer. Original spare parts and accessories approved by the manufacturer are safe to use.



Warning

Any usage other than that described here is not intended. Grundfos accept no liability for any damage resulting from incorrect use.

2.1.1 Foreseeable misuse

- DTS dosing tank stations are not intended for dosing explosive, gaseous, highly viscous, solid media, or media with abrasive or long-fibre components. Observe the characteristics of the dosing medium under operating conditions.
- DTS dosing tank stations are not intended for operation in other conditions than described in section 3. *Technical data*.

2.2 Identification

2.2.1 Nameplate

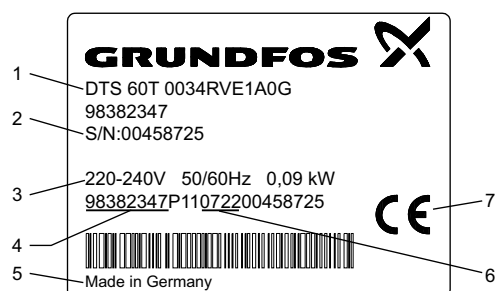


Fig. 1 DTS nameplate

Item	Description
1	Type designation
2	Serial number
3*	Voltage [V]
	Frequency [Hz]
	Power rating [kW]
4	Product number
5	Country of manufacture
6	Code for year and week
7*	Marks of approval, CE mark, etc.

* DTS with electric stirrers

TM06 1043 1414

3. Technical data

3.1 Operating conditions

The resistance of the parts that come into contact with media depends on the medium, media temperature and operating pressure.

Caution

Ensure that parts in contact with the media are chemically resistant to the dosing medium under operating conditions.

3.1.1 Dosing tank

- Min. /Max. storage temperature: -20 °C to +50 °C
- Min. /Max. ambient temperature: -20 °C to +45 °C
- Min. /Max. liquid temperature: -20 °C to +45 °C
 - Dosing medium must be in the liquid phase.

Thin (max. 200 mPas), non-explosive dosing media without abrasive or long-fibre components. The dosing medium must not chemically attack the materials of the DTS dosing tank station.

3.1.2 Components

Note

For the below mentioned operating conditions, refer to the installation and operating instructions of the components used.

- Min. /Max. storage temperature
- Min. /Max. ambient temperature
- Min. /Max. liquid temperature
- Max. relative humidity (non-condensing)
- Max. altitude above sea level

3.2 Electrical data

- Electric stirrer for tanks of 60 l and 100 l
 - single-phase, 220-240 V, 50/60 Hz
- Electric stirrer for tanks of 200 l, 300 l, 500 l and 1000 l
 - single-phase, 230 V, 50 Hz (standard), or
 - single-phase, 240 V, 50 Hz
- For more details, refer to the installation and operating instructions for the electric stirrer and dosing pump.

3.3 Hydraulic data

3.3.1 Process connection

- with injection unit: G 1/2
- without injection unit: see hydraulic connection of the dosing pump

3.3.2 Suction line

Suction hose PE 6/9 mm (9/12 mm for DDI 60-10) with included connection for the suction side of the dosing pump.

3.4 Dimensions

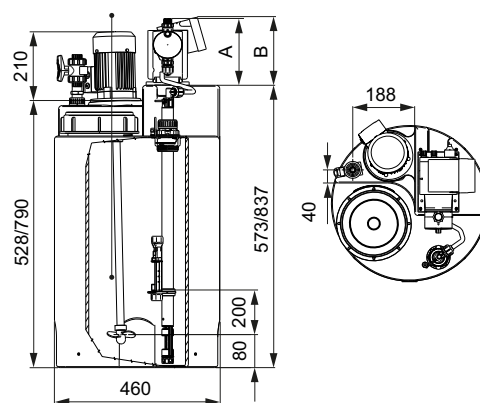


Fig. 2 Dosing tank station 60 / 100 l

Pump type	A* [mm]	B** [mm]
DDA 7.5-16, DDC 6-10, DDC 9-7	196	200.8
DDE 6-10	196	161.5
DDA 12-10, DDA 17-7, DDC 15-4	200.5	200.8
DDE 15-4	200.5	161.5
DDA 30-4	204.5	200.8
DMX 221, $p_{max.} = 3$ bar	197	319
DMX 221, $p_{max.} = 4$ bar	192	319
DMX 221, $p_{max.} = 10 / 16$ bar	179	319
DDI 60-10	252	230

* A: height of pump up to discharge connection

** B: height of pump housing or motor

TM05 9268 3613

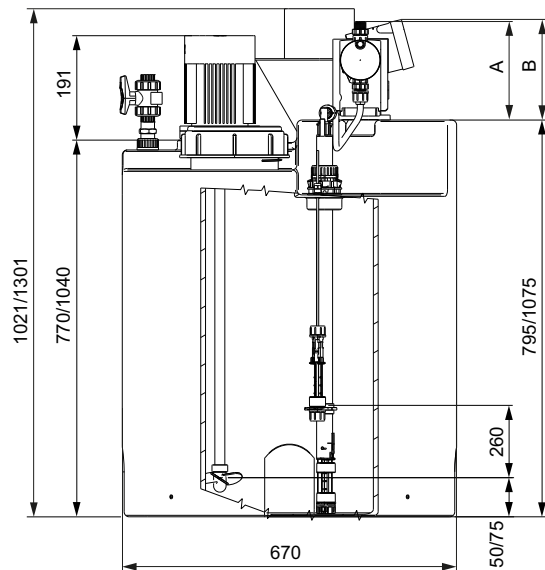


Fig. 3 Dosing tank station 200 / 300 l

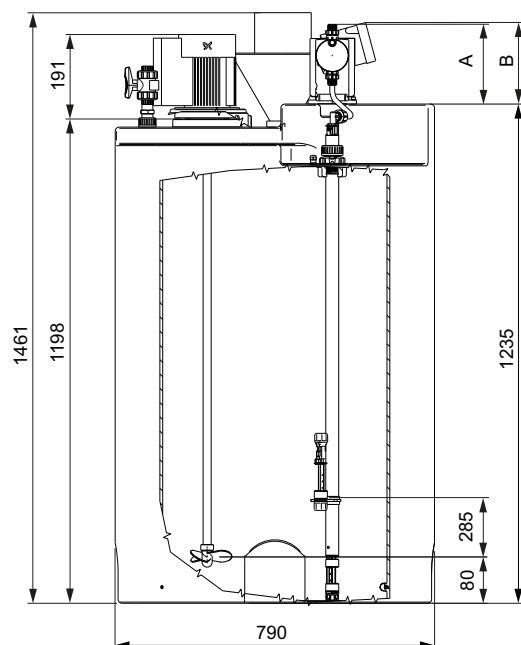


Fig. 4 Dosing tank station 500 l

TM05 9269 3613

TM05 9270 3613


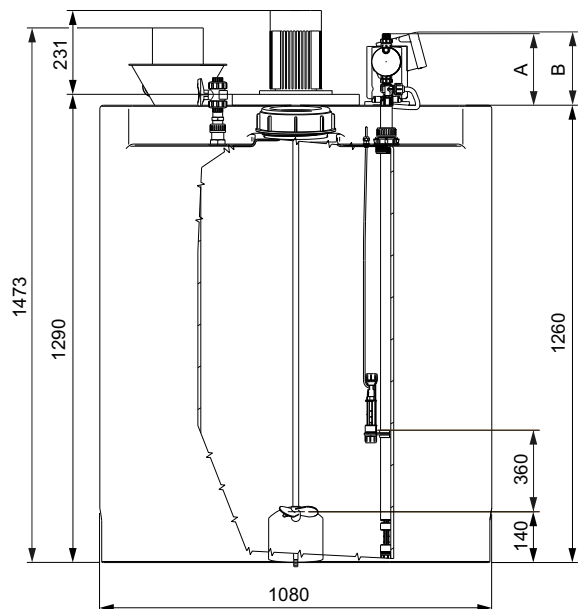


Fig. 5 Dosing tank station 1000 l

Measurements in mm

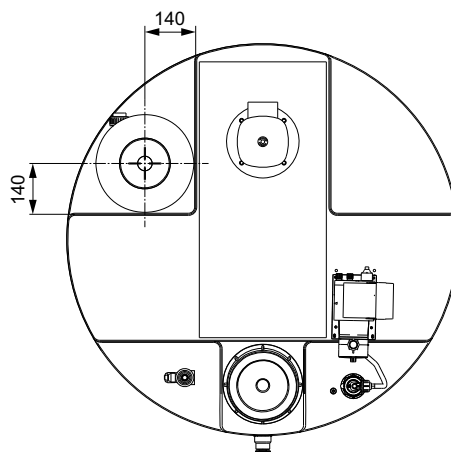

TM05 9271 3613

3.5 Materials in contact with media

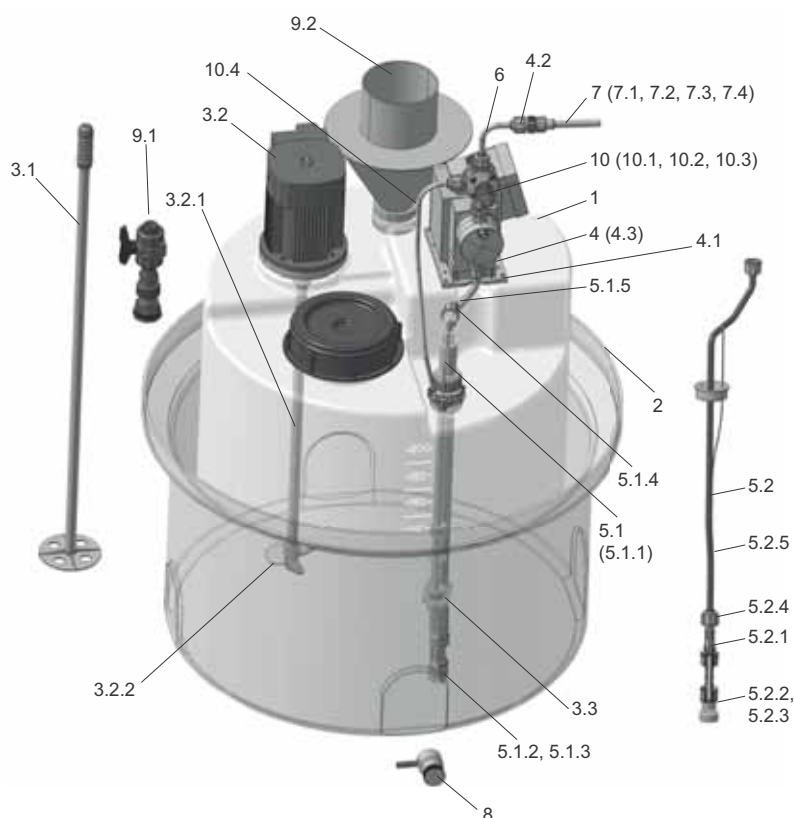


Fig. 6 Components that come into contact with media

Pos.	Description	Material
1	Dosing tank	PE
2	Collecting tray	PE
3	Mixer or stirrer	
3.1	Handheld mixer	PE
3.2	Electric stirrer	
3.2.1	Shaft	SS 1.4571, PP
3.2.2	Propeller	PP
3.3	Level switch for electric stirrer	PE
4	Installation material	
4.1	Screws and washers	Tank sizes 60-500 l: SS 1.4541 (screws), SS 1.4301 (washers); Tank size 1000 l: PP
4.2	Connection kits (only DDI and DMX)	PP, PVC
4.3	Mounting plate (only DDA, DDC, DDE)	PPO/PS 20 % GF
5	Suction line	
5.1	Rigid suction lance with suction line	
5.1.1	Rigid suction lance	PE
5.1.2	Valve ball	Ceramic Al ₂ O ₃ 99.5 %
5.1.3	Valve seat	PTFE
5.1.4	Gasket	FKM, EPDM or PTFE
5.1.5	Suction line	PE
5.2	Flexible suction line with foot valve	
5.2.1	Foot valve	PE
5.2.2	Valve ball	Ceramic Al ₂ O ₃ 99.5 %
5.2.3	Valve seat	PTFE
5.2.4	Gasket	FKM, EPDM or PTFE

Pos.	Description	Material
5.2.5	Suction line	PE
6	Discharge line	PE or braided PVC
7	Injection unit	
7.1	Body	PVC or PP
7.2	Gaskets	FKM, EPDM or PTFE
7.3	Spring	Tantal
7.4	Ball	Ceramic Al ₂ O ₃ 99.5 %
8	Drain valve	PVC/EPDM
9	Filling device	
9.1	Filling armature	PVC/EPDM
9.2	Dissolving hopper	PVC/EPDM
10	Multi-function valve	
10.1	Body	PVDF
10.2	Gaskets	FKM, EPDM or PTFE
10.3	Diaphragm	PTFE
10.4	Relief line	PE

Note

For more details, refer to the installation and operating instructions of the components.

TM05 9321 3713

4. Structure and function

4.1 Product overview

DTS dosing tank stations can comprise the following modules (selection depending on model key):

- Chemically resistant tank
 - UV-stabilised semi-transparent or black PE
 - 6 sizes between 60 and 1000 litres
 - threaded M 6 inserts and/or adapter plate for installing a dosing pump
 - embossed litre scale
 - screw cover, PE
- Collecting tray, PE, in various sizes for dosing tanks of 60 to 1000 litres
- Handheld mixer or electric stirrer with level switch
- Flexible or rigid suction line, PE, with foot valve and 2-step level switch for idling protection
- Injection unit, PVC or PP, with G 1/2 screw-in thread
- 10 m discharge line, PE or PVC
- Drain valve
- Filling device
- Multi-function valve


The components for the discharge side of the pump are prepared for subsequent installation and enclosed with the delivery packaged separately.

4.1.1 Dosing pump

Depending on the application requirements, the dosing pump can be selected from the following series and ordered separately.

- DDA, DDE, DDC up to 30 l/h
- DMX 221 up to 50 l/h
- DDI 60-10

4.1.2 Components of a DTS dosing tank station

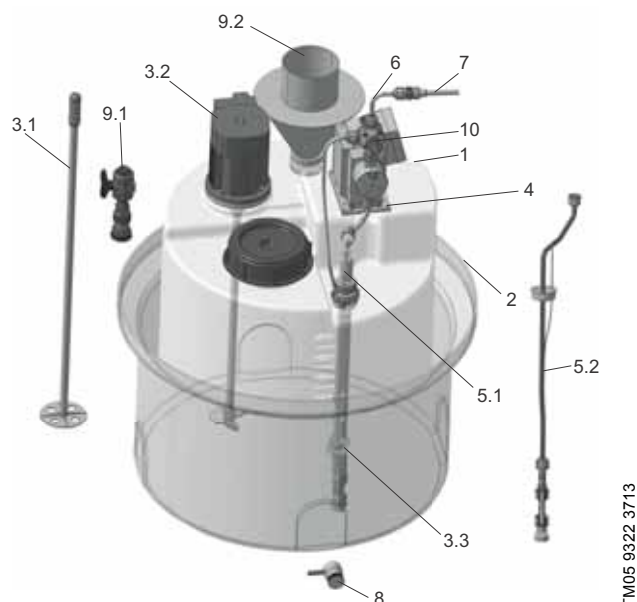

TM05 9322 3713

Fig. 7 DTS dosing tank station (example)

Pos.	Description
1	Dosing tank
2	Collecting tray
3	Mixer or stirrer
3.1	Handheld mixer
3.2	Electric stirrer
3.3	Level switch for electric stirrer
4	Installation material
5	Suction line
5.1	Rigid suction lance
5.2	Flexible suction line with foot valve
6	Discharge line
7	Injection unit
8	Drain valve
9	Filling device
9.1	Filling armature with ball valve
9.2	Dissolving hopper
10	Multi-function valve

5. Commissioning

5.1 Transport and storage

Do not throw or drop the DTS dosing tank station.

Caution Only transport the DTS dosing tank station, if the dosing pump is disassembled.

5.1.1 Unpacking

- Check the DTS dosing tank station for visible transport damage immediately after receipt.
- Dispose of the packaging in accordance with local regulations.

5.2 Installation

Note The DTS dosing tank station may contain water from the check carried out in the factory.

Some media react with water.

Caution If you dose a medium that reacts with water, remove the water from the DTS dosing tank station first.

5.2.1 Installation site

The installation site must be horizontal, even, frost-free and suitable for the corresponding loads.

The DTS dosing tank station must be easily accessible.

Avoid direct sunlight. The materials of the DTS dosing tank station may be damaged by sunlight.

When installing the DTS dosing tank station outdoors, provide protection from rain and weathering.

Caution Before starting work, check if all technical conditions required at the installation site comply with the data on the nameplate of the DTS dosing tank station.

5.2.2 Hydraulic connection

Depending on the scope of supply, the customer must install the components.

Refer to the installation and operating instructions for the components used.

Warning

The dosing medium is pressurised and can be harmful. Observe the maximum permissible pressure.

When working with chemicals, apply the accident prevention regulations at the installation site and the technical rules for working with chemicals (e.g. wearing of protective clothing).

Warning

Before working on the dosing pump and system, mains cables must be disconnected and secured to prevent them being switched on again. Before switching the supply voltage back on, the dosing lines must be connected such that any chemicals in the dosing system cannot spray out and put people at risk.

Warning

Overflowing dosing medium must always be returned to a tank.

- Media such as peracetic acid and hydrogen peroxide must be returned to a separate tank.
- Other media can be returned to the dosing tank.

The overflow hose provided with the multi-function valve must be connected and routed to the corresponding tank or the cap of the suction lance or foot valve.

Warning

When changing chemicals, check the chemical resistance of the materials used. If there is a risk of a chemical reaction between the chemicals, clean the DTS dosing tank station thoroughly before dosing the new chemical.

5.2.3 Installation of the dosing pump

Note

The installation material for the dosing pump (screws, nuts, washers) is delivered with DTS dosing tank stations that have the "Preparation for dosing pump" option.

- Mount the dosing pump with the suitable installation material directly on the dosing tank or adapter plate.
- Refer to the installation and operating instructions for the dosing pump.

5.2.4 Installation of the multi-function valve

- Fit the multi-function valve directly on the pressure valve of the dosing pump.

Refer to the installation and operating instructions for the multi-function valve.

5.2.5 Installation of the dosing lines

Route hoses free from mechanical tension and bends.

Only use the clamp rings and hose connectors intended for the hose diameter in question.

Only use original hoses with the required dimensions and wall thickness.

Observe the maximum permissible operating pressure.

Connect the suction line to the suction valve of the dosing pump. Connect the discharge line to the discharge valve or to the multi-function valve of the dosing pump.

1. Cut the hose ends to length (straight cut).
2. Pull the union nut and the clamp ring over the hose.
3. Slide the hose end over the connector until the stop, widen if necessary. Depending on the type of connection, secure it with a counterpiece or a hose clip.
4. Fit gasket.
 - Ensure that the O-ring or flat gasket is positioned correctly in the counterpiece (pump valve/injection unit).
5. Use the union nut to screw the hose on the valve.

Refer to the installation and operating instructions for the dosing pump.

5.2.6 Installation of the injection unit

- Screw the injection unit into the coupling thread (provided by the customer) of the process line vertically from above.

Refer to the installation and operating instructions for the injection unit.



5.3 Tightness check

- Before filling the dosing tank, check that the following requirements are fulfilled:
 - the suction lance is connected
 - the optional drain valve is fully closed
- Only with drain valve: Fill the dosing tank with water and check for leaks.

Some media react with water.

Caution

If you dose a medium that reacts with water, use a suitable other medium for the tightness check.

5.4 Electrical connection



Warning

Electrical connections must be established by trained personnel.

Observe the local safety regulations.

Protect the cable connections and plugs against corrosion and humidity.

Before connecting the mains cables, check whether the supply voltage stated on the nameplates of the dosing pump and electric stirrer matches the local figures (permissible mains frequency deviation: $\pm 5\%$). An incorrect mains voltage may destroy the components.

Caution

- Fuse the motor with a motor overload switch of the appropriate rating.

5.4.1 Electrical connection of the dosing pump

Refer to the installation and operating instructions for the dosing pump.

5.4.2 Electrical connection of the electric stirrer

Refer to the installation and operating instructions for the electric stirrer.

5.4.3 Electrical connection of the level switch

The suction unit and the electric stirrer are each fitted with a level switch.

- Plug the connector of the level switch of the suction line into the corresponding connector of the dosing pump.

The separate level control of the electric stirrer can be used via an external control unit to deactivate the electric stirrer when the tank is running empty.

5.4.4 Inputs and outputs

Refer to the installation and operating instructions for the dosing pump and the suction line.

6. Operation

The dosing tank is not operated. Within the system, it simply serves as a reservoir for storage and dosing of the medium.

Caution

All the system components must be ready for operation.

Follow the installation and operating instructions for the components and the dosing pump used.



Warning

Never reach into the dosing tank when the electric stirrer is running.

The rotating propeller and mixing shaft may result in serious injuries.

Before switching on the electric stirrer, fill the dosing tank with dosing medium to at least 20 cm above the propeller.

Caution

If this is not done, turbulence may occur when stirring and the mixing shaft may be damaged.

The point at the top of suction unit where the suction line and level cable emerge must not be blocked or sealed.

Caution

Air must enter there, in order to compensate for pressure in the dosing tank.

7. Maintenance

The dosing tank requires no maintenance.

Caution

Observe the installation and operating instructions for the components used.

7.1 Cleaning

Clean the dosing tank and components, if necessary.



Warning

When dosing dangerous media, observe the corresponding safety precautions.

Wear protective clothing (gloves and goggles).

7.2 Service



Warning

All service work must be carried out by authorised and qualified personnel.

Should a fault arise please provide an accurate description of the problem.

Please refer to the nameplate for the technical data.

8. Accessories, spare parts

Replace faulty accessories by new ones. Information on accessories is available on www.grundfos.com or in the data booklets:

- Accessories for dosing pumps
- SMART Digital, DDA, DDC, DDE, Pumps and accessories

9. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

See also end-of-life information at www.grundfos.com/product-recycling.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal

authorities. The separate collection and recycling of such products will help protect the environment and human health.

10. Appendix

10.1 Documentation enclosed

The DTS dosing tank station is supplied together with the DTS installation and operating instructions.

Depending on the scope of supply, separate installation and operating instructions are provided for the following components:

- electric stirrer
- suction line (suction unit) (quick guide)
- multi-function valve.

10.2 Other documentation

Separate installation and operating instructions are available on the CD supplied or on www.grundfos.com for the following components:

- injection unit
- suction line (suction unit).

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the product **DTS with electric stirrers**, to which the declaration below relates, is in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass das Produkt **DTS mit Elektrorührwerken**, auf das sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmt.

ES: Declaración de conformidad de la UE

Grundfos declara, bajo su exclusiva responsabilidad, que el producto **DTS con mezcladores eléctricos** al que hace referencia la siguiente declaración cumple lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la UE.

HU: EU megfeleléségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) **DTS elektromos keverők** termék, amelyre az alábbi nyilatkozat vonatkozik, megfelel az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak.

NL: EU-conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat product **DTS met elektrische mixers**, waarop de onderstaande verklaring betrekking heeft, in overeenstemming is met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EU-lidstaten.

RU: Декларация о соответствии нормам ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделие **DTS с Электрические мешалки**, к которому относится нижеприведённая декларация, соответствует нижеприведённым Директивам Совета Евросоюза о тождественности законов стран-членов ЕС.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobek **DTS s elektrická míchadla**, na který se toto prohlášení vztahuje, je v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství.

DK: EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produktet **DTS med elektriske omrørere** som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EU-medlemsstaternes lovgivning.

FR: Déclaration de conformité UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que le produit **DTS avec agitateurs électriques**, auquel se réfère cette déclaration, est conforme aux Directives du Conseil concernant le rapprochement des législations des États membres CE/UE relatives aux normes énoncées ci-dessous.

IT: Dichiarazione di conformità UE

Grundfos dichiara sotto la sua esclusiva responsabilità che il prodotto **DTS con agitatori elettrici**, al quale si riferisce questa dichiarazione, è conforme alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri UE.

PL: Deklaracja zgodności UE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasz produkt **DTS z mieszadła elektryczne**, którego deklaracja niniejsza dotyczy, jest zgodny z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich.


SI: Izjava o skladnosti EU

V Grundfosu s polno odgovornostjo izjavljamo, da je izdelek **DTS z električna mešala**, na katerega se spodnja izjava nanaša, v skladu s spodnjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic EU.

- Machinery Directive (2006/42/EC).
Standards used: EN 60034-1:2015-02, EN 60204-1:2007-06.
- RoHS Directives (2011/65/EU and 2015/863/EU).
Standard used: EN 50581:2012
- EMC Directive (2014/30/EU).

This EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions.

Pfingstal, 1st March 2018



Ulrich Stemick
Technical Director
Grundfos Water Treatment GmbH
Reetzstr. 85, D-76327 Pfingstal, Germany

Person authorised to compile the technical file and empowered to sign the EU declaration of conformity.



Установки дозировочные типа DTS сертифицированы на соответствие требованиям Технических регламентов Таможенного союза: ТР ТС 004/2011 «О безопасности низковольтного оборудования»; ТР ТС 010/2011 «О безопасности машин и оборудования»; ТР ТС 020/2011 «Электромагнитная совместимость технических средств».

Сертификат соответствия:

№ TC RU C-DK.AИ30.B.01118, срок действия до 20.11.2019 г.

Выдан: Органом по сертификации продукции «ИВАНОВО-СЕРТИФИКАТ» ООО «Ивановский Фонд Сертификации».

Адрес: 153032, Российская Федерация, г. Иваново, ул. Станкостроителей, д.1.

Истра, 01 марта 2016 г.

Касаткина В. В.

Руководитель отдела качества,
экологии и охраны труда

ООО Грундфос Истра, Россия

143581, Московская область,

Истринский район,

дер. Лешково, д.188

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 - Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарьянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaj od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 0515

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

Grundfos Alldos
Dosing & Disinfection
ALLDOS (Shanghai) Water Technology
Co. Ltd.
West Unit, 1 Floor, No. 2 Building (T 4-2)
278 Jinhu Road, Jin Qiao Export
Processing Zone
Pudong New Area
Shanghai, 201206
Phone: +86 21 5055 1012
Telefax: +86 21 5032 0596
E-mail: grundfosalldos-CN@grundfos.com

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86-21 6122 5222
Telefax: +86-21 6122 5333

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 via Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čapkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0)207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombie
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS Water Treatment GmbH
Reetzstraße 85
D-76327 Pfalzthal (Söllingen)
Tel.: +49 7240 61-0
Telefax: +49 7240 61-177
E-mail: gwt@grundfos.com

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
E-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 097
Phone: +91-44 4596 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romanian@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuenteclilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses revised 15.01.2019

98446198 0519
ECM: 1261658

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved. © 2019 Grundfos Holding A/S. all rights reserved.