

Electric stirrers

Installation and operating instructions



Further languages

<http://net.grundfos.com/qr/i/98257071>

be
think
innovate

GRUNDFOS 

English (GB) Installation and operating instructions

Original installation and operating instructions

CONTENTS

	Page
1. Symbols used in this document	2
2. General notes	2
3. Qualification and training of personnel	2
4. Safety	3
4.1 Safety-conscious working	3
4.2 Safety notices for the operating company and the operator	3
4.3 Safety notices on installation and maintenance work	3
4.4 Unauthorised conversions and impermissible spare parts	3
5. Transport and storage	3
5.1 Unpacking	3
5.2 Storage	3
6. Applications	4
6.1 Improper operating methods	4
7. Product overview	4
7.1 General description	4
7.2 Assembled dosing tank station	4
7.3 Type key	5
8. Technical data	6
8.1 Operating conditions	6
8.2 Motor data	6
8.3 Dimensions	7
8.4 Weights	8
8.5 Mounting kit (screws and washers)	8
9. Assembly	9
10. Installation	10
10.1 General notes	10
10.2 Preparations before installation	10
10.3 Installation dimensions	10
10.4 Mechanical installation	11
10.5 Electrical installation	11
11. Commissioning, Operation	12
12. Maintenance	12
12.1 Cleaning	12
13. Disposal	12

1. Symbols used in this document



Warning
If these safety instructions are not observed, it may result in personal injury.



Warning
If these safety instructions are not observed, it may cause personal injury in terms of burns.



Warning
If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.



Caution
If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Note
Notes or instructions that make the job easier and ensure safe operation.

2. General notes

These installation and operating instructions contain all the information needed to commission and operate the electric stirrers listed below.

If you require further information or should problems arise which are not described in detail in this manual, please contact your nearest Grundfos company.

3. Qualification and training of personnel

The personnel responsible for the installation, operation and service must be appropriately qualified for these tasks. Areas of responsibility, levels of authority and the supervision of the personnel must be precisely defined by the operating company. If necessary, the personnel must be trained appropriately.



Warning
Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

4. Safety

These installation and operating instructions contain general instructions that must be observed during installation, operation and maintenance of the electric stirrer. They must be read by the installation engineer and the relevant qualified operator prior to installation and start-up, and must be available at the installation location at all times.

4.1 Safety-conscious working

The safety notices in these instructions should be observed in the same way as statutory health and safety at work guidelines and the operating and safety notices provided by the operating company.

Risks of not observing the safety instructions

Non-observance of the safety instructions may have dangerous consequences for the personnel, the environment and the product, and may result in the loss of any claims for damages.

It may lead to the following hazards:

- Personal injury from exposure to electrical, mechanical and chemical influences.
- Damage to the environment and personal injury from leakage of harmful substances.
- Failure of important functions of the system.

4.2 Safety notices for the operating company and the operator

Hazards caused by electrical energy must be prevented (for more details, please consult the relevant regulations).



Warning

Danger from rotating parts!

Only switch on the electric stirrer when it is mounted in a suitable tank.



Warning

The surface of the motor may be so hot that it may cause personal injury in terms of burns.

Provide protection against accidental contact with hot surfaces.

Wear protective clothing, if required.

Caution

The electric stirrer must not run dry.

Caution

Observe the installation and operating instructions for the motor used.

4.3 Safety notices on installation and maintenance work

All work on the electric stirrer may only be carried out with the device switched off.

All safety and protection equipment must be put back into operation as soon as work is completed.



Warning

Installation, maintenance and repair must be carried out by authorised and qualified personnel.

Do not open the electric stirrer.



Warning

When handling dangerous media, observe the corresponding safety precautions.

Wear protective clothing (gloves and goggles) if required.

4.4 Unauthorised conversions and impermissible spare parts

Modifications or changes to the electric stirrer are only permitted with the consent of the manufacturer. Genuine spare parts and accessories approved by the manufacturer are safe to use.

5. Transport and storage

Do not throw or drop the electric stirrer.

Protect the shaft and propeller against shock, impact and twisting.

Caution

Do not hold or transport the electric stirrer by the shaft or propeller.

Caution

Observe the installation and operating instructions for the motor used.

5.1 Unpacking

- Unpack the electric stirrer as soon as you receive it, and check for visible transport damage.
- Retain the packaging for future storage or return, or dispose of the packaging in accordance with local regulations.
- Fit the electric stirrer as soon as possible after unpacking.

5.2 Storage

Store the electric stirrer in a dry, cool place.

- Min./Max. storage temperature: -20 °C to +50 °C

6. Applications

Electric stirrers from Grundfos, mounted in a suitable tank are intended for the mixing and dissolving of liquid, non-abrasive, non-inflammable and non-explosive media, as described in these instructions.

Caution

No other applications are approved or permitted. Grundfos is not liable for damage resulting from incorrect use.

6.1 Improper operating methods

The operating safety of the product supplied is only ensured, if used as described in section [6. Applications](#).

The specified limit values mentioned in section [8. Technical data](#) must not be exceeded.

7. Product overview


7.1 General description

The electric stirrers ensure that the liquid in the dosing tank is mixed constantly. The stirrers run at 1500 rpm with a net frequency of 50 Hz, and are suitable for liquids with low to medium viscosity.

The following versions are available:

- 6 shaft lengths suitable for cylindrical Grundfos PE tanks with volumes between 60 l and 1000 l
- 3 propeller sizes
- Single-phase or 3-phase motors in 3 power sizes
- Stainless-steel shaft with PP propeller as a standard
- PP-coated stainless-steel shaft with PP propeller
- PP-coated stainless-steel shaft with PP sealing flange and PP propeller

7.2 Assembled dosing tank station

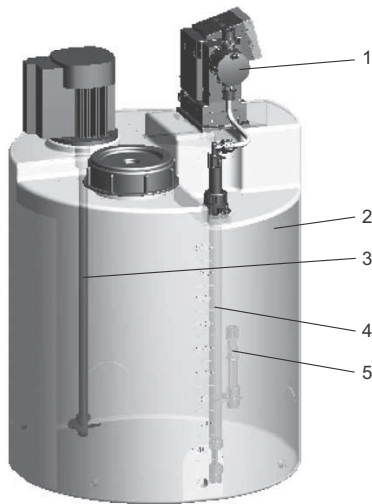

TM04 8566 2712

Fig. 1 Assembled dosing tank station (example)

Item	Description
1	Dosing pump
2	Dosing tank
3	Electric stirrer
4	Suction lance
5	Level indication for switch-off of electric stirrer

7.3 Type key

Example:		El.stirrer	f.60l tank,	SS	G /	X,	500 -	88
Product name								
El.stirrer	electric stirrer							
Assignment to Grundfos cylindrical tank								
f.60l tank	for 60-litre tank							
f.100l tank	for 100-litre tank							
f.200l tank	for 200-litre tank							
f.300l tank	for 300-litre tank							
f.500l tank	for 500-litre tank							
f.1000l tank	for 1000-litre tank							
Shaft material (propeller material: PP GF)								
SS	stainless steel							
PP	stainless steel, PP-coated							
PP-S	stainless steel, PP-coated, with sealing flange							
Motor variant								
G	single-phase							
E	three-phase							
Cable and plug version								
X	without cable and plug							
Immersion depth (SS/PP/PP-S)								
450	450/452/437 mm							
690	691/693/678 mm							
700	698/700/685 mm							
950	950/952/937 mm							
1100	1100/1102/1087 mm							
1150	1150/1152/1137 mm							
Propeller diameter								
88	88 mm							
100	100 mm							
125	125 mm							

8. Technical data

8.1 Operating conditions


- Min./Max. ambient temperature: 0 °C to +40 °C
- Min./Max. liquid temperature: -10 °C to +45 °C
 - Dosing medium must be in the liquid phase.
- Max. relative humidity (non-condensing):
70 % at 40 °C, 90 % at 35 °C
- Max. altitude above sea level: 1000 m
- Max. viscosity: 100 mPas with 90 W, 250 mPas
with 250 W, 550 W

8.2 Motor data

El.stirrer	f.60l tank f.100l tank		f.200l tank f.300l tank f.500l tank			f.1000l tank		
Power rating [kW]	0.09	0.09	0.25	0.25	0.25	0.55	0.55	0.55
Idle speed* [rpm]	1500	1500	1500	1500	1500	1500	1500	1500
Phase	1	3	1	1	3	1	1	3
Voltage [V]	220-240	220-240 / 380-425	230	240	220-240 / 380-415	230	240	220-240 / 380-415
Frequency [Hz]	50/60	50/60	50	50	50/60	50	50	50/60
Enclosure class	IP65	IP65	IP55	IP55	IP55	IP55	IP55	IP55
Insulation class	F	F	F	F	F	F	F	F
Nominal current (Δ/Y)* [A]	0.9	0.6 / 0.4	2.1	2.02	1.48 / 0.85	3.7	3.55	2.6 / 1.5
Starting current [%]	200	300	230	230	400	310	310	430
cos φ*	0.94	0.68	0.91	0.91	0.75 - 0.65	0.97	1	0.79 - 0.7
Efficiency* [%]	50	58	55	55	69	65	65	77
Manufacturer	Kaiser	Kaiser	Kaiser	Kaiser	Grundfos	Kaiser	Kaiser	Grundfos


* Electrical data for 50 Hz operation. For 60 Hz operation, see motor data sheet.

8.3 Dimensions

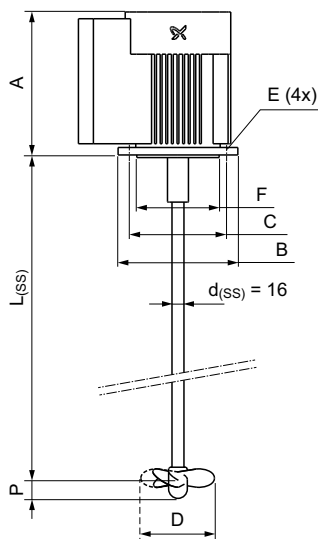

TM04 8565 2712

Fig. 2 Electric stirrer, stainless-steel version

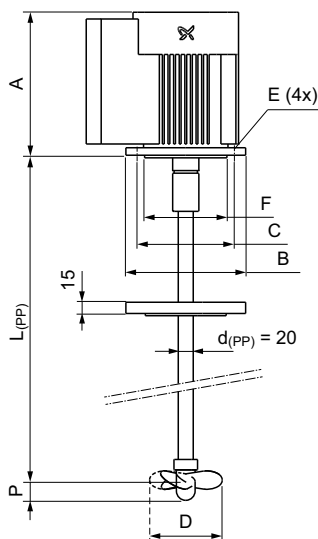

TM04 8562 2712

Fig. 3 Electric stirrer, PP version, with sealing flange

Item	Description	Item	Description
L	Shaft length	C	Diameter of pitch circle
P	Propeller height	E	Diameter of hole for screw
d	Shaft diameter	F	Diameter of sealing flange centering
D	Propeller diameter	A	Motor height
B	Outer diameter of sealing flange		

8.3.1 Table of dimensions

El.stirrer	L _(ss)	L _(pp)	P	D	B	C	E	F	A
	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
f.60l tank	450	452	25	88	140	115	9	95	218
f.100l tank	691	693	25	88	140	115	9	95	218
f.200l tank	698	700	25	100	160	130	9	110	220
f.300l tank	950	952	25	100	160	130	9	110	220
f.500l tank	1100	1102	28	125	160	130	9	110	220
f.1000l tank	1150	1152	28	125	200	165	11	130	236

8.4 Weights

El.stirrer	Material	Weight [kg]
f.60l tank	SS	8.2
	PP	8.5
	PP-S	8.8
f.100l tank	SS	8.5
	PP	8.8
	PP-S	9.1
f.200l tank	SS	8.0
	PP	8.3
	PP-S	8.6
f.300l tank	SS	8.5
	PP	8.8
	PP-S	9.1
f.500l tank	SS	8.7
	PP	9.0
	PP-S	9.3
f.1000l tank	SS	12.1
	PP	12.4
	PP-S	12.7

8.5 Mounting kit (screws and washers)

El.stirrer	f.60l tank f.100l tank	f.200l tank f.300l tank f.500l tank		f.1000l tank
Manufacturer	Kaiser	Kaiser	Grundfos	Grundfos, Kaiser
SS	M8x20 (1)	M8x20 (1)	M8x35 (2)	M10x40 (4)
PP	M8x20 (1)	M8x20 (1)	M8x35 (2)	M10x40 (4)
PP-S	M8x35 (2)	M8x35 (2)	M8x50 (3)	M10x50 (5)

The electric stirrers are provided with an appropriate mounting kit, in case of tank size 200 - 500 l with two different mounting kits.

Select the appropriate mounting kit for the type of electric stirrer (material and tank size) and manufacturer of motor from the table above:


- (1) "Kaiser, SS/PP, M8x20"
- (2) "Grundfos, SS/PP – Kaiser, PP-S, M8x35"
- (3) "Grundfos, PP-S, M8x50"
- (4) "Grundfos, SS/PP, M10x40"
- (5) "Grundfos, PP-S, M10x50"

9. Assembly



Warning

Assembly must be carried out by authorised and qualified personnel.

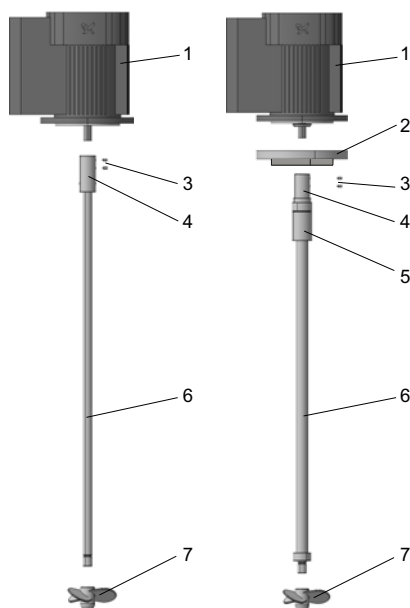

TM04 8564 2712

Fig. 4 Stainless-steel version (left), PP version with sealing flange (right)

Item	Description
1	Motor
2	Sealing flange
3	Headless screws
4	Coupling
5	Coupling protection
6	Shaft
7	Propeller

Assembly instructions

1. Mounting of propeller
 - Hold the shaft at the metal surface of the coupling with one hand.
 - Remove the thread protection from the thread of the shaft.
 - Screw the propeller (7) onto the shaft (6) and tighten it manually.
2. Positioning of sealing flange (only PP version with sealing flange)
 - Slide the sealing flange over the metal surface up to the coupling protection (5) (observe orientation, see fig. 4: the bigger outer diameter of the sealing flange points to the motor).
3. Installation at motor
 - Remove the protective cap from the motor shaft, if applicable.
 - Slide the coupling of the shaft (4) as far as it will go onto the motor shaft (1). The holes for the headless screws must be located directly above the groove of the motor shaft.
 - Fix the shaft (6) at the motor (1) by tightening the two headless screws (3) using the hexagon key supplied. Make sure that the headless screws are counter-sunk and tightened with 3 Nm.
4. Positioning of coupling protection (only PP version with or without sealing flange)
 - Slide the coupling protection (5) over the coupling (4) towards the motor (1) as far as it will go.
5. Positioning of sealing flange (only PP version with sealing flange)
 - Apply the grease supplied to the entire metal surface of the coupling protection.
 - Carefully slide the sealing flange (2) on the motor flange without damaging the sealing lip of the sealing flange.
 - Make sure that the sealing flange (2) is placed correctly on the coupling protection (5). Check that the sealing lip is positioned on the metal surface of the coupling protection.

10. Installation

10.1 General notes



Warning

Installation must be carried out by authorised and qualified personnel. Observe the installation and operating instructions for the motor used.

Protect the shaft and propeller against shock, impact and twisting.


When introducing into the dosing tank, do not twist the shaft or strain it with the weight of the motor.

Caution

Shaft and propeller must not touch any part of the dosing tank.

Do not hold or transport the electric stirrer by the shaft or propeller.

10.3 Installation dimensions

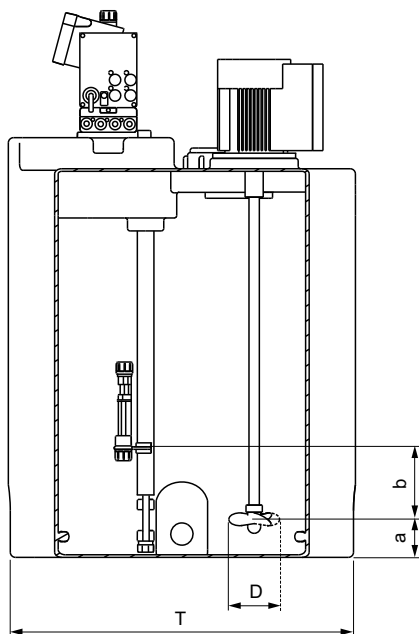

Note

Installation surfaces (dosing tank cover or mounting frames) must be as free from vibrations as possible.

10.2 Preparations before installation

Do not position the electric stirrer centrally in the dosing tank.

Caution

The propeller must not be positioned too close to the dosing tank base.

The electric stirrer must not run dry.

See section [10.3 Installation dimensions](#).

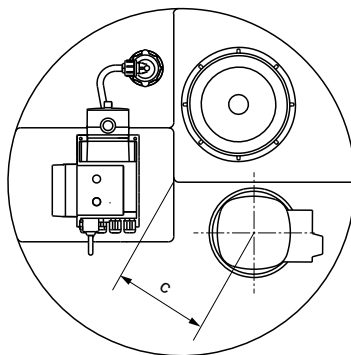


Fig. 5 Dosing tank station, cross section and top view

Item	Description	Dimensioning rule
a	Distance of propeller from dosing tank bottom	0.5 - 1.1 x D
b	Position of level switch (minimum liquid level above the propeller)	2-3 x D
c	Position of shaft (recommended distance between shaft and centre of dosing tank)	0.25 x T
T	Tank diameter	-

See section [8.3.1 Table of dimensions](#).

10.3.1 Installation dimensions for Grundfos cylindrical tanks

El.stirrer	Tank size	Distance from tank bottom (a)	Position of level switch (b)	Position of stirrer shaft (c)
	[l]	[mm]	[mm]	[mm]
f.60l tank	60	80	200	130
f.100l tank	100	90	200	130
f.200l tank	200	50	260	170
f.300l tank	300	75	260	170
f.500l tank	500	80	285	195
f.1000l tank	1000	140	360	270

10.4 Mechanical installation

- Use a Grundfos cylindrical dosing tank prepared for assembly of an electric stirrer, or cut a suitable hole for the motor flange into a standard cylindrical dosing tank.
 - 1000-litre tanks must have a reinforced beam prepared for installation of a stirrer.
- Install the electric stirrer vertically on a suitable Grundfos cylindrical dosing tank with the appropriate mounting kit supplied, see [8.5 Mounting kit \(screws and washers\)](#).
 - Do not twist the shaft or strain it with the weight of the motor.
 - Tighten the screws with 6 Nm (+0 / -1 Nm).
- Make sure that the shaft and propeller are not touching any point of the tank.
- Before commissioning, make sure that the filling level of the tank is monitored with a level switch.
 - Minimum distance between level switch and propeller see fig. 5.

10.5 Electrical installation

Carry out the electrical connection according to local regulations.

Check that the supply voltage and frequency correspond to the values stated on the nameplate.



Warning

During electrical installation, make sure that the power supply cannot be accidentally switched on.

10.5.1 Electrical connection



Warning

Switch off the power supply before making connections.



Warning

The electrical installation must be carried out by an authorised person in accordance with local regulations and the relevant wiring diagram.

Observe the installation and operating instructions for the motor used.



Observe direction of rotation of the motor.

In case of wrong direction of rotation, the propeller can fall off the shaft during operation.

- Connect the motor to the mains according to the wiring diagram in the terminal box cover.
- Protect the cable connections against corrosion and humidity.
- Fuse the motor with a motor overload switch of the appropriate rating.
- Check the direction of rotation (see arrow on motor housing).

11. Commissioning, Operation



Warning

The surface of the motor may be so hot that it may cause personal injury in terms of burns.

Provide protection against accidental contact with hot surfaces.

Wear protective clothing, if required.



Warning

Danger from rotating parts!

Only switch on the electric stirrer when it is mounted in a suitable tank.

Caution

When commissioning, all components of the system must be ready for operation.

Observe the installation and operating instructions for the components.

Caution

The electric stirrer must not run dry.

The signal of the level switch is designed for switching off the motor, if the minimum level of liquid in the tank is reached.

Only switch on the stirrer, if the propeller is immersed in the liquid.

Minimum liquid level above the propeller, see section [10.3 Installation dimensions](#).

Note

Depending on the installation, the electric stirrer is switched on and off with an external control unit.

12. Maintenance

In the event of contamination or deposits, the electric stirrer (shaft and propeller) can be cleaned.

12.1 Cleaning



Warning

The surface of the motor may be so hot that it may cause personal injury in terms of burns.

Wear protective clothing, if required.



Warning

Before starting maintenance work, switch off the entire system and disconnect the power supply.



Warning

Maintenance work must be carried out by qualified and trained personnel.

Observe the installation and operating instructions for the motor used.



Warning

Observe the local regulations for safety, health and environment.

Caution

Protect the shaft and propeller against shock, impact and twisting.

Do not hold or transport the electric stirrer by the shaft or propeller.

12.1.1 Removal

1. Remove electrical connections.

2. Loosen the 4 retaining screws of the electric stirrer.

3. Lift the electric stirrer vertically out of the dosing tank.

– Do not twist the shaft or strain it with the weight of the motor.

12.1.2 Cleaning

Use appropriate cleaning agents to clean the shaft and propeller.

12.1.3 Installation

1. Install the stirrer vertically on the dosing tank with 4 screws.

– Do not twist the shaft or strain it with the weight of the motor.

2. Make sure that the shaft and propeller are not touching any point of the tank.

3. Before commissioning, re-establish electrical connections. Check the direction of rotation.

13. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

See also end-of-life information at

www.grundfos.com/product-recycling.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

Declaration of conformity

GB: EC/EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the product **El.stirr (Electric stirrers)**, to which the declaration below relates, is in conformity with the Council Directives listed below on the approximation of the laws of the EC/EU member states.

DE: EG-/EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass das Produkt **El.stirr (Elektorrührwerke)**, auf das sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-/EU-Mitgliedsstaaten übereinstimmt.

ES: Declaración de conformidad de la CE/UE

Grundfos declara, bajo su exclusiva responsabilidad, que el producto **El.stirr (Mezcladores eléctricos)**, al que hace referencia la siguiente declaración cumple lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la CE/UE.

HR: EC/EU deklaracija sukladnosti

Mi, Grundfos, izjavljujemo s punom odgovornošću da je proizvod **El.stirr (Električne miješalice)**, na koja se izjava odnosi u nastavku, u skladu s direktivama Vijeća dolje navedenih u usklađivanju zakona država članica EZ-a / EU-a.

IT: Dichiarazione di conformità CE/UE

Grundfos dichiara sotto la sua esclusiva responsabilità che il prodotto **El.stirr (Agitatori elettrici)**, al quale si riferisce questa dichiarazione, è conforme alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri CE/UE.

PL: Deklaracja zgodności WE/EU

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasz produkt **El.stirr (Mieszadła elektryczne)**, którego deklaracja niniejsza dotyczy, jest zgodny z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich.

SI: Izjava o skladnosti ES/EU

V Grundfosu s polno odgovornostjo izjavljamo, da je izdelek **El.stirr (Električna mešala)**, na katerega se spodnja izjava nanaša, v skladu s spodnjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic ES/EU.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobek **El.stirr (Elektrická míchadla)**, na který se toto prohlášení vztahuje, je v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství.

DK: EF/EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produktet **El.stirr (Elektriske omrørere)** som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EF/EU-medlemsstaternes lovgivning.

FR: Déclaration de conformité CE/UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que le produit **El.stirr (Agitateurs électriques)**, auquel se réfère cette déclaration, est conforme aux Directives du Conseil concernant le rapprochement des législations des États membres CE/UE relatives aux normes énoncées ci-dessous.

HU: EC/EU megfelelősségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) **El.stirr (Elektromos keverők)** termék, amelyre az alábbi nyilatkozat vonatkozik, megfelel az Európai Közösség/Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak.

NL: EG/EU-conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat product **El.stirr (Elektrische menger)**, waarop de onderstaande verklaring betrekking heeft, in overeenstemming is met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EG-/EU-lidstaten.


RU: Декларация о соответствии нормам ЕЭС/ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделие **El.stirr (Электрические мешалки)**, к которому относится нижеприведенная декларация, соответствует нижеприведенным Директивам Совета Евросоюза о тождественности законов стран-членов ЕЭС/ЕС.

- Machinery Directive (2006/42/EC).
Standards used: EN ISO 12100: 2010, EN 60034-1:2015-02, EN 60204-1:2007-06.
- RoHS Directives (2011/65/EU and 2015/863/EU).
Standard used: EN 50581:2012.

This EC/EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions.

Pfinztal, 1st March 2018

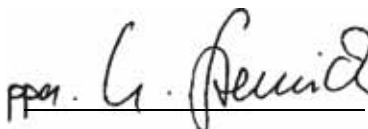

Ulrich Stemick
Technical Director
Grundfos Water Treatment GmbH
Reetzstr. 85, D-76327 Pfinztal, Germany

Person authorised to compile the technical file and empowered to sign the EC/EU declaration of conformity.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 - Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
"Порт"
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

Grundfos Alldos

Dosing & Disinfection
ALLDOS (Shanghai) Water Technology
Co. Ltd.
West Unit, 1 Floor, No. 2 Building (T 4-2)
278 Jinhu Road, Jin Qiao Export Pro-
cessing Zone
Pudong New Area
Shanghai, 201206
Phone: +86 21 5055 1012
Telefax: +86 21 5032 0596
E-mail: grundfosalldos-CN@grund-
fos.com

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86-21 6122 5222
Telefax: +86-21 6122 5333

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 via Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A,
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čapkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0)207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS Water Treatment GmbH
Reetzstraße 85
D-76327 Pfinztal (Söllingen)
Tel.: +49 7240 61-0
Telefax: +49 7240 61-177
E-mail: gwt@grundfos.com

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
E-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 097
Phone: +91-44 4596 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Ciliilitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznań
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe Română SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0)1 568 0619
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgraidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd.
Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Rep-
resentative Office of Grundfos Kazakhstan
in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses revised 15.01.2019

98257071 0519
ECM: 1261658

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and 'be think innovate' are registered trademarks owned by The Grundfos Group. All rights reserved.
© 2019 Grundfos Holding A/S, all rights reserved.