

Vaccuperm VGA-113

Gas dosing regulator

Installation and operating instructions



Other languages

<http://net.grundfos.com/qr/i/98028175>

be
think
innovate

GRUNDFOS 

Original installation and operating instructions.

CONTENTS

	Page
1. Safety instructions	2
1.1 Symbols used in this document	2
1.2 Safety advice for handling chlorine	2
1.3 Protective equipment	3
1.4 First aid in case of accidents	3
1.5 Handling chlorine containers	4
1.6 Chlorine rooms	5
2. Introduction	6
2.1 Correct usage	6
2.2 Inappropriate usage	6
2.3 Qualification of the users	6
2.4 Responsibilities of the operator	6
2.5 Maintenance and service personnel	6
2.6 Type key VGA-113 dosing regulator	7
2.7 Transport and storage	7
2.8 Unpacking	7
3. Technical data	8
3.1 General technical data	8
3.2 Dosing flow	8
3.3 Accessories	8
3.4 Dimensions	8
3.5 Electrical data of servomotor	10
3.6 Physical and chemical data of chlorine	11
4. Design and function	11
4.1 Description of the device	11
4.2 Functional principle	12
5. Assembly and installation	13
5.1 Selection of vacuum lines	13
5.2 Connecting the dosing regulator	14
5.3 Connecting an external controller to a servomotor with analog control	14
5.4 Connecting an external controller to a servomotor with reversing potentiometer	16
5.5 Installation example	17
6. Startup	17
6.1 Checking the tightness	17
6.2 Chlorine extraction	18
7. Operation	19
7.1 Switching on the chlorine gas dosing system	19
7.2 Setting the dosing flow	19
7.3 Reading the dosing flow	19
7.4 Servomotor	20
7.5 Switching off the chlorine gas dosing system	20
7.6 Changing the chlorine container while the system is running	20
8. Maintenance	20
9. Fault finding	21
10. Disposal	21

**Warning**

Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Safety instructions

These installation and operating instructions contain important information for the user of the product:

- Technical data
- Instructions for commissioning and use
- Safety instructions

If you require further information, or if problems occur that are not described in detail in this manual, please contact Grundfos.

1.1 Symbols used in this document


This manual contains the following standardised safety instructions about possible residual risks:

**Warning**

If these safety instructions are not observed, it may result in personal injury.

**Caution**

If these safety instructions are not observed, it may result in malfunction or damage to the equipment.

**Note**

Notes or instructions that make the job easier and ensure safe operation.

1.2 Safety advice for handling chlorine**1.2.1 Hazards of chlorine gas****Warning**

Toxic by inhalation.

Irritating to eyes, respiratory system and skin.

- Causes whooping cough, dyspnoea and lacrimation.
- Has a slight paralysing effect to the central nervous system.
- Concentrations of more than 10 ppm chlorine gas in the respiratory air mean an acute danger to life.
- Inhaling air with a high concentration of chlorine gas for a long time is lethal.

1.2.2 Hazards of liquid chlorine

- Causes burns of skin.
- Causes reddening and blistering of skin.

1.2.3 Rules of conduct

- Change chlorine containers only with gas mask.
- Enter contaminated rooms only with protective suit and compressed-air respirator.
- In case of flight wear gas mask, if possible. Observe wind direction.

1.3 Protective equipment

1.3.1 Personal protective equipment

The operating authority of a chlorine gas dosing system has to provide respiratory equipment (full-sight gas mask), personally fitted, labelled by name, with an effective chlorine filter (B2P3) and at least 1 spare filter per gas mask, for each operator. The protective equipment must be stored easily accessible outside the chlorine rooms.

- For systems with chlorine drums at least 2 protective suits with compressed-air respirators must be available.

1.3.2 Obligations of the operating authority

- Introducing the operators to handling the protective equipment.
- The operators must use the personal protective equipment regularly, or carry out exercises with it at least every 6 months.
- The gas mask filters must be replaced regularly
 - after the expiry of the date of durability
 - at least 6 months after opening (note the opening date on the filter)
 - after contact with chlorine.
- Observe employing prohibition according to the local laws.

1.3.3 Storage of the protective equipment

- Outside the chlorine rooms
- Well visible
- Easily available at any time
- Protected from dust and moisture.

1.4 First aid in case of accidents

1.4.1 First aid after inhaling chlorine

1. Keep calm.
2. Remove injured persons from the dangerous area.
3. Helpers must pay attention to personal protection.
4. Remove contaminated clothes.
5. Calm down injured persons and keep them warm with blankets.
6. Supply fresh air, use oxygen respirator, if possible.
 - No mouth-to-mouth resuscitation!
7. Call medical aid or transport to hospital
 - lying
 - sitting in case of difficulty in breathing.
 - State chlorine as the cause.

1.4.2 First aid after chemical burn of skin

1. Keep calm.
2. Remove contaminated clothes.
3. Rinse skin with plenty of water.
4. Bandage the wound aseptically.
5. Seek medical aid.
 - State chlorine as the cause.

1.4.3 First aid after chemical burn of eyes

1. Keep calm.
2. Rinse eyes with plenty of water while the patient is lying.
 - Protect healthy eye, if necessary.
 - Spread eyelids widely, let the eye move to all sides.
3. Seek ophthalmologist.
 - State chlorine as the cause.

1.4.4 First aid after internal chemical burn

1. Keep calm.
2. Drink water in short sips.
 - If possible, take medical charcoal.
3. Seek medical aid.
 - State chlorine as the cause.

1.5 Handling chlorine containers

Chlorine is stored in grey steel cylinders or drums in lockable chlorine rooms. Due to safety precautions, chlorine containers are only filled up to 95 % of their capacity.

Kind of gas, weight, owner, producing date and date of the last testing have to be noted clearly on the container.

Observe the following:

- Store chlorine containers fireproof.
- Protect chlorine containers from heat and sunlight.
- Chlorine containers should not be modified or repaired by the user.
- Keep full and empty containers closed.

1.5.1 Steel cylinders

- Contents: 50 kg or 65 kg
- Extract chlorine gas from the upright standing cylinder via the valve.

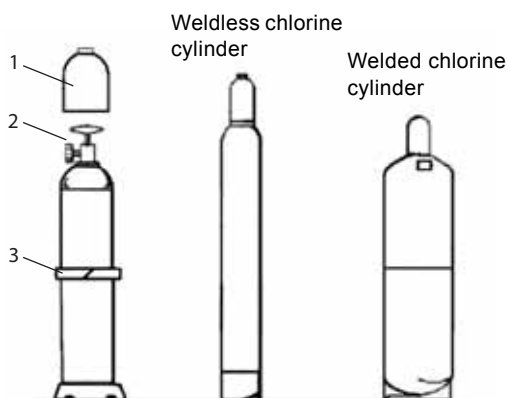


Fig. 1 Design of cylinder

TM04 0693 0908

Pos.	Description
1	Protective cap
2	Valve
3	Holding clip for securing the cylinder

1.5.2 Chlorine drums

- Contents: 500 kg or 1000 kg
- Extraction of chlorine gas via the riser pipe valve.
- Extraction of liquid chlorine via the dip pipe valve.

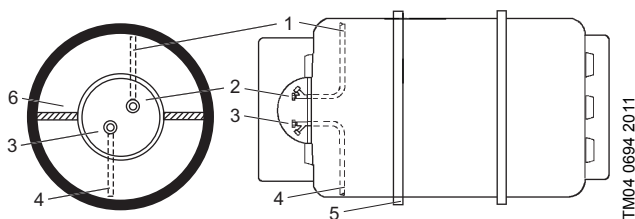


Fig. 2 Design of drum

TM04 0694 2011

Pos.	Description
1	Riser pipe for chlorine gas extraction
2	Valve for chlorine gas extraction
3	Valve for liquid chlorine extraction
4	Dip pipe for liquid chlorine extraction
5	Tyre
6	Mark for adjustment of drum

1.5.3 Basic rules



Warning

Handling of chlorine containers only by experienced personnel.

Observe safety regulations for chlorine containers.

- Treat containers carefully, do not throw!
- Protect containers from turning over or rolling away, e.g. with chains or clips.
- Protect containers from direct sunlight and temperatures over 50 °C.
- Transport containers only with valve protection nut and protective cap.



Warning

These rules apply for both full and empty containers, as empty containers still contain rests of chlorine and therefore are under pressure.

1.5.4 Valid regulations



Warning

Local laws and regulations for handling, transport and storage of chlorine must be observed.

In Germany, the following regulations apply:

- Regulations for accident prevention "Chlorination of water" with process instructions (GUV-V D5)
- Regulations concerning places of work (ArbStättV)
- Technical rules for pressurized gases (TRG 280, 310 and 330)
- Operation of baths (BGR 108)
- Chlorine gas dosing systems for water treatment (DIN 19606)
- Chlorine for water treatment (DIN 19607)

1.6 Chlorine rooms

Chlorine rooms are rooms, where a chlorine gas dosing system and/or chlorine containers are located. The chlorine in these rooms is under pressure.

1.6.1 Regulations for chlorine rooms

According to the German regulations for accident prevention "Chlorination of water", such rooms have to meet the following requirements:

- They should not have connections to other rooms, and must be separated gas-tight and fire-resistant.
- They must be at ground level, dry and air-conditioned. The recommended room temperature is 18-20 °C. It should be neither lower than 0 °C nor higher than 50 °C.
- Overpressure lines of dosing equipment must not end in the open air.
- Ventilation openings leading into the open air must be limited to 2 x 20 cm².
- Appropriate exhaust devices with downstream absorption systems must be installed.
- Chlorine gas must not get into lower-lying rooms, shafts, pits, canals or aspirating holes of ventilation systems.
- Chlorine rooms must be equipped with a water sprinkling system to precipitate the escaping chlorine gas.
 - The sprinkling system must have a run-off with air trap.
 - Operation must be possible manually from outside the chlorine rooms.
- A chlorine gas warning system must be installed
 - with optical and acoustical alarm device,
 - with connection to the water sprinkling system,
 - with a warning system that reactivates automatically after switch-off (e.g. for container exchange).
- The floor of a chlorine room must be even, the exit not below ground level and not higher than a possible loading ramp.

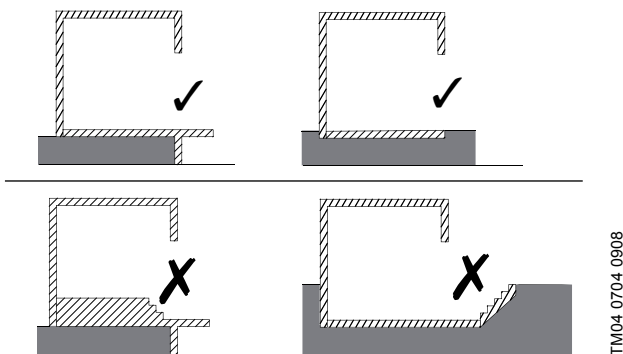


Fig. 3 Requirements of chlorine rooms

- Chlorine rooms must have a direct exit to the open air.
- Doors must be lockable, open outwards, and it must be possible to open the doors without a key from inside the room.
- Chlorine rooms must not be dedicated for the permanent stay of people.
- Eating, drinking, or storing food in chlorine rooms is prohibited.

1.6.2 Labelling of chlorine rooms

In Germany, according to DIN 4844, the following warning signs must be installed outside the entrance of a chlorine room:



Fig. 4 Warning sign and supplementary sign "Chlorination plant: Access only for instructed persons"

Inside a chlorine room, the mandatory sign "Use the gas mask" and the "Instruction sheet for first aid in case of chlorine gas intoxications" must be installed.



Fig. 5 Mandatory sign (DIN 4844)

TM04 0699 0908

TM04 0701 0908

2. Introduction

2.1 Correct usage

The VGA-113 dosing regulator is exclusively designed for dosing chlorine gas into a vacuum line.

2.2 Inappropriate usage

Operational safety is only guaranteed, if the product is used correctly. All operating methods conflicting with correct usage are not permitted, and lead to the expiry of all liability claims.



Warning

Unauthorised structural modifications to the product may result in serious damage to equipment and personal injury.

It is forbidden to open, modify, bridge, remove, bypass or disable components, especially safety equipment.

2.3 Qualification of the users

Based on his professional training and experience, the user must have a good knowledge of the operation of chlorine gas dosing systems. He must be so familiar with the relevant laws and regulations governing safety in the workplace and accident prevention, and with the recognised standards of good practice, that he is able to judge the safe working condition of a chlorine gas dosing system.

The user is responsible for operation and monitoring of the product at the installation site.

The responsibilities of the user:

- Read this manual before operating.
- Be trained by qualified Grundfos personnel in the operation of the product.
- Observe the relevant regulations governing safety in the workplace and accident prevention.
- Wear appropriate protective clothing in accordance with national regulations for the prevention of accidents when operating the system and handling chemicals.

2.4 Responsibilities of the operator

The operator of the product is responsible for the following:

- Ensure that this manual is kept clearly accessible in the immediate vicinity of the system for the entire service life.
- Meet the installation requirements specified by the manufacturer (environmental conditions, required water connections and fittings, electrical connection, protective pipe for dosing line if necessary, audible or optical warning device if necessary).
- Ensure that water lines and armatures are regularly checked, serviced and maintained.
- Obtain official approval for storing chemicals, if necessary.
- Train users in the operation of the system.
- Ensure that the regulations for the prevention of accidents are observed in the installation site.
- Provide all users and service personnel with protective clothing (e.g. face mask, gloves, protective apron) in accordance with the national regulations.

2.5 Maintenance and service personnel

The product may only be maintained and serviced by personnel authorised by Grundfos.

2.6 Type key VGA-113 dosing regulator

The type key serves for the identification of the product, not for configuration purposes.

Code	Example	VGA-113	-100	/M	O	-N
VGA	Vaccuperm Gas Advanced					
	Dosing flow					
25	1-25 g/h					
40	2-40 g/h					
100	5-100 g/h					
250	10-250 g/h					
500	25-500 g/h					
1000	50-1000 g/h					
2000	100-2000 g/h					
3000	150-3000 g/h					
4000	400-4000 g/h					
	Adjustment of the dosing flow					
M	Manual					
A	Automatic, 230-240 V, 50/60 Hz					
B	Automatic, 110-115 V, 50/60 Hz					
	Control					
0	Without					
1	4-20 mA					
2	Direct					
	Differential pressure regulator					
Y	Yes					
N	No					

2.7 Transport and storage

- Transport carefully, do not throw!
- Store in a dry and cool place.

2.8 Unpacking

Observe when unpacking:

- The delivery must be complete.
- No humidity and no foreign matters should get into gas-leading parts.
- Mount the components of the dosing system as soon as possible after unpacking.

3. Technical data

3.1 General technical data

Accuracy	± 4 % of upper limit
Permissible medium	Cl ₂
Setting range	1:20
Permissible vacuum regulator	VGA-111, VGA-146 (up to 4,000 g/h)
Flowmeter	According to the floater principle, ball in measuring glass, length of measuring glass 70 mm
Weight	Dosing regulator without servomotor: 0.9 kg Dosing regulator with servomotor: 3.1 kg
Vacuum line between dosing regulator and injector	PE hose 8/11

3.2 Dosing flow

1.5 - 25 g/h	0.07 - 1.3 lbs/day
2-40 g/h	0.1 - 2 lbs/day
5-100 g/h	0.2 - 5 lbs/day
10-250 g/h	0.5 - 14 lbs/day
25-500 g/h	1.5 - 26 lbs/day
50 - 1,000 g/h	2.5 - 50 lbs/day
100 - 2,000 g/h	5-100 lbs/day
150 - 3,000 g/h	10-150 lbs/day
400 - 4,000 g/h	30-220 lbs/day

3.3 Accessories

The following accessories are not included in the standard delivery:

- Hoses of different lengths
- Ammonia water for tightness check.

3.4 Dimensions

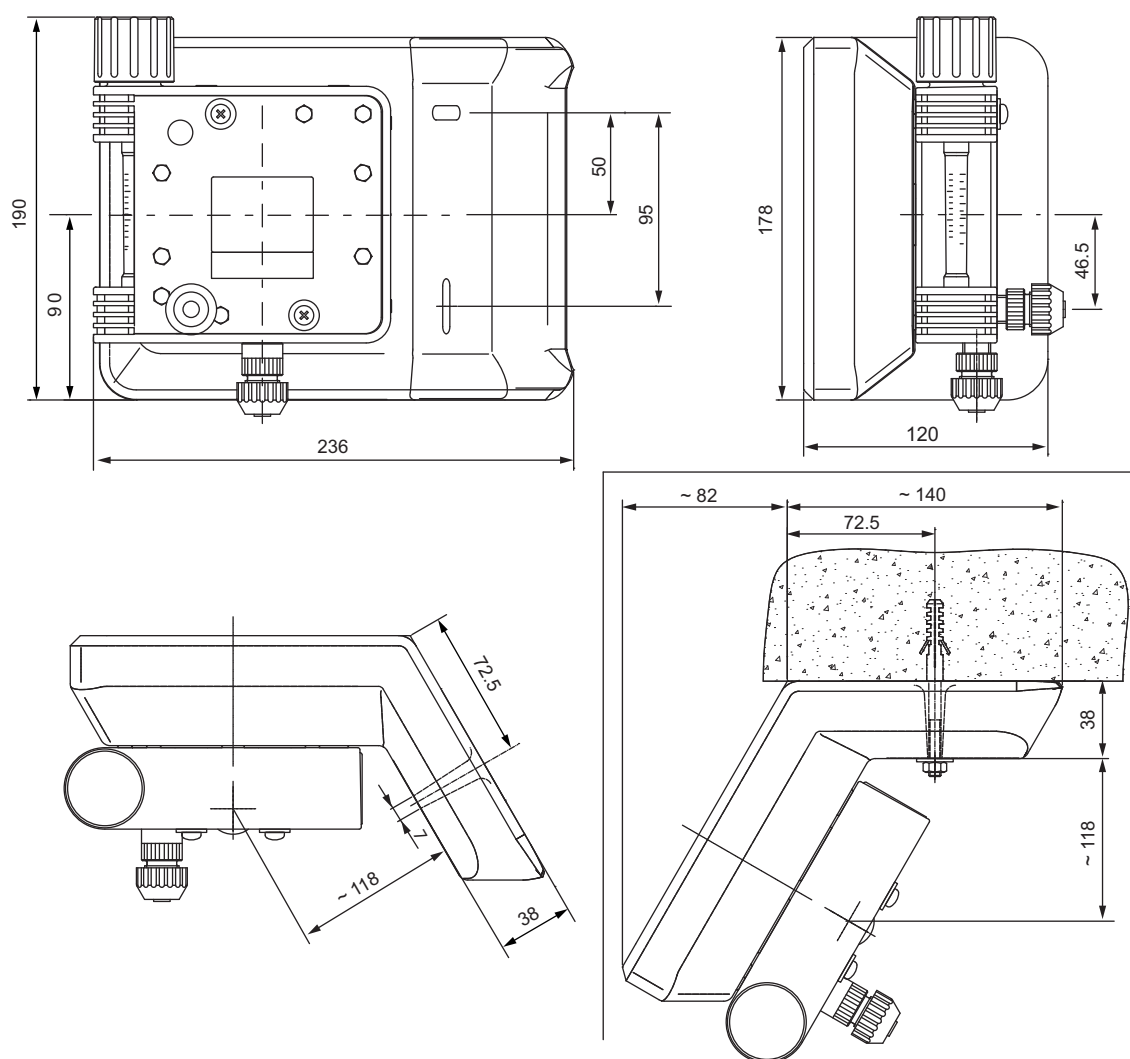


Fig. 6 VGA-113 dosing regulator without servomotor

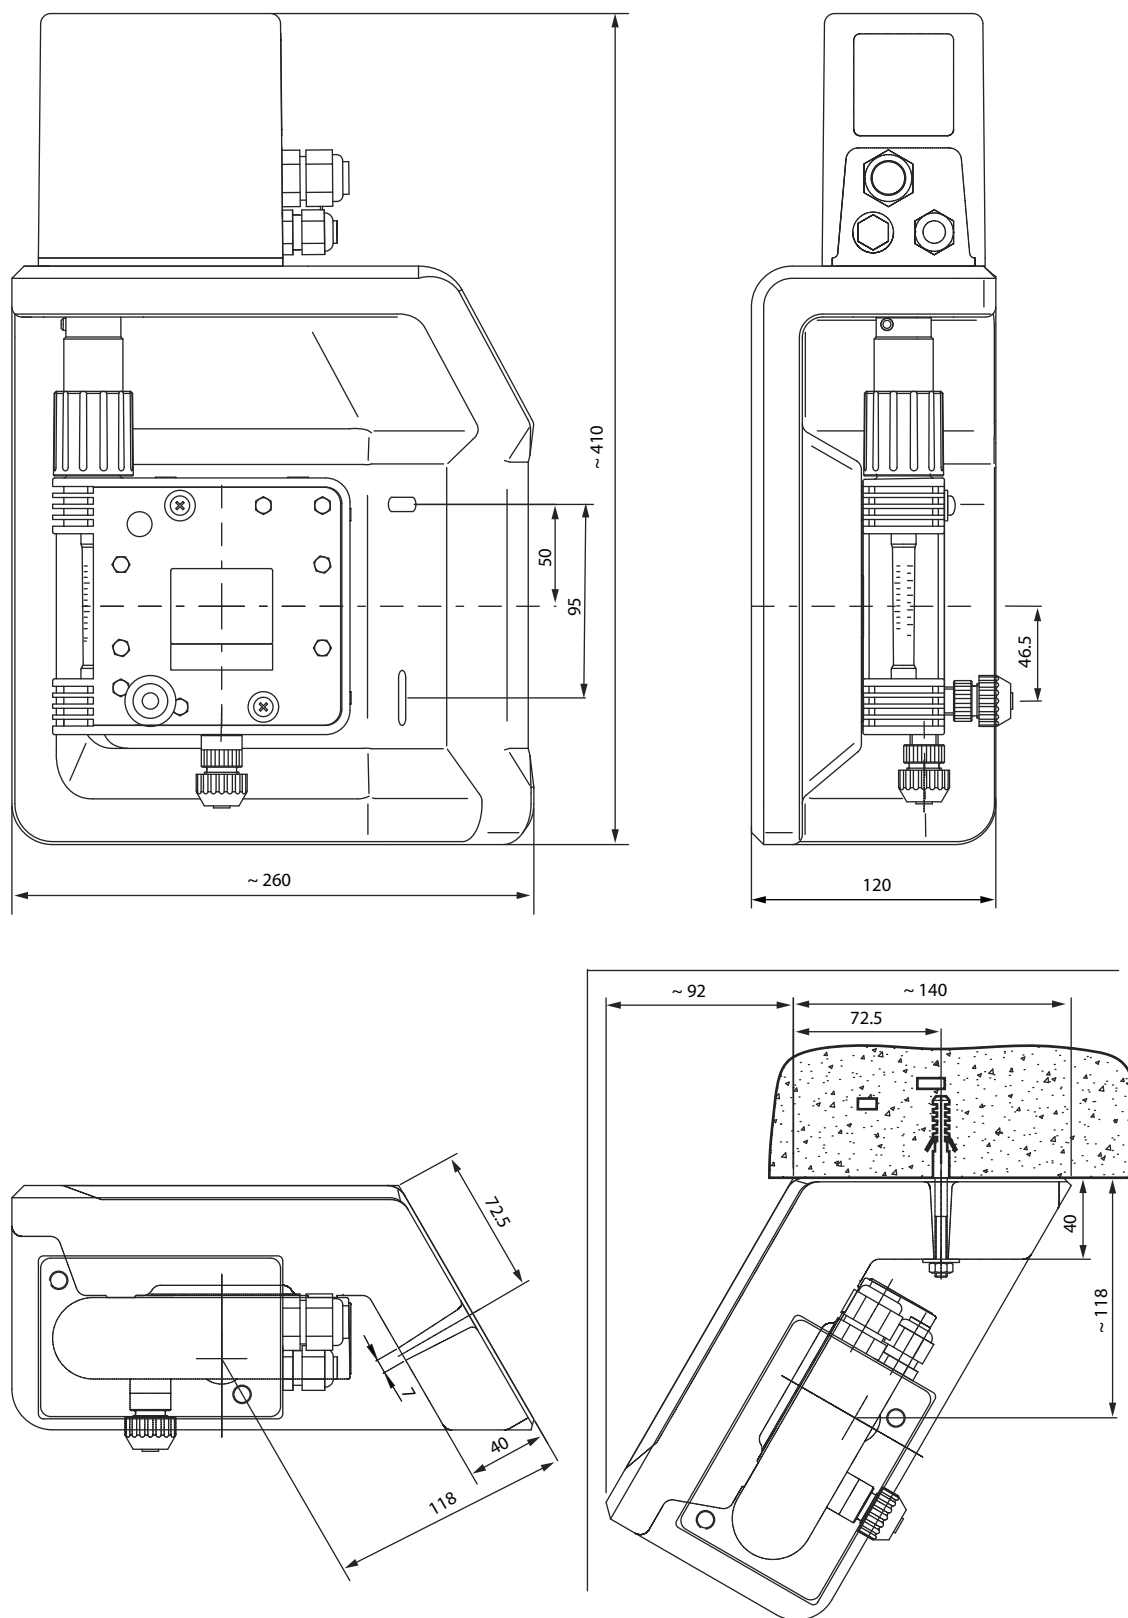


Fig. 7 VGA-113 dosing regulator with servomotor

3.5 Electrical data of servomotor

3.5.1 Servomotor with reversing potentiometer

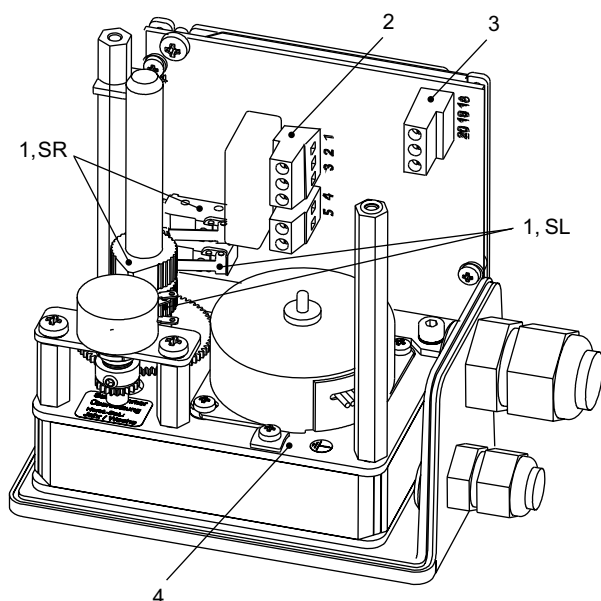


Fig. 8 Servomotor with reversing potentiometer

Pos.	Description
1	SR, limit switch cam min. SL, limit switch cam max.
2	Supply voltage input
3	Potentiometer input/output
4	Earth terminal

Mains voltage	220-240 V $\pm$ 10 %, 50/60 Hz $\pm$ 5 %, 100 % ED (Standard) 110-120 V $\pm$ 10 %, 50/60 Hz $\pm$ 5 %, 24 V AC $\pm$ 10 %, 50/60 Hz $\pm$ 5 %
Rated current	30 mA (at 230 V), 60 mA (at 115 V), 240 mA (at 24 V)
Load capacity of limit switch	2 A at 250 V
Power consumption	Approx. 2 VA
Control variant	Reversing potentiometer 1 k Ω Open/Close signal
Actuating time	90 s for 270 ° at 50 Hz 75 s for 270 ° at 60 Hz
Adjustment angle	Max. 270 °
Protection class	IP65
Permissible ambient temperature	-15 °C to 60 °C

TM04 0956 4009

3.5.2 Servomotor with analog control (4-20 mA / 0-20 mA)

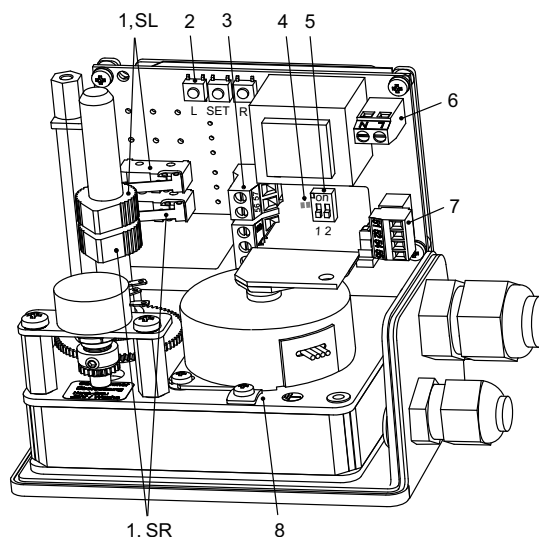


Fig. 9 Servomotor with analog control

Pos.	Description
1	SR, limit switch cam min. SL, limit switch cam max.
2	Programming buttons
3	Alarm output
4	LEDs
5	DIP switch
6	Mains connection terminals
7	Analog signal connection terminals
8	Earth terminal

Mains voltage	220-240 V $\pm$ 10 %, 50/60 Hz $\pm$ 5 %, 100 % ED (standard) 110-120 V $\pm$ 10 %, 50/60 Hz $\pm$ 5 %, 24 V AC $\pm$ 10 %, 50/60 Hz $\pm$ 5 %
Rated current	30 mA (at 230 V), 60 mA (at 115 V), 240 mA (at 24 V)
Load capacity of limit switch	2 A at 250 V
Power consumption	Approx. 2 VA
Control variant	Analog control Input/output
Signal input, signal output	4-20 mA (standard setting) 0-20 mA (switchable) 4 (0)-20 mA (DC) Load 250 Ω Overload protection 25 mA Protection against reverse polarity to -25 mA ESD protection, input filter Resolution: 10 bit
Setpoint input	4 (0)-20 mA Load max. 500 Ω Resolution: 10 bit
Actual value output	Output current: 4-20 mA Minimum voltage for open circuit 10 V
Carrying capacity of signal output	1000 Ω
Potentiometer	90 s for 270 ° at 50 Hz 75 s for 270 ° at 60 Hz
Actuating time	Max. 270 °
Adjustment angle	IP65
Protection class	Permissible ambient temperature 0 °C to 60 °C

TM04 0956 4009

3.6 Physical and chemical data of chlorine

Under normal conditions of pressure and temperature, chlorine is a yellowish green gas with a pungent odour, which exists as Cl_2 molecule.

It is not flammable, but can promote the flammability of metals, hydrocarbons, etc.

Atomic weight	35.457 u
Molecular weight Cl_2	70.941 u
Density (liquid)	1.57 g/cm ³ at -34.05 °C
Density (gas)	3.214 g/l at 0 °C, 1 bar
1 litre of liquid chlorine at 0 °C	is equivalent to 457 litres (0.457 m ³) of chlorine gas
1 kg of liquid chlorine at 0 °C	is equivalent to 311 litres (0.311 m ³) of chlorine gas
Specific gravity	2.486 (specific gravity of air: 1)
Boiling point	-34.05 °C (1 bar)
Melting point	-101.5 °C
Evaporation heat	269 kJ/kg (at 0 °C)
Heat conductivity	0.527 kJ/m ² h (liquid chlorine)
Degree of purity according to DIN 19607	99.5 %
TLV (Threshold Limit Value)	1.5 mg/m ³ (0.5 ppmv)

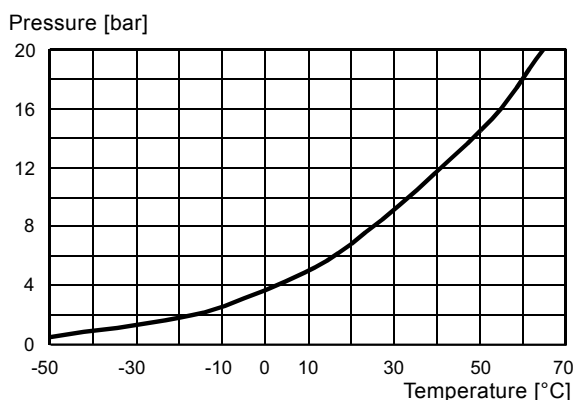


Fig. 10 Vapour pressure curve of chlorine

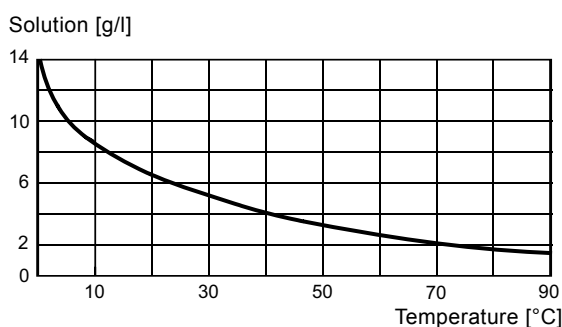


Fig. 11 Solubility of chlorine gas in water

4. Design and function

4.1 Description of the device

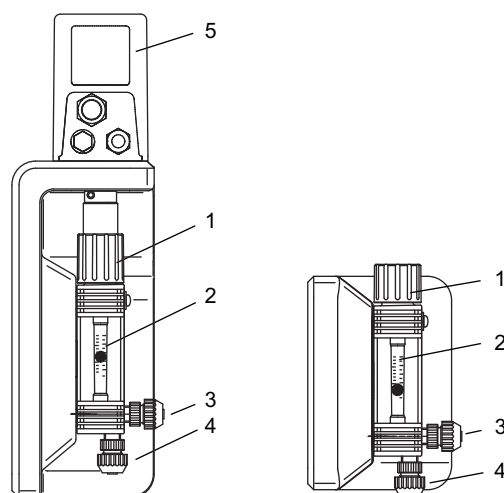


Fig. 12 Dosing regulator with and without servomotor

Pos.	Description
1	Adjustment knob for setting the dosing flow
2	Measuring glass for indication of the dosing flow
3	Connection for the vacuum line (from the vacuum regulator)
4	Connection for the vacuum line (to the injector)
5	Servomotor (option)

The rate valve is not a perfectly closing shut-off valve. Do not try to stop the chlorine gas dosing system by closing the rate valve!

Caution

Switching off the chlorine gas dosing system, see section [7.5.3 Switching off while the system is running](#)

4.2 Functional principle

4.2.1 Dosing regulator

The dosing regulator regulates the chlorine gas flow with a valve. The flow is read at the top of the ball in the measuring glass.

4.2.2 Vacuum chlorine gas dosing system

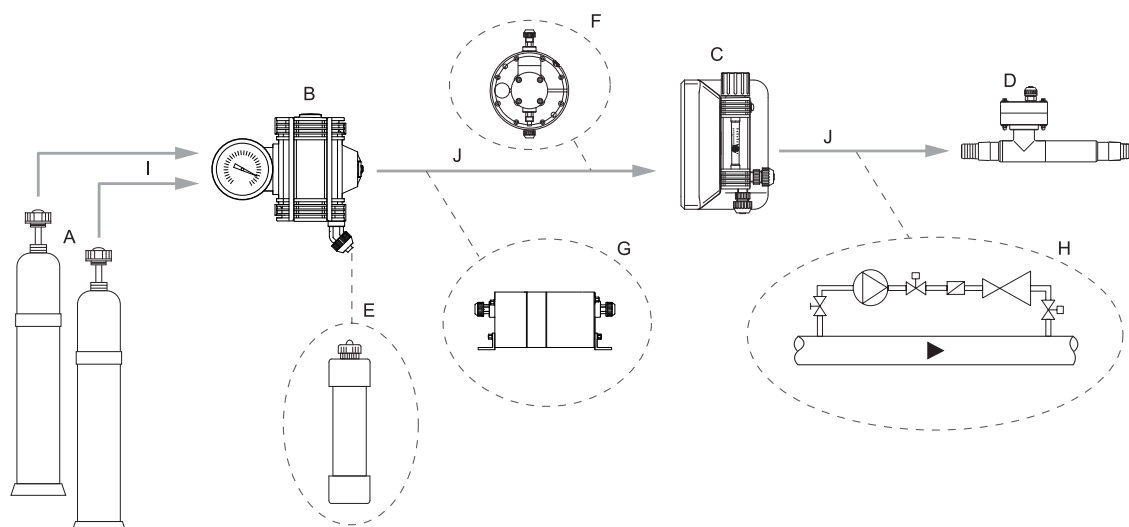


Fig. 13 Principle of a vacuum chlorine gas dosing system

Pos.	Description
A	Chlorine cylinder
B	Vacuum regulator
C	Dosing regulator
D	Injector
E	Adsorption filter (option)
F	Safety valve (option)
G	Change-over device (option)
H	Water apparatus (option)
I	Chlorine gas pressure line
J	Chlorine gas vacuum line

Functioning of a vacuum chlorine gas dosing system

Handling, transport and storage of chlorine for the disinfection of drinking and pool water are a challenge for plant engineers. This is the reason why the vacuum principle has been used in dosing systems for a long time. The pressure of the chlorine gas is reduced to a vacuum.

This method prevents escape of chlorine gas. In the event of a pipe burst no chlorine gas can escape, only ambient air is drawn in.

Vacuum chlorine gas dosing systems are composed of three principal components.

Vacuum regulator (B)

The vacuum regulator is a pressure reducing valve, which reduces the overpressure from the chlorine tank side to the negative pressure on the vacuum side. The valve opens, when a sufficient vacuum has built up on the outlet side. Vacuum regulators with pressure gauge and liquid trap are available for more safety.

Dosing regulator (C)

The chlorine gas flow is adjusted with the dosing regulator. This can be effected manually or automatically via motor control.

Injector (D)

Injectors have the task to bring chlorine gas into the water flow. They operate according to the principle of water jet pumps. The injector body comprises a nozzle with a successional diffuser.

Between the nozzle and the diffuser there is a narrow annular gap, where chlorine gas is sucked out of the dosing line through the injector head. A diaphragm non-return valve at the end of the vacuum line prevents the ingress of water into the vacuum line.

Differential pressure regulator (I)

Regulates the difference of the pressures before and after the rate valve to a constant value. Adjusted dosing flow stays constant even when the injector vacuum varies.

5. Assembly and installation

5.1 Selection of vacuum lines



Warning
Observe section 1. [Safety instructions](#).

The vacuum needed for the transport of chlorine gas is built up by the injector, and maintained by the vacuum lines. Rigid PVC pipes or flexible PE hoses are used as vacuum lines.

The following tables show the recommended diameter of vacuum lines, depending on the line length and dosing quantity.

5.1.1 Vacuum lines between vacuum regulator and dosing regulator

Max. length [m] of the vacuum lines between vacuum regulator and dosing regulator *	Dosing quantity [g/h]						
	40	100	250	500	1000	2000	4000
0	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10
10	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10
20	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15
30	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15
40	DN 8	DN 8	DN 8	DN 8	DN 8	DN 15	DN 15
50	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15	DN 15
75	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15	DN 15
100	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15	DN 20

* For the calculation, a pressure loss of $p = 12.5$ mbar in the vacuum line was assumed.

5.1.2 Vacuum lines between dosing regulator and injector

Max. length [m] of the vacuum lines between dosing regulator and injector **	Dosing quantity [g/h]						
	40	100	250	500	1000	2000	4000
0	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8
10	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8
20	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10
30	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10
40	DN 8	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10
50	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15
75	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15
100	DN 8	DN 8	DN 8	DN 8	DN 8	DN 10	DN 15

** For the calculation, a pressure loss of $p = 50$ mbar in the vacuum line was assumed.

5.2 Connecting the dosing regulator



Warning

Before connecting, make sure that the valves of all chlorine containers are closed.

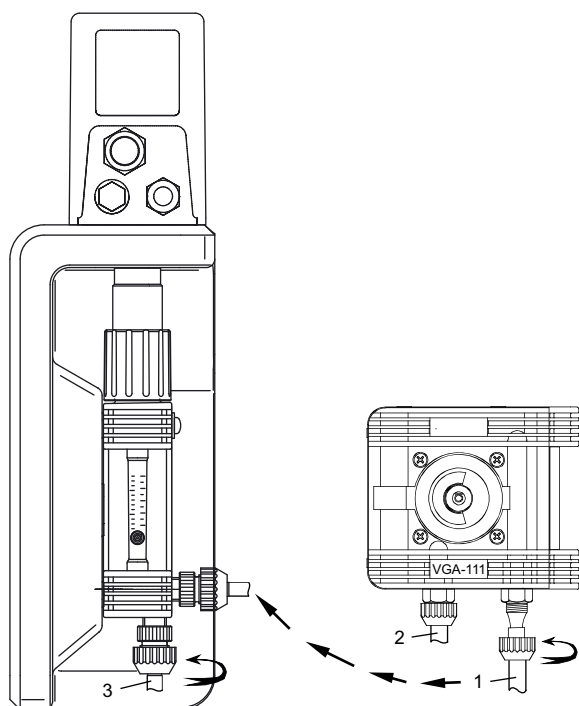


Fig. 14 Vacuum connections

Pos.	Description
1	Vacuum line to the dosing regulator
2	Overpressure line
3	Vacuum line to the injector

For details on vacuum lines, see section [5.1 Selection of vacuum lines](#)

Caution

Only tighten the union nuts of the vacuum connections by hand. Do not use any tools. Danger of damages!

Make sure that the vacuum connections are clean and dry.

The dosing regulator can be installed outside the chlorine room.

1. Connect the dosing regulator to the line from the vacuum regulator (1).
2. Connect the line (3) from the dosing regulator, or from the optional differential pressure regulator, to the injector.

5.3 Connecting an external controller to a servomotor with analog control

5.3.1 Warnings and notes for electrical connection

Warning

Disconnect servomotor from mains before removing the cover.

Observe the local safety regulations.

Protect unused screwings, cable connections and plugs against corrosion and moisture with suitable caps.

To ensure electromagnetic compatibility (EMC) signal lines must be shielded, and guided in different cable channels than mains cables.

Caution

The shield must be connected to PE or ground on the side of the counterpart.

Before connecting the mains cable check, if the mains voltage indicated on the type plate corresponds to the local mains voltage. Wrong voltage can lead to damages of the servomotor.

Caution

Depending on the optional components selected, connect mains plug to mains directly or via the terminal box.

Note

5.3.2 Circuit diagram servomotor with analog control

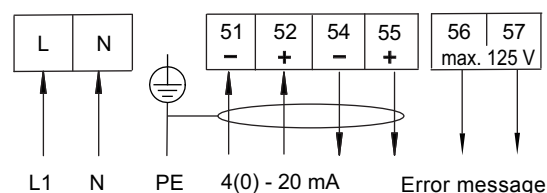


Fig. 15 Servomotor with analog control

5.3.3 Connecting the external controller Conex® DIA-2Q

Warning

See section [5.3.1 Warnings and notes for electrical connection](#) for warnings and notes relating to electrical connection.

Connect the terminals of the servomotor according to the terminal connection diagram of the controller.

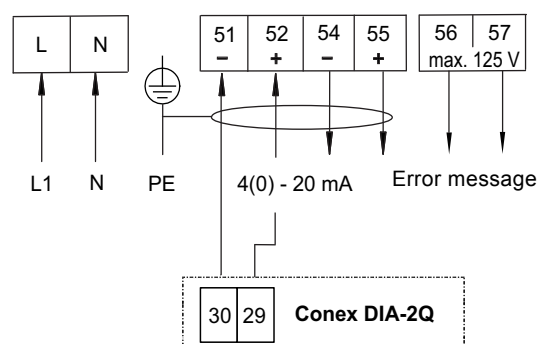


Fig. 16 Terminal connection diagram Conex® DIA-2Q

5.3.4 Connecting the external controller Conex® DIS-2Q



Warning

See section [5.3.1 Warnings and notes for electrical connection](#) for warnings and notes relating to electrical connection.

1. Unscrew the screws of the servomotor hood, and remove the hood.
2. Establish electrical connections according to the diagram shown in fig. 17.
 - Connect terminals 51 and 52 and, if required, terminals 54 and 55, in accordance with the diagram.
 - Connect terminals 56 and 57 in accordance with requirements; maximum voltage 125 V.
 - For low voltages (setpoint/actual value signal lines) use separate shielded lines with a minimum cross-section of 0.5 mm² and a maximum length of 1000 m.
 - The screen must be connected on one side to the enclosure earth (earth terminal).



Warning

The internal wiring of the servomotor must never be modified.

3. Close the hood again and tighten the hood screws.

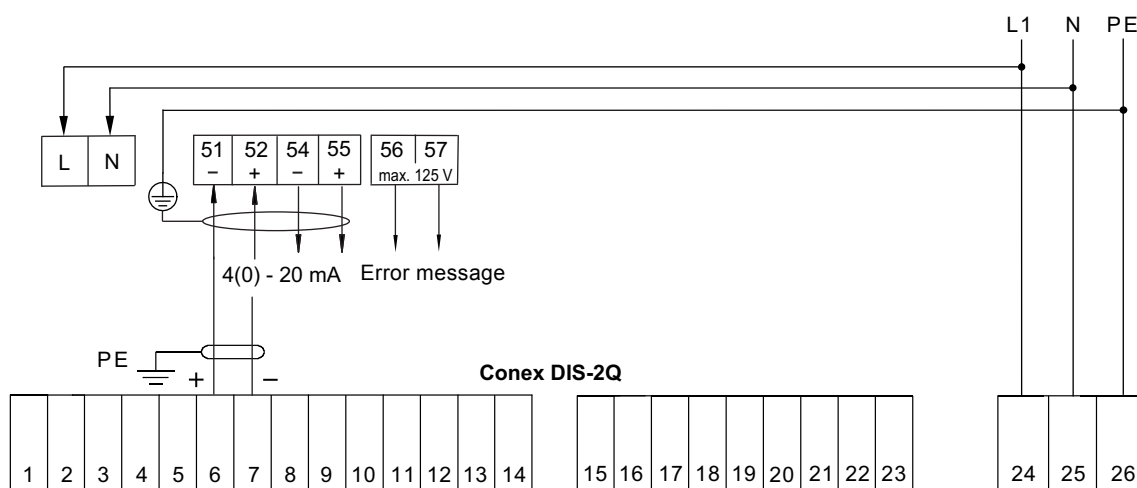


Fig. 17 Terminal connection diagram Conex® DIS-2Q

Pos.	Description
L	Phase
N	Neutral
Supply voltage input	
	PE (earth)
51	Signal input (-)
52	Signal input (+)
54	Signal output (-)
55	Signal output (+)
56	Collective error message
57	

TM04 0952 4009

5.4 Connecting an external controller to a servomotor with reversing potentiometer

5.4.1 Terminal connection diagram servomotor with reversing potentiometer

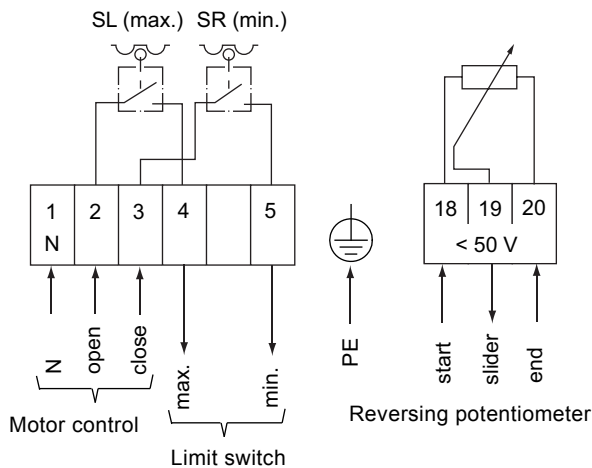


Fig. 18 Servomotor with reversing potentiometer

Pos.	Description
1 N	Neutral
2	Phase Supply voltage input (direction open/max.)
3	Phase Supply voltage input (direction close/min.)
4	Supply voltage output (final position max.)
5	Supply voltage output (final position min.)
PE	PE (earth)
18	Start
19	Slider
20	End

5.4.2 Connecting the external controller Conex® DIS-2Q



Warning

See section 5.3.1 Warnings and notes for electrical connection for warnings and notes relating to electrical connection.

- Unscrew the screws of the servomotor hood, and remove the hood.
- Establish electrical connections according to the diagram shown in fig. 19.
 - Connect terminals 18, 19 and 20 in accordance with requirements; voltage < 50 V.
- Determine the direction of rotation and correct it, if necessary.

Determining the direction of rotation

According to the internal wiring, the direction of rotation (looking through the drive towards the output shaft) and limit switches are assigned as follows:

- If mains voltage is present at terminal 2, the output shaft rotates counter-clockwise (direction open/max.).
 - This direction of rotation is restricted by the upper switch (max.). If the switch is activated, the mains voltage is present at terminal 4.
- If mains voltage is present at terminal 3, the output shaft rotates clockwise (direction close/min.).
 - This direction of rotation is restricted by the lower switch (min.). If the switch is activated, the mains voltage is present at terminal 5.
- If the drive rotates in the opposite direction to the control commands, swap over the connections of terminals 2 and 3.



Warning

The internal wiring of the servomotor must never be modified.

- Close the hood again and tighten the hood screws.

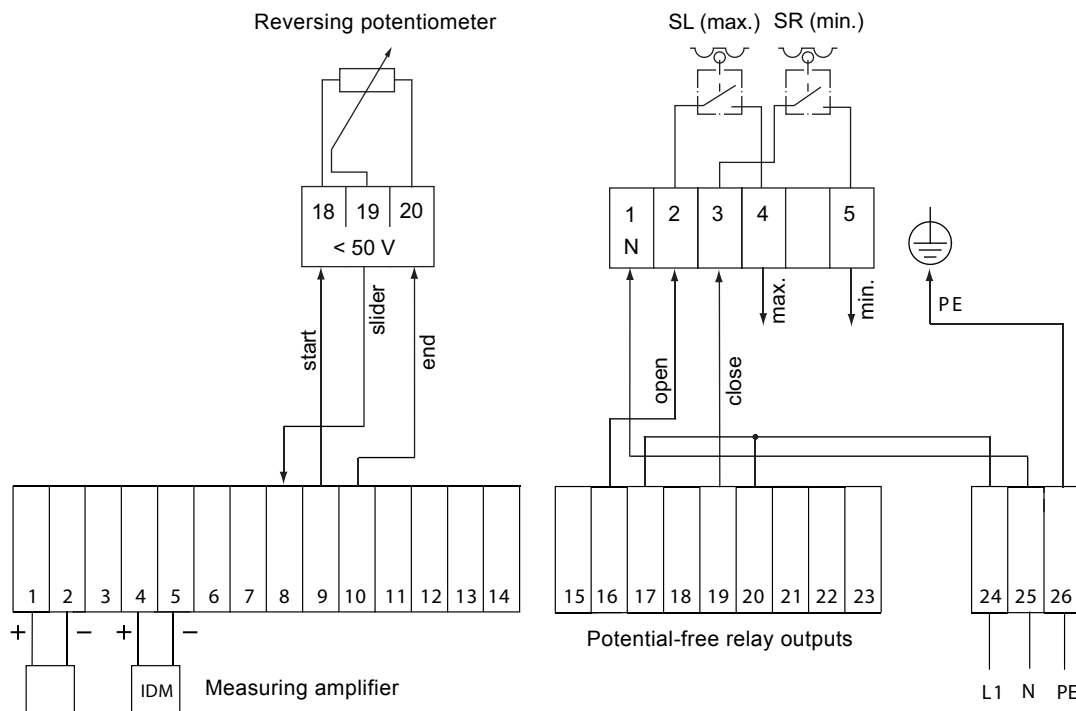


Fig. 19 Terminal connection diagram Conex® DIS-2Q

5.5 Installation example

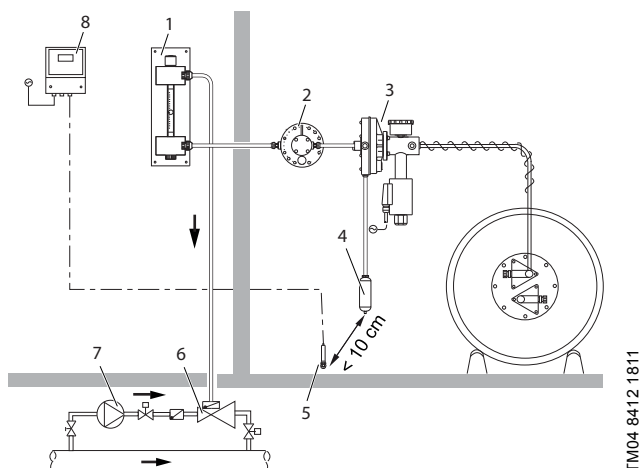


Fig. 20 Dosing system with one drum

Pos.	Description
1	Dosing regulator
2	Safety valve
3	Vacuum regulator with liquid trap
4	Chlorine gas adsorption filter
5	Gas sensor
6	Injector with non-return valve
7	Water apparatus
8	Gas warning device

6. Startup

Warning



The chlorine gas dosing system can only be started after its good condition has been checked by an expert, see [2.3 Qualification of the users](#), and especially gas-leading parts have been checked for their tightness.

Check the tightness of the entire system before start-up. Check the tightness of the valves using ammonia water (small plastic bottle). White mist indicates leakages.

6.1 Checking the tightness

Due to the heavy corrosiveness of humid chlorine gas, leakages increase quickly. Therefore, even the smallest leakage must be eliminated immediately.

Warning



Check the tightness only if the entire system is ready for start-up.

Danger of chlorine gas escape!

6.1.1 Checking the chlorine solution lines and the injector

Observe the installation and operating instructions of the injector.

6.1.2 Checking the vacuum lines

Vacuum lines are all lines between vacuum regulator and injector.

1. Close all chlorine container valves.
2. Close the rate valve.
3. Open the shut-off valve at the injection unit.
4. Open the motive water valve.
5. Switch on the booster pump.
6. Open the rate valve.
 - If the floater shows a gas flow, or the vacuummeter indicates more than -9 m water column, the vacuum lines are leaky.
7. Close the rate valve.
8. Switch off the booster pump.
9. Close the motive water valve.
10. Close the shut-off valve at the injection unit.
11. Check the vacuum lines and connections. Re-tighten them carefully, if necessary.
12. Repeat the tightness check.
 - If the floater shows no gas flow, and the vacuummeter indicates -9 m water column or less, the vacuum lines are tight.

Reasons for insufficient **operating vacuum**:

Note

Injector too small, defective, or blocked.

Booster pump too small, or defective.

6.1.3 Checking the gas pressure lines

Gas pressure lines are all lines leading from the chlorine containers to the vacuum regulator.

1. If the system is equipped with a nitrogen rinsing device, check the tightness roughly with nitrogen.
2. Detailed checking is made with ammonia.

Checking the tightness with nitrogen

1. Close all chlorine container valves.
2. Open container connection valves and all shut-off valves up to the chlorine gas dosing system.
3. Open the connection valve of the nitrogen cylinder.
4. Slowly open the valve of the nitrogen cylinder, until the lines have a pressure of about 10 bar (read at the pressure gauge of the vacuum regulator).



Warning

Maximum nitrogen pressure 16 bar.

Danger of damages and leakages when exceeded.

5. Apply soap water to all components under pressure.
 - If bubbles form and/or pressure drops at the pressure gauge, the pressure lines are leaky.
6. Depressurise the system.
7. Eliminate the leakage.
8. Repeat the tightness check.
9. If no bubbles form, and the pressure at the pressure gauge does not drop significantly within one hour, the pressure lines are tight.

Checking the tightness with ammonia



Warning

Ammonia is irritating to eyes, respiratory system and skin.

Ammonia is very toxic for water organisms.

When checking the tightness with ammonia, wear tight protective goggles, gloves and clothes.



TM04 0699 0908

Fig. 21 Hazard notes for ammonia

Even very small leakages become evident with ammonia vapour, which reacts with chlorine gas forming white mist.



Warning

Liquid ammonia must not come in contact with lines or parts of the system, because it is very corrosive.

Remove drops immediately with a dry cloth.

Checking the pressure connections (after change of container)

1. Open the container valve and immediately close it again.
2. Open the flexible plastic bottle filled with ammonia water.
3. Slightly press the bottle in a pumping manner, allowing the ammonia mist to rise up. Slowly pass the open ammonia bottle along gas-leading parts.
4. If white mist forms, the pressure connection is leaky.

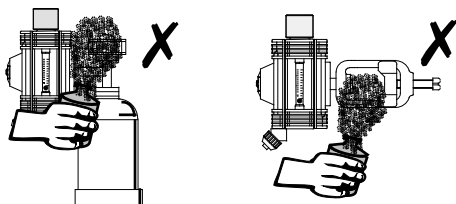


Fig. 22 Ammonia and chlorine gas form white mist

5. Depressurise the system.
6. Eliminate the leakage.
7. Repeat the tightness check.
8. If no white mist forms, the pressure connection is tight.

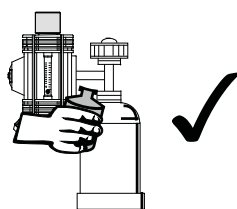


Fig. 23 Pressure connection is tight

TM04 0710 0908

Checking the inlet valve

1. Loosen the union nut at the overpressure connection of the vacuum regulator, and remove the overpressure line.
2. Inlet valve has to be closed (No vacuum).
3. Open the chlorine container valve.
4. Open the flexible plastic bottle filled with ammonia water.
5. Slightly press the bottle in a pumping manner, allowing the ammonia mist to rise up. Slowly pass the open ammonia bottle along gas-leading parts.
6. If white mist forms, the inlet valve is leaky.
7. Depressurise the system via injector.
8. Check the inlet valve and repair it.
9. Repeat the tightness check.
10. If no white mist forms, the inlet valve is tight.

6.2 Chlorine extraction

6.2.1 Connecting the chlorine container

Chlorine containers must be stored at least for 8 hours in the container room, so that the content can adapt to the ambient temperature.



Warning

Chlorine containers must not have a higher temperature than other parts of the system. Danger of liquefaction and escape of chlorine!

1. Turn chlorine drums on their support, until the dip pipe and the riser pipe are placed vertically (observe the markings on the drum).
2. Protect chlorine containers from turning over or rolling away.
3. Dry the piping and the extraction system with dry nitrogen or dry air.
4. No foreign matter must get into the system.
5. Provide the pressure connection with a new gasket.
6. Connect the chlorine container. When using drums, observe that the lower valve is normally intended for the extraction of liquid chlorine.
7. Slowly open the container valve.

6.2.2 Container valves

Operate the valves at the chlorine containers only manually without force. Close the valves of full or empty chlorine containers with closing nut (marked chlorine or Cl_2) and gasket.



Warning

Do not open container valves using force!

Stuck valves

Stuck valves can be loosened by wrapping a cloth with warm water around the valve. If this is not possible, return the container to the manufacturer.

- Never use an open flame to heat up the valve!
- Never use wrench lengthening!

6.2.3 Checking the tightness

Before start-up, check the tightness of the entire system, see section [6.1 Checking the tightness](#).

TM04 0711 0908

6.2.4 Chlorine extraction

Do not completely evacuate the chlorine container.

Caution A residual pressure of approx. 2 bar should remain in the container for the following reasons:

The residual pressure in the container will avoid:

- the penetration of humidity, which will cause corrosion
- the withdrawal of chlorine gas pollutants, which will cause clogging of the pressure reducing valve in the long run.

Chlorine gas extraction

At 15 °C about 1 % of the content of a container can be extracted per hour.

Caution When extracting more, there is danger of formation of ice on containers and piping, which will cause malfunction.

The table shows the maximum extraction quantity depending on the used container size.

Container	Container size [kg]	Extraction quantity [g/h]
Cylinder	50	max. 500
	65	max. 650
Drum	500	max. 5000
	1000	max. 10000

In case of higher chlorine requirement, several chlorine containers of the same temperature have to be connected with header lines.

6.2.5 After chlorine extraction

Caution In order to avoid the penetration of humidity causing corrosion, close the connecting lines directly after chlorine extraction.

1. If the container is emptied, the container valve must be closed, in order to avoid the withdrawal of pollutants or penetration of humidity.
2. Disconnect the container from the system.
3. Mount the protective nut on the valve.
4. Mount the protective cap.

7. Operation

The dosing flow is adjusted at the rate valve of the dosing regulator. In versions with optional servomotor the dosing flow can also be adjusted via an external controller with servomotor.

7.1 Switching on the chlorine gas dosing system

1. Close the rate valve at the dosing regulator.
2. Open the shut-off valve at the injection unit.
3. Open the motive water valves.
4. Open the motive water supply of the injector.
5. Open the chlorine container valve.
6. Slowly open the rate valve of the dosing regulator using the adjustment knob (1), until the ball in the measuring glass indicates the desired gas flow.

Note If the dosing flow is adjusted via an external controller, no adjustment can be made at the dosing regulator.

See also the manual of the external controller.

7.2 Setting the dosing flow

To increase the dosing flow, turn the adjustment knob very slowly counter-clockwise.

Caution If the maximum dosing flow is reached, don't turn the adjustment knob any further, because there is no locking.

To reduce the dosing flow, turn the adjustment knob very slowly clockwise.

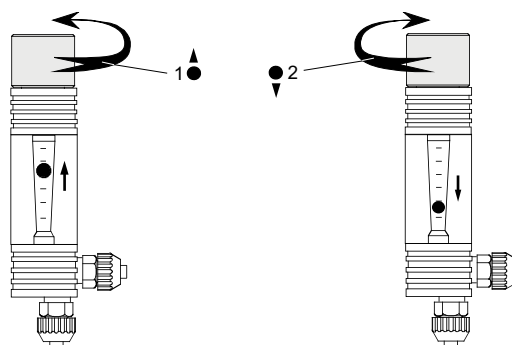


Fig. 24 Setting the dosing flow

Pos.	Description
1	Turning the adjustment knob counter-clockwise will increase the dosing flow.
2	Turning the adjustment knob clockwise will reduce the dosing flow.

7.3 Reading the dosing flow

The dosing flow is read at the top of the ball in the measuring glass.

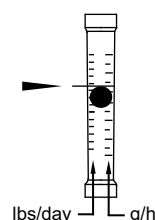


Fig. 25 Reading the dosing flow

Note The scale of the measuring glass is adjusted to a gas temperature of 20 °C.

In case of extremely different temperatures the dosing flow may differ from the value being shown.

TM04 0754 3911

TM04 0717 0908

7.4 Servomotor

7.4.1 Connecting the servomotor to the rate valve

1. Move back the retention pin (2).
2. The coupling (1) slides down.
3. Turn the adjustment knob (3), until the coupling snaps in.
The servomotor is connected.

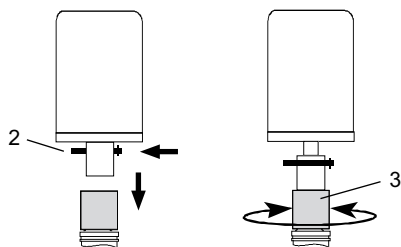


Fig. 26 Connecting the servomotor

7.4.2 Disconnecting the servomotor from the rate valve

1. Push the coupling (1) upwards.
2. Move the retention pin (2) through the coupling, until it cannot move down any longer.
3. The servomotor is disconnected from the rate valve.
4. Now the dosing flow can be adjusted manually.

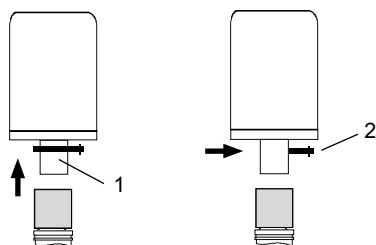


Fig. 27 Disconnecting the servomotor

7.5 Switching off the chlorine gas dosing system

7.5.1 Emergency stop in case of gas escape



Warning

If gas escapes, immediately leave the room and put on protective equipment.

Start counter measures according to local safety regulations.

7.5.2 Emergency stop in case of small leakages

1. Put on protective equipment.
2. Immediately close the chlorine container valve.
3. Let the system run until all parts are evacuated.
4. Switch off the system as described in the following.



Warning

Repairs of components of the system are to be carried out only by authorised persons.

7.5.3 Switching off while the system is running

1. Close the chlorine container valve.
2. Let the system run, until the measuring glass of the dosing regulator shows no more gas flow.
3. Close the rate valve at the dosing regulator.
4. Turn off the motive water supply.
5. Close the motive water valves.
6. Close the shut-off valves before and after the injector.

7.6 Changing the chlorine container while the system is running

The red mark (empty indication) at the vacuum regulator shows that the minimum pressure of the chlorine container is reached. The container must be replaced.



Warning

Put on the required protective equipment.

1. Close the chlorine container valve.
2. Let the system run, until the measuring glass of the dosing regulator shows no more gas flow.
3. Close the rate valve at the dosing regulator.
4. Turn off the motive water supply.
5. Close the motive water valves.
6. Close the shut-off valves before and after the injector.
7. Unscrew the vacuum regulator from the connection of the container.
– Place the regulator into the wall support, if existing.
8. Screw the protective cap onto the empty chlorine container; put the empty containers away, and protect them from rolling away or turning over.
9. Position the new chlorine container, and fix it correctly.
10. Remove the protective cap from the new chlorine container.
– All connections must be absolutely clean and dry.



Warning

Replace the gaskets at any change of chlorine container.

Never use the vacuum regulator without filter!

11. Insert the gasket at the pressure connection of the vacuum regulator.
– Replace the filter, if necessary.
12. Screw the vacuum regulator onto the chlorine container.



Caution

Do not align the regulator by turning the housing!
If necessary, hold up with a 13-mm fork wrench.



Warning

Check the tightness before re-starting the system.

13. Check the tightness as described in section [6.1 Checking the tightness](#).
14. Re-start the system.

8. Maintenance

Intervals for cleaning and maintenance

- At least every 12 months.
- Before every start-up.
- In case of malfunction.



Warning

Maintenance has to be carried out only by authorised and qualified personnel.

Before starting cleaning and maintenance work, switch off the entire system.

Danger of chlorine gas escape!



Warning

Make sure that the system cannot be started accidentally while working at it.



Warning

Before re-starting, check the tightness.
Danger of chlorine gas escape!

9. Fault finding

Fault	Cause	Remedy
1. Maximum dosing flow is not reached.	a) Insufficient injector vacuum.	Check the injector. Repair it, if necessary. Observe the manual of the injector.
		Check the motive water pump. Repair it, if necessary.
		Check the dirt trap before the injector. Clean it, if necessary.
	b) Leakage in the vacuum line between dosing regulator and injector.	Eliminate the leakage.
	c) The vacuum line between dosing regulator and injector is too long.	For details on vacuum lines, see section 5.1.2 Vacuum lines between dosing regulator and injector
	d) Soiled vacuum line.	Replace the vacuum line.
	e) Servomotor does not reach maximum dosing capacity.	Readjust the servomotor and/or the external controller.
	f) Soiled filter at the pressure connection of the dosing regulator.	Call the service.
	g) Closed chlorine container valve.	Open the chlorine container valve.
2. Leaky pressure connection.	h) Empty chlorine container.	Replace empty chlorine container by a full one.
	i) Adjusting spindle of the dosing regulator not suitable (diameter too small).	Call the service.
	a) Gasket at the pressure connection damaged.	Replace the gasket.
	b) Sealing surfaces soiled with residues of old gaskets.	Clean the sealing surfaces.
	c) Sealing surface at the chlorine container damaged.	Use another chlorine container.
3. Gas escapes at the overpressure line.	d) Pressure connection loose.	Tighten the pressure connection.
	e) Sealing surface at the pressure connection of the vacuum regulator damaged.	Call the service.
4. Despite correctly displayed dosing capacity, the desired chlorine solution concentration is not reached.	a) Re-liquefied gas gets into the inlet valve.	Reduce the extraction amount, ensure a correct temperature sequence.
	b) Inlet valve soiled or damaged.	Call the service.
5. The ball in the measuring glass is caught.	a) Measuring glass or ball soiled.	Call the service.
6. Formation of ice on the chlorine container.	a) Extraction quantity is set too high. If more than 1 % of the content is extracted per hour, there is danger of formation of ice at the container.	Use a dosing system with several chlorine containers. Call the service.
	b) Chlorine gas dosing system too small.	Use a bigger chlorine gas dosing system.
7. Water in the measuring glass.	a) Diaphragm non-return valve is defective.	Call the service.
8. Servomotor does not run.	a) Servomotor is switched to manual operation.	Switch servomotor to automatic operation.
9. Servomotor does not regulate within the entire capacity range.	a) Servomotor and/or controller adjusted incorrectly.	Call the service.
10. Servomotor rotates in the wrong direction.		
11. Vacuum varies despite constant operating conditions.	a) Spring in the differential pressure regulator soiled or damaged.	
12. The dosing capacity varies despite constant operating conditions.	a) Diaphragm in the differential pressure regulator soiled or damaged.	

10. Disposal

This product and all its associated parts must be disposed of in an environmentally friendly manner. Use appropriate waste collection services. If this is not possible, contact the nearest Grundfos company or service workshop.

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the products VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, to which the declaration below relates, are in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, auf die sich diese Erklärung beziehen, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen.

FR: Déclaration de conformité UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des États membres UE relatives aux normes énoncées ci-dessous.

PL: Deklaracja zgodności UE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze produkty VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, których deklaracja niniejsza dotyczy, są zgodne z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich.

RO: Declarația de conformitate UE

Noi Grundfos declarăm pe propria răspundere că produsele VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, la care se referă această declarație, sunt în conformitate cu Directivele de Consiliu specificate mai jos privind armonizarea legilor statelor membre UE.

RU: Декларация о соответствии нормам ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, к которым относится нижеприведенная декларация, соответствуют нижеприведенным Директивам Совета Евросоюза о тождественности законов стран-членов ЕС.

TR: AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirim konusu olan VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148 ürünlerinin, AB Üye ülkelerinin direktiflerinin yakınlştırılmasıyla ilgili durumun aşağıdaki Konsey Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğun bize ait olduğunu beyan ederiz.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, na které se toto prohlášení vztahuje, jsou v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství.

ES: Declaración de conformidad de la UE

Grundfos declara, bajo su exclusiva responsabilidad, que los productos VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148 a los que hace referencia la siguiente declaración cumplen lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la UE.

HU: EU megfelelősségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148 termékek, amelyre az alábbi nyilatkozat vonatkozik, megfelelnek az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak.

PT: Declaração de conformidade UE

A Grundfos declara sob sua única responsabilidade que os produtos VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, aos quais diz respeito a declaração abaixo, estão em conformidade com as Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da UE.

RS: Deklaracija o usklađenosti EU

Mi, kompanija Grundfos, izjavljujemo pod punom vlastitom odgovornošću da je proizvod VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148, na koji se odnosi deklaracija ispod, u skladu sa dole prikazanim direktivama Saveta za usklađivanje zakona država članica EU.

SK: ES vyhlásenie o zhode

My, spoločnosť Grundfos, vyhlasujeme na svoju plnú zodpovednosť, že produkty VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148 na ktoré sa vyhlásenie uvedené nižšie vzťahuje, sú v súlade s ustanoveniami nižšie uvedených smerníc Rady pre zblíženie právnych predpisov členských štátov EÚ.

KZ: Сәйкестік жөніндегі ЕО декларациясы


Біз, Grundfos, ЕО мүше елдерінің заңдарына жақын төменде көрсетілген Кеңес директиваларына сәйкес төмендегі декларацияға қатысты VGA-111, VGA-113, VGA-117, VGA-146, VGB-103, VGS-141, VGS-143, VGS-145, VGS-147, VGS-148 өнімдері біздің жеке жауапкершілігімізде екенін мәлімдейміз.

- Machinery Directive (2006/42/EC). Standards used: DIN EN ISO 12100:2010.
- Low Voltage Directive (2014/35/EU). Standards used: EN 60204-1:2007
EN 61010-1:2011-07*
- EMC Directive (2014/30/EU)*. Standards used: EN 55014-1:2006+A1:2009+A2:2011
EN 55014-2:2016
EN 61000-6-1:2007
EN 61000-6-3:2011
- Other regulations applied: DIN 19606:2010-09
- RoHS Directives (2011/65/EU and 2015/863/EU). Standard used: EN 50581:2012

* Only valid for products with electrical components

This EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication numbers 95714202, 95714224, 98028175, 95714246, 95714278, 95713929, 95714262, 95714296).

Pfinztal, 1st March 2018



Ulrich Sternick
Technical Director
Grundfos Water Treatment GmbH
Reetzstr. 85, D-76327 Pfinztal, Germany

Person authorised to compile technical file and empowered to sign the EU declaration of conformity.



Установки вакуумные для дозирования газов типа Vassiperm сертифицированы на соответствие требованиям Технических регламентов Таможенного союза: ТР ТС 004/2011 «О безопасности низковольтного оборудования»; ТР ТС 010/2011 «О безопасности машин и оборудования»; ТР ТС 020/2011 «Электромагнитная совместимость технических средств».

Сертификат соответствия:

ТС RU C-DK.АИ30.В.01214, срок действия до 17.12.2019 г.

Выдан: Органом по сертификации продукции «ИВАНОВО-СЕРТИФИКАТ» ООО «Ивановский Фонд Сертификации».

Адрес: 153032, Российская Федерация, г. Иваново, ул.

Станкостроителей, д.1.

Установки вакуумные для дозирования газов типа Vassiperm декларированы на соответствие требованиям Технического регламента Таможенного союза ТР ТС 032/2013 «О безопасности оборудования, работающего под избыточным давлением».

Декларация соответствия:

ТС N RU Д-DK.АИ30.В.05343, срок действия до 08.10.2020 г.

Истра, 1 марта 2016 г.

Касаткина В. В.

Руководитель отдела качества,
экологии и охраны труда
ООО Грундфос Истра, Россия
143581, Московская область,
Истринский район,
дер. Лешково, д.188

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 - Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарьянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaj od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 0515

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

Grundfos Alldos
Dosing & Disinfection
ALLDOS (Shanghai) Water Technology
Co. Ltd.
West Unit, 1 Floor, No. 2 Building (T 4-2)
278 Jinhu Road, Jin Qiao Export
Processing Zone
Pudong New Area
Shanghai, 201206
Phone: +86 21 5055 1012
Telefax: +86 21 5032 0596
E-mail: grundfosalldos-CN@grundfos.com

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86-21 6122 5222
Telefax: +86-21 6122 5333

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 via Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čapkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0)207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombie
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS Water Treatment GmbH
Reetzstraße 85
D-76327 Pfalzthal (Söllingen)
Tel.: +49 7240 61-0
Telefax: +49 7240 61-177
E-mail: gwt@grundfos.com

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
E-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 097
Phone: +91-44 4596 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romanian@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuenteclilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses revised 15.01.2019

98028175 0419
ECM: 1243243

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved. © 2019 Grundfos Holding A/S. all rights reserved.